






UM-18227-D

DT3153

Getting Started Manual



**Fourth Edition
August, 2002**

**Copyright © 2000, 2002 by Data Translation,
Inc.**

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise, without the prior written permission of Data Translation, Inc.

Information furnished by Data Translation, Inc. is believed to be accurate and reliable; however, no responsibility is assumed by Data Translation, Inc. for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Data Translation, Inc.

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer software clause at 48 C.F.R. 252.227-7013, or in subparagraph (c)(2) of the Commercial computer Software - Registered Rights clause at 48 C.F.R., 52-227-19 as applicable. Data Translation, Inc., 100 Locke Drive, Marlboro, MA 01752

Data Translation[®] and GLOBAL LAB[®] are registered trademarks, DT-Open Layers[™], Frame Grabber SDK[™], Imaging OMNI CD[™], and DT Vision Foundry[™] are trademarks of Data Translation, Inc.

All other brand and product names are trademarks or registered trademarks of their respective companies.

Data Translation, Inc.
100 Locke Drive
Marlboro, MA 01752-1192
(508) 481-3700
www.datatranslation.com
Fax: (508) 481-8620
E-mail: info@datx.com

Table of Contents

About this Manual	v
Intended Audience.....	v
What You Should Learn from this Manual.....	v
Conventions Used in this Manual	vi
Related Information.....	vi
Where to Get Help	vii
 Chapter 1: Overview	 1
Key Hardware Features.....	2
DT3153 Software.....	3
Getting Started Procedure.....	4
 Chapter 2: Preparing to Use the DT3153	 5
Unpacking.....	7
Checking the System Requirements	8
Installing the Software.....	11
Installing the DT3153 Documentation.....	12
Viewing the DT3153 Documentation	14
 Chapter 3: Installing the Board	 17
Setting up the Computer.....	19
Selecting an Expansion Slot	20
Inserting the DT3153 Board in the Computer	21
 Chapter 4: Connecting Signals	 23
Connecting Composite Video Signals to the Board.....	25
Connecting a Single Composite Video Signal to the Board	25
Connecting Multiple Composite Signals to the Board	26
Connecting an S-Video Signal to the Board	28

- Chapter 5: Installing and Configuring the Device Driver . . 31**
 - Before Installing the Device Driver 33
 - Installing and Configuring the Device Driver in Windows 98 . 34
 - Installing and Configuring the Device Driver in Windows Me 37
 - Installing and Configuring the Device Driver in Windows 2000 40
 - Installing and Configuring the Device Driver in Windows XP. 43

- Chapter 6: Verifying Board Operation 47**
 - Overview 49
 - Installing DT-Acquire 50
 - Using DT-Acquire. 51
 - Synchronously Acquiring a Single Frame to Memory 52
 - Performing a Passthru Operation 53

- Index 55**

About this Manual

This manual describes how to get started using a DT3153 frame grabber board.

Intended Audience

This document is intended for engineers, scientists, technicians, or others responsible for setting up a DT3153 board to perform machine vision and/or image analysis operations. It is assumed that you have some familiarity with the operating characteristics of your video source. It is also assumed that you are familiar with the Microsoft® Windows® 98, Windows Me (Millennium Edition), Windows 2000, or Windows XP operating system.

What You Should Learn from this Manual

This manual will help you install and set up your board and device driver successfully. It is organized as follows:

- [Chapter 1, “Overview,”](#) describes the key features of the DT3153 Series hardware and software, and provides an overview of the getting started procedure;
- [Chapter 2, “Preparing to Use the DT3153,”](#) describes how to unpack the board and software, check system requirements, install the DT3153 software, and view the DT3153 documentation online;
- [Chapter 3, “Installing the Board,”](#) describes how to install the DT3153 board;
- [Chapter 4, “Connecting Signals,”](#) describes how to connect signals to the board;

- [Chapter 5, “Installing and Configuring the Device Driver,”](#) describes how to install and configure the device driver; and
- [Chapter 6, “Verifying Board Operation,”](#) describes how to verify the board’s operation using DT Acquire.
- An index completes this manual.

Conventions Used in this Manual

The following conventions are used in this manual:

- Notes provide useful information that requires special emphasis, cautions provide information to help you avoid losing data or damaging your equipment, and warnings provide information to help you avoid catastrophic damage to yourself or your equipment.
- Items that you select or type are shown in **bold**.
- `Courier font` is used to represent source code.

Related Information

Refer to the following documents for more information on using a DT3153 board:

- The *DT3153 User’s Manual* (UM-15478), included on the Imaging OMNI CD™ provided with the DT3153 board, describes the features of the DT3153 board and DT3153 Device Driver in detail.
- *Frame Grabber SDK User’s Manual* (UM-13442) and online help, included on the Imaging OMNI CD provided with the DT3153 board, describe the Dynamic Linkable Library (DLL) that you can use to write image acquisition application software.

- *DT-Active Open Layers User's Manual* (UM-17325), available from Data Translation, describes DT-Active Open Layers™, an ActiveX control, which allows you to use Data Translation PCI frame grabber boards within graphical programming environments such as Microsoft Visual Basic® and Visual C++®.
- *GLOBAL LAB Image/2 User's Manual* (UM-17790) and *GLOBAL LAB Image/2 API Manual* (UM-17792) available from Data Translation, describe how to use GLOBAL LAB® Image/2 and GLOBAL LAB Image/2 Streamline™ to create scientific applications using object-oriented image processing tools.
- *DT Vision Foundry User's Manual* (UM-17755) and *DT Vision Foundry API Manual* (UM-17757) available from Data Translation, describe how to use DT Vision Foundry™ to create machine vision applications using object-oriented image processing tools.

Where to Get Help

Should you run into problems installing or using a DT3153 board, our Technical Support Department is available to provide technical assistance. Refer to the Troubleshooting chapter of the *DT3153 User's Manual* for more information (see [page 12](#) for information on installing and viewing this manual). If you are outside the United States or Canada, call your local distributor, whose number is listed in your Data Translation product handbook.



Overview

Key Hardware Features.	2
DT3153 Software.	3
Getting Started Procedure.	4

Key Hardware Features

The DT3153 is a high-accuracy, low-cost, color frame grabber board for the PCI bus. It is suitable for both color image analysis and machine vision applications.

Key features of the DT3153 board are summarized as follows:

- Operates as a PCI bus master;
- Digitizes up to three composite (CVBS) video inputs using NTSC/RS-170 or PAL video formats, or one S-video (YUV) input using the Y/C video format;
- Acquires a single frame or multiple frames synchronously or asynchronously;
- Stores images in either 32-bit color format (RGB) or 16-bit color format (YUV or RGB16);
- Supports programmable region-of-interest (ROI);
- Provides real-time, interpolated scaling to any size;
- Provides Sync Master mode which, when enabled, outputs three sync signals for driving camera timing;
- Provides programmable control of the color settings of the board, including brightness, contrast, saturation, and hue;
- Accepts an external trigger with selectable polarity; and
- Provides four general-purpose, TTL-level digital I/O lines.

For more information on the boards, refer to the *DT3153 User's Manual* (see [page 12](#) for information on viewing this manual).

DT3153 Software

1

The DT3153 software includes the following components:

- **DT3153 Device Driver** –This software, which is operating-system specific, is shipped with the board. You *must* install this device driver to use the DT3153 board with any of the supported software packages or utilities.
- **DT3153 User's Manual**, in PDF format –Describes the features of the DT3153 board and how to use the DT3153 Device Driver with the Frame Grabber SDK to write an application program.
- This manual in PDF format.

Refer to [Chapter 2 starting on page 5](#) for information on installing the DT3153 software.

Getting Started Procedure

The flow diagram shown in [Figure 1](#) illustrates the steps needed to get started using the DT3153 board. This diagram is repeated in each chapter; the shaded area in the diagram shows you where you are in the getting started procedure.


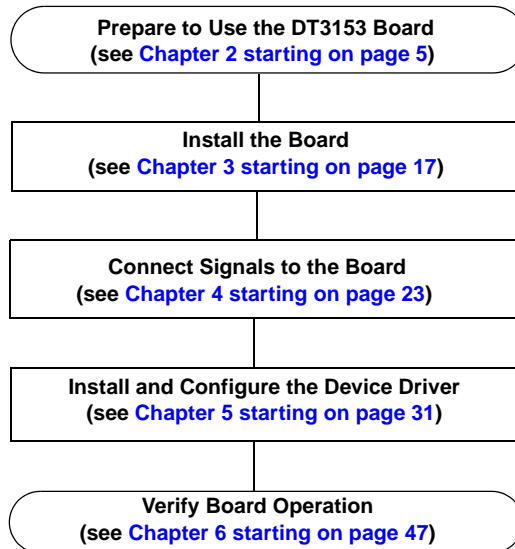


Figure 1: Getting Started Flow Diagram



Preparing to Use the DT3153

Unpacking	7
Checking the System Requirements	8
Installing the Software.....	11
Installing the DT3153 Documentation.....	12
Viewing the DT3153 Documentation	14

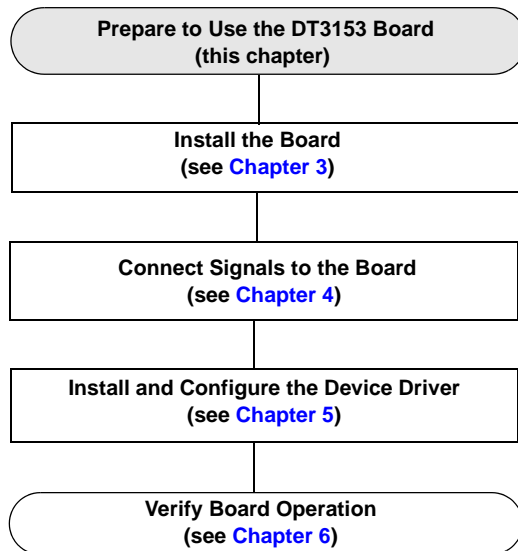

Unpacking

Open the shipping box and carefully remove the DT3153 frame grabber board.

2

WARNING!

Keep the DT3153 board in its protective antistatic bag until you are ready to install it.

Verify that the following items are present:

- DT3153 frame grabber board, and
- Imaging OMNI CD-ROM.

If an item is missing or damaged, call Data Translation's Customer Service Department at (508) 481-3700 x394. Customer Service will guide you through the appropriate steps for replacing missing or damaged items. If you are located outside the USA, call your local distributor, listed in your Data Translation Product Handbook.

Note: It is recommended that you save the original packing material in the unlikely event that your board requires servicing in the future.

Checking the System Requirements

For reliable operation, your DT3153 board requires the following minimum system requirements:

- 120 MHz Pentium processor with an Intel PCI chip set that supports and enables PCI-to-posted memory writes. The following Intel PCI chip sets are known to work properly:
 - Triton 8243xFX,
 - Triton2 8243xHX,
 - Triton VX 8243xVX,
 - Triton TX 8243xTX,
 - Natoma 8244xFX, or
 - Natoma 8244xLX.

Note: The following Intel PCI chip sets are known not to work properly: Saturn 8242x, Mercury 8243xLX, Neptune 8243xNX, Orion 8245xKX, and Orion 8245xKG. If your system contains one of these chip sets, please call your system manufacturer to replace the chip set with one that is supported.

- A BIOS that complies with PCI specifications, such as one of the following:
 - AMI, or
 - AWARD (version 4.51PG).

Note: Version 4, revision 6 of the Phoenix BIOS works properly. However, early versions of this BIOS are known not to work properly. If your system contains an earlier version of the Phoenix BIOS, please call your system manufacturer to upgrade the BIOS to Version 4, revision 6.

- At least one available PCI 32-bit or 64-bit bus master expansion slot.
- At least 16 MB of RAM for Windows 98 or Windows Me; at least 32 MB of RAM for Windows 2000 or Windows XP. Note that for 60 Hz, 1.2 MB are required to store each frame; for 50 Hz, 1.7 MB are required to store each frame.
- A 2 MB, 32-bit PCI graphics card with a 256 color palette for 640 x 480, 32-bit true color RGB display. A DDI-compatible, PCI graphics card is recommended for real-time display. [Table 1](#) lists the PCI graphics card memory requirements.

Table 1: PCI Graphics Card Memory Requirements

Resolution	Memory Required
640 x 480	2 MB
800 x 600	2 MB
1024 x 768	4 MB

- Either a composite or S-video input source.
- Data Translation's EP306 cable assembly or a 75 Ω BNC coaxial cable (for a single composite input).

- At least one CD-ROM drive.
- A hard disk.
- Windows 98, Windows Me, Windows 2000, or Windows XP.

Installing the Software

1. Insert the Imaging OMNI CD into your CD-ROM drive.
2. Click **Start** from the Task Bar, then click **Run**.
The Run dialog box appears.
3. In the **Command Line** edit box, enter **x:\LAUNCH.EXE** (where *x* is the letter of your CD-ROM drive).
4. Click **OK**.
The Imaging OMNI CD splash screen appears.
5. Click **Install Products**.
6. Click **Mach I Series**.
7. Click **Device Drivers**.
8. Click **DT3153**, then click **Next**.
If you are using Windows 2000 or Windows XP, the installation instructions are displayed. If you are using Windows 98 or Windows Me, the files are copied.
9. If you are using Windows 2000 or Windows XP, click **Print** to print the installation instructions, or go to the next section to install and print the DT3153 documentation.
10. Click **Main Menu**, then click **Exit**.

Installing the DT3153 Documentation

If you are using Windows 98 or Windows Me and installed the DT3153 device driver, the DT3153 documentation is automatically copied to your hard drive. Refer to the next section for information on viewing these documents.

If you are using Windows 2000 or Windows XP, perform the following steps to install the DT3153 documentation:

1. Insert the Imaging OMNI CD into your CD-ROM drive.
2. Click **Start** from the Task Bar, then click **Run**.
The Run dialog box appears.
3. In the **Command Line** edit box, enter **x:\LAUNCH.EXE** (where *x* is the letter of your CD-ROM drive).
4. Click **OK**.
The Imaging OMNI CD splash screen appears.
5. Click **Install Products**.
6. Click **Mach I Series**.
7. Click **Documentation**.
8. Click **Getting Started**.
9. Click **DT3153**.
10. Browse to the directory in which to copy the manual on your hard disk, then click **Next**.
The manual is copied to your hard disk.
11. Click **OK**.
12. Click **Back**.
13. Click **User's Manual**.
14. Click **DT3153**.

15. Browse to the directory in which to copy the manual on your hard disk, then click **Next**.

The manual is copied to your hard disk.

16. Click OK.

17. Click **Main Menu**, then click **Exit**.

Refer to the next section for information on viewing these documents.

Viewing the DT3153 Documentation

Note: To view the DT3153 documentation, ensure that Adobe Acrobat 4.0 or greater is installed on your system. Acrobat Reader 5.0 is provided on the Imaging OMNI CD. If you install Acrobat Reader 5.0 from this CD, you must open Acrobat Reader and accept the license agreement before you can view the documentation.

Once you have installed the manuals to your hard disk, you can view these documents by accessing them through the Data Translation, Inc\DT3153 program folder.

You can also view the documents from the Imaging OMNI CD, by performing the following steps:

1. Insert the Imaging OMNI CD into your CD-ROM drive.
2. Click **Start** from the Task Bar, then click **Run**.
The Run dialog box appears.
3. In the **Command Line** edit box, enter **x:\LAUNCH.EXE** (where *x* is the letter of your CD-ROM drive).
4. Click **OK**.
The Imaging OMNI CD splash screen appears.
5. Click **View Documentation**
6. Click **Getting Started Manuals** and click **DT3153**, or click **User's Manuals** and click **DT3153**.
Adobe Acrobat Reader opens.


Here are a few helpful hints about using Adobe Acrobat Reader:

- To navigate to a specific section of the document, click a heading from the table of contents on the left side of the document.
- Within the document, click the text shown in blue to jump to the appropriate reference (the pointer changes from a hand to an index finger).
- To go back to the page from which the jump was made, click the right mouse button and **Go Back**, or from the main menu, click **Document**, then **Go Back**.
- To print the document, from the main menu, click **File**, then **Print**.
- To increase or decrease the size of the displayed document, from the main menu, click **View**, then **Zoom**.
- By default, text and monochrome images are smoothed in Acrobat Reader, resulting in blurry images. If you wish, you can turn smoothing off by clicking **File**, then **Preferences/General**, and unchecking **Smooth Text and Images**.



Installing the Board

Setting up the Computer	19
Selecting an Expansion Slot	20
Inserting the DT3153 Board in the Computer	21

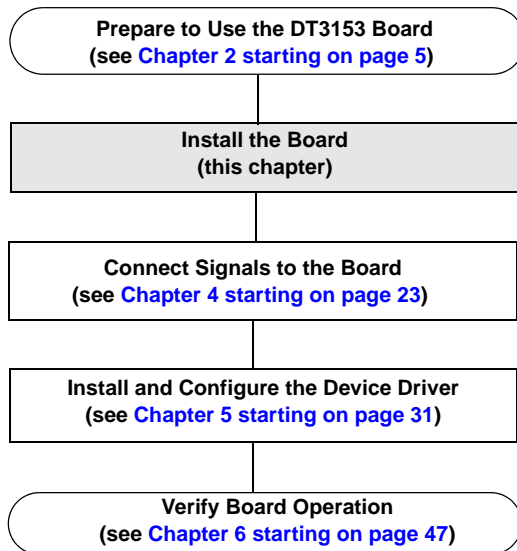

Setting up the Computer

CAUTION:

To prevent electrostatic damage that can occur when handling electronic equipment, use a ground strap or similar device when performing this installation procedure.

3

Perform the following procedure to set up the computer:

1. Turn off the computer.
2. Turn off all peripherals (printer, modem, monitor, and so on) connected to the computer.
3. Unplug the computer and all peripherals.
4. Remove the cover from your computer. Refer to your computer's user manual for instructions.

Next, select an expansion slot, as described in the next section.

Selecting an Expansion Slot

Perform the following procedure to select an expansion slot:

1. Select a 32-bit or 64-bit PCI master expansion slot. Refer to your computer system's user manual to determine which slots are bus masters.

PCI slots are shorter than ISA or EISA slots and are usually white or ivory. Commonly, three PCI slots (one of which may be a shared ISA/PCI slot) are available. If an ISA board exists in the shared slot, you cannot use the slot for a PCI board; likewise if a PCI board exists in the shared slot, you cannot use the slot for an ISA board.

Note: In most PCI systems, any PCI slot can be a bus master.

2. Remove the cover plate from the selected expansion slot. Retain the screw that held it in place; you will use it later to install the board.

Next, insert the DT3153 board in the expansion slot, as described in the next section.

Inserting the DT3153 Board in the Computer

To insert the DT3153 board in the computer, perform the following steps:

1. To discharge any static electricity, hold the wrapped board in one hand while placing your other hand firmly on a metal portion of the computer chassis.
2. Carefully remove the antistatic packing material from the board. (We suggest that you save the original packing material in the unlikely event that your board requires servicing in the future.)
3. Hold the board by its edges and do not touch any of the components on the board.
4. Position the board so that the cable connectors are facing the rear of the computer, as shown in [Figure 2](#).

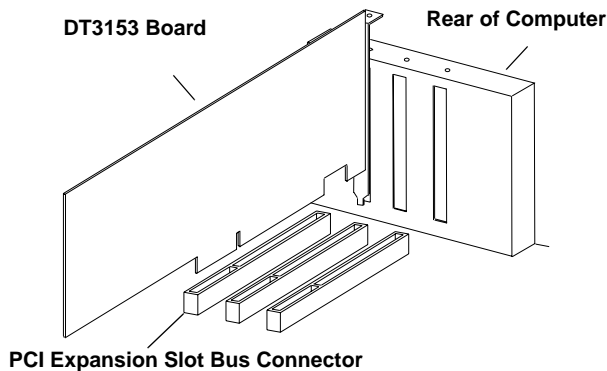


Figure 2: Inserting the DT3153 Board in the Computer

5. Carefully lower the board into the PCI expansion slot using the card guide to properly align the board in the slot. When the bottom of the board contacts the bus connector, gently press down on the board until it clicks into place.

CAUTION:

Do not force the board into place. Moving the board from side to side during installation may damage the bus connector. If you encounter resistance when inserting the board, remove the board and try again.


6. Secure the board in place at the rear panel of the system unit using the screw removed from the slot cover.

When you are finished with this procedure, continue by connecting signals to the board. Refer to [Chapter 4 starting on page 23](#).



Connecting Signals

Connecting Composite Video Signals to the Board.	25
Connecting an S-Video Signal to the Board	28

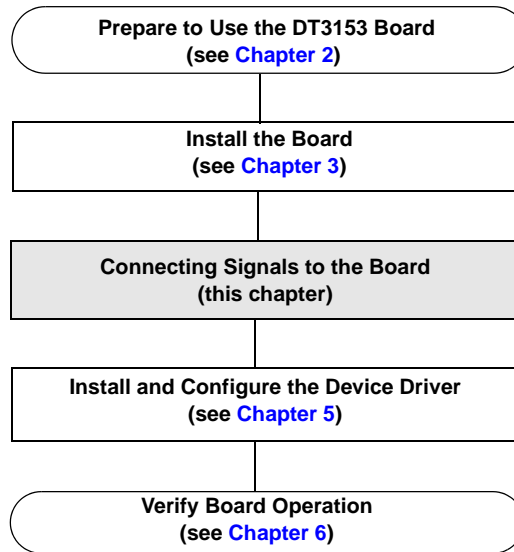

WARNING!

Always turn off the power to both your computer and the input device before making these connections. Damage can result if connections are made with the power on.

This chapter describes how to connect composite and S-video sources to the DT3153 board.

Connecting Composite Video Signals to the Board

The DT3153 board provides two ways to connect composite video signals to the board depending on the number of inputs you want to connect. If you want to connect a single composite video signal to the board, refer to the next section. If you want to connect multiple composite video signals to the board, refer to [page 26](#).

Connecting a Single Composite Video Signal to the Board

If you want to connect a single composite (CVBS format) video input signal that uses the NTSC/RS-170 or PAL video format to the DT3153, use connector J2 on the DT3153, as shown in [Figure 3](#).

4

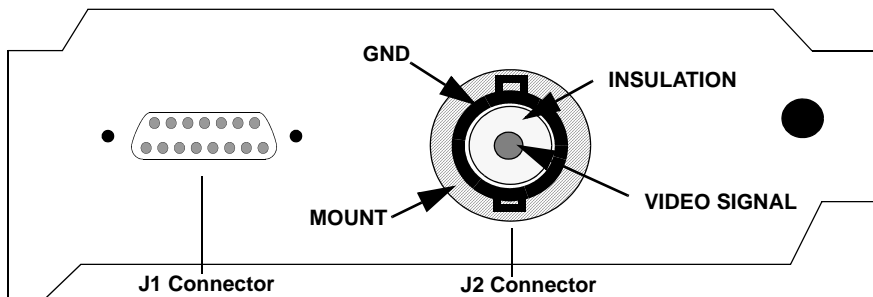


Figure 3: Video Coaxial Connector J2

Use a 75 Ω coaxial cable with a male BNC connector to attach the composite video input signal to connector J2.

CAUTION:

The single-use BNC input connector, J2, is shared with the VID0_IN signal (pin 8) on video input connector J1. Do not attach signals to both connectors; otherwise, the two video sources will be shorted together, which could result in damage to the video sources.

Connecting Multiple Composite Signals to the Board

This section assumes that you have purchased an optional EP306 cable.

To connect multiple composite video signals, which use the NTSC/RS-170 or PAL video format, to connector J1 on the DT3153 board, perform the following steps:

1. After making sure power to the computer is off, push the 15-pin connector of the EP306 cable into the J1 socket at the rear of the DT3153, as shown in [Figure 4](#), and tighten the screws on the connector.

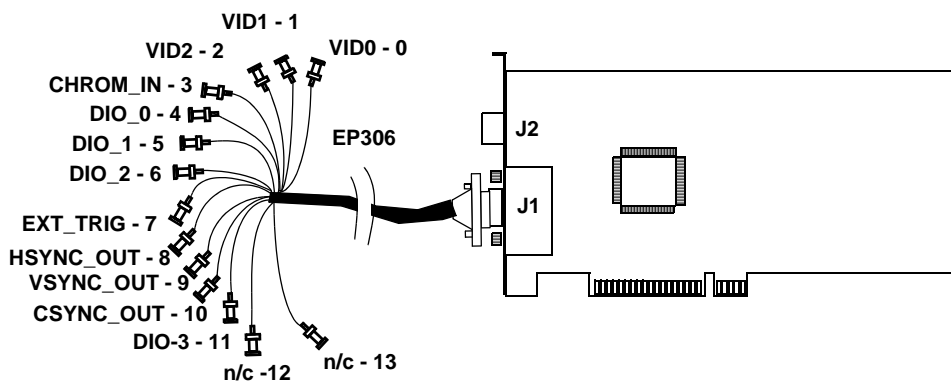


Figure 4: Connecting the EP306 Cable to Connector J1

2. Attach EP306 connector 0 (VID0_IN), 1 (VID1_IN), or 2 (VID2_IN) to the video source's composite video output connector.

Note: The EP306 attaches to female BNC connectors. If the video out connector on your video input source is a male BNC or an RCA connector, you need to obtain the appropriate adaptor (available at electronic equipment stores).

3. Connect additional composite video sources, if desired, to the unused video input connectors: 0 (VID0_IN), 1 (VID1_IN), or 2 (VID2_IN).
4. If you want the board to provide a horizontal sync to the video source, attach the horizontal sync input of the video source to the output of EP306 connector 8 (HSYNC_OUT).
5. If you want the board to provide a vertical sync to the video source, attach the vertical sync input of the video source to the output of EP306 connector 9 (VSYNC_OUT).
6. If you want the board to provide a composite sync to the video source, attach the composite sync input of the video source to the output of EP306 connector 10 (CSYNC_OUT).
7. If you are using an external trigger source, attach EP306 connector 7 to the output of the external trigger source.
8. If you are using digital I/O signals, attach EP306 connectors 4, 5, 6, and/or 11, to the external device's digital I/O lines.

Connecting an S-Video Signal to the Board

This section assumes that you have purchased an optional EP306 cable. You also need to purchase one S-video male mating connector and two solderable male BNC adapters to attach an S-video signal to the DT3153 board.

To connect an S-video signal, which uses the Y/C format, to connector J1 on the DT3153 board, perform the following steps:

1. Attach the S-video connector of your signal source to a male S-video mating connector.
2. Attach a male BNC adapter to the luminance signal and a male BNC adapter to the chrominance signal from the S-video mating connector. Refer to [Figure 5](#).

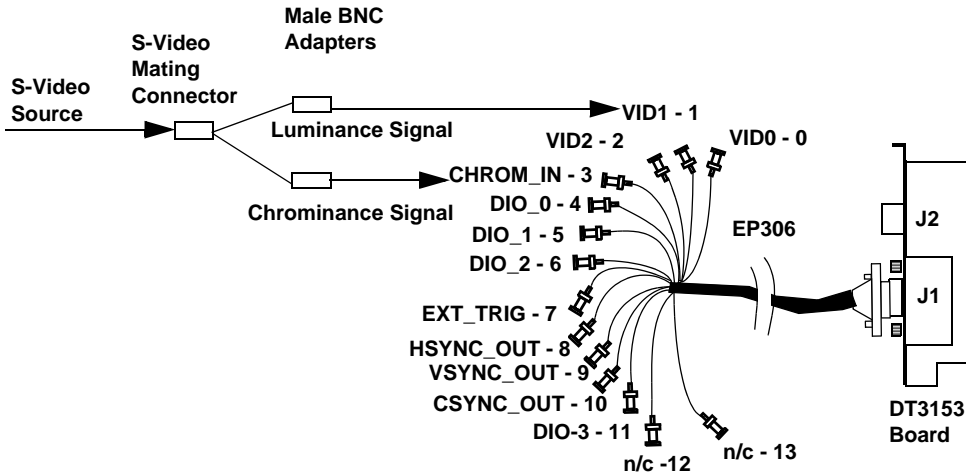


Figure 5: Connect S-Video Signals to a DT3153 Board

3. After making sure power to the computer is off, push the 15-pin connector of the EP306 cable into the J1 socket at the rear of the DT3153, and tighten the screws on the connector.
4. Attach the luminance BNC connector to EP306 connector 1 (VID1).


Note: If desired, you can connect composite video sources to the unused video input connectors: 0 (VID0_IN), or 2 (VID2_IN).

5. Attach the chrominance BNC connector to EP306 connector 3 (CHROM_IN).
6. If you want the board to provide a horizontal sync to the video source, attach the horizontal sync input of the video source to the output of EP306 connector 8 (HSYNC_OUT).
7. If you want the board to provide a vertical sync to the video source, attach the vertical sync input of the video source to the output of EP306 connector 9 (VSYNC_OUT).
8. If you want the board to provide a composite sync to the video source, attach the composite sync input of the video source to the output of EP306 connector 10 (CSYNC_OUT).
9. If you are using an external trigger source, attach EP306 connector 7 to the output of the external trigger source.
10. If you are using digital I/O signals, attach EP306 connectors 4, 5, 6, and/or 11, to the external device's digital I/O lines.



Installing and Configuring the Device Driver

Before Installing the Device Driver	33
Installing and Configuring the Device Driver in Windows 98 .	34
Installing and Configuring the Device Driver in Windows Me	37
Installing and Configuring the Device Driver in Windows 2000.	40
Installing and Configuring the Device Driver in Windows XP.	43

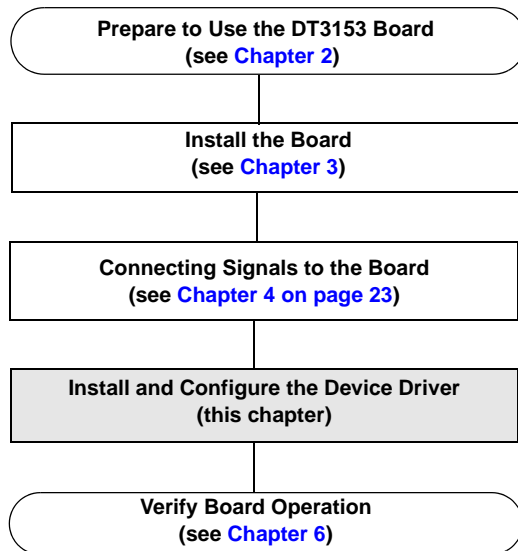

Before Installing the Device Driver

The DT3153 Device Driver is provided to support the DT3153 board in IBM PC-compatible Pentium systems running Windows 98, Windows Me, Windows 2000, or Windows XP. The DT3153 Device Driver is compatible with any application developed using the 32-bit Frame Grabber SDK, which follows the DT-Open Layers Application Programming Interface (API) standards.

Before installing the software, ensure that you have

- Installed Microsoft Windows 98, Windows Me, Windows 2000, or Windows XP,
- Read the file README.TXT in the Drivers\DT3153\Win98 or Win2K directory on the Imaging OMNI CD-ROM for any information not included in this documentation at release time,
- Installed the board, and
- (Optional) Installed the 32-bit Frame Grabber SDK.

Installing and Configuring the Device Driver in Windows 98

Perform the following steps to install and configure the device driver under Windows 98:

1. If you have not already done so, power up your computer and any attached peripherals.

Note: On power-up, the PCI bus takes one available interrupt from system resources for the DT3153 board. If any devices are using this interrupt, problems may arise. Verify that no other devices in your system are using the same interrupt that the DT3153 board is using and ensure that PCI interrupts are enabled in your system BIOS.

2. Start Windows 98.
The New Hardware Found dialog box appears. The board is recognized as the DT3153, then a dialog box appears prompting you to restart your system.

Note: In some machines, the DT3153 may not be detected automatically when you start Windows 98. If this should occur, remove any other imaging drivers by using the MACHUNLD.EXE utility (accessed from Start\Programs\Data Translation, Inc), then perform the following procedure:

- a. From the Control Panel, double-click **Multimedia**.
- b. Double-click **System**.
- c. Click **Device Manager**.
- d. Click **Refresh**.
The New Hardware Found wizard appears.
- e. Click **Next**.
- f. Click **Search for best driver for your device**, then click **Next**.

- g. Browse to the **Drivers\DT3153\Win98** directory on the Imaging OMNI CD, then click **OK**.
- h. Click **Next**.
- i. Click **Next**.
- j. Click **Finish**.

A dialog box appears prompting you to restart your system.

- 3. Remove the CD-ROM from the CD-ROM drive, then click **Yes**.
After the system restarts, a dialog box appears prompting you to configure the driver.
- 4. Click **OK**, then click **OK**.
- 5. Click **Add New** to add a DT3153 board.
The DT3153 Installation dialog box appears for the new board.
- 6. Enter any unique name (or alias) for the DT3153 board, then click **Add**. Only one alias per installed board is allowed.
The DT3153 Configuration dialog box appears.
- 7. Select **Enable Board** to activate the board. If you want to retain the settings but disable the board (and therefore not use the memory), remove the checkmark next to Enable Board.
- 8. Select the **Video Format** as either 50 Hz or 60 Hz.
- 9. For **Desired Memory Size**, select the amount of contiguous memory (in MB) that you want to allocate in your system to hold the acquired frames. A 60 Hz, 640-by-480 image requires 1.2 MB per frame; a 50 Hz, 768-by-576 image requires 1.7 MB per frame. The actual amount of memory that the device driver can allocate depends on your system resources. It is recommended that you select only as much memory as you need to leave memory for other devices. Once you enter the desired memory size, the device driver allocates as much memory as possible to match the value you entered; the actual memory size allocated is shown in the **Actual Memory Size** text box when you restart your system.

10. Click Done.

The DT3153 Device Driver Configuration dialog box is redisplayed with the name of the board you just added.

11. Click Close to end the DT3153 configuration.

The DT3153 Configuration COMPLETE! dialog box is displayed.

12. Click OK.

13. Click OK to restart the system.

The system automatically restarts so that the changes take effect.

Once you have configured the device driver with the information for your board, verify the operation of your board using the instructions in [Chapter 6 on page 45](#).

Installing and Configuring the Device Driver in Windows Me

Perform the following steps to install and configure the device driver in Windows Me:

1. If you have not already done so, power up your computer and any attached peripherals.

Note: On power-up, the PCI bus takes one available interrupt from system resources for the DT3153 board. If any devices are using this interrupt, problems may arise. Verify that no other devices in your system are using the same interrupt that the DT3153 board is using and ensure that PCI interrupts are enabled in your system BIOS.

2. Start Windows Me.

The New Hardware Found dialog box appears. The board is recognized as the DT3153, then a dialog box appears prompting you to restart your system.

Note: In some machines, the DT3153 may not be detected automatically when you start Windows Me. If this should occur, remove any other imaging drivers by using the MACHUNLD.EXE utility (accessed from Start\Programs\Data Translation, Inc), then perform the following procedure:

- a. From the Control Panel, double-click **Multimedia**.
- b. Double-click **System**.
- c. Click **Device Manager**.
- d. Click **Refresh**.

The New Hardware Found wizard appears.

- e. Click **Next**.
- f. Click **Search for best driver for your device**, then click **Next**.

- g. Browse to the **Drivers\DT3153\Win98** directory on the Imaging OMNI CD, then click **OK**.
- h. Click **Next**.
- i. Click **Next**.
- j. Click **Finish**.

A dialog box appears prompting you to restart your system.

- 3. Remove the CD-ROM from the CD-ROM drive, then click **Yes**.
After the system restarts, a dialog box appears prompting you to configure the driver.
- 4. Click **OK**, then click **OK**.
- 5. Click **Add New** to add a DT3153 board.
The DT3153 Installation dialog box appears for the new board.
- 6. Enter any unique name (or alias) for the DT3153 board, then click **Add**. Only one alias per installed board is allowed.
The DT3153 Configuration dialog box appears.
- 7. Select **Enable Board** to activate the board. If you want to retain the settings but disable the board (and therefore not use the memory), remove the checkmark next to Enable Board.
- 8. Select the **Video Format** as either 50 Hz or 60 Hz.
- 9. For **Desired Memory Size**, select the amount of contiguous memory (in MB) that you want to allocate in your system to hold the acquired frames. A 60 Hz, 640-by-480 image requires 1.2 MB per frame; a 50 Hz, 768-by-576 image requires 1.7 MB per frame. The actual amount of memory that the device driver can allocate depends on your system resources. It is recommended that you select only as much memory as you need to leave memory for other devices. Once you enter the desired memory size, the device driver allocates as much memory as possible to match the value you entered; the actual memory size allocated is shown in the **Actual Memory Size** text box when you restart your system.

10. Click Done.

The DT3153 Device Driver Configuration dialog box is redisplayed with the name of the board you just added.

11. Click Close to end the DT3153 configuration.

The DT3153 Configuration COMPLETE! dialog box is displayed.

12. Click OK.

13. Click OK to restart the system.

The system automatically restarts so that the changes take effect.

Once you have configured the device driver with the information for your board, verify the operation of your board using the instructions in [Chapter 6 starting on page 47](#).

Installing and Configuring the Device Driver in Windows 2000

Perform the following steps to install and configure the device driver in Windows 2000:

Note: This procedure assumes that no other MACH I Series drivers (DT3152, DT3152-LS, DT3153, DT3154, DT3155, or DT3157) are installed in your system. If you previously installed a MACH I Series driver, refer to the Data Translation knowledgebase at www.datx.com for information on removing the existing inf file before performing this procedure.

1. If you have not already done so, power up your computer and any attached peripherals.

Note: On power-up, the PCI bus takes one available interrupt from system resources for the DT3153 board. If any devices are using this interrupt, problems may arise. Verify that no other devices in your system are using the same interrupt that the DT3153 board is using and ensure that PCI interrupts are enabled in your system BIOS.

2. Start Windows 2000.
The Found New Hardware dialog box appears.
3. Click **Next**.
4. Click **Search for a suitable driver for my device (recommended)**, then click **Next**.
5. Click **Specify a location** and uncheck all other checkboxes, then click **Next**.

6. Insert the Imaging OMNI CD into the CD-ROM drive.
7. Click **Browse**, browse to **x:\DRIVERS\DT3153\WIN2K** (where *x* is the letter of your CD-ROM drive), and click **Open**.
8. Click **OK**, then click **Next**.
A Digital signature not found message appears.
9. Click **Yes**.
The files are copied, then the DT3153 Configuration dialog appears.
10. Click **Add New** to add a DT3153 board to the configuration.
The DT3153 Installation dialog box appears for the new board.
11. Enter any unique name (or alias) for the DT3153 board, then click **Add**. Only one alias per installed board is allowed.
The DT3153 Configuration dialog box appears.
12. Select **Enable Board** to activate the board. If you want to retain the settings but disable the board (and therefore not use the memory), remove the checkmark next to Enable Board.
13. Select the **Video Format** as either 50 Hz or 60 Hz.
14. For **Desired Memory Size**, select the amount of contiguous memory (in MB) that you want to allocate in your system to hold the acquired frames. A 60 Hz, 640-by-480 image requires 1.2 MB per frame; a 50 Hz, 768-by-576 image requires 1.7 MB per frame. The actual amount of memory that the device driver can allocate depends on your system resources. It is recommended that you select only as much memory as you need to leave memory for other devices. Once you enter the desired memory size, the device driver allocates as much memory as possible to match the value you entered; the actual memory size allocated is shown in the **Actual Memory Size** text box when you restart your system.
15. Click **Done**.
The DT3153 Configuration dialog box is redisplayed; you can see the name of the board you just added.
16. Click **Close** to end the DT3153 configuration.
The Changes Saved dialog box appears.

17. Click **Finish**.
18. Remove the Imaging OMNI CD from the CD-ROM, then click **Yes** to restart the system.

Once you have configured the device driver with the information for your board, verify the operation of your board using the instructions in [Chapter 6 starting on page 47](#).

Installing and Configuring the Device Driver in Windows XP

Perform the following steps to install and configure the device driver in Windows XP:

Note: This procedure assumes that no other MACH I Series drivers (DT3152, DT3152-LS, DT3153, DT3154, DT3155, or DT3157) are installed in your system. If you previously installed a MACH I Series driver, refer to the Data Translation knowledgebase at www.datx.com for information on removing the existing inf file before performing this procedure.

1. If you have not already done so, power up your computer and any attached peripherals.

Note: On power-up, the PCI bus takes one available interrupt from system resources for the DT3153 board. If any devices are using this interrupt, problems may arise. Verify that no other devices in your system are using the same interrupt that the DT3153 board is using and ensure that PCI interrupts are enabled in your system BIOS.

2. Start Windows XP.
The Found New Hardware dialog box appears.
3. Click **Next**.
4. Click **Install from a list or specific location (advanced)**, then click **Next**.
5. Insert the Imaging OMNI CD into the CD-ROM drive.
6. Click **Search for the best driver in the these locations**.

7. Click **Include this location in the search**.
8. Click **Browse**, browse to **x:\DRIVERS\DT3153\WIN2K** (where *x* is the letter of your CD-ROM drive), and click **Next**.
A Hardware Installation dialog box appears.
9. Click **Continue Anyway**.
The DT3153 Configuration dialog appears.
10. Click **Add New** to add a DT3153 board to the configuration.
The DT3153 Installation dialog box appears for the new board.
11. Enter any unique name (or alias) for the DT3153 board, then click **Add**. Only one alias per installed board is allowed.
The DT3153 Configuration dialog box appears.
12. Select **Enable Board** to activate the board. If you want to retain the settings but disable the board (and therefore not use the memory), remove the checkmark next to Enable Board.
13. Select the **Video Format** as either 50 Hz or 60 Hz.
14. For **Desired Memory Size**, select the amount of contiguous memory (in MB) that you want to allocate in your system to hold the acquired frames. A 60 Hz, 640-by-480 image requires 1.2 MB per frame; a 50 Hz, 768-by-576 image requires 1.7 MB per frame. The actual amount of memory that the device driver can allocate depends on your system resources. It is recommended that you select only as much memory as you need to leave memory for other devices. Once you enter the desired memory size, the device driver allocates as much memory as possible to match the value you entered; the actual memory size allocated is shown in the **Actual Memory Size** text box when you restart your system.
15. Click **Done**.
The DT3153 Configuration dialog box is redisplayed; you can see the name of the board you just added.
16. Click **Close** to end the DT3153 configuration.
The Changes Saved dialog box appears.
17. Click **Finish**.


18. Remove the Imaging OMNI CD from the CD-ROM, then click **Yes** to restart the system.

Once you have configured the device driver with the information for your board, verify the operation of your board using the instructions in [Chapter 6 starting on page 47](#).



Verifying Board Operation

Overview	49
Installing DT-Acquire	50
Using DT-Acquire	51

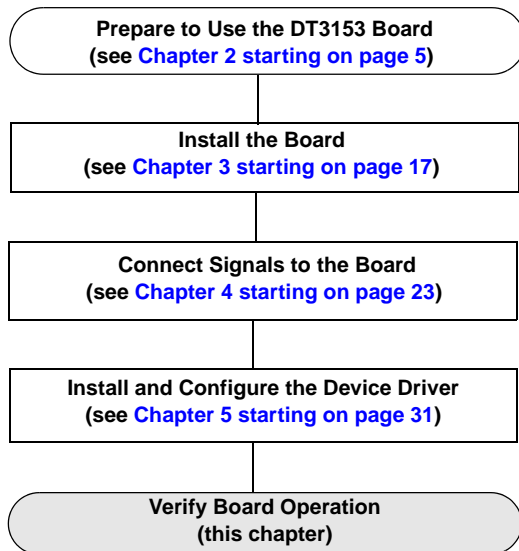

Overview

The DT-Acquire example program provides a quick way to verify that your board is properly installed, that the camera or cameras are properly connected, and that you can acquire images.

DT-Acquire allows you to

- Acquire an image to system memory,
- Display live video in passthru mode,
- Open a previously saved image, and
- Save an acquired image in BMP format.

Note: DT-Acquire works with your display monitor set to 16 colors, 256 colors, or high color (16-bit) only.

Installing DT-Acquire

To install DT-Acquire, perform the following steps:

1. Insert the Imaging OMNI CD into the CD-ROM drive.
2. Click **Start** from the Task Bar, then click **Run**.
The Run dialog box appears.
3. Enter **x:\LAUNCH.EXE** (where *x* is the letter of your CD-ROM drive).
The Imaging OMNI splash screen appears.
4. Click **Install Products**.
5. Click **Mach I Series**.
6. Click **DT Acquire**.
7. Click **Next**.
The default installation destination folder is displayed.
8. Change the destination folder or accept the default folder, then click **Next**.
The default installation program folder is displayed.
9. Change the program folder or accept the default folder, then click **Next**.
The files are copied to the specified folders.
10. Click **Finish**.
11. Click **Main Menu**.
12. Click **Exit**.

Using DT-Acquire

To start DT-Acquire, click the **DT-Acquire** icon in the Data Translation, Inc\DT-Acquire\ program group. The main menu is displayed.

The following subsections describe how to use DT-Acquire to verify that the DT3153 board is working. If you have any trouble performing any of these operations, refer to the Troubleshooting chapter of the *DT3153 User's Manual* (see [page 12](#) for information on viewing this manual).

Note: This utility allows you to verify basic operations on the board; however, it does not support all of the board's features.

For information on each of the features provided, read the Readme.txt file provided with the utility.

For detailed information on the supported features of the board, refer to the *DT3153 User's Manual* (see [page 12](#) for information on viewing this manual).

Synchronously Acquiring a Single Frame to Memory

To synchronously acquire a single frame to memory, perform the following steps:

1. If you are using a composite video input signal, connect the video input signal to channel 0 (VID0_IN). If you are using an S-video (Y/C) input, connect the Y signal to channel 1 (VID1_IN), and connect the C signal to the CHROM_IN input.
2. From the DT-Acquire main menu, click **Setup**, then **Select Device**.
3. Select the alias that you gave to the DT3153 board when you configured the device driver, then click **OK**.
4. To get started, leave the remainder of the settings under **Setup** at their default values.
5. From the DT-Acquire main menu, click **Run**, then **Single Frame Acquire!**.
A single frame is acquired (synchronously) and displayed on the screen.
6. To acquire another frame, repeat step 5.
7. If you wish, modify the parameters available for the DT3153 board by clicking the desired parameter under **Setup** and changing the associated values, then repeat step 5.

Note: If you change the video input channel, ensure that you connect the video input signals to the appropriate channel.

8. If you wish, save the graphic by clicking **File** from the DT-Acquire main menu, then **Save Graphic File**.
9. When you are finished with this utility, from the DT-Acquire main menu, click **Setup** and **Close Device**. Then, close the application.

Performing a Passthru Operation

To capture live images and display them (without saving the images), perform the following steps:

1. If you are using a composite video input signal, connect the video input signal to channel 0 (VID0_IN). If you are using an S-video (Y/C) input, connect the Y signal to channel 1 (VID1_IN), and connect the C signal to the CHROM_IN input.
2. From the DT-Acquire main menu, click **Setup**, then **Select Device**. Leave the remainder of the settings under **Setup** at their default values.
3. Select the alias that you gave to the DT3153 board when you configured the device driver, then click **OK**.
4. From the DT-Acquire main menu, click **Run**, then **Start Pass Thru!**.
Live video is asynchronously acquired to display memory, converted to bitmap format, and displayed on the screen.
5. To stop the asynchronous passthru operation, click **Run**, then **Stop Pass Thru!** from the DT-Acquire main menu.
6. If you wish, modify the parameters available for the DT3153 board by clicking the desired parameter under **Setup** and changing the associated values, then repeat steps 4 and 5.

Note: If you change the video input channel, ensure that you connect the video input signals to the appropriate channel.

7. When you are finished with this utility, from the DT-Acquire main menu, click **Setup** and **Close Device**. Then, close the application.

Index

A

acquiring an image to memory [52](#)
Adobe Acrobat Reader, using [12](#)

B

BIOS [8](#)

C

checking system requirements [8](#)
chip sets [8](#)
coaxial connector [25](#)
color palette [9](#)
composite video signals, connecting [25](#)
connector J2 [25](#)
conventions used [vi](#)

D

device driver [3](#)
DT3153 Device Driver [3](#)
 Windows 2000 procedures [40](#)
 Windows 98 procedures [34](#)
 Windows Me procedures [37](#)
 Windows XP procedures [43](#)
DT3153 documentation, installing [12](#)
DT-Acquire
 installing [50](#)
 using [51](#)

E

EP306 cable, connecting [26](#), [28](#)
expansion slot [9](#)
 selection [20](#)

F

features [2](#)

G

graphics card [9](#)

I

inserting the board in the computer [21](#)
installing the device driver
 in Windows 2000 [40](#)
 in Windows 98 [34](#)
 in Windows Me [37](#)
 in Windows XP [43](#)
installing the DT3153 documentation
 [12](#)
installing the software [11](#)
Intel PCI chip sets [8](#)
interrupt conflicts, PCI and ISA [34](#), [37](#),
 [40](#), [43](#)

J

J2 connector [25](#)

N

NTSC/RS-170 [25](#)

P

PAL [25](#)

palette [9](#)

passthru, performing [53](#)

PCI chip sets [8](#)

Q

quick start [5](#)

R

RAM [9](#)

related documents [vi](#)

requirements [8](#)

S

selecting an expansion slot [20](#)

setting up the computer [19](#)

slot selection [20](#)

system requirements [8](#)

U

unpacking the board [7](#)

V

verifying board operation [49](#)

video coaxial connector [25](#)

W

Windows 2000, installing the device
driver [40](#)

Windows 98, installing the device
driver [34](#)

Windows Me, installing the device
driver [37](#)

Windows XP, installing the device
driver [43](#)