
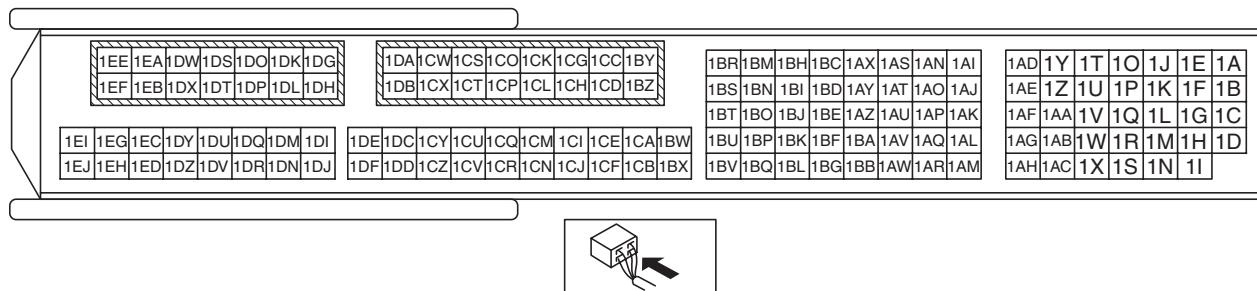


DTC P2109:00 [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0102h4708000

DTC P2109:00	TP sensor minimum stop range/performance problem
DETECTION CONDITION	<ul style="list-style-type: none"> If the fully-close throttle position is 5.1 ° or lower, or 15.9 ° or more (even though the fully-close throttle position learning is finished), the PCM determines there is a malfunction. <p>Diagnostic support note</p> <ul style="list-style-type: none"> This is a continuous monitor (CCM). The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. FREEZE FRAME DATA (Mode 2)/Snapshot data is available. DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	<ul style="list-style-type: none"> Restricts the upper limit of the engine speed. Stops drive-by-wire control (throttle valve is open at approx. 8 ° by return spring force)
POSSIBLE CAUSE	<ul style="list-style-type: none"> Throttle body connector or terminals malfunction Short to ground in wiring harness between the following terminals: <ul style="list-style-type: none"> Throttle body terminal E—PCM terminal 1CG Throttle body terminal F—PCM terminal 1CC PCM connector or terminals malfunction Short to power supply in wiring harness between the following terminals: <ul style="list-style-type: none"> Throttle body terminal E—PCM terminal 1CG Throttle body terminal F—PCM terminal 1CC Open circuit in wiring harness between the following terminals: <ul style="list-style-type: none"> Throttle body terminal E—PCM terminal 1CG Throttle body terminal F—PCM terminal 1CC Improper operation of drive-by-wire control system Throttle valve actuator malfunction Throttle valve malfunction PCM malfunction

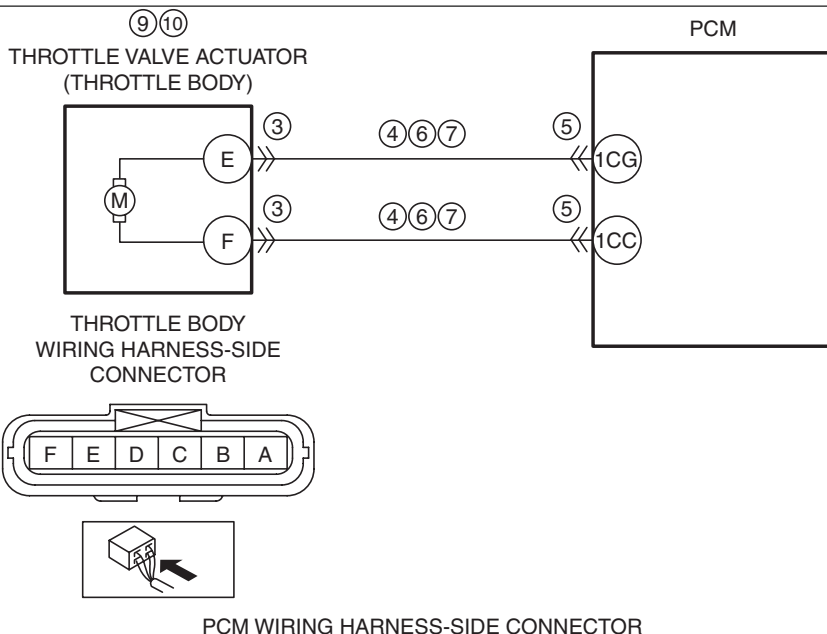

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	VERIFY FREEZE FRAME DATA (MODE 2)/ SNAPSHOT DATA HAS BEEN RECORDED <ul style="list-style-type: none"> Has the FREEZE FRAME DATA (Mode 2)/ snapshot data been recorded? 	Yes	Go to the next step.
		No	Record the FREEZE FRAME DATA (Mode 2)/snapshot data on the repair order, then go to the next step.
2	VERIFY RELATED SERVICE INFORMATION AVAILABILITY <ul style="list-style-type: none"> Verify related Service Information availability. Is any related Service Information available? 	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	INSPECT THROTTLE BODY CONNECTOR CONDITION <ul style="list-style-type: none"> Switch the ignition off. Disconnect the throttle body connector. Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). Is there any malfunction? 	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
4	INSPECT THROTTLE VALVE ACTUATOR CIRCUIT FOR SHORT TO GROUND <ul style="list-style-type: none"> Verify that the throttle body connector is disconnected. Inspect for continuity between the following terminals (wiring harness-side) and body ground: <ul style="list-style-type: none"> Throttle body terminal E Throttle body terminal F Is there continuity? 	Yes	If the short to ground circuit could be detected in the wiring harness: • Repair or replace the wiring harness for a possible short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Go to Step 11.
		No	Go to the next step.
5	INSPECT PCM CONNECTOR CONDITION <ul style="list-style-type: none"> Disconnect the PCM connector. Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). Is there any malfunction? 	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
6	INSPECT THROTTLE VALVE ACTUATOR CIRCUIT FOR SHORT TO POWER SUPPLY <ul style="list-style-type: none"> Verify that the throttle body and PCM connectors are disconnected. Switch the ignition ON (engine off). Measure the voltage at the following terminals (wiring harness-side): <ul style="list-style-type: none"> Throttle body terminal E—PCM terminal 1CG Throttle body terminal F—PCM terminal 1CC Is the voltage 0 V? 	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible short to power supply, then go to Step 11.
7	INSPECT THROTTLE VALVE ACTUATOR CIRCUIT FOR OPEN CIRCUIT <ul style="list-style-type: none"> Verify that the throttle body and PCM connectors are disconnected. Switch the ignition off. Inspect for continuity between the following terminals (wiring harness-side): <ul style="list-style-type: none"> Throttle body terminal E—PCM terminal 1CG Throttle body terminal F—PCM terminal 1CC Is there continuity? 	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible open circuit, then go to Step 11.
8	INSPECT DRIVE-BY-WIRE CONTROL SYSTEM OPERATION <ul style="list-style-type: none"> Perform the Drive-by-wire Control System Inspection. (See ENGINE CONTROL SYSTEM OPERATION INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Is there any malfunction? 	Yes	Repair or replace the malfunctioning part according to the inspection results, then go to Step 11.
		No	Go to the next step.

STEP	INSPECTION	ACTION	
9	INSPECT THROTTLE VALVE ACTUATOR <ul style="list-style-type: none"> Inspect the throttle valve actuator. (See THROTTLE BODY INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Is there any malfunction? 	Yes	Replace the throttle body, then go to Step 11. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	Go to the next step.
10	INSPECT THROTTLE VALVE <ul style="list-style-type: none"> Inspect the throttle valve. (See THROTTLE BODY INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Is there any malfunction? 	Yes	Replace the throttle body, then go to the next step. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	Go to the next step.
11	VERIFY DTC TROUBLESHOOTING COMPLETED <ul style="list-style-type: none"> Always reconnect all disconnected connectors. Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Is the same DTC present? 	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Go to the next step.
		No	Go to the next step.
12	VERIFY AFTER REPAIR PROCEDURE <ul style="list-style-type: none"> Perform the "AFTER REPAIR PROCEDURE". (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Are any DTCs present? 	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	DTC troubleshooting completed.