


<b>DTC P2109:00</b>	<b>TP sensor minimum stop range/performance problem</b>
<b>DETECTION CONDITION</b>	<ul style="list-style-type: none"> <li>If the fully-close throttle position is <b>5.1 ° or lower</b>, or <b>15.9 ° or more</b> (even though the fully-close throttle position learning is finished), the PCM determines there is a malfunction.</li> </ul> <p><b>Diagnostic support note</b></p> <ul style="list-style-type: none"> <li>This is a continuous monitor (CCM).</li> <li>The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle.</li> <li>FREEZE FRAME DATA (Mode 2)/Snapshot data is available.</li> <li>The DTC is stored in the PCM memory.</li> </ul>
<b>FAIL-SAFE FUNCTION</b>	<ul style="list-style-type: none"> <li>Restricts the upper limit of the engine speed.</li> <li>Stops the drive-by-wire control (throttle valve is open at <b>approx. 8 °</b> by return spring force).</li> </ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"> <li>Throttle body connector or terminals malfunction</li> <li>Short to ground in wiring harness between the following terminals: <ul style="list-style-type: none"> <li>Throttle body terminal E—PCM terminal 1CG</li> <li>Throttle body terminal F—PCM terminal 1CC</li> </ul> </li> <li>PCM connector or terminals malfunction</li> <li>Short to power supply in wiring harness between the following terminals: <ul style="list-style-type: none"> <li>Throttle body terminal E—PCM terminal 1CG</li> <li>Throttle body terminal F—PCM terminal 1CC</li> </ul> </li> <li>Open circuit in wiring harness between the following terminals: <ul style="list-style-type: none"> <li>Throttle body terminal E—PCM terminal 1CG</li> <li>Throttle body terminal F—PCM terminal 1CC</li> </ul> </li> <li>Improper operation of drive-by-wire control system</li> <li>Throttle valve actuator malfunction</li> <li>Throttle valve malfunction</li> <li>PCM malfunction</li> </ul>

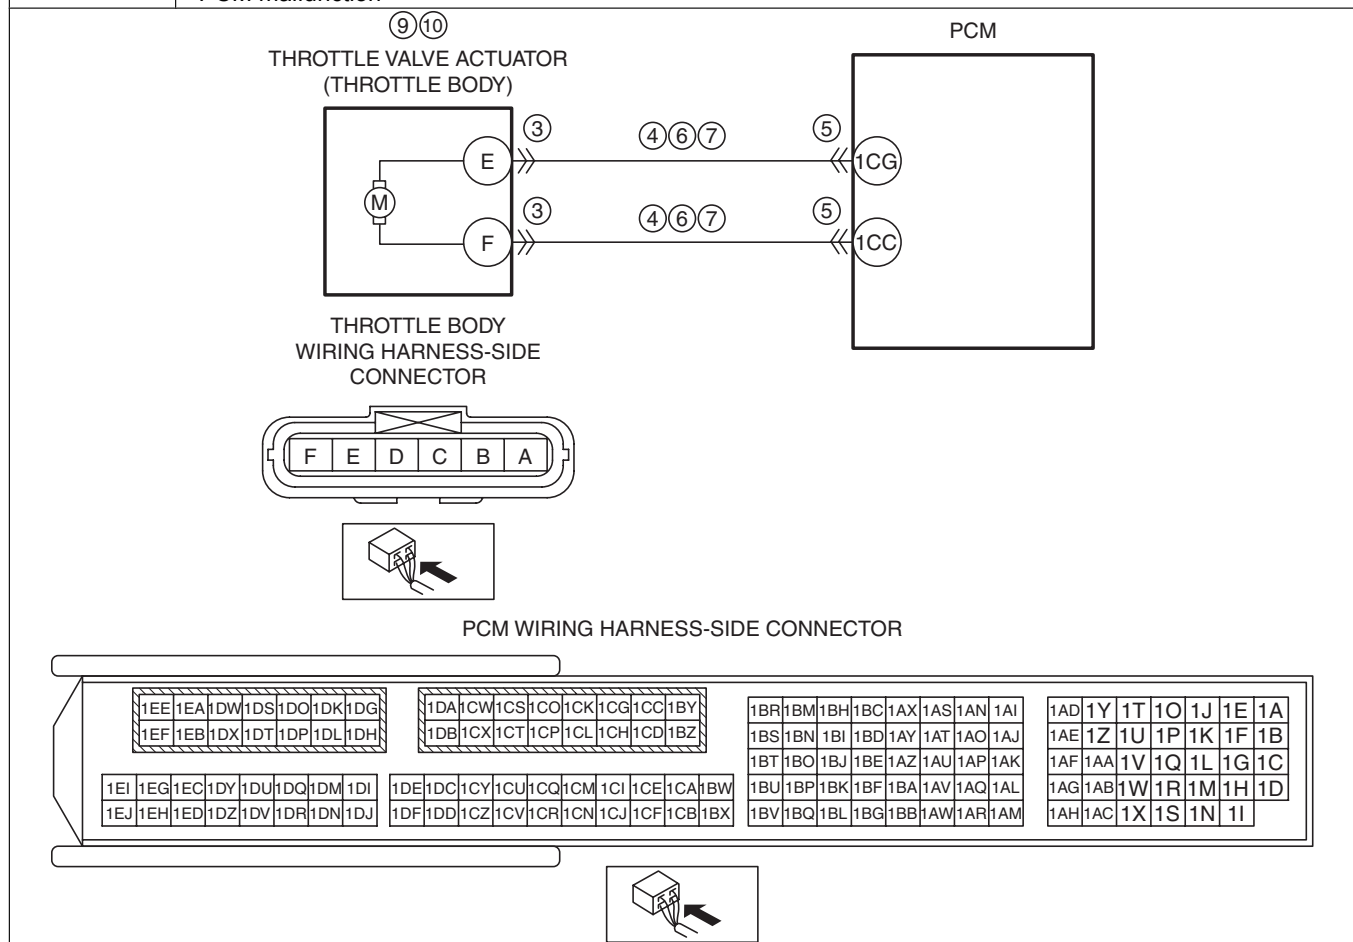

## Diagnostic Procedure

STEP	INSPECTION		ACTION
1	<b>VERIFY FREEZE FRAME DATA (MODE 2)/ SNAPSHOT DATA HAS BEEN RECORDED</b> <ul style="list-style-type: none"> <li>Has the FREEZE FRAME DATA (Mode 2)/ snapshot data been recorded?</li> </ul>	Yes	Go to the next step.
		No	Record the FREEZE FRAME DATA (Mode 2)/snapshot data on the repair order, then go to the next step.
2	<b>VERIFY RELATED SERVICE INFORMATION AVAILABILITY</b> <ul style="list-style-type: none"> <li>Verify related Service Information availability.</li> <li>Is any related Service Information available?</li> </ul>	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	<b>INSPECT THROTTLE BODY CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>Switch the ignition to off.</li> <li>Disconnect the throttle body connector.</li> <li>Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
4	<b>INSPECT THROTTLE VALVE ACTUATOR CIRCUIT FOR SHORT TO GROUND</b> <ul style="list-style-type: none"> <li>Verify that the throttle body connector is disconnected.</li> <li>Inspect for continuity between the following terminals (wiring harness-side) and body ground: <ul style="list-style-type: none"> <li>Throttle body terminal E</li> <li>Throttle body terminal F</li> </ul> </li> <li>Is there continuity?</li> </ul>	Yes	If the short to ground circuit could be detected in the wiring harness: • Repair or replace the wiring harness for a possible short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0].) Go to Step 11.
		No	Go to the next step.
5	<b>INSPECT PCM CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>Disconnect the PCM connector.</li> <li>Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
6	<b>INSPECT THROTTLE VALVE ACTUATOR CIRCUIT FOR SHORT TO POWER SUPPLY</b> <ul style="list-style-type: none"> <li>Verify that the throttle body and PCM connectors are disconnected.</li> <li>Switch the ignition ON (engine off or on).</li> <li>Measure the voltage at the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>Throttle body terminal E—PCM terminal 1CG</li> <li>Throttle body terminal F—PCM terminal 1CC</li> </ul> </li> <li>Is the voltage 0 V?</li> </ul>	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible short to power supply, then go to Step 11.
7	<b>INSPECT THROTTLE VALVE ACTUATOR CIRCUIT FOR OPEN CIRCUIT</b> <ul style="list-style-type: none"> <li>Verify that the throttle body and PCM connectors are disconnected.</li> <li>Switch the ignition to off.</li> <li>Inspect for continuity between the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>Throttle body terminal E—PCM terminal 1CG</li> <li>Throttle body terminal F—PCM terminal 1CC</li> </ul> </li> <li>Is there continuity?</li> </ul>	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible open circuit, then go to Step 11.
8	<b>INSPECT DRIVE-BY-WIRE CONTROL SYSTEM OPERATION</b> <ul style="list-style-type: none"> <li>Perform the Drive-by-wire Control System Inspection. (See ENGINE CONTROL SYSTEM OPERATION INSPECTION [SKYACTIV-G 2.0].)</li> <li>Is there any malfunction?</li> </ul>	Yes	Repair or replace the malfunctioning part according to the inspection results, then go to Step 11.
		No	Go to the next step.

STEP	INSPECTION		ACTION
9	<b>INSPECT THROTTLE VALVE ACTUATOR</b> <ul style="list-style-type: none"> <li>Inspect the throttle valve actuator. (See THROTTLE BODY INSPECTION [SKYACTIV-G 2.0].)</li> <li>Is there any malfunction?</li> </ul>	Yes	Replace the throttle body, then go to Step 11. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)
		No	Go to the next step.
10	<b>INSPECT THROTTLE VALVE</b> <ul style="list-style-type: none"> <li>Inspect the throttle valve. (See THROTTLE BODY INSPECTION [SKYACTIV-G 2.0].)</li> <li>Is there any malfunction?</li> </ul>	Yes	Replace the throttle body, then go to the next step. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)
		No	Go to the next step.
11	<b>VERIFY DTC TROUBLESHOOTING COMPLETED</b> <ul style="list-style-type: none"> <li>Make sure to reconnect all disconnected connectors.</li> <li>Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0].)</li> <li>Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 2.0].)</li> <li>Is the same DTC present?</li> </ul>	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0].) Go to the next step.
		No	Go to the next step.
12	<b>VERIFY AFTER REPAIR PROCEDURE</b> <ul style="list-style-type: none"> <li>Perform the "AFTER REPAIR PROCEDURE". (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0].)</li> <li>Are any DTCs present?</li> </ul>	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 2.0].)
		No	DTC troubleshooting completed.