


# DTC P0010:00 [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0102h4310700

<b>DTC P0010:00</b>	<b>Electric variable valve timing control circuit range/performance problem</b>
<b>DETECTION CONDITION</b>	<ul style="list-style-type: none"> <li>• A malfunction is detected in the results of the on-board diagnostic test received from the electric variable valve timing driver.</li> <li>• The motor speed signal received from the electric variable valve timing driver is in error.</li> </ul> <p><b>Diagnostic support note</b></p> <ul style="list-style-type: none"> <li>• This is a continuous monitor (CCM).</li> <li>• The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle.</li> <li>• FREEZE FRAME DATA (Mode 2)/Snapshot data is available.</li> <li>• DTC is stored in the PCM memory.</li> </ul>
<b>FAIL-SAFE FUNCTION</b>	<ul style="list-style-type: none"> <li>• Stops activation of the electric variable valve timing driver.</li> </ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"> <li>• Electric variable valve timing motor/driver connectors or terminals malfunction</li> <li>• Electric variable valve timing relay malfunction</li> <li>• Short to ground or open circuit in electric variable valve timing relay power supply circuit               <ul style="list-style-type: none"> <li>— Short to ground in wiring harness between MAIN 200 A fuse and electric variable valve timing relay terminal D</li> <li>— MAIN 200 A fuse and/or EVVT 20 A fuse malfunction</li> <li>— Open circuit in wiring harness between battery positive terminal and electric variable valve timing relay terminal D</li> </ul> </li> <li>• Short to ground in wiring harness between the following terminals:               <ul style="list-style-type: none"> <li>— Electric variable valve timing relay terminal C—Electric variable valve timing motor/driver terminal 1E</li> <li>— Electric variable valve timing relay terminal C—Electric variable valve timing motor/driver terminal 2B</li> </ul> </li> <li>• Short to power supply in wiring harness between the following terminals:               <ul style="list-style-type: none"> <li>— Electric variable valve timing relay terminal C—Electric variable valve timing motor/driver terminal 1E</li> <li>— Electric variable valve timing relay terminal C—Electric variable valve timing motor/driver terminal 2B</li> </ul> </li> <li>• Open circuit in wiring harness between the following terminals:               <ul style="list-style-type: none"> <li>— Electric variable valve timing relay terminal C—Electric variable valve timing motor/driver terminal 1E</li> <li>— Electric variable valve timing relay terminal C—Electric variable valve timing motor/driver terminal 2B</li> </ul> </li> <li>• Open circuit in wiring harness between electric variable valve timing motor/driver terminal 2A and body ground</li> <li>• Short to ground in wiring harness between the following terminals:               <ul style="list-style-type: none"> <li>— Electric variable valve timing motor/driver terminal 1D—PCM terminal 1AZ</li> <li>— Electric variable valve timing motor/driver terminal 1C—PCM terminal 1O</li> <li>— Electric variable valve timing motor/driver terminal 1B—PCM terminal 1J</li> <li>— Electric variable valve timing motor/driver terminal 1A—PCM terminal 1AE</li> </ul> </li> <li>• PCM connector or terminals malfunction</li> <li>• Short to power supply in wiring harness between the following terminals:               <ul style="list-style-type: none"> <li>— Electric variable valve timing motor/driver terminal 1D—PCM terminal 1AZ</li> <li>— Electric variable valve timing motor/driver terminal 1C—PCM terminal 1O</li> <li>— Electric variable valve timing motor/driver terminal 1B—PCM terminal 1J</li> <li>— Electric variable valve timing motor/driver terminal 1A—PCM terminal 1AE</li> </ul> </li> <li>• Electric variable valve timing motor/driver circuits are shorted to each other</li> <li>• Open circuit in wiring harness between the following terminals:               <ul style="list-style-type: none"> <li>— Electric variable valve timing motor/driver terminal 1D—PCM terminal 1AZ</li> <li>— Electric variable valve timing motor/driver terminal 1C—PCM terminal 1O</li> <li>— Electric variable valve timing motor/driver terminal 1B—PCM terminal 1J</li> <li>— Electric variable valve timing motor/driver terminal 1A—PCM terminal 1AE</li> </ul> </li> <li>• Electric variable valve timing driver malfunction</li> <li>• Electric variable valve timing motor malfunction</li> <li>• PCM malfunction</li> </ul>

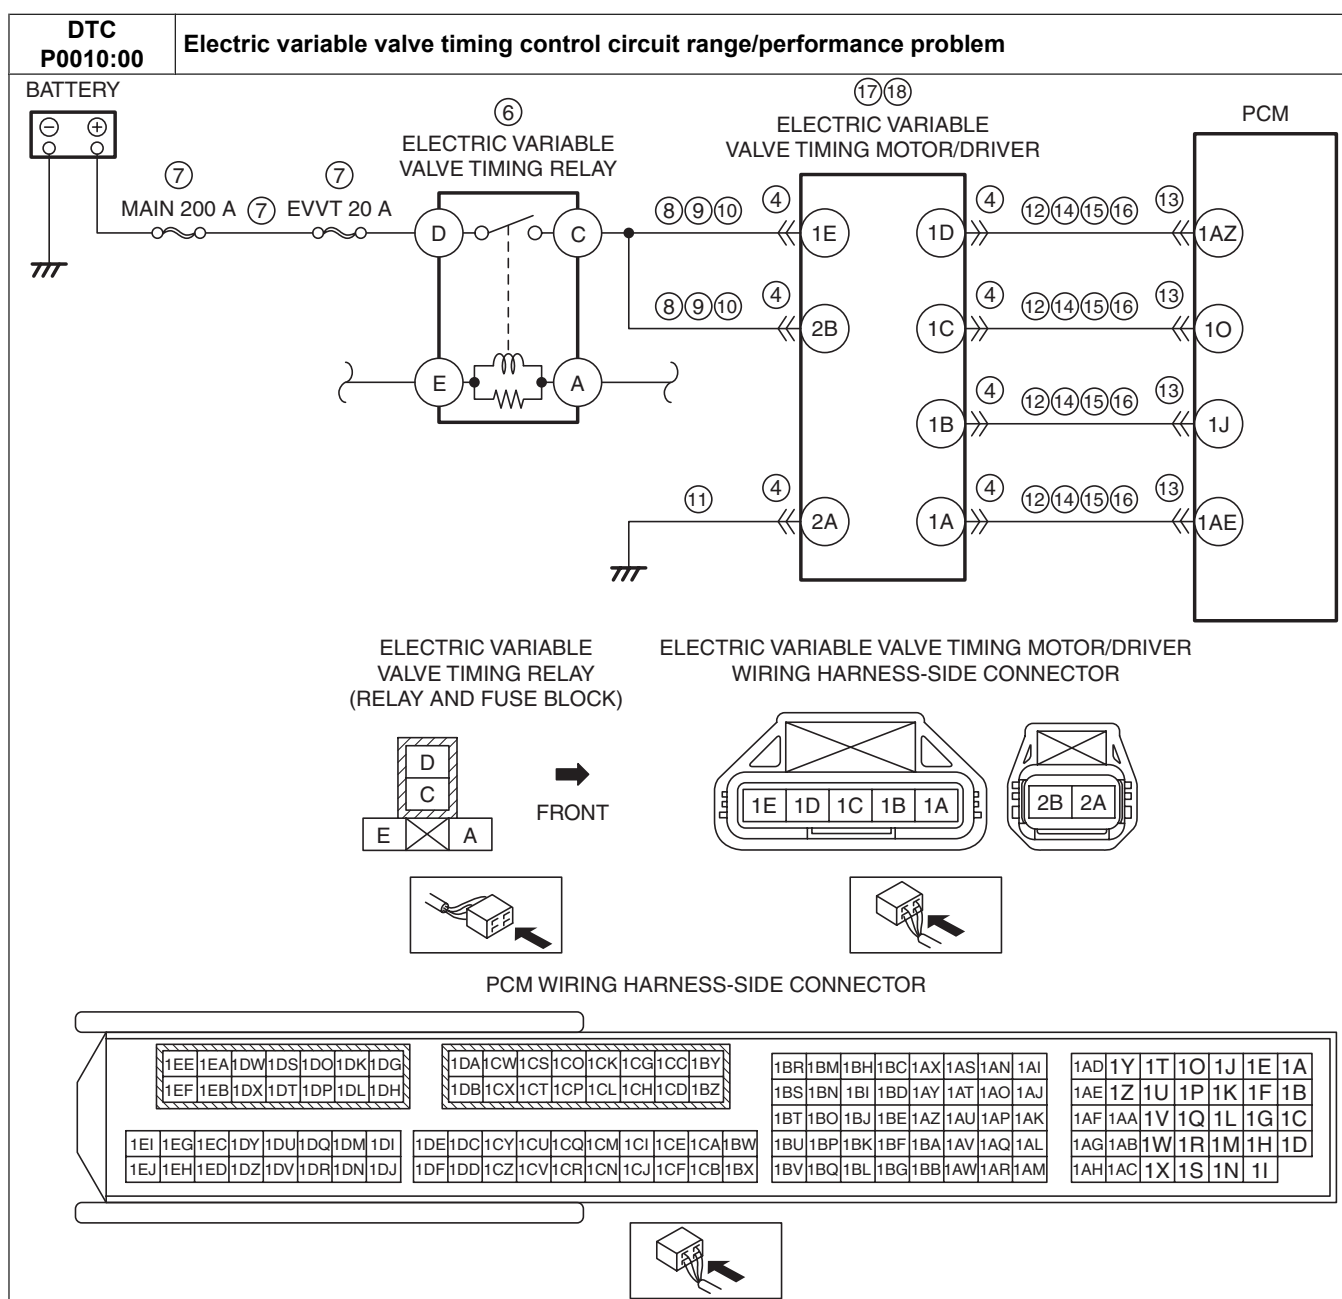

## Diagnostic Procedure

STEP	INSPECTION	ACTION	
1	<b>VERIFY FREEZE FRAME DATA (MODE 2)/ SNAPSHOT DATA HAS BEEN RECORDED</b> • Has the FREEZE FRAME DATA (Mode 2)/ snapshot data been recorded?	Yes	Go to the next step.
		No	Record the FREEZE FRAME DATA (Mode 2)/snapshot data on the repair order, then go to the next step.
2	<b>VERIFY RELATED SERVICE INFORMATION AVAILABILITY</b> • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	<b>VERIFY RELATED PENDING CODE AND/OR DTC</b> • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) • Is the PENDING CODE/DTC P1380:00 also present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC P1380:00 [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	Go to the next step.

STEP	INSPECTION	ACTION	
4	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>• Switch the ignition off.</li> <li>• Disconnect the electric variable valve timing motor/driver connector.</li> <li>• Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).</li> <li>• Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 19.
		No	Go to the next step.
5	<b>DETERMINE IF MALFUNCTION CAUSE IS ELECTRIC VARIABLE VALVE TIMING MOTOR/ DRIVER POWER SUPPLY CIRCUIT OR OTHER</b> <ul style="list-style-type: none"> <li>• Verify that the electric variable valve timing motor/ driver connector is disconnected.</li> <li>• Start the engine.</li> <li>• Measure the voltage at the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>— Electric variable valve timing motor/driver terminal 1E</li> <li>— Electric variable valve timing motor/driver terminal 2B</li> </ul> </li> <li>• Is the voltage <b>B+</b>?</li> </ul>	Yes	Go to Step 11.
		No	Go to the next step.
6	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING RELAY</b> <ul style="list-style-type: none"> <li>• Switch the ignition off.</li> <li>• Remove the electric variable valve timing relay.</li> <li>• Inspect the electric variable valve timing relay. (See RELAY INSPECTION.)</li> <li>• Is there any malfunction?</li> </ul>	Yes	Replace the electric variable valve timing relay, then go to Step 19.
		No	Go to the next step.
7	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING RELAY POWER SUPPLY CIRCUIT FOR SHORT TO GROUND OR OPEN CIRCUIT</b> <ul style="list-style-type: none"> <li>• Electric variable valve timing relay is removed.</li> <li>• Verify that the electric variable valve timing motor/ driver connector is disconnected.</li> <li>• Measure the voltage at the electric variable valve timing relay terminal D (wiring harness-side).</li> <li>• Is the voltage <b>B+</b>?</li> </ul>	Yes	Go to the next step.
		No	Inspect the MAIN 200 A fuse and EVVT 20 A fuse. <ul style="list-style-type: none"> <li>• If the fuse is blown: <ul style="list-style-type: none"> <li>— Repair or replace the wiring harness for a possible short to ground.</li> <li>— Replace the malfunctioning fuse.</li> </ul> </li> <li>• If the fuse is deteriorated: <ul style="list-style-type: none"> <li>— Replace the malfunctioning fuse.</li> </ul> </li> <li>• If all fuses are normal: <ul style="list-style-type: none"> <li>— Repair or replace the wiring harness for a possible open circuit.</li> </ul> </li> </ul> Go to Step 19.
8	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING RELAY CONTROL CIRCUIT FOR SHORT TO GROUND</b> <ul style="list-style-type: none"> <li>• Electric variable valve timing relay is removed.</li> <li>• Verify that the electric variable valve timing motor/ driver connector is disconnected.</li> <li>• Inspect for continuity between electric variable valve timing relay terminal C (wiring harness-side) and body ground.</li> <li>• Is there continuity?</li> </ul>	Yes	Repair or replace the wiring harness for a possible short to ground, then go to Step 19.
		No	Go to the next step.
9	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING RELAY CONTROL CIRCUIT FOR SHORT TO POWER SUPPLY</b> <ul style="list-style-type: none"> <li>• Electric variable valve timing relay is removed.</li> <li>• Verify that the electric variable valve timing motor/ driver connector is disconnected.</li> <li>• Switch the ignition ON (engine off).</li> <li>• Measure the voltage at the electric variable valve timing relay terminal C (wiring harness-side).</li> <li>• Is the voltage <b>0 V</b>?</li> </ul>	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible short to power supply, then go to Step 19.

STEP	INSPECTION	ACTION	
10	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING RELAY CONTROL CIRCUIT FOR OPEN CIRCUIT</b> <ul style="list-style-type: none"> <li>• Electric variable valve timing relay is removed.</li> <li>• Verify that the electric variable valve timing motor/driver connector is disconnected.</li> <li>• Switch the ignition off.</li> <li>• Inspect for continuity between the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>— Electric variable valve timing relay terminal C</li> <li>— Electric variable valve timing motor/driver terminal 1E</li> <li>— Electric variable valve timing relay terminal C</li> <li>— Electric variable valve timing motor/driver terminal 2B</li> </ul> </li> <li>• Is there continuity?</li> </ul>	Yes	Go to Step 19.
		No	Repair or replace the wiring harness for a possible open circuit, then go to Step 19.
11	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER GROUND CIRCUIT FOR OPEN CIRCUIT</b> <ul style="list-style-type: none"> <li>• Verify that the electric variable valve timing motor/driver connector is disconnected.</li> <li>• Switch the ignition off.</li> <li>• Inspect for continuity between electric variable valve timing motor/driver terminal 2A (wiring harness-side) and body ground.</li> <li>• Is there continuity?</li> </ul>	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible open circuit, then go to Step 19.
12	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER CIRCUIT FOR SHORT TO GROUND</b> <ul style="list-style-type: none"> <li>• Verify that the electric variable valve timing motor/driver connector is disconnected.</li> <li>• Inspect for continuity between the following terminals (wiring harness-side) and body ground: <ul style="list-style-type: none"> <li>— Electric variable valve timing motor/driver terminal 1D</li> <li>— Electric variable valve timing motor/driver terminal 1C</li> <li>— Electric variable valve timing motor/driver terminal 1B</li> <li>— Electric variable valve timing motor/driver terminal 1A</li> </ul> </li> <li>• Is there continuity?</li> </ul>	Yes	If the short to ground circuit could be detected in the wiring harness: <ul style="list-style-type: none"> <li>• Repair or replace the wiring harness for a possible short to ground.</li> </ul> If the short to ground circuit could not be detected in the wiring harness: <ul style="list-style-type: none"> <li>• Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</li> </ul> Go to Step 19.
		No	Go to the next step.
13	<b>INSPECT PCM CONNECTOR CONDITION</b> <ul style="list-style-type: none"> <li>• Disconnect the PCM connector.</li> <li>• Inspect for poor connection (such as damaged/pulled-out pins, corrosion).</li> <li>• Is there any malfunction?</li> </ul>	Yes	Repair or replace the connector and/or terminals, then go to Step 19.
		No	Go to the next step.
14	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER CIRCUIT FOR SHORT TO POWER SUPPLY</b> <ul style="list-style-type: none"> <li>• Verify that the electric variable valve timing motor/driver and PCM connectors are disconnected.</li> <li>• Switch the ignition ON (engine off).</li> <li>• Measure the voltage at the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>— Electric variable valve timing motor/driver terminal 1D</li> <li>— Electric variable valve timing motor/driver terminal 1C</li> <li>— Electric variable valve timing motor/driver terminal 1B</li> <li>— Electric variable valve timing motor/driver terminal 1A</li> </ul> </li> <li>• Is the voltage 0 V?</li> </ul>	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible short to power supply, then go to Step 19.

STEP	INSPECTION	ACTION	
15	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER CIRCUITS FOR SHORT TO EACH OTHER</b> <ul style="list-style-type: none"> <li>• Verify that the electric variable valve timing motor/driver and PCM connectors are disconnected.</li> <li>• Switch the ignition off.</li> <li>• Inspect for continuity electric variable valve timing motor/driver terminals 1D, 1C, 1B and 1A (wiring harness-side).</li> <li>• Is there continuity?</li> </ul>	Yes	Repair or replace the wiring harness for a possible short to each other, then go to Step 19.
		No	Go to the next step.
16	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER CIRCUIT FOR OPEN CIRCUIT</b> <ul style="list-style-type: none"> <li>• Verify that the electric variable valve timing motor/driver and PCM connectors are disconnected.</li> <li>• Inspect for continuity between the following terminals (wiring harness-side): <ul style="list-style-type: none"> <li>— Electric variable valve timing motor/driver terminal 1D—PCM terminal 1AZ</li> <li>— Electric variable valve timing motor/driver terminal 1C—PCM terminal 1O</li> <li>— Electric variable valve timing motor/driver terminal 1B—PCM terminal 1J</li> <li>— Electric variable valve timing motor/driver terminal 1A—PCM terminal 1AE</li> </ul> </li> <li>• Is there continuity?</li> </ul>	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible open circuit, then go to Step 19.
17	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING DRIVER</b> <ul style="list-style-type: none"> <li>• Inspect the electric variable valve timing driver. (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</li> <li>• Is there any malfunction?</li> </ul>	Yes	Replace the electric variable valve timing motor/driver, then go to Step 19. (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	Go to the next step.
18	<b>INSPECT ELECTRIC VARIABLE VALVE TIMING MOTOR</b> <ul style="list-style-type: none"> <li>• Inspect the electric variable valve timing motor. (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</li> <li>• Is there any malfunction?</li> </ul>	Yes	Replace the electric variable valve timing motor/driver, then go to the next step. (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	Go to the next step.
19	<b>VERIFY DTC TROUBLESHOOTING COMPLETED</b> <ul style="list-style-type: none"> <li>• Always reconnect all disconnected connectors.</li> <li>• Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</li> <li>• Perform the KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</li> <li>• Is the same DTC present?</li> </ul>	Yes	Repeat the inspection from Step 1. <ul style="list-style-type: none"> <li>• If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</li> </ul> Go to the next step.
		No	Go to the next step.
20	<b>VERIFY AFTER REPAIR PROCEDURE</b> <ul style="list-style-type: none"> <li>• Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</li> <li>• Are any DTCs present?</li> </ul>	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	DTC troubleshooting completed.