

Caution

- Vehicle specifications differ depending on the vehicle identification number (VIN).

- Type A VIN:

- JM0 KE***** 100001—

- JM6 KE***** 100001—

- JM7 KE***** 100001—

- JM8 KE***** 100001—

- JMZ KE***** 100001—

- KE10** 100001—

- Type B VIN:

- JM0 KE***** 200001—


- JM6 KE***** 200001—

- JM8 KE***** 200001—

- JMZ KE***** 200001—

- KE10** 200001—

DTC P0571:00	Brake switch circuit problem
DETECTION CONDITION	<p>Type A VIN</p> <ul style="list-style-type: none"> • The PCM monitors switching in conjunction with brake switches No.1 and No.2. If either No.1 or No.2 do not switch for a continuous five times even though either No.1 or No.2 is switched from off to on or from on to off, P0571:00 is detected. <p>Type B VIN</p> <ul style="list-style-type: none"> • The brakes are repeatedly released 5 times under the condition in which the brake switch No.1 and brake switch No. 2 signals are both on and off for 3 s or more. <p>Diagnostic support note</p> <ul style="list-style-type: none"> • This is a continuous monitor (other). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA (Mode 2)/Snapshot data is not available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	<p>Caution</p> <ul style="list-style-type: none"> • Inspect the brake switch with it installed to the brake pedal, otherwise the brake switch may not operate normally. If the brake switch is removed from the brake pedal, replace the brake switch with a new one. <ul style="list-style-type: none"> • Brake switch connector or terminals malfunction • Short to ground or open circuit in brake switch No.1 power supply circuit <ul style="list-style-type: none"> — Short to ground in wiring harness between MAIN 200 A fuse and brake switch terminal A — MAIN 200 A fuse and/or STOP 10 A fuse malfunction — Open circuit in wiring harness between battery positive terminal and brake switch terminal A • Open circuit in wiring harness between brake switch terminal B and body ground • Short to ground in wiring harness between the following terminals: <ul style="list-style-type: none"> — Brake switch terminal D—PCM terminal 2G — Brake switch terminal C—PCM terminal 2R • PCM connector or terminals malfunction • Short to power supply in wiring harness between the following terminals: <ul style="list-style-type: none"> — Brake switch terminal D—PCM terminal 2G — Brake switch terminal C—PCM terminal 2R • Open circuit in wiring harness between the following terminals: <ul style="list-style-type: none"> — Brake switch terminal D—PCM terminal 2G — Brake switch terminal C—PCM terminal 2R • Brake switch malfunction • PCM malfunction

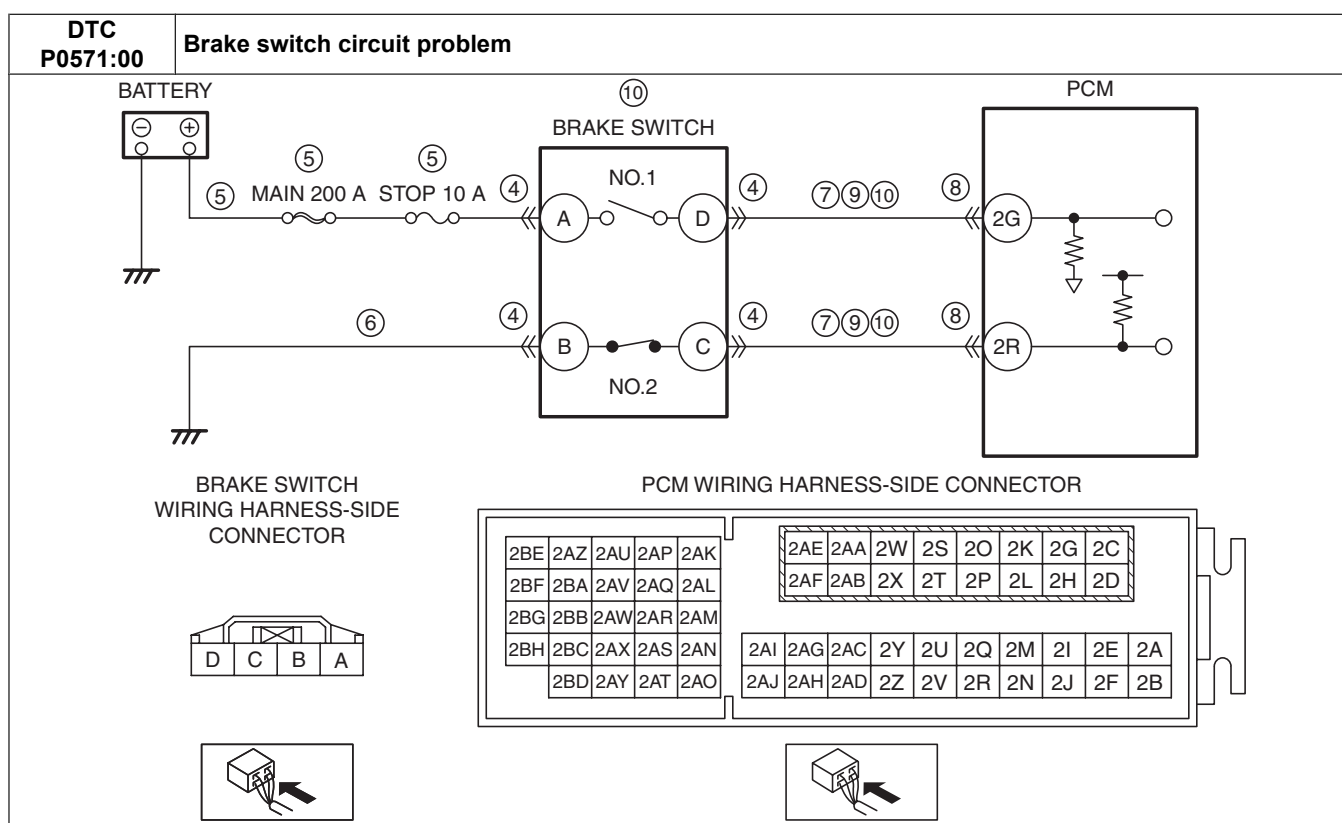

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	VERIFY FREEZE FRAME DATA (MODE 2)/SNAPSHOT DATA HAS BEEN RECORDED • Has the FREEZE FRAME DATA (Mode 2)/snapshot data been recorded?	Yes	Go to the next step.
		No	Record the FREEZE FRAME DATA (Mode 2)/snapshot data on the repair order, then go to the next step.
2	VERIFY RELATED SERVICE INFORMATION AVAILABILITY • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	VERIFY RELATED PENDING CODE AND/OR DTC • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) • Is the PENDING CODE/DTC P0703:00 also present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC P0703:00 [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	Go to the next step.
4	INSPECT BRAKE SWITCH CONNECTOR CONDITION • Switch the ignition off. • Disconnect the brake switch connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.

STEP	INSPECTION		ACTION
5	INSPECT BRAKE SWITCH NO.1 POWER SUPPLY CIRCUIT FOR SHORT TO GROUND OR OPEN CIRCUIT <ul style="list-style-type: none"> • Verify that the brake switch connector is disconnected. • Measure the voltage at the brake switch terminal A (wiring harness-side). • Is the voltage B+? 	Yes	Go to the next step.
		No	Inspect the MAIN 200 A fuse and STOP 10 A fuse. <ul style="list-style-type: none"> • If the fuse is blown: <ul style="list-style-type: none"> — Repair or replace the wiring harness for a possible short to ground. — Replace the malfunctioning fuse. • If the fuse is deteriorated: <ul style="list-style-type: none"> — Replace the malfunctioning fuse. • If all fuses are normal: <ul style="list-style-type: none"> — Repair or replace the wiring harness for a possible open circuit. Go to Step 11.
6	INSPECT BRAKE SWITCH NO.2 GROUND CIRCUIT FOR OPEN CIRCUIT <ul style="list-style-type: none"> • Verify that the brake switch connector is disconnected. • Inspect for continuity between brake switch terminal B (wiring harness-side) and body ground. • Is there continuity? 	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible open circuit, then go to Step 11.
7	INSPECT BRAKE SWITCH CIRCUIT FOR SHORT TO GROUND <ul style="list-style-type: none"> • Verify that the brake switch connector is disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: <ul style="list-style-type: none"> — Brake switch terminal D — Brake switch terminal C • Is there continuity? 	Yes	If the short to ground circuit could be detected in the wiring harness: <ul style="list-style-type: none"> • Repair or replace the wiring harness for a possible short to ground. If the short to ground circuit could not be detected in the wiring harness: <ul style="list-style-type: none"> • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Go to Step 11.
		No	Go to the next step.
8	INSPECT PCM CONNECTOR CONDITION <ul style="list-style-type: none"> • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction? 	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
9	INSPECT BRAKE SWITCH CIRCUIT FOR SHORT TO POWER SUPPLY <ul style="list-style-type: none"> • Verify that the brake switch and PCM connectors are disconnected. • Switch the ignition ON (engine off). • Measure the voltage at the following terminals (wiring harness-side): <ul style="list-style-type: none"> — Brake switch terminal D — Brake switch terminal C • Is the voltage 0 V? 	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible short to power supply, then go to Step 11.
10	INSPECT BRAKE SWITCH CIRCUIT FOR OPEN CIRCUIT <ul style="list-style-type: none"> • Verify that the brake switch and PCM connectors are disconnected. • Switch the ignition off. • Inspect for continuity between the following terminals (wiring harness-side): <ul style="list-style-type: none"> — Brake switch terminal D—PCM terminal 2G — Brake switch terminal C—PCM terminal 2R • Is there continuity? 	Yes	Replace the brake switch, then go to the next step. (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].) (See BRAKE PEDAL REMOVAL/INSTALLATION [L.H.D.].)
		No	Repair or replace the wiring harness for a possible open circuit, then go to the next step.

STEP	INSPECTION		ACTION
11	VERIFY DTC TROUBLESHOOTING COMPLETED <ul style="list-style-type: none"> • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) • Switch the ignition ON (engine off). • Depress the brake pedal for 15 s and release more than 5 times. • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) • Is the same DTC present? 	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) Go to the next step.
		No	Go to the next step.
12	VERIFY AFTER REPAIR PROCEDURE <ul style="list-style-type: none"> • Perform the "AFTER REPAIR PROCEDURE". (See AFTER REPAIR PROCEDURE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) • Are any DTCs present? 	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
		No	DTC troubleshooting completed.