

## LOW PRESSURE TRANSDUCER

For Additional Information See PR-274/275 Data Sheet

### SPECIFICATIONS


**Accuracy\*:**  $\pm 1\%$  FS  
**Overpressure:** 10 PSID  
**Supply Voltage:** 12-40 VDC  
12-35 VAC (VDC output units only)  
**Supply Current:** VDC Units - 10 mA max.  
mA Units - 20 mA max.  
**Enclosure:** 18 Ga C. R. Steel NEMA 4 (IP-65) or Panel Mount Chassis  
**Finish:** Baked on enamel-PMS2GR88B  
**Compensated Temp Range:** 25°F-150°F (-4°C-65°C)  
**T. C. Error:**  $\pm 0.0125\%/^{\circ}\text{F}$  (.02%/°C)  
**Operating Temp Range:** 0°F-175°F (-18°C-80°C)  
**Media Compatibility:** Clean dry air or any inert gas  
**Environmental:** 10-90%RH Non-Condensing  
**Termination:** Unpluggable screw terminal block  
**Wire Size:** 12 Ga max.  
**Load Impedance:** 1.6K ohms max. at 40 VDC (mA output units)  
1K ohms min. (VDC output units)

**Weight: Enclosure** 1.0 lbs. (.45 kg),  
**Panel Mount:** 0.5lbs. (.25 kg)

*\*Includes non-linearity, hysteresis and non-repeatability*

### ORDERING INFORMATION

PACKAGING		RANGE	OUTPUT
274 (enclosure)	R1 ("wc)	0 TO 0.10 / -0.05 TO +0.05	mA (4-20 mA 2-wire)
275 (panel mount)	R2 ("wc)	0 TO 1.0 / 0 TO 0.5 / 0 TO 0.25 / -0.5 TO 0.5 / -0.25 TO +0.25 / -0.125 TO +0.125	VDC (0-5 VDC or 0-10 VDC field selectable)
	R3 ("wc)	0 TO 5.0 / 0 TO 2.5 / 0 TO 1.25 / -2.5 TO +2.5 / -1.25 TO +1.25 / -0.625 TO +0.625	
	R4 ("wc)	0 TO 30 / 0 TO 15 / 0 TO 7.5 / -15.0 TO +15.0 / -7.5 TO +7.5 / -3.75 TO +3.75	
	R5* (pa)	0 TO 25 / -12.5 TO +12.5	
	R6* (pa)	0 TO 250 / 0 TO 125 / 0 TO 62.5 / -125 TO +125 / -62.5 TO +62.5 / -31.25 TO +31.25	
	R7* (pa)	0 TO 1250 / 0 TO 625 / 0 TO 312.5 / -625 TO +625 / -312.5 TO +312.5 / -156.25 TO +156.25	
	R8* (pa)	0 TO 7500 / 0 TO 3750 / 0 TO 1875 / -3750 TO +3750 / -1875 TO +1875 -937.5 TO +937.5	

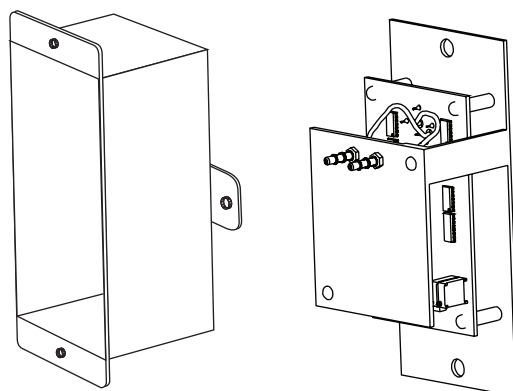

### INSTALLATION

**Inspection** Inspect the package for damage. If damaged, notify the appropriate carrier immediately. If undamaged, open the package and inspect the device for obvious damage. Return damaged products.

**Requirements**

- Tools (not provided)
  - Digital Volt-ohm Meter (DVM)
  - Appropriate screwdriver for mounting screws
  - Appropriate drill and drill bit for mounting screws
- Appropriate accessories
- Two #8 self-tapping mounting screws (*not provided*)
- Training: **Installer must be a qualified, experienced technician**

#### Warning:

- Disconnect power supply before installation to prevent electrical shock and equipment damage.
- Make all connections in accordance with the job wiring diagram and in accordance with national and local electrical codes. Use copper conductors only.



#### Caution:

- Use electrostatic discharge precautions (e.g., use of wrist straps) during installation and wiring to prevent equipment damage.
- Avoid locations where severe shock or vibration, excessive moisture or corrosive fumes are present. NEMA Type 4 housings are intended for outdoor use primarily to provide a degree of protection against wind-blown dust, rain, and hose-directed water.
- Do not exceed ratings of the device.



### Mounting

The PR-274/275 must be mounted as indicated by the arrows on the enclosure. Refer to Figure-7 for mounting dimensions.

1. Remove the transducer cover using a Phillips head screwdriver.
2. Select the mounting location.
3. Mount transducer on a vertical surface with two #8 self-tapping screws (not provided).
4. Pull wires through bottom of enclosure and make necessary connections.
5. Replace cover and make pneumatic connections.

### Wiring

Use maximum 12 AWG wire for wiring terminals. Use flexible 1/4" O.D. 5/32" I.D. tubing for the high and low pressure connections. Refer to **Figures 1, 2, 3, & 4**


(Wiring Instructions continued on pages 2 and 3)



LOW PRESSURE TRANSDUCER

Wiring PR-274/275 Units with mA Output

PR-274/275 Low Pressure Transducer with mA Output

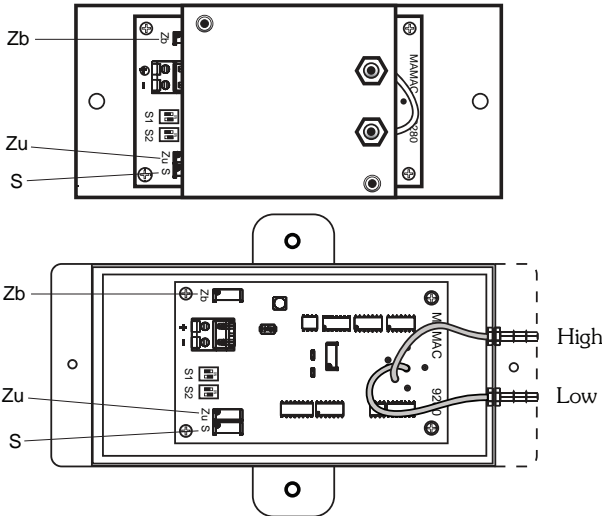

PR-274/275 pressure transducers are 4-20 mA output units powered with a 12-40 VDC supply.

The following describes the proper wiring of these pressure transducers with mA output:

- 1. Remove the blue terminal block by carefully pulling it off the circuit board.
- 2. Locate the [+] and [-] terminal markings on the board.
- 3. Attach the supply voltage to the [+] lead.
- 4. Connect the 4-20 mA output ([-] terminal) to the controller's input terminal.
- 5. Ensure that the power supply common is attached to the common bus of the controller.
- 6. Re-insert the terminal block to the circuit board and apply power to the unit.
- 7. Check for the appropriate output signal using a DVM set on DC milliamps connected in series with the [-] terminal.

TYPICAL APPLICATIONS (wiring diagrams)

Figure - 1 and Figure - 2 illustrate typical wiring diagrams for the mA output low pressure transducer.

Figure - 1  
Wiring for mA Output Transducers with an External DC Power Supply



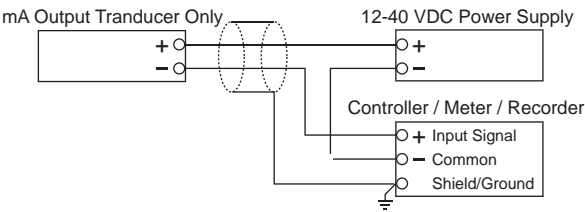


Figure - 2  
Wiring for mA Output Transducers where the Controller or Meter has an Internal DC Power Supply



Wiring PR-274/275 Units with VDC Output

PR-274/275 Low Pressure Transducer with VDC Output

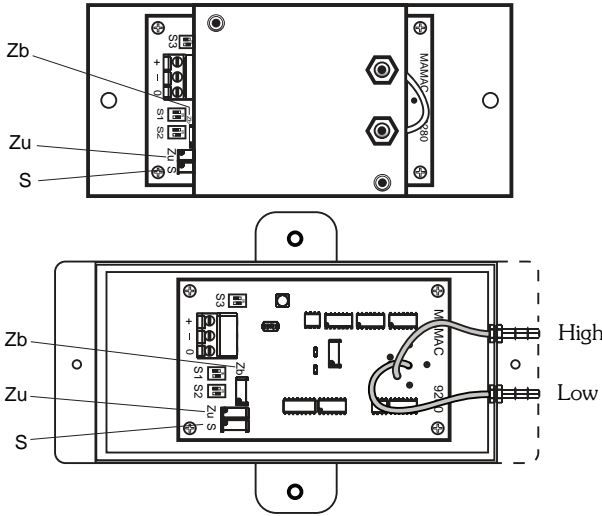

PR-274/275 pressure transducers with Vdc output are field selectable 0-5 VDC or 0-10 VDC output and can be powered with either a 12-40 VDC or 12-35 VAC.

The following describes the proper wiring of these pressure transducers with VDC output:

- 1. Remove the blue terminal block by carefully pulling it off the circuit board.
- 2. Locate the [+], [-] and [0] terminal markings on the board.
- 3. Attach the power wires to the [+] and [-] terminals. The [-] terminal is also the negative terminal.
- 4. Connect the [0] terminal, which is the positive VDC output terminal, to the controller's input terminal.
- 5. Re-insert the terminal block to the circuit board and apply power to the unit.
- 6. Check the appropriate VDC output using a voltmeter set on DC volts across the [0] and [-] terminals.

TYPICAL APPLICATIONS (wiring diagrams)

Figure - 3 and Figure - 4 illustrate typical wiring diagrams for the VDC output low pressure transducer.

Figure - 3  
Wiring for VDC Low Pressure Transducers when applied with External AC supply




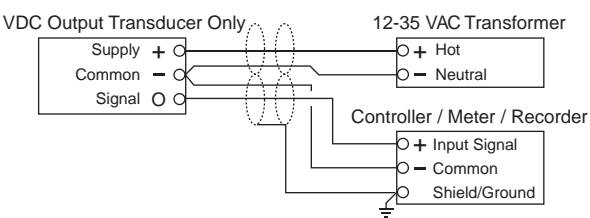


Figure - 4  
Wiring for VDC Low Pressure Transducers when applied with external DC supply

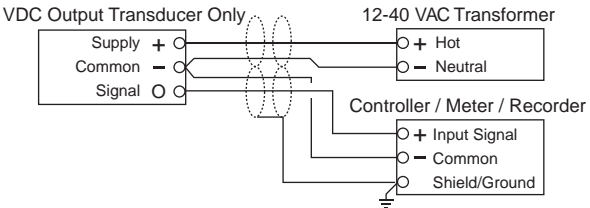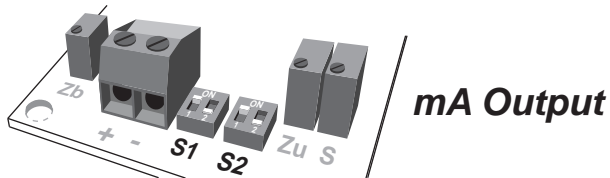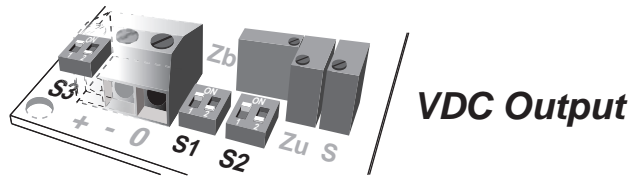

**LOW PRESSURE TRANSDUCER****mA Output****Range Configuration: Uni-Directional Switch 1 (S1)**

R1	0 - 0.10 "wc / 25 pa (default)	
R2	0 - 1.0 "wc / 250 pa (default)	
	0 - 0.5 "wc / 125 pa	
	0 - 0.25 "wc / 62.5 pa	
R3	0 - 5.0 "wc / 1250 pa (default)	
	0 - 2.5 "wc / 625 pa	
	0 - 1.25 "wc / 312.5 pa	
R4	0 - 30.0 "wc / 7500 pa (default)	
	0 - 15.0 "wc / 3750 pa	
	0 - 7.5 "wc / 1875 pa	

**VDC Output****Range Configuration: Uni-Directional Switch 1 (S1)**

R1	0 - 0.10 "wc / 25 pa (default)	
R2	0 - 1.0 "wc / 250 pa (default)	
	0 - 0.5 "wc / 125 pa	
	0 - 0.25 "wc / 62.5 pa	
R3	0 - 5.0 "wc / 1250 pa (default)	
	0 - 2.5 "wc / 625 pa	
	0 - 1.25 "wc / 312.5 pa	
R4	0 - 30.0 "wc / 7500 pa (default)	
	0 - 15.0 "wc / 3750 pa	
	0 - 7.5 "wc / 1875 pa	

**Output Configuration: Switch 2 (S2)**

Uni-directional (default)	
Bi-directional	

**Range Configuration: Bi-Directional Switch 1 (S1)**

R1	+/- 0.05 "wc / 12.5 pa (default)	
R2	+/- 0.5 "wc / 125 pa (default)	
	+/- 0.25 "wc / 62.5 pa	
	+/- 0.125 "wc / 31.25 pa	
R3	+/- 2.5 "wc / 625 pa (default)	
	+/- 1.25 "wc / 312.5 pa	
	+/- .625 "wc / 156.25 pa	
R4	+/- 15.0 "wc / 3750 pa (default)	
	+/- 7.5 "wc / 1875 pa	
	+/- 3.75 "wc / 937.5 pa	

**Output Configuration: Switch 2 (S2)**

Uni-directional (default)	
Bi-directional	

**Range Configuration: Bi-Directional Switch 1 (S1)**

R1	+/- 0.05 "wc / 12.5 pa (default)	
R2	+/- 0.5 "wc / 125 pa (default)	
	+/- 0.25 "wc / 62.5 pa	
	+/- 0.125 "wc / 31.25 pa	
R3	+/- 2.5 "wc / 625 pa (default)	
	+/- 1.25 "wc / 312.5 pa	
	+/- .625 "wc / 156.25 pa	
R4	+/- 15.0 "wc / 3750 pa (default)	
	+/- 7.5 "wc / 1875 pa	
	+/- 3.75 "wc / 937.5 pa	

**Output Value: Switch 3 (S3)**

0 - 10 (default)	
0 - 5 VDC	



## LOW PRESSURE TRANSDUCER

- CHECKOUT**
1. Verify that the unit is mounted in the correct position.
  2. Verify appropriate input signal and supply voltage.



**Caution:** Never connect 120 VAC to these transducers. Never connect AC voltage to a unit intended for DC supply.

3. Verify appropriate configuration range.

**Transducer Operation**

This is a rough functional check only.

1. Adjust the pressure to obtain maximum output signal for appropriate range.
2. Output should be 20 mA or 5 or 10 VDC.
3. Adjust the pressure to obtain minimum output signal.
4. Output should be 4 mA or 0 VDC.

**NOTE:** The PR-274/275 is a highly accurate device. For applications requiring a high degree of accuracy, the use of laboratory quality meters and gauges are recommended.

- CALIBRATION** All units are factory calibrated to meet or exceed published specifications. If field adjustment is necessary, follow the instructions below.

### Calibration of PR-274/275 mA Units

1. Connect terminals [+] and [-] to the appropriate power source.
2. Connect the DVM in series on the [-] terminal.
3. Apply low pressure to the unit. If configured for uni-direction, adjust Zu trimmer to achieve desired low output. If configured for bi-direction, adjust Zb trimmer to achieve desired low output.
4. Apply high pressure to the unit and adjust span trimmer [S] to obtain the desired high output pressure.
5. Repeat steps 3 and 4 until desired calibration is achieved.

### Calibration of PR-274/275 Vdc Units


1. Connect terminals [+] and [-] to the appropriate power source. The [-] terminal is also the negative output terminal.
2. Connect the DVM on DC volts across [0] and [-] terminal.
3. Apply low pressure to the unit. If configured for uni-direction, adjust Zu trimmer to achieve desired low output. If configured for bi-direction, adjust Zb trimmer to achieve desired low output.
4. Apply high pressure to the unit and adjust span trimmer [S] to obtain the desired high output pressure.
5. Repeat steps 3 and 4 until desired calibration is achieved.

- MAINTENANCE** Regular maintenance of the total system is recommended to assure sustained optimum performance.

- FIELD REPAIR** None. Replace with a functional unit.

- WARRANTY** See Data Sheet for additional information.

**Figure - 7** PR-274/275 Low Pressure Transducer Dimensions shown in inches and millimeters (mm).

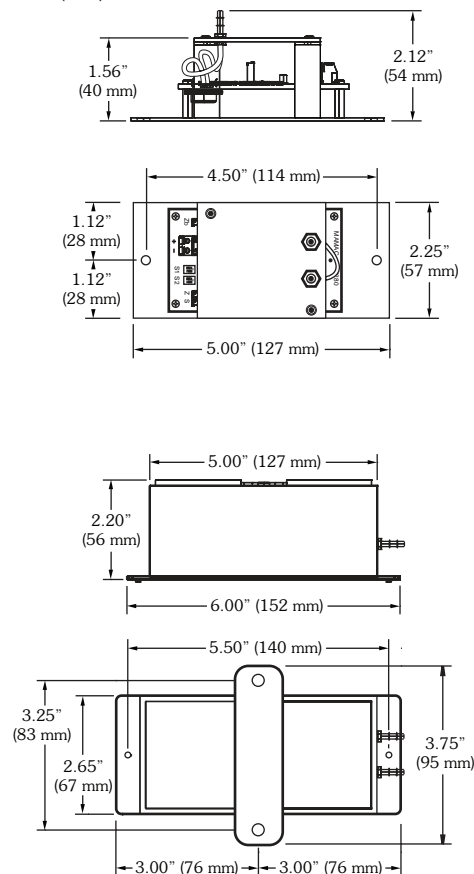

For Technical / Application Assistance call your nearest office



8189 Century Blvd. • Minneapolis, MN 55317-8002 • USA  
800-843-5116 • 952-556-4900 • Fax 952-556-4997  
sales@mamacsys.com • www.mamacsys.com

### EUROPE

Baird House, Units 6 & 7  
Dudley Innovation Centre  
Pensnett Estate • Kingswinford  
West Midlands • DY6 8XZ  
United Kingdom  
01384-271113 • Fax 01384-271114  
uk@mamacsys.com

### AUSTRALIA

4 Arming Court, Unit 2  
Holden Hill • S.A. 5088  
Australia  
08-8359-4333 • Fax 08-8395-4433  
au@mamacsys.com

### ASIA

No. 22 Lorong 21A Geylang #11-02  
Prosper Industrial Building  
Singapore • 388421  
656-3927273 • Fax 656-3927276  
as@mamacsys.com

### CANADA

155 McIntosh Drive, Unit 5  
Markham • Ontario • L3R 0N6  
Canada  
905-474-9215 • Fax 905-474-0876  
ca@mamacsys.com

MAMAC Systems Inc. reserves the right to change any specifications without notice to improve performance, reliability, or function of our products.