

# USB2RS232X4

**Industrial Grade USB To 4 Channel RS232 Serial  
Converter Compatible with Windows/Linux/MacOs**




Date	Description	Revision
2023/05/13	First Released	V1

# 1 Hardware Part

## 1.1 Features

- EMTOP SBCSoM Brand Industrial Grade USB2.0 To 4 Channel RS232 Serial converter isolated voltage up to 1500V;
- Provide Drivers Compatible with Windows/Linux/Mac Os;
- DB9 serial converter powered by an USB port / cable no external power required;
- Protection:
  - Continuous Short Circuit Protection
  - No-load input current as low as 5mA
  - Isolation voltage 3000VDC
  - Meets UL62368, EN62368 certification
  - ESD Protection: High common-mode transient immunity: >25 kV/u
- Baud Rate From 300kbps To 2Mbps;
- Come with Manual in English;

## 1.2 Interface

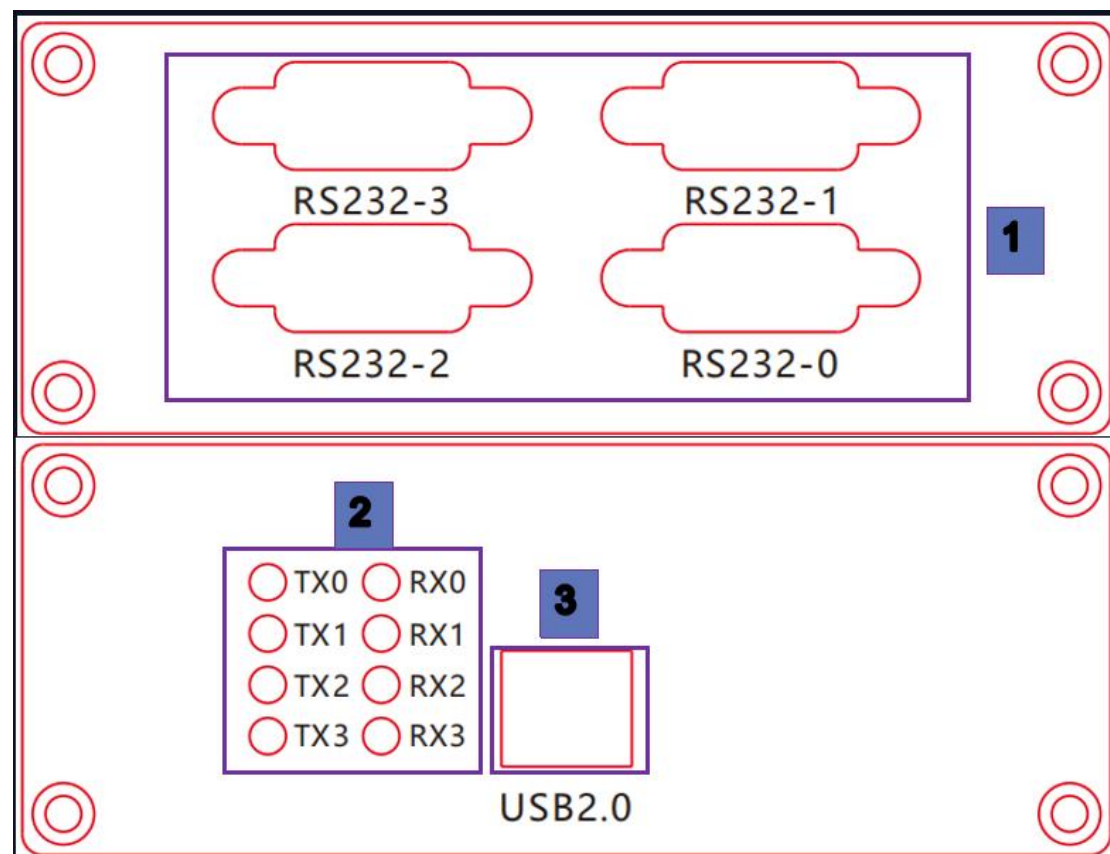

1	RS232-0,RS232-1,RS232-2,RS232-3
2	LED
3	USB Interface

### 1.3 RS232 Pin Out Table

PIN MAP

	
PIN1	NC
<b>PIN2</b>	<b>RXD</b>
<b>PIN3</b>	<b>TXD</b>
PIN4	NC
PIN5	NC
PIN6	NC
<b>PIN7</b>	<b>RTS</b>
<b>PIN8</b>	<b>CTS</b>
PIN9	NC




### 1.4 LED Indication



RS232-0	Interface 0
RS232-1	Interface 1
RS232-2	Interface 2
RS232-3	Interface 3

RS232-0	TX0	Green LED Blinking, RS232-0 Sending Data
	RX0	RED LED Blinking, RS232-0 Receiving Data
RS232-1	TX1	Green LED Blinking, RS232-1 Sending Data
	RX1	RED LED Blinking, RS232-1 Receiving Data

RS232-2	TX2	Green LED Blinking, RS232-2 Sending Data
	RX2	RED LED Blinking, RS232-2 Receiving Data
RS232-3	TX3	Green LED Blinking, RS232-3 Sending Data
	RX3	RED LED Blinking, RS232-3 Receiving Data

## 1.5 Product Size

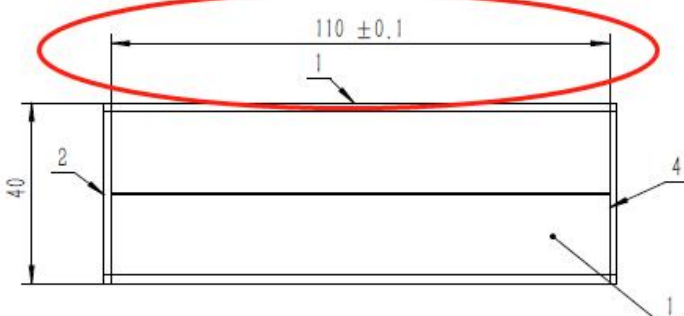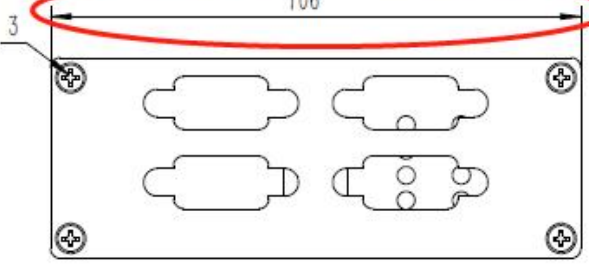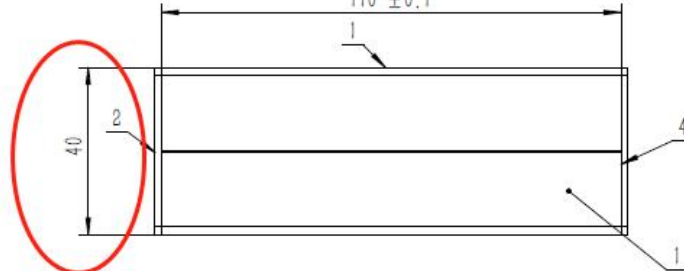	Length:110mm
	Width:106mm
	Height:40mm

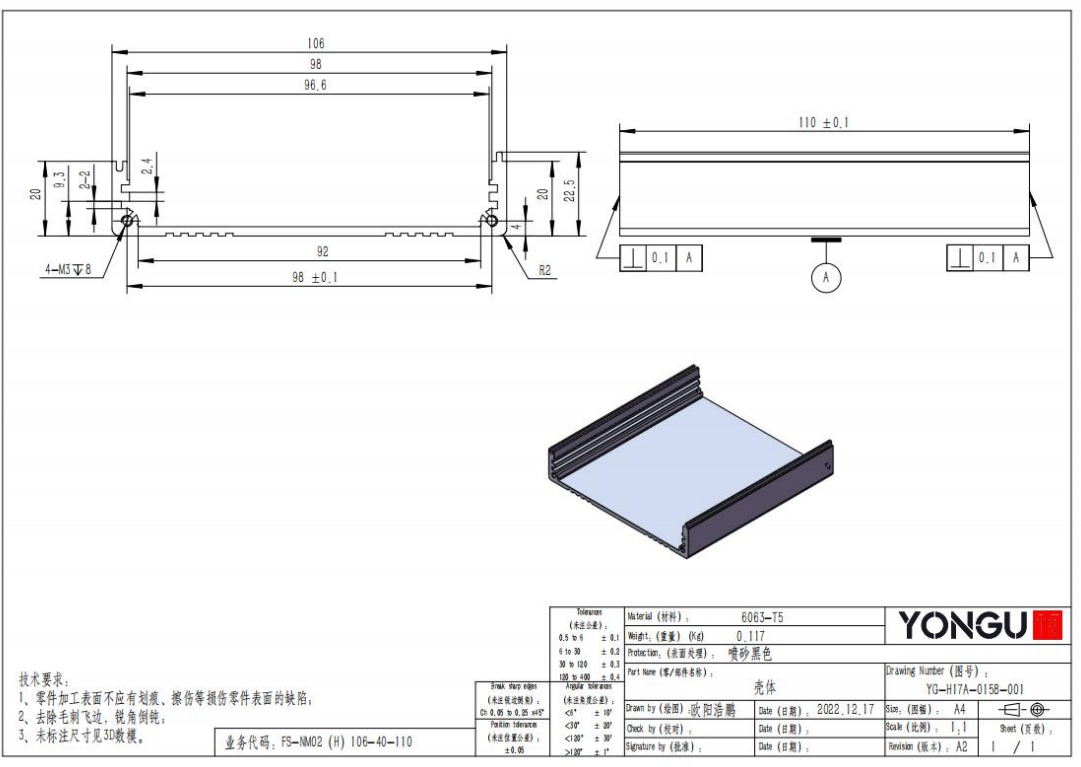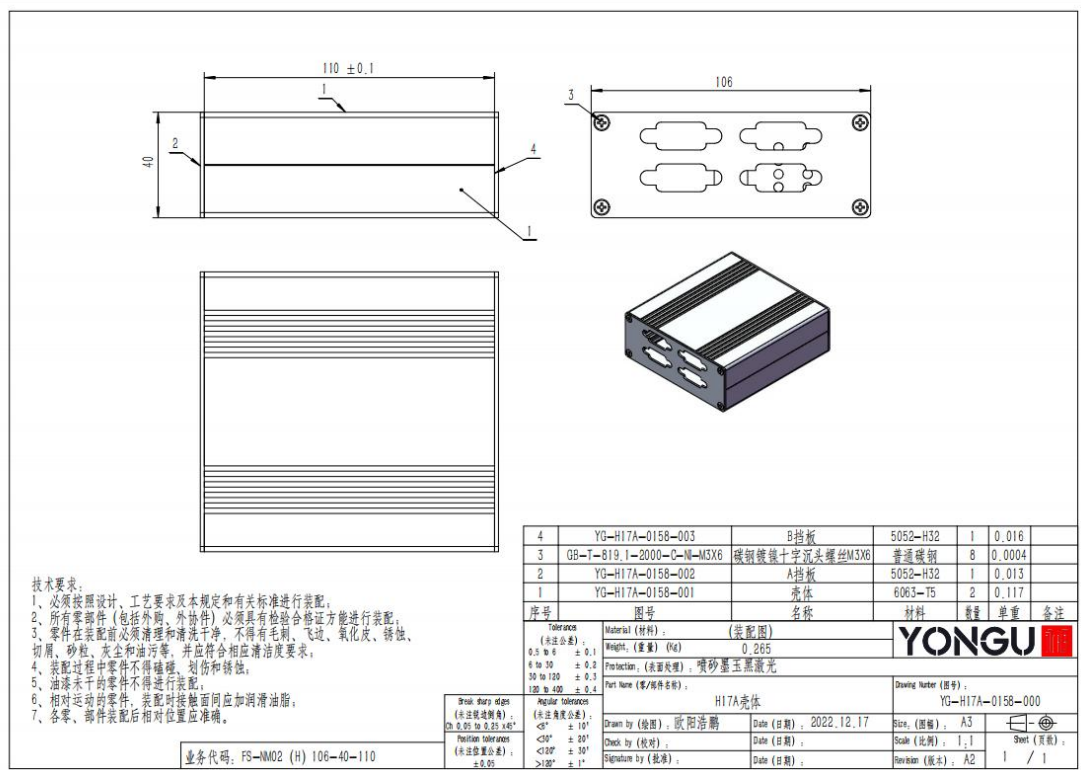

## 1.6 Produc Pictures

## 2 Driver Install

### 2.1 Driver Download

Visit Below link for more information:

<https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers?tab=downloads>

<b>CP210x Universal Windows Driver</b> v11.2.0 10/21/2022	<a href="https://www.silabs.com/documents/public/software/CP210x_Universal_Windows_Driver.zip">https://www.silabs.com/documents/public/software/CP210x_Universal_Windows_Driver.zip</a>
<b>CP210x VCP Mac OSX Driver</b> v6.0.2 10/27/2021	<a href="https://www.silabs.com/documents/public/software/Mac_OSX_VCP_Driver.zip">https://www.silabs.com/documents/public/software/Mac_OSX_VCP_Driver.zip</a>
<b>CP210x VCP Windows</b> <b>v6.7 9/4/2020</b>	<a href="https://www.silabs.com/documents/public/software/CP210x_VCP_Windows.zip">https://www.silabs.com/documents/public/software/CP210x_VCP_Windows.zip</a>
<b>CP210x Windows Drivers</b> <b>v6.7.6 9/4/2020</b>	<a href="https://www.silabs.com/documents/public/software/CP210x_Windows_Drivers.zip">https://www.silabs.com/documents/public/software/CP210x_Windows_Drivers.zip</a>
<b>CP210x Windows Drivers with Serial Enumerator</b> v6.7.6 9/4/2020	<a href="https://www.silabs.com/documents/public/software/CP210x_Windows_Drivers_with_Serial_Enumeration.zip">https://www.silabs.com/documents/public/software/CP210x_Windows_Drivers_with_Serial_Enumeration.zip</a>
<b>CP210x_5x_AppNote_Archive</b> 9/4/2020	<a href="https://www.silabs.com/documents/public/software/CP210x_5x_AppNote_Archive.zip">https://www.silabs.com/documents/public/software/CP210x_5x_AppNote_Archive.zip</a>
<b>CP210x_VCP_Win2K</b> 9/4/2020	<a href="https://www.silabs.com/documents/public/software/CP210x_VCP_Win2K.exe">https://www.silabs.com/documents/public/software/CP210x_VCP_Win2K.exe</a>
<b>Linux 2.6.x VCP Revision History</b> 9/4/2020	<a href="https://www.silabs.com/documents/public/release-notes/Linux_CP210x_VCP_2.6.x_Release_Notes.txt">https://www.silabs.com/documents/public/release-notes/Linux_CP210x_VCP_2.6.x_Release_Notes.txt</a>
<b>Linux 3.x.x/4.x.x/5.x.x VCP Driver</b> v3.x.x/4.x.x/5.x.x 1/29/2021	<a href="https://www.silabs.com/documents/login/software/Linux_3.x.x_4.x.x_VCP_Driver_Source">https://www.silabs.com/documents/login/software/Linux_3.x.x_4.x.x_VCP_Driver_Source</a>
<b>VCP Driver for WinCE60</b> v2.1 9/4/2020	<a href="https://www.silabs.com/documents/public/software/VCP_WinCE60.zip">https://www.silabs.com/documents/public/software/VCP_WinCE60.zip</a>
<b>VCP Drivers for WinCE50</b> v2.1 9/4/2020	<a href="https://www.silabs.com/documents/public/software/VCP_WinCE50.zip">https://www.silabs.com/documents/public/software/VCP_WinCE50.zip</a>

### 2.2 Install Guide For Windows

#### 2.2.1 We take windows 10 for example,





Download driver and extract:

<b>CP210x Windows Drivers</b> <b>v6.7.6 9/4/2020</b>	<a href="https://www.silabs.com/documents/public/software/CP210x_Windows_Drivers.zip">https://www.silabs.com/documents/public/software/CP210x_Windows_Drivers.zip</a>
---	---

When connect device to your computer, it shows as below from your **Device Manager**


<a href="http://www.emtop-tech.com">www.emtop-tech.com</a>	<a href="http://wiki.emtop-tech.com">wiki.emtop-tech.com</a>	<a href="https://github.com/emtop-tech">github.com/emtop-tech</a>
<a href="mailto:sales@emtop-tech.com">sales@emtop-tech.com</a>	<a href="mailto:support@emtop-tech.com">support@emtop-tech.com</a>	ARM   DSP   FPGA   SOM   SBC   OEM   ODM



-  CP2108 Interface 0
-  CP2108 Interface 1
-  CP2108 Interface 2
-  CP2108 Interface 3

Select the x64 or x86 driver and Select next, accept

 CP210xVCPInstaller_x64.exe	28/09/2017 01:58	Application	1,026 KB
 CP210xVCPInstaller_x86.exe	28/09/2017 01:58	Application	903 KB

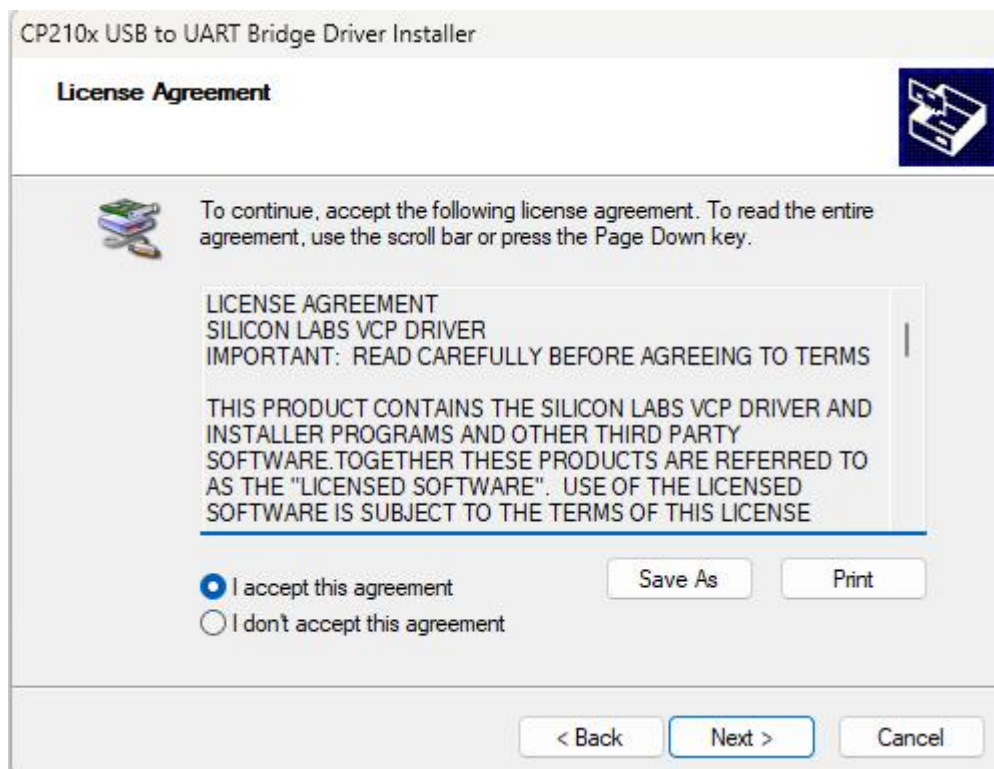

After install, the COMs show be display as below:

- ▼  Ports (COM & LPT)
  -  Silicon Labs Quad CP2108 USB to UART Bridge: Interface 0 (COM13)
  -  Silicon Labs Quad CP2108 USB to UART Bridge: Interface 1 (COM14)
  -  Silicon Labs Quad CP2108 USB to UART Bridge: Interface 2 (COM15)
  -  Silicon Labs Quad CP2108 USB to UART Bridge: Interface 3 (COM16)

Normally after you install drivers, it should be:


RS232-0	Interface 0	COM(N)
RS232-1	Interface 1	COM(N+1)
RS232-2	Interface 2	COM(N+2)
RS232-3	Interface 3	COM(N+3)

N means the COM Number from your system. For example,

- When it starts from 0, it should be COM0, COM1, COM2, COM3;
- When it starts from 10, it should be COM10, COM11, COM12, COM13


<a href="http://www.emtop-tech.com">www.emtop-tech.com</a>	<a href="http://wiki.emtop-tech.com">wiki.emtop-tech.com</a>	<a href="https://github.com/emtop-tech">github.com/emtop-tech</a>
<a href="mailto:sales@emtop-tech.com">sales@emtop-tech.com</a>	<a href="mailto:support@emtop-tech.com">support@emtop-tech.com</a>	ARM   DSP   FPGA   SOM   SBC   OEM   ODM

**Note: When you find the COM Number not in order ,like below,follow chanpter 2.2.2 solve it:**

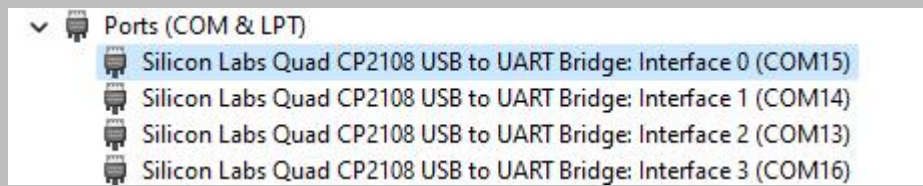


## 2.2.2 Change COM Order Number Reference (Must Read)

Select the COM port and click the right mouse button, Select Properties

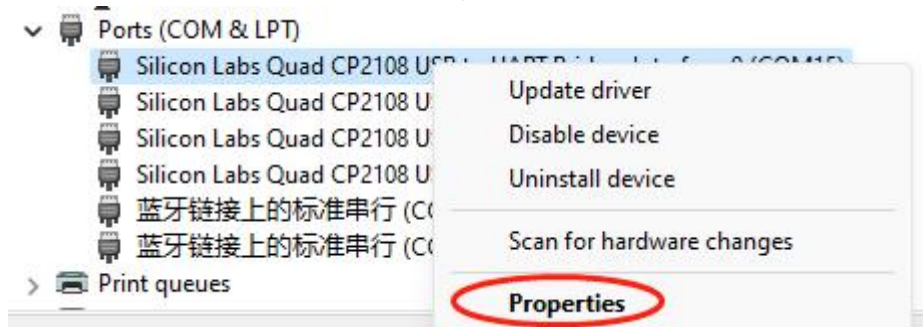


Click Port Settings And Select Advanced



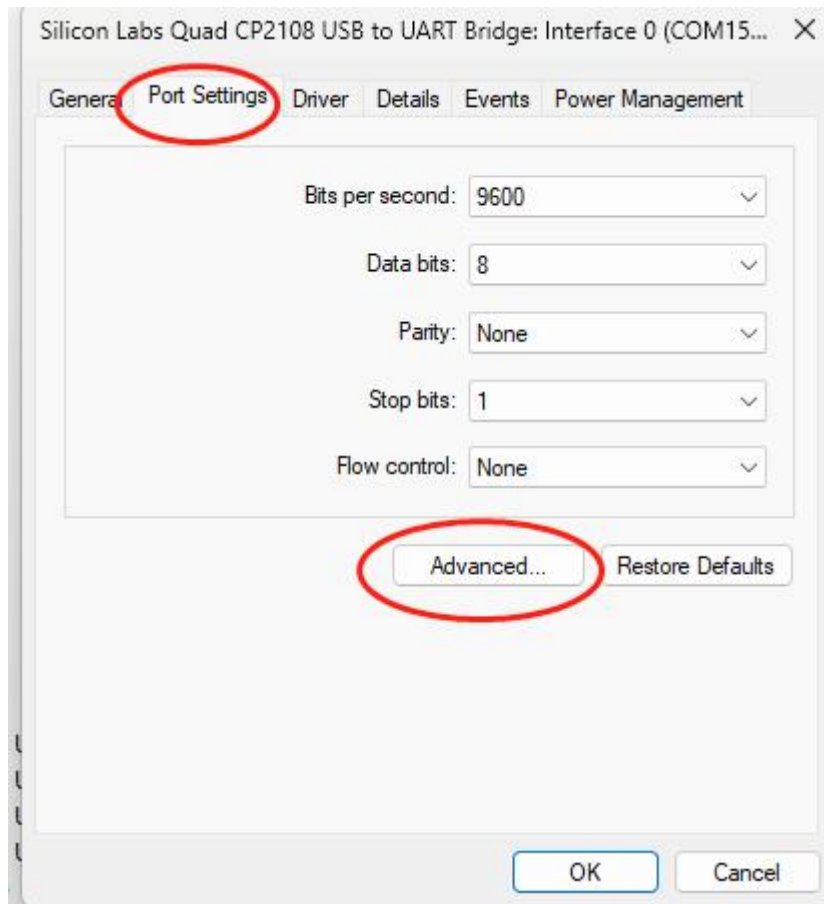

Select a New COM Number from COM Port number

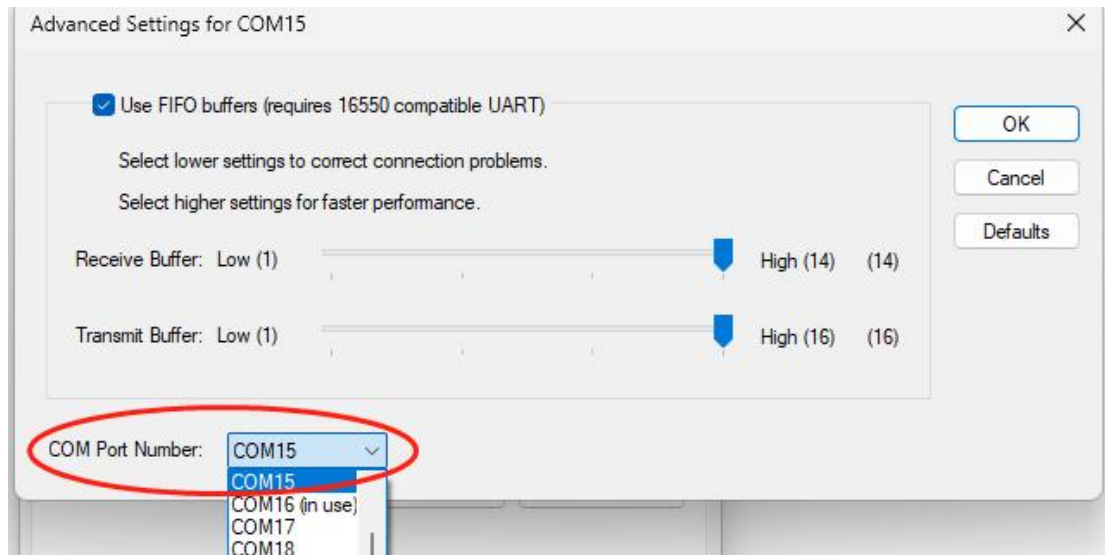

**Note: Must replug the usb cable after change port number**

## 2.3 Install Guide For Linux

We take Ubuntu18.04 for example, not drivers needed above linux kernel 3.2

When you connect device to your linux computer, type:

```
~$ ls /dev/ttyUSB*
```

```
ubuntu18@ubuntu18-VirtualBox:~$ ls /dev/ttyUSB*  
/dev/ttyUSB0 /dev/ttyUSB1 /dev/ttyUSB2 /dev/ttyUSB3
```

It shows ttyUSB0,ttyUSB1,ttyUSB2,ttyUSB3,

## 2.4 Install Guide For Mac Os

Download driver and extract

**CP210x VCP Mac OSX Driver**  
v6.0.2 10/27/2021


[https://www.silabs.com/documents/public/software/Mac\\_OSX\\_VCP\\_Driver.zip](https://www.silabs.com/documents/public/software/Mac_OSX_VCP_Driver.zip)

Extract and run SiLabsUSBDriverDisk.dmg, run Install CP210x VCP Driver.app

SiLabsUSBDriverDisk

Install CP210x VCP Driver.app

Use Terminal check status

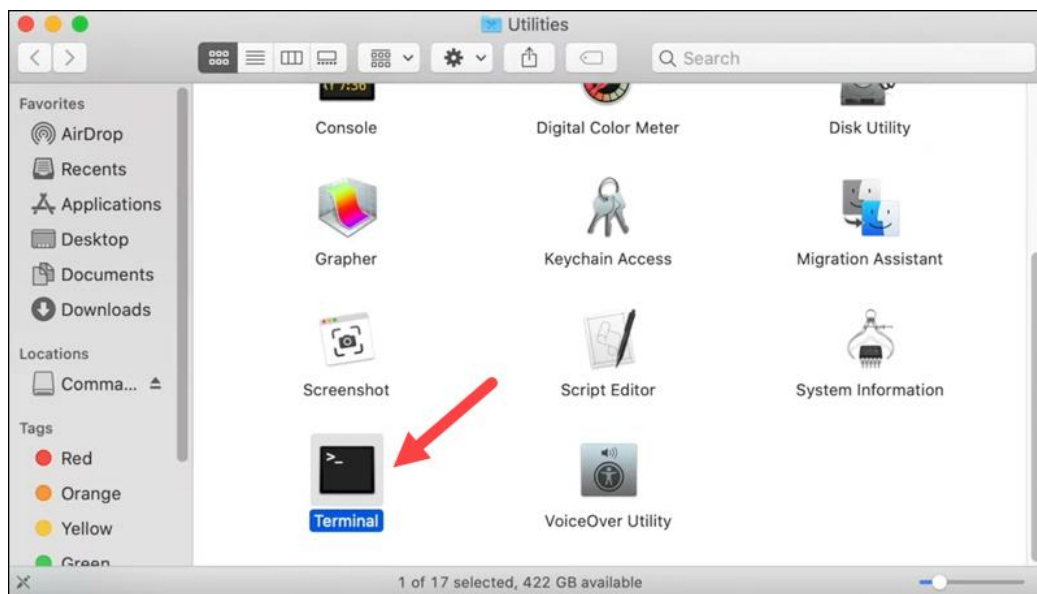

## 3 Software Usage

This chapter is samples of software usage for windows/linux/Macos


Hardware Connection is as below, use high quality usb2.0 industrial cable connect and db9-db9 cross signal cable



### 3.1 Usage For Windows


#### 3.1.1 Check device status

check if the com port order is right, if not, refer to chapter 2.2.2.

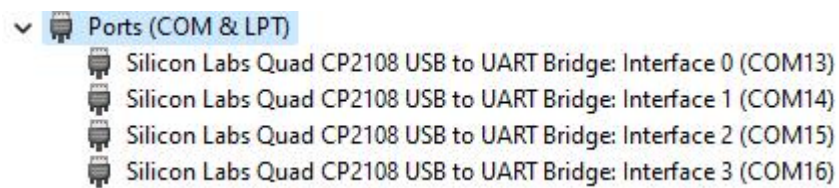


### 3.1.2 Open 2 Putty windows

Setting is as below, one for RS232-0, one for RS232-1.  
Here RS232-0 is COM13, RS232-1 is COM14

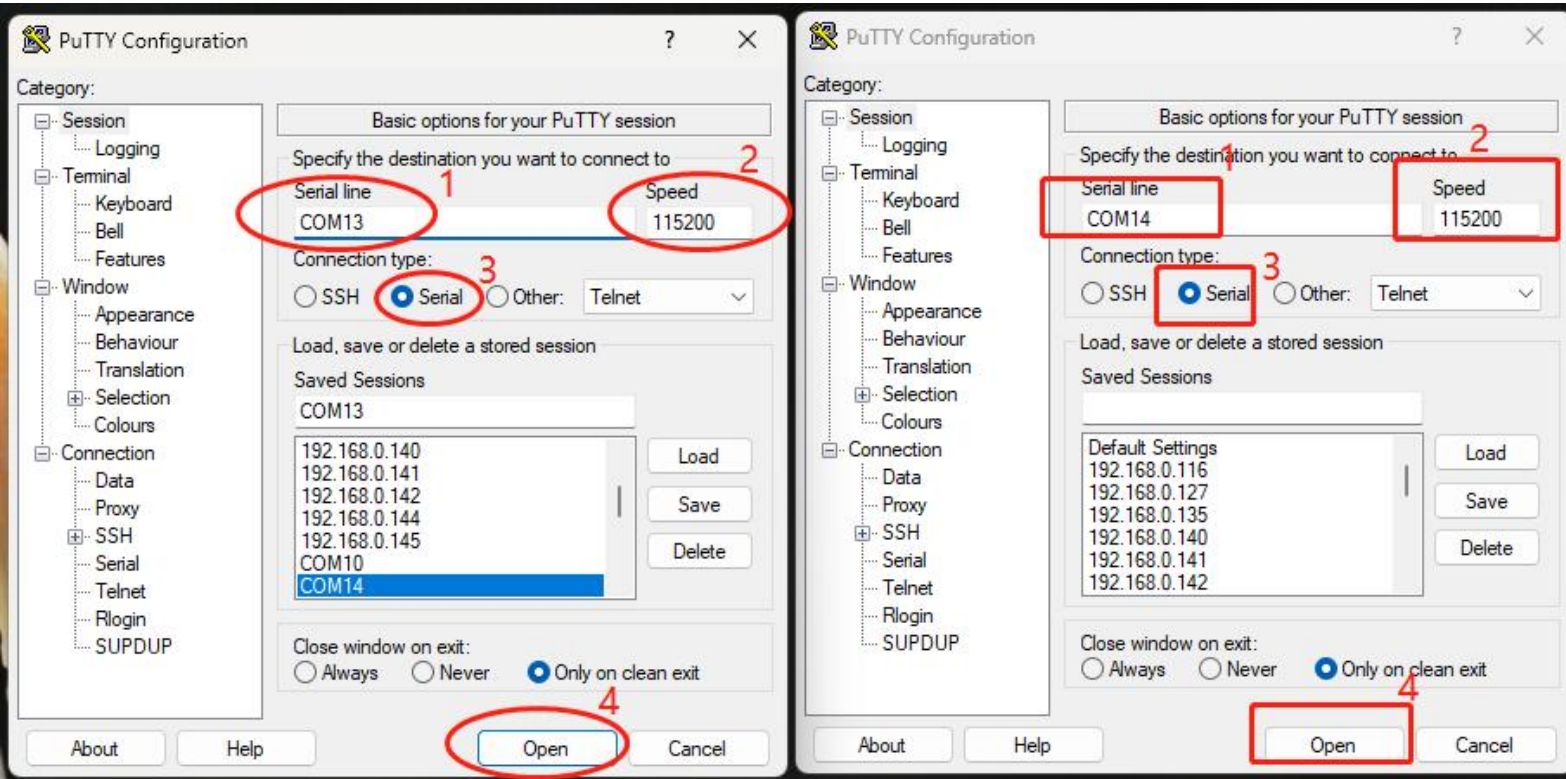

1	Com13 Or com14
2	Baud Rate 115200
3	Serial
4	Open Port

### 3.2.3 Send/Receive Data

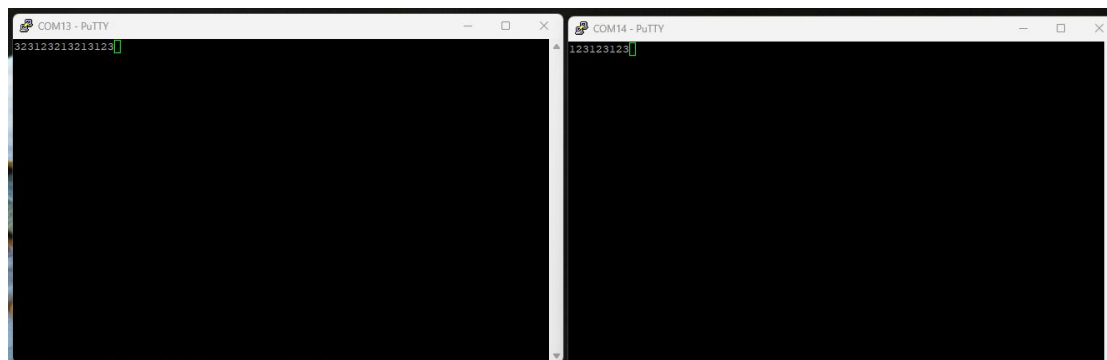

## 3.2 Usage For Linux

### 3.2.1 Check device

Connect device to your linux computer, connect RS232-0 And RS232-1 with the cross-serial-cable

```
~$ ls /dev/ttyUSB*
```

```
ubuntu18@ubuntu18-VirtualBox:~$ ls /dev/ttyUSB*  
/dev/ttyUSB0 /dev/ttyUSB1 /dev/ttyUSB2 /dev/ttyUSB3
```


### 3.2.2 Putty

Putty for one port

```
~$ sudo apt-get install putty
```

```
~$ sudo putty
```



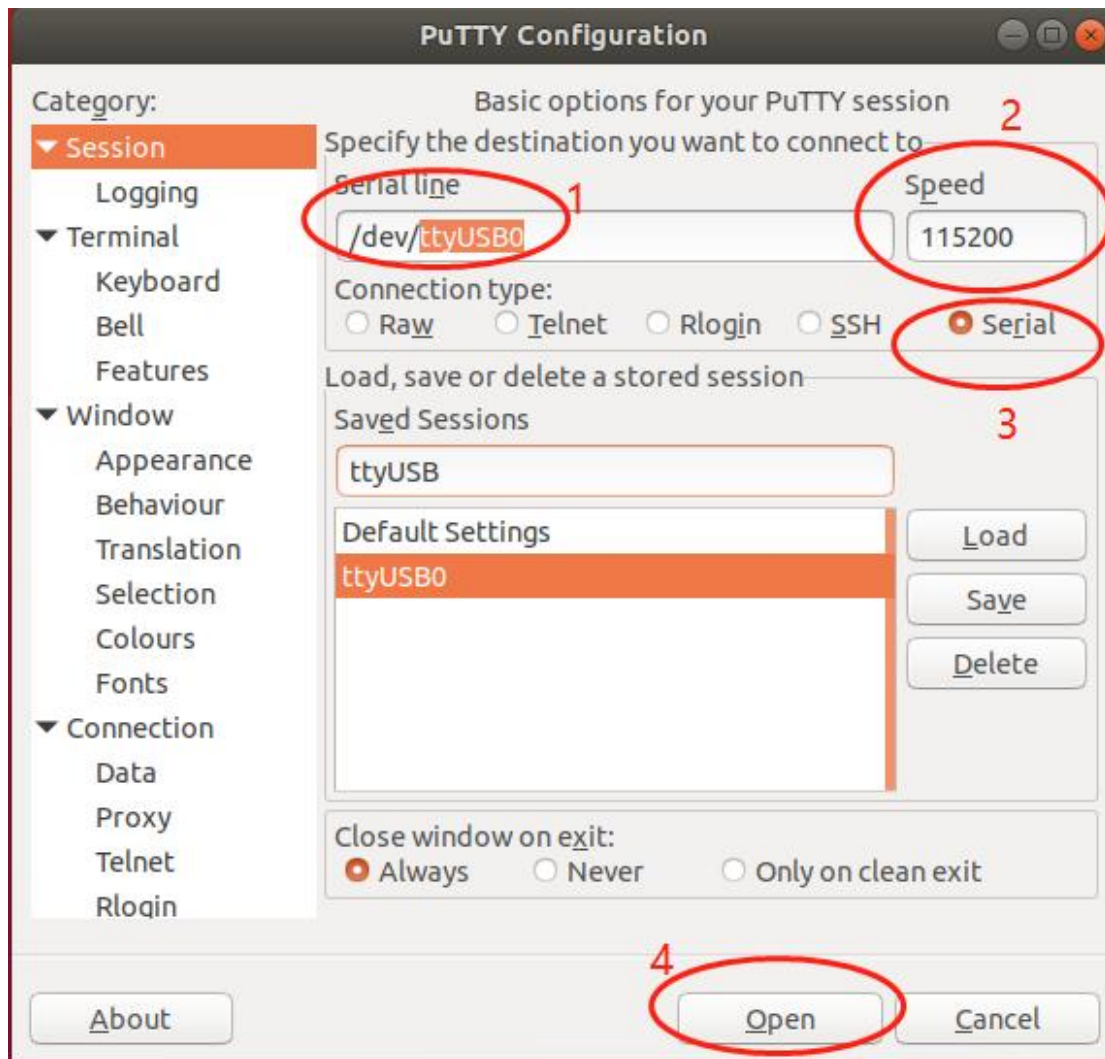

#### Settings

1	ttyUSB0 (Accoring to your system com number)
2	115200
3	Choose serial
4	open

### 3.2.3 Gtterm

Open new terminal window set Gtterm for one port


```
~$ sudo apt-get install gtterm
```

<a href="http://www.emtop-tech.com">www.emtop-tech.com</a>	<a href="http://wiki.emtop-tech.com">wiki.emtop-tech.com</a>	<a href="https://github.com/emtop-tech">github.com/emtop-tech</a>
<a href="mailto:sales@emtop-tech.com">sales@emtop-tech.com</a>	<a href="mailto:support@emtop-tech.com">support@emtop-tech.com</a>	ARM DSP FPGA SOM SBC OEM ODM




```
~$ sudo gtkterm
```

## Settings

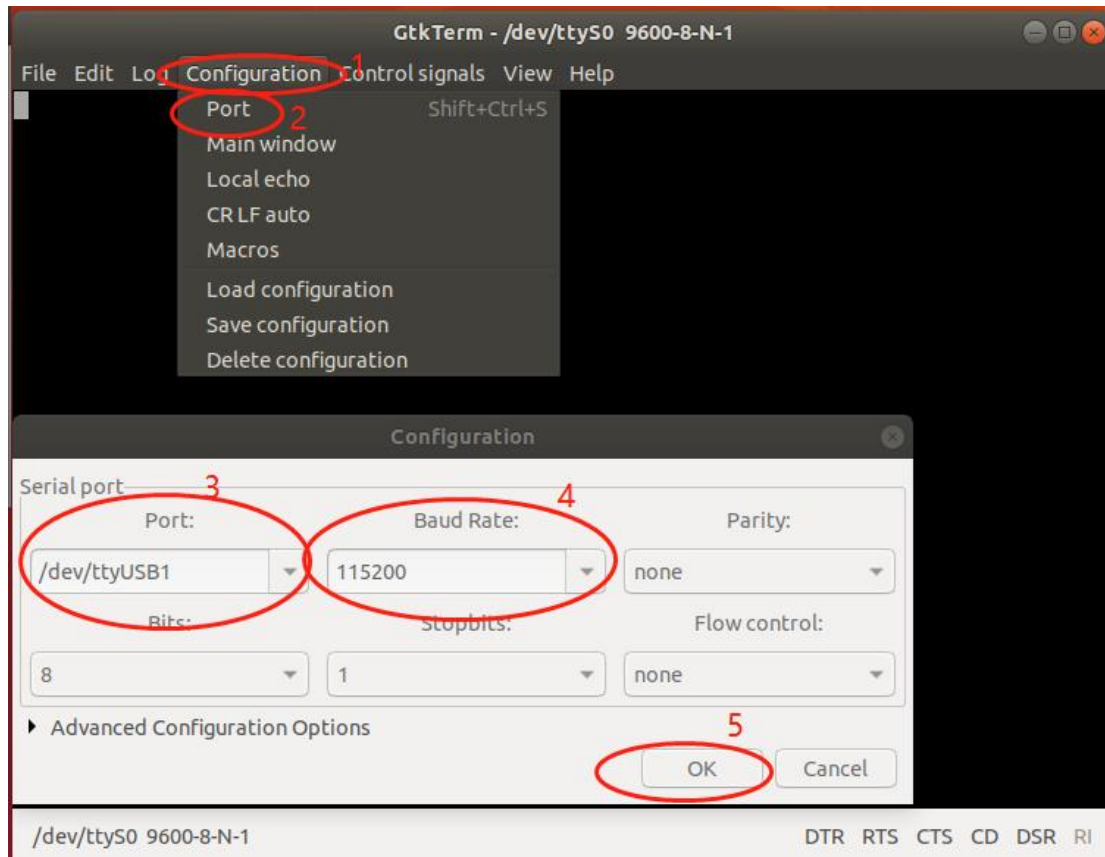


1	Select and click Configuration
2	Select and click Port
3	Set it as /dev/ttyUSB1 (According to you PC)
4	Set Baud Rate 115200
5	Click OK

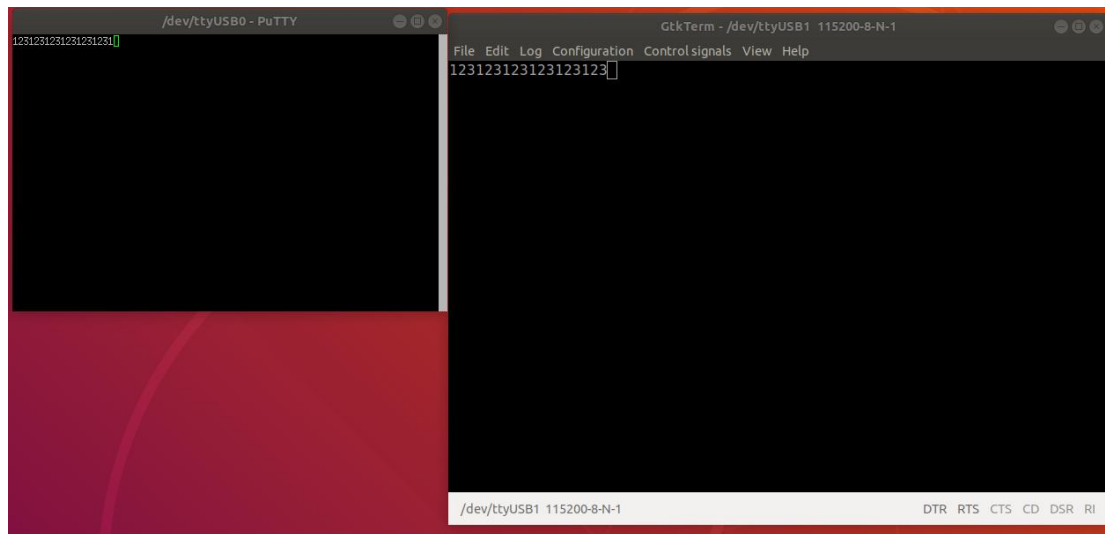


## 3.3 Usage For Mac Os


### 3.3.1 Check Status

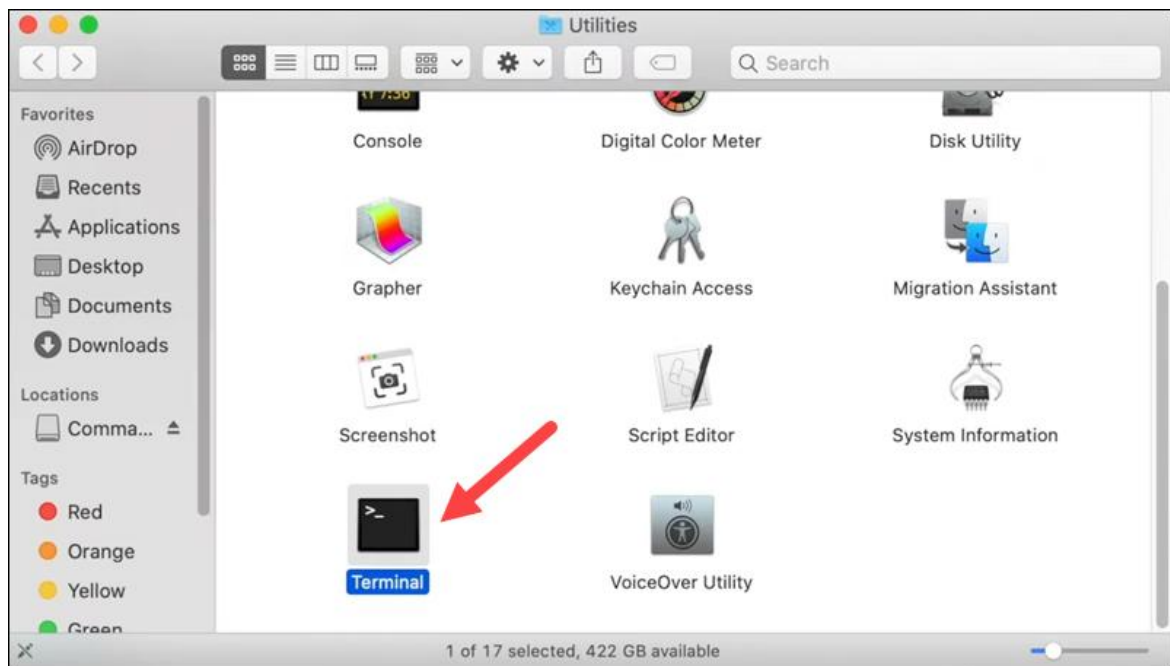


```
$ls /dev/tty.SLAB_USBtoUART*
[macdeMac:~ mac$ ls /dev/tty.SLAB_USBtoUART*
/dev/tty.SLAB_USBtoUART      /dev/tty.SLAB_USBtoUART22    /dev/tty.SLAB_USBtoUART23    /dev/tty.SLAB_USBtoUART24
```

### 3.3.2 Comtool

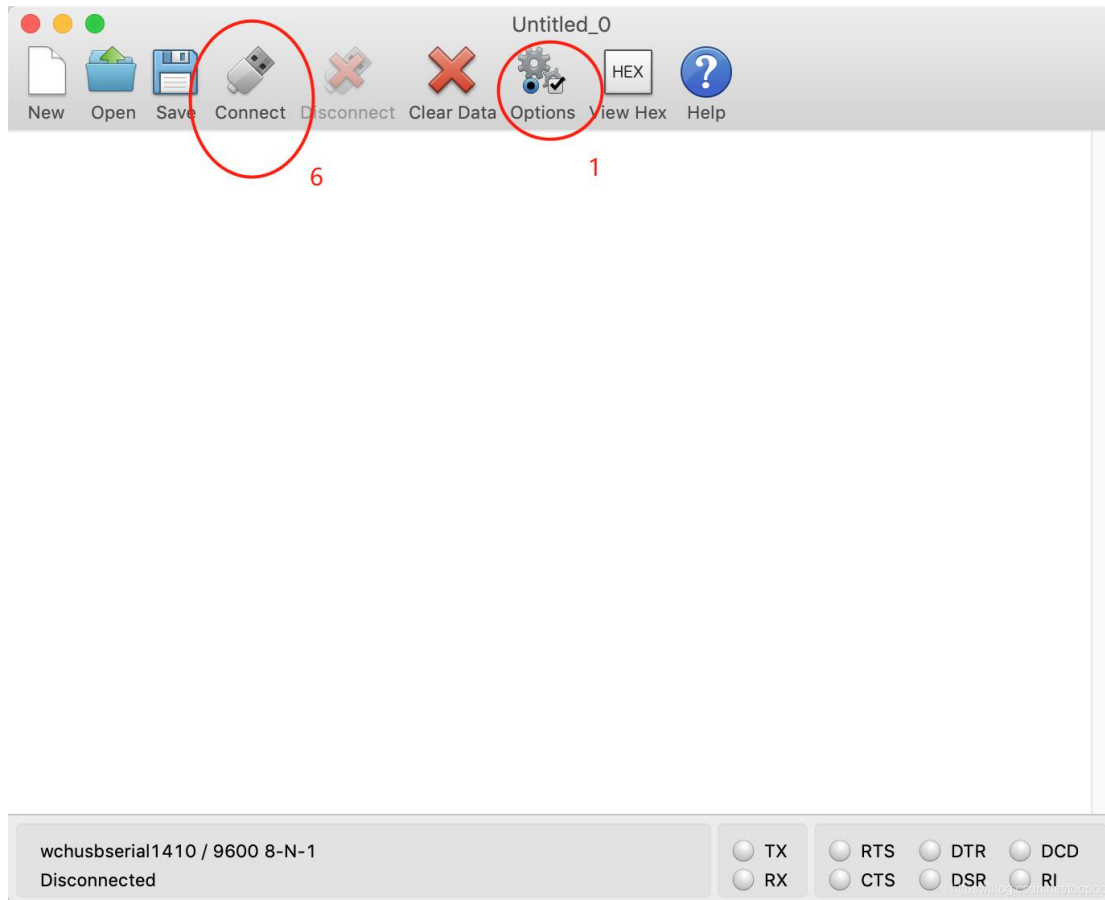

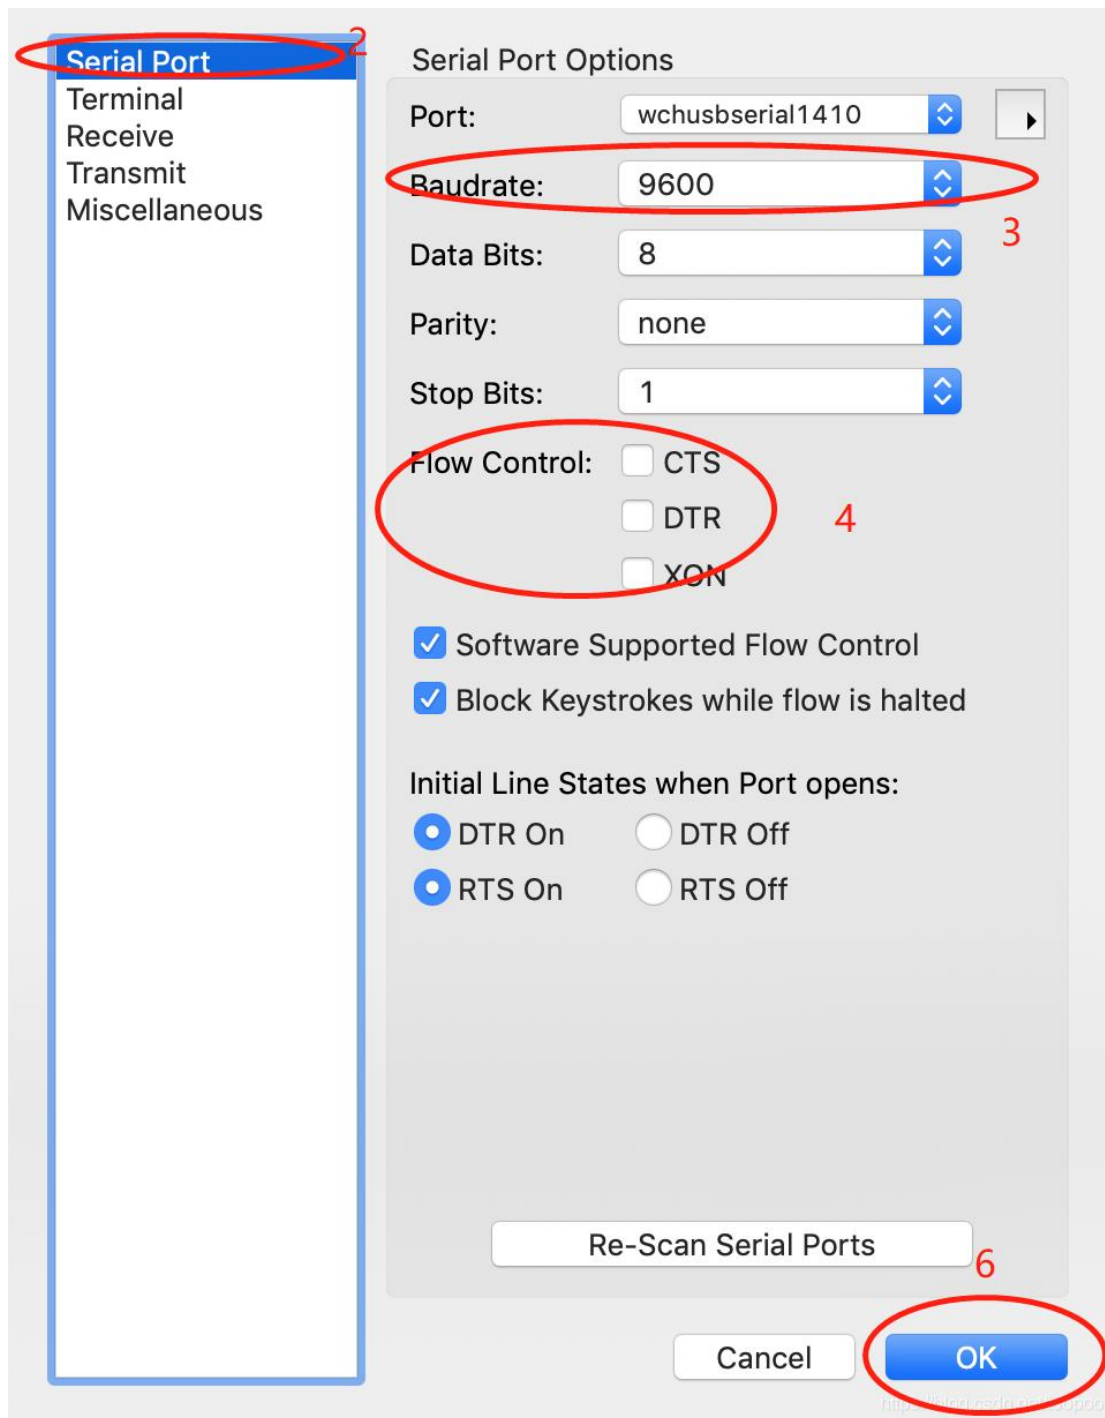

### 3.3.3 CoolTerm

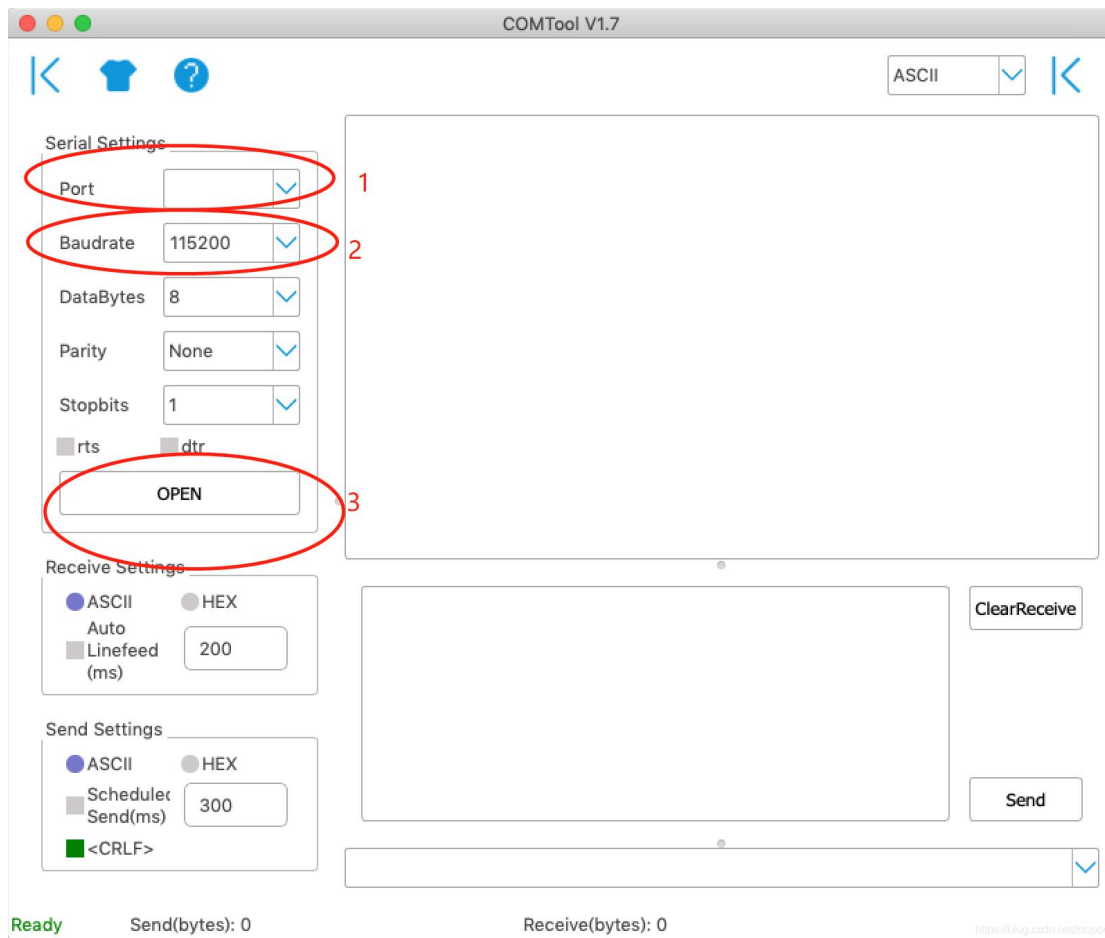

## 4 Technic Support And Warranty

### 4.1 Contact Information

<a href="http://www.emtop-tech.com">www.emtop-tech.com</a>	<a href="http://wiki.emtop-tech.com">wiki.emtop-tech.com</a>	<a href="https://github.com/emtop-tech">github.com/emtop-tech</a>
<a href="mailto:sales@emtop-tech.com">sales@emtop-tech.com</a>	<a href="mailto:support@emtop-tech.com">support@emtop-tech.com</a>	ARM DSP FPGA SOM SBC OEM ODM

### 4.2 Warranty

EMTOP Technology provides its product with one-year free technical support including:

- Providing software and hardware resources related to the embedded products of EMTOP Technology;
- Helping customers properly compile and run the source code provided by EMTOP Technology;
- Providing technical support service if the embedded hardware products do not function properly under the circumstances that customers operate according to the instructions in the documents provided by EMTOP Technology;

<a href="http://www.emtop-tech.com">www.emtop-tech.com</a>	<a href="http://wiki.emtop-tech.com">wiki.emtop-tech.com</a>	<a href="https://github.com/emtop-tech">github.com/emtop-tech</a>
<a href="mailto:sales@emtop-tech.com">sales@emtop-tech.com</a>	<a href="mailto:support@emtop-tech.com">support@emtop-tech.com</a>	ARM DSP FPGA SOM SBC OEM ODM

- Helping customers troubleshoot the products.