



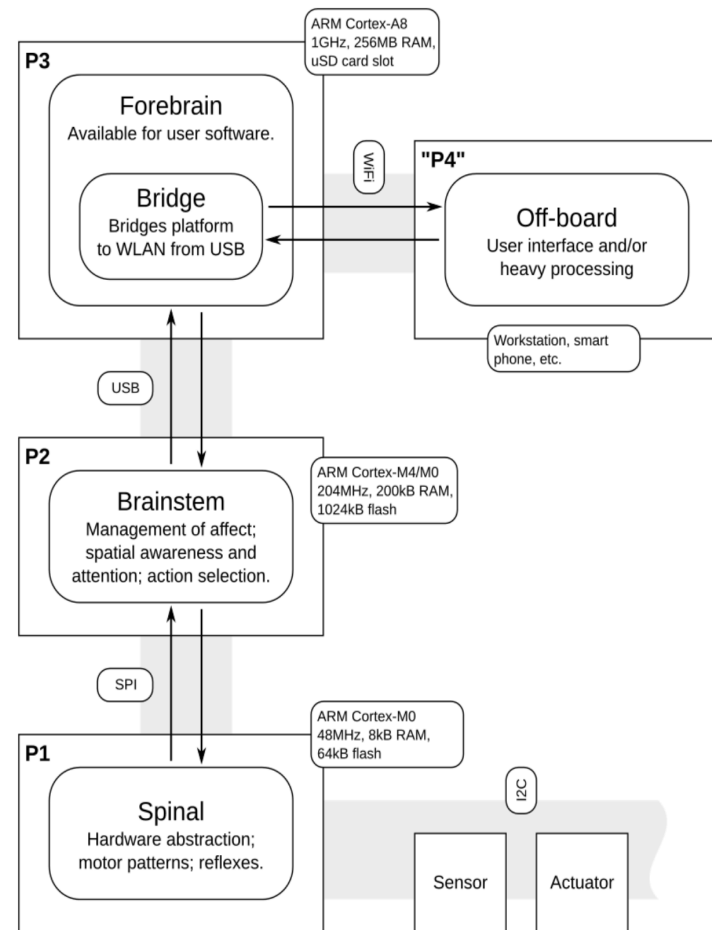

MiRo

- Companion robot
- Human-Robot interaction (HRI)
- Robot assisted therapy
- Biomimetic and brain-based robotics

Note

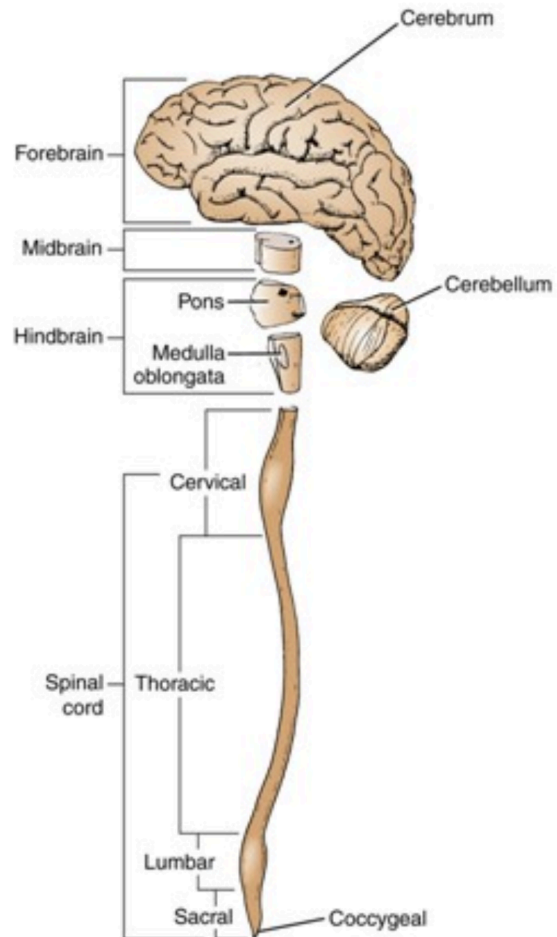

Setup for MiRo

About MiRo: <http://consequentialrobotics.com/miro/>

Note

- The following slides are a **quick summary** of what is described in detail here: <https://consequential.bitbucket.io/>
- Specifically the 'developer manual':
<https://consequential.bitbucket.io/Developer.html>

Critical points

HARDWARE



- While removing or inserting batteries. Place MiRo as can be seen in the image on the left.
- Quick look at this page (related to basic safety):
https://consequential.bitbucket.io/Demonstrator_Commissioning_Before_You_Start.html!
- Quick look at this page (if any technical doubts):
<https://consequential.bitbucket.io/Technical.html>

SOFTWARE

- If you wish to use MIROsim (<http://consequentialrobotics.com/mirosim/>). It is better to have ubuntu as dualboot on your workstation rather than having ubuntu in virtual machine.
- Nonetheless, if you are using virtual machine and MIROsim does not work properly, try again by disabling 3D acceleration (In VirtualMachine settings)

Ros installation

Copy and paste in terminal, one by one, everything after the '\$' sign.

```
$ sudo sh -c 'echo "deb http://packages.ros.org/ros/ubuntu $(lsb_release -sc) main" >
/etc/apt/sources.list.d/ros-latest.list'
$ sudo apt-key adv --keyserver hkp://ha.pool.sks-keyservers.net:80 --recv-key
421C365BD9FF1F717815A3895523BAEEB01FA116
$ sudo apt-get update
$ sudo apt-get install ros-kinetic-desktop-full
$ sudo rosdep init
$ rosdep update
$ echo "source /opt/ros/kinetic/setup.bash" >> ~/.bashrc
$ source ~/.bashrc
$ sudo apt-get install python-rosinstall python-rosinstall-generator python-wstool build-essential
$ rosversion ros
```

MiRo devkit and android app

- Download from: <http://labs.consequentialrobotics.com/miro/mdk/>
 - The MDK (Complete Edition) onto your workstation
 - The MIROapp onto your Android mobile device directly
- Then, in your workstation:
 - Make a new directory called 'lib' in your 'home' directory
 - Extract the recently downloaded MDK (Complete Edition) in 'lib'
 - In the terminal enter into the mdk directory and execute the following command:

```
$ ln -s ~/lib/mdk-170906 ~/mdk
```


Configuring MiRo

- In the smartphone: open the **MIROapp** and check its **IP address**
- In your workstation: open a new terminal window and type in:
`$ ssh root@<Put_Here_IP_Of_MIRO_Found_In_Android_App>`
- MIRO's SSH entry password is:
`$ MIROOpen1`
- Once inside MIRO's Terminal, type in:
`$ sudo nano ~/.profile`
- Once inside .profile
 - Change `ROS_MASTER_IP` as the IP address of your workstation.
To check the IP address of your workstation open a new terminal window and type in:
`$ ifconfig`

Testing sample codes

(MIRO is going to move, be careful if it is on the table)



- To run sample python code
 - Proceed as shown in the link:
https://consequential.bitbucket.io/Developer_Examples_Python_Command-line_Client.html
- To run sample C++ code
 - Proceed as shown in the link:
https://consequential.bitbucket.io/Developer_Examples_C++_Command-line_Client.html
- To run sample python code (GUI for sensors and actuators of MIRO):
 - Proceed as shown in the link:
https://consequential.bitbucket.io/Developer_Examples_Python_GUI_Client.html

LAST BUT NOT THE LEAST

Take a look at **Application Domains** for Inspiration.

<http://consequentialrobotics.com/domains/>

CONFIGURING THE WORKSTATION: TO HAVE STATIC IP

Replace '`<instruction_stated_inside>`' entirely with the instruction stated inside.

In your workstation:

- In (Network Preferences/TCP-IP), change (configure IPV4) to 'Manual' from 'DHCP'
- Change IPV4 Address to 130.251.13.<select_any_number_between_87_and_94>
- In (Network Preferences/DNS), add 130.251.1.4 and 8.8.8.8
- **If using a virtual machine with ubuntu**, all previous steps must be done on the main OS and after which you must go into the network settings of virtual machine and select “attached to” as 'Bridged Adapter'

CONTINUED...

Copy and paste in terminal, everything after the '\$' sign.

Replace '<instruction_stated_inside>' entirely with the instruction stated inside.

- **In your workstation (ubuntu):**

\$ ifconfig

- **Check the IP address next to inet addr for enp____**
- **Copy that IP address (It is now the static IP of your workstation)**

\$ sudo nano ~/.bashrc

- **Copy and paste in .bashrc the lines below and modify '<>' parts**

```
# cofiguration
```

```
export MIRO_PATH_MDK=~/.mdk
```

```
export ROS_IP=<Put_Here_StaticIP_Of_WorkStation>
```

```
export ROS_MASTER_URI=http://localhost:11311
```

```
# make our custom messages available to ROS/python
```

```
export ROS_PACKAGE_PATH=$MIRO_PATH_MDK/share:$ROS_PACKAGE_PATH
```

```
export PYTHONPATH=$MIRO_PATH_MDK/share:$PYTHONPATH
```

```
# usual Gazebo setup
```

```
source /usr/share/gazebo/setup.sh
```

```
# announce MIRO resources to Gazebo
```

```
export GAZEBO_RESOURCE_PATH=$MIRO_PATH_MDK/share:${GAZEBO_RESOURCE_PATH}
```

- **Finally**

\$ roscore