
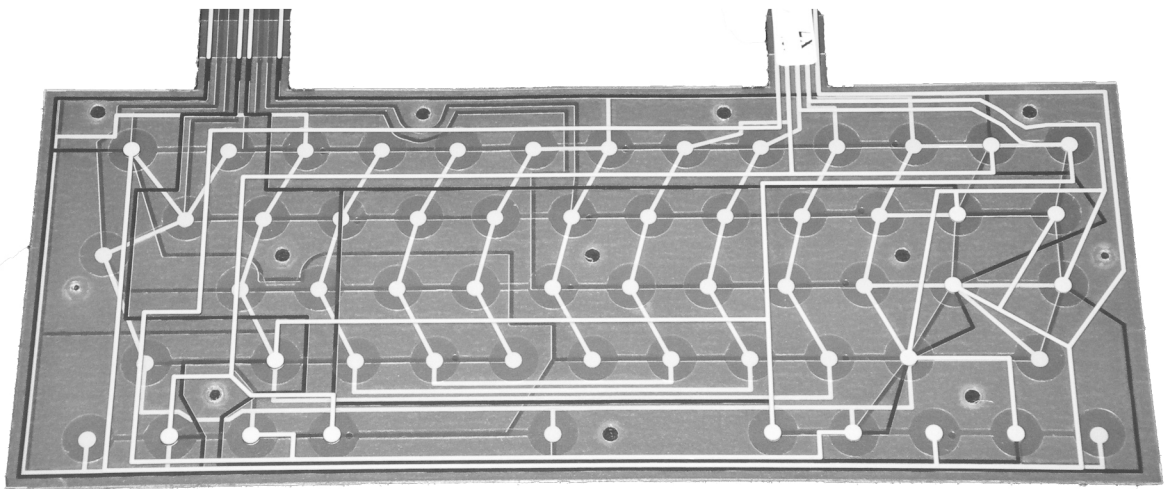


ZXUnoPS2

Manual

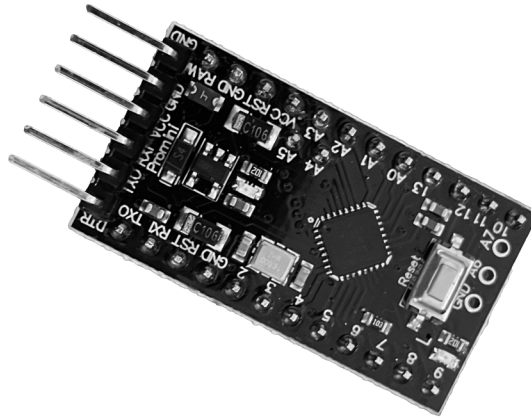

Index

Introduction.....	1
Keyboard modes.....	2
Functions	4
Firmware update	5
xLoader.....	7
AVRDUDE.....	7


Introduction

zxunops2 is a converter from ZX Spectrum membrane keyboard to PS/2, used to control a ZX-Uno.

- Quest Original code base
- Neuro (@neurorulez) [First version](#) and keyboard shortcuts
- @spark2k06 improvements, optimizations and new keyboard shortcuts
- Thanks to @desUBIkado for being a tester and give new ideas for the alternate version

The connection is through an Arduino board, which converts the key presses to PS/2 protocol, using [zxunops2 firmware](#). The board is programmed in such a way that it can behave differently (keyboard mode), according to your needs.

Conversor Teclado ZX Spectrum (8x5) -> PS/2

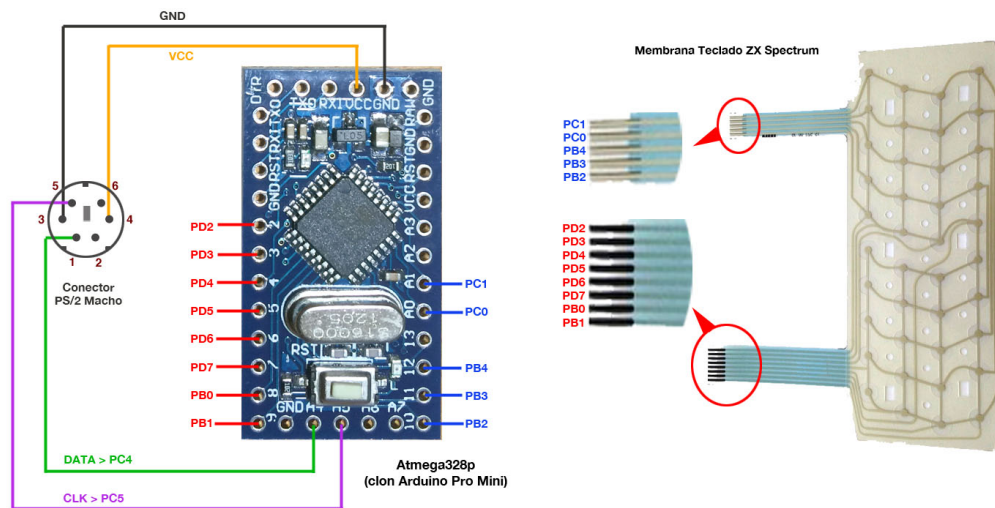

Keyboard modes

The default is ZX Spectrum mode. To change to a different mode, you must press **Caps Shift+Symbol Shift+F**, then **U**, and then the key for the desired mode. After doing that, some text is automatically typed, to show the selected mode (for example **.zx** if you press **Caps Shift+Symbol Shift+F**, **U**, and then **1**).

Mode	Key
ZX Spectrum	0
Amstrad CPC	1
MSX	2
Commodore 64	3
Atari 800XL	4
BBC Micro	5
Acorn Electron	6
Apple (I and II)	7
Commodore VIC 20	8
PC XT	9
Oric Atmos	A
SAM Coupé	B
Jupiter ACE	C
Sega Master System	D
Commodore 16 / Plus 4	E
HT-1080Z / Video Genie / TRS-80 Model I	F
Galaksija	G
Multicomp	H

The ZX keyboard mode can behave in two different ways, which you can switch using **Caps Shift+Symbol Shift+F** and then **D**:

- Conventional mode, with access to the original **Caps Shift** and **Symbol Shift** but no access to special keys or modifier keys.
- Full mode, without access to **Caps Shift** or **Symbol Shift** but access to special and modifier keys just like the other keyboard modes.

In general, the keyboard layout (except on ZX conventional mode), showing the keypress obtained when combining **Caps Shift+Symbol Shift** (in full mode), is resumed here:

1	2	3	4	5	6	7	8	9	0
F1	F2	F3	F4	F5	F6	F7	F8	F9	F10
Q	W	E	R	T	Y	U	I	O	P
F11	F12	*	-	Print Screen	Scroll Lock	Pause	Shift Lock	([and ^)	+ (* and)]
A	S	D	F	G	H	J	K	L	Enter
Shift	< and >	+		Insert	Start	Page Up	Ñ	' ({ and ")	§ (})
CShift	Z	X	C	V	B	N	M	SShift	Space
	Ctrl	Win	Alt	Del	End	Page Down	Alt Gr		



You don't have to stop pressing **Caps Shift+Symbol Shift** when combining modifier keys (e.g. for **Mayús.+F10** with **Caps Shift+Symbol Shift+A**, and **Caps Shift+Symbol Shift+0**).



Pressing **Caps Shift+Symbol Shift+F**, **U**, and an invalid key , types the name of the current mode.



The source code, binaries and more instructions about the keyboard firmware can be found at [the official repository](#).

Caps Shift+Symbol Shift+I behaves differently on the following cores:



- Commodore 16 and VIC-20: **Num Lock**
- Commodore Pet: **Menu** key (next to **Alt Gr**), used as **Shift Lock**



It's not recommended to use the **PC XT** mode, while also using a PS/2 keyboard

Functions

Pressing **Caps Shift+Symbol Shift+F** and then a special key, enables several special functions.

The full function list is this one:

Key	Action	Compatible Modes
V	Type Version	All
X	Save config to EEPROM	All
B	Ctrl+Alt+Bcksp (Hard Reset)	All
N	Ctrl+Alt+Del (Soft Reset)	All
Y	Ctrl+Alt+F5 (NMI)	ZX, CPC, Jupiter, SAM, ZX80, ZX81
O	F12 followed by Shift with a 1 sec. pause	BBC
H	F8+F10	Atari
U	Change keyboard mode	All
C	Map O , P , Q , A keys to the keypad (Atari) or cursor keys	PC, MSX, SMS and Atari
D	Enable and disable full ZX keyboard mode	ZX
G	Change video mode	ZX, Atari, BBC, VIC, ORIC and HT-1080Z

C function enables or disables mapping the cursor keys to **O**, **P**, **Q**, **A** and **M** is exchanged with **Space**. It works with all keyboard modes except:

- C64 and Atari 800XL modes: instead of cursor keys, the map is to **8**, **4**, **6** and **2** of the keypad, and **M** to key **0** (fire)
- Jupiter ACE: instead of cursor keys, the map is to **8**, **4**, **6** and **2** of the keypad, and **M** and 'Space' are exchanged.


All keyboard modes try to match most of their symbols to those printed on the Spectrum keyboard. This way **Symbol Shift+M** obtains “.” or **Symbol Shift+K** obtains +. On some keyboards, a few symbols have been changed for more useful ones. For example, on version 1.3 spanish MSX, **Symbol Shift+E** obtains “¡” and **Symbol Shift+I** obtains “¿”.

Firmware update

In order to install the firmware, a computer is needed (Windows, Mac, Linux).

Hardware needed:

- Computer (Windows, Mac, Linux)
- 6 [jump wires](#) (if possible, female on both sides)
- USB serial adapter (FTDI)

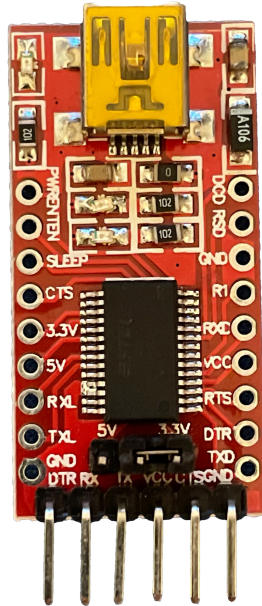


Software needed:

- [XLoader](#) (only for Windows) or [AVRDUDE](#) (you can use the embedded version in [Arduino IDE](#)). - [.hex](#) binary file for the firmware version to install, which you can download from [the official repository](#) (usually, the file is one whose name ends with [-328.hex](#)).

Preparation

Unplug the Arduino board (if needed), and locate all the connections.

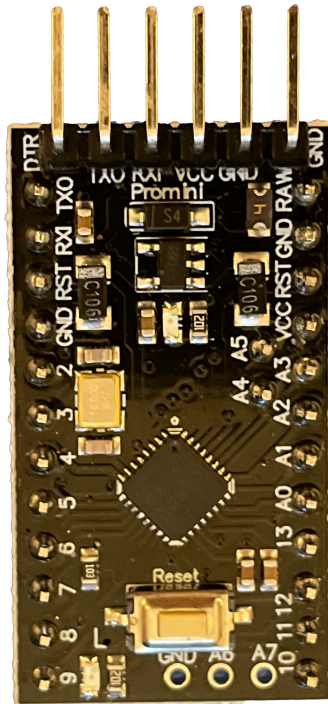

Plug the serial adapter with the Arduino board, using this guide:

USB FTDI	Arduino Mini
DTR	DTR
RX	TX0
TX	RXI
VCC (3.3V)	VCC
CTS	GND
GND	GND



If the arduino board uses 5V for power, you can make also the connection using that instead of 3.3V

Plug the USB adapter to the computer, and find out the connected port (`COM`, `/dev/usb...`, etc.).

xLoader

Choose the following parameters:

- Device: Duemilanove/Nano (ATMega328)
- Baud rate: 57600
- Port: COM port for the adapter

Click "Upload" and wait until a message is shown saying "xx bytes uploaded".

AVRDUDE

Use a command with this syntax:

```
avrdude -U flash:w:<firmware file.hex>:i -e -p atmega328p -b 57600 -c arduino -P <USB port>
```



When using the `avrdude` binary included with Arduino IDE, you also have to add the path to the included `.conf` file. For example, on MacOS:

```
/Applications/Arduino.app/Contents/Java/hardware/tools/avr/bin/avrdude -U  
flash:w:zxunops2-25092021-328.hex:i -e -p atmega328p -b 57600 -c arduino -P  
/dev/cu.usbserial-A50285BI -C  
/Applications/Arduino.app/Contents/Java/hardware/tools/avr/etc/avrdude.conf
```