


Lab. 9: Exploring Internetworking Devices

Topology

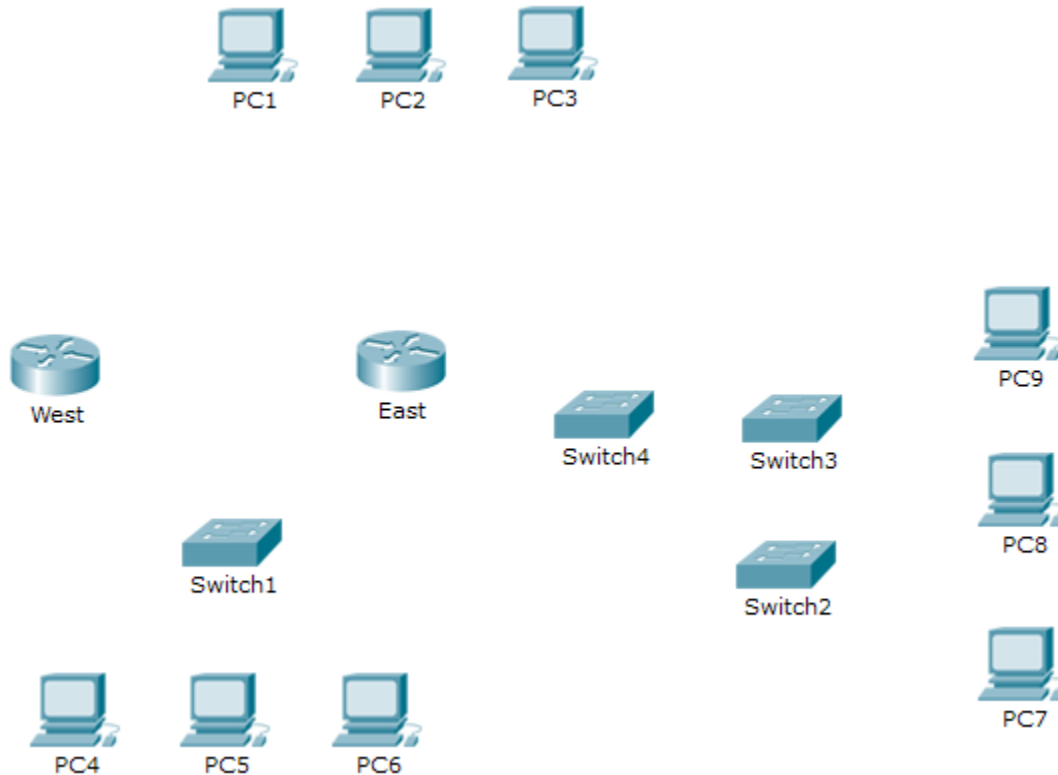

Objectives

- Part 1: Part 1: Identify Physical Characteristics of Internetworking Devices**
- Part 2: Part 2: Select Correct Modules for Connectivity**
- Part 3: Part 3: Connect Devices**

Background

In this activity, you will explore the different options available on internetworking devices. You will also be required to determine which options provide the necessary connectivity when connecting multiple devices. Finally, you will add the correct modules and connect the devices.

Note: Scoring for this activity is a combination of Packet Tracer-automated scoring and your recorded answers to the questions posed in the instructions. See the Error! Reference source not found. at the end of this activity, and consult with your instructor to determine your final score.

Part 4: Identify Physical Characteristics of Internetworking Devices

1. **Identify the management ports of a Cisco router.**

Click the **East** router. The **Physical** tab should be active.

Zoom in and expand the window to see the entire router.

Which management ports are available?

AUX and Console ports

2. Identify the LAN and WAN interfaces of a Cisco router

Which LAN and WAN interfaces are available on the **East** router and how many are there?

There are 2 WAN interfaces and 2 Gigabit Ethernet interfaces

Click the **CLI** tab and enter the following commands:

Part 5: East> **show ip interface brief**

Part 6: The output verifies the correct number of interfaces and their designation. The vlan1 interface is a virtual interface that only exists in software. How many physical interfaces are listed?

Part 7: **4**

Enter the following commands:

Part 8: East> **show interface gigabitethernet 0/0**

Part 9: What is the default bandwidth of this interface?

Part 10: **1000000 Kbit**

Part 11: East> **show interface serial 0/0/0**

Part 12: What is the default bandwidth of this interface?

Part 13: **1544 Kbit**

Part 14: **Note:** Bandwidth on serial interfaces is used by routing processes to determine the best path to a destination. It does not indicate the actual bandwidth of the interface. Actual bandwidth is negotiated with a service provider.

3. Identify module expansion slots on switches.

How many expansion slots are available to add additional modules to the **East** router?

1

Click **Switch2** or **Switch3**. How many expansion slots are available?

They each have 5 slots available

Part 15: Select Correct Modules for Connectivity

4. Determine which modules provide the required connectivity.

Click **East** and then click the **Physical** tab. On the left, beneath the **Modules** label, you see the available options to expand the capabilities of the router. Click each module. A picture and a description displays at the bottom. Familiarize yourself with these options.

You need to connect PCs 1, 2, and 3 to the **East** router, but you do not have the necessary funds to purchase a new switch. Which module can you use to connect the three PCs to the **East** router?

HWIC-4ESW module

How many hosts can you connect to the router using this module?

4

Click **Switch2**. Which module can you insert to provide a Gigabit optical connection to **Switch3**?

PT-SWITCH-NM-1FGE

5. Add the correct modules and power up devices.

Click **East** and attempt to insert the appropriate module from Step 1a.

The `Cannot add a module when the power is on` message should display. Interfaces for this router model are not hot-swappable. The device must be turned off. Click the power switch located to the right of the Cisco logo to turn off **East**. Insert the appropriate module from Step 1a. When done, click the power switch to power up **East**.

Part 16: **Note:** If you insert the wrong module and need to remove it, drag the module down to its picture in the bottom right corner, and release the mouse button.

Using the same procedure, insert the appropriate modules from Step 1b in the empty slot farthest to the right in both **Switch2** and **Switch3**.

Use the **show ip interface brief** command to identify the slot in which the module was placed.

Part 17: Into which slot was it inserted?

Part 18: **GigabitEthernet5/1**

Click the **West** router. The **Physical** tab should be active. Install the appropriate module that will add a serial interface to the enhanced high-speed WAN interface card (**eHWIC 0**) slot on the right. You can cover any unused slots to prevent dust from entering the router (optional).

Use the appropriate command to verify that the new serial interfaces are installed.

Part 19: Connect Devices

This may be the first activity you have done where you are required to connect devices. Although you may not know the purpose of the different cable types, use the table below and follow these guidelines to successfully connect all the devices:

Select the appropriate cable type.

Click the first device and select the specified interface.

Click the second device and select the specified interface.

If you correctly connected two devices, you will see your score increase.

Example: To connect **East** to **Switch1**, select the **Copper Straight-Through** cable type. Click **East** and choose **GigabitEthernet0/0**. Then, click **Switch1** and choose **GigabitEthernet0/1**. Your score should now be 4/52.

Note: For the purposes of this activity, link lights are disabled. The devices are not configured with any IP addressing, so you are unable to test connectivity.


Device	Interface	Cable Type	Device	Interface
East	GigabitEthernet0/0	Copper Straight-Through	Switch1	GigabitEthernet0/1
East	GigabitEthernet0/1	Copper Straight-Through	Switch4	GigabitEthernet0/1
East	FastEthernet0/1/0	Copper Straight-Through	PC1	FastEthernet0
East	FastEthernet0/1/1	Copper Straight-Through	PC2	FastEthernet0

East	FastEthernet0/1/2	Copper Straight-Through	PC3	FastEthernet0
Switch1	FastEthernet0/1	Copper Straight-Through	PC4	FastEthernet0
Switch1	FastEthernet0/2	Copper Straight-Through	PC5	FastEthernet0
Switch1	FastEthernet0/3	Copper Straight-Through	PC6	FastEthernet0
Switch4	GigabitEthernet0/2	Copper Cross-Over	Switch3	GigabitEthernet3/1
Switch3	GigabitEthernet5/1	Fiber	Switch2	GigabitEthernet5/1
Switch2	FastEthernet0/1	Copper Straight-Through	PC7	FastEthernet0
Switch2	FastEthernet1/1	Copper Straight-Through	PC8	FastEthernet0
Switch2	FastEthernet2/1	Copper Straight-Through	PC9	FastEthernet0
East	Serial0/0/0	Serial DCE (connect to East first)	West	Serial0/0/0



LAB 9

Network :

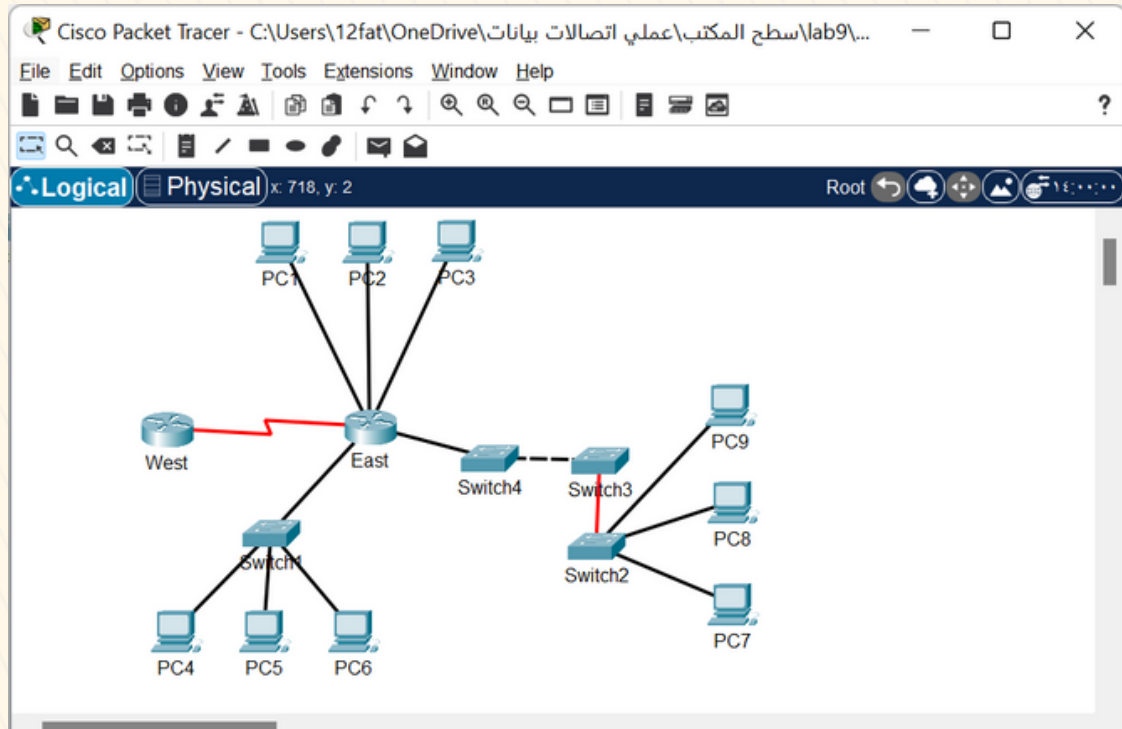

show ip interface brief of router :

```
East
Physical Config CLI Attributes
IOS Command Line Interface
East#show ip interface breif
% Invalid input detected at '^' marker.
East#show ip interface brief
Interface IP-Address OK? Method Status
Protocol
GigabitEthernet0/0 unassigned YES NVRAM
administratively down down
GigabitEthernet0/1 unassigned YES NVRAM
administratively down down
Serial0/0/0 unassigned YES unset down
down
Serial0/0/1 unassigned YES unset down
down
FastEthernet0/1/0 unassigned YES unset up
up
FastEthernet0/1/1 unassigned YES unset up
up
FastEthernet0/1/2 unassigned YES unset up
up
FastEthernet0/1/3 unassigned YES unset up
down
Vlan1 unassigned YES unset
administratively down down
```

show ip interface brief of switch2 :

```
Switch2
Physical Config CLI Attributes
IOS Command Line Interface

%LINK-5-CHANGED: Interface FastEthernet2/1, changed state to up
%LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet2/1, changed state to up

Switch>enable
Switch#show ip interface brief
Interface IP-Address OK? Method Status
Protocol
FastEthernet0/1 unassigned YES manual up
up
FastEthernet1/1 unassigned YES manual up
up
FastEthernet2/1 unassigned YES manual up
up
FastEthernet3/1 unassigned YES manual down
down
FastEthernet4/1 unassigned YES manual down
down
GigabitEthernet5/1 unassigned YES manual up
up
Vlan1 unassigned YES manual
administratively down down
Switch#
```

show ip interface brief of switch3 :

```
Switch3
Physical Config CLI Attributes
IOS Command Line Interface

GigabitEthernet5/1, changed state to up

Switch>enable
Switch#show ip interface breif
^
% Invalid input detected at '^' marker.

Switch#show ip interface brief
Interface IP-Address OK? Method Status
Protocol
FastEthernet0/1 unassigned YES manual down
down
FastEthernet1/1 unassigned YES manual down
down
FastEthernet2/1 unassigned YES manual down
down
GigabitEthernet3/1 unassigned YES manual up
up
FastEthernet4/1 unassigned YES manual down
down
GigabitEthernet5/1 unassigned YES manual up
up
Vlan1 unassigned YES manual
administratively down down
Switch#
```

فاطمة محمد عبد الله الزهراني

442006322