


Mdx Platform Architecture Overview

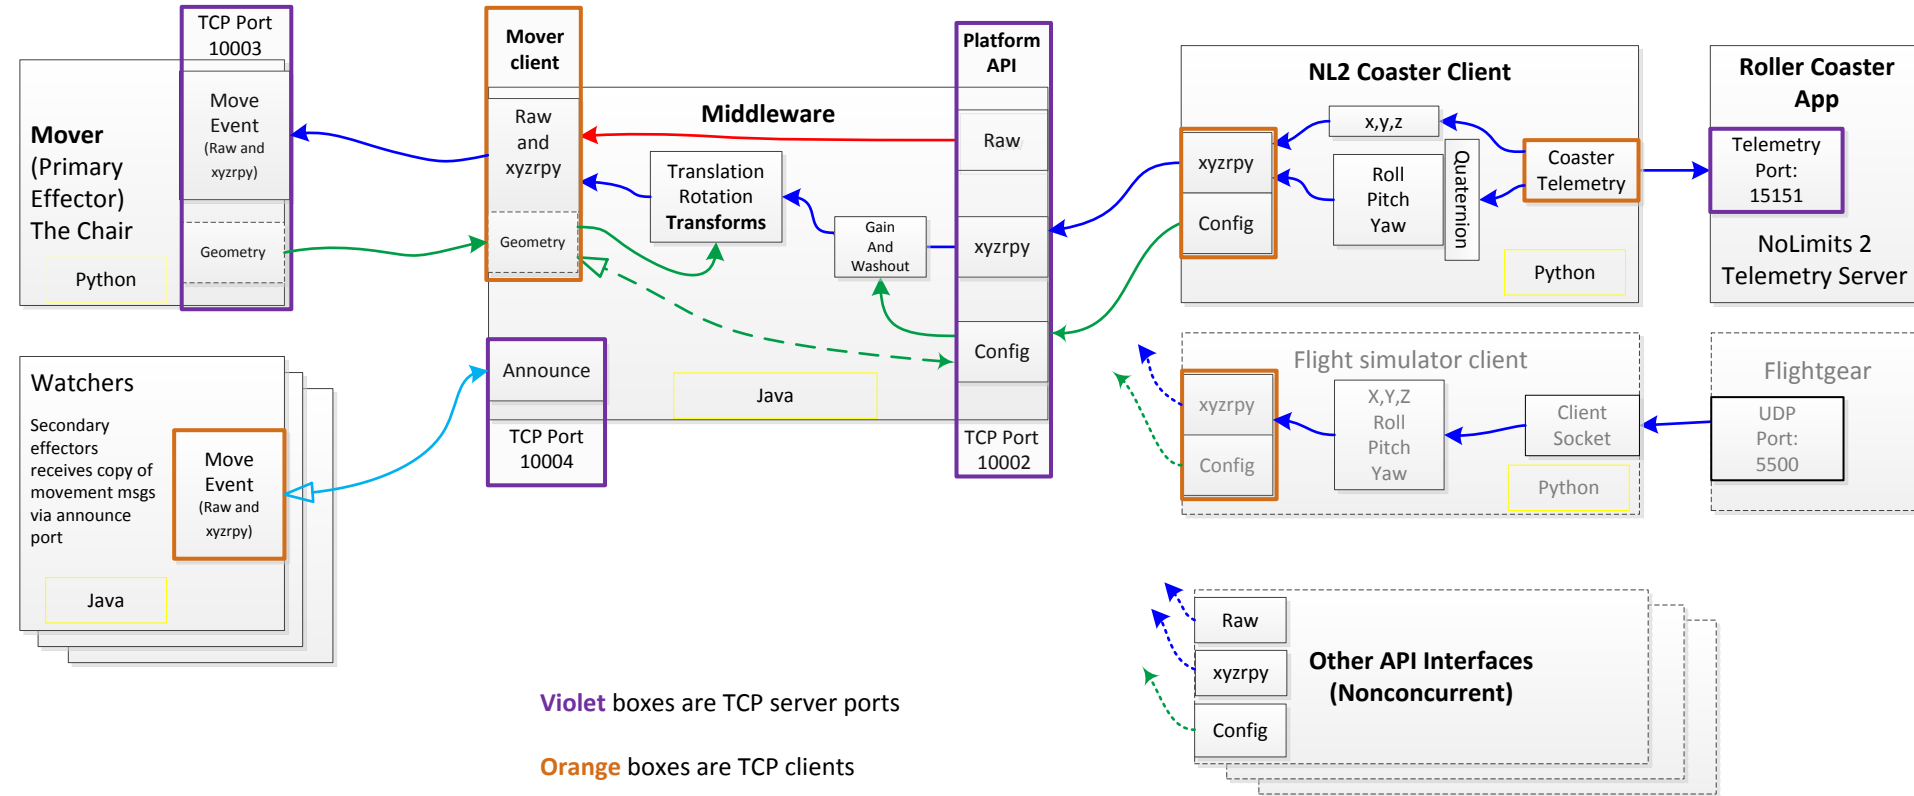

Client methods

Movement methods:

Method identifier:

- “raw” - array of raw values indicating length of six muscles
- “xyzrpy” – array of six values for xyz translations & rotations
 - x translation is forward/backward movement (surge)
 - y translation is side to side movement (sway)
 - z translation is up/down movement (heave)
 - x rotation is tilting on front/back axis (roll)
 - y rotation is tilting on lateral axis (pitch)
 - z rotation is tilting on vertical axis (yaw)

arguments default to normalized values (range between ± 1.0)
In future, "units": "real" can be included in message to provide real world mm values for translation, degrees for rotation

args: An array of six floating point values

Example: cmd with 10% heave (movement up), -20% roll (bank)
`{"jsonrpc": "2.0", "method": "xyzrpy", "args": [0.0, 0.0, 0.1, -0.2, 0.0, 0.0]}`

Configuration Method: - identifier “config”

(each of the following arguments is optional)

“blocking” true/false – (currently only supports false)

- “gainX” float multiplier for x values
- “gainY” float multiplier for y values
- “gainZ” float multiplier for z values
- “gainRoll” float multiplier for roll values
- “gainPitch” float multiplier for pitch values
- “gainYaw” float multiplier for yaw values
- “gain” float multiplier for all 6 DOF
- all above gain factors default to 1.0

- “washoutX” washout factor for x values
- “washoutY” washout factor for y values
- “washoutZ” washout factor for z values
- “washoutRoll” washout factor for roll values
- “washoutPitch” washout factor for pitch values
- “washoutYaw” washout factor for yaw values

- washouts default to 1.0
lower numbers increase the rate values will decay to 0

Example: set overall gain to 0.5 and yaw washout to 0.996
`{"jsonrpc": "2.0", "method": "config", "gain": 0.5, "washoutYaw": 0.996}`

Effector messages

Get Geometry Reply:

Provided by primary effector when connecting to middleware

(returns physical configuration and capability of the platform)

values:

- “baseRadius” value in mm
- “baseAngles” array of 6 angles
- “platformRadius” value in mm
- “platformAngles” array of 6 angles
- “actuatorLen” float min,max values in mm
- “maxTranslation” float value in mm
- “maxRotation” float angle in degrees

This information can be used by clients to limit movements to achievable values or to scale normalized messages to real world values

Example fragment:

`{"jsonrpc": "2.0", "reply": "geometry", "baseRadius": 400, "baseAngles": [140, 207, 226, 314, 334, 40], ...}`

Movement event:

Identifier: “moveEvent”

“rawArgs” - array of six raw values indicating length of muscles

“xyzrpyArgs” – array of six values for xyz translations & rotations

- x translation is forward/backward movement (surge)
- y translation is side to side movement (sway)
- z translation is up/down movement (heave)
- x rotation is tilting on front/back axis (roll)
- y rotation is tilting on lateral axis (pitch)
- z rotation is tilting on vertical axis (yaw)

“extents” – array of four values for real world effector measurements of:

- max translation mm
- max rotation angle
- min actuator length
- max actuator length

Extent values are provided by the primary effector when connecting to middleware

Example: cmd with 10% heave (movement up), -20% roll (bank)

`{"jsonrpc": "2.0", "method": "moveEvent", "rawArgs": [0.1, 0.2, 0.1, -0.2, 0.1, 0.0], "xyzrpyArgs": [0.0, 0.0, 0.1, -0.2, 0.0, 0.0], "extents": [40, 25, 700, 800]}`