

Rockchip Debian Developer Guide

ID: RK-KF-YF-913

Release Version: V1.5.0

Release Date: 2023-04-20

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

All rights reserved. ©2023. Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: www.rock-chips.com

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: fae@rock-chips.com

Preface

Overview

This document introduces how to use the official released Debian system to build and adapt related hardware functions based on Rockchip arm platforms.

Supported Chipset

Debian Vesion	Platform	Chipset
11	ARM	RK3588、RK3568、RK3566、RK3562、RK3399
10	ARM	RK3399PRO、RK3399、RK3568、RK3566、RK3288

Roadmap

Debian Version	Platform	Chipset	Schedule
11	ARM	RK3562、RK3288、PX30	2023.Q2
11	ARM	RK3328、RK3399PRO	2023.Q3
12	ARM	RK3588	2023.Q4

Intended Audience

This document (this guide) is mainly intended for:

Technical support engineers

Software development engineers

Revision History

Date	Version	Author	Change Description
2021-12-30	V1.0.0	Caesar Wang	Initial version
2022-03-10	V1.0.1	Ruby Zhang	Update the format of the document
2022-04-12	V1.1.0	Caesar Wang	Update live-build and FAQ chapters.
2022-5-20	V1.2.0	Caesar Wang	Support for Linux5.10
2022-9-20	V1.3.0	Caesar Wang	Update mpp/chromium Update bootaim
2022-11-20	V1.4.0	Caesar Wang	Update partition instruction Update FAQ
2023-04-20	V1.5.0	Caesar Wang	Add blueman/rktoolkit repository Update Camera/NPU/Upgrade Delete some TODO lists

Contents

Rockchip Debian Developer Guide

1. Debian Overview
 - 1.1 Overview
 - 1.2 Debian System Versions Supported
2. Debian Quick Strat Guide
 - 2.1 Environment Setup
 - 2.2 Get the Source Code
 - 2.3 Build
3. Debian Directory Structure
4. Debian Live-build Usage Guide
 - 4.1 Related Commands
 - 4.2 Software Source Settings
 - 4.3 Customize System Packages
 - 4.3.1 Customized Directory
 - 4.3.2 HOOKS
5. The Pre-built Packages Integrated in Debian
 - 5.1 mpp
 - 5.2 libv4l
 - 5.3 Chromium
 - 5.4 glmark2
 - 5.5 Gstreamer
 - 5.6 gst-plugins-bad1.0
 - 5.7 gst-plugins-base1.0
 - 5.8 gst-plugins-good.0
 - 5.9 gst-rkmp
 - 5.10 libdrm
 - 5.11 libdrm-cursor
 - 5.12 libmali
 - 5.13 rga
 - 5.14 openbox
 - 5.15 pcmanfm
 - 5.16 rkaiq
 - 5.17 rkisp
 - 5.18 rkwifi
 - 5.19 bluelight
 - 5.20 rktoolkit
 - 5.21 xserver
6. Basic Abilities of Debian Development
 - 6.1 Rebuild Debian Software Packages
 - 6.2 Build Debian Docker
 - 6.3 Debian Partition Management
 - 6.4 Debian Graphics Adaptation Solution
 - 6.4.1 Display Architecture Adaptation Solution
 - 6.4.2 Window Management Adaptation Solution
 - 6.4.3 Desktop Environment Adaptation Solution
 - 6.4.4 Chromium Adaptation Solution
 - 6.4.4.1 Introduction
 - 6.4.4.2 Version
 - 6.4.4.3 How to Test
 - 6.4.4.4 How to Debug
 - 6.4.4.5 Performance Testing
 - 6.4.4.6 Obtaining Other Information
 - 6.4.5 Debian Boot Logo or Animation Adaptation
 - 6.4.6 Debian Panfrost Adaptation Solution
 - 6.5 Debian Audio and Video Adaptation Solution

- 6.5.1 [Audio Pulseaudio Channel Adaptation](#)
 - 6.5.2 [MPP and VPU Adaptation](#)
 - 6.5.3 [GStreamer Adaptation](#)
 - 6.5.4 [Rokit Adaptation](#)
- 6.6 [Debian Network Adaptation Solution](#)
 - 6.6.1 [RKWIFIBT Adaptation](#)
- 6.7 [Debian Camera Adaptation Solution](#)
 - 6.7.1 [rkisp Adaptation](#)
 - 6.7.2 [rkaiq Adaptation](#)
- 6.8 [Debian Power Management Adaptation Solution](#)
- 6.9 [Debian AI Adaptation Solution](#)
 - 6.9.1 [RKNPU Adaptation](#)
 - 6.9.2 [RKNN Test Demo Adaptation](#)
- 6.10 [Debian Security Upgrade Adaptation Solution](#)
 - 6.10.1 [Secureboot Security Adaptation](#)
 - 6.10.2 [Recovery Upgrade Adaptation](#)
 - 6.10.3 [OTA Upgrade Adaptation](#)
- 6.11 [Debian Touch Adaptation Solution](#)
- 6.12 [Debian USB Device Adaptation Solution](#)
- 6.13 [Debian Sensor Adaptation Solution](#)
- 6.14 [Debian System Information](#)
 - 6.14.1 [Debian Version Number](#)
 - 6.14.2 [Debian Version Information](#)
 - 6.14.3 [Debian System Hardware Information](#)
 - 6.14.4 [Debian System Log Information](#)
- 6.15 [Debian Cropping](#)
- 6.16 [Debian Testing](#)
- 6.17 [Debian Debugging Tools](#)
 - 6.17.1 [ADB Tools](#)
 - 6.17.1.1 [ADB Overview](#)
 - 6.17.1.2 [USB ADB Usage](#)
- 7. [Debian FAQ](#)
 - 7.1 ["noexec or nodev" Issue](#)
 - 7.2 [Failed to Download "Base Debian"](#)
 - 7.3 [Abnormal Operation Causes an error to Mount /dev](#)
 - 7.4 [Multiple Mounts lead to /dev error](#)
 - 7.5 [How to Check System Related Information](#)
 - 7.5.1 [How to Check the Debian Version of Your System](#)
 - 7.5.2 [How to Check Whether the Debian Display Uses X11 or Wayland](#)
 - 7.5.3 [How to Check System Partition Status](#)
 - 7.5.4 [The ssh.service Is Abnormal in System](#)
 - 7.6 [Debian11 Base Package Fails to Build](#)
 - 7.7 [How to Decompress, Modify and Repackage Debian deb Package](#)
 - 7.8 [How to Add the Swap Partition in Debian](#)
 - 7.9 [Update Debian System for the First Time Will Restart the Display Service](#)
 - 7.10 [Errors Occurring in Debian When Calling libGL related dri.so](#)
 - 7.11 [How to Confirm that the Hardware Mouse Layer is Useful in Debian](#)
 - 7.12 [The log is Too Large in Debian](#)
 - 7.13 [Debian Setting Multi User Mode Issue](#)
 - 7.14 [Debian Username and Password](#)
 - 7.15 [Debian XFCE Desktop icon Double-click Abnormal](#)
- 8. [Third Party Open Source Software and License of Debian](#)
- 9. [Debian Reference Materials](#)

1. Debian Overview

1.1 Overview

Debian is a completely free and open Linux operating system that is widely used on various devices. The reasons for choosing Debian are as follows:

- Debian is free software

Debian is made up of free and open source code and will always remain 100% free. Everyone is free to use, modify, and release. You can perform secondary development based on the Debian system built by Rockchip.

- Debian is a stable and secure operating system based on Linux.

Debian is an operating system that is widely used on a variety of devices, including laptops, desktops, and servers. Its stability and reliability have been loved by users since 1993. We provide sensible default configurations for each package. Debian developers try to provide security updates for all packages during their lifetime as far as possible.

- Debian has widely hardware support.

Most hardware is already supported by Linux kernel. Dedicated hardware drivers can also be used when free software does not provide sufficient support. At present, Rockchip RK3588/RK3568/RK3566/RK3399/RK3288 and other chips have been adapted and supported.

- Debian provides smooth updates.

Debian is known for easy and smooth updates during its release cycle, not only that, but also it can easily upgrade to the next major release version. At present, Rockchip has been upgraded from Debian Stretch (9) to Debian Buster (10) and Bullseye (11) versions.

- Debian is the seed and base for many other release versions.

Many popular Linux released versions, such as Ubuntu, Knoppix, PureOS, SteamOS, and Tails, have chosen Debian as their software base. Debian provides all the tools, therefore, everyone can use the software package that can meet their own needs to expand the software package in Debian libraries.

- Debian project is a community.

Debian is not just a Linux operating system. The software is co-worked by hundreds of volunteers from all over the world. You can become a part of the Debian community even if you are not a programmer or system administrator.

1.2 Debian System Versions Supported

Versions	Supported Architectures	EOL	Current status
Debian 9 “Stretch”	armhf and arm64	July 6, 2020 to June 30, 2022	No longer maintain
Debian 10 “Buster”	armhf and arm64	July, 2022 to June, 2024	Under maintenance
Debian 11 “Bullseye”	armhf and arm64	July, 2024 to June, 2026	Under maintenance

More [Debian Long Term Support Version](#) time, please refer to the official website.

2. Debian Quick Strat Guide

2.1 Environment Setup

It is recommended to use Ubuntu 20.04 for compilation. Other Linux versions may need to adjust the software package accordingly. In addition to the system requirements, there are other hardware and software requirements. Hardware requirements: 64-bit system, hard disk space should be greater than 40G. If you do multiple builds, you will need more hard drive space

Software requirements: Ubuntu 20.04 system:

Please install software packages with below commands to setup SDK building environment:

```
sudo apt-get install git ssh make gcc libssl-dev liblz4-tool expect \
g++ patchelf chrpath gawk texinfo chrpath diffstat binfmt-support \
qemu-user-static live-build bison flex fakeroot cmake gcc-multilib \
g++-multilib unzip device-tree-compiler ncurses-dev
```

It is recommended to use the Ubuntu20.04 system or higher version for development. If an error is reported during compilation, you can install the corresponding software package according to the error message.

2.2 Get the Source Code

The source code can be get from the SDK released by Rockchip code server, which is located in the project `<SDK>/Debian` directory.

2.3 Build

- Build the installation packages required for Debian

```
sudo dpkg -i debian/ubuntu-build-service/packages/*
sudo apt-get install -f
```

- Build Debian

Enter the SDK project and build directly

```
./build.sh debian
```

Or go to the Debian/ directory:

```
cd debian/
```

Please refer to the readme.md in the current directory.

3. Debian Directory Structure

```
debian
├─ mk-base-debian.sh ##Get Debian base package and build
├─ mk-image.sh ##Packag and generate ext4 firmware
├─ mk-rootfs-buster/bullseye.sh ##Adapt to Rockchip related hardware
acceleration package
├─ mk-rootfs.sh ##Points to the specific Rootfs version, there are currently two
versions of Buster and Bullseye.
├─ overlay ##Adapt to the commonly used configuration file of Rockchip platform
├─ overlay-debug ##Debugging tools commonly used by the system
├─ overlay-firmware ##Storage of some device firmware, such as npu/dp, etc.
├─ packages ## Contains pre-built packages for armhf arm64 system adaptation for
hard acceleration
├─ packages-patches ##Pre-built packages, based on official patches
├─ readme.md ## Documentation guide
└─ ubuntu-build-service ##Get the Debian released version,dependent packages and
custom installation related packages from official
```

The content of the entire directory structure is implemented through shell scripts to obtain the source code of the Linux Debian released versions, build and install the operating system adapted to Rockchip hard acceleration package.

4. Debian Live-build Usage Guide

[live build](#) is a group of scripts used to build live system images. The idea behind live build is a tool kit that uses a configuration directory to fully automate and customize all aspects of building live images.

For more introduction, please refer to the official website [Live manual](#).

The source repository of Debian packages (VCS: [Git](#))

[live-build-git](#)

The source repository of Debian packages (it is available online)

[live-build](#)

4.1 Related Commands

- lb config

Create auto and config directories and related configuration files in the current directory, and run the auto/config script.

- lb clean

run auto/clean scripts

- lb build

Build system images according to various configuration scripts in the config directory

4.2 Software Source Settings

- The first way:

```
$ lb config --mirror-bootstrap http://mirrors.ustc.edu.cn/debian \  
--mirror-chroot-security http://mirrors.ustc.edu.cn/debian-security/ \  
--mirror-chroot-backports http://mirrors.ustc.edu.cn/debian-backports/
```

chroot mirror: --mirror-chroot, use the value of --mirror-bootstrap by default or create a config/archives/your-repository.list.chroot file with the content of source address. Sources will be added to the /etc/apt/sources.list.d/ directory of the live system.

- The Second way:

```
$ lb config --mirror-binary http://mirrors.ustc.edu.cn/debian \  
--mirror-binary-security http://mirrors.ustc.edu.cn/debian-security/
```

Or create a config/archives/your-repository.list.binary file with the content of source address.

4.3 Customize System Packages

- The first way:

Place the required package list in the customization/package-lists directory and name it XXX.list.chroot or XXX.list.binary.

- The Second way:

With --package-lists "XXX", the specified package list under /usr/share/live/build/package-lists/ will be used.

After executing lb config, four configuration files, binary, bootstrap, chroot, and common in the config directory will be generated according to the parameters in this script. lb build reads these four configuration files, so you can also make modifications to the parameters in these four files after lb config.

Configuration parameters is in auto/config, for example:

```
set -e  
  
echo "I: create configuration"
```



```

export LB_BOOTSTRAP_INCLUDE="apt-transport-https gnupg"
lb config \
  --mirror-bootstrap "http://mirrors.ustc.edu.cn/debian" \
  --mirror-chroot "http://mirrors.ustc.edu.cn/debian" \
  --mirror-chroot-security "http://mirrors.ustc.edu.cn/debian-security" \
  --mirror-binary "http://mirrors.ustc.edu.cn/debian" \
  --mirror-binary-security "http://mirrors.ustc.edu.cn/debian-security" \
  --apt-indices false \
  --apt-recommends false \
  --apt-secure false \
  --architectures arm64 \
  --archive-areas 'main contrib non-free' \
  --backports false \
  --binary-filesystem ext4 \
  --binary-images tar \
  --bootappend-live "hostname=linaro-alip username=linaro" \
  --bootloader "syslinux" \
  --bootstrap-qemu-arch arm64 \
  --bootstrap-qemu-static /usr/bin/qemu-aarch64-static \
  --cache false \
  --chroot-filesystem none \
  --compression gzip \
  --debootstrap-options "--variant=minbase --include=apt-transport-https,gnupg" \
  --distribution bullseye \
  --gzip-options '-9 --rsyncable' \
  --iso-publisher 'Linaro; http://www.linaro.org/; linaro-dev@lists.linaro.org' \
  --iso-volume 'Linaro Bullseye $(date +%Y%m%d-%H:%M)' \
  --linux-flavours none \
  --linux-packages none \
  --mode debian \
  --security true \
  --system normal \
  --updates true

```

4.3.1 Customized Directory

The customized directory and the files in it can be placed in the corresponding include directory of config/

config/binary_local-includes (take the root directory of the generated image as the root directory)

config/chroot_local-includes (take the root directory of the target system as the root directory)

4.3.2 HOOKS

The scripts in config/hooks are run after each stage of live-build has completed.

config/binary_local-hooks

config/chroot_local-hooks

A new version of live-build will get patches from the live/normal directories.

```
customization/hooks/live/
├─ 0001-setup_user_linaro.binary
├─ 0002-add_linaro_to_groups.binary
├─ 0003-check_sudoers_for_admin.binary
├─ 0021-silence-systemd.binary
├─ 0022-disable-systemd-services.binary
├─ 0023-lightdm-autologin.binary
└─ 0098-resolvconf.binary
```

5. The Pre-built Packages Integrated in Debian

```
packages
├─ armhf/arm64
│   ├── mpp
│   ├── libv4l
│   ├── chromium
│   ├── glmark2
│   ├── gst-plugins-bad1.0
│   ├── gst-plugins-base1.0
│   ├── gst-plugins-good1.0
│   ├── gst-plugins-ugly1.0
│   ├── gst-rkmpp
│   ├── libdrm
│   ├── libdrm-cursor
│   ├── libmali
│   ├── openbox
│   ├── pcmanfm
│   ├── rga
│   ├── rkaiq
│   ├── rkisp
│   ├── rkwifibt
│   ├── blueman
│   ├── rktoolkit
│   └─ xserver
```

5.1 mpp

The Media Process Platform (MPP) provided by Rockchip is a general media processing software platform for Rockchip chipset. The platform shields the application software from the complex underlying processing related to chips, and its purpose is to shield the difference between different chips and provide users with a unified video media processing interface (The abbreviation of Media Process Interface is MPI).

Features provided by MPP include:

- Video decoding
H.265/H.264/H.263/VP9/VP8/MPEG-4/MPEG-2/MPEG-1/VC1/MJPEG
- Video encoding
H.264/VP8/MJPEG
- Video processing

Video copying, scaling, color space conversion, field video deinterlace

If there are some issues, turn on the following switches to obtain more logs for debugging.

```
export mpi_debug=1
export mpp_debug=1
export h264d_debug=1
```

The mpp log is not output to the terminal by default. If necessary, enable it in the following way.

```
export mpp_syslog_perror=1
```

Switch of debug logs for each kernel version:

```
4.19/5.10 kernel (Linux4.19 and later version)
$ echo 0x100 > /sys/module/rk_vcodec/parameters/mpp_dev_debug
$ cat /proc/kmsg

4.4 kernel (Linux4.4)
$ echo 0x100 > /sys/module/rk_vcodec/parameters/debug
$ cat /proc/kmsg
```

This command outputs the execution time of single frame encoding and decoding in the kernel, which is often used for performance evaluation or analysis of stuck and smooth problems. For example, log information output in RK3568 kernel5.10:

```
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 14870 us hw 5430 us
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 13157 us hw 4132 us
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 12976 us hw 4098 us
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 11295 us hw 4070 us
...
```

Please refer to the MPP development documentation for more information.

The pre-built packages integrated in Debian are as follows:

```
mpp/
├─ librockchip-mpp-dev_1.5.0-1_arm64.deb
├─ librockchip-mpp1-dbgsym_1.5.0-1_arm64.deb
├─ librockchip-mpp1_1.5.0-1_arm64.deb
├─ librockchip-vpu0-dbgsym_1.5.0-1_arm64.deb
├─ librockchip-vpu0_1.5.0-1_arm64.deb
├─ rockchip-mpp-demos-dbgsym_1.5.0-1_arm64.deb
└─ rockchip-mpp-demos_1.5.0-1_arm64.deb
```

5.2 libv4l

The v4l2 plugin that connects Chromium browser and mpp to implement hard decode.

The pre-built packages:

```
/libv4l/
...
```

```

├─ dvb-tools_1.20.0-2_arm64.deb
├─ ir-keytable_1.20.0-2_arm64.deb
├─ libdvbv5-0_1.20.0-2_arm64.deb
├─ libdvbv5-dev_1.20.0-2_arm64.deb
├─ libdvbv5-doc_1.20.0-2_all.deb
├─ libv4l-0_1.20.0-2_arm64.deb
├─ libv4l2rds0_1.20.0-2_arm64.deb
├─ libv4lconvert0_1.20.0-2_arm64.deb
├─ libv4l-dev_1.20.0-2_arm64.deb
├─ libv4l-rkmpp_1.4.0-1_arm64.deb
├─ qv4l2_1.20.0-2_arm64.deb
└─ v4l-utils_1.20.0-2_arm64.deb

```

5.3 Chromium

```

chromium/
├─ chromium-x11-dbgsym_91.0.4472.164_arm64.deb
└─ chromium-x11_91.0.4472.164_arm64.deb

```

Chromium browser supports H264\VP8\VP9 and other video formats, but does not support H265. At present, Debian has integrated the support of Chromium video hardware decoding, using customized chromium+v4l2 plugin+mpp for efficient hardware decoding.

The main modifications of customized Chromium are as follows:

- Modify chromium to enable v4l2 vda support, and related patches
- add v4l2 mpp plugin

Disadvantages:

- a. Only support vp8, h264, vp9
- b. You need to modify and compile chromium (after tuning the complete compilation process of yocto)

Currently, we provide chromium wayland patch, support for yocto, buildroot, and a few customers are using it

5.4 glmark2

```

glmark2/
├─ glmark2-data_2021.02+ds-1_all.deb
├─ glmark2-es2-x11-dbgsym_2021.02+ds-1_arm64.deb
└─ glmark2-es2-x11_2021.02+ds-1_arm64.deb

```

Glmark2 is an open source benchmarking program for OpenGL 2.0 and ES 2.0, generally used to benchmark GPU.

Open source code of [Glmark2](#) detailed test have been integrated into Debian

```

usr/local/bin/test_glmark2_*.sh
├─ test_glmark2_fullscreen.sh ### Full screen test
├─ test_glmark2_normal.sh ### Default 800x600 resolution test
└─ test_glmark2_offscreen.sh ### Offscreen test

root@linaro-alip:~# test_glmark2_normal.sh

```

```

/usr/local/bin/test_glmark2_normal.sh: line 36: warning: command substitution:
ignored null byte in input
performance
arm_release_ver of this libmali is 'g2p0-01eac0', rk_so_ver is '4'.
=====
    glmark2 2021.02
=====
    OpenGL Information
    GL_VENDOR:      ARM
    GL_RENDERER:    Mali-G52
    GL_VERSION:     OpenGL ES 3.2 v1.g2p0-01eac0.327c41db9c110a33ae6f67b4cc0581c7
=====
[build] use-vbo=false:
---
```

For more usage, please refer to help command:

```

root@linaro-alip:~# glmark2-es2 --help
A benchmark for Open GL (ES) 2.0

Options:
  -b, --benchmark BENCH  A benchmark or options to run: '(scene)?(:opt1=val1)*'
                        (the option can be used multiple times)
  -f, --benchmark-file F  Load benchmarks to run from a file containing a
                        list of benchmark descriptions (one per line)
                        (the option can be used multiple times)
  --validate              Run a quick output validation test instead of
                        running the benchmarks
  --data-path PATH        Path to glmark2 models, shaders and textures
                        Default: /usr/share/glmark2
  --frame-end METHOD       How to end a frame [default:none,swap,finish,readpixels]
  --off-screen            Render to an off-screen surface
  --visual-config C       The visual configuration to use for the rendering
                        target: 'red=R:green=G:blue=B:alpha=A:buffer=BUF'.
                        The parameters may be defined in any order, and any
                        omitted parameters assume a default value of '1'
  --reuse-context         Use a single context for all scenes
                        (by default, each scene gets its own context)
  -s, --size WxH          Size of the output window (default: 800x600)
  --fullscreen            Run in fullscreen mode (equivalent to --size -1x-1)
  -l, --list-scenes       Display information about the available scenes
                        and their options
  --show-all-options     Show all scene option values used for benchmarks
                        (only explicitly set options are shown by default)
  --run-forever           Run indefinitely, looping from the last benchmark
                        back to the first
  --annotate             Annotate the benchmarks with on-screen information
                        (same as -b :show-fps=true:title=#info#)
  -d, --debug            Display debug messages
  -h, --help             Display help
```

5.5 Gstreamer

Gstreamer contains the core framework and core components.

Patches for gstreamer 1.14.4 and 1.18.5 are as follows:

```
├─ 1.14.4
│   ├── 0001-gstconfig.h.in-initial-RISC-V-support.patch
│   ├── 0002-filesrc-Fix-stopping-race-in-pull-mode.patch
│   └── 0003-HACK-gstpad-Add-1-sec-timeout-for-activation.patc
├─ 1.18.5
│   ├── 0001-filesrc-Fix-stopping-race-in-pull-mode.patch
│   └── 0002-HACK-gstpad-Add-1-sec-timeout-for-activation.patch
```

5.6 gst-plugins-bad1.0

Plug ins in Gstreamer that require be improved in quality can be moved to the good plug-in list after maturity.

The kmsink, waylandsink and other plug-ins are added to adapt to some features and fixing problems of Rockchip platform, based on the official gst plugins bad versions 1.14.4 and 1.18.5 of gstreamer.

Patches for gst-plugins-base1.0-1.14.4 and 1.18.5 are as follows:

```
├─ 1.14.4
│   ├── 0001-kmssink-Add-24bit-RGB-support.patch
│   ├── 0002-waylandsink-support-fullscreen.patch
│   ├── 0003-waylandsink-relaxed-wl_shell-check-and-added-zwp_ful.patch
│   ├── 0004-kmssink-configure-mode-setting-from-video-info.patch
│   ├── 0005-kmssink-add-connector-properties-prop.patch
│   ├── 0006-kmssink-Generalize-setting-DRM-object-properties.patch
│   ├── 0007-kmssink-Add-plane-properties-property.patch
│   ├── 0008-kmssink-Escape-DRM-property-names.patch
│   ├── 0009-kmssink-Add-restore-crtc-property.patch
│   ├── 0010-kmssink-Avoiding-get_property-to-take-ownership-of-o.patch
│   ├── 0011-waylandsink-Avoid-race-condition-on-multi-threaded-c.patch
│   ├── 0012-kmssink-fix-tmp_kmsmem-leaks.patch
│   ├── 0013-kmssink-Accept-underscore-in-property.patch
│   ├── 0014-waylandsink-Don-t-create-throwaway-empty-regions.patch
│   ├── 0015-waylandsink-prefix-wl_shell-specific-variables-with-.patch
│   ├── 0016-waylandsink-Implement-XDG-shell-stable-support.patch
│   ├── 0017-waylandsink-Wait-for-the-surface-to-be-configured.patch
│   ├── 0018-waylandsink-make-gst_wl_window_is_toplevel-aware-of-.patch
│   ├── 0019-wayland-wlbuffer-just-return-if-used_by_compositor-i.patch
│   ├── 0020-kmssink-Fixup-all-errno-tracing.patch
│   ├── 0021-Revert-waylandsink-Don-t-create-throwaway-empty-regi.patch
│   ├── 0022-wayland-Drop-big-endian-version-of-the-DRM-formats.patch
│   ├── 0023-wayland-Add-more-DRM-formats.patch
│   ├── 0024-waylandsink-Commit-the-parent-after-creating-subsurf.patch
│   ├── 0025-wlvideoformat-clean-up-video-formats.patch
│   ├── 0026-waylandsink-Fix-xdg_shell-fullscreen-mode.patch
│   ├── 0027-waylandsink-Clear-window-when-pipeline-is-stopped.patch
│   ├── 0028-waylandsink-add-wl_registry.global_remove-listener.patch
│   ├── 0029-kmssink-Fix-implicit-declaration-build-error.patch
│   ├── 0030-kmssink-Ensure-we-have-an-allocator-before-importing.patch
│   └── 0031-kmssink-Avoid-drain-on-caps-changes.patch
```

- | | 0032-kmssink-Do-not-drain-if-imported-buffer-are-from-KMS.patch
- | | 0033-kmssink-Fix-crash-with-force-modesetting-1.patch
- | | 0034-kmssink-Save-last-metadata-at-the-same-time-as-the-l.patch
- | | 0035-kmssink-fix-memory-leak-on-failing-allowed-caps.patch
- | | 0036-wlvideoformat-fix-typo-in-the-format-list.patch
- | | 0037-waylandsink-Keep-per-display-wayland-buffer-caches.patch
- | | 0038-waylandsink-use-GstMemory-instead-of-GstBuffer-for-c.patch
- | | 0039-waylandsink-Update-stale-GstBuffer-references-in-way.patch
- | | 0040-waylandsink-release-frame-callback-when-destroyed.patch
- | | 0041-wlvideoformat-fix-DMA-format-convertor.patch
- | | 0042-waylandsink-Fix-for-missing-initial-configure.patch
- | | 0043-waylandsink-prevent-frame-callback-being-released-tw.patch
- | | 0044-waylandsink-Fix-double-render-check.patch
- | | 0045-Bump-dtls-sctp-webrtc-to-upstream.patch
- | | 0046-waylandsink-release-frame-callback-when-finalizing.patch
- | | 0047-fix-h265_parser-read-vui-error.patch
- | | 0048-interim-fix-vc1-stream-may-memory-leak-when-pending.patch
- | | 0049-kmssink-Support-render-rectangle-for-plane.patch
- | | 0050-kmssink-Request-window-handle.patch
- | | 0051-waylandsink-Support-place-below-above.patch
- | | 0052-waylandsink-Enable-changing-window-handle.patch
- | | 0053-kmssink-Support-setting-plane-zpos.patch
- | | 0054-waylandsink-Support-setting-toplevel-window-position.patch
- | | 0055-HACK-gstmpegvideoparse-Split-every-picture.patch
- | | 0056-mpegtsdemux-Create-new-PCR-group-for-big-gap.patch
- | | 0057-gstjpegparse-Allow-parsebin-to-use-it-for-autopluggi.patch
- | | 0058-waylandsink-Drop-frame-when-window-not-ready.patch
- | | 0059-waylandsink-Fix-random-crash.patch
- | | 0060-camerabin2-Support-setting-default-filters.patch
- | | 0061-waylandsink-Defer-prepare-window-when-getting-zero-w.patch
- | | 0062-mpegts-Add-a-property-to-ignore-broken-PCR-streams.patch
- | | 0063-waylandsink-Support-window-layer-property.patch
- | | 0064-waylandsink-Support-window-alpha-property.patch
- | | 0065-waylandsink-Support-window-fill-mode-property.patch
- | | 0066-HACK-kmssink-Open-drm-devnode-directly.patch
- | | 0067-kmssink-Support-NV12_10LE40.patch
- | | 0068-waylandsink-Use-create_immed-to-create-dmabuf.patch
- | | 0069-waylandsink-Support-frame-sync-mode.patch
- | | 0070-HACK-waylandsink-Allow-both-of-dmabuf-formats-and-sh.patch
- | | 0071-kmssink-Support-NV12_10LE40-and-NV12-NV12_10LE40-NV1.patch
- | | 0072-waylandsink-Support-NV12_10LE40-and-NV12-NV12_10LE40.patch
- | | 0073-waylandsink-Use-the-correct-video-info-to-access-all.patch
- | | 0074-waylandsink-Prefer-to-use-waylandsink.patch
- | | 0075-kmssink-Avoid-double-closing-shared-gem-handle.patch
- | | 0076-kmssink-Support-ignoring-aspect-ratio.patch
- | | 0077-kmssink-Support-setting-prefered-frame-syncing-mode.patch

| 1.18.5

- | | 0001-waylandsink-Use-memfd_create-when-available.patch
- | | 0002-waylandsink-release-frame-callback-when-destroyed.patch
- | | 0003-waylandsink-prevent-frame-callback-being-released-tw.patch
- | | 0004-waylandsink-Fix-double-render-check.patch
- | | 0005-kmssink-Add-NV24-support.patch
- | | 0006-kmssink-Add-NV61-support.patch
- | | 0007-kmssink-Remove-big-endian-format-inversion.patch
- | | 0008-kmssink-Sort-format-according-to-GST_VIDEO_FORMATS_A.patch
- | | 0009-kmssink-Add-RGB16-BGR16-support.patch
- | | 0010-fix-h265_parser-read-vui-error.patch
- | | 0011-interim-fix-vc1-stream-may-memory-leak-when-pending.patch

- | └─ 0012-waylandsink-release-frame-callback-when-finalizing.patch
- | └─ 0013-kmssink-Support-render-rectangle-for-plane.patch
- | └─ 0014-kmssink-Request-window-handle.patch
- | └─ 0015-waylandsink-Support-place-below-above.patch
- | └─ 0016-waylandsink-Enable-changing-window-handle.patch
- | └─ 0017-kmssink-Support-setting-plane-zpos.patch
- | └─ 0018-waylandsink-Support-setting-toplevel-window-position.patch
- | └─ 0019-HACK-gstmpegvideoparse-Split-every-picture.patch
- | └─ 0020-mpegtsdemux-Create-new-PCR-group-for-big-gap.patch
- | └─ 0021-gstjpegparse-Allow-parsebin-to-use-it-for-autopluggi.patch
- | └─ 0022-waylandsink-Drop-frame-when-window-not-ready.patch
- | └─ 0023-waylandsink-Fix-random-crash.patch
- | └─ 0024-camerabin2-Support-setting-default-filters.patch
- | └─ 0025-waylandsink-Defer-prepare-window-when-getting-zero-w.patch
- | └─ 0026-mpegts-Support-ignoring-broken-PCR-streams-by-default.patch
- | └─ 0027-waylandsink-Support-window-layer-property.patch
- | └─ 0028-waylandsink-Support-window-alpha-property.patch
- | └─ 0029-waylandsink-Support-window-fill-mode-property.patch
- | └─ 0030-HACK-kmssink-Open-drm-devnode-directly.patch
- | └─ 0031-waylandsink-Use-create_immed-to-create-dmabuf.patch
- | └─ 0032-waylandsink-Support-frame-sync-mode.patch
- | └─ 0033-HACK-waylandsink-Allow-both-of-dmabuf-formats-and-sh.patch
- | └─ 0034-kmssink-Support-NV12_10LE40-and-NV12-NV12_10LE40-NV1.patch
- | └─ 0035-waylandsink-Support-NV12_10LE40-NV12-AFBC-and-NV12_1.patch
- | └─ 0036-waylandsink-Use-the-correct-video-info-to-access-all.patch
- | └─ 0037-waylandsink-Prefer-to-use-waylandsink.patch
- | └─ 0038-kmssink-Avoid-double-closing-shared-gem-handle.patch
- | └─ 0039-kmssink-Support-ignoring-aspect-ratio.patch
- | └─ 0040-kmssink-Support-setting-preferred-frame-syncing-mode.patch
- | └─ 0041-waylandsink-Support-pointer-and-touch.patch
- | └─ 0042-waylandsink-Parse-video-size-in-propose_allocation.patch

5.7 gst-plugins-base1.0

The gst-plugins-base is a necessary plug-in for Gstreamer applications.

Based on the official gst-plugins-base 1.14.4 and 1.18.5 of gstreamer, add support for dma buffer and rga/gpu graphics acceleration adaptation. Patches for gst plugins-base1.0-1.14.4 and 1.18.5 are as follows:

- | └─ 1.14.4
- | └─ 0001-glupload-Only-offer-DMABuf-caps-feature-if-using-EGL.patch
- | └─ 0002-gl-gbm-allow-headless-mode.patch
- | └─ 0003-gst-libs-include-config.h-in-all-source-files.patch
- | └─ 0004-glmemory-Fix-n_wrapped_pointers-usage.patch
- | └─ 0005-gl-egl-Add-gst_egl_image_from_dmabuf_direct-function.patch
- | └─ 0006-glupload-try-to-use-the-last-method-after-reconfigur.patch
- | └─ 0007-glupload-allow-system-memory-for-dmabuf-in-transform.patch
- | └─ 0008-glupload-handle-upload-methods-with-different-caps.patch
- | └─ 0009-gluploadelement-try-to-avoid-dropping-buffers.patch
- | └─ 0010-glupload-Implement-direct-dmabuf-uploader.patch
- | └─ 0011-glupload-calculate-DRM-fourcc-once-for-direct-dmabuf.patch
- | └─ 0012-glupload-debug-output-from-dmabuf-and-dmabuf_direct-.patch
- | └─ 0013-glupload-dmabuf-direct-query-formats-before-modifier.patch
- | └─ 0014-glupload-dmabuf-direct-report-driver-limitations-to-.patch
- | └─ 0015-glupload-Do-prepend-the-preferred-caps.patch
- | └─ 0016-gl-egl-Determine-correct-format-on-dmabuf-import.patch

- | └─ 0017-glupload-dmabuf-be-explicit-about-gl-formats-used.patch
- | └─ 0018-opengl-gbm-Adds-missing-unrefs-for-gl-context-and-dr.patch
- | └─ 0019-gst-gl-Remove-duplicate-declarations.patch
- | └─ 0020-gl-gbm-Improve-logging-output.patch
- | └─ 0021-gl-gbm-Add-GST_GL_GBM_DRM_CONNECTOR-environment-vari.patch
- | └─ 0022-gl-window-gbm-Remove-unneeded-extra-function.patch
- | └─ 0023-gl-window-gbm-Remove-unused-private-class-member.patch
- | └─ 0024-gl-window-gbm-Restore-CRTC-on-close.patch
- | └─ 0025-glupload-dmabuf-use-out_info-to-create-allocation-pa.patch
- | └─ 0026-glupload-Don-t-leak-caps-features.patch
- | └─ 0027-gl-fix-a-few-other-leaks-when-not-getting-to-PAUSED.patch
- | └─ 0028-gl-Don-t-restore-the-viewport-on-function-exit.patch
- | └─ 0029-gluploadelement-Fix-caps-leak.patch
- | └─ 0030-glupload-prevent-segfault-when-updating-caps.patch
- | └─ 0031-glupload-Keep-track-of-cached-EGLImage-texture-forma.patch
- | └─ 0032-eglimage-Fix-memory-leak.patch
- | └─ 0033-glimagesink-fix-upper-left-and-upper-right-rotate-ma.patch
- | └─ 0034-gl-egl-support-direct-dmabuf-import-with-external-oe.patch
- | └─ 0035-gl-gbm-ensure-we-call-the-resize-callback-before-att.patch
- | └─ 0036-glupload-dmabuf-support-direct-upload-into-external-.patch
- | └─ 0037-glupload-fix-transform_caps-NULL-pointer-dereference.patch
- | └─ 0038-glupload-dmabuf-add-DirectDmabufExternal-uploader.patch
- | └─ 0039-glupload-dmabuf-only-accept-uploads-to-external-oes-.patch
- | └─ 0040-video-Add-NV12_10LE40-pixel-format.patch
- | └─ 0041-parsebin-Add-missing-locks-unlocks-of-the-chain-mute.patch
- | └─ 0042-video-Add-gst_video_info_set_interlaced_format.patch
- | └─ 0043-video-format-add-gst_video_format_info_component.patch
- | └─ 0044-video-info-add-gst_video_info_align_full.patch
- | └─ 0045-playbin3-Fix-qt-videoplayer-cannot-change-video-stat.patch
- | └─ 0046-playbin2-Add-preferred-audio-video-sink.patch
- | └─ 0047-HACK-xvimagesink-Support-dma-buffer-rendering.patch
- | └─ 0048-video-converter-Support-rockchip-RGA-2D-accel.patch
- | └─ 0049-HACK-gl-egl-allow-direct-dmabuf-import-when-unable-t.patch
- | └─ 0050-glupload-dmabuf-prefer-DirectDmabufExternal-uploader.patch
- | └─ 0051-videoconvert-Support-preferred-formats.patch
- | └─ 0052-playbin2-Fix-deadlock-when-hooking-about-to-finish-s.patch
- | └─ 0053-HACK-xvimage-Support-NV12_10-and-NV16-dma-buffer.patch

| └─ 1.18.5

- | └─ 0001-gst-libs-gst-video-gstvideoaggregator.c-fix-build-wi.patch
- | └─ 0002-playbin3-Fix-qt-videoplayer-cannot-change-video-stat.patch
- | └─ 0003-playbin2-Add-preferred-audio-video-sink.patch
- | └─ 0004-HACK-xvimagesink-Support-dma-buffer-rendering.patch
- | └─ 0005-video-converter-Support-rockchip-RGA-2D-accel.patch
- | └─ 0006-HACK-gl-egl-allow-direct-dmabuf-import-when-unable-t.patch
- | └─ 0007-glupload-dmabuf-prefer-DirectDmabufExternal-uploader.patch
- | └─ 0008-videoconvert-Support-preferred-formats.patch
- | └─ 0009-Revert-decodebin-only-emit-drained-signal-when-top-c.patch
- | └─ 0010-playbin2-send-one-about-to-finish-per-group.patch
- | └─ 0011-playbin-do-not-drain-on-first-EOS.patch
- | └─ 0012-playbin2-Fix-deadlock-when-hooking-about-to-finish-s.patch

5.8 gst-plugins-good.0

Gstreamer uses LGPL licensed plug-ins with high quality.

V4L2, RGA and other plug-ins are added to adapt to some features and fixing problems of Rockchip platform, based on the official gst-plugins-good 1.14.4 and 1.18.5 of gstreamer,.

Patches for gst-plugins-good1.0-1.14.4 and 1.18.5 are as follows:

```
├─ 1.14.4
│   ├── 0001-v4l2-Do-not-renegotiate-if-only-framerate-changed.patch
│   ├── 0002-v4l2object-factor-out-gst_v4l2_object_match_buffer_l.patch
│   ├── 0003-v4l2object-try-matching-buffer-layout-from-downstream.patch
│   ├── 0004-v4l2object-update-match_buffer_layout-debug-messages.patch
│   ├── 0005-rtpmanager-Bump-to-upstream.patch
│   ├── 0006-qtdemux-don-t-skip-the-stream-duration-longer-than-3.patch
│   ├── 0007-HACK-flacparse-Handle-metadata-127.patch
│   ├── 0008-autodetect-Add-preferred-for-autovideosink-autoaudio.patch
│   ├── 0009-v4l2-Support-preferred-formats.patch
│   └── 0010-video-flip-Support-rockchip-RGA-2D-accel.patch
├─ 1.18.5
│   ├── 0001-qtdemux-don-t-skip-the-stream-duration-longer-than-3.patch
│   ├── 0002-HACK-flacparse-Handle-metadata-127.patch
│   ├── 0003-autodetect-Add-preferred-for-autovideosink-autoaudio.patch
│   ├── 0004-v4l2-Support-preferred-formats.patch
│   └── 0005-video-flip-Support-rockchip-RGA-2D-accel.patch
```

5.9 gst-rkmpp

The gstreamer-rockchip is an audio and video codec middleware based on gstreamer that adapts to Rockchip platform, and mainly used to connect to the mpp interface.


The pre-built packages of gstreamer-rockchip are as follows:

```
gst-rkmpp/
├─ gstreamer1.0-rockchip1-dbgsym_1.14-4_arm64.deb
└─ gstreamer1.0-rockchip1_1.14-4_arm64.deb
```

5.10 libdrm

Enable kmssink support based on the official LIBDRM version.

Libdrm is a cross driver middleware that allows user space applications (for example, as Mesa and 2D drivers) to communicate with kernel through DRI. Please refer to the following DRM structure diagram:

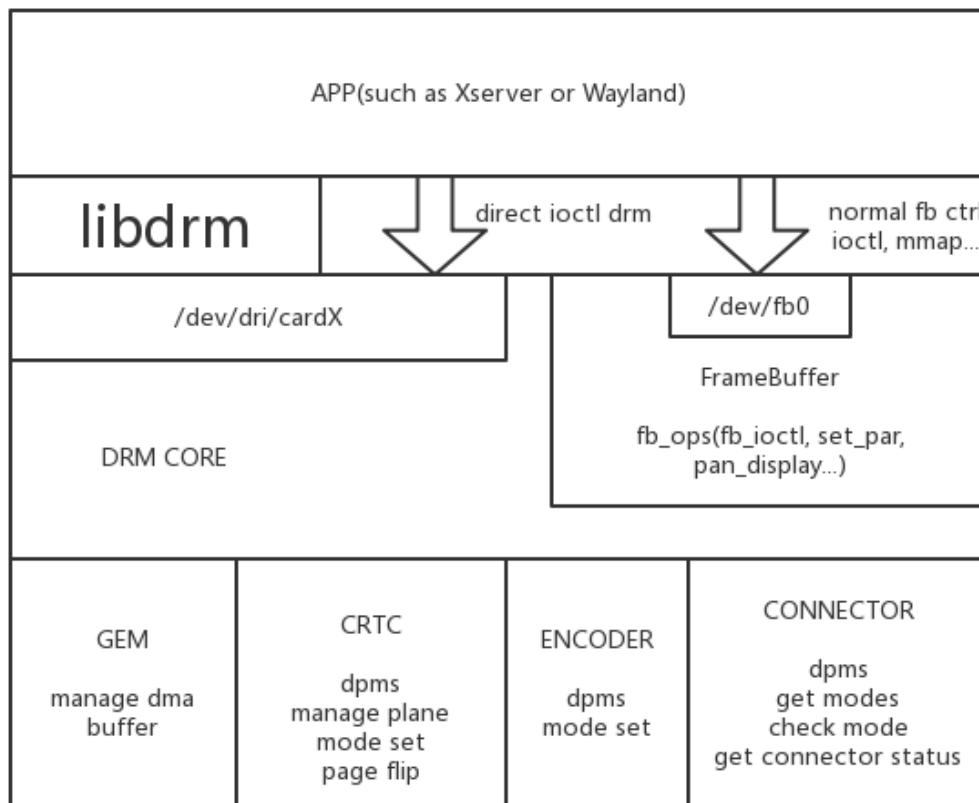

The pre-built packages of libdrm are as follows:

```
libdrm
├─ libdrm2_2.4.104-1_arm64.deb
├─ libdrm-common_2.4.104-1_all.deb
├─ libdrm-dev_2.4.104-1_arm64.deb
├─ libkms1_2.4.104-1_arm64.deb
└─ libkms1-dbg_2.4.104-1_arm64.deb
```

Patches as below:

```
├─ 0001-tests-meson.build-disable-nouveau-tests-for-static-b.patch
├─ 0002-modetest-Speed-up-dumping-info.patch
├─ 0003-modetest-Fix-set-property-error-when-using-atomic.patch
├─ 0004-HACK-Open-rockchip-drm-device-by-default.patch
└─ 0005-HACK-Bypass-drm-GetBusid-drmAuthMagic-SetInterfaceVe.patch
```

5.11 libdrm-cursor

There are three key features of this package:

- vop is without a mouse layer, it supports using overlay as a mouse layer
- Support display overlay layer in AFBC format
- handling the abnormality that limit the mouse beyond the boundary

Configuration function of drm-cursor are as follows:

```
cat /etc/drm-cursor.conf
```

```
# Configure file for libdrm-cursor.
#
#debug=
# log-file=
# hide=1 # hide cursors
# atomic=0 # disable atomic drm API
# max-fps=60
# allow-overlay=1 # allowing overlay planes
# prefer-afbc=0 # prefer plane with AFBC modifier supported
# num-surfaces=8 # num of egl surfaces to avoid edge moving corruption
# prefer-plane=65
# prefer-planes=61,65
# crtc-blocklist=64,83
```

The default log is in `/var/log/drm-cursor.log`

The pre-built packages of libdrm-cursor are as follows:

```
libdrm-cursor/
├─ libdrm-cursor-dbgsym_1.2.3-1_arm64.deb
├─ libdrm-cursor-dev_1.2.3-1_arm64.deb
└─ libdrm-cursor_1.2.3-1_arm64.deb
```

5.12 libmali

ARM provides userspace GPU driver, GPU provides opengles, egl, opengl API.

Rockchip provides a series of Mali pre-built deb packages.

Naming rules: GPU model-Software version-Hardware version (if there is, such as r1p0 to distinguish RK3288 and RK3288w)-build options.

Pay attention to the build options:

It is x11-gbm when without suffix. Note that GBM is the memory mechanism used to configure DRM. Do not use fbdev if it is not a 3.10 kernel. GBM is used by QT EGLFS program, which does not depend on X11, Wayland. Wayland/ Wayland-gbm is used by Wayland.

```
libmali/
├─ libmali-valhall-g610-g6p0-dummy_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-dummy-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-dummy-gbm_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-dummy-gbm-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-gbm_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-gbm-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-wayland_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-wayland-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-without-cl-dummy-gbm_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-without-cl-dummy-gbm-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g6p0-x11_1.9-1_arm64.deb
└─ libmali-valhall-g610-g6p0-x11-dbgsym_1.9-1_arm64.deb
...
```

5.13 rga

Rockchip RGA is a independent 2D raster graphics acceleration unit. It speeds up 2D graphics operations, such as point/line drawing, image scaling, rotation, bitmap, image composition, etc.

The pre-built packages are as follows:

```
rga/
├─ librga-dev_2.1.0-1_arm64.deb
├─ librga2-deb
└─ librga2_2.1.0-1_arm64.deb

rga2
├─ librga2_2.2.0-1_arm64.deb
├─ librga2-dbgSYM_2.2.0-1_arm64.deb
└─ librga-dev_2.2.0-1_arm64.deb
```

5.14 openbox

Openbox is a window manager, not a desktop environment. Openbox is only responsible for maintaining windows opened on the screen. Window outline movement support is added based on the official v3.6.1 version.

```
Modify /home/linaro/.config/openbox/lxde-rc.xml to change
<drawContents>yes</drawContents> to <drawContents>no</drawContents>
```

For details, please refer to [Openbox](#)

The pre-built packages are as follows:

```
openbox/
└─ openbox_3.6.1-9+deb11u1_arm64.deb
```

5.15 pcmanfm

Is a lightweight file manager. Outline supported is add based on the official version 1.3.1.

The pre-built packages are as follows:

```
pcmanfm/
├─ pcmanfm_1.3.2-1_arm64.deb
└─ pcmanfm-dbgSYM_1.3.2-1_arm64.deb
```

5.16 rkaiq

The full name is Rockchip Automatic Image Quality, which is a processor used to automatically adjust the image signal. It is mainly used to implement camera 3A effect, suitable for ISP2.x chips, such as RK3566, RK3568, RK3588...etc.

The pre-built packages are as follows:

```
rkaiq/
├─ camera_engine_rkaiq_rk3568_arm64.deb  ##It is applicable to RK3566/RK3568
chipset
└─ camera_engine_rkaiq_rk3588_arm64.deb  ##It is applicable to RK3588 chipset
```

5.17 rkisp

The full name is Rockchip Image Signal Processor, image signal processor. Which is mainly used to implement camera's 3A effect, suitable for ISP1.X chips, such as RK3288, RK3399...etc.

The pre-built packages are as follows:

```
rkisp/
└─ rkisp-engine-2.2.0_arm64.deb
```

5.18 rkwifibt

WIFI-BT modules which have been debugged based on the Rockchip platform, include Firmware, tools, configuration files, etc.

The pre-built packages are as follows:

```
rkwifibt/
├─ rkwifibt-broadcom-firmware_1.0.0-1_arm64.deb
├─ rkwifibt-dev-tools-dbgym_1.0.0-1_arm64.deb
└─ rkwifibt-dev-tools_1.0.0-1_arm64.deb
```

5.19 blueman

Blueman is a Bluetooth manager for GTK+. Blueman can easily and efficiently manage BlueZ APIs and simplify some Bluetooth management tasks, such as:

- Dial-up connection 3G/EDGE/GPRS
- Connect/Create Bluetooth Network
- Connecting input devices
- Connecting audio devices
- Sending, receiving, and browsing files through OBEX (Object Exchange)
- Pairing

The pre compiled package is as follows:

```
blueman/
└─ blueman_ 2.1.4-1_ arm64.deb
```

Rockchip changes the Bluetooth package mainly to fix some Bluetooth issues such as keyboards/speakers.

5.20 rktoolkit

Rktoolkit is a specialized toolkit for Rockchip, such as 'io/update/vendor' _ Storage, etc.:

The pre compiled package is as follows:

```
rktoolkit/
├─ rktoolkit_ 1.0.0-1_ arm64.deb
└─ rktoolkit-dbgSYM_ 1.0.0-1_ arm64.deb
```

5.21 xserver

X server is the abbreviation of graphical interface server in Linux system. Common Linux interface operating environments include KDE and GNOME, and X server provides system support for them. Currently, Debian uses the lightweight LXDE desktop environment, and there are many Linux desktop environments and window managers, the comparisons between them are as follows:

Desktop Environment/ Window Manager	Memory Usage	CPU Usage	Type
KDE 4.6	363MB	4%	Desktop Environment
Unity	271MB	14%	Desktop Environment (shell)
GNOME 3	193MB	10%	Desktop Environment
GNOME 2.x	191MB	1%	Desktop Environments
XFCE 4.8	144MB	10%	Desktop Environment
LXDE	85MB	10%	Desktop Environment
IceWM	85MB	2%	Desktop Environment
Enlightenment (E17 Standard)	72MB	1%	Window Manager
Fluxbox	69MB	1%	Window Manager
OpenBox	60MB	1%	Window Manager
JWM	58MB	1%	Window Manager

The Xserver provided by Rockchip has supported for two acceleration modes, glamor and exa. They are mainly configured through the file `/etc/X11/xorg.conf.d/20-modesetting.conf`.

Glamor uses GPU for display rendering, and exa uses RGA for display rendering.

The detailed configuration files are described as follows:

```
root@linaro-alip:~# cat /etc/X11/xorg.conf.d/20-modesetting.conf .
Section "Device"
    Identifier "Rockchip Graphics"
    Driver      "modesetting"

### Use Rockchip RGA 2D HW accel
```

```
# Option "AccelMethod" "exa"

### Use GPU HW accel
Option "AccelMethod" "glamor"

Option "DRI" "2"

### Set to "always" to avoid tearing, could lead to up 50% performance loss
Option "FlipFB" "always"

### Limit flip rate and drop frames for "FlipFB" to reduce performance lost
# Option "MaxFlipRate" "60"

Option "NoEDID" "true"
Option "UseGammaLUT" "true"
EndSection

Section "Screen"
Identifier "Default Screen"
Device "Rockchip Graphics"
Monitor "Default Monitor"
EndSection

### Valid values for rotation are "normal", "left", "right"
Section "Monitor"
Identifier "Default Monitor"
Option "Rotate" "normal"
EndSection
```

The pre-built packages are as follows:

```
Debian10 xserver/
├─ xserver-common_1.20.4-1+deb10u3_all.deb
├─ xserver-xorg-core_1.20.4-1+deb10u3_arm64.deb
├─ xserver-xorg-legacy_1.20.4-1+deb10u3_arm64.deb
└─ xserver-xorg-dev_1.20.4-1+deb10u3_arm64.deb

Debian11 xserver/
├─ xserver-common_1.20.11-1_all.deb
├─ xserver-xorg-core_1.20.11-1_arm64.deb
├─ xserver-xorg-dev_1.20.11-1_arm64.deb
└─ xserver-xorg-legacy_1.20.11-1_arm64.deb
```

Boot log is in `/var/log/Xorg*`, you can check the version of Xserver by the following way:

```
root@linaro-alip:~# cat /var/log/Xorg.0.log |grep "X.Org X Server"
X.Org X Server 1.20.11
```

The commit corresponding to Rockchip modification can be checked as follows:

```
root@linaro-alip:~# cat /var/log/Xorg.0.log |grep xorg-server
[ 26.786] xorg-server f805fe554 modesetting: Filter out invalid format
modifiers (https://www.debian.org/support)
```


6. Basic Abilities of Debian Development

6.1 Rebuild Debian Software Packages

Steps to modify and repackage [Debian third-party packages](#) are as follows:

- `apt-get build-dep <pkg>` ##Install compilation dependent packages
- `apt source <pkg>` ##Download the source code of `<pkg>` package
- create git, add patches
- `dpkg-buildpackage -b -uc -us -d` ## repackage and build

For example, change Xserver software package, modify and repackage deb as follows:

```
# Pay attention to confirmation the deb-src is enabled in
`/etc/apt/sources.list`, and update the source code of apt

# Install dependent packages

`apt-get build-dep xorg-server-source`

# Download Xorg-xserver source code

- `apt source xorg-server-source`

# Create git, add patches
$ cd xorg-server_*
$ git init && git add .
$ git commit -s "xxxxx"

# Begin to build and package deb
dpkg-buildpackage -b -uc -us
```

6.2 Build Debian Docker

Currently, it is supported to build Docker and build related source code through PC, and package into a deb which is easy to integrate into the system.

Please refer to the document for details:

`<SDK>/docs/cn/Linux/ApplicationNote/Rockchip_Developer_Guide_Debian_Docker_EN.pdf`

6.3 Debian Partition Management

At present, resize-all.service related services are added to support resizing and other functions of partitions in various formats.

System services are available in `/lib/systemd/system/resize-all.service` and the main execution file are `/usr/bin/resize-helper`

The debug log is in `/tmp/resize-all.log` as follows:

```
root@linaro-alip:~# cat /tmp/resize-all.log
Will now resize all partitions in /proc/mounts
```

```

Handling /dev/root / ext4 rw,relatime
Resizing /dev/mmcblk2p6(ext4)
resize2fs 1.46.2 (28-Feb-2021)
Filesystem at /dev/mmcblk2p6 is mounted on /; on-line resizing required
old_desc_blocks = 1, new_desc_blocks = 1
The filesystem on /dev/mmcblk2p6 is now 1572864 (4k) blocks long.

Handling devtmpfs /dev devtmpfs
rw,relatime,size=1993072k,nr_inodes=498268,mode=755
Handling proc /proc proc rw,relatime
Handling sysfs /sys sysfs rw,relatime
Handling securityfs /sys/kernel/security securityfs
rw,nosuid,nodev,noexec,relatime
Handling tmpfs /dev/shm tmpfs rw,nosuid,nodev,noexec
Handling devpts /dev/pts devpts rw,relatime,gid=5,mode=620,ptmxmode=666
Handling tmpfs /run tmpfs rw,nosuid,nodev,size=801828k,nr_inodes=819200,mode=755
Handling tmpfs /run/lock tmpfs rw,nosuid,nodev,noexec,relatime,size=5120k
Handling cgroup2 /sys/fs/cgroup cgroup2
rw,nosuid,nodev,noexec,relatime,nsdelegate,memory_recursiveprot
Handling pstore /sys/fs/pstore pstore rw,relatime
Handling configfs /sys/kernel/config configfs rw,relatime
Handling debugfs /sys/kernel/debug debugfs rw,relatime
Handling tracefs /sys/kernel/tracing tracefs rw,nosuid,nodev,noexec,relatime
Handling fusectl /sys/fs/fuse/connections fusectl rw,nosuid,nodev,noexec,relatime
Handling tmpfs /tmp tmpfs rw,relatime
Handling /dev/mmcblk2p7 /oem ext4 rw,relatime
Handling /dev/mmcblk2p8 /userdata ext4 rw,relatime
Handling adb /dev/usb-ffs/adb functionfs rw,relatime

```

6.4 Debian Graphics Adaptation Solution

At present, it mainly supports the display architecture of X11 and Wayland, and the widely used combinations are as follows:

- X11 system default adaptation combination:

```
xfce4/lxde+xserver+lightdm
```

- Wayland system default adaptation combination:

```
gnome+wayland+gdm3
```

6.4.1 Display Architecture Adaptation Solution

- X11/Xserver is currently configured with LXDE/XFCE lightweight desktop environment, and the desktop manager uses lightdm
- WAYLAND is currently configured with GNOME mainstream desktop environment, and the desktop manager uses gdm3

6.4.2 Window Management Adaptation Solution

- Openbox

Openbox is the standard window manager, with fast, lightweight and extensible features. Openbox 3 series is a completely new window manager, which does not inherit the code of any previous similar software, although it still looks like Blackbox (the code of Openbox 2 series is based on Blackbox 0.65.0). Openbox can be used as an independent operating environment, and it can also be used only as a window manager to replace the default window manager of desktop environments such as KDE and Gnome.

- KWin

KWin is a [window manager](#) in the [X Window](#) system, which is a part of K [Desktop Environment \(KDE\)](#), although it can be used independently Or for other desktop environments. In KDE 4, KWin added support for combination mode and [OpenGL](#).

- Xfwm

The original window manager of Xfwm4 is Xfce4, which uses a simple and flexible pixmap-based theme engine, using images in the .xpm format. Xfwm4 also uses a text file to configure other options. In addition, you can also choose gtk theme colors, which will be described in the gtk color section of the document.

6.4.3 Desktop Environment Adaptation Solution

- GNOME

As a new version of GNOME, GNOME 3 has obvious changes compared with GNOME 2.x. GNOME 3 is relatively intuitive. You can click "Activity" in the upper left corner or swipe to view applications, work partitions, etc.

Currently, Debian or other distributions use GNOME 3 as the default desktop environment.

- KDE

KDE has a gorgeous Windows-like "Start Menu" interface. Many distributions such as OpenSUSE, PCLinuxOS and Mandriva use KDE as the default desktop environment.

- XFCE

With fewer resources occupation than GNOME and KDE, XFCE is suitable for lightweight desktops and similar to the windows interface environment.

- LXDE

LXDE is also one of the four major desktop environments, a lightweight desktop that takes up less resources.

6.4.4 Chromium Adaptation Solution

6.4.4.1 Introduction

Chromium browser supports H264\VP8\VP9 and other video formats, but does not support H265. Currently, Debian has integrated the support of Chromium video hard decoding, and adopts customized chromium+v4l2 plugin+mpp efficient hard decoding.

Customized Chromium should modify as follows:

- Modify chromium to enable v4l2 vda support, and related patches
- Add v4l2 mpp plugin

Disadvantages are:

- a. Support vp8, h264, vp9 Only
- b. Should modify and build chromium (build the whole process of yocto)

Currently, we provide chromium wayland patches, which are supported yocto and buildroot, and are used by a few customers.

The general process is that chromium enables V4L2 VDA/VEA, boots and creates a virtual v4l2 node, and operation of chromium on the virtual device will be intercepted by v4l-utils to v4l-rkmpp plug-in, and change to call mpp interface.

6.4.4.2 Version

```
root@linaro-alip:~# chromium --version
Chromium 91.0.4472.164 stable
```

6.4.4.3 How to Test

Test with the following command:

```
chromium --no-sandbox file:///usr/local/test.mp4
```

The detailed test script is in /usr/local/bin/test_dec-chromium.sh

```
root@linaro-alip:~# /rockchip-test/chromium/test_chromium_with_video.sh
[2588:2588:0214/104846.535688:ERROR:gpu_init.cc(440)] Passthrough is not
supported, GL is egl
...
```

Linux4.19/5.10 can use the following command to check whether to call the hard solution

```
export mpp_syslog_perror=1
echo 0x100 > /sys/module/rk_vcodec/parameters/mpp_dev_debug
```

Linux4.4 can use the following command to check whether to call the hard solution

```
export mpp_syslog_perror=1
echo 0x4 > /sys/module/rk_vcodec/parameters/debug
```

6.4.4.4 How to Debug

If you encounter some problems, turn on the following switches to get more logs for debugging.

```
export mpi_debug=1
export mpp_debug=1
export h264d_debug=1
```

You can check GPU usage to see if hard acceleration is useful:

```
cat /sys/devices/platform/*gpu/utilisation
```

If the acceleration or hard solution is useless, then analyze the GPU-related issues or lib4l adaptation issues or some permissions related issues.

For example, create related device nodes in `/etc/init.d/rockchip.sh`

```
# Create dummy video node for chromium V4L2 VDA/VEA with rkmpv plugin
echo dec > /dev/video-dec0
echo enc > /dev/video-enc0
chmod 660 /dev/video-*
chown root.video /dev/video-*

# The chromium using fixed pathes for libv4l2.so
ln -rsf /usr/lib/*/libv4l2.so /usr/lib/
[ -e /usr/lib/aarch64-linux-gnu/ ] && ln -Tsf lib /usr/lib64
```

In addition, handle the permissions of related kernel nodes of `/etc/udev/rules.d/99-rockchip-permissions.rules` :

```
ACTION=="remove", GOTO="permissions_end"

# VPU devices
KERNEL=="avsd", MODE="0660", GROUP="video"
KERNEL=="vepu", MODE="0660", GROUP="video"
KERNEL=="h265e", MODE="0660", GROUP="video"
KERNEL=="rkvddec", MODE="0660", GROUP="video"
KERNEL=="rkvinc", MODE="0660", GROUP="video"
KERNEL=="mvp_service", MODE="0660", GROUP="video"
KERNEL=="vpu[_]service", MODE="0660", GROUP="video"
KERNEL=="hevc[_]service", MODE="0660", GROUP="video"

# RGA device
KERNEL=="rga", MODE="0660", GROUP="video"

# MALI devices (/dev/mali for mali400)
KERNEL=="mali*", MODE="0660", GROUP="video"
```

6.4.4.5 Performance Testing

Display is in GPU acceleration mode by default. The general process of video hardware solution is to enable V4L2 VDA/VEA in chromium, create a virtual v4l2 node when booting, and the operation of chromium on the virtual device will be intercepted by v4l-utils to the v4l-rkmpv plug-in, and change to call mpp interface. Commonly used webpage test browsers are as follows:

- [ARES-6](#)

ARES-6 measures the execution time of the latest JavaScript features, and browsers that start quickly and run smoothly have more advantages.

- [Basemark Web 3.0](#)

Basemark Web 3.0 is a comprehensive web browser performance benchmark that tests the ability of browser to run web applications, measuring real-world client-side performance to test the bottleneck of browser.

- [JetStream 2](#)

JetStream 2 is a JavaScript and WebAssembly benchmark suite focused on most advanced web applications. Browsers that boot quickly, execute code quickly, and run smoothly get higher scores.

- [MotionMark 1.2](#)

MotionMark is a graphics benchmark that measures a browser's capability to animate complex scenes at a target frame rate.

- [Octane](#)

Octane, an early general JavaScript performance benchmark, has been retired. It can indeed measure the performance of JS engine, but it cannot truly reflect the optimization of JS engine for web applications in real-world. Optimizations made for Octane often have little impact on real-world web pages, and in some cases, these optimizations can slow down real-world websites.

- [Speedometer 2.1](#)

Speedometer is a browser benchmark that measures the responsiveness of web applications. It uses a demo web application to simulate user actions, such as adding a to-do item. Compared with Octane, Speedometer reflect the optimization of JS engine for real-world web applications more truly.

6.4.4.6 Obtaining Other Information

If you need more chromium information, you can enter `chrome://about` in the URL to get it.

```
List of Chrome URLs
chrome://about
...
chrome://flags
chrome://gcm-internals
chrome://gpu
chrome://help
chrome://histograms
chrome://history
chrome://indexeddb-internals
chrome://inspect
chrome://interstitials
chrome://invalidations
chrome://settings
chrome://version
chrome://webrtc-internals
chrome://webrtc-logs
List of chrome://internals pages
chrome://internals/web-app
```

For Debug

The following pages are for debugging purposes only. Because they crash or hang the renderer, they're not linked directly; you can type them into the address bar if you need them.

```
chrome://badcastcrash/
chrome://memory-exhaust/
chrome://memory-pressure-critical/
chrome://memory-pressure-moderate/
...
```

```
chrome://quit/  
chrome://restart/
```

6.4.5 Debian Boot Logo or Animation Adaptation

Currently, Xserver/Weston has added support for boot animation.

The system service is in `/lib/systemd/system/bootanim.service`, and the main execution file is `/usr/bin/bootanim`

For example, create a file that required to be played in `/etc/bootanim.d/`, and debug log is in `/tmp/bootanim.log`

```
/etc/bootanim.d/gst-bootanim.sh  
  
#!/bin/sh  
gst-play-1.0 /etc/bootanim.d/bootanim.mp4 -q --no-interactive  
  
commit 90103840728382ae5e950650ffdf1197e4985974  
Author: Caesar Wang <wxt@rock-chips.com>  
Date: Thu Oct 20 15:37:38 2022 +0800  
  
    overlay: add bootanim  
  
    Create /etc/bootanim.d/gst-test.sh  
        gst-launch-1.0 videotestsrc ! kmssink &>/dev/null  
  
Signed-off-by: Caesar Wang <wxt@rock-chips.com>  
Change-Id: I90761eb5ba4b90c04793a4cc959165f6b70c01b0
```

6.4.6 Debian Panfrost Adaptation Solution

Please refer to Debian official website [Panfrost Adaptation](#)

6.5 Debian Audio and Video Adaptation Solution

Firstly, introduce the general process of video encoding and decoding on Rockchip platforms as follows:

```
vpu_service --> mpp --> gstreamer/rockit --> app  
vpu_service: driver  
mpp: video codec middleware for rockchip platform, please refer to mpp document  
for related introduction  
gstreamer/rockit/rkmedia: components for connecting apps
```

At present, GStreamer is mainly used to connect apps and codec components in Debian systems.

The codec function can also be tested directly through the mpp test interface (such as `mpi_dec_test\mpi_enc_test...`)

For mpp source code, please refer to `<SDK>/external/mpp/`

For test demo, please refer to `<SDK>/external/mpp/test`

For more details, please refer to SDK document “Rockchip_Developer_Guide_MPP_CN.pdf”

6.5.1 Audio Pulseaudio Channel Adaptation

The default audio uses pulseaudio, Generally, you only need to configure `/etc/pulse/default.pa`

Currently, the SDK is compatible with two Codecs, ES8388 and RK809.

```
+set-default-source alsa_input.platform-es8388-  
sound.HiFi__hw_rockchipes8388__source  
+set-default-sink alsa_output.platform-es8388-sound.HiFi__hw_rockchipes8388__sink  
+set-default-source alsa_input.platform-rk809-  
sound.HiFi__hw_rockchiprk809__source  
+set-default-sink alsa_output.platform-rk809-sound.HiFi__hw_rockchiprk809__sink
```

If you need to add more Codec support, get relevant information through the following commands.

```
pactl list sinks short  
pactl list sources short
```

For details, refer to Debian official website [Pulseaudio](#) and

`<SDK>/docs/Common/AUDIO/Rockchip_Developer_Guide_PulseAudio_CN.pdf`

6.5.2 MPP and VPU Adaptation

The default MPP is pre-compiled into deb and integrated in

```
/usr/lib/aarch64-linux-gnu/librockchip_mpp.so  
/usr/lib/aarch64-linux-gnu/librockchip_mpp.so.0  
/usr/lib/aarch64-linux-gnu/librockchip_mpp.so.1
```

At the same time, make sure that the kernel has `/dev/mpp_service` related nodes.

Please refer to the document:

`<SDK>/docs/Linux/Multimedia/Rockchip_Developer_Guide_MPP_CN.pdf` for details.

6.5.3 GStreamer Adaptation

Please refer to the document:

`<SDK>/docs/Linux/Multimedia/Rockchip_User_Guide_Linux_Gstreamer_CN.pdf` for details.

6.5.4 Rockit Adaptation

Please refer to the document:

`<SDK>/docs/Linux/Multimedia/Rockchip_User_Guide_Linux_Rockit_CN.pdf` for details.

6.6 Debian Network Adaptation Solution

6.6.1 RKWIFIBT Adaptation

Please refer to the document:

`<SDK>/docs/Linux/Wifibt/Rockchip_Developer_Guide_Linux_WIFI_BT_CN.pdf` for details.

6.7 Debian Camera Adaptation Solution

The default webcam application used by the system is Cheese, which calls 'gstreamer ->mpp ->vpu' to implement the encoding and decoding of the Rockchip platform. If cheese is not needed, Gstreamer can be integrated to directly call USB camera and mipi/csi camera that adapts to Rockchip's 3A effect. For example, the test script is as follows:

```
/rockchip-test$ tree -L 1 camera/
camera/
├─ camera_rkaiq_test.sh
├─ camera_rkisp_test.sh
├─ camera_stresstest.sh
├─ camera_test.sh
└─ camera_usb_test.sh
```

6.7.1 rkisp Adaptation

Support for ISP1. X is mainly applicable to chips such as RK3399/RK3288/PX30/RK3326

```
rkisp/
└─ camera_engine_rkisp-v2.2.0_arm64.deb
```

6.7.2 rkaiq Adaptation

Supports different versions of ISPs such as ISP21/30/32-Lite, mainly suitable for RK3566_RK3568/RK3588/RK3562 and other chips.

```
rkaiq/
├─ camera_engine_rkaiq_rk3562_arm64.deb
├─ camera_engine_rkaiq_rk3568_arm64.deb
└─ camera_engine_rkaiq_rk3588_arm64.deb
```

6.8 Debian Power Management Adaptation Solution

Power management in Debian is more complicated, and there are multiple standby ways in different systems, such as: the power_key.sh we added is button standby (pm-utils or writing nodes directly), pm-utils is command standby (writing nodes after executing the hook script).

In the power management of desktop systems such as xfce4, mate, and gnome, automatic standby, UI or button

standby are generally given priority to systemd, and then consolekit or pm-utils systemd (writing nodes directly). Here, systemd uses pm utils firstly by default to realize the process of standby/wake up.

The `overlay/etc/Powermanager` in Debian has integrated related configuration files by default

```
|— 01npu
|— 02npu
|— 03wifibt
|— 04wifibt
|— power-key.conf
|— power-key.sh
|— triggerhappy
|— triggerhappy.service
```

There are some special handling of power management in the `etc/init.d/rockchip.sh`, especially the parts of NPU and RKWIFIBT, and the processing of power button is added at the same time.

```
# support power management
if [ -e "/usr/sbin/pm-suspend" -a -e /etc/Powermanager ] ;
then
    mv /etc/Powermanager/power-key.sh /usr/bin/
    mv /etc/Powermanager/power-key.conf /etc/triggerhappy/triggers.d/
    if [[ "$CHIPNAME" == "rk3399pro" ]];
    then
        mv /etc/Powermanager/01npu /usr/lib/pm-utils/sleep.d/
        mv /etc/Powermanager/02npu /lib/systemd/system-sleep/
    fi
    mv /etc/Powermanager/03wifibt /usr/lib/pm-utils/sleep.d/
    mv /etc/Powermanager/04wifibt /lib/systemd/system-sleep/
    mv /etc/Powermanager/triggerhappy /etc/init.d/triggerhappy

    rm /etc/Powermanager -rf
    service triggerhappy restart
fi
```

If there are other special modules that need wake-up processing, they can be placed in the following two configuration directories.

```
/usr/lib/pm-utils/sleep.d/ and /lib/systemd/system-sleep/
```

please refer to the `/rockchip-test/suspend_resume/suspend_resume.sh` for standby/wake-up test.

For other chip-related standby/wake-up processing, please refer to the development document

`<SDK>/docs/cn/Common/TRUST/Rockchip_RK3588_Developer_Guide_System_Suspend_CN.pdf`.

6.9 Debian AI Adaptation Solution

NPU related adaptation on the Rockchip platform, RKNPU is mainly used to achieve model conversion, model inference, model performance evaluation functions, etc

6.9.1 RKNPU Adaptation

Mainly used for RK3568/RK3566/RK3588

```
rknpu2/  
└─ rknpu2-v1.4.0.tar
```

6.9.2 RKNN Test Demo Adaptation

Mainly including NPU frequency conversion/pressure/demo related tests

```
/rockchip-test/npu2/  
├─ npu_freq_scaling.sh  
├─ npu_stress_test.sh  
├─ npu_test.sh  
├─ rknn_demo.sh  
└─ rknn_stress_test
```

6.10 Debian Security Upgrade Adaptation Solution

6.10.1 Secureboot Security Adaptation

Please refers to

[<SDK>/docs/en/Linux/Security/Rockchip_Developer_Guide_Linux_Secure_Boot_EN.pdf](#) for details.

6.10.2 Recovery Upgrade Adaptation

Please refers to

[<SDK>/docs/en/Linux/Recovery/Rockchip_Developer_Guide_Linux_Recovery_EN.pdf](#) for details.

6.10.3 OTA Upgrade Adaptation

Please refers to

[<SDK>/docs/en/Linux/Recovery/Rockchip_Developer_Guide_Linux_Upgrade_EN.pdf](#) for details.

6.11 Debian Touch Adaptation Solution

Xserver configuration needs to be configured, with maxix related parameters configured

Or test it with the command line

xinput map-to-output

6.12 Debian USB Device Adaptation Solution

At present, usbdevice related services are added to support usb adb/acm/hid/mtp/ntb/rndis/uac1/uac2/ums/uvc and other functions

The system service is in `/lib/systemd/system/usbdevice.service`, and the main execution file is `/usr/bin/usbdevice`

You can configure usb-related functions through `/etc/profile.d/usbdevice.sh`, for example:

```
#!/bin/sh

# The env variables below can be overridden

# option: adb acm hid mtp ntb rndis uac1 uac2 ums uvc
export USB_FUNCS="adb"

export UMS_FILE=/userdata/ums_shared.img
export UMS_SIZE=256M
export UMS_FSTYPE=vfat
export UMS_MOUNT=0
export UMS_MOUNTPOINT=/mnt/ums
export UMS_RO=0
```

The debugging log is in `/tmp/usbdevice.log`, and the functions supported by USB can be checked through the configuration file `/tmp/.usbdevice`

6.13 Debian Sensor Adaptation Solution

gsensor/lensor..

6.14 Debian System Information

6.14.1 Debian Version Number

```
root@linaro-alip:~# cat /etc/debian_version
11.3
```

6.14.2 Debian Version Information

```
root@linaro-alip:~# cat /etc/os-release
PRETTY_NAME="Debian GNU/Linux 11 (bullseye)"
NAME="Debian GNU/Linux"
VERSION_ID="11"
VERSION="11 (bullseye)"
VERSION_CODENAME=bullseye
ID=debian
HOME_URL="https://www.debian.org/"
SUPPORT_URL="https://www.debian.org/support"
BUG_REPORT_URL="https://bugs.debian.org/"
BUILD_INFO="root@pc 2022年 04月 27日 星期三 11:49:33 CST"
```

6.14.3 Debian System Hardware Information

```
root@linaro-alip:~# hardinfo -r
Computer
Summary
Operating System
Kernel Modules
Boots
Languages
Filesystems
Display
Environment Variables
Development
Users
Groups
...
```

6.14.4 Debian System Log Information

```
/info/
├─ clk_summary -> /sys/kernel/debug/clk/clk_summary
├─ cmdline -> /proc/cmdline
├─ cpuinfo -> /proc/cpuinfo
├─ device-tree -> /proc/device-tree
├─ diskstats -> /proc/diskstats
├─ dma_buf -> /sys/kernel/debug/dma_buf
├─ dri -> /sys/kernel/debug/dri
├─ fstab -> /etc/fstab
├─ gpio -> /sys/kernel/debug/gpio
├─ interrupts -> /proc/interrupts
├─ iomem -> /proc/iomem
├─ kallsyms -> /proc/kallsyms
├─ log -> /var/log
├─ meminfo -> /proc/meminfo
├─ mountall.log -> /tmp/mountall.log
├─ os-release -> /etc/os-release
├─ partitions -> /proc/partitions
├─ pinctrl -> /sys/kernel/debug/pinctrl/
├─ rkcif-mipi-lvds -> /proc/rkcif-mipi-lvds
├─ rk_dma_buf -> /proc/rk_dma_buf
```

```

└─ rkisp0-vir0 -> /proc/rkisp0-vir0
└─ slabinfo -> /proc/slabinfo
└─ softirqs -> /proc/softirqs
└─ version -> /proc/version
└─ wakeup_sources -> /sys/kernel/debug/wakeup_sources

...

```

6.15 Debian Cropping

Debian requires more and more memory space as features are added in new release versions. Here are some component cropping for the desktop version on the Rockchip arm platform.

If you want to simplify the firmware, the following items can be cropped:

- base firmware package, such as

```

debian/ubuntu-build-service/bullseye-desktop-arm64/customization/package-
lists/linaro.list.chroot

```

- Newly added package for rockchip shell script

```

mk-rootfs-buster.sh

```

In addition, the following items can be cropped in the firmware:

- The libgl1-mesa-dri package of mesa, only kms_swrast_dri.so and swrast_dri.so are reserved under /usr/lib/*/dri/, others are useless.
- The linux-firmware package (if there is), /usr/lib/firmware, only keep the firmware you need (generally, customers do not need it)
- In packages, only keep the x11 mali package corresponding to your chip
- var/cache

In addition, you can also adjust the image file size of dd in mk-image.sh when making an image, for example

```

truncate -s 2500M rootfs.img
mkfs.ext4 -d binary rootfs.img

```

The general space occupied by the system is as follows:

```

root@pc:/# du -sh */
120M    bin/
22M boot/
12K dev/
10M etc/
20K home/
1.6G    lib/
4.0K    media/
4.0K    mnt/
4.0K    opt/
4.0K    proc/
36M rockchip-test/
28K root/
44K run/

```

```
26M sbin/
4.0K  srv/
4.0K  sys/
18M system/
4.0K  tmp/
1.3G  usr/
73M  var/
8.0K  vendor/
```

6.16 Debian Testing

- Integrate Rockchip stress test script

The rockchip_test integrates functional, stress, and performance related tests:

```
root@linaro-alip:~# /rockchip-test/rockchip_test.sh

cpu test:          1 (cpufreq stresstest)
ddr test:          2 (memtester & stressapptest)
gpu test:          3 (use glmark2)
npu test:          4 (npu2:rk3588)
auto reboot test:  5 (reboot tests)
suspend_resume test: 6 (suspend & resume)
nand power lost test: 7 (S5 stress tests)
flash stress test:  8 (flash tests)
audio test:        9 (audio tests)
recovery test:     10 (default wipe all)
bluetooth test:    11 (bluetooth on&off test)
wifi test:         12 (wifi on&off test)
ethernet test:     13 (ethernet tests)
camera test:       14 (use rkaiq_demo)
video test:        15 (use gstreamer-wayland and app_demo)
chromium test:     16 (chromium with video hardware acceleration)
hardware infomation: 17 (to get the hardware infomation)

*****
please input your test moudle:
```

6.17 Debian Debugging Tools

6.17.1 ADB Tools

6.17.1.1 ADB Overview

- Run the device's shell (command line)
- Manage port mappings of emulators or devices
- Upload/download files between computer and device
- Install local software to Debian devices

- ADB is a "client-server" program, where the client mainly refers to PC, and the server is the physical machine or virtual machine of Debian device. Depending on the way of PC connects to Debian device, ADB can be divided into two types:

Network ADB: The host is connected to STB device through a wired/wireless network (in the same LAN)

USB ADB: The host is connected to STB device via a USB cable

6.17.1.2 USB ADB Usage

USB ADB usage has the following limitations:

- Only support USB OTG port
- Does not support multiple clients at the same time
- Only supports host connecting to one device instead of multiple devices

The connection steps are as follows:

Test whether the connection is successful, run the "adb devices" command, if the serial number of the device is displayed, it means the connection is successful.

7. Debian FAQ

This chapter is going to answer some frequently asked questions about Debian GNU/Linux based on the Rockchip platform. For other questions, please refer to the official website [Debian FAQ](#).

7.1 "noexec or nodev" Issue

```
noexec or nodev issue /usr/share/debootstrap/functions: line 1450:
..../rootfs/ubuntu-build-service/buster-desktop-arm64/chroot/test-dev-null:
Permission denied E: Cannot install into target '/rootfs/ubuntu-build-
service/buster-desktop-arm64/chroot' mounted with noexec or nodev
```

Solution:

```
mount -o remount,exec,dev xxx
(The xxx is the path of project's directory, and then rebuild)
```

In addition, if other compilation exceptions are encountered, first check that the compilation system used is not the system type of ext2/ext4.

7.2 Failed to Download "Base Debian"

- Since building Base Debian needs to visit foreign websites, and when using domestic networks to visit foreign websites, download failures often occur:

To uses live build in Debian, configured like followings to change the image source to domestic:

32-bit system:

```
+++ b/ubuntu-build-service/{buster/bullseye}-desktop-armhf/configure
@@ -11,6 +11,11 @@ set -e
echo "I: create configuration"
export LB_BOOTSTRAP_INCLUDE="apt-transport-https gnupg"
lb config \
+ --mirror-bootstrap "http://mirrors.ustc.edu.cn/debian" \
+ --mirror-chroot "http://mirrors.ustc.edu.cn/debian" \
+ --mirror-chroot-security "http://mirrors.ustc.edu.cn/debian-security" \
+ --mirror-binary "http://mirrors.ustc.edu.cn/debian" \
+ --mirror-binary-security "http://mirrors.ustc.edu.cn/debian-security" \
--apt-indices false \
--apt-recommends false \
--apt-secure false \
```

64-bit system:

```
--- a/ubuntu-build-service/{buster/bullseye}-desktop-arm64/configure
+++ b/ubuntu-build-service/{buster/bullseye}-desktop-arm64/configure
@@ -11,6 +11,11 @@ set -e
echo "I: create configuration"
export LB_BOOTSTRAP_INCLUDE="apt-transport-https gnupg"
lb config \
+ --mirror-bootstrap "http://mirrors.ustc.edu.cn/debian" \
+ --mirror-chroot "http://mirrors.ustc.edu.cn/debian" \
+ --mirror-chroot-security "http://mirrors.ustc.edu.cn/debian-security" \
+ --mirror-binary "http://mirrors.ustc.edu.cn/debian" \
+ --mirror-binary-security "http://mirrors.ustc.edu.cn/debian-security" \
--apt-indices false \
--apt-recommends false \
--apt-secure false \
```

If the package cannot be downloaded due to other network reasons, there is a pre-built package to share in [Baidu Cloud Network Disk](#), place it in the current directory and execute the next step directly .

7.3 Abnormal Operation Causes an error to Mount /dev

For example, like "askpass command or cannot use one" appears

It may be frequent abnormal operations (CTRL+C) during the compilation process, and the above errors can be fixed by the following way:

```
sudo -S umount /dev
```

7.4 Multiple Mounts lead to /dev error

For example: sudo: unable to allocate pty: No such device appears

The reason may be that the compilation process has been mounted multiple times, resulting in the above error, which can be fixed by the following way:

```
ssh <username>@<IP address> -T sudo -S umount /dev -l
```

7.5 How to Check System Related Information

7.5.1 How to Check the Debian Version of Your System

```
root@linaro-alip:~# cat /etc/debian_version
11.1
```

7.5.2 How to Check Whether the Debian Display Uses X11 or Wayland

On X11 systems:

```
$ echo $XDG_SESSION_TYPE
x11
```

On X11 systems:

```
$ echo $XDG_SESSION_TYPE
wayland
```

7.5.3 How to Check System Partition Status

```
root@linaro-alip:~# parted -l

Model: MMC BJTD4R (sd/mmc)
Disk /dev/mmcblk0: 31.3GB
Sector size (logical/physical): 512B/512B
Partition Table: gpt
Disk Flags:

Number   Start    End      Size    File system  Name      Flags
  1      8389kB   12.6MB   4194kB                uboot
  2      12.6MB   16.8MB   4194kB                misc
  3      16.8MB   83.9MB   67.1MB                boot
  4      83.9MB   218MB    134MB                recovery
  5      218MB    252MB    33.6MB                backup
  6      252MB    15.3GB   15.0GB   ext4           rootfs
  7      15.3GB   15.4GB   134MB    ext2           oem
  8      15.6GB   31.3GB   15.6GB   ext2           userdata
```

7.5.4 The ssh.service Is Abnormal in System

This is a problem of Debian10 or earlier version, please add the following code in the /etc/rc.local:

```
#!/bin/sh -e
#
# rc.local
#
```

```
# This script is executed at the end of each multiuser runlevel.
# Make sure that the script will "exit 0" on success or any other
# value on error.
#
# In order to enable or disable this script just change the execution
# bits.
#
# By default this script does nothing.
# Generate the SSH keys if non-existent
if [ ! -f /etc/ssh/ssh_host_rsa_key ]
then
    # else ssh service start in dpkg-reconfigure will fail
    systemctl stop ssh.socket||true
    dpkg-reconfigure openssh-server
fi

exit 0
```

7.6 Debian11 Base Package Fails to Build

An error similar to the following will be encountered:

```
W: Failure trying to run: /sbin/ldconfig
W: See //debootstrap/debootstrap.log for details
```

It is mainly required that the kernel version of the PC should be 5.10+, which is a bug in the old QEMU. There are two solutions:

- The kernel version that comes with the PC must meet the requirements of 5.10+.

The way to check PC's Kernel Version:

```
cat /proc/version
Linux version 5.13.0-39-generic
```

- Update system's qemu

Please refer to [qemu](#).

7.7 How to Decompress, Modify and Repackage Debian deb Package

If you want to modify and repackage on the original deb, please refer to the follow way:

```
#Decompress the files in the package to the extract directory
dpkg -X xxx.deb extract/

#Decompress the control information of the package under extract/DEBIAN/:
dpkg -e xxx.deb extract /DEBIAN/

#Modify the file XXX

# Repackage the modified content to generate a deb package
dpkg-deb -b extract/ .
```

7.8 How to Add the Swap Partition in Debian

When the physical memory of the system is not enough, you can add Debian's swap virtual memory partition for the current running program. For example, create a 2G virtual memory

- Create a swap file

```
cd /opt
mkdir swap
dd if=/dev/zero of=swapfile bs=1024 count=2000000
# count represents the size, here is 2G.
```

- Convert files to swap files

```
sudo mkswap swapfile
```

- Activate the swap file

```
swapon /opt/swapfile

Uninstall:
swapoff /opt/swapfile
```

If it is automatically mounted after booting, you can add it to the /etc/fstab file
eg : /opt/swapfile swap swap defaults 0 0

- Verify whether it is in effect

```
root@linaro-alip:/opt# free -h
```

	total	used	free	shared	buff/cache	available
memory:	1.9Gi	390Mi	91Mi	75Mi	1.5Gi	1.4Gi
swap:	1.9Gi	0B	1.9Gi			

```
e =h
```

7.9 Update Debian System for the First Time Will Restart the Display Service

In general, in order to be compatible with different chips, when Debian starts for the first time, `/etc/init.d/rockchip.sh` will install various differential packages according to the chip, such as `libmali-isp` and other packages. After installation, the display service will be restarted. If it is an independent project, it can be placed in the image to process this difference.

7.10 Errors Occurring in Debian When Calling libGL related dri.so

Introduction as follows:

- EGL is an extension of OpenGL on the ARM platform for the x window system, and its function is equivalent to the `glx` library under x86.
- Since the driver modesettings used by Xorg will load `libglx.so` by default (disabling `glx` will cause some applications which detecting through `glx` environment fail to start), `libglx.so` will search for the dri library in the system. However, Xorg 2D acceleration is implemented directly based on DRM and does not implement the dri library, so `libglx.so` will report the following error during booting.

```
AIGLX error: dlopen of /usr/lib/aarch64-linux-gnu/dri/rockchip_dri.so failed`
```

It has no influence on system operation, please ignore it.

Similarly, the following errors will also be reported during the booting process of some applications, please ignore it for it has not influence on applications operation.

```
libGL error: unable to load driver: rockchip_dri.so
libGL error: driver pointer missing
libGL error: failed to load driver: rockchip
```

7.11 How to Confirm that the Hardware Mouse Layer is Useful in Debian

- Configure kernel dts

Similar to the following log:

```
root@linaro-alip:~# dmesg |grep cursor
[ 2.062561] rockchip-vop2 fe040000.vop: [drm:vop2_bind] Cluster1-win0 as cursor
plane for vp0
[ 2.062669] rockchip-vop2 fe040000.vop: [drm:vop2_bind] Cluster0-win0 as cursor
plane for vp1
```

- `modetest` test whether the layer has been reported

```

102      0      0      0,0      0,0      0      0x00000002
  formats: XR30 AR30 XB30 AB30 XR24 AR24 XB24 AB24 RG24 BG24 RG16 BG16 YU08 YU10
YUYV Y210
  props:
    8 type:
      flags: immutable enum
      enums: Overlay=0 Primary=1 Cursor=2
      value: 2

```

- Check if the summary has called the hardware mouse layer

```
root@linaro-alip:~# cat /sys/kernel/debug/dri/0/summary |grep 64x64
```

If there are steps 1/2, and there are still problems, then check whether /var/log/drm-cursor.log has abnormalities.

7.12 The log is Too Large in Debian

Debian provides **logrotate** to manage log files. Logrotate is intended to simplify log file management for systems that will generate many log files. Logrotate supports automatic rotation compression, deletion and sending log related emails. Logrotate can be run daily, weekly, monthly or when the log file size reaches a certain value. Typically, logrotate is run as a daily cron job.

```
apt install -fy logrotate cron
```

7.13 Debian Setting Multi User Mode Issue

When the system starts, the 'systemd' process will try to start '/lib/systemd/system/default.target' (usually the graphical interface system is a symbolic link to "graphical.target"). The status can be obtained through the following command:

```
systemctl get-default graphical.target
```

Setting multi user mode (command line system):

```
systemctl set-default multi-user.target
```

After restarting, it was found that the interface was suspended at the logo and could not access the system. The normal startup sequence of the system is 'sysinit -> multi user -> graphic '. If it is set to 'multi user.target', it means that the graphical interface has not been started. In this case, VT2 (terminal interaction needs to be enabled) is required, which means that the kernel needs to open the following two macros

```
CONFIG_ FRAMEBUFFER_ CONSOLE=y
CONFIG_ VT=y
```

7.14 Debian Username and Password

The default username and password for the system are 'linaro' and 'linaro',

Root 'can log in without a password, and can be accessed through the command line to' sudo su '

7.15 Debian XFCE Desktop icon Double-click Abnormal

XFCE desktop native bug can be resolved by checking 'Settings ->Desktop ->Icon' and clicking on 'Activate Project'.

8. Third Party Open Source Software and License of Debian

For more information about Debian open source, please refer to the official website [legal](#)

9. Debian Reference Materials

Please refer to the official Debian documentations [debian-docs](#)