
MCUXpresso SDK API Reference Manual

NXP Semiconductors

Document Number: MCUXSDKAPIRM
Rev. 0
Jan 2021



Contents

Chapter [Introduction](#)

Chapter [Trademarks](#)

Chapter [Architectural Overview](#)

Chapter [Driver errors status](#)

Chapter [Deprecated List](#)

Chapter [Clock Driver](#)

6.1	Overview	11
6.2	Data Structure Documentation	23
6.2.1	struct ccm_analog_frac_pll_config_t	23
6.2.2	struct ccm_analog_integer_pll_config_t	23
6.3	Macro Definition Documentation	24
6.3.1	FSL_CLOCK_DRIVER_VERSION	24
6.3.2	ECSPI_CLOCKS	24
6.3.3	GPIO_CLOCKS	24
6.3.4	GPT_CLOCKS	24
6.3.5	I2C_CLOCKS	24
6.3.6	IOMUX_CLOCKS	25
6.3.7	IPMUX_CLOCKS	25
6.3.8	PWM_CLOCKS	25
6.3.9	RDC_CLOCKS	25
6.3.10	SAI_CLOCKS	25
6.3.11	RDC_SEMA42_CLOCKS	26
6.3.12	UART_CLOCKS	26
6.3.13	USDHC_CLOCKS	26
6.3.14	WDOG_CLOCKS	26
6.3.15	TMU_CLOCKS	26
6.3.16	SDMA_CLOCKS	27
6.3.17	MU_CLOCKS	27
6.3.18	QSPI_CLOCKS	27

Contents

Section Number	Title	Page Number
6.3.19	PDM_CLOCKS	27
6.3.20	kCLOCK_CoreSysClk	27
6.3.21	CLOCK_GetCoreSysClkFreq	27
6.4	Enumeration Type Documentation	27
6.4.1	clock_name_t	27
6.4.2	clock_ip_name_t	28
6.4.3	clock_root_control_t	29
6.4.4	clock_rootmux_m4_clk_sel_t	30
6.4.5	clock_rootmux_axi_clk_sel_t	31
6.4.6	clock_rootmux_ahb_clk_sel_t	31
6.4.7	clock_rootmux_audio_ahb_clk_sel_t	31
6.4.8	clock_rootmux_qspi_clk_sel_t	32
6.4.9	clock_rootmux_ecspi_clk_sel_t	32
6.4.10	clock_rootmux_i2c_clk_sel_t	32
6.4.11	clock_rootmux_uart_clk_sel_t	33
6.4.12	clock_rootmux_gpt_t	33
6.4.13	clock_rootmux_wdog_clk_sel_t	33
6.4.14	clock_rootmux_Pwm_clk_sel_t	34
6.4.15	clock_rootmux_sai_clk_sel_t	34
6.4.16	clock_rootmux_pdm_clk_sel_t	34
6.4.17	clock_rootmux_noc_clk_sel_t	35
6.4.18	clock_pll_gate_t	35
6.4.19	clock_gate_value_t	36
6.4.20	clock_pll_bypass_ctrl_t	36
6.4.21	clock_pll_clke_t	36
6.4.22	anonymous enum	37
6.5	Function Documentation	37
6.5.1	CLOCK_SetRootMux	37
6.5.2	CLOCK_GetRootMux	38
6.5.3	CLOCK_EnableRoot	38
6.5.4	CLOCK_DisableRoot	38
6.5.5	CLOCK_IsRootEnabled	38
6.5.6	CLOCK_UpdateRoot	39
6.5.7	CLOCK_SetRootDivider	39
6.5.8	CLOCK_GetRootPreDivider	39
6.5.9	CLOCK_GetRootPostDivider	40
6.5.10	CLOCK_ControlGate	40
6.5.11	CLOCK_EnableClock	40
6.5.12	CLOCK_DisableClock	41
6.5.13	CLOCK_PowerUpPll	41
6.5.14	CLOCK_PowerDownPll	41
6.5.15	CLOCK_SetPllBypass	41
6.5.16	CLOCK_IsPllBypassed	42

Contents

Section Number	Title	Page Number
6.5.17	CLOCK_IsPllLocked	42
6.5.18	CLOCK_EnableAnalogClock	42
6.5.19	CLOCK_DisableAnalogClock	43
6.5.20	CLOCK_OverridePllClke	43
6.5.21	CLOCK_OverridePllPd	43
6.5.22	CLOCK_InitArmPll	44
6.5.23	CLOCK_InitSysPll1	44
6.5.24	CLOCK_InitSysPll2	44
6.5.25	CLOCK_InitSysPll3	44
6.5.26	CLOCK_InitAudioPll1	45
6.5.27	CLOCK_InitAudioPll2	45
6.5.28	CLOCK_InitVideoPll1	45
6.5.29	CLOCK_InitIntegerPll	46
6.5.30	CLOCK_GetIntegerPllFreq	46
6.5.31	CLOCK_InitFracPll	46
6.5.32	CLOCK_GetFracPllFreq	47
6.5.33	CLOCK_GetPllFreq	47
6.5.34	CLOCK_GetPllRefClkFreq	47
6.5.35	CLOCK_GetFreq	48
6.5.36	CLOCK_GetCoreM4Freq	48
6.5.37	CLOCK_GetAxiFreq	48
6.5.38	CLOCK_GetAhbFreq	48

Chapter IOMUXC: IOMUX Controller

7.1	Overview	49
7.2	Macro Definition Documentation	68
7.2.1	FSL_IOMUXC_DRIVER_VERSION	68
7.3	Function Documentation	68
7.3.1	IOMUXC_SetPinMux	68
7.3.2	IOMUXC_SetPinConfig	68

Chapter Common Driver

8.1	Overview	70
8.2	Macro Definition Documentation	75
8.2.1	MAKE_STATUS	75
8.2.2	MAKE_VERSION	75
8.2.3	FSL_COMMON_DRIVER_VERSION	75
8.2.4	DEBUG_CONSOLE_DEVICE_TYPE_NONE	75
8.2.5	DEBUG_CONSOLE_DEVICE_TYPE_UART	75
8.2.6	DEBUG_CONSOLE_DEVICE_TYPE_LPUART	75

Contents

Section Number	Title	Page Number
8.2.7	DEBUG_CONSOLE_DEVICE_TYPE_LPSCI	75
8.2.8	DEBUG_CONSOLE_DEVICE_TYPE_USBCDC	75
8.2.9	DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM	75
8.2.10	DEBUG_CONSOLE_DEVICE_TYPE_IUART	75
8.2.11	DEBUG_CONSOLE_DEVICE_TYPE_VUSART	75
8.2.12	DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART	75
8.2.13	DEBUG_CONSOLE_DEVICE_TYPE_SWO	75
8.2.14	ARRAY_SIZE	75
8.3	Typedef Documentation	75
8.3.1	status_t	75
8.4	Enumeration Type Documentation	75
8.4.1	_status_groups	75
8.4.2	anonymous enum	78
8.5	Function Documentation	78
8.5.1	EnableIRQ	78
8.5.2	DisableIRQ	79
8.5.3	DisableGlobalIRQ	79
8.5.4	EnableGlobalIRQ	79
8.5.5	SDK_Malloc	80
8.5.6	SDK_Free	80
8.5.7	SDK_DelayAtLeastUs	80
Chapter	ECSPI: Enhanced Configurable Serial Peripheral Interface Driver	
9.1	Overview	81
9.2	ECSPI Driver	82
9.2.1	Overview	82
9.2.2	Typical use case	82
9.2.3	Data Structure Documentation	87
9.2.4	Macro Definition Documentation	89
9.2.5	Enumeration Type Documentation	89
9.2.6	Function Documentation	92
Chapter	GPC: General Power Controller Driver	
10.1	Overview	105
10.2	Macro Definition Documentation	106
10.2.1	FSL_GPC_DRIVER_VERSION	106
10.3	Enumeration Type Documentation	107
10.3.1	_gpc_lpm_mode	107

Contents

Section Number	Title	Page Number
10.3.2	<code>_gpc_pgc_ack_sel</code>	107
10.3.3	<code>_gpc_standby_count</code>	107
10.4	Function Documentation	107
10.4.1	<code>GPC_AllowIRQs</code>	107
10.4.2	<code>GPC_DisallowIRQs</code>	108
10.4.3	<code>GPC_GetLpmMode</code>	108
10.4.4	<code>GPC_EnableIRQ</code>	108
10.4.5	<code>GPC_DisableIRQ</code>	108
10.4.6	<code>GPC_GetIRQStatusFlag</code>	109
10.4.7	<code>GPC_DsmTriggerMask</code>	109
10.4.8	<code>GPC_WFIMask</code>	109
10.4.9	<code>GPC_SelectPGCAckSignal</code>	109
10.4.10	<code>GPC_PowerDownRequestMask</code>	110
10.4.11	<code>GPC_PGCMapping</code>	110
10.4.12	<code>GPC_TimeSlotConfigureForPUS</code>	110
10.4.13	<code>GPC_EnterWaitMode</code>	110
10.4.14	<code>GPC_EnterStopMode</code>	111
10.4.15	<code>GPC_Init</code>	111
Chapter	GPT: General Purpose Timer	
11.1	Overview	112
11.2	Function groups	112
11.2.1	Initialization and deinitialization	112
11.3	Typical use case	112
11.3.1	GPT interrupt example	112
11.4	Data Structure Documentation	115
11.4.1	<code>struct gpt_config_t</code>	115
11.5	Enumeration Type Documentation	116
11.5.1	<code>gpt_clock_source_t</code>	116
11.5.2	<code>gpt_input_capture_channel_t</code>	116
11.5.3	<code>gpt_input_operation_mode_t</code>	117
11.5.4	<code>gpt_output_compare_channel_t</code>	117
11.5.5	<code>gpt_output_operation_mode_t</code>	117
11.5.6	<code>gpt_interrupt_enable_t</code>	117
11.5.7	<code>gpt_status_flag_t</code>	118
11.6	Function Documentation	118
11.6.1	<code>GPT_Init</code>	118
11.6.2	<code>GPT_Deinit</code>	118
11.6.3	<code>GPT_GetDefaultConfig</code>	118

Contents

Section Number	Title	Page Number
11.6.4	GPT_SoftwareReset	119
11.6.5	GPT_SetClockSource	119
11.6.6	GPT_GetClockSource	119
11.6.7	GPT_SetClockDivider	119
11.6.8	GPT_GetClockDivider	120
11.6.9	GPT_SetOscClockDivider	120
11.6.10	GPT_GetOscClockDivider	120
11.6.11	GPT_StartTimer	120
11.6.12	GPT_StopTimer	121
11.6.13	GPT_GetCurrentTimerCount	121
11.6.14	GPT_SetInputOperationMode	121
11.6.15	GPT_GetInputOperationMode	121
11.6.16	GPT_GetInputCaptureValue	122
11.6.17	GPT_SetOutputOperationMode	122
11.6.18	GPT_GetOutputOperationMode	123
11.6.19	GPT_SetOutputCompareValue	123
11.6.20	GPT_GetOutputCompareValue	123
11.6.21	GPT_ForceOutput	124
11.6.22	GPT_EnableInterrupts	124
11.6.23	GPT_DisableInterrupts	124
11.6.24	GPT_GetEnabledInterrupts	124
11.6.25	GPT_GetStatusFlags	125
11.6.26	GPT_ClearStatusFlags	125
Chapter	GPIO: General-Purpose Input/Output Driver	
12.1	Overview	126
12.2	Typical use case	126
12.2.1	Input Operation	126
12.3	Data Structure Documentation	128
12.3.1	struct gpio_pin_config_t	128
12.4	Macro Definition Documentation	128
12.4.1	FSL_GPIO_DRIVER_VERSION	128
12.5	Enumeration Type Documentation	128
12.5.1	gpio_pin_direction_t	128
12.5.2	gpio_interrupt_mode_t	128
12.6	Function Documentation	129
12.6.1	GPIO_PinInit	129
12.6.2	GPIO_PinWrite	130
12.6.3	GPIO_WritePinOutput	130

Contents

Section Number	Title	Page Number
12.6.4	GPIO_PortSet	130
12.6.5	GPIO_SetPinsOutput	130
12.6.6	GPIO_PortClear	131
12.6.7	GPIO_ClearPinsOutput	132
12.6.8	GPIO_PortToggle	132
12.6.9	GPIO_PinRead	132
12.6.10	GPIO_ReadPinInput	132
12.6.11	GPIO_PinReadPadStatus	133
12.6.12	GPIO_ReadPadStatus	134
12.6.13	GPIO_PinSetInterruptConfig	134
12.6.14	GPIO_SetPinInterruptConfig	134
12.6.15	GPIO_PortEnableInterrupts	134
12.6.16	GPIO_EnableInterrupts	135
12.6.17	GPIO_PortDisableInterrupts	135
12.6.18	GPIO_DisableInterrupts	135
12.6.19	GPIO_PortGetInterruptFlags	135
12.6.20	GPIO_GetPinsInterruptFlags	136
12.6.21	GPIO_PortClearInterruptFlags	136
12.6.22	GPIO_ClearPinsInterruptFlags	136

Chapter I2C: Inter-Integrated Circuit Driver

13.1	Overview	138
13.2	I2C Driver	139
13.2.1	Overview	139
13.2.2	Typical use case	139
13.2.3	Data Structure Documentation	143
13.2.4	Macro Definition Documentation	147
13.2.5	Typedef Documentation	147
13.2.6	Enumeration Type Documentation	147
13.2.7	Function Documentation	149

Chapter PWM: Pulse Width Modulation Driver

14.1	Overview	162
14.2	PWM Driver	162
14.2.1	Initialization and deinitialization	162
14.3	Typical use case	162
14.3.1	PWM output	162
14.4	Enumeration Type Documentation	164
14.4.1	pwm_clock_source_t	164

Contents

Section Number	Title	Page Number
14.4.2	pwm_fifo_water_mark_t	165
14.4.3	pwm_byte_data_swap_t	165
14.4.4	pwm_half_word_data_swap_t	165
14.4.5	pwm_output_configuration_t	165
14.4.6	pwm_sample_repeat_t	166
14.4.7	pwm_interrupt_enable_t	166
14.4.8	pwm_status_flags_t	166
14.4.9	pwm_fifo_available_t	166
14.5	Function Documentation	167
14.5.1	PWM_Init	167
14.5.2	PWM_Deinit	167
14.5.3	PWM_GetDefaultConfig	167
14.5.4	PWM_StartTimer	168
14.5.5	PWM_StopTimer	168
14.5.6	PWM_SoftwareReset	168
14.5.7	PWM_EnableInterrupts	168
14.5.8	PWM_DisableInterrupts	169
14.5.9	PWM_GetEnabledInterrupts	169
14.5.10	PWM_GetStatusFlags	169
14.5.11	PWM_clearStatusFlags	170
14.5.12	PWM_GetFIFOAvailable	171
14.5.13	PWM_SetSampleValue	171
14.5.14	PWM_GetSampleValue	171
14.5.15	PWM_SetPeriodValue	172
14.5.16	PWM_GetPeriodValue	173
14.5.17	PWM_GetCounterValue	173
Chapter	UART: Universal Asynchronous Receiver/Transmitter Driver	
15.1	Overview	174
15.2	UART Driver	175
15.2.1	Overview	175
15.2.2	Typical use case	175
15.2.3	Data Structure Documentation	181
15.2.4	Macro Definition Documentation	184
15.2.5	Typedef Documentation	184
15.2.6	Enumeration Type Documentation	184
15.2.7	Function Documentation	187
15.3	UART FreeRTOS Driver	201
15.3.1	Overview	201
15.3.2	Data Structure Documentation	201
15.3.3	Macro Definition Documentation	202

Contents

Section Number	Title	Page Number
15.3.4	Function Documentation	202
Chapter	MU: Messaging Unit	
16.1	Overview	204
16.2	Function description	204
16.2.1	MU initialization	204
16.2.2	MU message	204
16.2.3	MU flags	205
16.2.4	Status and interrupt	205
16.2.5	MU misc functions	205
16.3	Macro Definition Documentation	207
16.3.1	FSL_MU_DRIVER_VERSION	207
16.4	Enumeration Type Documentation	208
16.4.1	_mu_status_flags	208
16.4.2	_mu_interrupt_enable	208
16.4.3	_mu_interrupt_trigger	208
16.5	Function Documentation	209
16.5.1	MU_Init	209
16.5.2	MU_Deinit	209
16.5.3	MU_SendMsgNonBlocking	209
16.5.4	MU_SendMsg	210
16.5.5	MU_ReceiveMsgNonBlocking	210
16.5.6	MU_ReceiveMsg	210
16.5.7	MU_SetFlagsNonBlocking	211
16.5.8	MU_SetFlags	211
16.5.9	MU_GetFlags	212
16.5.10	MU_GetStatusFlags	212
16.5.11	MU_GetInterruptsPending	213
16.5.12	MU_ClearStatusFlags	214
16.5.13	MU_EnableInterrupts	214
16.5.14	MU_DisableInterrupts	215
16.5.15	MU_TriggerInterrupts	215
16.5.16	MU_MaskHardwareReset	216
Chapter	PDM: Microphone Interface	
17.1	Overview	217
17.2	PDM Driver	218
17.2.1	Overview	218

Contents

Section Number	Title	Page Number
17.2.2	Typical use case	218
17.2.3	Data Structure Documentation	226
17.2.4	Enumeration Type Documentation	228
17.2.5	Function Documentation	233
Chapter	RDC: Resource Domain Controller	
18.1	Overview	250
18.2	Data Structure Documentation	251
18.2.1	struct rdc_hardware_config_t	251
18.2.2	struct rdc_domain_assignment_t	252
18.2.3	struct rdc_periph_access_config_t	252
18.2.4	struct rdc_mem_access_config_t	253
18.2.5	struct rdc_mem_status_t	253
18.3	Enumeration Type Documentation	254
18.3.1	_rdc_interrupts	254
18.3.2	_rdc_flags	254
18.3.3	_rdc_access_policy	254
18.4	Function Documentation	254
18.4.1	RDC_Init	254
18.4.2	RDC_Deinit	255
18.4.3	RDC_GetHardwareConfig	255
18.4.4	RDC_EnableInterrupts	255
18.4.5	RDC_DisableInterrupts	255
18.4.6	RDC_GetInterruptStatus	256
18.4.7	RDC_ClearInterruptStatus	256
18.4.8	RDC_GetStatus	256
18.4.9	RDC_ClearStatus	256
18.4.10	RDC_SetMasterDomainAssignment	257
18.4.11	RDC_GetDefaultMasterDomainAssignment	257
18.4.12	RDC_LockMasterDomainAssignment	257
18.4.13	RDC_SetPeriphAccessConfig	258
18.4.14	RDC_GetDefaultPeriphAccessConfig	258
18.4.15	RDC_LockPeriphAccessConfig	258
18.4.16	RDC_SetMemAccessConfig	259
18.4.17	RDC_GetDefaultMemAccessConfig	259
18.4.18	RDC_LockMemAccessConfig	259
18.4.19	RDC_SetMemAccessValid	260
18.4.20	RDC_GetMemViolationStatus	260
18.4.21	RDC_ClearMemViolationFlag	260
18.4.22	RDC_GetCurrentMasterDomainId	261

Contents

Section Number	Title	Page Number
Chapter	RDC_SEMA42: Hardware Semaphores Driver	
19.1	Overview	262
19.2	Macro Definition Documentation	263
19.2.1	RDC_SEMA42_GATE_NUM_RESET_ALL	263
19.2.2	RDC_SEMA42_GATEn	263
19.2.3	RDC_SEMA42_GATE_COUNT	263
19.3	Function Documentation	263
19.3.1	RDC_SEMA42_Init	263
19.3.2	RDC_SEMA42_Deinit	263
19.3.3	RDC_SEMA42_TryLock	264
19.3.4	RDC_SEMA42_Lock	264
19.3.5	RDC_SEMA42_Unlock	265
19.3.6	RDC_SEMA42_GetLockMasterIndex	265
19.3.7	RDC_SEMA42_GetLockDomainID	265
19.3.8	RDC_SEMA42_ResetGate	266
19.3.9	RDC_SEMA42_ResetAllGates	267
Chapter	SAI: Serial Audio Interface	
20.1	Overview	268
20.2	Typical configurations	268
20.3	Typical use case	269
20.3.1	SAI Send/receive using an interrupt method	269
20.3.2	SAI Send/receive using a DMA method	269
20.4	SAI Driver	270
20.4.1	Overview	270
20.4.2	Data Structure Documentation	278
20.4.3	Macro Definition Documentation	282
20.4.4	Enumeration Type Documentation	282
20.4.5	Function Documentation	286
Chapter	SDMA: Smart Direct Memory Access (SDMA) Controller Driver	
21.1	Overview	316
21.2	Typical use case	316
21.2.1	SDMA Operation	316
21.3	Data Structure Documentation	322
21.3.1	struct sdma_config_t	322

Contents

Section Number	Title	Page Number
21.3.2	struct sdma_multi_fifo_config_t	322
21.3.3	struct sdma_sw_done_config_t	322
21.3.4	struct sdma_p2p_config_t	323
21.3.5	struct sdma_transfer_config_t	323
21.3.6	struct sdma_buffer_descriptor_t	324
21.3.7	struct sdma_channel_control_t	325
21.3.8	struct sdma_context_data_t	325
21.3.9	struct sdma_handle_t	325
21.4	Macro Definition Documentation	326
21.4.1	FSL_SDMA_DRIVER_VERSION	326
21.5	Typedef Documentation	326
21.5.1	sdma_callback	326
21.6	Enumeration Type Documentation	326
21.6.1	sdma_transfer_size_t	326
21.6.2	sdma_bd_status_t	327
21.6.3	sdma_bd_command_t	327
21.6.4	sdma_context_switch_mode_t	327
21.6.5	sdma_clock_ratio_t	327
21.6.6	sdma_transfer_type_t	328
21.6.7	sdma_peripheral_t	328
21.6.8	anonymous enum	328
21.6.9	anonymous enum	328
21.6.10	anonymous enum	329
21.6.11	anonymous enum	329
21.6.12	sdma_done_src_t	329
21.7	Function Documentation	330
21.7.1	SDMA_Init	330
21.7.2	SDMA_Deinit	330
21.7.3	SDMA_GetDefaultConfig	331
21.7.4	SDMA_ResetModule	331
21.7.5	SDMA_EnableChannelErrorInterrupts	331
21.7.6	SDMA_DisableChannelErrorInterrupts	331
21.7.7	SDMA_ConfigBufferDescriptor	332
21.7.8	SDMA_SetChannelPriority	332
21.7.9	SDMA_SetSourceChannel	333
21.7.10	SDMA_StartChannelSoftware	333
21.7.11	SDMA_StartChannelEvents	333
21.7.12	SDMA_StopChannel	333
21.7.13	SDMA_SetContextSwitchMode	334
21.7.14	SDMA_GetChannelInterruptStatus	334
21.7.15	SDMA_ClearChannelInterruptStatus	334

Contents

Section Number	Title	Page Number
21.7.16	SDMA_GetChannelStopStatus	334
21.7.17	SDMA_ClearChannelStopStatus	335
21.7.18	SDMA_GetChannelPendStatus	335
21.7.19	SDMA_ClearChannelPendStatus	335
21.7.20	SDMA_GetErrorStatus	336
21.7.21	SDMA_GetRequestSourceStatus	336
21.7.22	SDMA_CreateHandle	336
21.7.23	SDMA_InstallBDMemory	337
21.7.24	SDMA_SetCallback	338
21.7.25	SDMA_SetMultiFifoConfig	338
21.7.26	SDMA_EnableSwDone	338
21.7.27	SDMA_SetDoneConfig	339
21.7.28	SDMA_LoadScript	339
21.7.29	SDMA_DumpScript	339
21.7.30	SDMA_PrepareTransfer	340
21.7.31	SDMA_PrepareP2PTransfer	341
21.7.32	SDMA_SubmitTransfer	342
21.7.33	SDMA_StartTransfer	342
21.7.34	SDMA_StopTransfer	343
21.7.35	SDMA_AbortTransfer	343
21.7.36	SDMA_GetTransferredBytes	343
21.7.37	SDMA_IsPeripheralInSPBA	343
21.7.38	SDMA_HandleIRQ	344

Chapter SEMA4: Hardware Semaphores Driver

22.1	Overview	345
22.2	Macro Definition Documentation	346
22.2.1	SEMA4_GATE_NUM_RESET_ALL	346
22.3	Function Documentation	346
22.3.1	SEMA4_Init	346
22.3.2	SEMA4_Deinit	346
22.3.3	SEMA4_TryLock	346
22.3.4	SEMA4_Lock	347
22.3.5	SEMA4_Unlock	347
22.3.6	SEMA4_GetLockProc	347
22.3.7	SEMA4_ResetGate	348
22.3.8	SEMA4_ResetAllGates	348
22.3.9	SEMA4_EnableGateNotifyInterrupt	349
22.3.10	SEMA4_DisableGateNotifyInterrupt	349
22.3.11	SEMA4_GetGateNotifyStatus	349
22.3.12	SEMA4_ResetGateNotify	350
22.3.13	SEMA4_ResetAllGateNotify	350

Contents

Section Number	Title	Page Number
Chapter	TMU: Thermal Management Unit Driver	
23.1	Overview	352
23.2	Typical use case	352
23.2.1	Monitor and report Configuration	352
23.3	Data Structure Documentation	355
23.3.1	struct tmu_threshold_config_t	355
23.3.2	struct tmu_interrupt_status_t	356
23.3.3	struct tmu_config_t	356
23.4	Macro Definition Documentation	356
23.4.1	FSL_TMU_DRIVER_VERSION	356
23.5	Enumeration Type Documentation	356
23.5.1	_tmu_interrupt_enable	356
23.5.2	_tmu_interrupt_status_flags	357
23.5.3	tmu_average_low_pass_filter_t	357
23.5.4	tmu_amplifier_gain_t	357
23.5.5	tmu_amplifier_reference_voltage_t	358
23.6	Function Documentation	358
23.6.1	TMU_Init	358
23.6.2	TMU_Deinit	359
23.6.3	TMU_GetDefaultConfig	359
23.6.4	TMU_Enable	359
23.6.5	TMU_EnableInterrupts	359
23.6.6	TMU_DisableInterrupts	360
23.6.7	TMU_GetInterruptStatusFlags	360
23.6.8	TMU_ClearInterruptStatusFlags	360
23.6.9	TMU_GetImmediateTemperature	360
23.6.10	TMU_GetAverageTemperature	361
23.6.11	TMU_SetHighTemperatureThreshold	361
Chapter	WDOG: Watchdog Timer Driver	
24.1	Overview	363
24.2	Typical use case	363
24.3	Data Structure Documentation	364
24.3.1	struct wdog_work_mode_t	364
24.3.2	struct wdog_config_t	364
24.4	Enumeration Type Documentation	365

Contents

Section Number	Title	Page Number
24.4.1	_wdog_interrupt_enable	365
24.4.2	_wdog_status_flags	365
24.5	Function Documentation	365
24.5.1	WDOG_GetDefaultConfig	365
24.5.2	WDOG_Init	366
24.5.3	WDOG_Deinit	366
24.5.4	WDOG_Enable	366
24.5.5	WDOG_Disable	367
24.5.6	WDOG_TriggerSystemSoftwareReset	367
24.5.7	WDOG_TriggerSoftwareSignal	367
24.5.8	WDOG_EnableInterrupts	368
24.5.9	WDOG_GetStatusFlags	369
24.5.10	WDOG_ClearInterruptStatus	369
24.5.11	WDOG_SetTimeoutValue	370
24.5.12	WDOG_SetInterruptTimeoutValue	370
24.5.13	WDOG_DisablePowerDownEnable	370
24.5.14	WDOG_Refresh	371
Chapter	Debug Console	
25.1	Overview	372
25.2	Function groups	372
25.2.1	Initialization	372
25.2.2	Advanced Feature	373
25.2.3	SDK_DEBUGCONSOLE and SDK_DEBUGCONSOLE_UART	377
25.3	Typical use case	377
25.4	Macro Definition Documentation	379
25.4.1	DEBUGCONSOLE_REDIRECT_TO_TOOLCHAIN	379
25.4.2	DEBUGCONSOLE_REDIRECT_TO_SDK	380
25.4.3	DEBUGCONSOLE_DISABLE	380
25.4.4	SDK_DEBUGCONSOLE	380
25.4.5	PRINTF	380
25.5	Function Documentation	380
25.5.1	DbgConsole_Init	380
25.5.2	DbgConsole_Deinit	381
25.5.3	DbgConsole_EnterLowpower	381
25.5.4	DbgConsole_ExitLowpower	381
25.5.5	DbgConsole_Printf	381
25.5.6	DbgConsole_Putchar	382
25.5.7	DbgConsole_Scanf	382

Contents

Section Number	Title	Page Number
25.5.8	DbgConsole_Getchar	383
25.5.9	DbgConsole_BlockingPrintf	383
25.5.10	DbgConsole_Flush	383
25.5.11	StrFormatPrintf	384
25.5.12	StrFormatScanf	384
 Chapter CODEC codec Driver		
26.1	Overview	385
26.2	codec common Driver	386
26.2.1	Overview	386
26.2.2	Data Structure Documentation	390
26.2.3	Macro Definition Documentation	391
26.2.4	Enumeration Type Documentation	391
26.2.5	Function Documentation	395
 Chapter Serial_Manager		
 Chapter Ecspi_cmsis_driver		
28.1	Function groups	402
28.1.1	ECSPi CMSIS GetVersion Operation	402
28.1.2	ECSPi CMSIS GetCapabilities Operation	402
28.1.3	ECSPi CMSIS Initialize and Uninitialize Operation	402
28.1.4	ECSPi CMSIS Transfer Operation	402
28.1.5	ECSPi CMSIS Status Operation	402
28.1.6	ECSPi CMSIS Control Operation	403
28.2	Typical use case	403
28.2.1	Master Operation	403
28.2.2	Slave Operation	403
 Chapter I2c_cmsis_driver		
29.1	I2C CMSIS Driver	404
29.1.1	Master Operation in interrupt transactional method	404
29.1.2	Slave Operation in interrupt transactional method	404
 Chapter Uart_cmsis_driver		
30.1	Function groups	406
30.1.1	UART CMSIS GetVersion Operation	406
30.1.2	UART CMSIS GetCapabilities Operation	406

Contents

Section Number	Title	Page Number
30.1.3	UART CMSIS Initialize and Uninitialize Operation	406
30.1.4	UART CMSIS Transfer Operation	406
30.1.5	UART CMSIS Status Operation	407
30.1.6	UART CMSIS Control Operation	407
Chapter	Ecspi_freertos_driver	
31.1	Overview	408
31.2	Macro Definition Documentation	408
31.2.1	FSL_ECSPI_FREERTOS_DRIVER_VERSION	408
31.3	Function Documentation	408
31.3.1	ECSPI_RTOS_Init	408
31.3.2	ECSPI_RTOS_Deinit	409
31.3.3	ECSPI_RTOS_Transfer	409
Chapter	Ecspi_sdma	
32.1	Overview	410
32.2	Data Structure Documentation	411
32.2.1	struct_ecspi_sdma_handle	411
32.3	Macro Definition Documentation	411
32.3.1	FSL_ECSPI_FREERTOS_DRIVER_VERSION	411
32.4	Typedef Documentation	411
32.4.1	ecspi_sdma_callback_t	411
32.5	Function Documentation	411
32.5.1	ECSPI_MasterTransferCreateHandleSDMA	411
32.5.2	ECSPI_SlaveTransferCreateHandleSDMA	412
32.5.3	ECSPI_MasterTransferSDMA	413
32.5.4	ECSPI_SlaveTransferSDMA	413
32.5.5	ECSPI_MasterTransferAbortSDMA	414
32.5.6	ECSPI_SlaveTransferAbortSDMA	414
Chapter	I2C FreeRTOS Driver	
33.1	Overview	415
33.2	Macro Definition Documentation	415
33.2.1	FSL_I2C_FREERTOS_DRIVER_VERSION	415
33.3	Function Documentation	415

Contents

Section Number	Title	Page Number
33.3.1	I2C_RTOS_Init	415
33.3.2	I2C_RTOS_Deinit	416
33.3.3	I2C_RTOS_Transfer	416
Chapter	Uart_sdma	
34.1	Overview	417
34.2	Data Structure Documentation	417
34.2.1	struct_uart_sdma_handle	417
34.3	Macro Definition Documentation	418
34.3.1	FSL_UART_SDMA_DRIVER_VERSION	418
34.4	Typedef Documentation	418
34.4.1	uart_sdma_transfer_callback_t	418
34.5	Function Documentation	418
34.5.1	UART_TransferCreateHandleSDMA	418
34.5.2	UART_SendSDMA	419
34.5.3	UART_ReceiveSDMA	419
34.5.4	UART_TransferAbortSendSDMA	420
34.5.5	UART_TransferAbortReceiveSDMA	420
Chapter	Pdm_sdma	
35.1	Overview	421
35.2	Data Structure Documentation	421
35.2.1	struct_pdm_sdma_handle	421
35.3	Function Documentation	422
35.3.1	PDM_TransferCreateHandleSDMA	422
35.3.2	PDM_TransferReceiveSDMA	423
35.3.3	PDM_TransferAbortReceiveSDMA	423
35.3.4	PDM_SetChannelConfigSDMA	424
Chapter	Sai_sdma	
36.1	Overview	425
36.2	Data Structure Documentation	426
36.2.1	struct_sai_sdma_handle	426
36.3	Function Documentation	427
36.3.1	SAI_TransferTxCreateHandleSDMA	427

Contents

Section Number	Title	Page Number
36.3.2	SAI_TransferRxCreateHandleSDMA	427
36.3.3	SAI_TransferTxSetFormatSDMA	428
36.3.4	SAI_TransferRxSetFormatSDMA	428
36.3.5	SAI_TransferSendSDMA	429
36.3.6	SAI_TransferReceiveSDMA	429
36.3.7	SAI_TransferAbortSendSDMA	430
36.3.8	SAI_TransferAbortReceiveSDMA	430
36.3.9	SAI_TransferRxSetConfigSDMA	430
36.3.10	SAI_TransferTxSetConfigSDMA	431
Chapter Ak4497		
37.1	Overview	432
37.2	Data Structure Documentation	435
37.2.1	struct ak4497_dsd_config_t	435
37.2.2	struct ak4497_pcm_config_t	435
37.2.3	struct ak4497_config_t	435
37.2.4	struct ak4497_handle_t	435
37.3	Macro Definition Documentation	435
37.3.1	AK4497_CONTROL1	435
37.3.2	AK4497_CONTROL1_RSTN_MASK	435
37.3.3	AK4497_I2C_ADDR	435
37.4	Enumeration Type Documentation	435
37.4.1	ak4497_data_channel_mode_t	435
37.4.2	ak4497_dsd_input_path_t	436
37.4.3	ak4497_dsd_mclk_t	436
37.4.4	ak4497_dsd_dclk_t	436
37.4.5	ak4497_dsd_playback_path_t	436
37.4.6	ak4497_dsd_dclk_polarity_t	436
37.4.7	ak4497_pcm_samplefreqmode_t	437
37.4.8	ak4497_pcm_samplefreqselect_t	437
37.4.9	ak4497_pcm_sdata_format_t	437
37.4.10	ak4497_pcm_tdm_mode_t	437
37.4.11	ak4497_module_ctrl_cmd_t	438
37.4.12	anonymous enum	438
37.5	Function Documentation	438
37.5.1	AK4497_DefaultConfig	438
37.5.2	AK4497_Init	438
37.5.3	AK4497_SetEncoding	438
37.5.4	AK4497_ConfigDataFormat	439
37.5.5	AK4497_SetVolume	439

Contents

Section Number	Title	Page Number
37.5.6	AK4497_GetVolume	439
37.5.7	AK4497_ModuleControl	440
37.5.8	AK4497_Deinit	441
37.5.9	AK4497_WriteReg	441
37.5.10	AK4497_ReadReg	441
37.5.11	AK4497_ModifyReg	441

Chapter Ak4497_adapter

38.1	Overview	443
38.2	Enumeration Type Documentation	444
38.2.1	_codec_type	444
38.3	Function Documentation	444
38.3.1	HAL_CODEC_Init	444
38.3.2	HAL_CODEC_Deinit	444
38.3.3	HAL_CODEC_SetFormat	444
38.3.4	HAL_CODEC_SetVolume	445
38.3.5	HAL_CODEC_SetMute	445
38.3.6	HAL_CODEC_SetPower	445
38.3.7	HAL_CODEC_SetRecord	446
38.3.8	HAL_CODEC_SetRecordChannel	446
38.3.9	HAL_CODEC_SetPlay	446
38.3.10	HAL_CODEC_ModuleControl	447

Chapter Wm8524_adapter

39.1	Overview	448
39.2	Enumeration Type Documentation	449
39.2.1	_codec_type	449
39.3	Function Documentation	449
39.3.1	HAL_CODEC_Init	449
39.3.2	HAL_CODEC_Deinit	449
39.3.3	HAL_CODEC_SetFormat	449
39.3.4	HAL_CODEC_SetVolume	450
39.3.5	HAL_CODEC_SetMute	450
39.3.6	HAL_CODEC_SetPower	450
39.3.7	HAL_CODEC_SetRecord	451
39.3.8	HAL_CODEC_SetRecordChannel	451
39.3.9	HAL_CODEC_SetPlay	451
39.3.10	HAL_CODEC_ModuleControl	452

Contents

Section Number	Title	Page Number
Chapter	Wm8524	
40.1	Overview	453
40.2	Data Structure Documentation	454
40.2.1	struct wm8524_handle_t	454
40.3	Macro Definition Documentation	454
40.3.1	FSL_WM8524_DRIVER_VERSION	454
40.4	Typedef Documentation	454
40.4.1	wm8524_setMuteIO	454
40.5	Enumeration Type Documentation	454
40.5.1	wm8524_protocol_t	454
40.5.2	_wm8524_mute_control	454
40.6	Function Documentation	454
40.6.1	WM8524_Init	454
40.6.2	WM8524_ConfigFormat	455
40.6.3	WM8524_SetMute	455
Chapter	Serial_Manager	
41.1	Overview	456
41.2	Data Structure Documentation	458
41.2.1	struct serial_manager_config_t	458
41.2.2	struct serial_manager_callback_message_t	459
41.3	Macro Definition Documentation	459
41.3.1	SERIAL_MANAGER_TIME_DELAY_DEFAULT_VALUE	459
41.3.2	SERIAL_MANAGER_HANDLE_SIZE	459
41.3.3	SERIAL_MANAGER_HANDLE_DEFINE	459
41.3.4	SERIAL_MANAGER_WRITE_HANDLE_DEFINE	459
41.3.5	SERIAL_MANAGER_READ_HANDLE_DEFINE	460
41.3.6	SERIAL_MANAGER_USE_COMMON_TASK	460
41.3.7	SERIAL_MANAGER_TASK_PRIORITY	460
41.3.8	SERIAL_MANAGER_TASK_STACK_SIZE	460
41.4	Enumeration Type Documentation	460
41.4.1	serial_port_type_t	460
41.4.2	serial_manager_type_t	461
41.4.3	serial_manager_status_t	461
41.5	Function Documentation	461

Contents

Section Number	Title	Page Number
41.5.1	SerialManager_Init	461
41.5.2	SerialManager_Deinit	463
41.5.3	SerialManager_OpenWriteHandle	464
41.5.4	SerialManager_CloseWriteHandle	465
41.5.5	SerialManager_OpenReadHandle	465
41.5.6	SerialManager_CloseReadHandle	466
41.5.7	SerialManager_WriteBlocking	467
41.5.8	SerialManager_ReadBlocking	467
41.5.9	SerialManager_EnterLowpower	468
41.5.10	SerialManager_ExitLowpower	468
Chapter	Serial_port_swo	
42.1	Overview	470
42.2	Data Structure Documentation	470
42.2.1	struct serial_port_swo_config_t	470
42.3	Enumeration Type Documentation	470
42.3.1	serial_port_swo_protocol_t	470
Chapter	Serial_port_uart	
43.1	Overview	471
43.2	Enumeration Type Documentation	471
43.2.1	serial_port_uart_parity_mode_t	471
43.2.2	serial_port_uart_stop_bit_count_t	471
Chapter	Data Structure Documentation	
44.0.3	codec_i2c_config_t Struct Reference	472

Chapter 1

Introduction

The MCUXpresso Software Development Kit (MCUXpresso SDK) is a collection of software enablement for NXP Microcontrollers that includes peripheral drivers, multicore support and integrated RTOS support for FreeRTOS™. In addition to the base enablement, the MCUXpresso SDK is augmented with demo applications, driver example projects, and API documentation to help users quickly leverage the support provided by MCUXpresso SDK. The [MCUXpresso SDK Web Builder](#) is available to provide access to all MCUXpresso SDK packages. See the *MCUXpresso Software Development Kit (SDK) Release Notes* (document MCUXSDKRN) in the Supported Devices section at [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#) for details.

The MCUXpresso SDK is built with the following runtime software components:

- Arm® and DSP standard libraries, and CMSIS-compliant device header files which provide direct access to the peripheral registers.
- Peripheral drivers that provide stateless, high-performance, ease-of-use APIs. Communication drivers provide higher-level transactional APIs for a higher-performance option.
- RTOS wrapper driver built on top of MCUXpresso SDK peripheral drivers and leverage native RTOS services to better comply to the RTOS cases.
- Real time operation systems (RTOS) for FreeRTOS OS.
- Stacks and middleware in source or object formats including:
 - CMSIS-DSP, a suite of common signal processing functions.
 - The MCUXpresso SDK comes complete with software examples demonstrating the usage of the peripheral drivers, RTOS wrapper drivers, middleware, and RTOSes.

All demo applications and driver examples are provided with projects for the following toolchains:

- IAR Embedded Workbench
- GNU Arm Embedded Toolchain

The peripheral drivers and RTOS driver wrappers can be used across multiple devices within the product family without modification. The configuration items for each driver are encapsulated into C language data structures. Device-specific configuration information is provided as part of the MCUXpresso SDK and need not be modified by the user. If necessary, the user is able to modify the peripheral driver and RTOS wrapper driver configuration during runtime. The driver examples demonstrate how to configure the drivers by passing the proper configuration data to the APIs. The folder structure is organized to reduce the total number of includes required to compile a project.

The rest of this document describes the API references in detail for the peripheral drivers and RTOS wrapper drivers. For the latest version of this and other MCUXpresso SDK documents, see the mcuxpresso.nxp.com/apidoc/.

Deliverable	Location
Demo Applications	<install_dir>/boards/<board_name>/demo_apps
Driver Examples	<install_dir>/boards/<board_name>/driver_examples
Documentation	<install_dir>/docs
Middleware	<install_dir>/middleware
Drivers	<install_dir>/<device_name>/drivers/
CMSIS Standard Arm Cortex-M Headers, math and DSP Libraries	<install_dir>/CMSIS
Device Startup and Linker	<install_dir>/<device_name>/<toolchain>/
MCUXpresso SDK Utilities	<install_dir>/devices/<device_name>/utilities
RTOS Kernel Code	<install_dir>/rtos

Table 2: MCUXpresso SDK Folder Structure

Chapter 2

Trademarks

Information in this document is provided solely to enable system and software implementers to use NXP products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document. NXP reserves the right to make changes without further notice to any products herein.

How to Reach Us:

Home Page: nxp.com

Web Support: nxp.com/support

NXP makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does NXP assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. “Typical” parameters that may be provided in NXP data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including “typicals,” must be validated for each customer application by customer’s technical experts. NXP does not convey any license under its patent rights nor the rights of others. NXP sells products pursuant to standard terms and conditions of sale, which can be found at the following address: <http://www.nxp.com/SalesTermsandConditions>.

NXP, the NXP logo, NXP SECURE CONNECTIONS FOR A SMARTER WORLD, COOLFLUX, EMBRACE, GREENCHIP, HITAG, I2C BUS, ICODE, JCOP, LIFE VIBES, MIFARE, MIFARE CLASSIC, MIFARE DESFire, MIFARE PLUS, MIFARE FLEX, MANTIS, MIFARE ULTRALIGHT, MIFARE4MOBILE, MIGLO, NTAG, ROADLINK, SMARTLX, SMARTMX, STARPLUG, TOPFET, TRENCHMOS, UCODE, Freescale, the Freescale logo, AltiVec, C-5, CodeTEST, CodeWarrior, ColdFire, ColdFire+, C-Ware, the Energy Efficient Solutions logo, Kinetis, Layerscape, MagniV, mobileGT, PEG, PowerQUICC, Processor Expert, QorIQ, QorIQ Qonverge, Ready Play, SafeAssure, the SafeAssure logo, StarCore, Symphony, VortiQa, Vybrid, Airfast, BeeKit, BeeStack, CoreNet, Flexis, MXC, Platform in a Package, QUICC Engine, SMARTMOS, Tower, TurboLink, and UMEMS are trademarks of NXP B.V. All other product or service names are the property of their respective owners. AMBA, Arm, Arm7, Arm7TDMI, Arm9, Arm11, Artisan, big.LITTLE, Cordio, CoreLink, CoreSight, Cortex, DesignStart, DynamIQ, Jazelle, Keil, Mali, Mbed, Mbed Enabled, NEON, POP, RealView, SecurCore, Socrates, Thumb, TrustZone, ULINK, ULINK2, ULINK-ME, ULINK-PLUS, ULINKpro, Vision, Versatile are trademarks or registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. The related technology may be protected by any or all of patents, copyrights, designs and trade secrets. All rights reserved. Oracle and Java are registered trademarks of Oracle and/or its affiliates. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org.

© 2019 NXP B.V.

Chapter 3

Architectural Overview

This chapter provides the architectural overview for the MCUXpresso Software Development Kit (MCUXpresso SDK). It describes each layer within the architecture and its associated components.

Overview

The MCUXpresso SDK architecture consists of five key components listed below.

1. The Arm Cortex Microcontroller Software Interface Standard (CMSIS) CORE compliance device-specific header files, SOC Header, and CMSIS math/DSP libraries.
2. Peripheral Drivers
3. Real-time Operating Systems (RTOS)
4. Stacks and Middleware that integrate with the MCUXpresso SDK
5. Demo Applications based on the MCUXpresso SDK

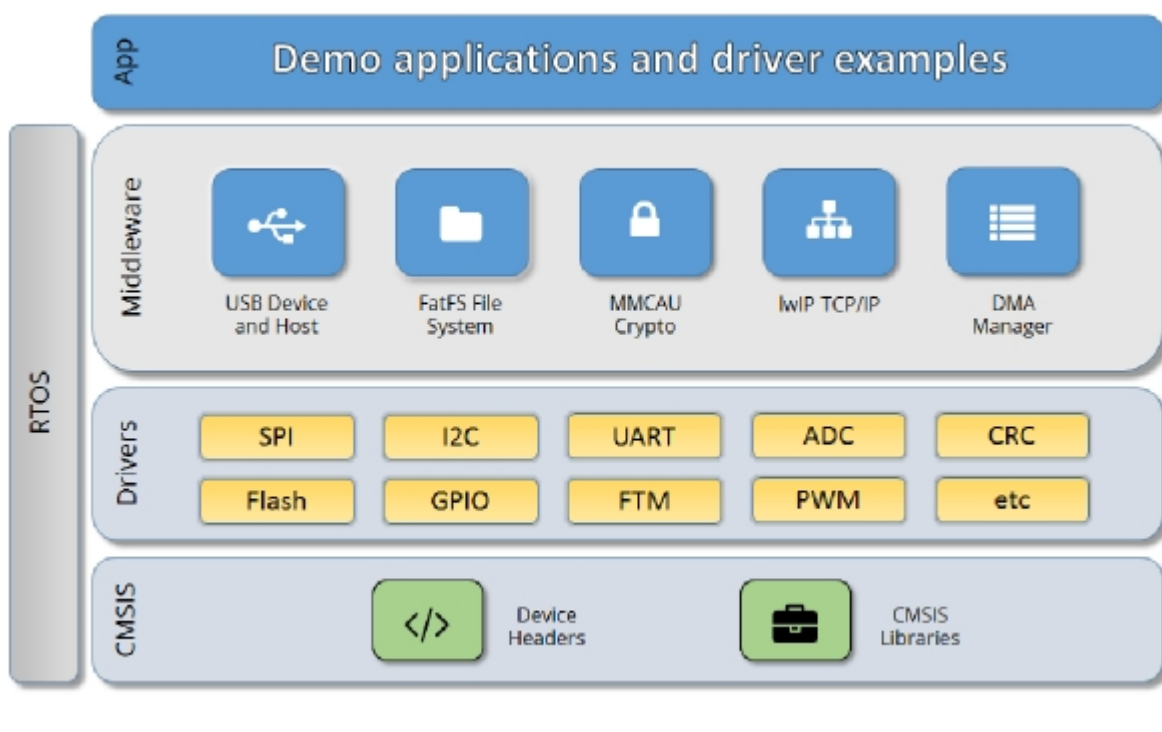


Figure 1: MCUXpresso SDK Block Diagram

MCU header files

Each supported MCU device in the MCUXpresso SDK has an overall System-on Chip (SoC) memory-

mapped header file. This header file contains the memory map and register base address for each peripheral and the IRQ vector table with associated vector numbers. The overall SoC header file provides access to the peripheral registers through pointers and predefined bit masks. In addition to the overall SoC memory-mapped header file, the MCUXpresso SDK includes a feature header file for each device. The feature header file allows NXP to deliver a single software driver for a given peripheral. The feature file ensures that the driver is properly compiled for the target SOC.

CMSIS Support

Along with the SoC header files and peripheral extension header files, the MCUXpresso SDK also includes common CMSIS header files for the Arm Cortex-M core and the math and DSP libraries from the latest CMSIS release. The CMSIS DSP library source code is also included for reference.

MCUXpresso SDK Peripheral Drivers

The MCUXpresso SDK peripheral drivers mainly consist of low-level functional APIs for the MCU product family on-chip peripherals and also of high-level transactional APIs for some bus drivers/DM-A driver/eDMA driver to quickly enable the peripherals and perform transfers.

All MCUXpresso SDK peripheral drivers only depend on the CMSIS headers, device feature files, `fsl_common.h`, and `fsl_clock.h` files so that users can easily pull selected drivers and their dependencies into projects. With the exception of the clock/power-relevant peripherals, each peripheral has its own driver. Peripheral drivers handle the peripheral clock gating/ungating inside the drivers during initialization and deinitialization respectively.

Low-level functional APIs provide common peripheral functionality, abstracting the hardware peripheral register accesses into a set of stateless basic functional operations. These APIs primarily focus on the control, configuration, and function of basic peripheral operations. The APIs hide the register access details and various MCU peripheral instantiation differences so that the application can be abstracted from the low-level hardware details. The API prototypes are intentionally similar to help ensure easy portability across supported MCUXpresso SDK devices.

Transactional APIs provide a quick method for customers to utilize higher-level functionality of the peripherals. The transactional APIs utilize interrupts and perform asynchronous operations without user intervention. Transactional APIs operate on high-level logic that requires data storage for internal operation context handling. However, the Peripheral Drivers do not allocate this memory space. Rather, the user passes in the memory to the driver for internal driver operation. Transactional APIs ensure the NVIC is enabled properly inside the drivers. The transactional APIs do not meet all customer needs, but provide a baseline for development of custom user APIs.

Note that the transactional drivers never disable an NVIC after use. This is due to the shared nature of interrupt vectors on devices. It is up to the user to ensure that NVIC interrupts are properly disabled after usage is complete.

Interrupt handling for transactional APIs

A double weak mechanism is introduced for drivers with transactional API. The double weak indicates two levels of weak vector entries. See the examples below:

```
PUBWEAK SPI0_IRQHandler
PUBWEAK SPI0_DriverIRQHandler
SPI0_IRQHandler
```

```
LDR    R0, =SPI0_DriverIRQHandler
BX     R0
```

The first level of the weak implementation are the functions defined in the vector table. In the devices/⟨DEVICE_NAME⟩/⟨TOOLCHAIN⟩/startup_⟨DEVICE_NAME⟩.s/.S file, the implementation of the first layer weak function calls the second layer of weak function. The implementation of the second layer weak function (ex. SPI0_DriverIRQHandler) jumps to itself (B). The MCUXpresso SDK drivers with transactional APIs provide the reimplement of the second layer function inside of the peripheral driver. If the MCUXpresso SDK drivers with transactional APIs are linked into the image, the SPI0_DriverIRQHandler is replaced with the function implemented in the MCUXpresso SDK SPI driver.

The reason for implementing the double weak functions is to provide a better user experience when using the transactional APIs. For drivers with a transactional function, call the transactional APIs and the drivers complete the interrupt-driven flow. Users are not required to redefine the vector entries out of the box. At the same time, if users are not satisfied by the second layer weak function implemented in the MCUXpresso SDK drivers, users can redefine the first layer weak function and implement their own interrupt handler functions to suit their implementation.

The limitation of the double weak mechanism is that it cannot be used for peripherals that share the same vector entry. For this use case, redefine the first layer weak function to enable the desired peripheral interrupt functionality. For example, if the MCU's UART0 and UART1 share the same vector entry, redefine the UART0_UART1_IRQHandler according to the use case requirements.

Feature Header Files

The peripheral drivers are designed to be reusable regardless of the peripheral functional differences from one MCU device to another. An overall Peripheral Feature Header File is provided for the MCUXpresso SDK-supported MCU device to define the features or configuration differences for each sub-family device.

Application

See the *Getting Started with MCUXpresso SDK* document (MCUXSDKGSUG).

Chapter 4

Driver errors status

- `kStatus_ECSPI_Busy` = 6400
- `kStatus_ECSPI_Idle` = 6401
- `kStatus_ECSPI_Error` = 6402
- `kStatus_ECSPI_HardwareOverflow` = 6403
- `kStatus_I2C_Busy` = 1100
- `kStatus_I2C_Idle` = 1101
- `kStatus_I2C_Nak` = 1102
- `kStatus_I2C_ArbitrationLost` = 1103
- `kStatus_I2C_Timeout` = 1104
- `kStatus_I2C_Addr_Nak` = 1105
- `kStatus_UART_TxBusy` = 2800
- `kStatus_UART_RxBusy` = 2801
- `kStatus_UART_TxIdle` = 2802
- `kStatus_UART_RxIdle` = 2803
- `kStatus_UART_TxWatermarkTooLarge` = 2804
- `kStatus_UART_RxWatermarkTooLarge` = 2805
- `kStatus_UART_FlagCannotClearManually` = 2806
- `kStatus_UART_Error` = 2807
- `kStatus_UART_RxRingBufferOverrun` = 2808
- `kStatus_UART_RxHardwareOverrun` = 2809
- `kStatus_UART_NoiseError` = 2810
- `kStatus_UART_FramingError` = 2811
- `kStatus_UART_ParityError` = 2812
- `kStatus_UART_BaudrateNotSupport` = 2813
- `kStatus_UART_BreakDetect` = 2814
- `kStatus_PDM_Busy` = 7200
- `kStatus_PDM_CLK_LOW` = 7201
- `kStatus_PDM_FIFO_ERROR` = 7202
- `kStatus_PDM_QueueFull` = 7203
- `kStatus_PDM_Idle` = 7204
- `kStatus_SAI_TxBusy` = 1900
- `kStatus_SAI_RxBusy` = 1901
- `kStatus_SAI_TxError` = 1902
- `kStatus_SAI_RxError` = 1903
- `kStatus_SAI_QueueFull` = 1904
- `kStatus_SAI_TxIdle` = 1905
- `kStatus_SAI_RxIdle` = 1906
- `kStatus_SDMA_ERROR` = 7300

- 
- `kStatus_SDMA_Busy` = 7301

Chapter 5

Deprecated List

Global [GPIO_ClearPinsOutput](#) (GPIO_Type *base, uint32_t mask)

Do not use this function. It has been superceded by [GPIO_PortClear](#).

Global [GPIO_DisableInterrupts](#) (GPIO_Type *base, uint32_t mask)

Do not use this function. It has been superceded by [GPIO_PortDisableInterrupts](#).

Global [GPIO_ReadPadStatus](#) (GPIO_Type *base, uint32_t pin)

Do not use this function. It has been superceded by [GPIO_PinReadPadStatus](#).

Global [GPIO_ReadPinInput](#) (GPIO_Type *base, uint32_t pin)

Do not use this function. It has been superceded by [GPIO_PinRead](#).

Global [GPIO_SetPinInterruptConfig](#) (GPIO_Type *base, uint32_t pin, gpio_interrupt_mode_t pin-InterruptMode)

Do not use this function. It has been superceded by [GPIO_PinSetInterruptConfig](#).

Global [GPIO_SetPinsOutput](#) (GPIO_Type *base, uint32_t mask)

Do not use this function. It has been superceded by [GPIO_PortSet](#).

Global [GPIO_WritePinOutput](#) (GPIO_Type *base, uint32_t pin, uint8_t output)

Do not use this function. It has been superceded by [GPIO_PinWrite](#).

Global [PDM_SetSampleRate](#) (PDM_Type *base, uint32_t enableChannelMask, pdm_df_quality_mode_t qualityMode, uint8_t osr, uint32_t clkDiv)

Do not use this function. It has been superceded by [PDM_SetSampleRateConfig](#)

Global [SAI_RxGetDefaultConfig](#) (sai_config_t *config)

Do not use this function. It has been superceded by [SAI_GetClassicI2SConfig](#), [SAI_GetLeftJustifiedConfig](#), [SAI_GetRightJustifiedConfig](#), [SAI_GetDSPConfig](#), [SAI_GetTDMConfig](#)

Global [SAI_RxInit](#) (I2S_Type *base, const sai_config_t *config)

Do not use this function. It has been superceded by [SAI_Init](#)

Global [SAI_RxSetFormat](#) (I2S_Type *base, sai_transfer_format_t *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)

Do not use this function. It has been superceded by [SAI_RxSetConfig](#)

Global [SAI_TransferRxSetFormat](#) (I2S_Type *base, sai_handle_t *handle, sai_transfer_format_t *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)

Do not use this function. It has been superceded by [SAI_TransferRxSetConfig](#)

Global [SAI_TransferTxSetFormat](#) (I2S_Type *base, sai_handle_t *handle, [sai_transfer_format_t](#) *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)

Do not use this function. It has been superceded by [SAI_TransferTxSetConfig](#)

Global [SAI_TxGetDefaultConfig](#) ([sai_config_t](#) *config)

Do not use this function. It has been superceded by [SAI_GetClassicI2SConfig](#), [SAI_GetLeftJustifiedConfig](#), [SAI_GetRightJustifiedConfig](#), [SAI_GetDSPConfig](#), [SAI_GetTDMConfig](#)

Global [SAI_TxInit](#) (I2S_Type *base, const [sai_config_t](#) *config)

Do not use this function. It has been superceded by [SAI_Init](#)

Global [SAI_TxSetFormat](#) (I2S_Type *base, [sai_transfer_format_t](#) *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)

Do not use this function. It has been superceded by [SAI_TxSetConfig](#)

Global [SDMA_EnableSwDone](#) (SDMAARM_Type *base, [sdma_transfer_config_t](#) *config, uint8_t sel, [sdma_peripheral_t](#) type)

Do not use this function. It has been superceded by [SDMA_SetDoneConfig](#).

Chapter 6 Clock Driver

Overview

The MCUXpresso SDK provides APIs for MCUXpresso SDK devices' clock operation.

The clock driver supports:

- Clock generator (PLL, FLL, and so on) configuration
- Clock mux and divider configuration
- Getting clock frequency

Data Structures

- struct [ccm_analog_frac_pll_config_t](#)
Fractional-N PLL configuration. [More...](#)
- struct [ccm_analog_integer_pll_config_t](#)
Integer PLL configuration. [More...](#)

Macros

- #define [OSC24M_CLK_FREQ](#) 24000000U
XTAL 24M clock frequency.
- #define [CLKPAD_FREQ](#) 0U
pad clock frequency.
- #define [ECSPI_CLOCKS](#)
Clock ip name array for ECSPI.
- #define [GPIO_CLOCKS](#)
Clock ip name array for GPIO.
- #define [GPT_CLOCKS](#)
Clock ip name array for GPT.
- #define [I2C_CLOCKS](#)
Clock ip name array for I2C.
- #define [IOMUX_CLOCKS](#)
Clock ip name array for IOMUX.
- #define [IPMUX_CLOCKS](#)
Clock ip name array for IPMUX.
- #define [PWM_CLOCKS](#)
Clock ip name array for PWM.
- #define [RDC_CLOCKS](#)
Clock ip name array for RDC.
- #define [SAI_CLOCKS](#)
Clock ip name array for SAI.
- #define [RDC_SEMA42_CLOCKS](#)
Clock ip name array for RDC SEMA42.
- #define [UART_CLOCKS](#)
Clock ip name array for UART.

- #define **USDHC_CLOCKS**
Clock ip name array for USDHC.
- #define **WDOG_CLOCKS**
Clock ip name array for WDOG.
- #define **TMU_CLOCKS**
Clock ip name array for TEMPSSENSOR.
- #define **SDMA_CLOCKS**
Clock ip name array for SDMA.
- #define **MU_CLOCKS**
Clock ip name array for MU.
- #define **QSPI_CLOCKS**
Clock ip name array for QSPI.
- #define **PDM_CLOCKS**
Clock ip name array for PDM.
- #define **CCM_BIT_FIELD_EXTRACTION**(val, mask, shift) (((val) & (mask)) >> (shift))
CCM reg macros to extract corresponding registers bit field.
- #define **CCM_REG_OFF**(root, off) (*((volatile uint32_t *)((uint32_t)(root) + (off))))
CCM reg macros to map corresponding registers.
- #define **AUDIO_PLL1_GEN_CTRL_OFFSET** 0x00
CCM Analog registers offset.
- #define **CCM_ANALOG_TUPLE**(reg, shift) (((reg)&0xFFFFU) << 16U) | ((shift)))
CCM ANALOG tuple macros to map corresponding registers and bit fields.
- #define **CCM_TUPLE**(ccgr, root) ((ccgr) << 16U | (root))
CCM CCGR and root tuple.
- #define **kCLOCK_CoreSysClk** **kCLOCK_CoreM4Clk**
For compatible with other platforms without CCM.
- #define **CLOCK_GetCoreSysClkFreq** **CLOCK_GetCoreM4Freq**
For compatible with other platforms without CCM.

Enumerations

- enum **clock_name_t** {
 kCLOCK_CoreM4Clk,
 kCLOCK_AxiClk,
 kCLOCK_AhbClk,
 kCLOCK_IpgClk }
Clock name used to get clock frequency.
- enum **clock_ip_name_t** { ,

```

kCLOCK_Debug = CCM_TUPLE(4U, 32U),
kCLOCK_Dram = CCM_TUPLE(5U, 64U),
kCLOCK_Ecspi1 = CCM_TUPLE(7U, 101U),
kCLOCK_Ecspi2 = CCM_TUPLE(8U, 102U),
kCLOCK_Ecspi3 = CCM_TUPLE(9U, 131U),
kCLOCK_Gpio1 = CCM_TUPLE(11U, 33U),
kCLOCK_Gpio2 = CCM_TUPLE(12U, 33U),
kCLOCK_Gpio3 = CCM_TUPLE(13U, 33U),
kCLOCK_Gpio4 = CCM_TUPLE(14U, 33U),
kCLOCK_Gpio5 = CCM_TUPLE(15U, 33U),
kCLOCK_Gpt1 = CCM_TUPLE(16U, 107U),
kCLOCK_Gpt2 = CCM_TUPLE(17U, 108U),
kCLOCK_Gpt3 = CCM_TUPLE(18U, 109U),
kCLOCK_Gpt4 = CCM_TUPLE(19U, 110U),
kCLOCK_Gpt5 = CCM_TUPLE(20U, 111U),
kCLOCK_Gpt6 = CCM_TUPLE(21U, 112U),
kCLOCK_I2c1 = CCM_TUPLE(23U, 90U),
kCLOCK_I2c2 = CCM_TUPLE(24U, 91U),
kCLOCK_I2c3 = CCM_TUPLE(25U, 92U),
kCLOCK_I2c4 = CCM_TUPLE(26U, 93U),
kCLOCK_Iomux = CCM_TUPLE(27U, 33U),
kCLOCK_Ipmux1 = CCM_TUPLE(28U, 33U),
kCLOCK_Ipmux2 = CCM_TUPLE(29U, 33U),
kCLOCK_Ipmux3 = CCM_TUPLE(30U, 33U),
kCLOCK_Ipmux4 = CCM_TUPLE(31U, 33U),
kCLOCK_Mu = CCM_TUPLE(33U, 33U),
kCLOCK_Ocram = CCM_TUPLE(35U, 16U),
kCLOCK_OcramS = CCM_TUPLE(36U, 32U),
kCLOCK_Pwm1 = CCM_TUPLE(40U, 103U),
kCLOCK_Pwm2 = CCM_TUPLE(41U, 104U),
kCLOCK_Pwm3 = CCM_TUPLE(42U, 105U),
kCLOCK_Pwm4 = CCM_TUPLE(43U, 106U),
kCLOCK_Qspi = CCM_TUPLE(47U, 87U),
kCLOCK_Rdc = CCM_TUPLE(49U, 33U),
kCLOCK_Sai1 = CCM_TUPLE(51U, 75U),
kCLOCK_Sai2 = CCM_TUPLE(52U, 76U),
kCLOCK_Sai3 = CCM_TUPLE(53U, 77U),
kCLOCK_Sai4 = CCM_TUPLE(54U, 78U),
kCLOCK_Sai5 = CCM_TUPLE(55U, 79U),
kCLOCK_Sai6 = CCM_TUPLE(56U, 80U),
kCLOCK_Sdma1 = CCM_TUPLE(58U, 33U),
kCLOCK_Sdma2 = CCM_TUPLE(59U, 35U),
kCLOCK_Sec_Debug = CCM_TUPLE(60U, 33U),
kCLOCK_Sema42_1 = CCM_TUPLE(61U, 33U),
kCLOCK_Sema42_2 = CCM_TUPLE(62U, 33U),
kCLOCK_Sim_display = CCM_TUPLE(63U, 16U),
kCLOCK_Sim_m = CCM_TUPLE(65U, 32U),
kCLOCK_Sim_main = CCM_TUPLE(66U, 16U),
kCLOCK_Sim_s = CCM_TUPLE(67U, 32U),

```

```
kCLOCK_TempSensor = CCM_TUPLE(98U, 0xFFFF) }
```

CCM CCGR gate control.

- enum `clock_root_control_t` {


```

kCLOCK_RootM4 = (uint32_t)(amp(CCM)->ROOT[1].TARGET_ROOT),
kCLOCK_RootAxi = (uint32_t)(amp(CCM)->ROOT[16].TARGET_ROOT),
kCLOCK_RootNoc = (uint32_t)(amp(CCM)->ROOT[26].TARGET_ROOT),
kCLOCK_RootAhb = (uint32_t)(amp(CCM)->ROOT[32].TARGET_ROOT),
kCLOCK_RootIpg = (uint32_t)(amp(CCM)->ROOT[33].TARGET_ROOT),
kCLOCK_RootAudioAhb = (uint32_t)(amp(CCM)->ROOT[34].TARGET_ROOT),
kCLOCK_RootAudioIpg = (uint32_t)(amp(CCM)->ROOT[35].TARGET_ROOT),
kCLOCK_RootDramAlt = (uint32_t)(amp(CCM)->ROOT[64].TARGET_ROOT),
kCLOCK_RootSai1 = (uint32_t)(amp(CCM)->ROOT[75].TARGET_ROOT),
kCLOCK_RootSai2 = (uint32_t)(amp(CCM)->ROOT[76].TARGET_ROOT),
kCLOCK_RootSai3 = (uint32_t)(amp(CCM)->ROOT[77].TARGET_ROOT),
kCLOCK_RootSai4 = (uint32_t)(amp(CCM)->ROOT[78].TARGET_ROOT),
kCLOCK_RootSai5 = (uint32_t)(amp(CCM)->ROOT[79].TARGET_ROOT),
kCLOCK_RootSai6 = (uint32_t)(amp(CCM)->ROOT[80].TARGET_ROOT),
kCLOCK_RootQspi = (uint32_t)(amp(CCM)->ROOT[87].TARGET_ROOT),
kCLOCK_RootI2c1 = (uint32_t)(amp(CCM)->ROOT[90].TARGET_ROOT),
kCLOCK_RootI2c2 = (uint32_t)(amp(CCM)->ROOT[91].TARGET_ROOT),
kCLOCK_RootI2c3 = (uint32_t)(amp(CCM)->ROOT[92].TARGET_ROOT),
kCLOCK_RootI2c4 = (uint32_t)(amp(CCM)->ROOT[93].TARGET_ROOT),
kCLOCK_RootUart1 = (uint32_t)(amp(CCM)->ROOT[94].TARGET_ROOT),
kCLOCK_RootUart2 = (uint32_t)(amp(CCM)->ROOT[95].TARGET_ROOT),
kCLOCK_RootUart3 = (uint32_t)(amp(CCM)->ROOT[96].TARGET_ROOT),
kCLOCK_RootUart4 = (uint32_t)(amp(CCM)->ROOT[97].TARGET_ROOT),
kCLOCK_RootEcspi1 = (uint32_t)(amp(CCM)->ROOT[101].TARGET_ROOT),
kCLOCK_RootEcspi2 = (uint32_t)(amp(CCM)->ROOT[102].TARGET_ROOT),
kCLOCK_RootEcspi3 = (uint32_t)(amp(CCM)->ROOT[131].TARGET_ROOT),
kCLOCK_RootPwm1 = (uint32_t)(amp(CCM)->ROOT[103].TARGET_ROOT),
kCLOCK_RootPwm2 = (uint32_t)(amp(CCM)->ROOT[104].TARGET_ROOT),
kCLOCK_RootPwm3 = (uint32_t)(amp(CCM)->ROOT[105].TARGET_ROOT),
kCLOCK_RootPwm4 = (uint32_t)(amp(CCM)->ROOT[106].TARGET_ROOT),
kCLOCK_RootGpt1 = (uint32_t)(amp(CCM)->ROOT[107].TARGET_ROOT),
kCLOCK_RootGpt2 = (uint32_t)(amp(CCM)->ROOT[108].TARGET_ROOT),
kCLOCK_RootGpt3 = (uint32_t)(amp(CCM)->ROOT[109].TARGET_ROOT),
kCLOCK_RootGpt4 = (uint32_t)(amp(CCM)->ROOT[110].TARGET_ROOT),
kCLOCK_RootGpt5 = (uint32_t)(amp(CCM)->ROOT[111].TARGET_ROOT),
kCLOCK_RootGpt6 = (uint32_t)(amp(CCM)->ROOT[112].TARGET_ROOT),
kCLOCK_RootWdog = (uint32_t)(amp(CCM)->ROOT[114].TARGET_ROOT),
kCLOCK_RootPdm = (uint32_t)(amp(CCM)->ROOT[132].TARGET_ROOT) }
```

ccm root name used to get clock frequency.

- enum `clock_rootmux_m4_clk_sel_t` {

```

kCLOCK_M4RootmuxOsc24M = 0U,
kCLOCK_M4RootmuxSysPll2Div5 = 1U,
kCLOCK_M4RootmuxSysPll2Div4 = 2U,
kCLOCK_M4RootmuxSysPll1Div3 = 3U,
kCLOCK_M4RootmuxSysPll1 = 4U,
kCLOCK_M4RootmuxAudioPll1 = 5U,
kCLOCK_M4RootmuxVideoPll1 = 6U,
kCLOCK_M4RootmuxSysPll3 = 7U }

```

Root clock select enumeration for ARM Cortex-M4 core.

- enum `clock_rootmux_axi_clk_sel_t` {
`kCLOCK_AxiRootmuxOsc24M` = 0U,
`kCLOCK_AxiRootmuxSysPll2Div3` = 1U,
`kCLOCK_AxiRootmuxSysPll1` = 2U,
`kCLOCK_AxiRootmuxSysPll2Div4` = 3U,
`kCLOCK_AxiRootmuxSysPll2` = 4U,
`kCLOCK_AxiRootmuxAudioPll1` = 5U,
`kCLOCK_AxiRootmuxVideoPll1` = 6U,
`kCLOCK_AxiRootmuxSysPll1Div8` = 7U }

Root clock select enumeration for AXI bus.

- enum `clock_rootmux_ahb_clk_sel_t` {
`kCLOCK_AhbRootmuxOsc24M` = 0U,
`kCLOCK_AhbRootmuxSysPll1Div6` = 1U,
`kCLOCK_AhbRootmuxSysPll1` = 2U,
`kCLOCK_AhbRootmuxSysPll1Div2` = 3U,
`kCLOCK_AhbRootmuxSysPll2Div8` = 4U,
`kCLOCK_AhbRootmuxSysPll3` = 5U,
`kCLOCK_AhbRootmuxAudioPll1` = 6U,
`kCLOCK_AhbRootmuxVideoPll1` = 7U }

Root clock select enumeration for AHB bus.

- enum `clock_rootmux_audio_ahb_clk_sel_t` {
`kCLOCK_AudioAhbRootmuxOsc24M` = 0U,
`kCLOCK_AudioAhbRootmuxSysPll2Div2` = 1U,
`kCLOCK_AudioAhbRootmuxSysPll1` = 2U,
`kCLOCK_AudioAhbRootmuxSysPll2` = 3U,
`kCLOCK_AudioAhbRootmuxSysPll2Div6` = 4U,
`kCLOCK_AudioAhbRootmuxSysPll3` = 5U,
`kCLOCK_AudioAhbRootmuxAudioPll1` = 6U,
`kCLOCK_AudioAhbRootmuxVideoPll1` = 7U }

Root clock select enumeration for Audio AHB bus.

- enum `clock_rootmux_qspi_clk_sel_t` {

```

kCLOCK_QspiRootmuxOsc24M = 0U,
kCLOCK_QspiRootmuxSysPll1Div2 = 1U,
kCLOCK_QspiRootmuxSysPll2Div3 = 2U,
kCLOCK_QspiRootmuxSysPll2Div2 = 3U,
kCLOCK_QspiRootmuxAudioPll2 = 4U,
kCLOCK_QspiRootmuxSysPll1Div3 = 5U,
kCLOCK_QspiRootmuxSysPll3 = 6,
kCLOCK_QspiRootmuxSysPll1Div8 = 7U }

```

Root clock select enumeration for QSPI peripheral.

- enum `clock_rootmux_ecspi_clk_sel_t` {
`kCLOCK_EcspiRootmuxOsc24M = 0U,`
`kCLOCK_EcspiRootmuxSysPll2Div5 = 1U,`
`kCLOCK_EcspiRootmuxSysPll1Div20 = 2U,`
`kCLOCK_EcspiRootmuxSysPll1Div5 = 3U,`
`kCLOCK_EcspiRootmuxSysPll1 = 4U,`
`kCLOCK_EcspiRootmuxSysPll3 = 5U,`
`kCLOCK_EcspiRootmuxSysPll2Div4 = 6U,`
`kCLOCK_EcspiRootmuxAudioPll2 = 7U }`

Root clock select enumeration for ECSPi peripheral.

- enum `clock_rootmux_i2c_clk_sel_t` {
`kCLOCK_I2cRootmuxOsc24M = 0U,`
`kCLOCK_I2cRootmuxSysPll1Div5 = 1U,`
`kCLOCK_I2cRootmuxSysPll2Div20 = 2U,`
`kCLOCK_I2cRootmuxSysPll3 = 3U,`
`kCLOCK_I2cRootmuxAudioPll1 = 4U,`
`kCLOCK_I2cRootmuxVideoPll1 = 5U,`
`kCLOCK_I2cRootmuxAudioPll2 = 6U,`
`kCLOCK_I2cRootmuxSysPll1Div6 = 7U }`

Root clock select enumeration for I2C peripheral.

- enum `clock_rootmux_uart_clk_sel_t` {
`kCLOCK_UartRootmuxOsc24M = 0U,`
`kCLOCK_UartRootmuxSysPll1Div10 = 1U,`
`kCLOCK_UartRootmuxSysPll2Div5 = 2U,`
`kCLOCK_UartRootmuxSysPll2Div10 = 3U,`
`kCLOCK_UartRootmuxSysPll3 = 4U,`
`kCLOCK_UartRootmuxExtClk2 = 5U,`
`kCLOCK_UartRootmuxExtClk34 = 6U,`
`kCLOCK_UartRootmuxAudioPll2 = 7U }`

Root clock select enumeration for UART peripheral.

- enum `clock_rootmux_gpt_t` {

```

kCLOCK_GptRootmuxOsc24M = 0U,
kCLOCK_GptRootmuxSystemPll2Div10 = 1U,
kCLOCK_GptRootmuxSysPll1Div2 = 2U,
kCLOCK_GptRootmuxSysPll1Div20 = 3U,
kCLOCK_GptRootmuxVideoPll1 = 4U,
kCLOCK_GptRootmuxSystemPll1Div10 = 5U,
kCLOCK_GptRootmuxAudioPll1 = 6U,
kCLOCK_GptRootmuxExtClk123 = 7U }

```

Root clock select enumeration for GPT peripheral.

- enum `clock_rootmux_wdog_clk_sel_t` {
`kCLOCK_WdogRootmuxOsc24M` = 0U,
`kCLOCK_WdogRootmuxSysPll1Div6` = 1U,
`kCLOCK_WdogRootmuxSysPll1Div5` = 2U,
`kCLOCK_WdogRootmuxVpuPll` = 3U,
`kCLOCK_WdogRootmuxSystemPll2Div8` = 4U,
`kCLOCK_WdogRootmuxSystemPll3` = 5U,
`kCLOCK_WdogRootmuxSystemPll1Div10` = 6U,
`kCLOCK_WdogRootmuxSystemPll2Div6` = 7U }

Root clock select enumeration for WDOG peripheral.

- enum `clock_rootmux_Pwm_clk_sel_t` {
`kCLOCK_PwmRootmuxOsc24M` = 0U,
`kCLOCK_PwmRootmuxSysPll2Div10` = 1U,
`kCLOCK_PwmRootmuxSysPll1Div5` = 2U,
`kCLOCK_PwmRootmuxSysPll1Div20` = 3U,
`kCLOCK_PwmRootmuxSystemPll3` = 4U,
`kCLOCK_PwmRootmuxExtClk12` = 5U,
`kCLOCK_PwmRootmuxSystemPll1Div10` = 6U,
`kCLOCK_PwmRootmuxVideoPll1` = 7U }

Root clock select enumeration for PWM peripheral.

- enum `clock_rootmux_sai_clk_sel_t` {
`kCLOCK_SaiRootmuxOsc24M` = 0U,
`kCLOCK_SaiRootmuxAudioPll1` = 1U,
`kCLOCK_SaiRootmuxAudioPll2` = 2U,
`kCLOCK_SaiRootmuxVideoPll1` = 3U,
`kCLOCK_SaiRootmuxSysPll1Div6` = 4U,
`kCLOCK_SaiRootmuxOsc26m` = 5U,
`kCLOCK_SaiRootmuxExtClk1` = 6U,
`kCLOCK_SaiRootmuxExtClk2` = 7U }

Root clock select enumeration for SAI peripheral.

- enum `clock_rootmux_pdm_clk_sel_t` {


```

kCLOCK_PdmRootmuxOsc24M = 0U,
kCLOCK_PdmRootmuxSystemPll2 = 1U,
kCLOCK_PdmRootmuxAudioPll1 = 2U,
kCLOCK_PdmRootmuxSysPll1 = 3U,
kCLOCK_PdmRootmuxSysPll2 = 4U,
kCLOCK_PdmRootmuxSysPll3 = 5U,
kCLOCK_PdmRootmuxExtClk3 = 6U,
kCLOCK_PdmRootmuxAudioPll2 = 7U }

```

Root clock select enumeration for PDM peripheral.

- enum `clock_rootmux_noc_clk_sel_t` {
`kCLOCK_NocRootmuxOsc24M` = 0U,
`kCLOCK_NocRootmuxSysPll1` = 1U,
`kCLOCK_NocRootmuxSysPll3` = 2U,
`kCLOCK_NocRootmuxSysPll2` = 3U,
`kCLOCK_NocRootmuxSysPll2Div2` = 4U,
`kCLOCK_NocRootmuxAudioPll1` = 5U,
`kCLOCK_NocRootmuxVideoPll1` = 6U,
`kCLOCK_NocRootmuxAudioPll2` = 7U }

Root clock select enumeration for NOC CLK.

- enum `clock_pll_gate_t` {

```

kCLOCK_ArmPllGate = (uint32_t)(amp(ccm)->pll_ctrl[12].pll_ctrl),
kCLOCK_GpuPllGate = (uint32_t)(amp(ccm)->pll_ctrl[13].pll_ctrl),
kCLOCK_VpuPllGate = (uint32_t)(amp(ccm)->pll_ctrl[14].pll_ctrl),
kCLOCK_DramPllGate = (uint32_t)(amp(ccm)->pll_ctrl[15].pll_ctrl),
kCLOCK_SysPll1Gate = (uint32_t)(amp(ccm)->pll_ctrl[16].pll_ctrl),
kCLOCK_SysPll1Div2Gate = (uint32_t)(amp(ccm)->pll_ctrl[17].pll_ctrl),
kCLOCK_SysPll1Div3Gate = (uint32_t)(amp(ccm)->pll_ctrl[18].pll_ctrl),
kCLOCK_SysPll1Div4Gate = (uint32_t)(amp(ccm)->pll_ctrl[19].pll_ctrl),
kCLOCK_SysPll1Div5Gate = (uint32_t)(amp(ccm)->pll_ctrl[20].pll_ctrl),
kCLOCK_SysPll1Div6Gate = (uint32_t)(amp(ccm)->pll_ctrl[21].pll_ctrl),
kCLOCK_SysPll1Div8Gate = (uint32_t)(amp(ccm)->pll_ctrl[22].pll_ctrl),
kCLOCK_SysPll1Div10Gate = (uint32_t)(amp(ccm)->pll_ctrl[23].pll_ctrl),
kCLOCK_SysPll1Div20Gate = (uint32_t)(amp(ccm)->pll_ctrl[24].pll_ctrl),
kCLOCK_SysPll2Gate = (uint32_t)(amp(ccm)->pll_ctrl[25].pll_ctrl),
kCLOCK_SysPll2Div2Gate = (uint32_t)(amp(ccm)->pll_ctrl[26].pll_ctrl),
kCLOCK_SysPll2Div3Gate = (uint32_t)(amp(ccm)->pll_ctrl[27].pll_ctrl),
kCLOCK_SysPll2Div4Gate = (uint32_t)(amp(ccm)->pll_ctrl[28].pll_ctrl),
kCLOCK_SysPll2Div5Gate = (uint32_t)(amp(ccm)->pll_ctrl[29].pll_ctrl),
kCLOCK_SysPll2Div6Gate = (uint32_t)(amp(ccm)->pll_ctrl[30].pll_ctrl),
kCLOCK_SysPll2Div8Gate = (uint32_t)(amp(ccm)->pll_ctrl[31].pll_ctrl),
kCLOCK_SysPll2Div10Gate = (uint32_t)(amp(ccm)->pll_ctrl[32].pll_ctrl),
kCLOCK_SysPll2Div20Gate = (uint32_t)(amp(ccm)->pll_ctrl[33].pll_ctrl),
kCLOCK_SysPll3Gate = (uint32_t)(amp(ccm)->pll_ctrl[34].pll_ctrl),
kCLOCK_AudioPll1Gate = (uint32_t)(amp(ccm)->pll_ctrl[35].pll_ctrl),
kCLOCK_AudioPll2Gate = (uint32_t)(amp(ccm)->pll_ctrl[36].pll_ctrl),
kCLOCK_VideoPll1Gate = (uint32_t)(amp(ccm)->pll_ctrl[37].pll_ctrl),
kCLOCK_VideoPll2Gate = (uint32_t)(amp(ccm)->pll_ctrl[38].pll_ctrl) }

```

CCM PLL gate control.

- enum clock_gate_value_t {


```

kCLOCK_ClockNotNeeded = 0x0U,
kCLOCK_ClockNeededRun = 0x1111U,
kCLOCK_ClockNeededRunWait = 0x2222U,
kCLOCK_ClockNeededAll = 0x3333U }

```

CCM gate control value.

- enum clock_pll_bypass_ctrl_t {


```

kCLOCK_AudioPll1BypassCtrl,
kCLOCK_AudioPll2BypassCtrl,
kCLOCK_VideoPll1BypassCtrl,
kCLOCK_DramPllInternalPll1BypassCtrl,
kCLOCK_GpuPLLpwrBypassCtrl,
kCLOCK_VpuPllPwrBypassCtrl,
kCLOCK_ArmPllPwrBypassCtrl,
kCLOCK_SysPll1InternalPll1BypassCtrl,
kCLOCK_SysPll2InternalPll1BypassCtrl,
kCLOCK_SysPll3InternalPll1BypassCtrl }

```

PLL control names for PLL bypass.

- enum `clock_pll_clke_t` {
`kCLOCK_AudioPll1Clke`,
`kCLOCK_AudioPll2Clke`,
`kCLOCK_VideoPll1Clke`,
`kCLOCK_DramPllClke`,
`kCLOCK_GpuPllClke`,
`kCLOCK_VpuPllClke`,
`kCLOCK_ArmPllClke`,
`kCLOCK_SystemPll1Clke`,
`kCLOCK_SystemPll1Div2Clke`,
`kCLOCK_SystemPll1Div3Clke`,
`kCLOCK_SystemPll1Div4Clke`,
`kCLOCK_SystemPll1Div5Clke`,
`kCLOCK_SystemPll1Div6Clke`,
`kCLOCK_SystemPll1Div8Clke`,
`kCLOCK_SystemPll1Div10Clke`,
`kCLOCK_SystemPll1Div20Clke`,
`kCLOCK_SystemPll2Clke`,
`kCLOCK_SystemPll2Div2Clke`,
`kCLOCK_SystemPll2Div3Clke`,
`kCLOCK_SystemPll2Div4Clke`,
`kCLOCK_SystemPll2Div5Clke`,
`kCLOCK_SystemPll2Div6Clke`,
`kCLOCK_SystemPll2Div8Clke`,
`kCLOCK_SystemPll2Div10Clke`,
`kCLOCK_SystemPll2Div20Clke`,
`kCLOCK_SystemPll3Clke` }

PLL clock names for clock enable/disable settings.

- enum `clock_pll_ctrl_t`
ANALOG Power down override control.
- enum {
`kANALOG_PllRefOsc24M` = 0U,
`kANALOG_PllPadClk` = 1U }

PLL reference clock select.

Driver version

- #define `FSL_CLOCK_DRIVER_VERSION` (MAKE_VERSION(2, 2, 2))
CLOCK driver version 2.2.2.

CCM Root Clock Setting

- static void `CLOCK_SetRootMux` (`clock_root_control_t` rootClk, `uint32_t` mux)
Set clock root mux.
- static `uint32_t` `CLOCK_GetRootMux` (`clock_root_control_t` rootClk)
Get clock root mux.

- static void [CLOCK_EnableRoot](#) ([clock_root_control_t](#) rootClk)
Enable clock root.
- static void [CLOCK_DisableRoot](#) ([clock_root_control_t](#) rootClk)
Disable clock root.
- static bool [CLOCK_IsRootEnabled](#) ([clock_root_control_t](#) rootClk)
Check whether clock root is enabled.
- void [CLOCK_UpdateRoot](#) ([clock_root_control_t](#) ccmRootClk, uint32_t mux, uint32_t pre, uint32_t post)
Update clock root in one step, for dynamical clock switching Note: The PRE and POST dividers in this function are the actually divider; software will map it to register value.
- void [CLOCK_SetRootDivider](#) ([clock_root_control_t](#) ccmRootClk, uint32_t pre, uint32_t post)
Set root clock divider Note: The PRE and POST dividers in this function are the actually divider; software will map it to register value.
- static uint32_t [CLOCK_GetRootPreDivider](#) ([clock_root_control_t](#) rootClk)
Get clock root PRE_PODF.
- static uint32_t [CLOCK_GetRootPostDivider](#) ([clock_root_control_t](#) rootClk)
Get clock root POST_PODF.

CCM Gate Control

- static void [CLOCK_ControlGate](#) (uint32_t ccmGate, [clock_gate_value_t](#) control)
Set PLL or CCGR gate control.
- void [CLOCK_EnableClock](#) ([clock_ip_name_t](#) ccmGate)
Enable CCGR clock gate and root clock gate for each module User should set specific gate for each module according to the description of the table of system clocks, gating and override in CCM chapter of reference manual.
- void [CLOCK_DisableClock](#) ([clock_ip_name_t](#) ccmGate)
Disable CCGR clock gate for the each module User should set specific gate for each module according to the description of the table of system clocks, gating and override in CCM chapter of reference manual.

CCM Analog PLL Operatoin Functions

- static void [CLOCK_PowerUpPll](#) (CCM_ANALOG_Type *base, [clock_pll_ctrl_t](#) pllControl)
Power up PLL.
- static void [CLOCK_PowerDownPll](#) (CCM_ANALOG_Type *base, [clock_pll_ctrl_t](#) pllControl)
Power down PLL.
- static void [CLOCK_SetPllBypass](#) (CCM_ANALOG_Type *base, [clock_pll_bypass_ctrl_t](#) pllControl, bool bypass)
PLL bypass setting.
- static bool [CLOCK_IsPllBypassed](#) (CCM_ANALOG_Type *base, [clock_pll_bypass_ctrl_t](#) pllControl)
Check if PLL is bypassed.
- static bool [CLOCK_IsPllLocked](#) (CCM_ANALOG_Type *base, [clock_pll_ctrl_t](#) pllControl)
Check if PLL clock is locked.
- static void [CLOCK_EnableAnalogClock](#) (CCM_ANALOG_Type *base, [clock_pll_clke_t](#) pllClock)
Enable PLL clock.
- static void [CLOCK_DisableAnalogClock](#) (CCM_ANALOG_Type *base, [clock_pll_clke_t](#) pllClock)
Disable PLL clock.

- static void **CLOCK_OverridePllClke** (CCM_ANALOG_Type *base, clock_pll_clke_t ovClock, bool override)
Override PLL clock output enable.
- static void **CLOCK_OverridePllPd** (CCM_ANALOG_Type *base, clock_pll_ctrl_t pdClock, bool override)
Override PLL power down.
- void **CLOCK_InitArmPll** (const ccm_analog_integer_pll_config_t *config)
Initializes the ANALOG ARM PLL.
- void **CLOCK_DeinitArmPll** (void)
De-initialize the ARM PLL.
- void **CLOCK_InitSysPll1** (const ccm_analog_integer_pll_config_t *config)
Initializes the ANALOG SYS PLL1.
- void **CLOCK_DeinitSysPll1** (void)
De-initialize the System PLL1.
- void **CLOCK_InitSysPll2** (const ccm_analog_integer_pll_config_t *config)
Initializes the ANALOG SYS PLL2.
- void **CLOCK_DeinitSysPll2** (void)
De-initialize the System PLL2.
- void **CLOCK_InitSysPll3** (const ccm_analog_integer_pll_config_t *config)
Initializes the ANALOG SYS PLL3.
- void **CLOCK_DeinitSysPll3** (void)
De-initialize the System PLL3.
- void **CLOCK_InitAudioPll1** (const ccm_analog_frac_pll_config_t *config)
Initializes the ANALOG AUDIO PLL1.
- void **CLOCK_DeinitAudioPll1** (void)
De-initialize the Audio PLL1.
- void **CLOCK_InitAudioPll2** (const ccm_analog_frac_pll_config_t *config)
Initializes the ANALOG AUDIO PLL2.
- void **CLOCK_DeinitAudioPll2** (void)
De-initialize the Audio PLL2.
- void **CLOCK_InitVideoPll1** (const ccm_analog_frac_pll_config_t *config)
Initializes the ANALOG VIDEO PLL1.
- void **CLOCK_DeinitVideoPll1** (void)
De-initialize the Video PLL1.
- void **CLOCK_InitIntegerPll** (CCM_ANALOG_Type *base, const ccm_analog_integer_pll_config_t *config, clock_pll_ctrl_t type)
Initializes the ANALOG Integer PLL.
- uint32_t **CLOCK_GetIntegerPllFreq** (CCM_ANALOG_Type *base, clock_pll_ctrl_t type, uint32_t refClkFreq, bool pll1Bypass)
Get the ANALOG Integer PLL clock frequency.
- void **CLOCK_InitFracPll** (CCM_ANALOG_Type *base, const ccm_analog_frac_pll_config_t *config, clock_pll_ctrl_t type)
Initializes the ANALOG Fractional PLL.
- uint32_t **CLOCK_GetFracPllFreq** (CCM_ANALOG_Type *base, clock_pll_ctrl_t type, uint32_t refClkFreq)
Gets the ANALOG Fractional PLL clock frequency.
- uint32_t **CLOCK_GetPllFreq** (clock_pll_ctrl_t pll)
Gets PLL clock frequency.
- uint32_t **CLOCK_GetPllRefClkFreq** (clock_pll_ctrl_t ctrl)
Gets PLL reference clock frequency.

CCM Get frequency

- uint32_t [CLOCK_GetFreq](#) ([clock_name_t](#) clockName)
Gets the clock frequency for a specific clock name.
- uint32_t [CLOCK_GetCoreM4Freq](#) (void)
Get the CCM Cortex M4 core frequency.
- uint32_t [CLOCK_GetAxiFreq](#) (void)
Get the CCM Axi bus frequency.
- uint32_t [CLOCK_GetAhbFreq](#) (void)
Get the CCM Ahb bus frequency.

Data Structure Documentation

6.2.1 struct ccm_analog_frac_pll_config_t

Note: all the dividers in this configuration structure are the actually divider, software will map it to register value

Data Fields

- uint8_t [refSel](#)
pll reference clock sel
- uint32_t [mainDiv](#)
Value of the 10-bit programmable main-divider; range must be 64~1023.
- uint32_t [dsm](#)
Value of 16-bit DSM.
- uint8_t [preDiv](#)
Value of the 6-bit programmable pre-divider; range must be 1~63.
- uint8_t [postDiv](#)
Value of the 3-bit programmable Scaler; range must be 0~6.

6.2.2 struct ccm_analog_integer_pll_config_t

Note: all the dividers in this configuration structure are the actually divider, software will map it to register value

Data Fields

- uint8_t [refSel](#)
pll reference clock sel
- uint32_t [mainDiv](#)
Value of the 10-bit programmable main-divider; range must be 64~1023.
- uint8_t [preDiv](#)
Value of the 6-bit programmable pre-divider; range must be 1~63.
- uint8_t [postDiv](#)
Value of the 3-bit programmable Scaler; range must be 0~6.

Macro Definition Documentation

6.3.1 #define FSL_CLOCK_DRIVER_VERSION (MAKE_VERSION(2, 2, 2))

6.3.2 #define ECSPI_CLOCKS

Value:

```
{  
    kCLOCK_IpInvalid, kCLOCK_Ecspi1, kCLOCK_Ecspi2,  
    kCLOCK_Ecspi3, \  
}
```

6.3.3 #define GPIO_CLOCKS

Value:

```
{  
    kCLOCK_IpInvalid, kCLOCK_Gpio1, kCLOCK_Gpio2,  
    kCLOCK_Gpio3, kCLOCK_Gpio4, kCLOCK_Gpio5, \  
}
```

6.3.4 #define GPT_CLOCKS

Value:

```
{  
    kCLOCK_IpInvalid, kCLOCK_Gpt1, kCLOCK_Gpt2,  
    kCLOCK_Gpt3, kCLOCK_Gpt4, kCLOCK_Gpt5,  
    kCLOCK_Gpt6, \  
}
```

6.3.5 #define I2C_CLOCKS

Value:

```
{  
    kCLOCK_IpInvalid, kCLOCK_I2c1, kCLOCK_I2c2,  
    kCLOCK_I2c3, kCLOCK_I2c4, \  
}
```

6.3.6 #define IOMUX_CLOCKS

Value:

```
{
    kCLOCK_Iomux, \
}
```

6.3.7 #define IPMUX_CLOCKS

Value:

```
{
    kCLOCK_Ipmux1, kCLOCK_Ipmux2, \
    kCLOCK_Ipmux3, kCLOCK_Ipmux4, \
}
```

6.3.8 #define PWM_CLOCKS

Value:

```
{
    kCLOCK_IpInvalid, kCLOCK_Pwm1, kCLOCK_Pwm2, \
    kCLOCK_Pwm3, kCLOCK_Pwm4, \
}
```

6.3.9 #define RDC_CLOCKS

Value:

```
{
    kCLOCK_Rdc, \
}
```

6.3.10 #define SAI_CLOCKS

Value:

```
{
    kCLOCK_IpInvalid, kCLOCK_Sai1, kCLOCK_Sai2, \
    kCLOCK_Sai3, kCLOCK_Sai4, kCLOCK_Sai5, \
    kCLOCK_Sai6, \
}
```


6.3.11 #define RDC_SEMA42_CLOCKS

Value:

```
{
    kCLOCK_IpInvalid, kCLOCK_Sema42_1, kCLOCK_Sema42_2 \
}
```

6.3.12 #define UART_CLOCKS

Value:

```
{
    kCLOCK_IpInvalid, kCLOCK_Uart1, kCLOCK_Uart2, \
    kCLOCK_Uart3, kCLOCK_Uart4, \
}
```

6.3.13 #define USDHC_CLOCKS

Value:

```
{
    kCLOCK_IpInvalid, kCLOCK_Usdhc1, kCLOCK_Usdhc2, \
    kCLOCK_Usdhc3 \
}
```

6.3.14 #define WDOG_CLOCKS

Value:

```
{
    kCLOCK_IpInvalid, kCLOCK_Wdog1, kCLOCK_Wdog2, \
    kCLOCK_Wdog3 \
}
```

6.3.15 #define TMU_CLOCKS

Value:

```
{
    kCLOCK_TempSensor, \
}
```

6.3.16 #define SDMA_CLOCKS

Value:

```
{
    kCLOCK_Sdma1, kCLOCK_Sdma2, kCLOCK_Sdma3 \
}
```

6.3.17 #define MU_CLOCKS

Value:

```
{
    kCLOCK_Mu \
}
```

6.3.18 #define QSPI_CLOCKS

Value:

```
{
    kCLOCK_Qspi \
}
```

6.3.19 #define PDM_CLOCKS

Value:

```
{
    kCLOCK_Pdm \
}
```

6.3.20 #define kCLOCK_CoreSysClk kCLOCK_CoreM4Clk

6.3.21 #define CLOCK_GetCoreSysClkFreq CLOCK_GetCoreM4Freq

Enumeration Type Documentation

6.4.1 enum clock_name_t

Enumerator

kCLOCK_CoreM4Clk ARM M4 Core clock.

kCLOCK_AxiClk Main AXI bus clock.
kCLOCK_AhbClk AHB bus clock.
kCLOCK_IpgClk IPG bus clock.

6.4.2 enum clock_ip_name_t

Enumerator

kCLOCK_Debug DEBUG Clock Gate.
kCLOCK_Dram DRAM Clock Gate.
kCLOCK_Ecspi1 ECSPI1 Clock Gate.
kCLOCK_Ecspi2 ECSPI2 Clock Gate.
kCLOCK_Ecspi3 ECSPI3 Clock Gate.
kCLOCK_Gpio1 GPIO1 Clock Gate.
kCLOCK_Gpio2 GPIO2 Clock Gate.
kCLOCK_Gpio3 GPIO3 Clock Gate.
kCLOCK_Gpio4 GPIO4 Clock Gate.
kCLOCK_Gpio5 GPIO5 Clock Gate.
kCLOCK_Gpt1 GPT1 Clock Gate.
kCLOCK_Gpt2 GPT2 Clock Gate.
kCLOCK_Gpt3 GPT3 Clock Gate.
kCLOCK_Gpt4 GPT4 Clock Gate.
kCLOCK_Gpt5 GPT5 Clock Gate.
kCLOCK_Gpt6 GPT6 Clock Gate.
kCLOCK_I2c1 I2C1 Clock Gate.
kCLOCK_I2c2 I2C2 Clock Gate.
kCLOCK_I2c3 I2C3 Clock Gate.
kCLOCK_I2c4 I2C4 Clock Gate.
kCLOCK_Iomux IOMUX Clock Gate.
kCLOCK_Ipmux1 IPMUX1 Clock Gate.
kCLOCK_Ipmux2 IPMUX2 Clock Gate.
kCLOCK_Ipmux3 IPMUX3 Clock Gate.
kCLOCK_Ipmux4 IPMUX4 Clock Gate.
kCLOCK_Mu MU Clock Gate.
kCLOCK_Ocram OCRAM Clock Gate.
kCLOCK_OcramS OCRAM S Clock Gate.
kCLOCK_Pwm1 PWM1 Clock Gate.
kCLOCK_Pwm2 PWM2 Clock Gate.
kCLOCK_Pwm3 PWM3 Clock Gate.
kCLOCK_Pwm4 PWM4 Clock Gate.
kCLOCK_Qspi QSPI Clock Gate.
kCLOCK_Rdc RDC Clock Gate.
kCLOCK_Sai1 SAI1 Clock Gate.
kCLOCK_Sai2 SAI2 Clock Gate.

kCLOCK_Sai3 SAI3 Clock Gate.
kCLOCK_Sai4 SAI4 Clock Gate.
kCLOCK_Sai5 SAI5 Clock Gate.
kCLOCK_Sai6 SAI6 Clock Gate.
kCLOCK_Sdma1 SDMA1 Clock Gate.
kCLOCK_Sdma2 SDMA2 Clock Gate.
kCLOCK_Sec_Debug SEC_DEBUG Clock Gate.
kCLOCK_Sema42_1 RDC SEMA42 Clock Gate.
kCLOCK_Sema42_2 RDC SEMA42 Clock Gate.
kCLOCK_Sim_display SIM_Display Clock Gate.
kCLOCK_Sim_m SIM_M Clock Gate.
kCLOCK_Sim_main SIM_MAIN Clock Gate.
kCLOCK_Sim_s SIM_S Clock Gate.
kCLOCK_Sim_wakeup SIM_WAKEUP Clock Gate.
kCLOCK_Uart1 UART1 Clock Gate.
kCLOCK_Uart2 UART2 Clock Gate.
kCLOCK_Uart3 UART3 Clock Gate.
kCLOCK_Uart4 UART4 Clock Gate.
kCLOCK_Usdhc1 USDHC1 Clock Gate.
kCLOCK_Usdhc2 USDHC2 Clock Gate.
kCLOCK_Wdog1 WDOG1 Clock Gate.
kCLOCK_Wdog2 WDOG2 Clock Gate.
kCLOCK_Wdog3 WDOG3 Clock Gate.
kCLOCK_Pdm PDM Clock Gate.
kCLOCK_Usdhc3 USDHC3 Clock Gate.
kCLOCK_Sdma3 SDMA3 Clock Gate.
kCLOCK_TempSensor TempSensor Clock Gate.

6.4.3 enum clock_root_control_t

Enumerator

kCLOCK_RootM4 ARM Cortex-M4 Clock control name.
kCLOCK_RootAxi AXI Clock control name.
kCLOCK_RootNoc NOC Clock control name.
kCLOCK_RootAhb AHB Clock control name.
kCLOCK_RootIpg IPG Clock control name.
kCLOCK_RootAudioAhb Audio AHB Clock control name.
kCLOCK_RootAudioIpg Audio IPG Clock control name.
kCLOCK_RootDramAlt DRAM ALT Clock control name.
kCLOCK_RootSai1 SAI1 Clock control name.
kCLOCK_RootSai2 SAI2 Clock control name.
kCLOCK_RootSai3 SAI3 Clock control name.
kCLOCK_RootSai4 SAI4 Clock control name.

kCLOCK_RootSai5 SAI5 Clock control name.
kCLOCK_RootSai6 SAI6 Clock control name.
kCLOCK_RootQspi QSPI Clock control name.
kCLOCK_RootI2c1 I2C1 Clock control name.
kCLOCK_RootI2c2 I2C2 Clock control name.
kCLOCK_RootI2c3 I2C3 Clock control name.
kCLOCK_RootI2c4 I2C4 Clock control name.
kCLOCK_RootUart1 UART1 Clock control name.
kCLOCK_RootUart2 UART2 Clock control name.
kCLOCK_RootUart3 UART3 Clock control name.
kCLOCK_RootUart4 UART4 Clock control name.
kCLOCK_RootEcspi1 ECSPI1 Clock control name.
kCLOCK_RootEcspi2 ECSPI2 Clock control name.
kCLOCK_RootEcspi3 ECSPI3 Clock control name.
kCLOCK_RootPwm1 PWM1 Clock control name.
kCLOCK_RootPwm2 PWM2 Clock control name.
kCLOCK_RootPwm3 PWM3 Clock control name.
kCLOCK_RootPwm4 PWM4 Clock control name.
kCLOCK_RootGpt1 GPT1 Clock control name.
kCLOCK_RootGpt2 GPT2 Clock control name.
kCLOCK_RootGpt3 GPT3 Clock control name.
kCLOCK_RootGpt4 GPT4 Clock control name.
kCLOCK_RootGpt5 GPT5 Clock control name.
kCLOCK_RootGpt6 GPT6 Clock control name.
kCLOCK_RootWdog WDOG Clock control name.
kCLOCK_RootPdm PDM Clock control name.

6.4.4 enum clock_rootmux_m4_clk_sel_t

Enumerator

kCLOCK_M4RootmuxOsc24M ARM Cortex-M4 Clock from OSC 24M.
kCLOCK_M4RootmuxSysPll2Div5 ARM Cortex-M4 Clock from SYSTEM PLL2 divided by 5.
kCLOCK_M4RootmuxSysPll2Div4 ARM Cortex-M4 Clock from SYSTEM PLL2 divided by 4.
kCLOCK_M4RootmuxSysPll1Div3 ARM Cortex-M4 Clock from SYSTEM PLL1 divided by 3.
kCLOCK_M4RootmuxSysPll1 ARM Cortex-M4 Clock from SYSTEM PLL1.
kCLOCK_M4RootmuxAudioPll1 ARM Cortex-M4 Clock from AUDIO PLL1.
kCLOCK_M4RootmuxVideoPll1 ARM Cortex-M4 Clock from VIDEO PLL1.
kCLOCK_M4RootmuxSysPll3 ARM Cortex-M4 Clock from SYSTEM PLL3.

6.4.5 enum clock_rootmux_axi_clk_sel_t

Enumerator

kCLOCK_AxiRootmuxOsc24M ARM AXI Clock from OSC 24M.
kCLOCK_AxiRootmuxSysPll2Div3 ARM AXI Clock from SYSTEM PLL2 divided by 3.
kCLOCK_AxiRootmuxSysPll1 ARM AXI Clock from SYSTEM PLL1.
kCLOCK_AxiRootmuxSysPll2Div4 ARM AXI Clock from SYSTEM PLL2 divided by 4.
kCLOCK_AxiRootmuxSysPll2 ARM AXI Clock from SYSTEM PLL2.
kCLOCK_AxiRootmuxAudioPll1 ARM AXI Clock from AUDIO PLL1.
kCLOCK_AxiRootmuxVideoPll1 ARM AXI Clock from VIDEO PLL1.
kCLOCK_AxiRootmuxSysPll1Div8 ARM AXI Clock from SYSTEM PLL1 divided by 8.

6.4.6 enum clock_rootmux_ahb_clk_sel_t

Enumerator

kCLOCK_AhbRootmuxOsc24M ARM AHB Clock from OSC 24M.
kCLOCK_AhbRootmuxSysPll1Div6 ARM AHB Clock from SYSTEM PLL1 divided by 6.
kCLOCK_AhbRootmuxSysPll1 ARM AHB Clock from SYSTEM PLL1.
kCLOCK_AhbRootmuxSysPll1Div2 ARM AHB Clock from SYSTEM PLL1 divided by 2.
kCLOCK_AhbRootmuxSysPll2Div8 ARM AHB Clock from SYSTEM PLL2 divided by 8.
kCLOCK_AhbRootmuxSysPll3 ARM AHB Clock from SYSTEM PLL3.
kCLOCK_AhbRootmuxAudioPll1 ARM AHB Clock from AUDIO PLL1.
kCLOCK_AhbRootmuxVideoPll1 ARM AHB Clock from VIDEO PLL1.

6.4.7 enum clock_rootmux_audio_ahb_clk_sel_t

Enumerator

kCLOCK_AudioAhbRootmuxOsc24M ARM Audio AHB Clock from OSC 24M.
kCLOCK_AudioAhbRootmuxSysPll2Div2 ARM Audio AHB Clock from SYSTEM PLL2 divided by 2.
kCLOCK_AudioAhbRootmuxSysPll1 ARM Audio AHB Clock from SYSTEM PLL1.
kCLOCK_AudioAhbRootmuxSysPll2 ARM Audio AHB Clock from SYSTEM PLL2.
kCLOCK_AudioAhbRootmuxSysPll2Div6 ARM Audio AHB Clock from SYSTEM PLL2 divided by 6.
kCLOCK_AudioAhbRootmuxSysPll3 ARM Audio AHB Clock from SYSTEM PLL3.
kCLOCK_AudioAhbRootmuxAudioPll1 ARM Audio AHB Clock from AUDIO PLL1.
kCLOCK_AudioAhbRootmuxVideoPll1 ARM Audio AHB Clock from VIDEO PLL1.

6.4.8 enum clock_rootmux_qspi_clk_sel_t

Enumerator

kCLOCK_QspiRootmuxOsc24M ARM QSPI Clock from OSC 24M.
kCLOCK_QspiRootmuxSysPl1Div2 ARM QSPI Clock from SYSTEM PLL1 divided by 2.
kCLOCK_QspiRootmuxSysPl2Div3 ARM QSPI Clock from SYSTEM PLL2 divided by 3.
kCLOCK_QspiRootmuxSysPl2Div2 ARM QSPI Clock from SYSTEM PLL2 divided by 2.
kCLOCK_QspiRootmuxAudioPl2 ARM QSPI Clock from AUDIO PLL2.
kCLOCK_QspiRootmuxSysPl1Div3 ARM QSPI Clock from SYSTEM PLL1 divided by 3.
kCLOCK_QspiRootmuxSysPl3 ARM QSPI Clock from SYSTEM PLL3.
kCLOCK_QspiRootmuxSysPl1Div8 ARM QSPI Clock from SYSTEM PLL1 divided by 8.

6.4.9 enum clock_rootmux_ecspi_clk_sel_t

Enumerator

kCLOCK_EcspiRootmuxOsc24M ECSPI Clock from OSC 24M.
kCLOCK_EcspiRootmuxSysPl2Div5 ECSPI Clock from SYSTEM PLL2 divided by 5.
kCLOCK_EcspiRootmuxSysPl1Div20 ECSPI Clock from SYSTEM PLL1 divided by 20.
kCLOCK_EcspiRootmuxSysPl1Div5 ECSPI Clock from SYSTEM PLL1 divided by 5.
kCLOCK_EcspiRootmuxSysPl1 ECSPI Clock from SYSTEM PLL1.
kCLOCK_EcspiRootmuxSysPl3 ECSPI Clock from SYSTEM PLL3.
kCLOCK_EcspiRootmuxSysPl2Div4 ECSPI Clock from SYSTEM PLL2 divided by 4.
kCLOCK_EcspiRootmuxAudioPl2 ECSPI Clock from AUDIO PLL2.

6.4.10 enum clock_rootmux_i2c_clk_sel_t

Enumerator

kCLOCK_I2cRootmuxOsc24M I2C Clock from OSC 24M.
kCLOCK_I2cRootmuxSysPl1Div5 I2C Clock from SYSTEM PLL1 divided by 5.
kCLOCK_I2cRootmuxSysPl2Div20 I2C Clock from SYSTEM PLL2 divided by 20.
kCLOCK_I2cRootmuxSysPl3 I2C Clock from SYSTEM PLL3 .
kCLOCK_I2cRootmuxAudioPl1 I2C Clock from AUDIO PLL1.
kCLOCK_I2cRootmuxVideoPl1 I2C Clock from VIDEO PLL1.
kCLOCK_I2cRootmuxAudioPl2 I2C Clock from AUDIO PLL2.
kCLOCK_I2cRootmuxSysPl1Div6 I2C Clock from SYSTEM PLL1 divided by 6.

6.4.11 enum clock_rootmux_uart_clk_sel_t

Enumerator

kCLOCK_UartRootmuxOsc24M UART Clock from OSC 24M.
kCLOCK_UartRootmuxSysPll1Div10 UART Clock from SYSTEM PLL1 divided by 10.
kCLOCK_UartRootmuxSysPll2Div5 UART Clock from SYSTEM PLL2 divided by 5.
kCLOCK_UartRootmuxSysPll2Div10 UART Clock from SYSTEM PLL2 divided by 10.
kCLOCK_UartRootmuxSysPll3 UART Clock from SYSTEM PLL3.
kCLOCK_UartRootmuxExtClk2 UART Clock from External Clock 2.
kCLOCK_UartRootmuxExtClk34 UART Clock from External Clock 3, External Clock 4.
kCLOCK_UartRootmuxAudioPll2 UART Clock from Audio PLL2.

6.4.12 enum clock_rootmux_gpt_t

Enumerator

kCLOCK_GptRootmuxOsc24M GPT Clock from OSC 24M.
kCLOCK_GptRootmuxSystemPll2Div10 GPT Clock from SYSTEM PLL2 divided by 10.
kCLOCK_GptRootmuxSysPll1Div2 GPT Clock from SYSTEM PLL1 divided by 2.
kCLOCK_GptRootmuxSysPll1Div20 GPT Clock from SYSTEM PLL1 divided by 20.
kCLOCK_GptRootmuxVideoPll1 GPT Clock from VIDEO PLL1.
kCLOCK_GptRootmuxSystemPll1Div10 GPT Clock from SYSTEM PLL1 divided by 10.
kCLOCK_GptRootmuxAudioPll1 GPT Clock from AUDIO PLL1.
kCLOCK_GptRootmuxExtClk123 GPT Clock from External Clock1, External Clock2, External Clock3.

6.4.13 enum clock_rootmux_wdog_clk_sel_t

Enumerator

kCLOCK_WdogRootmuxOsc24M WDOG Clock from OSC 24M.
kCLOCK_WdogRootmuxSysPll1Div6 WDOG Clock from SYSTEM PLL1 divided by 6.
kCLOCK_WdogRootmuxSysPll1Div5 WDOG Clock from SYSTEM PLL1 divided by 5.
kCLOCK_WdogRootmuxVpuPll WDOG Clock from VPU DLL.
kCLOCK_WdogRootmuxSystemPll2Div8 WDOG Clock from SYSTEM PLL2 divided by 8.
kCLOCK_WdogRootmuxSystemPll3 WDOG Clock from SYSTEM PLL3.
kCLOCK_WdogRootmuxSystemPll1Div10 WDOG Clock from SYSTEM PLL1 divided by 10.
kCLOCK_WdogRootmuxSystemPll2Div6 WDOG Clock from SYSTEM PLL2 divided by 6.

6.4.14 enum clock_rootmux_Pwm_clk_sel_t

Enumerator

kCLOCK_PwmRootmuxOsc24M PWM Clock from OSC 24M.
kCLOCK_PwmRootmuxSysPll2Div10 PWM Clock from SYSTEM PLL2 divided by 10.
kCLOCK_PwmRootmuxSysPll1Div5 PWM Clock from SYSTEM PLL1 divided by 5.
kCLOCK_PwmRootmuxSysPll1Div20 PWM Clock from SYSTEM PLL1 divided by 20.
kCLOCK_PwmRootmuxSystemPll3 PWM Clock from SYSTEM PLL3.
kCLOCK_PwmRootmuxExtClk12 PWM Clock from External Clock1, External Clock2.
kCLOCK_PwmRootmuxSystemPll1Div10 PWM Clock from SYSTEM PLL1 divided by 10.
kCLOCK_PwmRootmuxVideoPll1 PWM Clock from VIDEO PLL1.

6.4.15 enum clock_rootmux_sai_clk_sel_t

Enumerator

kCLOCK_SaiRootmuxOsc24M SAI Clock from OSC 24M.
kCLOCK_SaiRootmuxAudioPll1 SAI Clock from AUDIO PLL1.
kCLOCK_SaiRootmuxAudioPll2 SAI Clock from AUDIO PLL2.
kCLOCK_SaiRootmuxVideoPll1 SAI Clock from VIDEO PLL1.
kCLOCK_SaiRootmuxSysPll1Div6 SAI Clock from SYSTEM PLL1 divided by 6.
kCLOCK_SaiRootmuxOsc26m SAI Clock from OSC HDMI 26M.
kCLOCK_SaiRootmuxExtClk1 SAI Clock from External Clock1, External Clock2, External Clock3.
kCLOCK_SaiRootmuxExtClk2 SAI Clock from External Clock2, External Clock3, External Clock4.

6.4.16 enum clock_rootmux_pdm_clk_sel_t

Enumerator

kCLOCK_PdmRootmuxOsc24M GPT Clock from OSC 24M.
kCLOCK_PdmRootmuxSystemPll2 GPT Clock from SYSTEM PLL2 divided by 10.
kCLOCK_PdmRootmuxAudioPll1 GPT Clock from SYSTEM PLL1 divided by 2.
kCLOCK_PdmRootmuxSysPll1 GPT Clock from SYSTEM PLL1 divided by 20.
kCLOCK_PdmRootmuxSysPll2 GPT Clock from VIDEO PLL1.
kCLOCK_PdmRootmuxSysPll3 GPT Clock from SYSTEM PLL1 divided by 10.
kCLOCK_PdmRootmuxExtClk3 GPT Clock from AUDIO PLL1.
kCLOCK_PdmRootmuxAudioPll2 GPT Clock from External Clock1, External Clock2, External Clock3.

6.4.17 enum clock_rootmux_noc_clk_sel_t

Enumerator

kCLOCK_NocRootmuxOsc24M NOC Clock from OSC 24M.
kCLOCK_NocRootmuxSysPll1 NOC Clock from SYSTEM PLL1.
kCLOCK_NocRootmuxSysPll3 NOC Clock from SYSTEM PLL3.
kCLOCK_NocRootmuxSysPll2 NOC Clock from SYSTEM PLL2.
kCLOCK_NocRootmuxSysPll2Div2 NOC Clock from SYSTEM PLL2 divided by 2.
kCLOCK_NocRootmuxAudioPll1 NOC Clock from AUDIO PLL1.
kCLOCK_NocRootmuxVideoPll1 NOC Clock from VIDEO PLL1.
kCLOCK_NocRootmuxAudioPll2 NOC Clock from AUDIO PLL2.

6.4.18 enum clock_pll_gate_t

Enumerator

kCLOCK_ArmPllGate ARM PLL Gate.
kCLOCK_GpuPllGate GPU PLL Gate.
kCLOCK_VpuPllGate VPU PLL Gate.
kCLOCK_DramPllGate DRAM PLL1 Gate.
kCLOCK_SysPll1Gate SYSTEM PLL1 Gate.
kCLOCK_SysPll1Div2Gate SYSTEM PLL1 Div2 Gate.
kCLOCK_SysPll1Div3Gate SYSTEM PLL1 Div3 Gate.
kCLOCK_SysPll1Div4Gate SYSTEM PLL1 Div4 Gate.
kCLOCK_SysPll1Div5Gate SYSTEM PLL1 Div5 Gate.
kCLOCK_SysPll1Div6Gate SYSTEM PLL1 Div6 Gate.
kCLOCK_SysPll1Div8Gate SYSTEM PLL1 Div8 Gate.
kCLOCK_SysPll1Div10Gate SYSTEM PLL1 Div10 Gate.
kCLOCK_SysPll1Div20Gate SYSTEM PLL1 Div20 Gate.
kCLOCK_SysPll2Gate SYSTEM PLL2 Gate.
kCLOCK_SysPll2Div2Gate SYSTEM PLL2 Div2 Gate.
kCLOCK_SysPll2Div3Gate SYSTEM PLL2 Div3 Gate.
kCLOCK_SysPll2Div4Gate SYSTEM PLL2 Div4 Gate.
kCLOCK_SysPll2Div5Gate SYSTEM PLL2 Div5 Gate.
kCLOCK_SysPll2Div6Gate SYSTEM PLL2 Div6 Gate.
kCLOCK_SysPll2Div8Gate SYSTEM PLL2 Div8 Gate.
kCLOCK_SysPll2Div10Gate SYSTEM PLL2 Div10 Gate.
kCLOCK_SysPll2Div20Gate SYSTEM PLL2 Div20 Gate.
kCLOCK_SysPll3Gate SYSTEM PLL3 Gate.
kCLOCK_AudioPll1Gate AUDIO PLL1 Gate.
kCLOCK_AudioPll2Gate AUDIO PLL2 Gate.
kCLOCK_VideoPll1Gate VIDEO PLL1 Gate.
kCLOCK_VideoPll2Gate VIDEO PLL2 Gate.

6.4.19 enum clock_gate_value_t

Enumerator

kCLOCK_ClockNotNeeded Clock always disabled.
kCLOCK_ClockNeededRun Clock enabled when CPU is running.
kCLOCK_ClockNeededRunWait Clock enabled when CPU is running or in WAIT mode.
kCLOCK_ClockNeededAll Clock always enabled.

6.4.20 enum clock_pll_bypass_ctrl_t

These constants define the PLL control names for PLL bypass.

- 0:15: REG offset to CCM_ANALOG_BASE in bytes.
- 16:20: bypass bit shift.

Enumerator

kCLOCK_AudioPll1BypassCtrl CCM Audio PLL1 bypass Control.
kCLOCK_AudioPll2BypassCtrl CCM Audio PLL2 bypass Control.
kCLOCK_VideoPll1BypassCtrl CCM Video Pll1 bypass Control.
kCLOCK_DramPllInternalPll1BypassCtrl CCM DRAM PLL bypass Control.
kCLOCK_GpuPLLpwrBypassCtrl CCM Gpu PLL bypass Control.
kCLOCK_VpuPllPwrBypassCtrl CCM Vpu PLL bypass Control.
kCLOCK_ArmPllPwrBypassCtrl CCM Arm PLL bypass Control.
kCLOCK_SysPll1InternalPll1BypassCtrl CCM System PLL1 bypass Control.
kCLOCK_SysPll2InternalPll1BypassCtrl CCM System PLL2 bypass Control.
kCLOCK_SysPll3InternalPll1BypassCtrl CCM System PLL3 bypass Control.

6.4.21 enum clock_pll_clke_t

These constants define the PLL clock names for PLL clock enable/disable operations.

- 0:15: REG offset to CCM_ANALOG_BASE in bytes.
- 16:20: Clock enable bit shift.

Enumerator

kCLOCK_AudioPll1Clke Audio pll1 clke.
kCLOCK_AudioPll2Clke Audio pll2 clke.
kCLOCK_VideoPll1Clke Video pll1 clke.
kCLOCK_DramPllClke Dram pll clke.
kCLOCK_GpuPllClke Gpu pll clke.
kCLOCK_VpuPllClke Vpu pll clke.

kCLOCK_ArmPllClke Arm pll clke.
kCLOCK_SystemPll1Clke System pll1 clke.
kCLOCK_SystemPll1Div2Clke System pll1 Div2 clke.
kCLOCK_SystemPll1Div3Clke System pll1 Div3 clke.
kCLOCK_SystemPll1Div4Clke System pll1 Div4 clke.
kCLOCK_SystemPll1Div5Clke System pll1 Div5 clke.
kCLOCK_SystemPll1Div6Clke System pll1 Div6 clke.
kCLOCK_SystemPll1Div8Clke System pll1 Div8 clke.
kCLOCK_SystemPll1Div10Clke System pll1 Div10 clke.
kCLOCK_SystemPll1Div20Clke System pll1 Div20 clke.
kCLOCK_SystemPll2Clke System pll2 clke.
kCLOCK_SystemPll2Div2Clke System pll2 Div2 clke.
kCLOCK_SystemPll2Div3Clke System pll2 Div3 clke.
kCLOCK_SystemPll2Div4Clke System pll2 Div4 clke.
kCLOCK_SystemPll2Div5Clke System pll2 Div5 clke.
kCLOCK_SystemPll2Div6Clke System pll2 Div6 clke.
kCLOCK_SystemPll2Div8Clke System pll2 Div8 clke.
kCLOCK_SystemPll2Div10Clke System pll2 Div10 clke.
kCLOCK_SystemPll2Div20Clke System pll2 Div20 clke.
kCLOCK_SystemPll3Clke System pll3 clke.

6.4.22 anonymous enum

Enumerator

kANALOG_PllRefOsc24M reference OSC 24M
kANALOG_PllPadClk reference PAD CLK

Function Documentation

6.5.1 static void **CLOCK_SetRootMux** (clock_root_control_t *rootClk*, uint32_t *mux*) [**inline**], [**static**]

User maybe need to set more than one mux ROOT according to the clock tree description in the reference manual.

Parameters

<i>rootClk</i>	Root clock control (see clock_root_control_t enumeration).
----------------	--

<i>mux</i>	Root mux value (see <code>_ccm_rootmux_xxx</code> enumeration).
------------	---

6.5.2 **static uint32_t CLOCK_GetRootMux (clock_root_control_t *rootClk*)** **[inline], [static]**

In order to get the clock source of root, user maybe need to get more than one ROOT's mux value to obtain the final clock source of root.

Parameters

<i>rootClk</i>	Root clock control (see clock_root_control_t enumeration).
----------------	--

Returns

Root mux value (see `_ccm_rootmux_xxx` enumeration).

6.5.3 **static void CLOCK_EnableRoot (clock_root_control_t *rootClk*)** **[inline], [static]**

Parameters

<i>rootClk</i>	Root clock control (see clock_root_control_t enumeration)
----------------	---

6.5.4 **static void CLOCK_DisableRoot (clock_root_control_t *rootClk*)** **[inline], [static]**

Parameters

<i>rootClk</i>	Root control (see clock_root_control_t enumeration)
----------------	---

6.5.5 **static bool CLOCK_IsRootEnabled (clock_root_control_t *rootClk*)** **[inline], [static]**

Parameters

<i>rootClk</i>	Root control (see clock_root_control_t enumeration)
----------------	---

Returns

CCM root enabled or not.

- true: Clock root is enabled.
- false: Clock root is disabled.

6.5.6 void CLOCK_UpdateRoot (clock_root_control_t *ccmRootClk*, uint32_t *mux*, uint32_t *pre*, uint32_t *post*)

Parameters

<i>ccmRootClk</i>	Root control (see clock_root_control_t enumeration)
<i>mux</i>	Root mux value (see _ccm_rootmux_xxx enumeration)
<i>pre</i>	Pre divider value (0-7, divider=n+1)
<i>post</i>	Post divider value (0-63, divider=n+1)

6.5.7 void CLOCK_SetRootDivider (clock_root_control_t *ccmRootClk*, uint32_t *pre*, uint32_t *post*)

Parameters

<i>ccmRootClk</i>	Root control (see clock_root_control_t enumeration)
<i>pre</i>	Pre divider value (1-8)
<i>post</i>	Post divider value (1-64)

6.5.8 static uint32_t CLOCK_GetRootPreDivider (clock_root_control_t *rootClk*) [inline], [static]

In order to get the clock source of root, user maybe need to get more than one ROOT's mux value to obtain the final clock source of root.

Parameters

<i>rootClk</i>	Root clock name (see clock_root_control_t enumeration).
----------------	---

Returns

Root Pre divider value.

6.5.9 static uint32_t CLOCK_GetRootPostDivider (clock_root_control_t *rootClk*) [inline], [static]

In order to get the clock source of root, user maybe need to get more than one ROOT's mux value to obtain the final clock source of root.

Parameters

<i>rootClk</i>	Root clock name (see clock_root_control_t enumeration).
----------------	---

Returns

Root Post divider value.

6.5.10 static void CLOCK_ControlGate (uint32_t *ccmGate*, clock_gate_value_t *control*) [inline], [static]

Parameters

<i>ccmGate</i>	Gate control (see clock_pll_gate_t and clock_ip_name_t enumeration)
<i>control</i>	Gate control value (see clock_gate_value_t)

6.5.11 void CLOCK_EnableClock (clock_ip_name_t *ccmGate*)

Take care of that one module may need to set more than one clock gate.

Parameters

<i>ccmGate</i>	Gate control for each module (see clock_ip_name_t enumeration).
----------------	---

6.5.12 void CLOCK_DisableClock (clock_ip_name_t *ccmGate*)

Take care of that one module may need to set more than one clock gate.

Parameters

<i>ccmGate</i>	Gate control for each module (see clock_ip_name_t enumeration).
----------------	---

6.5.13 static void CLOCK_PowerUpPll (CCM_ANALOG_Type * *base*, clock_pll_ctrl_t *pllControl*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pllControl</i>	PLL control name (see clock_pll_ctrl_t enumeration)

6.5.14 static void CLOCK_PowerDownPll (CCM_ANALOG_Type * *base*, clock_pll_ctrl_t *pllControl*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pllControl</i>	PLL control name (see clock_pll_ctrl_t enumeration)

6.5.15 static void CLOCK_SetPllBypass (CCM_ANALOG_Type * *base*, clock_pll_bypass_ctrl_t *pllControl*, bool *bypass*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pllControl</i>	PLL control name (see <code>ccm_analog_pll_control_t</code> enumeration)
<i>bypass</i>	Bypass the PLL. <ul style="list-style-type: none"> • true: Bypass the PLL. • false: Do not bypass the PLL.

6.5.16 static bool CLOCK_IsPllBypassed (CCM_ANALOG_Type * *base*, clock_pll_bypass_ctrl_t *pllControl*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pllControl</i>	PLL control name (see <code>ccm_analog_pll_control_t</code> enumeration)

Returns

PLL bypass status.

- true: The PLL is bypassed.
- false: The PLL is not bypassed.

6.5.17 static bool CLOCK_IsPllLocked (CCM_ANALOG_Type * *base*, clock_pll_ctrl_t *pllControl*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pllControl</i>	PLL control name (see clock_pll_ctrl_t enumeration)

Returns

PLL lock status.

- true: The PLL clock is locked.
- false: The PLL clock is not locked.

6.5.18 static void CLOCK_EnableAnalogClock (CCM_ANALOG_Type * *base*, clock_pll_clke_t *pllClock*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pllClock</i>	PLL clock name (see <code>ccm_analog_pll_clock_t</code> enumeration)

6.5.19 static void CLOCK_DisableAnalogClock (CCM_ANALOG_Type * *base*, clock_pll_clke_t *pllClock*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pllClock</i>	PLL clock name (see <code>ccm_analog_pll_clock_t</code> enumeration)

6.5.20 static void CLOCK_OverridePllClke (CCM_ANALOG_Type * *base*, clock_pll_clke_t *ovClock*, bool *override*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>ovClock</i>	PLL clock name (see clock_pll_clke_t enumeration)
<i>override</i>	Override the PLL. <ul style="list-style-type: none"> • true: Override the PLL clke, CCM will handle it. • false: Do not override the PLL clke.

6.5.21 static void CLOCK_OverridePllPd (CCM_ANALOG_Type * *base*, clock_pll_ctrl_t *pdClock*, bool *override*) [inline], [static]

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>pdClock</i>	PLL clock name (see clock_pll_ctrl_t enumeration)

<i>override</i>	Override the PLL. <ul style="list-style-type: none"> • true: Override the PLL clke, CCM will handle it. • false: Do not override the PLL clke.
-----------------	--

6.5.22 void CLOCK_InitArmPll (const ccm_analog_integer_pll_config_t * *config*)

Parameters

<i>config</i>	Pointer to the configuration structure(see ccm_analog_integer_pll_config_t enumeration).
---------------	--

Note

This function can't detect whether the Arm PLL has been enabled and used by some IPs.

6.5.23 void CLOCK_InitSysPll1 (const ccm_analog_integer_pll_config_t * *config*)

Parameters

<i>config</i>	Pointer to the configuration structure(see ccm_analog_integer_pll_config_t enumeration).
---------------	--

Note

This function can't detect whether the SYS PLL has been enabled and used by some IPs.

6.5.24 void CLOCK_InitSysPll2 (const ccm_analog_integer_pll_config_t * *config*)

Parameters

<i>config</i>	Pointer to the configuration structure(see ccm_analog_integer_pll_config_t enumeration).
---------------	--

Note

This function can't detect whether the SYS PLL has been enabled and used by some IPs.

6.5.25 void CLOCK_InitSysPll3 (const ccm_analog_integer_pll_config_t * *config*)

Parameters

<i>config</i>	Pointer to the configuration structure(see ccm_analog_integer_pll_config_t enumeration).
---------------	--

Note

This function can't detect whether the SYS PLL has been enabled and used by some IPs.

6.5.26 void CLOCK_InitAudioPII1 (const ccm_analog_frac_pll_config_t * *config*)

Parameters

<i>config</i>	Pointer to the configuration structure(see ccm_analog_frac_pll_config_t enumeration).
---------------	---

Note

This function can't detect whether the AUDIO PLL has been enabled and used by some IPs.

6.5.27 void CLOCK_InitAudioPII2 (const ccm_analog_frac_pll_config_t * *config*)

Parameters

<i>config</i>	Pointer to the configuration structure(see ccm_analog_frac_pll_config_t enumeration).
---------------	---

Note

This function can't detect whether the AUDIO PLL has been enabled and used by some IPs.

6.5.28 void CLOCK_InitVideoPII1 (const ccm_analog_frac_pll_config_t * *config*)

Parameters

<i>config</i>	Pointer to the configuration structure(see ccm_analog_frac_pll_config_t enumeration).
---------------	---

6.5.29 void CLOCK_InitIntegerPll (CCM_ANALOG_Type * *base*, const ccm_analog_integer_pll_config_t * *config*, clock_pll_ctrl_t *type*)

Parameters

<i>base</i>	CCM ANALOG base address
<i>config</i>	Pointer to the configuration structure(see ccm_analog_integer_pll_config_t enumeration).
<i>type</i>	integer pll type

6.5.30 uint32_t CLOCK_GetIntegerPllFreq (CCM_ANALOG_Type * *base*, clock_pll_ctrl_t *type*, uint32_t *refClkFreq*, bool *pll1Bypass*)

Parameters

<i>base</i>	CCM ANALOG base address.
<i>type</i>	integer pll type
<i>pll1Bypass</i>	pll1 bypass flag
<i>refClkFreq</i>	Reference clock frequency.

Returns

Clock frequency

6.5.31 void CLOCK_InitFracPll (CCM_ANALOG_Type * *base*, const ccm_analog_frac_pll_config_t * *config*, clock_pll_ctrl_t *type*)

Parameters

<i>base</i>	CCM ANALOG base address.
<i>config</i>	Pointer to the configuration structure(see ccm_analog_frac_pll_config_t enumeration).
<i>type</i>	fractional pll type.

6.5.32 uint32_t CLOCK_GetFracPIIFreq (CCM_ANALOG_Type * *base*, clock_pll_ctrl_t *type*, uint32_t *refClkFreq*)

Parameters

<i>base</i>	CCM_ANALOG base pointer.
<i>type</i>	fractional pll type.
<i>refClkFreq</i>	Reference clock frequency.

Returns

Clock frequency

6.5.33 uint32_t CLOCK_GetPIIFreq (clock_pll_ctrl_t *pll*)

Parameters

<i>pll</i>	fractional pll type.
------------	----------------------

Returns

Clock frequency

6.5.34 uint32_t CLOCK_GetPIIRefClkFreq (clock_pll_ctrl_t *ctrl*)

Parameters

<i>ctrl</i>	The pll control.
-------------	------------------

Returns

Clock frequency

6.5.35 uint32_t CLOCK_GetFreq (clock_name_t *clockName*)

This function checks the current clock configurations and then calculates the clock frequency for a specific clock name defined in clock_name_t.

Parameters

<i>clockName</i>	Clock names defined in clock_name_t
------------------	-------------------------------------

Returns

Clock frequency value in hertz

6.5.36 uint32_t CLOCK_GetCoreM4Freq (void)

Returns

Clock frequency; If the clock is invalid, returns 0.

6.5.37 uint32_t CLOCK_GetAxiFreq (void)

Returns

Clock frequency; If the clock is invalid, returns 0.

6.5.38 uint32_t CLOCK_GetAhbFreq (void)

Returns

Clock frequency; If the clock is invalid, returns 0.

Chapter 7

IOMUXC: IOMUX Controller

Overview

IOMUXC driver provides APIs for pin configuration. It also supports the miscellaneous functions integrated in IOMUXC.

Files

- file [fsl_iomuxc.h](#)

Driver version

- #define [FSL_IOMUXC_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 0, 1))
IOMUXC driver version 2.0.1.

Pin function ID

The pin function ID is a tuple of <muxRegister muxMode inputRegister inputDaisy configRegister>

- #define **IOMUXC_PMIC_STBY_REQ** 0x30330014, 0x0, 0x00000000, 0x0, 0x3033027C
- #define **IOMUXC_PMIC_ON_REQ** 0x30330018, 0x0, 0x00000000, 0x0, 0x30330280
- #define **IOMUXC_ONOFF** 0x3033001C, 0x0, 0x00000000, 0x0, 0x30330284
- #define **IOMUXC_POR_B** 0x30330020, 0x0, 0x00000000, 0x0, 0x30330288
- #define **IOMUXC_RTC_RESET_B** 0x30330024, 0x0, 0x00000000, 0x0, 0x3033028C
- #define **IOMUXC_GPIO1_IO00_GPIO1_IO00** 0x30330028, 0x0, 0x00000000, 0x0, 0x30330290
- #define **IOMUXC_GPIO1_IO00_CCM_ENET_PHY_REF_CLK_ROOT** 0x30330028, 0x1, 0x00000000, 0x0, 0x30330290
- #define **IOMUXC_GPIO1_IO00_XTALOSC_REF_CLK_32K** 0x30330028, 0x5, 0x00000000, 0x0, 0x30330290
- #define **IOMUXC_GPIO1_IO00_CCM_EXT_CLK1** 0x30330028, 0x6, 0x00000000, 0x0, 0x30330290
- #define **IOMUXC_GPIO1_IO01_GPIO1_IO01** 0x3033002C, 0x0, 0x00000000, 0x0, 0x30330294
- #define **IOMUXC_GPIO1_IO01_PWM1_OUT** 0x3033002C, 0x1, 0x00000000, 0x0, 0x30330294
- #define **IOMUXC_GPIO1_IO01_XTALOSC_REF_CLK_24M** 0x3033002C, 0x5, 0x00000000, 0x0, 0x30330294
- #define **IOMUXC_GPIO1_IO01_CCM_EXT_CLK2** 0x3033002C, 0x6, 0x00000000, 0x0, 0x30330294
- #define **IOMUXC_GPIO1_IO02_GPIO1_IO02** 0x30330030, 0x0, 0x00000000, 0x0, 0x30330298
- #define **IOMUXC_GPIO1_IO02_WDOG1_WDOG_B** 0x30330030, 0x1, 0x00000000, 0x0, 0x30330298
- #define **IOMUXC_GPIO1_IO02_WDOG1_WDOG_ANY** 0x30330030, 0x5, 0x00000000, 0x0, 0x30330298
- #define **IOMUXC_GPIO1_IO03_GPIO1_IO03** 0x30330034, 0x0, 0x00000000, 0x0, 0x3033029C
- #define **IOMUXC_GPIO1_IO03_USDHC1_VSELECT** 0x30330034, 0x1, 0x00000000, 0x0, 0x3033029C

- #define **IOMUXC_GPIO1_IO03_SDMA1_EXT_EVENT0** 0x30330034, 0x5, 0x00000000, 0x0, 0x3033029C
- #define **IOMUXC_GPIO1_IO04_GPIO1_IO04** 0x30330038, 0x0, 0x00000000, 0x0, 0x303302-A0
- #define **IOMUXC_GPIO1_IO04_USDHC2_VSELECT** 0x30330038, 0x1, 0x00000000, 0x0, 0x303302A0
- #define **IOMUXC_GPIO1_IO04_SDMA1_EXT_EVENT1** 0x30330038, 0x5, 0x00000000, 0x0, 0x303302A0
- #define **IOMUXC_GPIO1_IO05_GPIO1_IO05** 0x3033003C, 0x0, 0x00000000, 0x0, 0x303302-A4
- #define **IOMUXC_GPIO1_IO05_M4_NMI** 0x3033003C, 0x1, 0x00000000, 0x0, 0x303302A4
- #define **IOMUXC_GPIO1_IO05_CCM_PMIC_READY** 0x3033003C, 0x5, 0x303304BC, 0x0, 0x303302A4
- #define **IOMUXC_GPIO1_IO06_GPIO1_IO06** 0x30330040, 0x0, 0x00000000, 0x0, 0x303302-A8
- #define **IOMUXC_GPIO1_IO06_ENET1_MDC** 0x30330040, 0x1, 0x00000000, 0x0, 0x303302-A8
- #define **IOMUXC_GPIO1_IO06_USDHC1_CD_B** 0x30330040, 0x5, 0x00000000, 0x0, 0x303302A8
- #define **IOMUXC_GPIO1_IO06_CCM_EXT_CLK3** 0x30330040, 0x6, 0x00000000, 0x0, 0x303302A8
- #define **IOMUXC_GPIO1_IO07_GPIO1_IO07** 0x30330044, 0x0, 0x00000000, 0x0, 0x303302-AC
- #define **IOMUXC_GPIO1_IO07_ENET1_MDIO** 0x30330044, 0x1, 0x303304C0, 0x0, 0x303302AC
- #define **IOMUXC_GPIO1_IO07_USDHC1_WP** 0x30330044, 0x5, 0x00000000, 0x0, 0x303302-AC
- #define **IOMUXC_GPIO1_IO07_CCM_EXT_CLK4** 0x30330044, 0x6, 0x00000000, 0x0, 0x303302AC
- #define **IOMUXC_GPIO1_IO08_GPIO1_IO08** 0x30330048, 0x0, 0x00000000, 0x0, 0x303302-B0
- #define **IOMUXC_GPIO1_IO08_ENET1_1588_EVENT0_IN** 0x30330048, 0x1, 0x00000000, 0x0, 0x303302B0
- #define **IOMUXC_GPIO1_IO08_USDHC2_RESET_B** 0x30330048, 0x5, 0x00000000, 0x0, 0x303302B0
- #define **IOMUXC_GPIO1_IO09_GPIO1_IO09** 0x3033004C, 0x0, 0x00000000, 0x0, 0x303302-B4
- #define **IOMUXC_GPIO1_IO09_ENET1_1588_EVENT0_OUT** 0x3033004C, 0x1, 0x00000000, 0x0, 0x303302B4
- #define **IOMUXC_GPIO1_IO09_USDHC3_RESET_B** 0x3033004C, 0x4, 0x00000000, 0x0, 0x303302B4
- #define **IOMUXC_GPIO1_IO09_SDMA2_EXT_EVENT0** 0x3033004C, 0x5, 0x00000000, 0x0, 0x303302B4
- #define **IOMUXC_GPIO1_IO10_GPIO1_IO10** 0x30330050, 0x0, 0x00000000, 0x0, 0x303302-B8
- #define **IOMUXC_GPIO1_IO10_USB1_OTG_ID** 0x30330050, 0x1, 0x00000000, 0x0, 0x303302B8
- #define **IOMUXC_GPIO1_IO11_GPIO1_IO11** 0x30330054, 0x0, 0x00000000, 0x0, 0x303302-BC
- #define **IOMUXC_GPIO1_IO11_USB2_OTG_ID** 0x30330054, 0x1, 0x00000000, 0x0,

- 0x303302BC
- #define **IOMUXC_GPIO1_IO11_USDHC3_VSELECT** 0x30330054, 0x4, 0x00000000, 0x0, 0x303302BC
- #define **IOMUXC_GPIO1_IO11_CCM_PMIC_READY** 0x30330054, 0x5, 0x303304BC, 0x1, 0x303302BC
- #define **IOMUXC_GPIO1_IO12_GPIO1_IO12** 0x30330058, 0x0, 0x00000000, 0x0, 0x303302-C0
- #define **IOMUXC_GPIO1_IO12_USB1_OTG_PWR** 0x30330058, 0x1, 0x00000000, 0x0, 0x303302C0
- #define **IOMUXC_GPIO1_IO12_SDMA2_EXT_EVENT1** 0x30330058, 0x5, 0x00000000, 0x0, 0x303302C0
- #define **IOMUXC_GPIO1_IO13_GPIO1_IO13** 0x3033005C, 0x0, 0x00000000, 0x0, 0x303302-C4
- #define **IOMUXC_GPIO1_IO13_USB1_OTG_OC** 0x3033005C, 0x1, 0x00000000, 0x0, 0x303302C4
- #define **IOMUXC_GPIO1_IO13_PWM2_OUT** 0x3033005C, 0x5, 0x00000000, 0x0, 0x303302-C4
- #define **IOMUXC_GPIO1_IO14_GPIO1_IO14** 0x30330060, 0x0, 0x00000000, 0x0, 0x303302-C8
- #define **IOMUXC_GPIO1_IO14_USB2_OTG_PWR** 0x30330060, 0x1, 0x00000000, 0x0, 0x303302C8
- #define **IOMUXC_GPIO1_IO14_USDHC3_CD_B** 0x30330060, 0x4, 0x30330544, 0x2, 0x303302C8
- #define **IOMUXC_GPIO1_IO14_PWM3_OUT** 0x30330060, 0x5, 0x00000000, 0x0, 0x303302-C8
- #define **IOMUXC_GPIO1_IO15_GPIO1_IO15** 0x30330064, 0x0, 0x00000000, 0x0, 0x303302-CC
- #define **IOMUXC_GPIO1_IO15_USB2_OTG_OC** 0x30330064, 0x1, 0x00000000, 0x0, 0x303302CC
- #define **IOMUXC_GPIO1_IO15_USDHC3_WP** 0x30330064, 0x4, 0x30330548, 0x2, 0x303302-CC
- #define **IOMUXC_GPIO1_IO15_PWM4_OUT** 0x30330064, 0x5, 0x00000000, 0x0, 0x303302-CC
- #define **IOMUXC_ENET_MDC_ENET1_MDC** 0x30330068, 0x0, 0x00000000, 0x0, 0x303302-D0
- #define **IOMUXC_ENET_MDC_GPIO1_IO16** 0x30330068, 0x5, 0x00000000, 0x0, 0x303302-D0
- #define **IOMUXC_ENET_MDIO_ENET1_MDIO** 0x3033006C, 0x0, 0x303304C0, 0x1, 0x303302D4
- #define **IOMUXC_ENET_MDIO_GPIO1_IO17** 0x3033006C, 0x5, 0x00000000, 0x0, 0x303302-D4
- #define **IOMUXC_ENET_TD3_ENET1_RGMII_TD3** 0x30330070, 0x0, 0x00000000, 0x0, 0x303302D8
- #define **IOMUXC_ENET_TD3_GPIO1_IO18** 0x30330070, 0x5, 0x00000000, 0x0, 0x303302D8
- #define **IOMUXC_ENET_TD2_ENET1_RGMII_TD2** 0x30330074, 0x0, 0x00000000, 0x0, 0x303302DC
- #define **IOMUXC_ENET_TD2_ENET1_TX_CLK** 0x30330074, 0x1, 0x00000000, 0x0, 0x303302DC
- #define **IOMUXC_ENET_TD2_GPIO1_IO19** 0x30330074, 0x5, 0x00000000, 0x0, 0x303302DC
- #define **IOMUXC_ENET_TD1_ENET1_RGMII_TD1** 0x30330078, 0x0, 0x00000000, 0x0,

```

0x303302E0
• #define IOMUXC_ENET_TD1_GPIO1_IO20 0x30330078, 0x5, 0x00000000, 0x0, 0x303302E0
• #define IOMUXC_ENET_TD0_ENET1_RGMII_TD0 0x3033007C, 0x0, 0x00000000, 0x0,
0x303302E4
• #define IOMUXC_ENET_TD0_GPIO1_IO21 0x3033007C, 0x5, 0x00000000, 0x0, 0x303302E4
• #define IOMUXC_ENET_TX_CTL_ENET1_RGMII_TX_CTL 0x30330080, 0x0, 0x00000000,
0x0, 0x303302E8
• #define IOMUXC_ENET_TX_CTL_GPIO1_IO22 0x30330080, 0x5, 0x00000000, 0x0,
0x303302E8
• #define IOMUXC_ENET_TXC_ENET1_RGMII_TXC 0x30330084, 0x0, 0x00000000, 0x0,
0x303302EC
• #define IOMUXC_ENET_TXC_ENET1_TX_ER 0x30330084, 0x1, 0x00000000, 0x0,
0x303302EC
• #define IOMUXC_ENET_TXC_GPIO1_IO23 0x30330084, 0x5, 0x00000000, 0x0, 0x303302E-
C
• #define IOMUXC_ENET_RX_CTL_ENET1_RGMII_RX_CTL 0x30330088, 0x0, 0x00000000,
0x0, 0x303302F0
• #define IOMUXC_ENET_RX_CTL_GPIO1_IO24 0x30330088, 0x5, 0x00000000, 0x0,
0x303302F0
• #define IOMUXC_ENET_RXC_ENET1_RGMII_RXC 0x3033008C, 0x0, 0x00000000, 0x0,
0x303302F4
• #define IOMUXC_ENET_RXC_ENET1_RX_ER 0x3033008C, 0x1, 0x00000000, 0x0,
0x303302F4
• #define IOMUXC_ENET_RXC_GPIO1_IO25 0x3033008C, 0x5, 0x00000000, 0x0, 0x303302-
F4
• #define IOMUXC_ENET_RD0_ENET1_RGMII_RD0 0x30330090, 0x0, 0x00000000, 0x0,
0x303302F8
• #define IOMUXC_ENET_RD0_GPIO1_IO26 0x30330090, 0x5, 0x00000000, 0x0, 0x303302F8
• #define IOMUXC_ENET_RD1_ENET1_RGMII_RD1 0x30330094, 0x0, 0x00000000, 0x0,
0x303302FC
• #define IOMUXC_ENET_RD1_GPIO1_IO27 0x30330094, 0x5, 0x00000000, 0x0, 0x303302FC
• #define IOMUXC_ENET_RD2_ENET1_RGMII_RD2 0x30330098, 0x0, 0x00000000, 0x0,
0x30330300
• #define IOMUXC_ENET_RD2_GPIO1_IO28 0x30330098, 0x5, 0x00000000, 0x0, 0x30330300
• #define IOMUXC_ENET_RD3_ENET1_RGMII_RD3 0x3033009C, 0x0, 0x00000000, 0x0,
0x30330304
• #define IOMUXC_ENET_RD3_GPIO1_IO29 0x3033009C, 0x5, 0x00000000, 0x0, 0x30330304
• #define IOMUXC_SD1_CLK_USDHC1_CLK 0x303300A0, 0x0, 0x00000000, 0x0, 0x30330308
• #define IOMUXC_SD1_CLK_GPIO2_IO00 0x303300A0, 0x5, 0x00000000, 0x0, 0x30330308
• #define IOMUXC_SD1_CMD_USDHC1_CMD 0x303300A4, 0x0, 0x00000000, 0x0, 0x3033030-
C
• #define IOMUXC_SD1_CMD_GPIO2_IO01 0x303300A4, 0x5, 0x00000000, 0x0, 0x3033030C
• #define IOMUXC_SD1_DATA0_USDHC1_DATA0 0x303300A8, 0x0, 0x00000000, 0x0,
0x30330310
• #define IOMUXC_SD1_DATA0_GPIO2_IO02 0x303300A8, 0x5, 0x00000000, 0x0, 0x30330310
• #define IOMUXC_SD1_DATA1_USDHC1_DATA1 0x303300AC, 0x0, 0x00000000, 0x0,
0x30330314
• #define IOMUXC_SD1_DATA1_GPIO2_IO03 0x303300AC, 0x5, 0x00000000, 0x0, 0x30330314
• #define IOMUXC_SD1_DATA2_USDHC1_DATA2 0x303300B0, 0x0, 0x00000000, 0x0,
0x30330318
• #define IOMUXC_SD1_DATA2_GPIO2_IO04 0x303300B0, 0x5, 0x00000000, 0x0, 0x30330318

```

- #define **IOMUXC_SD1_DATA3_USDHC1_DATA3** 0x303300B4, 0x0, 0x00000000, 0x0, 0x3033031C
- #define **IOMUXC_SD1_DATA3_GPIO2_IO05** 0x303300B4, 0x5, 0x00000000, 0x0, 0x3033031C
- #define **IOMUXC_SD1_DATA4_USDHC1_DATA4** 0x303300B8, 0x0, 0x00000000, 0x0, 0x30330320
- #define **IOMUXC_SD1_DATA4_GPIO2_IO06** 0x303300B8, 0x5, 0x00000000, 0x0, 0x30330320
- #define **IOMUXC_SD1_DATA5_USDHC1_DATA5** 0x303300BC, 0x0, 0x00000000, 0x0, 0x30330324
- #define **IOMUXC_SD1_DATA5_GPIO2_IO07** 0x303300BC, 0x5, 0x00000000, 0x0, 0x30330324
- #define **IOMUXC_SD1_DATA6_USDHC1_DATA6** 0x303300C0, 0x0, 0x00000000, 0x0, 0x30330328
- #define **IOMUXC_SD1_DATA6_GPIO2_IO08** 0x303300C0, 0x5, 0x00000000, 0x0, 0x30330328
- #define **IOMUXC_SD1_DATA7_USDHC1_DATA7** 0x303300C4, 0x0, 0x00000000, 0x0, 0x3033032C
- #define **IOMUXC_SD1_DATA7_GPIO2_IO09** 0x303300C4, 0x5, 0x00000000, 0x0, 0x3033032C
- #define **IOMUXC_SD1_RESET_B_USDHC1_RESET_B** 0x303300C8, 0x0, 0x00000000, 0x0, 0x30330330
- #define **IOMUXC_SD1_RESET_B_GPIO2_IO10** 0x303300C8, 0x5, 0x00000000, 0x0, 0x30330330
- #define **IOMUXC_SD1_STROBE_USDHC1_STROBE** 0x303300CC, 0x0, 0x00000000, 0x0, 0x30330334
- #define **IOMUXC_SD1_STROBE_GPIO2_IO11** 0x303300CC, 0x5, 0x00000000, 0x0, 0x30330334
- #define **IOMUXC_SD2_CD_B_USDHC2_CD_B** 0x303300D0, 0x0, 0x00000000, 0x0, 0x30330338
- #define **IOMUXC_SD2_CD_B_GPIO2_IO12** 0x303300D0, 0x5, 0x00000000, 0x0, 0x30330338
- #define **IOMUXC_SD2_CLK_USDHC2_CLK** 0x303300D4, 0x0, 0x00000000, 0x0, 0x3033033C
- #define **IOMUXC_SD2_CLK_GPIO2_IO13** 0x303300D4, 0x5, 0x00000000, 0x0, 0x3033033C
- #define **IOMUXC_SD2_CMD_USDHC2_CMD** 0x303300D8, 0x0, 0x00000000, 0x0, 0x30330340
- #define **IOMUXC_SD2_CMD_GPIO2_IO14** 0x303300D8, 0x5, 0x00000000, 0x0, 0x30330340
- #define **IOMUXC_SD2_DATA0_USDHC2_DATA0** 0x303300DC, 0x0, 0x00000000, 0x0, 0x30330344
- #define **IOMUXC_SD2_DATA0_GPIO2_IO15** 0x303300DC, 0x5, 0x00000000, 0x0, 0x30330344
- #define **IOMUXC_SD2_DATA1_USDHC2_DATA1** 0x303300E0, 0x0, 0x00000000, 0x0, 0x30330348
- #define **IOMUXC_SD2_DATA1_GPIO2_IO16** 0x303300E0, 0x5, 0x00000000, 0x0, 0x30330348
- #define **IOMUXC_SD2_DATA2_USDHC2_DATA2** 0x303300E4, 0x0, 0x00000000, 0x0, 0x3033034C
- #define **IOMUXC_SD2_DATA2_GPIO2_IO17** 0x303300E4, 0x5, 0x00000000, 0x0, 0x3033034C
- #define **IOMUXC_SD2_DATA3_USDHC2_DATA3** 0x303300E8, 0x0, 0x00000000, 0x0, 0x30330350
- #define **IOMUXC_SD2_DATA3_GPIO2_IO18** 0x303300E8, 0x5, 0x00000000, 0x0, 0x30330350
- #define **IOMUXC_SD2_RESET_B_USDHC2_RESET_B** 0x303300EC, 0x0, 0x00000000, 0x0, 0x30330354
- #define **IOMUXC_SD2_RESET_B_GPIO2_IO19** 0x303300EC, 0x5, 0x00000000, 0x0, 0x30330354
- #define **IOMUXC_SD2_WP_USDHC2_WP** 0x303300F0, 0x0, 0x00000000, 0x0, 0x30330358

- #define **IOMUXC_SD2_WP_GPIO2_IO20** 0x303300F0, 0x5, 0x00000000, 0x0, 0x30330358
- #define **IOMUXC_NAND_ALE_RAWNAND_ALE** 0x303300F4, 0x0, 0x00000000, 0x0, 0x3033035C
- #define **IOMUXC_NAND_ALE_QSPI_A_SCLK** 0x303300F4, 0x1, 0x00000000, 0x0, 0x3033035C
- #define **IOMUXC_NAND_ALE_GPIO3_IO00** 0x303300F4, 0x5, 0x00000000, 0x0, 0x3033035C
- #define **IOMUXC_NAND_CE0_B_RAWNAND_CE0_B** 0x303300F8, 0x0, 0x00000000, 0x0, 0x30330360
- #define **IOMUXC_NAND_CE0_B_QSPI_A_SS0_B** 0x303300F8, 0x1, 0x00000000, 0x0, 0x30330360
- #define **IOMUXC_NAND_CE0_B_GPIO3_IO01** 0x303300F8, 0x5, 0x00000000, 0x0, 0x30330360
- #define **IOMUXC_NAND_CE1_B_RAWNAND_CE1_B** 0x303300FC, 0x0, 0x00000000, 0x0, 0x30330364
- #define **IOMUXC_NAND_CE1_B_QSPI_A_SS1_B** 0x303300FC, 0x1, 0x00000000, 0x0, 0x30330364
- #define **IOMUXC_NAND_CE1_B_USDHC3_STROBE** 0x303300FC, 0x2, 0x00000000, 0x0, 0x30330364
- #define **IOMUXC_NAND_CE1_B_GPIO3_IO02** 0x303300FC, 0x5, 0x00000000, 0x0, 0x30330364
- #define **IOMUXC_NAND_CE2_B_RAWNAND_CE2_B** 0x30330100, 0x0, 0x00000000, 0x0, 0x30330368
- #define **IOMUXC_NAND_CE2_B_QSPI_B_SS0_B** 0x30330100, 0x1, 0x00000000, 0x0, 0x30330368
- #define **IOMUXC_NAND_CE2_B_USDHC3_DATA5** 0x30330100, 0x2, 0x00000000, 0x0, 0x30330368
- #define **IOMUXC_NAND_CE2_B_GPIO3_IO03** 0x30330100, 0x5, 0x00000000, 0x0, 0x30330368
- #define **IOMUXC_NAND_CE3_B_RAWNAND_CE3_B** 0x30330104, 0x0, 0x00000000, 0x0, 0x3033036C
- #define **IOMUXC_NAND_CE3_B_QSPI_B_SS1_B** 0x30330104, 0x1, 0x00000000, 0x0, 0x3033036C
- #define **IOMUXC_NAND_CE3_B_USDHC3_DATA6** 0x30330104, 0x2, 0x00000000, 0x0, 0x3033036C
- #define **IOMUXC_NAND_CE3_B_GPIO3_IO04** 0x30330104, 0x5, 0x00000000, 0x0, 0x3033036C
- #define **IOMUXC_NAND_CLE_RAWNAND_CLE** 0x30330108, 0x0, 0x00000000, 0x0, 0x30330370
- #define **IOMUXC_NAND_CLE_QSPI_B_SCLK** 0x30330108, 0x1, 0x00000000, 0x0, 0x30330370
- #define **IOMUXC_NAND_CLE_USDHC3_DATA7** 0x30330108, 0x2, 0x00000000, 0x0, 0x30330370
- #define **IOMUXC_NAND_CLE_GPIO3_IO05** 0x30330108, 0x5, 0x00000000, 0x0, 0x30330370
- #define **IOMUXC_NAND_DATA00_RAWNAND_DATA00** 0x3033010C, 0x0, 0x00000000, 0x0, 0x30330374
- #define **IOMUXC_NAND_DATA00_QSPI_A_DATA0** 0x3033010C, 0x1, 0x00000000, 0x0, 0x30330374
- #define **IOMUXC_NAND_DATA00_GPIO3_IO06** 0x3033010C, 0x5, 0x00000000, 0x0, 0x30330374

- **#define IOMUXC_NAND_DATA01_RAWNAND_DATA01** 0x30330110, 0x0, 0x00000000, 0x0, 0x30330378
- **#define IOMUXC_NAND_DATA01_QSPI_A_DATA1** 0x30330110, 0x1, 0x00000000, 0x0, 0x30330378
- **#define IOMUXC_NAND_DATA01_GPIO3_IO07** 0x30330110, 0x5, 0x00000000, 0x0, 0x30330378
- **#define IOMUXC_NAND_DATA02_RAWNAND_DATA02** 0x30330114, 0x0, 0x00000000, 0x0, 0x3033037C
- **#define IOMUXC_NAND_DATA02_QSPI_A_DATA2** 0x30330114, 0x1, 0x00000000, 0x0, 0x3033037C
- **#define IOMUXC_NAND_DATA02_USDHC3_CD_B** 0x30330114, 0x2, 0x30330544, 0x0, 0x3033037C
- **#define IOMUXC_NAND_DATA02_GPIO3_IO08** 0x30330114, 0x5, 0x00000000, 0x0, 0x3033037C
- **#define IOMUXC_NAND_DATA03_RAWNAND_DATA03** 0x30330118, 0x0, 0x00000000, 0x0, 0x30330380
- **#define IOMUXC_NAND_DATA03_QSPI_A_DATA3** 0x30330118, 0x1, 0x00000000, 0x0, 0x30330380
- **#define IOMUXC_NAND_DATA03_USDHC3_WP** 0x30330118, 0x2, 0x30330548, 0x0, 0x30330380
- **#define IOMUXC_NAND_DATA03_GPIO3_IO09** 0x30330118, 0x5, 0x00000000, 0x0, 0x30330380
- **#define IOMUXC_NAND_DATA04_RAWNAND_DATA04** 0x3033011C, 0x0, 0x00000000, 0x0, 0x30330384
- **#define IOMUXC_NAND_DATA04_QSPI_B_DATA0** 0x3033011C, 0x1, 0x00000000, 0x0, 0x30330384
- **#define IOMUXC_NAND_DATA04_USDHC3_DATA0** 0x3033011C, 0x2, 0x00000000, 0x0, 0x30330384
- **#define IOMUXC_NAND_DATA04_GPIO3_IO10** 0x3033011C, 0x5, 0x00000000, 0x0, 0x30330384
- **#define IOMUXC_NAND_DATA05_RAWNAND_DATA05** 0x30330120, 0x0, 0x00000000, 0x0, 0x30330388
- **#define IOMUXC_NAND_DATA05_QSPI_B_DATA1** 0x30330120, 0x1, 0x00000000, 0x0, 0x30330388
- **#define IOMUXC_NAND_DATA05_USDHC3_DATA1** 0x30330120, 0x2, 0x00000000, 0x0, 0x30330388
- **#define IOMUXC_NAND_DATA05_GPIO3_IO11** 0x30330120, 0x5, 0x00000000, 0x0, 0x30330388
- **#define IOMUXC_NAND_DATA06_RAWNAND_DATA06** 0x30330124, 0x0, 0x00000000, 0x0, 0x3033038C
- **#define IOMUXC_NAND_DATA06_QSPI_B_DATA2** 0x30330124, 0x1, 0x00000000, 0x0, 0x3033038C
- **#define IOMUXC_NAND_DATA06_USDHC3_DATA2** 0x30330124, 0x2, 0x00000000, 0x0, 0x3033038C
- **#define IOMUXC_NAND_DATA06_GPIO3_IO12** 0x30330124, 0x5, 0x00000000, 0x0, 0x3033038C
- **#define IOMUXC_NAND_DATA07_RAWNAND_DATA07** 0x30330128, 0x0, 0x00000000, 0x0, 0x30330390
- **#define IOMUXC_NAND_DATA07_QSPI_B_DATA3** 0x30330128, 0x1, 0x00000000, 0x0, 0x30330390

- 0x30330390
- #define **IOMUXC_NAND_DATA07_USDHC3_DATA3** 0x30330128, 0x2, 0x00000000, 0x0, 0x30330390
- #define **IOMUXC_NAND_DATA07_GPIO3_IO13** 0x30330128, 0x5, 0x00000000, 0x0, 0x30330390
- #define **IOMUXC_NAND_DQS_RAWNAND_DQS** 0x3033012C, 0x0, 0x00000000, 0x0, 0x30330394
- #define **IOMUXC_NAND_DQS_QSPI_A_DQS** 0x3033012C, 0x1, 0x00000000, 0x0, 0x30330394
- #define **IOMUXC_NAND_DQS_GPIO3_IO14** 0x3033012C, 0x5, 0x00000000, 0x0, 0x30330394
- #define **IOMUXC_NAND_RE_B_RAWNAND_RE_B** 0x30330130, 0x0, 0x00000000, 0x0, 0x30330398
- #define **IOMUXC_NAND_RE_B_QSPI_B_DQS** 0x30330130, 0x1, 0x00000000, 0x0, 0x30330398
- #define **IOMUXC_NAND_RE_B_USDHC3_DATA4** 0x30330130, 0x2, 0x00000000, 0x0, 0x30330398
- #define **IOMUXC_NAND_RE_B_GPIO3_IO15** 0x30330130, 0x5, 0x00000000, 0x0, 0x30330398
- #define **IOMUXC_NAND_READY_B_RAWNAND_READY_B** 0x30330134, 0x0, 0x00000000, 0x0, 0x3033039C
- #define **IOMUXC_NAND_READY_B_USDHC3_RESET_B** 0x30330134, 0x2, 0x00000000, 0x0, 0x3033039C
- #define **IOMUXC_NAND_READY_B_GPIO3_IO16** 0x30330134, 0x5, 0x00000000, 0x0, 0x3033039C
- #define **IOMUXC_NAND_WE_B_RAWNAND_WE_B** 0x30330138, 0x0, 0x00000000, 0x0, 0x303303A0
- #define **IOMUXC_NAND_WE_B_USDHC3_CLK** 0x30330138, 0x2, 0x00000000, 0x0, 0x303303A0
- #define **IOMUXC_NAND_WE_B_GPIO3_IO17** 0x30330138, 0x5, 0x00000000, 0x0, 0x303303A0
- #define **IOMUXC_NAND_WP_B_RAWNAND_WP_B** 0x3033013C, 0x0, 0x00000000, 0x0, 0x303303A4
- #define **IOMUXC_NAND_WP_B_USDHC3_CMD** 0x3033013C, 0x2, 0x00000000, 0x0, 0x303303A4
- #define **IOMUXC_NAND_WP_B_GPIO3_IO18** 0x3033013C, 0x5, 0x00000000, 0x0, 0x303303A4
- #define **IOMUXC_SAI5_RXFS_SAI5_RX_SYNC** 0x30330140, 0x0, 0x303304E4, 0x0, 0x303303A8
- #define **IOMUXC_SAI5_RXFS_SAI1_TX_DATA0** 0x30330140, 0x1, 0x00000000, 0x0, 0x303303A8
- #define **IOMUXC_SAI5_RXFS_GPIO3_IO19** 0x30330140, 0x5, 0x00000000, 0x0, 0x303303A8
- #define **IOMUXC_SAI5_RXC_SAI5_RX_BCLK** 0x30330144, 0x0, 0x303304D0, 0x0, 0x303303AC
- #define **IOMUXC_SAI5_RXC_SAI1_TX_DATA1** 0x30330144, 0x1, 0x00000000, 0x0, 0x303303AC
- #define **IOMUXC_SAI5_RXC_PDM_CLK** 0x30330144, 0x4, 0x00000000, 0x0, 0x303303AC
- #define **IOMUXC_SAI5_RXC_GPIO3_IO20** 0x30330144, 0x5, 0x00000000, 0x0, 0x303303AC
- #define **IOMUXC_SAI5_RXD0_SAI5_RX_DATA0** 0x30330148, 0x0, 0x303304D4, 0x0, 0x303303B0
- #define **IOMUXC_SAI5_RXD0_SAI1_TX_DATA2** 0x30330148, 0x1, 0x00000000, 0x0, 0x303303B0
- #define **IOMUXC_SAI5_RXD0_PDM_BIT_STREAM0** 0x30330148, 0x4, 0x30330534, 0x0, 0x303303B0
- #define **IOMUXC_SAI5_RXD0_GPIO3_IO21** 0x30330148, 0x5, 0x00000000, 0x0, 0x303303B0

- **#define IOMUXC_SAI5_RXD1_SAI5_RX_DATA1** 0x3033014C, 0x0, 0x303304D8, 0x0, 0x303303B4
- **#define IOMUXC_SAI5_RXD1_SAI1_TX_DATA3** 0x3033014C, 0x1, 0x00000000, 0x0, 0x303303B4
- **#define IOMUXC_SAI5_RXD1_SAI1_TX_SYNC** 0x3033014C, 0x2, 0x303304CC, 0x0, 0x303303B4
- **#define IOMUXC_SAI5_RXD1_SAI5_TX_SYNC** 0x3033014C, 0x3, 0x303304EC, 0x0, 0x303303B4
- **#define IOMUXC_SAI5_RXD1_PDM_BIT_STREAM1** 0x3033014C, 0x4, 0x30330538, 0x0, 0x303303B4
- **#define IOMUXC_SAI5_RXD1_GPIO3_IO22** 0x3033014C, 0x5, 0x00000000, 0x0, 0x303303B4
- **#define IOMUXC_SAI5_RXD2_SAI5_RX_DATA2** 0x30330150, 0x0, 0x303304DC, 0x0, 0x303303B8
- **#define IOMUXC_SAI5_RXD2_SAI1_TX_DATA4** 0x30330150, 0x1, 0x00000000, 0x0, 0x303303B8
- **#define IOMUXC_SAI5_RXD2_SAI1_TX_SYNC** 0x30330150, 0x2, 0x303304CC, 0x1, 0x303303B8
- **#define IOMUXC_SAI5_RXD2_SAI5_TX_BCLK** 0x30330150, 0x3, 0x303304E8, 0x0, 0x303303B8
- **#define IOMUXC_SAI5_RXD2_PDM_BIT_STREAM2** 0x30330150, 0x4, 0x3033053C, 0x0, 0x303303B8
- **#define IOMUXC_SAI5_RXD2_GPIO3_IO23** 0x30330150, 0x5, 0x00000000, 0x0, 0x303303B8
- **#define IOMUXC_SAI5_RXD3_SAI5_RX_DATA3** 0x30330154, 0x0, 0x303304E0, 0x0, 0x303303BC
- **#define IOMUXC_SAI5_RXD3_SAI1_TX_DATA5** 0x30330154, 0x1, 0x00000000, 0x0, 0x303303BC
- **#define IOMUXC_SAI5_RXD3_SAI1_TX_SYNC** 0x30330154, 0x2, 0x303304CC, 0x2, 0x303303BC
- **#define IOMUXC_SAI5_RXD3_SAI5_TX_DATA0** 0x30330154, 0x3, 0x00000000, 0x0, 0x303303BC
- **#define IOMUXC_SAI5_RXD3_PDM_BIT_STREAM3** 0x30330154, 0x4, 0x30330540, 0x0, 0x303303BC
- **#define IOMUXC_SAI5_RXD3_GPIO3_IO24** 0x30330154, 0x5, 0x00000000, 0x0, 0x303303BC
- **#define IOMUXC_SAI5_MCLK_SAI5_MCLK** 0x30330158, 0x0, 0x3033052C, 0x0, 0x303303C0
- **#define IOMUXC_SAI5_MCLK_SAI1_TX_BCLK** 0x30330158, 0x1, 0x303304C8, 0x0, 0x303303C0
- **#define IOMUXC_SAI5_MCLK_GPIO3_IO25** 0x30330158, 0x5, 0x00000000, 0x0, 0x303303C0
- **#define IOMUXC_SAI1_RXFS_SAI1_RX_SYNC** 0x3033015C, 0x0, 0x303304C4, 0x0, 0x303303C4
- **#define IOMUXC_SAI1_RXFS_SAI5_RX_SYNC** 0x3033015C, 0x1, 0x303304E4, 0x1, 0x303303C4
- **#define IOMUXC_SAI1_RXFS_CORESIGHT_TRACE_CLK** 0x3033015C, 0x4, 0x00000000, 0x0, 0x303303C4
- **#define IOMUXC_SAI1_RXFS_GPIO4_IO00** 0x3033015C, 0x5, 0x00000000, 0x0, 0x303303C4
- **#define IOMUXC_SAI1_RXC_SAI1_RX_BCLK** 0x30330160, 0x0, 0x00000000, 0x0, 0x00000000

- 0x303303C8
- #define **IOMUXC_SAI1_RXC_SAI5_RX_BCLK** 0x30330160, 0x1, 0x303304D0, 0x1, 0x303303C8
- #define **IOMUXC_SAI1_RXC_CORESIGHT_TRACE_CTL** 0x30330160, 0x4, 0x00000000, 0x0, 0x303303C8
- #define **IOMUXC_SAI1_RXC_GPIO4_IO01** 0x30330160, 0x5, 0x00000000, 0x0, 0x303303C8
- #define **IOMUXC_SAI1_RXD0_SAI1_RX_DATA0** 0x30330164, 0x0, 0x00000000, 0x0, 0x303303CC
- #define **IOMUXC_SAI1_RXD0_SAI5_RX_DATA0** 0x30330164, 0x1, 0x303304D4, 0x1, 0x303303CC
- #define **IOMUXC_SAI1_RXD0_SAI1_TX_DATA1** 0x30330164, 0x2, 0x00000000, 0x0, 0x303303CC
- #define **IOMUXC_SAI1_RXD0_PDM_BIT_STREAM0** 0x30330164, 0x3, 0x30330534, 0x1, 0x303303CC
- #define **IOMUXC_SAI1_RXD0_CORESIGHT_TRACE0** 0x30330164, 0x4, 0x00000000, 0x0, 0x303303CC
- #define **IOMUXC_SAI1_RXD0_GPIO4_IO02** 0x30330164, 0x5, 0x00000000, 0x0, 0x303303C-C
- #define **IOMUXC_SAI1_RXD0_SRC_BOOT_CFG0** 0x30330164, 0x6, 0x00000000, 0x0, 0x303303CC
- #define **IOMUXC_SAI1_RXD1_SAI1_RX_DATA1** 0x30330168, 0x0, 0x00000000, 0x0, 0x303303D0
- #define **IOMUXC_SAI1_RXD1_SAI5_RX_DATA1** 0x30330168, 0x1, 0x303304D8, 0x1, 0x303303D0
- #define **IOMUXC_SAI1_RXD1_PDM_BIT_STREAM1** 0x30330168, 0x3, 0x30330538, 0x1, 0x303303D0
- #define **IOMUXC_SAI1_RXD1_CORESIGHT_TRACE1** 0x30330168, 0x4, 0x00000000, 0x0, 0x303303D0
- #define **IOMUXC_SAI1_RXD1_GPIO4_IO03** 0x30330168, 0x5, 0x00000000, 0x0, 0x303303D0
- #define **IOMUXC_SAI1_RXD1_SRC_BOOT_CFG1** 0x30330168, 0x6, 0x00000000, 0x0, 0x303303D0
- #define **IOMUXC_SAI1_RXD2_SAI1_RX_DATA2** 0x3033016C, 0x0, 0x00000000, 0x0, 0x303303D4
- #define **IOMUXC_SAI1_RXD2_SAI5_RX_DATA2** 0x3033016C, 0x1, 0x303304DC, 0x1, 0x303303D4
- #define **IOMUXC_SAI1_RXD2_PDM_BIT_STREAM2** 0x3033016C, 0x3, 0x3033053C, 0x1, 0x303303D4
- #define **IOMUXC_SAI1_RXD2_CORESIGHT_TRACE2** 0x3033016C, 0x4, 0x00000000, 0x0, 0x303303D4
- #define **IOMUXC_SAI1_RXD2_GPIO4_IO04** 0x3033016C, 0x5, 0x00000000, 0x0, 0x303303-D4
- #define **IOMUXC_SAI1_RXD2_SRC_BOOT_CFG2** 0x3033016C, 0x6, 0x00000000, 0x0, 0x303303D4
- #define **IOMUXC_SAI1_RXD3_SAI1_RX_DATA3** 0x30330170, 0x0, 0x00000000, 0x0, 0x303303D8
- #define **IOMUXC_SAI1_RXD3_SAI5_RX_DATA3** 0x30330170, 0x1, 0x303304E0, 0x1, 0x303303D8
- #define **IOMUXC_SAI1_RXD3_PDM_BIT_STREAM3** 0x30330170, 0x3, 0x30330540, 0x1, 0x303303D8
- #define **IOMUXC_SAI1_RXD3_CORESIGHT_TRACE3** 0x30330170, 0x4, 0x00000000, 0x0,

```

0x303303D8
• #define IOMUXC_SAI1_RXD3_GPIO4_IO05 0x30330170, 0x5, 0x00000000, 0x0, 0x303303D8
• #define IOMUXC_SAI1_RXD3_SRC_BOOT_CFG3 0x30330170, 0x6, 0x00000000, 0x0,
0x303303D8
• #define IOMUXC_SAI1_RXD4_SAI1_RX_DATA4 0x30330174, 0x0, 0x00000000, 0x0,
0x303303DC
• #define IOMUXC_SAI1_RXD4_SAI6_TX_BCLK 0x30330174, 0x1, 0x3033051C, 0x0,
0x303303DC
• #define IOMUXC_SAI1_RXD4_SAI6_RX_BCLK 0x30330174, 0x2, 0x30330510, 0x0,
0x303303DC
• #define IOMUXC_SAI1_RXD4_CORESIGHT_TRACE4 0x30330174, 0x4, 0x00000000, 0x0,
0x303303DC
• #define IOMUXC_SAI1_RXD4_GPIO4_IO06 0x30330174, 0x5, 0x00000000, 0x0, 0x303303D-
C
• #define IOMUXC_SAI1_RXD4_SRC_BOOT_CFG4 0x30330174, 0x6, 0x00000000, 0x0,
0x303303DC
• #define IOMUXC_SAI1_RXD5_SAI1_RX_DATA5 0x30330178, 0x0, 0x00000000, 0x0,
0x303303E0
• #define IOMUXC_SAI1_RXD5_SAI6_TX_DATA0 0x30330178, 0x1, 0x00000000, 0x0,
0x303303E0
• #define IOMUXC_SAI1_RXD5_SAI6_RX_DATA0 0x30330178, 0x2, 0x30330514, 0x0,
0x303303E0
• #define IOMUXC_SAI1_RXD5_SAI1_RX_SYNC 0x30330178, 0x3, 0x303304C4, 0x1,
0x303303E0
• #define IOMUXC_SAI1_RXD5_CORESIGHT_TRACE5 0x30330178, 0x4, 0x00000000, 0x0,
0x303303E0
• #define IOMUXC_SAI1_RXD5_GPIO4_IO07 0x30330178, 0x5, 0x00000000, 0x0, 0x303303E0
• #define IOMUXC_SAI1_RXD5_SRC_BOOT_CFG5 0x30330178, 0x6, 0x00000000, 0x0,
0x303303E0
• #define IOMUXC_SAI1_RXD6_SAI1_RX_DATA6 0x3033017C, 0x0, 0x00000000, 0x0,
0x303303E4
• #define IOMUXC_SAI1_RXD6_SAI6_TX_SYNC 0x3033017C, 0x1, 0x30330520, 0x0,
0x303303E4
• #define IOMUXC_SAI1_RXD6_SAI6_RX_SYNC 0x3033017C, 0x2, 0x30330518, 0x0,
0x303303E4
• #define IOMUXC_SAI1_RXD6_CORESIGHT_TRACE6 0x3033017C, 0x4, 0x00000000, 0x0,
0x303303E4
• #define IOMUXC_SAI1_RXD6_GPIO4_IO08 0x3033017C, 0x5, 0x00000000, 0x0, 0x303303-
E4
• #define IOMUXC_SAI1_RXD6_SRC_BOOT_CFG6 0x3033017C, 0x6, 0x00000000, 0x0,
0x303303E4
• #define IOMUXC_SAI1_RXD7_SAI1_RX_DATA7 0x30330180, 0x0, 0x00000000, 0x0,
0x303303E8
• #define IOMUXC_SAI1_RXD7_SAI6_MCLK 0x30330180, 0x1, 0x30330530, 0x0, 0x303303E8
• #define IOMUXC_SAI1_RXD7_SAI1_TX_SYNC 0x30330180, 0x2, 0x303304CC, 0x4,
0x303303E8
• #define IOMUXC_SAI1_RXD7_SAI1_TX_DATA4 0x30330180, 0x3, 0x00000000, 0x0,
0x303303E8
• #define IOMUXC_SAI1_RXD7_CORESIGHT_TRACE7 0x30330180, 0x4, 0x00000000, 0x0,
0x303303E8

```

- #define **IOMUXC_SAI1_RXD7_GPIO4_IO09** 0x30330180, 0x5, 0x00000000, 0x0, 0x303303E8
- #define **IOMUXC_SAI1_RXD7_SRC_BOOT_CFG7** 0x30330180, 0x6, 0x00000000, 0x0, 0x303303E8
- #define **IOMUXC_SAI1_TXFS_SAI1_TX_SYNC** 0x30330184, 0x0, 0x303304CC, 0x3, 0x303303EC
- #define **IOMUXC_SAI1_TXFS_SAI5_TX_SYNC** 0x30330184, 0x1, 0x303304EC, 0x1, 0x303303EC
- #define **IOMUXC_SAI1_TXFS_CORESIGHT_EVENT0** 0x30330184, 0x4, 0x00000000, 0x0, 0x303303EC
- #define **IOMUXC_SAI1_TXFS_GPIO4_IO10** 0x30330184, 0x5, 0x00000000, 0x0, 0x303303EC
- #define **IOMUXC_SAI1_TXC_SAI1_TX_BCLK** 0x30330188, 0x0, 0x303304C8, 0x1, 0x303303F0
- #define **IOMUXC_SAI1_TXC_SAI5_TX_BCLK** 0x30330188, 0x1, 0x303304E8, 0x1, 0x303303F0
- #define **IOMUXC_SAI1_TXC_CORESIGHT_EVENT1** 0x30330188, 0x4, 0x00000000, 0x0, 0x303303F0
- #define **IOMUXC_SAI1_TXC_GPIO4_IO11** 0x30330188, 0x5, 0x00000000, 0x0, 0x303303F0
- #define **IOMUXC_SAI1_TXD0_SAI1_TX_DATA0** 0x3033018C, 0x0, 0x00000000, 0x0, 0x303303F4
- #define **IOMUXC_SAI1_TXD0_SAI5_TX_DATA0** 0x3033018C, 0x1, 0x00000000, 0x0, 0x303303F4
- #define **IOMUXC_SAI1_TXD0_CORESIGHT_TRACE8** 0x3033018C, 0x4, 0x00000000, 0x0, 0x303303F4
- #define **IOMUXC_SAI1_TXD0_GPIO4_IO12** 0x3033018C, 0x5, 0x00000000, 0x0, 0x303303F4
- #define **IOMUXC_SAI1_TXD0_SRC_BOOT_CFG8** 0x3033018C, 0x6, 0x00000000, 0x0, 0x303303F4
- #define **IOMUXC_SAI1_TXD1_SAI1_TX_DATA1** 0x30330190, 0x0, 0x00000000, 0x0, 0x303303F8
- #define **IOMUXC_SAI1_TXD1_SAI5_TX_DATA1** 0x30330190, 0x1, 0x00000000, 0x0, 0x303303F8
- #define **IOMUXC_SAI1_TXD1_CORESIGHT_TRACE9** 0x30330190, 0x4, 0x00000000, 0x0, 0x303303F8
- #define **IOMUXC_SAI1_TXD1_GPIO4_IO13** 0x30330190, 0x5, 0x00000000, 0x0, 0x303303F8
- #define **IOMUXC_SAI1_TXD1_SRC_BOOT_CFG9** 0x30330190, 0x6, 0x00000000, 0x0, 0x303303F8
- #define **IOMUXC_SAI1_TXD2_SAI1_TX_DATA2** 0x30330194, 0x0, 0x00000000, 0x0, 0x303303FC
- #define **IOMUXC_SAI1_TXD2_SAI5_TX_DATA2** 0x30330194, 0x1, 0x00000000, 0x0, 0x303303FC
- #define **IOMUXC_SAI1_TXD2_CORESIGHT_TRACE10** 0x30330194, 0x4, 0x00000000, 0x0, 0x303303FC
- #define **IOMUXC_SAI1_TXD2_GPIO4_IO14** 0x30330194, 0x5, 0x00000000, 0x0, 0x303303FC
- #define **IOMUXC_SAI1_TXD2_SRC_BOOT_CFG10** 0x30330194, 0x6, 0x00000000, 0x0, 0x303303FC
- #define **IOMUXC_SAI1_TXD3_SAI1_TX_DATA3** 0x30330198, 0x0, 0x00000000, 0x0, 0x30330400
- #define **IOMUXC_SAI1_TXD3_SAI5_TX_DATA3** 0x30330198, 0x1, 0x00000000, 0x0, 0x30330400
- #define **IOMUXC_SAI1_TXD3_CORESIGHT_TRACE11** 0x30330198, 0x4, 0x00000000, 0x0, 0x30330400

- #define **IOMUXC_SAI1_TXD3_GPIO4_IO15** 0x30330198, 0x5, 0x00000000, 0x0, 0x30330400
- #define **IOMUXC_SAI1_TXD3_SRC_BOOT_CFG11** 0x30330198, 0x6, 0x00000000, 0x0, 0x30330400
- #define **IOMUXC_SAI1_TXD4_SAI1_TX_DATA4** 0x3033019C, 0x0, 0x00000000, 0x0, 0x30330404
- #define **IOMUXC_SAI1_TXD4_SAI6_RX_BCLK** 0x3033019C, 0x1, 0x30330510, 0x1, 0x30330404
- #define **IOMUXC_SAI1_TXD4_SAI6_TX_BCLK** 0x3033019C, 0x2, 0x3033051C, 0x1, 0x30330404
- #define **IOMUXC_SAI1_TXD4_CORESIGHT_TRACE12** 0x3033019C, 0x4, 0x00000000, 0x0, 0x30330404
- #define **IOMUXC_SAI1_TXD4_GPIO4_IO16** 0x3033019C, 0x5, 0x00000000, 0x0, 0x30330404
- #define **IOMUXC_SAI1_TXD4_SRC_BOOT_CFG12** 0x3033019C, 0x6, 0x00000000, 0x0, 0x30330404
- #define **IOMUXC_SAI1_TXD5_SAI1_TX_DATA5** 0x303301A0, 0x0, 0x00000000, 0x0, 0x30330408
- #define **IOMUXC_SAI1_TXD5_SAI6_RX_DATA0** 0x303301A0, 0x1, 0x30330514, 0x1, 0x30330408
- #define **IOMUXC_SAI1_TXD5_SAI6_TX_DATA0** 0x303301A0, 0x2, 0x00000000, 0x0, 0x30330408
- #define **IOMUXC_SAI1_TXD5_CORESIGHT_TRACE13** 0x303301A0, 0x4, 0x00000000, 0x0, 0x30330408
- #define **IOMUXC_SAI1_TXD5_GPIO4_IO17** 0x303301A0, 0x5, 0x00000000, 0x0, 0x30330408
- #define **IOMUXC_SAI1_TXD5_SRC_BOOT_CFG13** 0x303301A0, 0x6, 0x00000000, 0x0, 0x30330408
- #define **IOMUXC_SAI1_TXD6_SAI1_TX_DATA6** 0x303301A4, 0x0, 0x00000000, 0x0, 0x3033040C
- #define **IOMUXC_SAI1_TXD6_SAI6_RX_SYNC** 0x303301A4, 0x1, 0x30330518, 0x1, 0x3033040C
- #define **IOMUXC_SAI1_TXD6_SAI6_TX_SYNC** 0x303301A4, 0x2, 0x30330520, 0x1, 0x3033040C
- #define **IOMUXC_SAI1_TXD6_CORESIGHT_TRACE14** 0x303301A4, 0x4, 0x00000000, 0x0, 0x3033040C
- #define **IOMUXC_SAI1_TXD6_GPIO4_IO18** 0x303301A4, 0x5, 0x00000000, 0x0, 0x3033040C
- #define **IOMUXC_SAI1_TXD6_SRC_BOOT_CFG14** 0x303301A4, 0x6, 0x00000000, 0x0, 0x3033040C
- #define **IOMUXC_SAI1_TXD7_SAI1_TX_DATA7** 0x303301A8, 0x0, 0x00000000, 0x0, 0x30330410
- #define **IOMUXC_SAI1_TXD7_SAI6_MCLK** 0x303301A8, 0x1, 0x30330530, 0x1, 0x30330410
- #define **IOMUXC_SAI1_TXD7_PDM_CLK** 0x303301A8, 0x3, 0x00000000, 0x0, 0x30330410
- #define **IOMUXC_SAI1_TXD7_CORESIGHT_TRACE15** 0x303301A8, 0x4, 0x00000000, 0x0, 0x30330410
- #define **IOMUXC_SAI1_TXD7_GPIO4_IO19** 0x303301A8, 0x5, 0x00000000, 0x0, 0x30330410
- #define **IOMUXC_SAI1_TXD7_SRC_BOOT_CFG15** 0x303301A8, 0x6, 0x00000000, 0x0, 0x30330410
- #define **IOMUXC_SAI1_MCLK_SAI1_MCLK** 0x303301AC, 0x0, 0x00000000, 0x0, 0x30330414
- #define **IOMUXC_SAI1_MCLK_SAI5_MCLK** 0x303301AC, 0x1, 0x3033052C, 0x1, 0x30330414
- #define **IOMUXC_SAI1_MCLK_SAI1_TX_BCLK** 0x303301AC, 0x2, 0x303304C8, 0x2, 0x30330414
- #define **IOMUXC_SAI1_MCLK_PDM_CLK** 0x303301AC, 0x3, 0x00000000, 0x0, 0x30330414

- #define **IOMUXC_SAI1_MCLK_GPIO4_IO20** 0x303301AC, 0x5, 0x00000000, 0x0, 0x30330414
- #define **IOMUXC_SAI2_RXFS_SAI2_RX_SYNC** 0x303301B0, 0x0, 0x00000000, 0x0, 0x30330418
- #define **IOMUXC_SAI2_RXFS_SAI5_TX_SYNC** 0x303301B0, 0x1, 0x303304EC, 0x2, 0x30330418
- #define **IOMUXC_SAI2_RXFS_SAI5_TX_DATA1** 0x303301B0, 0x2, 0x00000000, 0x0, 0x30330418
- #define **IOMUXC_SAI2_RXFS_SAI2_RX_DATA1** 0x303301B0, 0x3, 0x00000000, 0x0, 0x30330418
- #define **IOMUXC_SAI2_RXFS_UART1_TX** 0x303301B0, 0x4, 0x00000000, 0x0, 0x30330418
- #define **IOMUXC_SAI2_RXFS_UART1_RX** 0x303301B0, 0x4, 0x303304F4, 0x2, 0x30330418
- #define **IOMUXC_SAI2_RXFS_GPIO4_IO21** 0x303301B0, 0x5, 0x00000000, 0x0, 0x30330418
- #define **IOMUXC_SAI2_RXC_SAI2_RX_BCLK** 0x303301B4, 0x0, 0x00000000, 0x0, 0x3033041C
- #define **IOMUXC_SAI2_RXC_SAI5_TX_BCLK** 0x303301B4, 0x1, 0x303304E8, 0x2, 0x3033041C
- #define **IOMUXC_SAI2_RXC_UART1_RX** 0x303301B4, 0x4, 0x303304F4, 0x3, 0x3033041C
- #define **IOMUXC_SAI2_RXC_UART1_TX** 0x303301B4, 0x4, 0x00000000, 0x0, 0x3033041C
- #define **IOMUXC_SAI2_RXC_GPIO4_IO22** 0x303301B4, 0x5, 0x00000000, 0x0, 0x3033041C
- #define **IOMUXC_SAI2_RXD0_SAI2_RX_DATA0** 0x303301B8, 0x0, 0x00000000, 0x0, 0x30330420
- #define **IOMUXC_SAI2_RXD0_SAI5_TX_DATA0** 0x303301B8, 0x1, 0x00000000, 0x0, 0x30330420
- #define **IOMUXC_SAI2_RXD0_UART1_RTS_B** 0x303301B8, 0x4, 0x303304F0, 0x2, 0x30330420
- #define **IOMUXC_SAI2_RXD0_UART1_CTS_B** 0x303301B8, 0x4, 0x00000000, 0x0, 0x30330420
- #define **IOMUXC_SAI2_RXD0_GPIO4_IO23** 0x303301B8, 0x5, 0x00000000, 0x0, 0x30330420
- #define **IOMUXC_SAI2_TXFS_SAI2_TX_SYNC** 0x303301BC, 0x0, 0x00000000, 0x0, 0x30330424
- #define **IOMUXC_SAI2_TXFS_SAI5_TX_DATA1** 0x303301BC, 0x1, 0x00000000, 0x0, 0x30330424
- #define **IOMUXC_SAI2_TXFS_SAI2_TX_DATA1** 0x303301BC, 0x3, 0x00000000, 0x0, 0x30330424
- #define **IOMUXC_SAI2_TXFS_UART1_CTS_B** 0x303301BC, 0x4, 0x00000000, 0x0, 0x30330424
- #define **IOMUXC_SAI2_TXFS_UART1_RTS_B** 0x303301BC, 0x4, 0x303304F0, 0x3, 0x30330424
- #define **IOMUXC_SAI2_TXFS_GPIO4_IO24** 0x303301BC, 0x5, 0x00000000, 0x0, 0x30330424
- #define **IOMUXC_SAI2_TXC_SAI2_TX_BCLK** 0x303301C0, 0x0, 0x00000000, 0x0, 0x30330428
- #define **IOMUXC_SAI2_TXC_SAI5_TX_DATA2** 0x303301C0, 0x1, 0x00000000, 0x0, 0x30330428
- #define **IOMUXC_SAI2_TXC_GPIO4_IO25** 0x303301C0, 0x5, 0x00000000, 0x0, 0x30330428
- #define **IOMUXC_SAI2_TXD0_SAI2_TX_DATA0** 0x303301C4, 0x0, 0x00000000, 0x0, 0x3033042C
- #define **IOMUXC_SAI2_TXD0_SAI5_TX_DATA3** 0x303301C4, 0x1, 0x00000000, 0x0, 0x3033042C
- #define **IOMUXC_SAI2_TXD0_GPIO4_IO26** 0x303301C4, 0x5, 0x00000000, 0x0, 0x3033042C
- #define **IOMUXC_SAI2_MCLK_SAI2_MCLK** 0x303301C8, 0x0, 0x00000000, 0x0, 0x30330430

- #define **IOMUXC_SAI2_MCLK_SAI5_MCLK** 0x303301C8, 0x1, 0x3033052C, 0x2, 0x30330430
- #define **IOMUXC_SAI2_MCLK_GPIO4_IO27** 0x303301C8, 0x5, 0x00000000, 0x0, 0x30330430
- #define **IOMUXC_SAI3_RXFS_SAI3_RX_SYNC** 0x303301CC, 0x0, 0x00000000, 0x0, 0x30330434
- #define **IOMUXC_SAI3_RXFS_GPT1_CAPTURE1** 0x303301CC, 0x1, 0x00000000, 0x0, 0x30330434
- #define **IOMUXC_SAI3_RXFS_SAI5_RX_SYNC** 0x303301CC, 0x2, 0x303304E4, 0x2, 0x30330434
- #define **IOMUXC_SAI3_RXFS_SAI3_RX_DATA1** 0x303301CC, 0x3, 0x00000000, 0x0, 0x30330434
- #define **IOMUXC_SAI3_RXFS_GPIO4_IO28** 0x303301CC, 0x5, 0x00000000, 0x0, 0x30330434
- #define **IOMUXC_SAI3_RXC_SAI3_RX_BCLK** 0x303301D0, 0x0, 0x00000000, 0x0, 0x30330438
- #define **IOMUXC_SAI3_RXC_GPT1_CLK** 0x303301D0, 0x1, 0x00000000, 0x0, 0x30330438
- #define **IOMUXC_SAI3_RXC_SAI5_RX_BCLK** 0x303301D0, 0x2, 0x303304D0, 0x2, 0x30330438
- #define **IOMUXC_SAI3_RXC_UART2_CTS_B** 0x303301D0, 0x4, 0x00000000, 0x0, 0x30330438
- #define **IOMUXC_SAI3_RXC_UART2_RTS_B** 0x303301D0, 0x4, 0x303304F8, 0x2, 0x30330438
- #define **IOMUXC_SAI3_RXC_GPIO4_IO29** 0x303301D0, 0x5, 0x00000000, 0x0, 0x30330438
- #define **IOMUXC_SAI3_RXD_SAI3_RX_DATA0** 0x303301D4, 0x0, 0x00000000, 0x0, 0x3033043C
- #define **IOMUXC_SAI3_RXD_GPT1_COMPARE1** 0x303301D4, 0x1, 0x00000000, 0x0, 0x3033043C
- #define **IOMUXC_SAI3_RXD_SAI5_RX_DATA0** 0x303301D4, 0x2, 0x303304D4, 0x2, 0x3033043C
- #define **IOMUXC_SAI3_RXD_UART2_RTS_B** 0x303301D4, 0x4, 0x303304F8, 0x3, 0x3033043C
- #define **IOMUXC_SAI3_RXD_UART2_CTS_B** 0x303301D4, 0x4, 0x00000000, 0x0, 0x3033043C
- #define **IOMUXC_SAI3_RXD_GPIO4_IO30** 0x303301D4, 0x5, 0x00000000, 0x0, 0x3033043C
- #define **IOMUXC_SAI3_TXFS_SAI3_TX_SYNC** 0x303301D8, 0x0, 0x00000000, 0x0, 0x30330440
- #define **IOMUXC_SAI3_TXFS_GPT1_CAPTURE2** 0x303301D8, 0x1, 0x00000000, 0x0, 0x30330440
- #define **IOMUXC_SAI3_TXFS_SAI5_RX_DATA1** 0x303301D8, 0x2, 0x303304D8, 0x2, 0x30330440
- #define **IOMUXC_SAI3_TXFS_SAI3_TX_DATA1** 0x303301D8, 0x3, 0x00000000, 0x0, 0x30330440
- #define **IOMUXC_SAI3_TXFS_UART2_RX** 0x303301D8, 0x4, 0x303304FC, 0x2, 0x30330440
- #define **IOMUXC_SAI3_TXFS_UART2_TX** 0x303301D8, 0x4, 0x00000000, 0x0, 0x30330440
- #define **IOMUXC_SAI3_TXFS_GPIO4_IO31** 0x303301D8, 0x5, 0x00000000, 0x0, 0x30330440
- #define **IOMUXC_SAI3_TXC_SAI3_TX_BCLK** 0x303301DC, 0x0, 0x00000000, 0x0, 0x30330444
- #define **IOMUXC_SAI3_TXC_GPT1_COMPARE2** 0x303301DC, 0x1, 0x00000000, 0x0, 0x30330444
- #define **IOMUXC_SAI3_TXC_SAI5_RX_DATA2** 0x303301DC, 0x2, 0x303304DC, 0x2, 0x30330444
- #define **IOMUXC_SAI3_TXC_UART2_TX** 0x303301DC, 0x4, 0x00000000, 0x0, 0x30330444
- #define **IOMUXC_SAI3_TXC_UART2_RX** 0x303301DC, 0x4, 0x303304FC, 0x3, 0x30330444
- #define **IOMUXC_SAI3_TXC_GPIO5_IO00** 0x303301DC, 0x5, 0x00000000, 0x0, 0x30330444

- #define **IOMUXC_SAI3_TXD_SAI3_TX_DATA0** 0x303301E0, 0x0, 0x00000000, 0x0, 0x30330448
- #define **IOMUXC_SAI3_TXD_GPT1_COMPARE3** 0x303301E0, 0x1, 0x00000000, 0x0, 0x30330448
- #define **IOMUXC_SAI3_TXD_SAI5_RX_DATA3** 0x303301E0, 0x2, 0x303304E0, 0x2, 0x30330448
- #define **IOMUXC_SAI3_TXD_GPIO5_IO01** 0x303301E0, 0x5, 0x00000000, 0x0, 0x30330448
- #define **IOMUXC_SAI3_MCLK_SAI3_MCLK** 0x303301E4, 0x0, 0x00000000, 0x0, 0x3033044-C
- #define **IOMUXC_SAI3_MCLK_PWM4_OUT** 0x303301E4, 0x1, 0x00000000, 0x0, 0x3033044-C
- #define **IOMUXC_SAI3_MCLK_SAI5_MCLK** 0x303301E4, 0x2, 0x3033052C, 0x3, 0x3033044-C
- #define **IOMUXC_SAI3_MCLK_GPIO5_IO02** 0x303301E4, 0x5, 0x00000000, 0x0, 0x3033044-C
- #define **IOMUXC_SPDIF_TX_SPDIF1_OUT** 0x303301E8, 0x0, 0x00000000, 0x0, 0x30330450
- #define **IOMUXC_SPDIF_TX_PWM3_OUT** 0x303301E8, 0x1, 0x00000000, 0x0, 0x30330450
- #define **IOMUXC_SPDIF_TX_GPIO5_IO03** 0x303301E8, 0x5, 0x00000000, 0x0, 0x30330450
- #define **IOMUXC_SPDIF_RX_SPDIF1_IN** 0x303301EC, 0x0, 0x00000000, 0x0, 0x30330454
- #define **IOMUXC_SPDIF_RX_PWM2_OUT** 0x303301EC, 0x1, 0x00000000, 0x0, 0x30330454
- #define **IOMUXC_SPDIF_RX_GPIO5_IO04** 0x303301EC, 0x5, 0x00000000, 0x0, 0x30330454
- #define **IOMUXC_SPDIF_EXT_CLK_SPDIF1_EXT_CLK** 0x303301F0, 0x0, 0x00000000, 0x0, 0x30330458
- #define **IOMUXC_SPDIF_EXT_CLK_PWM1_OUT** 0x303301F0, 0x1, 0x00000000, 0x0, 0x30330458
- #define **IOMUXC_SPDIF_EXT_CLK_GPIO5_IO05** 0x303301F0, 0x5, 0x00000000, 0x0, 0x30330458
- #define **IOMUXC_ECSP11_SCLK_ECSP11_SCLK** 0x303301F4, 0x0, 0x00000000, 0x0, 0x3033045C
- #define **IOMUXC_ECSP11_SCLK_UART3_RX** 0x303301F4, 0x1, 0x30330504, 0x0, 0x3033045-C
- #define **IOMUXC_ECSP11_SCLK_UART3_TX** 0x303301F4, 0x1, 0x00000000, 0x0, 0x3033045C
- #define **IOMUXC_ECSP11_SCLK_GPIO5_IO06** 0x303301F4, 0x5, 0x00000000, 0x0, 0x3033045C
- #define **IOMUXC_ECSP11_MOSI_ECSP11_MOSI** 0x303301F8, 0x0, 0x00000000, 0x0, 0x30330460
- #define **IOMUXC_ECSP11_MOSI_UART3_TX** 0x303301F8, 0x1, 0x00000000, 0x0, 0x30330460
- #define **IOMUXC_ECSP11_MOSI_UART3_RX** 0x303301F8, 0x1, 0x30330504, 0x1, 0x30330460
- #define **IOMUXC_ECSP11_MOSI_GPIO5_IO07** 0x303301F8, 0x5, 0x00000000, 0x0, 0x30330460
- #define **IOMUXC_ECSP11_MISO_ECSP11_MISO** 0x303301FC, 0x0, 0x00000000, 0x0, 0x30330464
- #define **IOMUXC_ECSP11_MISO_UART3_CTS_B** 0x303301FC, 0x1, 0x00000000, 0x0, 0x30330464
- #define **IOMUXC_ECSP11_MISO_UART3_RTS_B** 0x303301FC, 0x1, 0x30330500, 0x0, 0x30330464
- #define **IOMUXC_ECSP11_MISO_GPIO5_IO08** 0x303301FC, 0x5, 0x00000000, 0x0, 0x30330464
- #define **IOMUXC_ECSP11_SS0_ECSP11_SS0** 0x30330200, 0x0, 0x00000000, 0x0, 0x30330468

- #define **IOMUXC_ECSP11_SS0_UART3_RTS_B** 0x30330200, 0x1, 0x30330500, 0x1, 0x30330468
- #define **IOMUXC_ECSP11_SS0_UART3_CTS_B** 0x30330200, 0x1, 0x00000000, 0x0, 0x30330468
- #define **IOMUXC_ECSP11_SS0_GPIO5_IO09** 0x30330200, 0x5, 0x00000000, 0x0, 0x30330468
- #define **IOMUXC_ECSP12_SCLK_ECSP12_SCLK** 0x30330204, 0x0, 0x00000000, 0x0, 0x3033046C
- #define **IOMUXC_ECSP12_SCLK_UART4_RX** 0x30330204, 0x1, 0x3033050C, 0x0, 0x3033046C
- #define **IOMUXC_ECSP12_SCLK_UART4_TX** 0x30330204, 0x1, 0x00000000, 0x0, 0x3033046C
- #define **IOMUXC_ECSP12_SCLK_GPIO5_IO10** 0x30330204, 0x5, 0x00000000, 0x0, 0x3033046C
- #define **IOMUXC_ECSP12_MOSI_ECSP12_MOSI** 0x30330208, 0x0, 0x00000000, 0x0, 0x30330470
- #define **IOMUXC_ECSP12_MOSI_UART4_TX** 0x30330208, 0x1, 0x00000000, 0x0, 0x30330470
- #define **IOMUXC_ECSP12_MOSI_UART4_RX** 0x30330208, 0x1, 0x3033050C, 0x1, 0x30330470
- #define **IOMUXC_ECSP12_MOSI_GPIO5_IO11** 0x30330208, 0x5, 0x00000000, 0x0, 0x30330470
- #define **IOMUXC_ECSP12_MISO_ECSP12_MISO** 0x3033020C, 0x0, 0x00000000, 0x0, 0x30330474
- #define **IOMUXC_ECSP12_MISO_UART4_CTS_B** 0x3033020C, 0x1, 0x00000000, 0x0, 0x30330474
- #define **IOMUXC_ECSP12_MISO_UART4_RTS_B** 0x3033020C, 0x1, 0x30330508, 0x0, 0x30330474
- #define **IOMUXC_ECSP12_MISO_GPIO5_IO12** 0x3033020C, 0x5, 0x00000000, 0x0, 0x30330474
- #define **IOMUXC_ECSP12_SS0_ECSP12_SS0** 0x30330210, 0x0, 0x00000000, 0x0, 0x30330478
- #define **IOMUXC_ECSP12_SS0_UART4_RTS_B** 0x30330210, 0x1, 0x30330508, 0x1, 0x30330478
- #define **IOMUXC_ECSP12_SS0_UART4_CTS_B** 0x30330210, 0x1, 0x00000000, 0x0, 0x30330478
- #define **IOMUXC_ECSP12_SS0_GPIO5_IO13** 0x30330210, 0x5, 0x00000000, 0x0, 0x30330478
- #define **IOMUXC_I2C1_SCL_I2C1_SCL** 0x30330214, 0x0, 0x00000000, 0x0, 0x3033047C
- #define **IOMUXC_I2C1_SCL_ENET1_MDC** 0x30330214, 0x1, 0x00000000, 0x0, 0x3033047C
- #define **IOMUXC_I2C1_SCL_GPIO5_IO14** 0x30330214, 0x5, 0x00000000, 0x0, 0x3033047C
- #define **IOMUXC_I2C1_SDA_I2C1_SDA** 0x30330218, 0x0, 0x00000000, 0x0, 0x30330480
- #define **IOMUXC_I2C1_SDA_ENET1_MDIO** 0x30330218, 0x1, 0x303304C0, 0x2, 0x30330480
- #define **IOMUXC_I2C1_SDA_GPIO5_IO15** 0x30330218, 0x5, 0x00000000, 0x0, 0x30330480
- #define **IOMUXC_I2C2_SCL_I2C2_SCL** 0x3033021C, 0x0, 0x00000000, 0x0, 0x30330484
- #define **IOMUXC_I2C2_SCL_ENET1_1588_EVENT1_IN** 0x3033021C, 0x1, 0x00000000, 0x0, 0x30330484
- #define **IOMUXC_I2C2_SCL_USDHC3_CD_B** 0x3033021C, 0x2, 0x30330544, 0x1, 0x30330484
- #define **IOMUXC_I2C2_SCL_GPIO5_IO16** 0x3033021C, 0x5, 0x00000000, 0x0, 0x30330484
- #define **IOMUXC_I2C2_SDA_I2C2_SDA** 0x30330220, 0x0, 0x00000000, 0x0, 0x30330488
- #define **IOMUXC_I2C2_SDA_ENET1_1588_EVENT1_OUT** 0x30330220, 0x1, 0x00000000, 0x0, 0x30330488
- #define **IOMUXC_I2C2_SDA_USDHC3_WP** 0x30330220, 0x2, 0x30330548, 0x1, 0x30330488
- #define **IOMUXC_I2C2_SDA_GPIO5_IO17** 0x30330220, 0x5, 0x00000000, 0x0, 0x30330488
- #define **IOMUXC_I2C3_SCL_I2C3_SCL** 0x30330224, 0x0, 0x00000000, 0x0, 0x3033048C
- #define **IOMUXC_I2C3_SCL_PWM4_OUT** 0x30330224, 0x1, 0x00000000, 0x0, 0x3033048C
- #define **IOMUXC_I2C3_SCL_GPT2_CLK** 0x30330224, 0x2, 0x00000000, 0x0, 0x3033048C

- #define **IOMUXC_I2C3_SCL_GPIO5_IO18** 0x30330224, 0x5, 0x00000000, 0x0, 0x3033048C
- #define **IOMUXC_I2C3_SDA_I2C3_SDA** 0x30330228, 0x0, 0x00000000, 0x0, 0x30330490
- #define **IOMUXC_I2C3_SDA_PWM3_OUT** 0x30330228, 0x1, 0x00000000, 0x0, 0x30330490
- #define **IOMUXC_I2C3_SDA_GPT3_CLK** 0x30330228, 0x2, 0x00000000, 0x0, 0x30330490
- #define **IOMUXC_I2C3_SDA_GPIO5_IO19** 0x30330228, 0x5, 0x00000000, 0x0, 0x30330490
- #define **IOMUXC_I2C4_SCL_I2C4_SCL** 0x3033022C, 0x0, 0x00000000, 0x0, 0x30330494
- #define **IOMUXC_I2C4_SCL_PWM2_OUT** 0x3033022C, 0x1, 0x00000000, 0x0, 0x30330494
- #define **IOMUXC_I2C4_SCL_PCIE1_CLKREQ_B** 0x3033022C, 0x2, 0x30330524, 0x0, 0x30330494
- #define **IOMUXC_I2C4_SCL_GPIO5_IO20** 0x3033022C, 0x5, 0x00000000, 0x0, 0x30330494
- #define **IOMUXC_I2C4_SDA_I2C4_SDA** 0x30330230, 0x0, 0x00000000, 0x0, 0x30330498
- #define **IOMUXC_I2C4_SDA_PWM1_OUT** 0x30330230, 0x1, 0x00000000, 0x0, 0x30330498
- #define **IOMUXC_I2C4_SDA_GPIO5_IO21** 0x30330230, 0x5, 0x00000000, 0x0, 0x30330498
- #define **IOMUXC_UART1_RXD_UART1_RX** 0x30330234, 0x0, 0x303304F4, 0x0, 0x3033049-C
- #define **IOMUXC_UART1_RXD_UART1_TX** 0x30330234, 0x0, 0x00000000, 0x0, 0x3033049-C
- #define **IOMUXC_UART1_RXD_ECSPi3_SCLK** 0x30330234, 0x1, 0x00000000, 0x0, 0x3033049C
- #define **IOMUXC_UART1_RXD_GPIO5_IO22** 0x30330234, 0x5, 0x00000000, 0x0, 0x3033049-C
- #define **IOMUXC_UART1_TXD_UART1_TX** 0x30330238, 0x0, 0x00000000, 0x0, 0x303304-A0
- #define **IOMUXC_UART1_TXD_UART1_RX** 0x30330238, 0x0, 0x303304F4, 0x1, 0x303304-A0
- #define **IOMUXC_UART1_TXD_ECSPi3_MOSI** 0x30330238, 0x1, 0x00000000, 0x0, 0x303304A0
- #define **IOMUXC_UART1_TXD_GPIO5_IO23** 0x30330238, 0x5, 0x00000000, 0x0, 0x303304-A0
- #define **IOMUXC_UART2_RXD_UART2_RX** 0x3033023C, 0x0, 0x303304FC, 0x0, 0x303304-A4
- #define **IOMUXC_UART2_RXD_UART2_TX** 0x3033023C, 0x0, 0x00000000, 0x0, 0x303304-A4
- #define **IOMUXC_UART2_RXD_ECSPi3_MISO** 0x3033023C, 0x1, 0x00000000, 0x0, 0x303304A4
- #define **IOMUXC_UART2_RXD_GPIO5_IO24** 0x3033023C, 0x5, 0x00000000, 0x0, 0x303304-A4
- #define **IOMUXC_UART2_TXD_UART2_TX** 0x30330240, 0x0, 0x00000000, 0x0, 0x303304-A8
- #define **IOMUXC_UART2_TXD_UART2_RX** 0x30330240, 0x0, 0x303304FC, 0x1, 0x303304-A8
- #define **IOMUXC_UART2_TXD_ECSPi3_SS0** 0x30330240, 0x1, 0x00000000, 0x0, 0x303304-A8
- #define **IOMUXC_UART2_TXD_GPIO5_IO25** 0x30330240, 0x5, 0x00000000, 0x0, 0x303304-A8
- #define **IOMUXC_UART3_RXD_UART3_RX** 0x30330244, 0x0, 0x30330504, 0x2, 0x303304-AC
- #define **IOMUXC_UART3_RXD_UART3_TX** 0x30330244, 0x0, 0x00000000, 0x0, 0x303304-AC
- #define **IOMUXC_UART3_RXD_UART1_CTS_B** 0x30330244, 0x1, 0x00000000, 0x0, 0x303304AC

- #define **IOMUXC_UART3_RXD_UART1_RTS_B** 0x30330244, 0x1, 0x303304F0, 0x0, 0x303304AC
- #define **IOMUXC_UART3_RXD_USDHC3_RESET_B** 0x30330244, 0x2, 0x00000000, 0x0, 0x303304AC
- #define **IOMUXC_UART3_RXD_GPIO5_IO26** 0x30330244, 0x5, 0x00000000, 0x0, 0x303304AC
- #define **IOMUXC_UART3_TXD_UART3_TX** 0x30330248, 0x0, 0x00000000, 0x0, 0x303304B0
- #define **IOMUXC_UART3_TXD_UART3_RX** 0x30330248, 0x0, 0x30330504, 0x3, 0x303304B0
- #define **IOMUXC_UART3_TXD_UART1_RTS_B** 0x30330248, 0x1, 0x303304F0, 0x1, 0x303304B0
- #define **IOMUXC_UART3_TXD_UART1_CTS_B** 0x30330248, 0x1, 0x00000000, 0x0, 0x303304B0
- #define **IOMUXC_UART3_TXD_USDHC3_VSELECT** 0x30330248, 0x2, 0x00000000, 0x0, 0x303304B0
- #define **IOMUXC_UART3_TXD_GPIO5_IO27** 0x30330248, 0x5, 0x00000000, 0x0, 0x303304B0
- #define **IOMUXC_UART4_RXD_UART4_RX** 0x3033024C, 0x0, 0x3033050C, 0x2, 0x303304B4
- #define **IOMUXC_UART4_RXD_UART4_TX** 0x3033024C, 0x0, 0x00000000, 0x0, 0x303304B4
- #define **IOMUXC_UART4_RXD_UART2_CTS_B** 0x3033024C, 0x1, 0x00000000, 0x0, 0x303304B4
- #define **IOMUXC_UART4_RXD_UART2_RTS_B** 0x3033024C, 0x1, 0x303304F8, 0x0, 0x303304B4
- #define **IOMUXC_UART4_RXD_PCIE1_CLKREQ_B** 0x3033024C, 0x2, 0x30330524, 0x1, 0x303304B4
- #define **IOMUXC_UART4_RXD_GPIO5_IO28** 0x3033024C, 0x5, 0x00000000, 0x0, 0x303304B4
- #define **IOMUXC_UART4_TXD_UART4_TX** 0x30330250, 0x0, 0x00000000, 0x0, 0x303304B8
- #define **IOMUXC_UART4_TXD_UART4_RX** 0x30330250, 0x0, 0x3033050C, 0x3, 0x303304B8
- #define **IOMUXC_UART4_TXD_UART2_RTS_B** 0x30330250, 0x1, 0x303304F8, 0x1, 0x303304B8
- #define **IOMUXC_UART4_TXD_UART2_CTS_B** 0x30330250, 0x1, 0x00000000, 0x0, 0x303304B8
- #define **IOMUXC_UART4_TXD_GPIO5_IO29** 0x30330250, 0x5, 0x00000000, 0x0, 0x303304B8
- #define **IOMUXC_TEST_MODE** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330254
- #define **IOMUXC_BOOT_MODE0** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330258
- #define **IOMUXC_BOOT_MODE1** 0x00000000, 0x0, 0x00000000, 0x0, 0x3033025C
- #define **IOMUXC_JTAG_MOD** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330260
- #define **IOMUXC_JTAG_TRST_B** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330264
- #define **IOMUXC_JTAG_TDI** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330268
- #define **IOMUXC_JTAG_TMS** 0x00000000, 0x0, 0x00000000, 0x0, 0x3033026C
- #define **IOMUXC_JTAG_TCK** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330270
- #define **IOMUXC_JTAG_TDO** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330274
- #define **IOMUXC_RTC** 0x00000000, 0x0, 0x00000000, 0x0, 0x30330278

Configuration

- static void [IOMUXC_SetPinMux](#) (uint32_t muxRegister, uint32_t muxMode, uint32_t inputRegister, uint32_t inputDaisy, uint32_t configRegister, uint32_t inputOnfield)
Sets the IOMUXC pin mux mode.
- static void [IOMUXC_SetPinConfig](#) (uint32_t muxRegister, uint32_t muxMode, uint32_t inputRegister, uint32_t inputDaisy, uint32_t configRegister, uint32_t configValue)
Sets the IOMUXC pin configuration.

Macro Definition Documentation

7.2.1 #define FSL_IOMUXC_DRIVER_VERSION (MAKE_VERSION(2, 0, 1))

Function Documentation

7.3.1 static void IOMUXC_SetPinMux (uint32_t *muxRegister*, uint32_t *muxMode*, uint32_t *inputRegister*, uint32_t *inputDaisy*, uint32_t *configRegister*, uint32_t *inputOnfield*) [inline], [static]

Note

The first five parameters can be filled with the pin function ID macros.

This is an example to set the I2C4_SDA as the pwm1_OUT:

```
* IOMUXC_SetPinMux(IOMUXC_I2C4_SDA_PWM1_OUT, 0);
*
```

Parameters

<i>muxRegister</i>	The pin mux register_
<i>muxMode</i>	The pin mux mode_
<i>inputRegister</i>	The select input register_
<i>inputDaisy</i>	The input daisy_
<i>configRegister</i>	The config register_
<i>inputOnfield</i>	The pad->module input inversion_

7.3.2 static void IOMUXC_SetPinConfig (uint32_t *muxRegister*, uint32_t *muxMode*, uint32_t *inputRegister*, uint32_t *inputDaisy*, uint32_t *configRegister*, uint32_t *configValue*) [inline], [static]

Note

The previous five parameters can be filled with the pin function ID macros.

This is an example to set pin configuration for IOMUXC_I2C4_SDA_PWM1_OUT:

```
* IOMUXC_SetPinConfig(IOMUXC_I2C4_SDA_PWM1_OUT, IOMUXC_SW_PAD_CTL_PAD_ODE_MASK |
    IOMUXC0_SW_PAD_CTL_PAD_DSE(2U))
*
```

Parameters

<i>muxRegister</i>	The pin mux register_
<i>muxMode</i>	The pin mux mode_
<i>inputRegister</i>	The select input register_
<i>inputDaisy</i>	The input daisy_
<i>configRegister</i>	The config register_
<i>configValue</i>	The pin config value_

Chapter 8 Common Driver

Overview

The MCUXpresso SDK provides a driver for the common module of MCUXpresso SDK devices.

Macros

- #define **MAKE_STATUS**(group, code) (((group)*100) + (code))
Construct a status code value from a group and code number.
- #define **MAKE_VERSION**(major, minor, bugfix) (((major) << 16) | ((minor) << 8) | (bugfix))
Construct the version number for drivers.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_NONE** 0U
No debug console.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_UART** 1U
Debug console based on UART.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_LPUART** 2U
Debug console based on LPUART.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_LPSCI** 3U
Debug console based on LPSCI.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_USBCDC** 4U
Debug console based on USBCDC.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM** 5U
Debug console based on FLEXCOMM.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_IUART** 6U
Debug console based on i.MX UART.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_VUSART** 7U
Debug console based on LPC_VUSART.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART** 8U
Debug console based on LPC_USART.
- #define **DEBUG_CONSOLE_DEVICE_TYPE_SWO** 9U
Debug console based on SWO.
- #define **ARRAY_SIZE**(x) (sizeof(x) / sizeof((x)[0]))
Computes the number of elements in an array.

Typedefs

- typedef int32_t **status_t**
Type used for all status and error return values.

Enumerations

- enum _status_groups {
 - kStatusGroup_Generic = 0,
 - kStatusGroup_FLASH = 1,
 - kStatusGroup_LPSPI = 4,
 - kStatusGroup_FLEXIO_SPI = 5,
 - kStatusGroup_DSPI = 6,
 - kStatusGroup_FLEXIO_UART = 7,
 - kStatusGroup_FLEXIO_I2C = 8,
 - kStatusGroup_LPI2C = 9,
 - kStatusGroup_UART = 10,
 - kStatusGroup_I2C = 11,
 - kStatusGroup_LPSCI = 12,
 - kStatusGroup_LPUART = 13,
 - kStatusGroup_SPI = 14,
 - kStatusGroup_XRDC = 15,
 - kStatusGroup_SEMA42 = 16,
 - kStatusGroup_SDHC = 17,
 - kStatusGroup_SDMMC = 18,
 - kStatusGroup_SAI = 19,
 - kStatusGroup_MCG = 20,
 - kStatusGroup_SCG = 21,
 - kStatusGroup_SDSPI = 22,
 - kStatusGroup_FLEXIO_I2S = 23,
 - kStatusGroup_FLEXIO_MCULCD = 24,
 - kStatusGroup_FLASHIAP = 25,
 - kStatusGroup_FLEXCOMM_I2C = 26,
 - kStatusGroup_I2S = 27,
 - kStatusGroup_IUART = 28,
 - kStatusGroup_CSI = 29,
 - kStatusGroup_MIPI_DSI = 30,
 - kStatusGroup_SDRAMC = 35,
 - kStatusGroup_POWER = 39,
 - kStatusGroup_ENET = 40,
 - kStatusGroup_PHY = 41,
 - kStatusGroup_TRGMUX = 42,
 - kStatusGroup_SMARTCARD = 43,
 - kStatusGroup_LMEM = 44,
 - kStatusGroup_QSPI = 45,
 - kStatusGroup_DMA = 50,
 - kStatusGroup_EDMA = 51,
 - kStatusGroup_DMAMGR = 52,
 - kStatusGroup_FLEXCAN = 53,
 - kStatusGroup_LTC = 54,
 - kStatusGroup_FLEXIO_CAMERA = 55,
 - kStatusGroup_LPC_SPI = 56,
 - kStatusGroup_LPC_USMCA = 57,
 - kStatusGroup_DMIC = 58,
 - kStatusGroup_SDIF = 59,

```
kStatusGroup_LOG = 154 }
```

Status group numbers.

- enum {
 kStatus_Success = MAKE_STATUS(kStatusGroup_Generic, 0),
 kStatus_Fail = MAKE_STATUS(kStatusGroup_Generic, 1),
 kStatus_ReadOnly = MAKE_STATUS(kStatusGroup_Generic, 2),
 kStatus_OutOfRange = MAKE_STATUS(kStatusGroup_Generic, 3),
 kStatus_InvalidArgument = MAKE_STATUS(kStatusGroup_Generic, 4),
 kStatus_Timeout = MAKE_STATUS(kStatusGroup_Generic, 5),
 kStatus_NoTransferInProgress = MAKE_STATUS(kStatusGroup_Generic, 6) }

Generic status return codes.

Functions

- static [status_t EnableIRQ](#) (IRQn_Type interrupt)
 Enable specific interrupt.
- static [status_t DisableIRQ](#) (IRQn_Type interrupt)
 Disable specific interrupt.
- static [uint32_t DisableGlobalIRQ](#) (void)
 Disable the global IRQ.
- static void [EnableGlobalIRQ](#) (uint32_t primask)
 Enable the global IRQ.
- void * [SDK_Malloc](#) (size_t size, size_t alignbytes)
 Allocate memory with given alignment and aligned size.
- void [SDK_Free](#) (void *ptr)
 Free memory.
- void [SDK_DelayAtLeastUs](#) (uint32_t delayTime_us, uint32_t coreClock_Hz)
 Delay at least for some time.

Driver version

- #define [FSL_COMMON_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 2, 9))
 common driver version.

Min/max macros

- #define [MIN](#)(a, b) (((a) < (b)) ? (a) : (b))
- #define [MAX](#)(a, b) (((a) > (b)) ? (a) : (b))

UINT16_MAX/UINT32_MAX value

- #define [UINT16_MAX](#) ((uint16_t)-1)
- #define [UINT32_MAX](#) ((uint32_t)-1)

Timer utilities

- #define [USEC_TO_COUNT](#)(us, clockFreqInHz) (uint64_t)((((uint64_t)(us) * (clockFreqInHz)) / 1000000U))
 Macro to convert a microsecond period to raw count value.

- #define **COUNT_TO_USEC**(count, clockFreqInHz) (uint64_t)((uint64_t)(count) * 1000000U / (clockFreqInHz))
Macro to convert a raw count value to microsecond.
- #define **MSEC_TO_COUNT**(ms, clockFreqInHz) (uint64_t)((uint64_t)(ms) * (clockFreqInHz) / 1000U)
Macro to convert a millisecond period to raw count value.
- #define **COUNT_TO_MSEC**(count, clockFreqInHz) (uint64_t)((uint64_t)(count) * 1000U / (clockFreqInHz))
Macro to convert a raw count value to millisecond.

Alignment variable definition macros

- #define **SDK_ALIGN**(var, alignbytes) var
- #define **SDK_L1DCACHE_ALIGN**(var) var
- #define **SDK_SIZEALIGN**(var, alignbytes) (((unsigned int)((var) + ((alignbytes)-1U)) & (unsigned int)(~(unsigned int)((alignbytes)-1U))))
Macro to change a value to a given size aligned value.

Non-cacheable region definition macros

- #define **AT_NONCACHEABLE_SECTION**(var) var
- #define **AT_NONCACHEABLE_SECTION_ALIGN**(var, alignbytes) var
- #define **AT_NONCACHEABLE_SECTION_INIT**(var) var
- #define **AT_NONCACHEABLE_SECTION_ALIGN_INIT**(var, alignbytes) var

Suppress fallthrough warning macro

- #define **SUPPRESS_FALL_THROUGH_WARNING**()

Atomic modification

These macros are used for atomic access, such as read-modify-write to the peripheral registers.

- **SDK_ATOMIC_LOCAL_ADD**
- **SDK_ATOMIC_LOCAL_SET**
- **SDK_ATOMIC_LOCAL_CLEAR**
- **SDK_ATOMIC_LOCAL_TOGGLE**
- **SDK_ATOMIC_LOCAL_CLEAR_AND_SET**

Take **SDK_ATOMIC_LOCAL_CLEAR_AND_SET** as an example: the parameter `addr` means the address of the peripheral register or variable you want to modify atomically, the parameter `clearBits` is the bits to clear, the parameter `setBits` it the bits to set. For example, to set a 32-bit register bit1:bit0 to 0b10, use like this:

```
volatile uint32_t * reg = (volatile uint32_t *)REG_ADDR;

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(reg, 0x03, 0x02);
```

In this example, the register bit1:bit0 are cleared and bit1 is set, as a result, register bit1:bit0 = 0b10.

Note

For the platforms don't support exclusive load and store, these macros disable the global interrupt to protect the modification.

These macros only guarantee the local processor atomic operations. For the multi-processor devices, use hardware semaphore such as SEMA42 to guarantee exclusive access if necessary.

- #define **SDK_ATOMIC_LOCAL_ADD**(addr, val)
- #define **SDK_ATOMIC_LOCAL_SET**(addr, bits)
- #define **SDK_ATOMIC_LOCAL_CLEAR**(addr, bits)
- #define **SDK_ATOMIC_LOCAL_TOGGLE**(addr, bits)
- #define **SDK_ATOMIC_LOCAL_CLEAR_AND_SET**(addr, clearBits, setBits)

Macro Definition Documentation

- 8.2.1 **#define MAKE_STATUS(*group*, *code*) (((group)*100) + (code))**
- 8.2.2 **#define MAKE_VERSION(*major*, *minor*, *bugfix*) (((major) << 16) | ((minor) << 8) | (bugfix))**
- 8.2.3 **#define FSL_COMMON_DRIVER_VERSION (MAKE_VERSION(2, 2, 9))**
- 8.2.4 **#define DEBUG_CONSOLE_DEVICE_TYPE_NONE 0U**
- 8.2.5 **#define DEBUG_CONSOLE_DEVICE_TYPE_UART 1U**
- 8.2.6 **#define DEBUG_CONSOLE_DEVICE_TYPE_LPUART 2U**
- 8.2.7 **#define DEBUG_CONSOLE_DEVICE_TYPE_LPSCI 3U**
- 8.2.8 **#define DEBUG_CONSOLE_DEVICE_TYPE_USBCDC 4U**
- 8.2.9 **#define DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM 5U**
- 8.2.10 **#define DEBUG_CONSOLE_DEVICE_TYPE_IUART 6U**
- 8.2.11 **#define DEBUG_CONSOLE_DEVICE_TYPE_VUSART 7U**
- 8.2.12 **#define DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART 8U**
- 8.2.13 **#define DEBUG_CONSOLE_DEVICE_TYPE_SWO 9U**
- 8.2.14 **#define ARRAY_SIZE(*x*) (sizeof(x) / sizeof((x)[0]))**

Typedef Documentation

- 8.3.1 **typedef int32_t status_t**

Enumeration Type Documentation

- 8.4.1 **enum _status_groups**

Enumerator

kStatusGroup_Generic Group number for generic status codes.

kStatusGroup_FLASH Group number for FLASH status codes.

kStatusGroup_LPSPI Group number for LPSPI status codes.

kStatusGroup_FLEXIO_SPI Group number for FLEXIO SPI status codes.

kStatusGroup_DSPI Group number for DSPI status codes.

kStatusGroup_FLEXIO_UART Group number for FLEXIO UART status codes.

kStatusGroup_FLEXIO_I2C Group number for FLEXIO I2C status codes.

kStatusGroup_LPI2C Group number for LPI2C status codes.

kStatusGroup_UART Group number for UART status codes.

kStatusGroup_I2C Group number for I2C status codes.

kStatusGroup_LPSCI Group number for LPSCI status codes.

kStatusGroup_LPUART Group number for LPUART status codes.

kStatusGroup_SPI Group number for SPI status code.

kStatusGroup_XRDC Group number for XRDC status code.

kStatusGroup_SEMA42 Group number for SEMA42 status code.

kStatusGroup_SDHC Group number for SDHC status code.

kStatusGroup_SDMMC Group number for SDMMC status code.

kStatusGroup_SAI Group number for SAI status code.

kStatusGroup_MCG Group number for MCG status codes.

kStatusGroup_SCG Group number for SCG status codes.

kStatusGroup_SDSPI Group number for SDSPI status codes.

kStatusGroup_FLEXIO_I2S Group number for FLEXIO I2S status codes.

kStatusGroup_FLEXIO_MCULCD Group number for FLEXIO LCD status codes.

kStatusGroup_FLASHIAP Group number for FLASHIAP status codes.

kStatusGroup_FLEXCOMM_I2C Group number for FLEXCOMM I2C status codes.

kStatusGroup_I2S Group number for I2S status codes.

kStatusGroup_IUART Group number for IUART status codes.

kStatusGroup_CSI Group number for CSI status codes.

kStatusGroup_MIPI_DSI Group number for MIPI DSI status codes.

kStatusGroup_SDRAMC Group number for SDRAMC status codes.

kStatusGroup_POWER Group number for POWER status codes.

kStatusGroup_ENET Group number for ENET status codes.

kStatusGroup_PHY Group number for PHY status codes.

kStatusGroup_TRGMUX Group number for TRGMUX status codes.

kStatusGroup_SMARTCARD Group number for SMARTCARD status codes.

kStatusGroup_LMEM Group number for LMEM status codes.

kStatusGroup_QSPI Group number for QSPI status codes.

kStatusGroup_DMA Group number for DMA status codes.

kStatusGroup_EDMA Group number for EDMA status codes.

kStatusGroup_DMAMGR Group number for DMAMGR status codes.

kStatusGroup_FLEXCAN Group number for FlexCAN status codes.

kStatusGroup_LTC Group number for LTC status codes.

kStatusGroup_FLEXIO_CAMERA Group number for FLEXIO CAMERA status codes.

kStatusGroup_LPC_SPI Group number for LPC_SPI status codes.

kStatusGroup_LPC_USART Group number for LPC_USART status codes.

kStatusGroup_DMIC Group number for DMIC status codes.

kStatusGroup_SDIF Group number for SDIF status codes.
kStatusGroup_SPIFI Group number for SPIFI status codes.
kStatusGroup_OTP Group number for OTP status codes.
kStatusGroup_MCAN Group number for MCAN status codes.
kStatusGroup_CAAM Group number for CAAM status codes.
kStatusGroup_ECSPi Group number for ECSPi status codes.
kStatusGroup_USDHC Group number for USDHC status codes.
kStatusGroup_LPC_I2C Group number for LPC_I2C status codes.
kStatusGroup_DCP Group number for DCP status codes.
kStatusGroup_MSCAN Group number for MSCAN status codes.
kStatusGroup_ESAI Group number for ESAI status codes.
kStatusGroup_FLEXSPI Group number for FLEXSPI status codes.
kStatusGroup_MMDC Group number for MMDC status codes.
kStatusGroup_PDM Group number for MIC status codes.
kStatusGroup_SDMA Group number for SDMA status codes.
kStatusGroup_ICS Group number for ICS status codes.
kStatusGroup_SPDIF Group number for SPDIF status codes.
kStatusGroup_LPC_MINISPI Group number for LPC_MINISPI status codes.
kStatusGroup_HASHCRYPT Group number for Hashcrypt status codes.
kStatusGroup_LPC_SPI_SSP Group number for LPC_SPI_SSP status codes.
kStatusGroup_I3C Group number for I3C status codes.
kStatusGroup_LPC_I2C_1 Group number for LPC_I2C_1 status codes.
kStatusGroup_NOTIFIER Group number for NOTIFIER status codes.
kStatusGroup_DebugConsole Group number for debug console status codes.
kStatusGroup_SEMC Group number for SEMC status codes.
kStatusGroup_ApplicationRangeStart Starting number for application groups.
kStatusGroup_IAP Group number for IAP status codes.
kStatusGroup_SFA Group number for SFA status codes.
kStatusGroup_SPC Group number for SPC status codes.
kStatusGroup_PUF Group number for PUF status codes.
kStatusGroup_TOUCH_PANEL Group number for touch panel status codes.
kStatusGroup_HAL_GPIO Group number for HAL GPIO status codes.
kStatusGroup_HAL_UART Group number for HAL UART status codes.
kStatusGroup_HAL_TIMER Group number for HAL TIMER status codes.
kStatusGroup_HAL_SPI Group number for HAL SPI status codes.
kStatusGroup_HAL_I2C Group number for HAL I2C status codes.
kStatusGroup_HAL_FLASH Group number for HAL FLASH status codes.
kStatusGroup_HAL_PWM Group number for HAL PWM status codes.
kStatusGroup_HAL_RNG Group number for HAL RNG status codes.
kStatusGroup_TIMERMANAGER Group number for TiMER MANAGER status codes.
kStatusGroup_SERIALMANAGER Group number for SERIAL MANAGER status codes.
kStatusGroup_LED Group number for LED status codes.
kStatusGroup_BUTTON Group number for BUTTON status codes.
kStatusGroup_EXTERN_EEPROM Group number for EXTERN EEPROM status codes.
kStatusGroup_SHELL Group number for SHELL status codes.

kStatusGroup_MEM_MANAGER Group number for MEM MANAGER status codes.
kStatusGroup_LIST Group number for List status codes.
kStatusGroup_OSA Group number for OSA status codes.
kStatusGroup_COMMON_TASK Group number for Common task status codes.
kStatusGroup_MSG Group number for messaging status codes.
kStatusGroup_SDK_OCOTP Group number for OCOTP status codes.
kStatusGroup_SDK_FLEXSPINOR Group number for FLEXSPINOR status codes.
kStatusGroup_CODEEC Group number for codec status codes.
kStatusGroup_ASRC Group number for codec status ASRC.
kStatusGroup_OTFAD Group number for codec status codes.
kStatusGroup_SDIO SLV Group number for SDIO SLV status codes.
kStatusGroup_MECC Group number for MECC status codes.
kStatusGroup_ENET_QOS Group number for ENET_QOS status codes.
kStatusGroup_LOG Group number for LOG status codes.

8.4.2 anonymous enum

Enumerator

kStatus_Success Generic status for Success.
kStatus_Fail Generic status for Fail.
kStatus_ReadOnly Generic status for read only failure.
kStatus_OutOfRange Generic status for out of range access.
kStatus_InvalidArgument Generic status for invalid argument check.
kStatus_Timeout Generic status for timeout.
kStatus_NoTransferInProgress Generic status for no transfer in progress.

Function Documentation

8.5.1 static status_t EnableIRQ (IRQn_Type *interrupt*) [inline], [static]

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

<i>interrupt</i>	The IRQ number.
------------------	-----------------

Return values

<i>kStatus_Success</i>	Interrupt enabled successfully
<i>kStatus_Fail</i>	Failed to enable the interrupt

8.5.2 static status_t DisableIRQ (IRQn_Type *interrupt*) [inline], [static]

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

<i>interrupt</i>	The IRQ number.
------------------	-----------------

Return values

<i>kStatus_Success</i>	Interrupt disabled successfully
<i>kStatus_Fail</i>	Failed to disable the interrupt

8.5.3 static uint32_t DisableGlobalIRQ (void) [inline], [static]

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the [EnableGlobalIRQ\(\)](#).

Returns

Current primask value.

8.5.4 static void EnableGlobalIRQ (uint32_t *primask*) [inline], [static]

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the [EnableGlobalIRQ\(\)](#) and [DisableGlobalIRQ\(\)](#) in pair.

Parameters

<i>primask</i>	value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ() .
----------------	--

8.5.5 void* SDK_Malloc (size_t size, size_t alignbytes)

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

<i>size</i>	The length required to malloc.
<i>alignbytes</i>	The alignment size.

Return values

<i>The</i>	allocated memory.
------------	-------------------

8.5.6 void SDK_Free (void * ptr)

Parameters

<i>ptr</i>	The memory to be release.
------------	---------------------------

8.5.7 void SDK_DelayAtLeastUs (uint32_t delayTime_us, uint32_t coreClock_Hz)

Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

<i>delayTime_us</i>	Delay time in unit of microsecond.
<i>coreClock_Hz</i>	Core clock frequency with Hz.



Chapter 9

ECSPI: Enhanced Configurable Serial Peripheral Interface Driver

Overview

Modules

- [ECSPI Driver](#)

ECSPI Driver

9.2.1 Overview

ECSPI driver includes functional APIs and transactional APIs.

Functional APIs are feature/property target low level APIs. Functional APIs can be used for ECSPI initialization/configuration/operation for optimization/customization purpose. Using the functional API requires the knowledge of the SPI peripheral and how to organize functional APIs to meet the application requirements. All functional API use the peripheral base address as the first parameter. ECSPI functional operation groups provide the functional API set.

Transactional APIs are transaction target high level APIs. Transactional APIs can be used to enable the peripheral and in the application if the code size and performance of transactional APIs satisfy the requirements. If the code size and performance are a critical requirement, see the transactional API implementation and write a custom code. All transactional APIs use the `spi_handle_t` as the first parameter. Initialize the handle by calling the `SPI_MasterTransferCreateHandle()` or `SPI_SlaveTransferCreateHandle()` API.

Transactional APIs support asynchronous transfer. This means that the functions `SPI_MasterTransferNonBlocking()` and `SPI_SlaveTransferNonBlocking()` set up the interrupt for data transfer. When the transfer completes, the upper layer is notified through a callback function with the `kStatus_SPI_Idle` status.

9.2.2 Typical use case

9.2.2.1 SPI master transfer using polling method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/ecspi`

9.2.2.2 SPI master transfer using an interrupt method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/ecspi`

Data Structures

- struct [ecspi_channel_config_t](#)
ECSPI user channel configure structure. [More...](#)
- struct [ecspi_master_config_t](#)
ECSPI master configure structure. [More...](#)
- struct [ecspi_slave_config_t](#)
ECSPI slave configure structure. [More...](#)
- struct [ecspi_transfer_t](#)
ECSPI transfer structure. [More...](#)
- struct [ecspi_master_handle_t](#)
ECSPI master handle structure. [More...](#)

Macros

- #define `ECSPI_DUMMYDATA` (0xFFFFFFFFU)
ECSPI dummy transfer data, the data is sent while txBuff is NULL.
- #define `SPI_RETRY_TIMES` 0U /* Define to zero means keep waiting until the flag is assert/deassert. */
Retry times for waiting flag.

Typedefs

- typedef `ecspi_master_handle_t` `ecspi_slave_handle_t`
Slave handle is the same with master handle.
- typedef void(* `ecspi_master_callback_t`)(ECSPI_Type *base, `ecspi_master_handle_t` *handle, `status_t` status, void *userData)
ECSPI master callback for finished transmit.
- typedef void(* `ecspi_slave_callback_t`)(ECSPI_Type *base, `ecspi_slave_handle_t` *handle, `status_t` status, void *userData)
ECSPI slave callback for finished transmit.

Enumerations

- enum {
 `kStatus_ECSPI_Busy` = MAKE_STATUS(kStatusGroup_ECSPI, 0),
 `kStatus_ECSPI_Idle` = MAKE_STATUS(kStatusGroup_ECSPI, 1),
 `kStatus_ECSPI_Error` = MAKE_STATUS(kStatusGroup_ECSPI, 2),
 `kStatus_ECSPI_HardwareOverflow` = MAKE_STATUS(kStatusGroup_ECSPI, 3),
 `kStatus_ECSPI_Timeout` = MAKE_STATUS(kStatusGroup_ECSPI, 4) }
Return status for the ECSPI driver.
- enum `ecspi_clock_polarity_t` {
 `kECSPI_PolarityActiveHigh` = 0x0U,
 `kECSPI_PolarityActiveLow` }
ECSPI clock polarity configuration.
- enum `ecspi_clock_phase_t` {
 `kECSPI_ClockPhaseFirstEdge`,
 `kECSPI_ClockPhaseSecondEdge` }
ECSPI clock phase configuration.
- enum {
 `kECSPI_Tx_fifoEmptyInterruptEnable` = ECSPI_INTREG_TEEN_MASK,
 `kECSPI_Tx_fifoDataRequestInterruptEnable` = ECSPI_INTREG_TDREN_MASK,
 `kECSPI_Tx_fifoFullInterruptEnable` = ECSPI_INTREG_TFEN_MASK,
 `kECSPI_Rx_fifoReadyInterruptEnable` = ECSPI_INTREG_RREN_MASK,
 `kECSPI_Rx_fifoDataRequestInterruptEnable` = ECSPI_INTREG_RDREN_MASK,
 `kECSPI_Rx_fifoFullInterruptEnable` = ECSPI_INTREG_RFEN_MASK,
 `kECSPI_Rx_fifoOverflowInterruptEnable` = ECSPI_INTREG_ROEN_MASK,
 `kECSPI_TransferCompleteInterruptEnable` = ECSPI_INTREG_TCEN_MASK,

`kECSPI_AllInterruptEnable` }

ECSPI interrupt sources.

- enum {
`kECSPI_TxFifoEmptyFlag` = `ECSPI_STATREG_TE_MASK`,
`kECSPI_TxFifoDataRequestFlag` = `ECSPI_STATREG_TDR_MASK`,
`kECSPI_TxFifoFullFlag` = `ECSPI_STATREG_TF_MASK`,
`kECSPI_RxFifoReadyFlag` = `ECSPI_STATREG_RR_MASK`,
`kECSPI_RxFifoDataRequestFlag` = `ECSPI_STATREG_RDR_MASK`,
`kECSPI_RxFifoFullFlag` = `ECSPI_STATREG_RF_MASK`,
`kECSPI_RxFifoOverflowFlag` = `ECSPI_STATREG_RO_MASK`,
`kECSPI_TransferCompleteFlag` = `ECSPI_STATREG_TC_MASK` }

ECSPI status flags.

- enum {
`kECSPI_TxDmaEnable` = `ECSPI_DMAREG_TEDEN_MASK`,
`kECSPI_RxDmaEnable` = `ECSPI_DMAREG_RXDEN_MASK`,
`kECSPI_DmaAllEnable` = (`ECSPI_DMAREG_TEDEN_MASK` | `ECSPI_DMAREG_RXDEN_MASK`) }

ECSPI DMA enable.

- enum `ecspi_Data_ready_t` {
`kECSPI_DataReadyIgnore` = `0x0U`,
`kECSPI_DataReadyFallingEdge`,
`kECSPI_DataReadyLowLevel` }

ECSPI SPI_RDY signal configuration.

- enum `ecspi_channel_source_t` {
`kECSPI_Channel0` = `0x0U`,
`kECSPI_Channel1`,
`kECSPI_Channel2`,
`kECSPI_Channel3` }

ECSPI channel select source.

- enum `ecspi_master_slave_mode_t` {
`kECSPI_Slave` = `0U`,
`kECSPI_Master` }

ECSPI master or slave mode configuration.

- enum `ecspi_data_line_inactive_state_t` {
`kECSPI_DataLineInactiveStateHigh` = `0x0U`,
`kECSPI_DataLineInactiveStateLow` }

ECSPI data line inactive state configuration.

- enum `ecspi_clock_inactive_state_t` {
`kECSPI_ClockInactiveStateLow` = `0x0U`,
`kECSPI_ClockInactiveStateHigh` }

ECSPI clock inactive state configuration.

- enum `ecspi_chip_select_active_state_t` {
`kECSPI_ChipSelectActiveStateLow` = `0x0U`,
`kECSPI_ChipSelectActiveStateHigh` }

ECSPI active state configuration.

- enum `ecspi_sample_period_clock_source_t` {
`kECSPI_spiClock` = `0x0U`,

`kECSPI_lowFreqClock }`
ECSPI sample period clock configuration.

Functions

- `uint32_t ECSPI_GetInstance` (ECSPI_Type *base)
Get the instance for ECSPI module.

Driver version

- `#define FSL_ECSPI_DRIVER_VERSION` (MAKE_VERSION(2, 2, 0))
ECSPI driver version.

Initialization and deinitialization

- `void ECSPI_MasterGetDefaultConfig` (ecspi_master_config_t *config)
Sets the ECSPI configuration structure to default values.
- `void ECSPI_MasterInit` (ECSPI_Type *base, const ecspi_master_config_t *config, uint32_t src-Clock_Hz)
Initializes the ECSPI with configuration.
- `void ECSPI_SlaveGetDefaultConfig` (ecspi_slave_config_t *config)
Sets the ECSPI configuration structure to default values.
- `void ECSPI_SlaveInit` (ECSPI_Type *base, const ecspi_slave_config_t *config)
Initializes the ECSPI with configuration.
- `void ECSPI_Deinit` (ECSPI_Type *base)
De-initializes the ECSPI.
- `static void ECSPI_Enable` (ECSPI_Type *base, bool enable)
Enables or disables the ECSPI.

Status

- `static uint32_t ECSPI_GetStatusFlags` (ECSPI_Type *base)
Gets the status flag.
- `static void ECSPI_ClearStatusFlags` (ECSPI_Type *base, uint32_t mask)
Clear the status flag.

Interrupts

- `static void ECSPI_EnableInterrupts` (ECSPI_Type *base, uint32_t mask)
Enables the interrupt for the ECSPI.
- `static void ECSPI_DisableInterrupts` (ECSPI_Type *base, uint32_t mask)
Disables the interrupt for the ECSPI.

Software Reset

- static void [ECSPI_SoftwareReset](#) (ECSPI_Type *base)
Software reset.

Channel mode check

- static bool [ECSPI_IsMaster](#) (ECSPI_Type *base, [ecspi_channel_source_t](#) channel)
Mode check.

DMA Control

- static void [ECSPI_EnableDMA](#) (ECSPI_Type *base, uint32_t mask, bool enable)
Enables the DMA source for ECSPI.

FIFO Operation

- static uint8_t [ECSPI_GetTxFifoCount](#) (ECSPI_Type *base)
Get the Tx FIFO data count.
- static uint8_t [ECSPI_GetRxFifoCount](#) (ECSPI_Type *base)
Get the Rx FIFO data count.

Bus Operations

- static void [ECSPI_SetChannelSelect](#) (ECSPI_Type *base, [ecspi_channel_source_t](#) channel)
Set channel select for transfer.
- void [ECSPI_SetChannelConfig](#) (ECSPI_Type *base, [ecspi_channel_source_t](#) channel, const [ecspi_channel_config_t](#) *config)
Set channel select configuration for transfer.
- void [ECSPI_SetBaudRate](#) (ECSPI_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)
Sets the baud rate for ECSPI transfer.
- [status_t](#) [ECSPI_WriteBlocking](#) (ECSPI_Type *base, uint32_t *buffer, size_t size)
Sends a buffer of data bytes using a blocking method.
- static void [ECSPI_WriteData](#) (ECSPI_Type *base, uint32_t data)
Writes a data into the ECSPI data register.
- static uint32_t [ECSPI_ReadData](#) (ECSPI_Type *base)
Gets a data from the ECSPI data register.

Transactional

- void [ECSPI_MasterTransferCreateHandle](#) (ECSPI_Type *base, [ecspi_master_handle_t](#) *handle, [ecspi_master_callback_t](#) callback, void *userData)
Initializes the ECSPI master handle.
- [status_t](#) [ECSPI_MasterTransferBlocking](#) (ECSPI_Type *base, [ecspi_transfer_t](#) *xfer)

- Transfers a block of data using a polling method.*

 - [status_t ECSPI_MasterTransferNonBlocking](#) (ECSPI_Type *base, [ecspi_master_handle_t](#) *handle, [ecspi_transfer_t](#) *xfer)
- Performs a non-blocking ECSPI interrupt transfer.*

 - [status_t ECSPI_MasterTransferGetCount](#) (ECSPI_Type *base, [ecspi_master_handle_t](#) *handle, [size_t](#) *count)
- Gets the bytes of the ECSPI interrupt transferred.*

 - void [ECSPI_MasterTransferAbort](#) (ECSPI_Type *base, [ecspi_master_handle_t](#) *handle)
- Aborts an ECSPI transfer using interrupt.*

 - void [ECSPI_MasterTransferHandleIRQ](#) (ECSPI_Type *base, [ecspi_master_handle_t](#) *handle)
- Interrupts the handler for the ECSPI.*

 - void [ECSPI_SlaveTransferCreateHandle](#) (ECSPI_Type *base, [ecspi_slave_handle_t](#) *handle, [ecspi_slave_callback_t](#) callback, void *userData)
- Initializes the ECSPI slave handle.*

 - static [status_t ECSPI_SlaveTransferNonBlocking](#) (ECSPI_Type *base, [ecspi_slave_handle_t](#) *handle, [ecspi_transfer_t](#) *xfer)
- Performs a non-blocking ECSPI slave interrupt transfer.*

 - static [status_t ECSPI_SlaveTransferGetCount](#) (ECSPI_Type *base, [ecspi_slave_handle_t](#) *handle, [size_t](#) *count)
- Gets the bytes of the ECSPI interrupt transferred.*

 - static void [ECSPI_SlaveTransferAbort](#) (ECSPI_Type *base, [ecspi_slave_handle_t](#) *handle)
- Aborts an ECSPI slave transfer using interrupt.*

 - void [ECSPI_SlaveTransferHandleIRQ](#) (ECSPI_Type *base, [ecspi_slave_handle_t](#) *handle)
- Interrupts a handler for the ECSPI slave.*

9.2.3 Data Structure Documentation

9.2.3.1 struct [ecspi_channel_config_t](#)

Data Fields

- [ecspi_master_slave_mode_t](#) channelMode
Channel mode.
- [ecspi_clock_inactive_state_t](#) clockInactiveState
Clock line (SCLK) inactive state.
- [ecspi_data_line_inactive_state_t](#) dataLineInactiveState
Data line (MOSI&MISO) inactive state.
- [ecspi_chip_select_active_state_t](#) chipSlectActiveState
Chip select(SS) line active state.
- [ecspi_clock_polarity_t](#) polarity
Clock polarity.
- [ecspi_clock_phase_t](#) phase
Clock phase.

9.2.3.2 struct ecspi_master_config_t

Data Fields

- [ecspi_channel_source_t channel](#)
Channel number.
- [ecspi_channel_config_t channelConfig](#)
Channel configuration.
- [ecspi_sample_period_clock_source_t samplePeriodClock](#)
Sample period clock source.
- [uint8_t burstLength](#)
Burst length.
- [uint8_t chipSelectDelay](#)
SS delay time.
- [uint16_t samplePeriod](#)
Sample period.
- [uint8_t txFifoThreshold](#)
TX Threshold.
- [uint8_t rxFifoThreshold](#)
RX Threshold.
- [uint32_t baudRate_Bps](#)
ECSPI baud rate for master mode.
- [bool enableLoopback](#)
Enable the ECSPI loopback test.

9.2.3.2.0.1 Field Documentation

9.2.3.2.0.1.1 bool ecspi_master_config_t::enableLoopback

9.2.3.3 struct ecspi_slave_config_t

Data Fields

- [uint8_t burstLength](#)
Burst length.
- [uint8_t txFifoThreshold](#)
TX Threshold.
- [uint8_t rxFifoThreshold](#)
RX Threshold.
- [ecspi_channel_config_t channelConfig](#)
Channel configuration.

9.2.3.4 struct ecspi_transfer_t

Data Fields

- [uint32_t * txData](#)
Send buffer.
- [uint32_t * rxData](#)
Receive buffer.

- `size_t dataSize`
Transfer bytes.
- `ecspi_channel_source_t channel`
ECSPI channel select.

9.2.3.5 struct _ecspi_master_handle

Data Fields

- `ecspi_channel_source_t channel`
Channel number.
- `uint32_t *volatile txData`
Transfer buffer.
- `uint32_t *volatile rxData`
Receive buffer.
- `volatile size_t txRemainingBytes`
Send data remaining in bytes.
- `volatile size_t rxRemainingBytes`
Receive data remaining in bytes.
- `volatile uint32_t state`
ECSPI internal state.
- `size_t transferSize`
Bytes to be transferred.
- `ecspi_master_callback_t callback`
ECSPI callback.
- `void * userData`
Callback parameter.

9.2.4 Macro Definition Documentation

9.2.4.1 `#define FSL_ECSPi_DRIVER_VERSION (MAKE_VERSION(2, 2, 0))`

9.2.4.2 `#define ECSPi_DUMMYDATA (0xFFFFFFFFFU)`

9.2.4.3 `#define SPI_RETRY_TIMES 0U /* Define to zero means keep waiting until the flag is assert/deassert. */`

9.2.5 Enumeration Type Documentation

9.2.5.1 anonymous enum

Enumerator

kStatus_ECSPi_Busy ECSPI bus is busy.
kStatus_ECSPi_Idle ECSPI is idle.
kStatus_ECSPi_Error ECSPI error.

kStatus_ECSPI_HardwareOverflow ECSPI hardware overflow.

kStatus_ECSPI_Timeout ECSPI timeout polling status flags.

9.2.5.2 enum ecspi_clock_polarity_t

Enumerator

kECSPI_PolarityActiveHigh Active-high ECSPI polarity high (idles low).

kECSPI_PolarityActiveLow Active-low ECSPI polarity low (idles high).

9.2.5.3 enum ecspi_clock_phase_t

Enumerator

kECSPI_ClockPhaseFirstEdge First edge on SPCK occurs at the middle of the first cycle of a data transfer.

kECSPI_ClockPhaseSecondEdge First edge on SPCK occurs at the start of the first cycle of a data transfer.

9.2.5.4 anonymous enum

Enumerator

kECSPI_TxfifoEmptyInterruptEnable Transmit FIFO buffer empty interrupt.

kECSPI_TxFifoDataRequestInterruptEnable Transmit FIFO data request interrupt.

kECSPI_TxFifoFullInterruptEnable Transmit FIFO full interrupt.

kECSPI_RxFifoReadyInterruptEnable Receiver FIFO ready interrupt.

kECSPI_RxFifoDataRequestInterruptEnable Receiver FIFO data request interrupt.

kECSPI_RxFifoFullInterruptEnable Receiver FIFO full interrupt.

kECSPI_RxFifoOverflowInterruptEnable Receiver FIFO buffer overflow interrupt.

kECSPI_TransferCompleteInterruptEnable Transfer complete interrupt.

kECSPI_AllInterruptEnable All interrupt.

9.2.5.5 anonymous enum

Enumerator

kECSPI_TxfifoEmptyFlag Transmit FIFO buffer empty flag.

kECSPI_TxFifoDataRequestFlag Transmit FIFO data request flag.

kECSPI_TxFifoFullFlag Transmit FIFO full flag.

kECSPI_RxFifoReadyFlag Receiver FIFO ready flag.

kECSPI_RxFifoDataRequestFlag Receiver FIFO data request flag.

kECSPI_RxFifoFullFlag Receiver FIFO full flag.

kECSPI_RxFifoOverflowFlag Receiver FIFO buffer overflow flag.

kECSPI_TransferCompleteFlag Transfer complete flag.

9.2.5.6 anonymous enum

Enumerator

kECSPI_TxDmaEnable Tx DMA request source.
kECSPI_RxDmaEnable Rx DMA request source.
kECSPI_DmaAllEnable All DMA request source.

9.2.5.7 enum ecspi_Data_ready_t

Enumerator

kECSPI_DataReadyIgnore SPI_RDY signal is ignored.
kECSPI_DataReadyFallingEdge SPI_RDY signal will be triggered by the falling edge.
kECSPI_DataReadyLowLevel SPI_RDY signal will be triggered by a low level.

9.2.5.8 enum ecspi_channel_source_t

Enumerator

kECSPI_Channel0 Channel 0 is selected.
kECSPI_Channel1 Channel 1 is selected.
kECSPI_Channel2 Channel 2 is selected.
kECSPI_Channel3 Channel 3 is selected.

9.2.5.9 enum ecspi_master_slave_mode_t

Enumerator

kECSPI_Slave ECSPI peripheral operates in slave mode.
kECSPI_Master ECSPI peripheral operates in master mode.

9.2.5.10 enum ecspi_data_line_inactive_state_t

Enumerator

kECSPI_DataLineInactiveStateHigh The data line inactive state stays high.
kECSPI_DataLineInactiveStateLow The data line inactive state stays low.

9.2.5.11 enum ecspi_clock_inactive_state_t

Enumerator

kECSPI_ClockInactiveStateLow The SCLK inactive state stays low.
kECSPI_ClockInactiveStateHigh The SCLK inactive state stays high.

9.2.5.12 enum ecspi_chip_select_active_state_t

Enumerator

kECSPI_ChipSelectActiveStateLow The SS signal line active stays low.
kECSPI_ChipSelectActiveStateHigh The SS signal line active stays high.

9.2.5.13 enum ecspi_sample_period_clock_source_t

Enumerator

kECSPI_spiClock The sample period clock source is SCLK.
kECSPI_lowFreqClock The sample period clock source is low_frequency reference clock(32.768 kHz).

9.2.6 Function Documentation

9.2.6.1 uint32_t ECSPI_GetInstance (ECSPI_Type * *base*)

Parameters

<i>base</i>	ECSPI base address
-------------	--------------------

9.2.6.2 void ECSPI_MasterGetDefaultConfig (ecspi_master_config_t * *config*)

The purpose of this API is to get the configuration structure initialized for use in [ECSPI_MasterInit\(\)](#). User may use the initialized structure unchanged in ECSPI_MasterInit, or modify some fields of the structure before calling ECSPI_MasterInit. After calling this API, the master is ready to transfer. Example:

```
ecspi_master_config_t config;
ECSPI_MasterGetDefaultConfig(&config);
```

Parameters

<i>config</i>	pointer to config structure
---------------	-----------------------------

9.2.6.3 void ECSPI_MasterInit (ECSPI_Type * *base*, const *ecspi_master_config_t* * *config*, *uint32_t srcClock_Hz*)

The configuration structure can be filled by user from scratch, or be set with default values by [ECSPI_MasterGetDefaultConfig\(\)](#). After calling this API, the slave is ready to transfer. Example

```
ecspi_master_config_t config = {
    .baudRate_Bps = 400000,
    ...
};
ECSPI_MasterInit(ECSPI0, &config);
```

Parameters

<i>base</i>	ECSPI base pointer
<i>config</i>	pointer to master configuration structure
<i>srcClock_Hz</i>	Source clock frequency.

9.2.6.4 void ECSPI_SlaveGetDefaultConfig (*ecspi_slave_config_t* * *config*)

The purpose of this API is to get the configuration structure initialized for use in [ECSPI_SlaveInit\(\)](#). User may use the initialized structure unchanged in [ECSPI_SlaveInit\(\)](#), or modify some fields of the structure before calling [ECSPI_SlaveInit\(\)](#). After calling this API, the master is ready to transfer. Example:

```
ecspi_slaveconfig_t config;
ECSPI_SlaveGetDefaultConfig(&config);
```

Parameters

<i>config</i>	pointer to config structure
---------------	-----------------------------

9.2.6.5 void ECSPI_SlaveInit (ECSPI_Type * *base*, const *ecspi_slave_config_t* * *config*)

The configuration structure can be filled by user from scratch, or be set with default values by [ECSPI_SlaveGetDefaultConfig\(\)](#). After calling this API, the slave is ready to transfer. Example

```
ecspi_slaveconfig_t config = {
    .baudRate_Bps = 400000,
    ...
};
ECSPI_SlaveInit(ECSPI1, &config);
```

Parameters

<i>base</i>	ECSPI base pointer
<i>config</i>	pointer to master configuration structure

9.2.6.6 void ECSPI_Deinit (ECSPI_Type * *base*)

Calling this API resets the ECSPI module, gates the ECSPI clock. The ECSPI module can't work unless calling the ECSPI_MasterInit/ECSPI_SlaveInit to initialize module.

Parameters

<i>base</i>	ECSPI base pointer
-------------	--------------------

9.2.6.7 static void ECSPI_Enable (ECSPI_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>enable</i>	pass true to enable module, false to disable module

9.2.6.8 static uint32_t ECSPI_GetStatusFlags (ECSPI_Type * *base*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
-------------	--------------------

Returns

ECSPI Status, use status flag to AND _ecspi_flags could get the related status.

9.2.6.9 static void ECSPI_ClearStatusFlags (ECSPI_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>mask</i>	ECSPI Status, use status flag to AND _ecspi_flags could get the related status.

9.2.6.10 static void ECSPI_EnableInterrupts (ECSPI_Type * *base*, uint32_t *mask*)
[inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>mask</i>	ECSPI interrupt source. The parameter can be any combination of the following values: <ul style="list-style-type: none"> • kECSPI_TxfifoEmptyInterruptEnable • kECSPI_TxFifoDataRequestInterruptEnable • kECSPI_TxFifoFullInterruptEnable • kECSPI_RxFifoReadyInterruptEnable • kECSPI_RxFifoDataRequestInterruptEnable • kECSPI_RxFifoFullInterruptEnable • kECSPI_RxFifoOverflowInterruptEnable • kECSPI_TransferCompleteInterruptEnable • kECSPI_AllInterruptEnable

9.2.6.11 static void ECSPI_DisableInterrupts (ECSPI_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>mask</i>	ECSPI interrupt source. The parameter can be any combination of the following values: <ul style="list-style-type: none"> • kECSPI_TxfifoEmptyInterruptEnable • kECSPI_TxFifoDataRequestInterruptEnable • kECSPI_TxFifoFullInterruptEnable • kECSPI_RxFifoReadyInterruptEnable • kECSPI_RxFifoDataRequestInterruptEnable • kECSPI_RxFifoFullInterruptEnable • kECSPI_RxFifoOverflowInterruptEnable • kECSPI_TransferCompleteInterruptEnable • kECSPI_AllInterruptEnable

9.2.6.12 static void ECSPI_SoftwareReset (ECSPI_Type * *base*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
-------------	--------------------

9.2.6.13 static bool ECSPI_IsMaster (ECSPI_Type * *base*, ecspi_channel_source_t *channel*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>channel</i>	ECSPI channel source

Returns

mode of channel

9.2.6.14 static void ECSPI_EnableDMA (ECSPI_Type * *base*, uint32_t *mask*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>mask</i>	ECSPI DMA source. The parameter can be any of the following values: <ul style="list-style-type: none"> • kECSPI_TxDmaEnable • kECSPI_RxDmaEnable • kECSPI_DmaAllEnable
<i>enable</i>	True means enable DMA, false means disable DMA

9.2.6.15 static uint8_t ECSPI_GetTxFifoCount (ECSPI_Type * *base*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer.
-------------	---------------------

Returns

the number of words in Tx FIFO buffer.

9.2.6.16 static uint8_t ECSPI_GetRxFifoCount (ECSPI_Type * *base*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer.
-------------	---------------------

Returns

the number of words in Rx FIFO buffer.

9.2.6.17 static void ECSPI_SetChannelSelect (ECSPI_Type * *base*, ecspi_channel_source_t *channel*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>channel</i>	Channel source.

9.2.6.18 void ECSPI_SetChannelConfig (ECSPI_Type * *base*, *ecspi_channel_source_t channel*, const *ecspi_channel_config_t* * *config*)

The purpose of this API is to set the channel will be use to transfer. User may use this API after instance has been initialized or before transfer start. The configuration structure *ecspi_channel_config* can be filled by user from scratch. After calling this API, user can select this channel as transfer channel.

Parameters

<i>base</i>	ECSPI base pointer
<i>channel</i>	Channel source.
<i>config</i>	Configuration struct of channel

9.2.6.19 void ECSPI_SetBaudRate (ECSPI_Type * *base*, *uint32_t baudRate_Bps*, *uint32_t srcClock_Hz*)

This is only used in master.

Parameters

<i>base</i>	ECSPI base pointer
<i>baudRate_Bps</i>	baud rate needed in Hz.
<i>srcClock_Hz</i>	ECSPI source clock frequency in Hz.

9.2.6.20 *status_t* ECSPI_WriteBlocking (ECSPI_Type * *base*, *uint32_t * buffer*, *size_t size*)

Note

This function blocks via polling until all bytes have been sent.

Parameters

<i>base</i>	ECSPI base pointer
<i>buffer</i>	The data bytes to send
<i>size</i>	The number of data bytes to send

Return values

<i>kStatus_Success</i>	Successfully start a transfer.
<i>kStatus_ECSPI_Timeout</i>	The transfer timed out and was aborted.

9.2.6.21 static void ECSPI_WriteData (ECSPI_Type * *base*, uint32_t *data*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
<i>data</i>	Data needs to be write.

9.2.6.22 static uint32_t ECSPI_ReadData (ECSPI_Type * *base*) [inline], [static]

Parameters

<i>base</i>	ECSPI base pointer
-------------	--------------------

Returns

Data in the register.

**9.2.6.23 void ECSPI_MasterTransferCreateHandle (ECSPI_Type * *base*,
ecspi_master_handle_t * *handle*, ecspi_master_callback_t *callback*, void *
userData)**

This function initializes the ECSPI master handle which can be used for other ECSPI master transactional APIs. Usually, for a specified ECSPI instance, call this API once to get the initialized handle.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI handle pointer.
<i>callback</i>	Callback function.
<i>userData</i>	User data.

9.2.6.24 **status_t** **ECSPI_MasterTransferBlocking** (**ECSPI_Type** * *base*, **ecspi_transfer_t** * *xfer*)

Parameters

<i>base</i>	SPI base pointer
<i>xfer</i>	pointer to spi_xfer_config_t structure

Return values

<i>kStatus_Success</i>	Successfully start a transfer.
<i>kStatus_InvalidArgument</i>	Input argument is invalid.
<i>kStatus_ECSPI_Timeout</i>	The transfer timed out and was aborted.

9.2.6.25 **status_t** **ECSPI_MasterTransferNonBlocking** (**ECSPI_Type** * *base*, **ecspi_master_handle_t** * *handle*, **ecspi_transfer_t** * *xfer*)

Note

The API immediately returns after transfer initialization is finished.
If ECSPI transfer data frame size is 16 bits, the transfer size cannot be an odd number.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	pointer to ecspi_master_handle_t structure which stores the transfer state
<i>xfer</i>	pointer to ecspi_transfer_t structure

Return values

<i>kStatus_Success</i>	Successfully start a transfer.
<i>kStatus_InvalidArgument</i>	Input argument is invalid.
<i>kStatus_ECSPi_Busy</i>	ECSPI is not idle, is running another transfer.

9.2.6.26 **status_t ECSPI_MasterTransferGetCount (ECSPI_Type * *base*, ecspi_master_handle_t * *handle*, size_t * *count*)**

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	Pointer to ECSPI transfer handle, this should be a static variable.
<i>count</i>	Transferred bytes of ECSPI master.

Return values

<i>kStatus_ECSPi_Success</i>	Succeed get the transfer count.
<i>kStatus_NoTransferInProgress</i>	There is not a non-blocking transaction currently in progress.

9.2.6.27 **void ECSPI_MasterTransferAbort (ECSPI_Type * *base*, ecspi_master_handle_t * *handle*)**

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	Pointer to ECSPI transfer handle, this should be a static variable.

9.2.6.28 **void ECSPI_MasterTransferHandleIRQ (ECSPI_Type * *base*, ecspi_master_handle_t * *handle*)**

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	pointer to <code>ecspi_master_handle_t</code> structure which stores the transfer state.

**9.2.6.29 void ECSPISlaveTransferCreateHandle (ECSPISlaveType * *base*,
ecspi_slave_handle_t * *handle*, ecspi_slave_callback_t *callback*, void * *userData*
)**

This function initializes the ECSPI slave handle which can be used for other ECSPI slave transactional APIs. Usually, for a specified ECSPI instance, call this API once to get the initialized handle.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI handle pointer.
<i>callback</i>	Callback function.
<i>userData</i>	User data.

**9.2.6.30 static status_t ECSPISlaveTransferNonBlocking (ECSPISlaveType * *base*,
ecspi_slave_handle_t * *handle*, ecspi_transfer_t * *xfer*) [inline], [static]**

Note

The API returns immediately after the transfer initialization is finished.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	pointer to <code>ecspi_master_handle_t</code> structure which stores the transfer state
<i>xfer</i>	pointer to ecspi_transfer_t structure

Return values

<i>kStatus_Success</i>	Successfully start a transfer.
<i>kStatus_InvalidArgument</i>	Input argument is invalid.
<i>kStatus_ECSPISlave_Busy</i>	ECSPI is not idle, is running another transfer.

**9.2.6.31 static status_t ECSPISlaveTransferGetCount (ECSPISlaveType * *base*,
ecspi_slave_handle_t * *handle*, size_t * *count*) [inline], [static]**

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	Pointer to ECSPI transfer handle, this should be a static variable.
<i>count</i>	Transferred bytes of ECSPI slave.

Return values

<i>kStatus_ECSPI_Success</i>	Succeed get the transfer count.
<i>kStatus_NoTransferInProgress</i>	There is not a non-blocking transaction currently in progress.

**9.2.6.32 static void ECSPI_SlaveTransferAbort (ECSPI_Type * *base*,
ecspi_slave_handle_t * *handle*) [inline], [static]**

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	Pointer to ECSPI transfer handle, this should be a static variable.

**9.2.6.33 void ECSPI_SlaveTransferHandleIRQ (ECSPI_Type * *base*, ecspi_slave_handle_t
* *handle*)**

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	pointer to ecspi_slave_handle_t structure which stores the transfer state

Chapter 10

GPC: General Power Controller Driver

Overview

The MCUXpresso SDK provides a peripheral driver for the General Power Controller (GPC) module of MCUXpresso SDK devices.

API functions are provided to configure the system about working in dedicated power mode. There are mainly about enabling the power for memory, enabling the wakeup sources for STOP modes, and power up/down operations for various peripherals.

Macros

- #define `GPC_PCG_TIME_SLOT_TOTAL_NUMBER` `GPC_SLT_CFG_PU_COUNT`
Total number of the timeslot.

Enumerations

- enum `_gpc_lpm_mode` {
 `kGPC_RunMode` = 0U,
 `kGPC_WaitMode` = 1U,
 `kGPC_StopMode` = 2U }
 GPC LPM mode definition.
- enum `_gpc_pgc_ack_sel` {
 `kGPC_DummyPGCPowerUpAck` = `GPC_PGC_ACK_SEL_DUMMY_PGC_PUP_ACK_MASK`,
 `kGPC_VirtualPGCPowerUpAck` = `GPC_PGC_ACK_SEL_VIRTUAL_PGC_PUP_ACK_MASK`,
 `kGPC_DummyPGCPowerDownAck` = `GPC_PGC_ACK_SEL_DUMMY_PGC_PDN_ACK_MASK`,
 `kGPC_VirtualPGCPowerDownAck` = `GPC_PGC_ACK_SEL_VIRTUAL_PGC_PDN_ACK_MASK`,
 `kGPC_NocPGCPowerUpAck` = `GPC_PGC_ACK_SEL_NOC_PGC_PUP_ACK`,
 `kGPC_NocPGCPowerDownAck` = `GPC_PGC_ACK_SEL_NOC_PGC_PDN_ACK` }
 PGC ack signal selection.
- enum `_gpc_standby_count` {
 `kGPC_StandbyCounter4CkilClk` = 0U,
 `kGPC_StandbyCounter8CkilClk` = 1U,
 `kGPC_StandbyCounter16CkilClk` = 2U,
 `kGPC_StandbyCounter32CkilClk` = 3U,
 `kGPC_StandbyCounter64CkilClk` = 4U,
 `kGPC_StandbyCounter128CkilClk` = 5U,
 `kGPC_StandbyCounter256CkilClk` = 6U,
 `kGPC_StandbyCounter512CkilClk` = 7U }

Standby counter which GPC will wait between PMIC_STBY_REQ negation and assertion of PMIC_READY.

Functions

- static void [GPC_AllowIRQs](#) (GPC_Type *base)
Allow all the IRQ/Events within the charge of GPC.
- static void [GPC_DisallowIRQs](#) (GPC_Type *base)
Disallow all the IRQ/Events within the charge of GPC.
- static uint32_t [GPC_GetLpmMode](#) (GPC_Type *base)
Get current LPM mode.
- void [GPC_EnableIRQ](#) (GPC_Type *base, uint32_t irqId)
Enable the IRQ.
- void [GPC_DisableIRQ](#) (GPC_Type *base, uint32_t irqId)
Disable the IRQ.
- bool [GPC_GetIRQStatusFlag](#) (GPC_Type *base, uint32_t irqId)
Get the IRQ/Event flag.
- static void [GPC_DsmTriggerMask](#) (GPC_Type *base, bool enable)
Mask the DSM trigger.
- static void [GPC_WFIMask](#) (GPC_Type *base, bool enable)
Mask the WFI.
- static void [GPC_SelectPGCAckSignal](#) (GPC_Type *base, uint32_t mask)
Select the PGC ACK signal.
- static void [GPC_PowerDownRequestMask](#) (GPC_Type *base, bool enable)
Power down request to virtual PGC mask or not.
- static void [GPC_PGCMapping](#) (GPC_Type *base, uint32_t mask)
PGC CPU Mapping.
- static void [GPC_TimeSlotConfigureForPUS](#) (GPC_Type *base, uint8_t slotIndex, uint32_t value)
Time slot configure.
- void [GPC_EnterWaitMode](#) (GPC_Type *base, gpc_lpm_config_t *config)
Enter WAIT mode.
- void [GPC_EnterStopMode](#) (GPC_Type *base, gpc_lpm_config_t *config)
Enter STOP mode.
- void [GPC_Init](#) (GPC_Type *base, uint32_t powerUpSlot, uint32_t powerDownSlot)
GPC init function.

Driver version

- #define [FSL_GPC_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 2, 0))
GPC driver version 2.2.0.

Macro Definition Documentation

10.2.1 #define FSL_GPC_DRIVER_VERSION (MAKE_VERSION(2, 2, 0))

Enumeration Type Documentation

10.3.1 enum _gpc_lpm_mode

Enumerator

kGPC_RunMode run mode
kGPC_WaitMode wait mode
kGPC_StopMode stop mode

10.3.2 enum _gpc_pgc_ack_sel

Enumerator

kGPC_DummyPGCPowerUpAck dummy power up ack signal
kGPC_VirtualPGCPowerUpAck virtual pgc power up ack signal
kGPC_DummyPGCPowerDownAck dummy power down ack signal
kGPC_VirtualPGCPowerDownAck virtual pgc power down ack signal
kGPC_NocPGCPowerUpAck NOC power up ack signal.
kGPC_NocPGCPowerDownAck NOC power.

10.3.3 enum _gpc_standby_count

Enumerator

kGPC_StandbyCounter4CkilClk 4 ckil clocks
kGPC_StandbyCounter8CkilClk 8 ckil clocks
kGPC_StandbyCounter16CkilClk 16 ckil clocks
kGPC_StandbyCounter32CkilClk 32 ckil clocks
kGPC_StandbyCounter64CkilClk 64 ckil clocks
kGPC_StandbyCounter128CkilClk 128 ckil clocks
kGPC_StandbyCounter256CkilClk 256 ckil clocks
kGPC_StandbyCounter512CkilClk 512 ckil clocks

Function Documentation

10.4.1 static void GPC_AllowIRQs (GPC_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
-------------	------------------------------

10.4.2 static void GPC_DisallowIRQs (GPC_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
-------------	------------------------------

10.4.3 static uint32_t GPC_GetLpmMode (GPC_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
-------------	------------------------------

Return values

<i>lpm</i>	mode, reference _gpc_lpm_mode
------------	-------------------------------

10.4.4 void GPC_EnableIRQ (GPC_Type * *base*, uint32_t *irqId*)

Parameters

<i>base</i>	GPC peripheral base address.
<i>irqId</i>	ID number of IRQ to be enabled, available range is 0-127,reference SOC headerfile IRQn_Type.

10.4.5 void GPC_DisableIRQ (GPC_Type * *base*, uint32_t *irqId*)

Parameters

<i>base</i>	GPC peripheral base address.
<i>irqId</i>	ID number of IRQ to be disabled, available range is 0-127,reference SOC headerfile IRQn_Type.

10.4.6 bool GPC_GetIRQStatusFlag (GPC_Type * *base*, uint32_t *irqId*)

Parameters

<i>base</i>	GPC peripheral base address.
<i>irqId</i>	ID number of IRQ to be enabled, available range is 0-127,reference SOC headerfile IRQn_Type.

Returns

Indicated IRQ/Event is asserted or not.

10.4.7 static void GPC_DsmTriggerMask (GPC_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
<i>enable</i>	true to enable mask, false to disable mask.

10.4.8 static void GPC_WFIMask (GPC_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
<i>enable</i>	true to enable mask, false to disable mask.

10.4.9 static void GPC_SelectPGCAckSignal (GPC_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
<i>mask</i>	reference _gpc_pgc_ack_sel.

10.4.10 static void GPC_PowerDownRequestMask (GPC_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
<i>enable</i>	true to mask, false to not mask.

10.4.11 static void GPC_PGCMapping (GPC_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
<i>mask</i>	mask value reference PGC CPU mapping definition.

10.4.12 static void GPC_TimeSlotConfigureForPUS (GPC_Type * *base*, uint8_t *slotIndex*, uint32_t *value*) [inline], [static]

Parameters

<i>base</i>	GPC peripheral base address.
<i>slotIndex</i>	time slot index.
<i>value</i>	value to be configured

10.4.13 void GPC_EnterWaitMode (GPC_Type * *base*, gpc_lpm_config_t * *config*)

Parameters

<i>base</i>	GPC peripheral base address.
<i>config</i>	lpm mode configurations.

10.4.14 void GPC_EnterStopMode (GPC_Type * *base*, gpc_lpm_config_t * *config*)

Parameters

<i>base</i>	GPC peripheral base address.
<i>config</i>	lpm mode configurations.

10.4.15 void GPC_Init (GPC_Type * *base*, uint32_t *powerUpSlot*, uint32_t *powerDownSlot*)

Parameters

<i>base</i>	GPC peripheral base address.
<i>powerUpSlot</i>	power up slot number.
<i>powerDownSlot</i>	power down slot number.

Chapter 11

GPT: General Purpose Timer

Overview

The MCUXpresso SDK provides a driver for the General Purpose Timer (GPT) of MCUXpresso SDK devices.

Function groups

The gpt driver supports the generation of PWM signals, input capture, and setting up the timer match conditions.

11.2.1 Initialization and deinitialization

The function [GPT_Init\(\)](#) initializes the gpt with specified configurations. The function [GPT_GetDefaultConfig\(\)](#) gets the default configurations. The initialization function configures the restart/free-run mode and input selection when running.

The function [GPT_Deinit\(\)](#) stops the timer and turns off the module clock.

Typical use case

11.3.1 GPT interrupt example

Set up a channel to trigger a periodic interrupt after every 1 second. Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/gpt`

Data Structures

- struct [gpt_config_t](#)
Structure to configure the running mode. [More...](#)

Enumerations

- enum [gpt_clock_source_t](#) {
 [kGPT_ClockSource_Off](#) = 0U,
 [kGPT_ClockSource_Periph](#) = 1U,
 [kGPT_ClockSource_HighFreq](#) = 2U,
 [kGPT_ClockSource_Ext](#) = 3U,
 [kGPT_ClockSource_LowFreq](#) = 4U,
 [kGPT_ClockSource_Osc](#) = 5U }
List of clock sources.

- enum `gpt_input_capture_channel_t` {
`kGPT_InputCapture_Channel1` = 0U,
`kGPT_InputCapture_Channel2` = 1U }
List of input capture channel number.
- enum `gpt_input_operation_mode_t` {
`kGPT_InputOperation_Disabled` = 0U,
`kGPT_InputOperation_RiseEdge` = 1U,
`kGPT_InputOperation_FallEdge` = 2U,
`kGPT_InputOperation_BothEdge` = 3U }
List of input capture operation mode.
- enum `gpt_output_compare_channel_t` {
`kGPT_OutputCompare_Channel1` = 0U,
`kGPT_OutputCompare_Channel2` = 1U,
`kGPT_OutputCompare_Channel3` = 2U }
List of output compare channel number.
- enum `gpt_output_operation_mode_t` {
`kGPT_OutputOperation_Disconnected` = 0U,
`kGPT_OutputOperation_Toggle` = 1U,
`kGPT_OutputOperation_Clear` = 2U,
`kGPT_OutputOperation_Set` = 3U,
`kGPT_OutputOperation_Activelow` = 4U }
List of output compare operation mode.
- enum `gpt_interrupt_enable_t` {
`kGPT_OutputCompare1InterruptEnable` = GPT_IR_OF1IE_MASK,
`kGPT_OutputCompare2InterruptEnable` = GPT_IR_OF2IE_MASK,
`kGPT_OutputCompare3InterruptEnable` = GPT_IR_OF3IE_MASK,
`kGPT_InputCapture1InterruptEnable` = GPT_IR_IF1IE_MASK,
`kGPT_InputCapture2InterruptEnable` = GPT_IR_IF2IE_MASK,
`kGPT_RollOverFlagInterruptEnable` = GPT_IR_ROVIE_MASK }
List of GPT interrupts.
- enum `gpt_status_flag_t` {
`kGPT_OutputCompare1Flag` = GPT_SR_OF1_MASK,
`kGPT_OutputCompare2Flag` = GPT_SR_OF2_MASK,
`kGPT_OutputCompare3Flag` = GPT_SR_OF3_MASK,
`kGPT_InputCapture1Flag` = GPT_SR_IF1_MASK,
`kGPT_InputCapture2Flag` = GPT_SR_IF2_MASK,
`kGPT_RollOverFlag` = GPT_SR_ROV_MASK }
Status flag.

Driver version

- #define `FSL_GPT_DRIVER_VERSION` (`MAKE_VERSION(2, 0, 2)`)

Initialization and deinitialization

- void `GPT_Init` (`GPT_Type *base`, const `gpt_config_t *initConfig`)
Initialize GPT to reset state and initialize running mode.

- void [GPT_Deinit](#) (GPT_Type *base)
Disables the module and gates the GPT clock.
- void [GPT_GetDefaultConfig](#) (gpt_config_t *config)
Fills in the GPT configuration structure with default settings.

Software Reset

- static void [GPT_SoftwareReset](#) (GPT_Type *base)
Software reset of GPT module.

Clock source and frequency control

- static void [GPT_SetClockSource](#) (GPT_Type *base, gpt_clock_source_t source)
Set clock source of GPT.
- static gpt_clock_source_t [GPT_GetClockSource](#) (GPT_Type *base)
Get clock source of GPT.
- static void [GPT_SetClockDivider](#) (GPT_Type *base, uint32_t divider)
Set pre scaler of GPT.
- static uint32_t [GPT_GetClockDivider](#) (GPT_Type *base)
Get clock divider in GPT module.
- static void [GPT_SetOscClockDivider](#) (GPT_Type *base, uint32_t divider)
OSC 24M pre-scaler before selected by clock source.
- static uint32_t [GPT_GetOscClockDivider](#) (GPT_Type *base)
Get OSC 24M clock divider in GPT module.

Timer Start and Stop

- static void [GPT_StartTimer](#) (GPT_Type *base)
Start GPT timer.
- static void [GPT_StopTimer](#) (GPT_Type *base)
Stop GPT timer.

Read the timer period

- static uint32_t [GPT_GetCurrentTimerCount](#) (GPT_Type *base)
Reads the current GPT counting value.

GPT Input/Output Signal Control

- static void [GPT_SetInputOperationMode](#) (GPT_Type *base, gpt_input_capture_channel_t channel, gpt_input_operation_mode_t mode)
Set GPT operation mode of input capture channel.
- static gpt_input_operation_mode_t [GPT_GetInputOperationMode](#) (GPT_Type *base, gpt_input_capture_channel_t channel)
Get GPT operation mode of input capture channel.
- static uint32_t [GPT_GetInputCaptureValue](#) (GPT_Type *base, gpt_input_capture_channel_t channel)
Get GPT input capture value of certain channel.
- static void [GPT_SetOutputOperationMode](#) (GPT_Type *base, gpt_output_compare_channel_t channel, gpt_output_operation_mode_t mode)

- *Set GPT operation mode of output compare channel.*
static [gpt_output_operation_mode_t](#) [GPT_GetOutputOperationMode](#) (GPT_Type *base, [gpt_output_compare_channel_t](#) channel)
- *Get GPT operation mode of output compare channel.*
static void [GPT_SetOutputCompareValue](#) (GPT_Type *base, [gpt_output_compare_channel_t](#) channel, uint32_t value)
- *Set GPT output compare value of output compare channel.*
static uint32_t [GPT_GetOutputCompareValue](#) (GPT_Type *base, [gpt_output_compare_channel_t](#) channel)
- *Get GPT output compare value of output compare channel.*
static void [GPT_ForceOutput](#) (GPT_Type *base, [gpt_output_compare_channel_t](#) channel)
Force GPT output action on output compare channel, ignoring comparator.

GPT Interrupt and Status Interface

- static void [GPT_EnableInterrupts](#) (GPT_Type *base, uint32_t mask)
Enables the selected GPT interrupts.
- static void [GPT_DisableInterrupts](#) (GPT_Type *base, uint32_t mask)
Disables the selected GPT interrupts.
- static uint32_t [GPT_GetEnabledInterrupts](#) (GPT_Type *base)
Gets the enabled GPT interrupts.

Status Interface

- static uint32_t [GPT_GetStatusFlags](#) (GPT_Type *base, [gpt_status_flag_t](#) flags)
Get GPT status flags.
- static void [GPT_ClearStatusFlags](#) (GPT_Type *base, [gpt_status_flag_t](#) flags)
Clears the GPT status flags.

Data Structure Documentation

11.4.1 struct gpt_config_t

Data Fields

- [gpt_clock_source_t](#) clockSource
clock source for GPT module.
- uint32_t divider
clock divider (prescaler+1) from clock source to counter.
- bool enableFreeRun
true: FreeRun mode, false: Restart mode.
- bool enableRunInWait
GPT enabled in wait mode.
- bool enableRunInStop
GPT enabled in stop mode.
- bool enableRunInDoze
GPT enabled in doze mode.
- bool enableRunInDbg
GPT enabled in debug mode.

- bool `enableMode`
 true: counter reset to 0 when enabled;
 false: counter retain its value when enabled.

11.4.1.0.0.2 Field Documentation

11.4.1.0.0.2.1 `gpt_clock_source_t gpt_config_t::clockSource`

11.4.1.0.0.2.2 `uint32_t gpt_config_t::divider`

11.4.1.0.0.2.3 `bool gpt_config_t::enableFreeRun`

11.4.1.0.0.2.4 `bool gpt_config_t::enableRunInWait`

11.4.1.0.0.2.5 `bool gpt_config_t::enableRunInStop`

11.4.1.0.0.2.6 `bool gpt_config_t::enableRunInDoze`

11.4.1.0.0.2.7 `bool gpt_config_t::enableRunInDbg`

11.4.1.0.0.2.8 `bool gpt_config_t::enableMode`

Enumeration Type Documentation

11.5.1 `enum gpt_clock_source_t`

Note

Actual number of clock sources is SoC dependent

Enumerator

kGPT_ClockSource_Off GPT Clock Source Off.
kGPT_ClockSource_Periph GPT Clock Source from Peripheral Clock.
kGPT_ClockSource_HighFreq GPT Clock Source from High Frequency Reference Clock.
kGPT_ClockSource_Ext GPT Clock Source from external pin.
kGPT_ClockSource_LowFreq GPT Clock Source from Low Frequency Reference Clock.
kGPT_ClockSource_Osc GPT Clock Source from Crystal oscillator.

11.5.2 `enum gpt_input_capture_channel_t`

Enumerator

kGPT_InputCapture_Channel1 GPT Input Capture Channel1.
kGPT_InputCapture_Channel2 GPT Input Capture Channel2.

11.5.3 enum gpt_input_operation_mode_t

Enumerator

kGPT_InputOperation_Disabled Don't capture.
kGPT_InputOperation_RiseEdge Capture on rising edge of input pin.
kGPT_InputOperation_FallEdge Capture on falling edge of input pin.
kGPT_InputOperation_BothEdge Capture on both edges of input pin.

11.5.4 enum gpt_output_compare_channel_t

Enumerator

kGPT_OutputCompare_Channel1 Output Compare Channel1.
kGPT_OutputCompare_Channel2 Output Compare Channel2.
kGPT_OutputCompare_Channel3 Output Compare Channel3.

11.5.5 enum gpt_output_operation_mode_t

Enumerator

kGPT_OutputOperation_Disconnected Don't change output pin.
kGPT_OutputOperation_Toggle Toggle output pin.
kGPT_OutputOperation_Clear Set output pin low.
kGPT_OutputOperation_Set Set output pin high.
kGPT_OutputOperation_Activelow Generate a active low pulse on output pin.

11.5.6 enum gpt_interrupt_enable_t

Enumerator

kGPT_OutputCompare1InterruptEnable Output Compare Channel1 interrupt enable.
kGPT_OutputCompare2InterruptEnable Output Compare Channel2 interrupt enable.
kGPT_OutputCompare3InterruptEnable Output Compare Channel3 interrupt enable.
kGPT_InputCapture1InterruptEnable Input Capture Channel1 interrupt enable.
kGPT_InputCapture2InterruptEnable Input Capture Channel1 interrupt enable.
kGPT_RollOverFlagInterruptEnable Counter rolled over interrupt enable.

11.5.7 enum gpt_status_flag_t

Enumerator

kGPT_OutputCompare1Flag Output compare channel 1 event.
kGPT_OutputCompare2Flag Output compare channel 2 event.
kGPT_OutputCompare3Flag Output compare channel 3 event.
kGPT_InputCapture1Flag Input Capture channel 1 event.
kGPT_InputCapture2Flag Input Capture channel 2 event.
kGPT_RollOverFlag Counter reaches maximum value and rolled over to 0 event.

Function Documentation

11.6.1 void GPT_Init (GPT_Type * *base*, const gpt_config_t * *initConfig*)

Parameters

<i>base</i>	GPT peripheral base address.
<i>initConfig</i>	GPT mode setting configuration.

11.6.2 void GPT_Deinit (GPT_Type * *base*)

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

11.6.3 void GPT_GetDefaultConfig (gpt_config_t * *config*)

The default values are:

```

*   config->clockSource = kGPT_ClockSource_Periph;
*   config->divider = 1U;
*   config->enableRunInStop = true;
*   config->enableRunInWait = true;
*   config->enableRunInDoze = false;
*   config->enableRunInDbg = false;
*   config->enableFreeRun = false;
*   config->enableMode = true;
*

```

Parameters

<i>config</i>	Pointer to the user configuration structure.
---------------	--

11.6.4 static void GPT_SoftwareReset (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

11.6.5 static void GPT_SetClockSource (GPT_Type * *base*, gpt_clock_source_t *source*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
<i>source</i>	Clock source (see gpt_clock_source_t typedef enumeration).

11.6.6 static gpt_clock_source_t GPT_GetClockSource (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

Returns

clock source (see [gpt_clock_source_t](#) typedef enumeration).

11.6.7 static void GPT_SetClockDivider (GPT_Type * *base*, uint32_t *divider*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
<i>divider</i>	Divider of GPT (1-4096).

11.6.8 static uint32_t GPT_GetClockDivider (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

Returns

clock divider in GPT module (1-4096).

11.6.9 static void GPT_SetOscClockDivider (GPT_Type * *base*, uint32_t *divider*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
<i>divider</i>	OSC Divider(1-16).

11.6.10 static uint32_t GPT_GetOscClockDivider (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

Returns

OSC clock divider in GPT module (1-16).

11.6.11 static void GPT_StartTimer (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

11.6.12 static void GPT_StopTimer (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

11.6.13 static uint32_t GPT_GetCurrentTimerCount (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
-------------	------------------------------

Returns

Current GPT counter value.

11.6.14 static void GPT_SetInputOperationMode (GPT_Type * *base*, gpt_input_capture_channel_t *channel*, gpt_input_operation_mode_t *mode*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT capture channel (see gpt_input_capture_channel_t typedef enumeration).
<i>mode</i>	GPT input capture operation mode (see gpt_input_operation_mode_t typedef enumeration).

11.6.15 static gpt_input_operation_mode_t GPT_GetInputOperationMode (GPT_Type * *base*, gpt_input_capture_channel_t *channel*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT capture channel (see gpt_input_capture_channel_t typedef enumeration).

Returns

GPT input capture operation mode (see [gpt_input_operation_mode_t](#) typedef enumeration).

11.6.16 `static uint32_t GPT_GetInputCaptureValue (GPT_Type * base,
gpt_input_capture_channel_t channel) [inline], [static]`

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT capture channel (see gpt_input_capture_channel_t typedef enumeration).

Returns

GPT input capture value.

11.6.17 `static void GPT_SetOutputOperationMode (GPT_Type * base,
gpt_output_compare_channel_t channel, gpt_output_operation_mode_t
mode) [inline], [static]`

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT output compare channel (see gpt_output_compare_channel_t typedef enumeration).
<i>mode</i>	GPT output operation mode (see gpt_output_operation_mode_t typedef enumeration).

11.6.18 `static gpt_output_operation_mode_t GPT_GetOutputOperationMode (
GPT_Type * base, gpt_output_compare_channel_t channel) [inline],
[static]`

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT output compare channel (see gpt_output_compare_channel_t typedef enumeration).

Returns

GPT output operation mode (see [gpt_output_operation_mode_t](#) typedef enumeration).

**11.6.19 static void GPT_SetOutputCompareValue (GPT_Type * *base*,
gpt_output_compare_channel_t *channel*, uint32_t *value*) [inline],
[static]**

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT output compare channel (see gpt_output_compare_channel_t typedef enumeration).
<i>value</i>	GPT output compare value.

**11.6.20 static uint32_t GPT_GetOutputCompareValue (GPT_Type * *base*,
gpt_output_compare_channel_t *channel*) [inline], [static]**

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT output compare channel (see gpt_output_compare_channel_t typedef enumeration).

Returns

GPT output compare value.

**11.6.21 static void GPT_ForceOutput (GPT_Type * *base*, gpt_output_compare_ -
channel_t *channel*) [inline], [static]**

Parameters

<i>base</i>	GPT peripheral base address.
<i>channel</i>	GPT output compare channel (see gpt_output_compare_channel_t typedef enumeration).

11.6.22 static void GPT_EnableInterrupts (GPT_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
<i>mask</i>	The interrupts to enable. This is a logical OR of members of the enumeration gpt_interrupt_enable_t

11.6.23 static void GPT_DisableInterrupts (GPT_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address
<i>mask</i>	The interrupts to disable. This is a logical OR of members of the enumeration gpt_interrupt_enable_t

11.6.24 static uint32_t GPT_GetEnabledInterrupts (GPT_Type * *base*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address
-------------	-----------------------------

Returns

The enabled interrupts. This is the logical OR of members of the enumeration [gpt_interrupt_enable_t](#)

11.6.25 `static uint32_t GPT_GetStatusFlags (GPT_Type * base, gpt_status_flag_t flags) [inline], [static]`

Parameters

<i>base</i>	GPT peripheral base address.
<i>flags</i>	GPT status flag mask (see gpt_status_flag_t for bit definition).

Returns

GPT status, each bit represents one status flag.

11.6.26 static void GPT_ClearStatusFlags (GPT_Type * *base*, gpt_status_flag_t *flags*) [inline], [static]

Parameters

<i>base</i>	GPT peripheral base address.
<i>flags</i>	GPT status flag mask (see gpt_status_flag_t for bit definition).

Chapter 12

GPIO: General-Purpose Input/Output Driver

Overview

The MCUXpresso SDK provides a peripheral driver for the General-Purpose Input/Output (GPIO) module of MCUXpresso SDK devices.

Typical use case

12.2.1 Input Operation

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/gpio`

Data Structures

- struct `gpio_pin_config_t`
GPIO Init structure definition. [More...](#)

Enumerations

- enum `gpio_pin_direction_t` {
 `kGPIO_DigitalInput` = 0U,
 `kGPIO_DigitalOutput` = 1U }
GPIO direction definition.
- enum `gpio_interrupt_mode_t` {
 `kGPIO_NoIntmode` = 0U,
 `kGPIO_IntLowLevel` = 1U,
 `kGPIO_IntHighLevel` = 2U,
 `kGPIO_IntRisingEdge` = 3U,
 `kGPIO_IntFallingEdge` = 4U,
 `kGPIO_IntRisingOrFallingEdge` = 5U }
GPIO interrupt mode definition.

Driver version

- #define `FSL_GPIO_DRIVER_VERSION` (`MAKE_VERSION(2, 0, 5)`)
GPIO driver version.

GPIO Initialization and Configuration functions

- void `GPIO_PinInit` (`GPIO_Type *base`, `uint32_t pin`, const `gpio_pin_config_t *Config`)
Initializes the GPIO peripheral according to the specified parameters in the initConfig.

GPIO Reads and Write Functions

- void [GPIO_PinWrite](#) (GPIO_Type *base, uint32_t pin, uint8_t output)
Sets the output level of the individual GPIO pin to logic 1 or 0.
- static void [GPIO_WritePinOutput](#) (GPIO_Type *base, uint32_t pin, uint8_t output)
Sets the output level of the individual GPIO pin to logic 1 or 0.
- static void [GPIO_PortSet](#) (GPIO_Type *base, uint32_t mask)
Sets the output level of the multiple GPIO pins to the logic 1.
- static void [GPIO_SetPinsOutput](#) (GPIO_Type *base, uint32_t mask)
Sets the output level of the multiple GPIO pins to the logic 1.
- static void [GPIO_PortClear](#) (GPIO_Type *base, uint32_t mask)
Sets the output level of the multiple GPIO pins to the logic 0.
- static void [GPIO_ClearPinsOutput](#) (GPIO_Type *base, uint32_t mask)
Sets the output level of the multiple GPIO pins to the logic 0.
- static void [GPIO_PortToggle](#) (GPIO_Type *base, uint32_t mask)
Reverses the current output logic of the multiple GPIO pins.
- static uint32_t [GPIO_PinRead](#) (GPIO_Type *base, uint32_t pin)
Reads the current input value of the GPIO port.
- static uint32_t [GPIO_ReadPinInput](#) (GPIO_Type *base, uint32_t pin)
Reads the current input value of the GPIO port.

GPIO Reads Pad Status Functions

- static uint8_t [GPIO_PinReadPadStatus](#) (GPIO_Type *base, uint32_t pin)
Reads the current GPIO pin pad status.
- static uint8_t [GPIO_ReadPadStatus](#) (GPIO_Type *base, uint32_t pin)
Reads the current GPIO pin pad status.

Interrupts and flags management functions

- void [GPIO_PinSetInterruptConfig](#) (GPIO_Type *base, uint32_t pin, [gpio_interrupt_mode_t](#) pinInterruptMode)
Sets the current pin interrupt mode.
- static void [GPIO_SetPinInterruptConfig](#) (GPIO_Type *base, uint32_t pin, [gpio_interrupt_mode_t](#) pinInterruptMode)
Sets the current pin interrupt mode.
- static void [GPIO_PortEnableInterrupts](#) (GPIO_Type *base, uint32_t mask)
Enables the specific pin interrupt.
- static void [GPIO_EnableInterrupts](#) (GPIO_Type *base, uint32_t mask)
Enables the specific pin interrupt.
- static void [GPIO_PortDisableInterrupts](#) (GPIO_Type *base, uint32_t mask)
Disables the specific pin interrupt.
- static void [GPIO_DisableInterrupts](#) (GPIO_Type *base, uint32_t mask)
Disables the specific pin interrupt.
- static uint32_t [GPIO_PortGetInterruptFlags](#) (GPIO_Type *base)
Reads individual pin interrupt status.
- static uint32_t [GPIO_GetPinsInterruptFlags](#) (GPIO_Type *base)
Reads individual pin interrupt status.
- static void [GPIO_PortClearInterruptFlags](#) (GPIO_Type *base, uint32_t mask)
Clears pin interrupt flag.
- static void [GPIO_ClearPinsInterruptFlags](#) (GPIO_Type *base, uint32_t mask)

Clears pin interrupt flag.

Data Structure Documentation

12.3.1 struct gpio_pin_config_t

Data Fields

- [gpio_pin_direction_t direction](#)
Specifies the pin direction.
- uint8_t [outputLogic](#)
Set a default output logic, which has no use in input.
- [gpio_interrupt_mode_t interruptMode](#)
Specifies the pin interrupt mode, a value of [gpio_interrupt_mode_t](#).

12.3.1.0.0.3 Field Documentation

12.3.1.0.0.3.1 gpio_pin_direction_t gpio_pin_config_t::direction

12.3.1.0.0.3.2 gpio_interrupt_mode_t gpio_pin_config_t::interruptMode

Macro Definition Documentation

12.4.1 #define FSL_GPIO_DRIVER_VERSION (MAKE_VERSION(2, 0, 5))

Enumeration Type Documentation

12.5.1 enum gpio_pin_direction_t

Enumerator

kGPIO_DigitalInput Set current pin as digital input.
kGPIO_DigitalOutput Set current pin as digital output.

12.5.2 enum gpio_interrupt_mode_t

Enumerator

kGPIO_NoIntmode Set current pin general IO functionality.
kGPIO_IntLowLevel Set current pin interrupt is low-level sensitive.
kGPIO_IntHighLevel Set current pin interrupt is high-level sensitive.
kGPIO_IntRisingEdge Set current pin interrupt is rising-edge sensitive.
kGPIO_IntFallingEdge Set current pin interrupt is falling-edge sensitive.
kGPIO_IntRisingOrFallingEdge Enable the edge select bit to override the ICR register's configuration.

Function Documentation

12.6.1 void GPIO_PinInit (GPIO_Type * *base*, uint32_t *pin*, const gpio_pin_config_t * *Config*)

Parameters

<i>base</i>	GPIO base pointer.
<i>pin</i>	Specifies the pin number
<i>Config</i>	pointer to a gpio_pin_config_t structure that contains the configuration information.

12.6.2 void GPIO_PinWrite (GPIO_Type * *base*, uint32_t *pin*, uint8_t *output*)

Parameters

<i>base</i>	GPIO base pointer.
<i>pin</i>	GPIO port pin number.
<i>output</i>	GPIO pin output logic level. <ul style="list-style-type: none"> • 0: corresponding pin output low-logic level. • 1: corresponding pin output high-logic level.

12.6.3 static void GPIO_WritePinOutput (GPIO_Type * *base*, uint32_t *pin*, uint8_t *output*) [inline], [static]

Deprecated Do not use this function. It has been superseded by [GPIO_PinWrite](#).

12.6.4 static void GPIO_PortSet (GPIO_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	GPIO peripheral base pointer (GPIO1, GPIO2, GPIO3, and so on.)
<i>mask</i>	GPIO pin number macro

12.6.5 static void GPIO_SetPinsOutput (GPIO_Type * *base*, uint32_t *mask*) [inline], [static]

Deprecated Do not use this function. It has been superseded by [GPIO_PortSet](#).

12.6.6 `static void GPIO_PortClear (GPIO_Type * base, uint32_t mask)`
`[inline], [static]`

Parameters

<i>base</i>	GPIO peripheral base pointer (GPIO1, GPIO2, GPIO3, and so on.)
<i>mask</i>	GPIO pin number macro

12.6.7 static void GPIO_ClearPinsOutput (GPIO_Type * *base*, uint32_t *mask*)
[inline], [static]

Deprecated Do not use this function. It has been superceded by [GPIO_PortClear](#).

12.6.8 static void GPIO_PortToggle (GPIO_Type * *base*, uint32_t *mask*)
[inline], [static]

Parameters

<i>base</i>	GPIO peripheral base pointer (GPIO1, GPIO2, GPIO3, and so on.)
<i>mask</i>	GPIO pin number macro

12.6.9 static uint32_t GPIO_PinRead (GPIO_Type * *base*, uint32_t *pin*)
[inline], [static]

Parameters

<i>base</i>	GPIO base pointer.
<i>pin</i>	GPIO port pin number.

Return values

<i>GPIO</i>	port input value.
-------------	-------------------

12.6.10 static uint32_t GPIO_ReadPinInput (GPIO_Type * *base*, uint32_t *pin*)
[inline], [static]

Deprecated Do not use this function. It has been superceded by [GPIO_PinRead](#).

12.6.11 `static uint8_t GPIO_PinReadPadStatus (GPIO_Type * base, uint32_t pin)`
 `[inline], [static]`

Parameters

<i>base</i>	GPIO base pointer.
<i>pin</i>	GPIO port pin number.

Return values

<i>GPIO</i>	pin pad status value.
-------------	-----------------------

12.6.12 `static uint8_t GPIO_ReadPadStatus (GPIO_Type * base, uint32_t pin)
[inline], [static]`

Deprecated Do not use this function. It has been superseded by [GPIO_PinReadPadStatus](#).

12.6.13 `void GPIO_PinSetInterruptConfig (GPIO_Type * base, uint32_t pin,
gpio_interrupt_mode_t pinInterruptMode)`

Parameters

<i>base</i>	GPIO base pointer.
<i>pin</i>	GPIO port pin number.
<i>pinInterrupt- Mode</i>	pointer to a gpio_interrupt_mode_t structure that contains the interrupt mode information.

12.6.14 `static void GPIO_SetPinInterruptConfig (GPIO_Type * base, uint32_t pin,
gpio_interrupt_mode_t pinInterruptMode) [inline], [static]`

Deprecated Do not use this function. It has been superseded by [GPIO_PinSetInterruptConfig](#).

12.6.15 `static void GPIO_PortEnableInterrupts (GPIO_Type * base, uint32_t mask
) [inline], [static]`

Parameters

<i>base</i>	GPIO base pointer.
<i>mask</i>	GPIO pin number macro.

12.6.16 static void GPIO_EnableInterrupts (GPIO_Type * *base*, uint32_t *mask*)
[inline], [static]

Parameters

<i>base</i>	GPIO base pointer.
<i>mask</i>	GPIO pin number macro.

12.6.17 static void GPIO_PortDisableInterrupts (GPIO_Type * *base*, uint32_t *mask*)
[inline], [static]

Parameters

<i>base</i>	GPIO base pointer.
<i>mask</i>	GPIO pin number macro.

12.6.18 static void GPIO_DisableInterrupts (GPIO_Type * *base*, uint32_t *mask*)
[inline], [static]

Deprecated Do not use this function. It has been superseded by [GPIO_PortDisableInterrupts](#).

12.6.19 static uint32_t GPIO_PortGetInterruptFlags (GPIO_Type * *base*)
[inline], [static]

Parameters

<i>base</i>	GPIO base pointer.
-------------	--------------------

Return values

<i>current</i>	pin interrupt status flag.
----------------	----------------------------

12.6.20 **static uint32_t GPIO_GetPinsInterruptFlags (GPIO_Type * *base*)** **[inline], [static]**

Parameters

<i>base</i>	GPIO base pointer.
-------------	--------------------

Return values

<i>current</i>	pin interrupt status flag.
----------------	----------------------------

12.6.21 **static void GPIO_PortClearInterruptFlags (GPIO_Type * *base*, uint32_t *mask*)** **[inline], [static]**

Status flags are cleared by writing a 1 to the corresponding bit position.

Parameters

<i>base</i>	GPIO base pointer.
<i>mask</i>	GPIO pin number macro.

12.6.22 **static void GPIO_ClearPinsInterruptFlags (GPIO_Type * *base*, uint32_t *mask*)** **[inline], [static]**

Status flags are cleared by writing a 1 to the corresponding bit position.

Parameters

<i>base</i>	GPIO base pointer.
<i>mask</i>	GPIO pin number macro.



Chapter 13

I2C: Inter-Integrated Circuit Driver

Overview

Modules

- [I2C Driver](#)

I2C Driver

13.2.1 Overview

The MCUXpresso SDK provides a peripheral driver for the Inter-Integrated Circuit (I2C) module of MCUXpresso SDK devices.

The I2C driver includes functional APIs and transactional APIs.

Functional APIs target the low-level APIs. Functional APIs can be used for the I2C master/slave initialization/configuration/operation for optimization/customization purpose. Using the functional APIs requires knowing the I2C master peripheral and how to organize functional APIs to meet the application requirements. The I2C functional operation groups provide the functional APIs set.

Transactional APIs target the high-level APIs. The transactional APIs can be used to enable the peripheral quickly and also in the application if the code size and performance of transactional APIs satisfy the requirements. If the code size and performance are critical requirements, see the transactional API implementation and write custom code using the functional APIs or accessing the hardware registers.

Transactional APIs support asynchronous transfer. This means that the functions [I2C_MasterTransferNonBlocking\(\)](#) set up the interrupt non-blocking transfer. When the transfer completes, the upper layer is notified through a callback function with the status.

13.2.2 Typical use case

13.2.2.1 Master Operation in functional method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/i2c`

13.2.2.2 Master Operation in interrupt transactional method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/i2c`

13.2.2.3 Slave Operation in functional method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/i2c`

13.2.2.4 Slave Operation in interrupt transactional method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/i2c`

Data Structures

- struct [i2c_master_config_t](#)

- *I2C master user configuration. [More...](#)*
- struct [i2c_master_transfer_t](#)
I2C master transfer structure. [More...](#)
- struct [i2c_master_handle_t](#)
I2C master handle structure. [More...](#)
- struct [i2c_slave_config_t](#)
I2C slave user configuration. [More...](#)
- struct [i2c_slave_transfer_t](#)
I2C slave transfer structure. [More...](#)
- struct [i2c_slave_handle_t](#)
I2C slave handle structure. [More...](#)

Macros

- #define [I2C_RETRY_TIMES](#) 0U /* Define to zero means keep waiting until the flag is assert/deassert. */
Retry times for waiting flag.

Typedefs

- typedef void(* [i2c_master_transfer_callback_t](#))(I2C_Type *base, i2c_master_handle_t *handle, [status_t](#) status, void *userData)
I2C master transfer callback typedef.
- typedef void(* [i2c_slave_transfer_callback_t](#))(I2C_Type *base, [i2c_slave_transfer_t](#) *xfer, void *userData)
I2C slave transfer callback typedef.

Enumerations

- enum {
[kStatus_I2C_Busy](#) = MAKE_STATUS(kStatusGroup_I2C, 0),
[kStatus_I2C_Idle](#) = MAKE_STATUS(kStatusGroup_I2C, 1),
[kStatus_I2C_Nak](#) = MAKE_STATUS(kStatusGroup_I2C, 2),
[kStatus_I2C_ArbitrationLost](#) = MAKE_STATUS(kStatusGroup_I2C, 3),
[kStatus_I2C_Timeout](#) = MAKE_STATUS(kStatusGroup_I2C, 4),
[kStatus_I2C_Addr_Nak](#) = MAKE_STATUS(kStatusGroup_I2C, 5) }
I2C status return codes.
- enum [_i2c_flags](#) {
[kI2C_ReceiveNakFlag](#) = I2C_I2SR_RXAK_MASK,
[kI2C_IntPendingFlag](#) = I2C_I2SR_IIF_MASK,
[kI2C_TransferDirectionFlag](#) = I2C_I2SR_SRW_MASK,
[kI2C_ArbitrationLostFlag](#) = I2C_I2SR_IAL_MASK,
[kI2C_BusBusyFlag](#) = I2C_I2SR_IBB_MASK,
[kI2C_AddressMatchFlag](#) = I2C_I2SR_IAAS_MASK,
[kI2C_TransferCompleteFlag](#) = I2C_I2SR_ICF_MASK }

- *I2C peripheral flags.*
- enum `_i2c_interrupt_enable` { `kI2C_GlobalInterruptEnable` = `I2C_I2CR_IEN_MASK` }
- *I2C feature interrupt source.*
- enum `i2c_direction_t` {
`kI2C_Write` = `0x0U`,
`kI2C_Read` = `0x1U` }
- *The direction of master and slave transfers.*
- enum `_i2c_master_transfer_flags` {
`kI2C_TransferDefaultFlag` = `0x0U`,
`kI2C_TransferNoStartFlag` = `0x1U`,
`kI2C_TransferRepeatedStartFlag` = `0x2U`,
`kI2C_TransferNoStopFlag` = `0x4U` }
- *I2C transfer control flag.*
- enum `i2c_slave_transfer_event_t` {
`kI2C_SlaveAddressMatchEvent` = `0x01U`,
`kI2C_SlaveTransmitEvent` = `0x02U`,
`kI2C_SlaveReceiveEvent` = `0x04U`,
`kI2C_SlaveTransmitAckEvent` = `0x08U`,
`kI2C_SlaveCompletionEvent` = `0x20U`,
`kI2C_SlaveAllEvents` }
- *Set of events sent to the callback for nonblocking slave transfers.*

Driver version

- #define `FSL_I2C_DRIVER_VERSION` (`MAKE_VERSION(2, 0, 7)`)
I2C driver version.

Initialization and deinitialization

- void `I2C_MasterInit` (`I2C_Type *base`, const `i2c_master_config_t *masterConfig`, `uint32_t srcClock_Hz`)
Initializes the I2C peripheral.
- void `I2C_MasterDeinit` (`I2C_Type *base`)
De-initializes the I2C master peripheral.
- void `I2C_MasterGetDefaultConfig` (`i2c_master_config_t *masterConfig`)
Sets the I2C master configuration structure to default values.
- void `I2C_SlaveInit` (`I2C_Type *base`, const `i2c_slave_config_t *slaveConfig`)
Initializes the I2C peripheral.
- void `I2C_SlaveDeinit` (`I2C_Type *base`)
De-initializes the I2C slave peripheral.
- void `I2C_SlaveGetDefaultConfig` (`i2c_slave_config_t *slaveConfig`)
Sets the I2C slave configuration structure to default values.
- static void `I2C_Enable` (`I2C_Type *base`, bool enable)
Enables or disables the I2C peripheral operation.

Status

- static uint32_t [I2C_MasterGetStatusFlags](#) (I2C_Type *base)
Gets the I2C status flags.
- static void [I2C_MasterClearStatusFlags](#) (I2C_Type *base, uint32_t statusMask)
Clears the I2C status flag state.
- static uint32_t [I2C_SlaveGetStatusFlags](#) (I2C_Type *base)
Gets the I2C status flags.
- static void [I2C_SlaveClearStatusFlags](#) (I2C_Type *base, uint32_t statusMask)
Clears the I2C status flag state.

Interrupts

- void [I2C_EnableInterrupts](#) (I2C_Type *base, uint32_t mask)
Enables I2C interrupt requests.
- void [I2C_DisableInterrupts](#) (I2C_Type *base, uint32_t mask)
Disables I2C interrupt requests.

Bus Operations

- void [I2C_MasterSetBaudRate](#) (I2C_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)
Sets the I2C master transfer baud rate.
- [status_t](#) [I2C_MasterStart](#) (I2C_Type *base, uint8_t address, [i2c_direction_t](#) direction)
Sends a START on the I2C bus.
- [status_t](#) [I2C_MasterStop](#) (I2C_Type *base)
Sends a STOP signal on the I2C bus.
- [status_t](#) [I2C_MasterRepeatedStart](#) (I2C_Type *base, uint8_t address, [i2c_direction_t](#) direction)
Sends a REPEATED START on the I2C bus.
- [status_t](#) [I2C_MasterWriteBlocking](#) (I2C_Type *base, const uint8_t *txBuff, size_t txSize, uint32_t flags)
Performs a polling send transaction on the I2C bus.
- [status_t](#) [I2C_MasterReadBlocking](#) (I2C_Type *base, uint8_t *rxBuff, size_t rxSize, uint32_t flags)
Performs a polling receive transaction on the I2C bus.
- [status_t](#) [I2C_SlaveWriteBlocking](#) (I2C_Type *base, const uint8_t *txBuff, size_t txSize)
Performs a polling send transaction on the I2C bus.
- [status_t](#) [I2C_SlaveReadBlocking](#) (I2C_Type *base, uint8_t *rxBuff, size_t rxSize)
Performs a polling receive transaction on the I2C bus.
- [status_t](#) [I2C_MasterTransferBlocking](#) (I2C_Type *base, [i2c_master_transfer_t](#) *xfer)
Performs a master polling transfer on the I2C bus.

Transactional

- void [I2C_MasterTransferCreateHandle](#) (I2C_Type *base, [i2c_master_handle_t](#) *handle, [i2c_master_transfer_callback_t](#) callback, void *userData)
Initializes the I2C handle which is used in transactional functions.
- [status_t](#) [I2C_MasterTransferNonBlocking](#) (I2C_Type *base, [i2c_master_handle_t](#) *handle, [i2c_master_transfer_t](#) *xfer)

- *Performs a master interrupt non-blocking transfer on the I2C bus.*
 • [status_t I2C_MasterTransferGetCount](#) (I2C_Type *base, i2c_master_handle_t *handle, size_t *count)
- *Gets the master transfer status during a interrupt non-blocking transfer.*
 • [status_t I2C_MasterTransferAbort](#) (I2C_Type *base, i2c_master_handle_t *handle)
- *Aborts an interrupt non-blocking transfer early.*
 • [void I2C_MasterTransferHandleIRQ](#) (I2C_Type *base, void *i2cHandle)
- *Master interrupt handler.*
 • [void I2C_SlaveTransferCreateHandle](#) (I2C_Type *base, i2c_slave_handle_t *handle, [i2c_slave_transfer_callback_t](#) callback, void *userData)
- *Initializes the I2C handle which is used in transactional functions.*
 • [status_t I2C_SlaveTransferNonBlocking](#) (I2C_Type *base, i2c_slave_handle_t *handle, uint32_t eventMask)
- *Starts accepting slave transfers.*
 • [void I2C_SlaveTransferAbort](#) (I2C_Type *base, i2c_slave_handle_t *handle)
- *Aborts the slave transfer.*
 • [status_t I2C_SlaveTransferGetCount](#) (I2C_Type *base, i2c_slave_handle_t *handle, size_t *count)
- *Gets the slave transfer remaining bytes during a interrupt non-blocking transfer.*
 • [void I2C_SlaveTransferHandleIRQ](#) (I2C_Type *base, void *i2cHandle)
- *Slave interrupt handler.*

13.2.3 Data Structure Documentation

13.2.3.1 struct i2c_master_config_t

Data Fields

- bool [enableMaster](#)
Enables the I2C peripheral at initialization time.
- uint32_t [baudRate_Bps](#)
Baud rate configuration of I2C peripheral.

13.2.3.1.0.4 Field Documentation

13.2.3.1.0.4.1 bool i2c_master_config_t::enableMaster

13.2.3.1.0.4.2 uint32_t i2c_master_config_t::baudRate_Bps

13.2.3.2 struct i2c_master_transfer_t

Data Fields

- uint32_t [flags](#)
A transfer flag which controls the transfer.
- uint8_t [slaveAddress](#)
7-bit slave address.
- [i2c_direction_t](#) [direction](#)
A transfer direction, read or write.
- uint32_t [subaddress](#)

- *A sub address.*
- `uint8_t subaddressSize`
A size of the command buffer.
- `uint8_t *volatile data`
A transfer buffer.
- `volatile size_t dataSize`
A transfer size.

13.2.3.2.0.5 Field Documentation

13.2.3.2.0.5.1 `uint32_t i2c_master_transfer_t::flags`

13.2.3.2.0.5.2 `uint8_t i2c_master_transfer_t::slaveAddress`

13.2.3.2.0.5.3 `i2c_direction_t i2c_master_transfer_t::direction`

13.2.3.2.0.5.4 `uint32_t i2c_master_transfer_t::subaddress`

Transferred MSB first.

13.2.3.2.0.5.5 `uint8_t i2c_master_transfer_t::subaddressSize`

13.2.3.2.0.5.6 `uint8_t* volatile i2c_master_transfer_t::data`

13.2.3.2.0.5.7 `volatile size_t i2c_master_transfer_t::dataSize`

13.2.3.3 `struct i2c_master_handle`

I2C master handle typedef.

Data Fields

- `i2c_master_transfer_t transfer`
I2C master transfer copy.
- `size_t transferSize`
Total bytes to be transferred.
- `uint8_t state`
A transfer state maintained during transfer.
- `i2c_master_transfer_callback_t completionCallback`
A callback function called when the transfer is finished.
- `void * userData`
A callback parameter passed to the callback function.

13.2.3.3.0.6 Field Documentation**13.2.3.3.0.6.1** `i2c_master_transfer_t i2c_master_handle_t::transfer`**13.2.3.3.0.6.2** `size_t i2c_master_handle_t::transferSize`**13.2.3.3.0.6.3** `uint8_t i2c_master_handle_t::state`**13.2.3.3.0.6.4** `i2c_master_transfer_callback_t i2c_master_handle_t::completionCallback`**13.2.3.3.0.6.5** `void* i2c_master_handle_t::userData`**13.2.3.4 struct i2c_slave_config_t****Data Fields**

- `bool enableSlave`
Enables the I2C peripheral at initialization time.
- `uint16_t slaveAddress`
A slave address configuration.

13.2.3.4.0.7 Field Documentation**13.2.3.4.0.7.1** `bool i2c_slave_config_t::enableSlave`**13.2.3.4.0.7.2** `uint16_t i2c_slave_config_t::slaveAddress`**13.2.3.5 struct i2c_slave_transfer_t****Data Fields**

- `i2c_slave_transfer_event_t event`
A reason that the callback is invoked.
- `uint8_t *volatile data`
A transfer buffer.
- `volatile size_t dataSize`
A transfer size.
- `status_t completionStatus`
Success or error code describing how the transfer completed.
- `size_t transferredCount`
A number of bytes actually transferred since the start or since the last repeated start.

13.2.3.5.0.8 Field Documentation**13.2.3.5.0.8.1** `i2c_slave_transfer_event_t i2c_slave_transfer_t::event`**13.2.3.5.0.8.2** `uint8_t* volatile i2c_slave_transfer_t::data`**13.2.3.5.0.8.3** `volatile size_t i2c_slave_transfer_t::dataSize`**13.2.3.5.0.8.4** `status_t i2c_slave_transfer_t::completionStatus`

Only applies for [kI2C_SlaveCompletionEvent](#).

13.2.3.5.0.8.5 `size_t i2c_slave_transfer_t::transferredCount`**13.2.3.6 struct _i2c_slave_handle**

I2C slave handle typedef.

Data Fields

- volatile `uint8_t` [state](#)
A transfer state maintained during transfer.
- `i2c_slave_transfer_t` [transfer](#)
I2C slave transfer copy.
- `uint32_t` [eventMask](#)
A mask of enabled events.
- `i2c_slave_transfer_callback_t` [callback](#)
A callback function called at the transfer event.
- void * [userData](#)
A callback parameter passed to the callback.

13.2.3.6.0.9 Field Documentation

13.2.3.6.0.9.1 `volatile uint8_t i2c_slave_handle_t::state`

13.2.3.6.0.9.2 `i2c_slave_transfer_t i2c_slave_handle_t::transfer`

13.2.3.6.0.9.3 `uint32_t i2c_slave_handle_t::eventMask`

13.2.3.6.0.9.4 `i2c_slave_transfer_callback_t i2c_slave_handle_t::callback`

13.2.3.6.0.9.5 `void* i2c_slave_handle_t::userData`

13.2.4 Macro Definition Documentation

13.2.4.1 `#define FSL_I2C_DRIVER_VERSION (MAKE_VERSION(2, 0, 7))`

13.2.4.2 `#define I2C_RETRY_TIMES 0U /* Define to zero means keep waiting until the flag is assert/deassert. */`

13.2.5 Typedef Documentation

13.2.5.1 `typedef void(* i2c_master_transfer_callback_t)(I2C_Type *base, i2c_master_handle_t *handle, status_t status, void *userData)`

13.2.5.2 `typedef void(* i2c_slave_transfer_callback_t)(I2C_Type *base, i2c_slave_transfer_t *xfer, void *userData)`

13.2.6 Enumeration Type Documentation

13.2.6.1 anonymous enum

Enumerator

kStatus_I2C_Busy I2C is busy with current transfer.

kStatus_I2C_Idle Bus is Idle.

kStatus_I2C_Nak NAK received during transfer.

kStatus_I2C_ArbitrationLost Arbitration lost during transfer.

kStatus_I2C_Timeout Timeout polling status flags.

kStatus_I2C_Addr_Nak NAK received during the address probe.

13.2.6.2 `enum _i2c_flags`

The following status register flags can be cleared:

- [kI2C_ArbitrationLostFlag](#)

- [kI2C_IntPendingFlag](#)

Note

These enumerations are meant to be OR'd together to form a bit mask.

Enumerator

kI2C_ReceiveNakFlag I2C receive NAK flag.
kI2C_IntPendingFlag I2C interrupt pending flag.
kI2C_TransferDirectionFlag I2C transfer direction flag.
kI2C_ArbitrationLostFlag I2C arbitration lost flag.
kI2C_BusBusyFlag I2C bus busy flag.
kI2C_AddressMatchFlag I2C address match flag.
kI2C_TransferCompleteFlag I2C transfer complete flag.

13.2.6.3 enum _i2c_interrupt_enable

Enumerator

kI2C_GlobalInterruptEnable I2C global interrupt.

13.2.6.4 enum i2c_direction_t

Enumerator

kI2C_Write Master transmits to the slave.
kI2C_Read Master receives from the slave.

13.2.6.5 enum _i2c_master_transfer_flags

Enumerator

kI2C_TransferDefaultFlag A transfer starts with a start signal, stops with a stop signal.
kI2C_TransferNoStartFlag A transfer starts without a start signal, only support write only or write+read with no start flag, do not support read only with no start flag.
kI2C_TransferRepeatedStartFlag A transfer starts with a repeated start signal.
kI2C_TransferNoStopFlag A transfer ends without a stop signal.

13.2.6.6 enum i2c_slave_transfer_event_t

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to [I2C_SlaveTransferNonBlocking\(\)](#) to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note

These enumerations are meant to be OR'd together to form a bit mask of events.

Enumerator

kI2C_SlaveAddressMatchEvent Received the slave address after a start or repeated start.

kI2C_SlaveTransmitEvent A callback is requested to provide data to transmit (slave-transmitter role).

kI2C_SlaveReceiveEvent A callback is requested to provide a buffer in which to place received data (slave-receiver role).

kI2C_SlaveTransmitAckEvent A callback needs to either transmit an ACK or NACK.

kI2C_SlaveCompletionEvent A stop was detected or finished transfer, completing the transfer.

kI2C_SlaveAllEvents A bit mask of all available events.

13.2.7 Function Documentation

13.2.7.1 void I2C_MasterInit (I2C_Type * *base*, const i2c_master_config_t * *masterConfig*, uint32_t *srcClock_Hz*)

Call this API to ungate the I2C clock and configure the I2C with master configuration.

Note

This API should be called at the beginning of the application. Otherwise, any operation to the I2C module can cause a hard fault because the clock is not enabled. The configuration structure can be custom filled or it can be set with default values by using the [I2C_MasterGetDefaultConfig\(\)](#). After calling this API, the master is ready to transfer. This is an example.

```
* i2c_master_config_t config = {
*   .enableMaster = true,
*   .baudRate_Bps = 100000
* };
* I2C_MasterInit(I2C0, &config, 12000000U);
*
```

Parameters

<i>base</i>	I2C base pointer
<i>masterConfig</i>	A pointer to the master configuration structure
<i>srcClock_Hz</i>	I2C peripheral clock frequency in Hz

13.2.7.2 void I2C_MasterDeinit (I2C_Type * *base*)

Call this API to gate the I2C clock. The I2C master module can't work unless the I2C_MasterInit is called.

Parameters

<i>base</i>	I2C base pointer
-------------	------------------

13.2.7.3 void I2C_MasterGetDefaultConfig (i2c_master_config_t * *masterConfig*)

The purpose of this API is to get the configuration structure initialized for use in the [I2C_MasterInit\(\)](#). Use the initialized structure unchanged in the [I2C_MasterInit\(\)](#) or modify the structure before calling the [I2C_MasterInit\(\)](#). This is an example.

```
* i2c_master_config_t config;
* I2C_MasterGetDefaultConfig(&config);
*
```

Parameters

<i>masterConfig</i>	A pointer to the master configuration structure.
---------------------	--

13.2.7.4 void I2C_SlaveInit (I2C_Type * *base*, const i2c_slave_config_t * *slaveConfig*)

Call this API to ungate the I2C clock and initialize the I2C with the slave configuration.

Note

This API should be called at the beginning of the application. Otherwise, any operation to the I2C module can cause a hard fault because the clock is not enabled. The configuration structure can partly be set with default values by [I2C_SlaveGetDefaultConfig\(\)](#) or it can be custom filled by the user. This is an example.

```
* i2c_slave_config_t config = {
* .enableSlave = true,
* .slaveAddress = 0x1DU,
* };
* I2C_SlaveInit(I2C0, &config);
*
```

Parameters

<i>base</i>	I2C base pointer
<i>slaveConfig</i>	A pointer to the slave configuration structure

13.2.7.5 void I2C_SlaveDeinit (I2C_Type * *base*)

Calling this API gates the I2C clock. The I2C slave module can't work unless the I2C_SlaveInit is called to enable the clock.

Parameters

<i>base</i>	I2C base pointer
-------------	------------------

13.2.7.6 void I2C_SlaveGetDefaultConfig (i2c_slave_config_t * *slaveConfig*)

The purpose of this API is to get the configuration structure initialized for use in the [I2C_SlaveInit\(\)](#). Modify fields of the structure before calling the [I2C_SlaveInit\(\)](#). This is an example.

```
* i2c_slave_config_t config;
* I2C_SlaveGetDefaultConfig(&config);
*
```

Parameters

<i>slaveConfig</i>	A pointer to the slave configuration structure.
--------------------	---

13.2.7.7 static void I2C_Enable (I2C_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	I2C base pointer
<i>enable</i>	Pass true to enable and false to disable the module.

13.2.7.8 static uint32_t I2C_MasterGetStatusFlags (I2C_Type * *base*) [inline], [static]

Parameters

<i>base</i>	I2C base pointer
-------------	------------------

Returns

status flag, use status flag to AND [_i2c_flags](#) to get the related status.

13.2.7.9 static void I2C_MasterClearStatusFlags (I2C_Type * *base*, uint32_t *statusMask*) [inline], [static]

The following status register flags can be cleared kI2C_ArbitrationLostFlag and kI2C_IntPendingFlag.

Parameters

<i>base</i>	I2C base pointer
<i>statusMask</i>	The status flag mask, defined in type i2c_status_flag_t. The parameter can be any combination of the following values: <ul style="list-style-type: none"> • kI2C_ArbitrationLostFlag • kI2C_IntPendingFlag

13.2.7.10 static uint32_t I2C_SlaveGetStatusFlags (I2C_Type * *base*) [inline], [static]

Parameters

<i>base</i>	I2C base pointer
-------------	------------------

Returns

status flag, use status flag to AND [_i2c_flags](#) to get the related status.

13.2.7.11 static void I2C_SlaveClearStatusFlags (I2C_Type * *base*, uint32_t *statusMask*) [inline], [static]

The following status register flags can be cleared kI2C_ArbitrationLostFlag and kI2C_IntPendingFlag

Parameters

<i>base</i>	I2C base pointer
<i>statusMask</i>	The status flag mask, defined in type <code>i2c_status_flag_t</code> . The parameter can be any combination of the following values: <ul style="list-style-type: none"> • <code>kI2C_IntPendingFlagFlag</code>

13.2.7.12 void I2C_EnableInterrupts (I2C_Type * *base*, uint32_t *mask*)

Parameters

<i>base</i>	I2C base pointer
<i>mask</i>	interrupt source The parameter can be combination of the following source if defined: <ul style="list-style-type: none"> • <code>kI2C_GlobalInterruptEnable</code> • <code>kI2C_StopDetectInterruptEnable/kI2C_StartDetectInterruptEnable</code> • <code>kI2C_SdaTimeoutInterruptEnable</code>

13.2.7.13 void I2C_DisableInterrupts (I2C_Type * *base*, uint32_t *mask*)

Parameters

<i>base</i>	I2C base pointer
<i>mask</i>	interrupt source The parameter can be combination of the following source if defined: <ul style="list-style-type: none"> • <code>kI2C_GlobalInterruptEnable</code> • <code>kI2C_StopDetectInterruptEnable/kI2C_StartDetectInterruptEnable</code> • <code>kI2C_SdaTimeoutInterruptEnable</code>

13.2.7.14 void I2C_MasterSetBaudRate (I2C_Type * *base*, uint32_t *baudRate_Bps*, uint32_t *srcClock_Hz*)

Parameters

<i>base</i>	I2C base pointer
<i>baudRate_Bps</i>	the baud rate value in bps
<i>srcClock_Hz</i>	Source clock

13.2.7.15 **status_t I2C_MasterStart (I2C_Type * *base*, uint8_t *address*, i2c_direction_t *direction*)**

This function is used to initiate a new master mode transfer by sending the START signal. The slave address is sent following the I2C START signal.

Parameters

<i>base</i>	I2C peripheral base pointer
<i>address</i>	7-bit slave device address.
<i>direction</i>	Master transfer directions(transmit/receive).

Return values

<i>kStatus_Success</i>	Successfully send the start signal.
<i>kStatus_I2C_Busy</i>	Current bus is busy.

13.2.7.16 **status_t I2C_MasterStop (I2C_Type * *base*)**

Return values

<i>kStatus_Success</i>	Successfully send the stop signal.
<i>kStatus_I2C_Timeout</i>	Send stop signal failed, timeout.

13.2.7.17 **status_t I2C_MasterRepeatedStart (I2C_Type * *base*, uint8_t *address*, i2c_direction_t *direction*)**

Parameters

<i>base</i>	I2C peripheral base pointer
-------------	-----------------------------

<i>address</i>	7-bit slave device address.
<i>direction</i>	Master transfer directions(transmit/receive).

Return values

<i>kStatus_Success</i>	Successfully send the start signal.
<i>kStatus_I2C_Busy</i>	Current bus is busy but not occupied by current I2C master.

13.2.7.18 **status_t I2C_MasterWriteBlocking (I2C_Type * *base*, const uint8_t * *txBuff*, size_t *txSize*, uint32_t *flags*)**

Parameters

<i>base</i>	The I2C peripheral base pointer.
<i>txBuff</i>	The pointer to the data to be transferred.
<i>txSize</i>	The length in bytes of the data to be transferred.
<i>flags</i>	Transfer control flag to decide whether need to send a stop, use kI2C_TransferDefaultFlag to issue a stop and kI2C_TransferNoStop to not send a stop.

Return values

<i>kStatus_Success</i>	Successfully complete the data transmission.
<i>kStatus_I2C_Arbitration-Lost</i>	Transfer error, arbitration lost.
<i>kStatus_I2C_Nak</i>	Transfer error, receive NAK during transfer.

13.2.7.19 **status_t I2C_MasterReadBlocking (I2C_Type * *base*, uint8_t * *rxBuff*, size_t *rxSize*, uint32_t *flags*)**

Note

The I2C_MasterReadBlocking function stops the bus before reading the final byte. Without stopping the bus prior for the final read, the bus issues another read, resulting in garbage data being read into the data register.

Parameters

<i>base</i>	I2C peripheral base pointer.
<i>rxBuff</i>	The pointer to the data to store the received data.
<i>rxSize</i>	The length in bytes of the data to be received.
<i>flags</i>	Transfer control flag to decide whether need to send a stop, use kI2C_Transfer-DefaultFlag to issue a stop and kI2C_TransferNoStop to not send a stop.

Return values

<i>kStatus_Success</i>	Successfully complete the data transmission.
<i>kStatus_I2C_Timeout</i>	Send stop signal failed, timeout.

13.2.7.20 status_t I2C_SlaveWriteBlocking (I2C_Type * *base*, const uint8_t * *txBuff*, size_t *txSize*)

Parameters

<i>base</i>	The I2C peripheral base pointer.
<i>txBuff</i>	The pointer to the data to be transferred.
<i>txSize</i>	The length in bytes of the data to be transferred.

Return values

<i>kStatus_Success</i>	Successfully complete the data transmission.
<i>kStatus_I2C_Arbitration-Lost</i>	Transfer error, arbitration lost.
<i>kStatus_I2C_Nak</i>	Transfer error, receive NAK during transfer.

13.2.7.21 status_t I2C_SlaveReadBlocking (I2C_Type * *base*, uint8_t * *rxBuff*, size_t *rxSize*)

Parameters

<i>base</i>	I2C peripheral base pointer.
<i>rxBuff</i>	The pointer to the data to store the received data.
<i>rxSize</i>	The length in bytes of the data to be received.

13.2.7.22 **status_t I2C_MasterTransferBlocking (I2C_Type * *base*, i2c_master_transfer_t * *xfer*)**

Note

The API does not return until the transfer succeeds or fails due to arbitration lost or receiving a NAK.

Parameters

<i>base</i>	I2C peripheral base address.
<i>xfer</i>	Pointer to the transfer structure.

Return values

<i>kStatus_Success</i>	Successfully complete the data transmission.
<i>kStatus_I2C_Busy</i>	Previous transmission still not finished.
<i>kStatus_I2C_Timeout</i>	Transfer error, wait signal timeout.
<i>kStatus_I2C_Arbitration-Lost</i>	Transfer error, arbitration lost.
<i>kStatus_I2C_Nak</i>	Transfer error, receive NAK during transfer.

13.2.7.23 **void I2C_MasterTransferCreateHandle (I2C_Type * *base*, i2c_master_handle_t * *handle*, i2c_master_transfer_callback_t *callback*, void * *userData*)**

Parameters

<i>base</i>	I2C base pointer.
<i>handle</i>	pointer to i2c_master_handle_t structure to store the transfer state.
<i>callback</i>	pointer to user callback function.

<i>userData</i>	user parameter passed to the callback function.
-----------------	---

13.2.7.24 **status_t I2C_MasterTransferNonBlocking (I2C_Type * *base*, i2c_master_handle_t * *handle*, i2c_master_transfer_t * *xfer*)**

Note

Calling the API returns immediately after transfer initiates. The user needs to call I2C_MasterGetTransferCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_I2C_Busy, the transfer is finished.

Parameters

<i>base</i>	I2C base pointer.
<i>handle</i>	pointer to i2c_master_handle_t structure which stores the transfer state.
<i>xfer</i>	pointer to i2c_master_transfer_t structure.

Return values

<i>kStatus_Success</i>	Successfully start the data transmission.
<i>kStatus_I2C_Busy</i>	Previous transmission still not finished.
<i>kStatus_I2C_Timeout</i>	Transfer error, wait signal timeout.

13.2.7.25 **status_t I2C_MasterTransferGetCount (I2C_Type * *base*, i2c_master_handle_t * *handle*, size_t * *count*)**

Parameters

<i>base</i>	I2C base pointer.
<i>handle</i>	pointer to i2c_master_handle_t structure which stores the transfer state.
<i>count</i>	Number of bytes transferred so far by the non-blocking transaction.

Return values

<i>kStatus_InvalidArgument</i>	count is Invalid.
<i>kStatus_Success</i>	Successfully return the count.

13.2.7.26 **status_t I2C_MasterTransferAbort (I2C_Type * *base*, i2c_master_handle_t * *handle*)**

Note

This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

<i>base</i>	I2C base pointer.
<i>handle</i>	pointer to i2c_master_handle_t structure which stores the transfer state

Return values

<i>kStatus_I2C_Timeout</i>	Timeout during polling flag.
<i>kStatus_Success</i>	Successfully abort the transfer.

13.2.7.27 **void I2C_MasterTransferHandleIRQ (I2C_Type * *base*, void * *i2cHandle*)**

Parameters

<i>base</i>	I2C base pointer.
<i>i2cHandle</i>	pointer to i2c_master_handle_t structure.

13.2.7.28 **void I2C_SlaveTransferCreateHandle (I2C_Type * *base*, i2c_slave_handle_t * *handle*, i2c_slave_transfer_callback_t *callback*, void * *userData*)**

Parameters

<i>base</i>	I2C base pointer.
-------------	-------------------

<i>handle</i>	pointer to <code>i2c_slave_handle_t</code> structure to store the transfer state.
<i>callback</i>	pointer to user callback function.
<i>userData</i>	user parameter passed to the callback function.

13.2.7.29 `status_t I2C_SlaveTransferNonBlocking (I2C_Type * base, i2c_slave_handle_t * handle, uint32_t eventMask)`

Call this API after calling the [I2C_SlaveInit\(\)](#) and [I2C_SlaveTransferCreateHandle\(\)](#) to start processing transactions driven by an I2C master. The slave monitors the I2C bus and passes events to the callback that was passed into the call to [I2C_SlaveTransferCreateHandle\(\)](#). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of [i2c_slave_transfer_event_t](#) enumerators for the events you wish to receive. The [kI2C_SlaveTransmitEvent](#) and [kLPI2C_SlaveReceiveEvent](#) events are always enabled and do not need to be included in the mask. Alternatively, pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the [kI2C_SlaveAllEvents](#) constant is provided as a convenient way to enable all events.

Parameters

<i>base</i>	The I2C peripheral base address.
<i>handle</i>	Pointer to <code>i2c_slave_handle_t</code> structure which stores the transfer state.
<i>eventMask</i>	Bit mask formed by OR'ing together i2c_slave_transfer_event_t enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and kI2C_SlaveAllEvents to enable all events.

Return values

<i>kStatus_Success</i>	Slave transfers were successfully started.
<i>kStatus_I2C_Busy</i>	Slave transfers have already been started on this handle.

13.2.7.30 `void I2C_SlaveTransferAbort (I2C_Type * base, i2c_slave_handle_t * handle)`

Note

This API can be called at any time to stop slave for handling the bus events.

Parameters

<i>base</i>	I2C base pointer.
<i>handle</i>	pointer to i2c_slave_handle_t structure which stores the transfer state.

13.2.7.31 status_t I2C_SlaveTransferGetCount (I2C_Type * *base*, i2c_slave_handle_t * *handle*, size_t * *count*)

Parameters

<i>base</i>	I2C base pointer.
<i>handle</i>	pointer to i2c_slave_handle_t structure.
<i>count</i>	Number of bytes transferred so far by the non-blocking transaction.

Return values

<i>kStatus_InvalidArgument</i>	count is Invalid.
<i>kStatus_Success</i>	Successfully return the count.

13.2.7.32 void I2C_SlaveTransferHandleIRQ (I2C_Type * *base*, void * *i2cHandle*)

Parameters

<i>base</i>	I2C base pointer.
<i>i2cHandle</i>	pointer to i2c_slave_handle_t structure which stores the transfer state

Chapter 14

PWM: Pulse Width Modulation Driver

Overview

The MCUXpresso SDK provides a peripheral driver for the Pulse Width Modulation (PWM) module of MCUXpresso SDK devices.

PWM Driver

14.2.1 Initialization and deinitialization

The function `PWM_Init()` initializes the PWM with a specified configurations. The function `PWM_GetDefaultConfig()` gets the default configurations. The initialization function configures the PWM for the requested register update mode for registers with buffers.

The function `PWM_Deinit()` disables the PWM counter and turns off the module clock.

Typical use case

14.3.1 PWM output

Output PWM signal on PWM3 module with different dutycycles. Periodically update the PWM signal duty cycle. Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/pwm`

Enumerations

- enum `pwm_clock_source_t` {
 `kPWM_PeripheralClock` = 1U,
 `kPWM_HighFrequencyClock`,
 `kPWM_LowFrequencyClock` }
 PWM clock source select.
- enum `pwm_fifo_water_mark_t` {
 `kPWM_FIFOWaterMark_1` = 0U,
 `kPWM_FIFOWaterMark_2`,
 `kPWM_FIFOWaterMark_3`,
 `kPWM_FIFOWaterMark_4` }
 PWM FIFO water mark select.
- enum `pwm_byte_data_swap_t` {
 `kPWM_ByteNoSwap` = 0U,
 `kPWM_ByteSwap` }
 PWM byte data swap select.

- enum `pwm_half_word_data_swap_t` {
`kPWM_HalfWordNoSwap` = 0U,
`kPWM_HalfWordSwap` }
PWM half-word data swap select.
- enum `pwm_output_configuration_t` {
`kPWM_SetAtRolloverAndClearAtcomparison` = 0U,
`kPWM_ClearAtRolloverAndSetAtcomparison`,
`kPWM_NoConfigure` }
PWM Output Configuration.
- enum `pwm_sample_repeat_t` {
`kPWM_EachSampleOnce` = 0u,
`kPWM_EachSampletwice`,
`kPWM_EachSampleFourTimes`,
`kPWM_EachSampleEightTimes` }
PWM FIFO sample repeat It determines the number of times each sample from the FIFO is to be used.
- enum `pwm_interrupt_enable_t` {
`kPWM_FIFOEmptyInterruptEnable` = (1U << 0),
`kPWM_RolloverInterruptEnable` = (1U << 1),
`kPWM_CompareInterruptEnable` = (1U << 2) }
List of PWM interrupt options.
- enum `pwm_status_flags_t` {
`kPWM_FIFOEmptyFlag` = (1U << 3),
`kPWM_RolloverFlag` = (1U << 4),
`kPWM_CompareFlag` = (1U << 5),
`kPWM_FIFOWriteErrorFlag` }
List of PWM status flags.
- enum `pwm_fifo_available_t` {
`kPWM_NoDataInFIFOFlag` = 0U,
`kPWM_OneWordInFIFOFlag`,
`kPWM_TwoWordsInFIFOFlag`,
`kPWM_ThreeWordsInFIFOFlag`,
`kPWM_FourWordsInFIFOFlag` }
List of PWM FIFO available.

Functions

- static void `PWM_SoftwareReset` (PWM_Type *base)
Software reset.
- static void `PWM_SetPeriodValue` (PWM_Type *base, uint32_t value)
Sets the PWM period value.
- static uint32_t `PWM_GetPeriodValue` (PWM_Type *base)
Gets the PWM period value.
- static uint32_t `PWM_GetCounterValue` (PWM_Type *base)
Gets the PWM counter value.

Driver version

- #define `FSL_PWM_DRIVER_VERSION` (MAKE_VERSION(2, 0, 0))

Version 2.0.0.

Initialization and deinitialization

- `status_t PWM_Init` (PWM_Type *base, const pwm_config_t *config)
Ungates the PWM clock and configures the peripheral for basic operation.
- `void PWM_Deinit` (PWM_Type *base)
Gate the PWM submodule clock.
- `void PWM_GetDefaultConfig` (pwm_config_t *config)
Fill in the PWM config struct with the default settings.

PWM start and stop.

- `static void PWM_StartTimer` (PWM_Type *base)
Starts the PWM counter when the PWM is enabled.
- `static void PWM_StopTimer` (PWM_Type *base)
Stops the PWM counter when the pwm is disabled.

Interrupt Interface

- `static void PWM_EnableInterrupts` (PWM_Type *base, uint32_t mask)
Enables the selected PWM interrupts.
- `static void PWM_DisableInterrupts` (PWM_Type *base, uint32_t mask)
Disables the selected PWM interrupts.
- `static uint32_t PWM_GetEnabledInterrupts` (PWM_Type *base)
Gets the enabled PWM interrupts.

Status Interface

- `static uint32_t PWM_GetStatusFlags` (PWM_Type *base)
Gets the PWM status flags.
- `static void PWM_clearStatusFlags` (PWM_Type *base, uint32_t mask)
Clears the PWM status flags.
- `static uint32_t PWM_GetFIFOAvailable` (PWM_Type *base)
Gets the PWM FIFO available.

Sample Interface

- `static void PWM_SetSampleValue` (PWM_Type *base, uint32_t value)
Sets the PWM sample value.
- `static uint32_t PWM_GetSampleValue` (PWM_Type *base)
Gets the PWM sample value.

Enumeration Type Documentation

14.4.1 enum pwm_clock_source_t

Enumerator

kPWM_PeripheralClock The Peripheral clock is used as the clock.

kPWM_HighFrequencyClock High-frequency reference clock is used as the clock.

kPWM_LowFrequencyClock Low-frequency reference clock(32KHz) is used as the clock.

14.4.2 enum pwm_fifo_water_mark_t

Sets the data level at which the FIFO empty flag will be set

Enumerator

kPWM_FIFOWaterMark_1 FIFO empty flag is set when there are more than or equal to 1 empty slots.

kPWM_FIFOWaterMark_2 FIFO empty flag is set when there are more than or equal to 2 empty slots.

kPWM_FIFOWaterMark_3 FIFO empty flag is set when there are more than or equal to 3 empty slots.

kPWM_FIFOWaterMark_4 FIFO empty flag is set when there are more than or equal to 4 empty slots.

14.4.3 enum pwm_byte_data_swap_t

It determines the byte ordering of the 16-bit data when it goes into the FIFO from the sample register.

Enumerator

kPWM_ByteNoSwap byte ordering remains the same

kPWM_ByteSwap byte ordering is reversed

14.4.4 enum pwm_half_word_data_swap_t

Enumerator

kPWM_HalfWordNoSwap Half word swapping does not take place.

kPWM_HalfWordSwap Half word from write data bus are swapped.

14.4.5 enum pwm_output_configuration_t

Enumerator

kPWM_SetAtRolloverAndClearAtcomparison Output pin is set at rollover and cleared at comparison.

kPWM_ClearAtRolloverAndSetAtcomparison Output pin is cleared at rollover and set at comparison.

kPWM_NoConfigure PWM output is disconnected.

14.4.6 enum pwm_sample_repeat_t

Enumerator

kPWM_EachSampleOnce Use each sample once.

kPWM_EachSampletwice Use each sample twice.

kPWM_EachSampleFourTimes Use each sample four times.

kPWM_EachSampleEightTimes Use each sample eight times.

14.4.7 enum pwm_interrupt_enable_t

Enumerator

kPWM_FIFOEmptyInterruptEnable This bit controls the generation of the FIFO Empty interrupt.

kPWM_RolloverInterruptEnable This bit controls the generation of the Rollover interrupt.

kPWM_CompareInterruptEnable This bit controls the generation of the Compare interrupt.

14.4.8 enum pwm_status_flags_t

Enumerator

kPWM_FIFOEmptyFlag This bit indicates the FIFO data level in comparison to the water level set by FWM field in the control register.

kPWM_RolloverFlag This bit shows that a roll-over event has occurred.

kPWM_CompareFlag This bit shows that a compare event has occurred.

kPWM_FIFOWriteErrorFlag This bit shows that an attempt has been made to write FIFO when it is full.

14.4.9 enum pwm_fifo_available_t

Enumerator

kPWM_NoDataInFIFOFlag No data available.

kPWM_OneWordInFIFOFlag 1 word of data in FIFO

kPWM_TwoWordsInFIFOFlag 2 word of data in FIFO

kPWM_ThreeWordsInFIFOFlag 3 word of data in FIFO

kPWM_FourWordsInFIFOFlag 4 word of data in FIFO

Function Documentation

14.5.1 status_t PWM_Init (PWM_Type * *base*, const pwm_config_t * *config*)

Note

This API should be called at the beginning of the application using the PWM driver.

Parameters

<i>base</i>	PWM peripheral base address
<i>config</i>	Pointer to user's PWM config structure.

Returns

kStatus_Success means success; else failed.

14.5.2 void PWM_Deinit (PWM_Type * *base*)

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

14.5.3 void PWM_GetDefaultConfig (pwm_config_t * *config*)

The default values are:

```
* config->enableStopMode = false;
* config->enableDozeMode = false;
* config->enableWaitMode = false;
* config->enableDozeMode = false;
* config->clockSource = kPWM_LowFrequencyClock;
* config->prescale = 0U;
* config->outputConfig = kPWM_SetAtRolloverAndClearAtcomparison;
* config->fifoWater = kPWM_FIFOWaterMark_2;
* config->sampleRepeat = kPWM_EachSampleOnce;
* config->byteSwap = kPWM_ByteNoSwap;
* config->halfWordSwap = kPWM_HalfWordNoSwap;
*
```

Parameters

<i>config</i>	Pointer to user's PWM config structure.
---------------	---

14.5.4 static void PWM_StartTimer (PWM_Type * *base*) [inline], [static]

When the PWM is enabled, it begins a new period, the output pin is set to start a new period while the prescaler and counter are released and counting begins.

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

14.5.5 static void PWM_StopTimer (PWM_Type * *base*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

14.5.6 static void PWM_SoftwareReset (PWM_Type * *base*) [inline], [static]

PWM is reset when this bit is set to 1. It is a self clearing bit. Setting this bit resets all the registers to their reset values except for the STOPEN, DOZEN, WAITEN, and DBGEN bits in this control register.

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

14.5.7 static void PWM_EnableInterrupts (PWM_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
<i>mask</i>	The interrupts to enable. This is a logical OR of members of the enumeration pwm_interrupt_enable_t

14.5.8 static void PWM_DisableInterrupts (PWM_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
<i>mask</i>	The interrupts to disable. This is a logical OR of members of the enumeration pwm_interrupt_enable_t

14.5.9 static uint32_t PWM_GetEnabledInterrupts (PWM_Type * *base*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

Returns

The enabled interrupts. This is the logical OR of members of the enumeration [pwm_interrupt_enable_t](#)

14.5.10 static uint32_t PWM_GetStatusFlags (PWM_Type * *base*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

Returns

The status flags. This is the logical OR of members of the enumeration [pwm_status_flags_t](#)

14.5.11 `static void PWM_clearStatusFlags (PWM_Type * base, uint32_t mask)`
`[inline], [static]`

Parameters

<i>base</i>	PWM peripheral base address
<i>mask</i>	The status flags to clear. This is a logical OR of members of the enumeration pwm_status_flags_t

14.5.12 static uint32_t PWM_GetFIFOAvailable (PWM_Type * *base*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

Returns

The status flags. This is the logical OR of members of the enumeration [pwm_fifo_available_t](#)

14.5.13 static void PWM_SetSampleValue (PWM_Type * *base*, uint32_t *value*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
<i>value</i>	The sample value. This is the input to the 4x16 FIFO. The value in this register denotes the value of the sample being currently used.

14.5.14 static uint32_t PWM_GetSampleValue (PWM_Type * *base*) [inline], [static]

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

Returns

The sample value. It can be read only when the PWM is enable.

14.5.15 `static void PWM_SetPeriodValue (PWM_Type * base, uint32_t value)`
`[inline], [static]`

Parameters

<i>base</i>	PWM peripheral base address
<i>value</i>	The period value. The PWM period register (PWM_PWMPR) determines the period of the PWM output signal. Writing 0xFFFF to this register will achieve the same result as writing 0xFFFE. $PWMO\text{ (Hz)} = PCLK\text{(Hz)} / (\text{period} + 2)$

14.5.16 **static uint32_t PWM_GetPeriodValue (PWM_Type * *base*) [inline], [static]**

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

Returns

The period value. The PWM period register (PWM_PWMPR) determines the period of the PWM output signal.

14.5.17 **static uint32_t PWM_GetCounterValue (PWM_Type * *base*) [inline], [static]**

Parameters

<i>base</i>	PWM peripheral base address
-------------	-----------------------------

Returns

The counter value. The current count value.



Chapter 15

UART: Universal Asynchronous Receiver/Transmitter Driver

Overview

Modules

- [UART Driver](#)
- [UART FreeRTOS Driver](#)

UART Driver

15.2.1 Overview

The MCUXpresso SDK provides a peripheral driver for the Universal Asynchronous Receiver/Transmitter (UART) module of MCUXpresso SDK devices.

The UART driver includes functional APIs and transactional APIs.

Functional APIs are used for UART initialization/configuration/operation for the purpose of optimization/customization. Using the functional API requires the knowledge of the UART peripheral and how to organize functional APIs to meet the application requirements. All functional APIs use the peripheral base address as the first parameter. UART functional operation groups provide the functional API set.

Transactional APIs can be used to enable the peripheral quickly and in the application if the code size and performance of transactional APIs can satisfy the requirements. If the code size and performance are critical requirements, see the transactional API implementation and write custom code. All transactional APIs use the `uart_handle_t` as the second parameter. Initialize the handle by calling the [UART_TransferCreateHandle\(\)](#) API.

Transactional APIs support asynchronous transfer, which means that the functions [UART_TransferSendNonBlocking\(\)](#) and [UART_TransferReceiveNonBlocking\(\)](#) set up an interrupt for data transfer. When the transfer completes, the upper layer is notified through a callback function with the `kStatus_UART_TxIdle` and `kStatus_UART_RxIdle`.

Transactional receive APIs support the ring buffer. Prepare the memory for the ring buffer and pass in the start address and size while calling the [UART_TransferCreateHandle\(\)](#). If passing NULL, the ring buffer feature is disabled. When the ring buffer is enabled, the received data is saved to the ring buffer in the background. The [UART_TransferReceiveNonBlocking\(\)](#) function first gets data from the ring buffer. If the ring buffer does not have enough data, the function first returns the data in the ring buffer and then saves the received data to user memory. When all data is received, the upper layer is informed through a callback with the `kStatus_UART_RxIdle`.

If the receive ring buffer is full, the upper layer is informed through a callback with the `kStatus_UART_RxRingBufferOverflow`. In the callback function, the upper layer reads data out from the ring buffer. If not, existing data is overwritten by the new data.

The ring buffer size is specified when creating the handle. Note that one byte is reserved for the ring buffer maintenance. When creating handle using the following code.

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/uart`. In this example, the buffer size is 32, but only 31 bytes are used for saving data.

15.2.2 Typical use case

15.2.2.1 UART Send/receive using a polling method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/uart`

15.2.2.2 UART Send/receive using an interrupt method

Refer to the driver examples codes located at <SDK_ROOT>/boards/<BOARD>/driver_examples/uart

15.2.2.3 UART Receive using the ringbuffer feature

Refer to the driver examples codes located at <SDK_ROOT>/boards/<BOARD>/driver_examples/uart

15.2.2.4 UART automatic baud rate detect feature

Refer to the driver examples codes located at <SDK_ROOT>/boards/<BOARD>/driver_examples/uart

Data Structures

- struct [uart_config_t](#)
UART configuration structure. [More...](#)
- struct [uart_transfer_t](#)
UART transfer structure. [More...](#)
- struct [uart_handle_t](#)
UART handle structure. [More...](#)

Macros

- #define [UART_RETRY_TIMES](#) 0U /* Defining to zero means to keep waiting for the flag until it is assert/deassert. */
Retry times for waiting flag.

Typedefs

- typedef void(* [uart_transfer_callback_t](#))(UART_Type *base, uart_handle_t *handle, [status_t](#) status, void *userData)
UART transfer callback function.

Enumerations

- enum {
 - kStatus_UART_TxBusy = MAKE_STATUS(kStatusGroup_IUART, 0),
 - kStatus_UART_RxBusy = MAKE_STATUS(kStatusGroup_IUART, 1),
 - kStatus_UART_TxIdle = MAKE_STATUS(kStatusGroup_IUART, 2),
 - kStatus_UART_RxIdle = MAKE_STATUS(kStatusGroup_IUART, 3),
 - kStatus_UART_TxWatermarkTooLarge = MAKE_STATUS(kStatusGroup_IUART, 4),
 - kStatus_UART_RxWatermarkTooLarge = MAKE_STATUS(kStatusGroup_IUART, 5),
 - kStatus_UART_FlagCannotClearManually,
 - kStatus_UART_Error = MAKE_STATUS(kStatusGroup_IUART, 7),
 - kStatus_UART_RxRingBufferOverflow = MAKE_STATUS(kStatusGroup_IUART, 8),
 - kStatus_UART_RxHardwareOverflow = MAKE_STATUS(kStatusGroup_IUART, 9),
 - kStatus_UART_NoiseError = MAKE_STATUS(kStatusGroup_IUART, 10),
 - kStatus_UART_FramingError = MAKE_STATUS(kStatusGroup_IUART, 11),
 - kStatus_UART_ParityError = MAKE_STATUS(kStatusGroup_IUART, 12),
 - kStatus_UART_BaudrateNotSupport,
 - kStatus_UART_BreakDetect = MAKE_STATUS(kStatusGroup_IUART, 14),
 - kStatus_UART_Timeout = MAKE_STATUS(kStatusGroup_IUART, 15) }

Error codes for the UART driver.
- enum uart_data_bits_t {
 - kUART_SevenDataBits = 0x0U,
 - kUART_EightDataBits = 0x1U }

UART data bits count.
- enum uart_parity_mode_t {
 - kUART_ParityDisabled = 0x0U,
 - kUART_ParityEven = 0x2U,
 - kUART_ParityOdd = 0x3U }

UART parity mode.
- enum uart_stop_bit_count_t {
 - kUART_OneStopBit = 0x0U,
 - kUART_TwoStopBit = 0x1U }

UART stop bit count.
- enum uart_idle_condition_t {
 - kUART_IdleFor4Frames = 0x0U,
 - kUART_IdleFor8Frames = 0x1U,
 - kUART_IdleFor16Frames = 0x2U,
 - kUART_IdleFor32Frames = 0x3U }

UART idle condition detect.
- enum _uart_interrupt_enable
 - This structure contains the settings for all of the UART interrupt configurations.*
- enum {


```

kUART_RxCharReadyFlag = 0x0000000FU,
kUART_RxErrorFlag = 0x0000000EU,
kUART_RxOverrunErrorFlag = 0x0000000DU,
kUART_RxFrameErrorFlag = 0x0000000CU,
kUART_RxBreakDetectFlag = 0x0000000BU,
kUART_RxParityErrorFlag = 0x0000000AU,
kUART_ParityErrorFlag = 0x0094000FU,
kUART_RtsStatusFlag = 0x0094000EU,
kUART_TxReadyFlag = 0x0094000DU,
kUART_RtsDeltaFlag = 0x0094000CU,
kUART_EscapeFlag = 0x0094000BU,
kUART_FrameErrorFlag = 0x0094000AU,
kUART_RxReadyFlag = 0x00940009U,
kUART_AgingTimerFlag = 0x00940008U,
kUART_DtrDeltaFlag = 0x00940007U,
kUART_RxDsFlag = 0x00940006U,
kUART_tAirWakeFlag = 0x00940005U,
kUART_AwakeFlag = 0x00940004U,
kUART_Rs485SlaveAddrMatchFlag = 0x00940003U,
kUART_AutoBaudFlag = 0x0098000FU,
kUART_TxEmptyFlag = 0x0098000EU,
kUART_DtrFlag = 0x0098000DU,
kUART_IdleFlag = 0x0098000CU,
kUART_AutoBaudCntStopFlag = 0x0098000BU,
kUART_RiDeltaFlag = 0x0098000AU,
kUART_RiFlag = 0x00980009U,
kUART_IrFlag = 0x00980008U,
kUART_WakeFlag = 0x00980007U,
kUART_DcdDeltaFlag = 0x00980006U,
kUART_DcdFlag = 0x00980005U,
kUART_RtsFlag = 0x00980004U,
kUART_TxCompleteFlag = 0x00980003U,
kUART_BreakDetectFlag = 0x00980002U,
kUART_RxOverrunFlag = 0x00980001U,
kUART_RxDataReadyFlag = 0x00980000U }

```

UART status flags.

Functions

- `uint32_t UART_GetInstance (UART_Type *base)`
Get the UART instance from peripheral base address.

Driver version

- #define [FSL_UART_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 2, 0))
UART driver version.

Software Reset

- static void [UART_SoftwareReset](#) (UART_Type *base)
Resets the UART using software.

Initialization and deinitialization

- [status_t UART_Init](#) (UART_Type *base, const [uart_config_t](#) *config, uint32_t srcClock_Hz)
Initializes an UART instance with the user configuration structure and the peripheral clock.
- void [UART_Deinit](#) (UART_Type *base)
Deinitializes a UART instance.
- void [UART_GetDefaultConfig](#) ([uart_config_t](#) *config)
l
- [status_t UART_SetBaudRate](#) (UART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)
Sets the UART instance baud rate.
- static void [UART_Enable](#) (UART_Type *base)
This function is used to Enable the UART Module.
- static void [UART_SetIdleCondition](#) (UART_Type *base, [uart_idle_condition_t](#) condition)
This function is used to configure the IDLE line condition.
- static void [UART_Disable](#) (UART_Type *base)
This function is used to Disable the UART Module.

Status

- bool [UART_GetStatusFlag](#) (UART_Type *base, uint32_t flag)
This function is used to get the current status of specific UART status flag(including interrupt flag).
- void [UART_ClearStatusFlag](#) (UART_Type *base, uint32_t flag)
This function is used to clear the current status of specific UART status flag.

Interrupts

- void [UART_EnableInterrupts](#) (UART_Type *base, uint32_t mask)
Enables UART interrupts according to the provided mask.
- void [UART_DisableInterrupts](#) (UART_Type *base, uint32_t mask)
Disables the UART interrupts according to the provided mask.
- uint32_t [UART_GetEnabledInterrupts](#) (UART_Type *base)
Gets enabled UART interrupts.

Bus Operations

- static void [UART_EnableTx](#) (UART_Type *base, bool enable)
Enables or disables the UART transmitter.
- static void [UART_EnableRx](#) (UART_Type *base, bool enable)
Enables or disables the UART receiver.
- static void [UART_WriteByte](#) (UART_Type *base, uint8_t data)
Writes to the transmitter register.
- static uint8_t [UART_ReadByte](#) (UART_Type *base)
Reads the receiver register.
- [status_t UART_WriteBlocking](#) (UART_Type *base, const uint8_t *data, size_t length)
Writes to the TX register using a blocking method.
- [status_t UART_ReadBlocking](#) (UART_Type *base, uint8_t *data, size_t length)
Read RX data register using a blocking method.

Transactional

- void [UART_TransferCreateHandle](#) (UART_Type *base, uart_handle_t *handle, [uart_transfer_callback_t](#) callback, void *userData)
Initializes the UART handle.
- void [UART_TransferStartRingBuffer](#) (UART_Type *base, uart_handle_t *handle, uint8_t *ringBuffer, size_t ringBufferSize)
Sets up the RX ring buffer.
- void [UART_TransferStopRingBuffer](#) (UART_Type *base, uart_handle_t *handle)
Aborts the background transfer and uninstalls the ring buffer.
- size_t [UART_TransferGetRxRingBufferLength](#) (uart_handle_t *handle)
Get the length of received data in RX ring buffer.
- [status_t UART_TransferSendNonBlocking](#) (UART_Type *base, uart_handle_t *handle, [uart_transfer_t](#) *xfer)
Transmits a buffer of data using the interrupt method.
- void [UART_TransferAbortSend](#) (UART_Type *base, uart_handle_t *handle)
Aborts the interrupt-driven data transmit.
- [status_t UART_TransferGetSendCount](#) (UART_Type *base, uart_handle_t *handle, uint32_t *count)
Gets the number of bytes written to the UART TX register.
- [status_t UART_TransferReceiveNonBlocking](#) (UART_Type *base, uart_handle_t *handle, [uart_transfer_t](#) *xfer, size_t *receivedBytes)
Receives a buffer of data using an interrupt method.
- void [UART_TransferAbortReceive](#) (UART_Type *base, uart_handle_t *handle)
Aborts the interrupt-driven data receiving.
- [status_t UART_TransferGetReceiveCount](#) (UART_Type *base, uart_handle_t *handle, uint32_t *count)
Gets the number of bytes that have been received.
- void [UART_TransferHandleIRQ](#) (UART_Type *base, uart_handle_t *handle)
UART IRQ handle function.

DMA control functions.

- static void [UART_EnableTxDMA](#) (UART_Type *base, bool enable)
Enables or disables the UART transmitter DMA request.
- static void [UART_EnableRxDMA](#) (UART_Type *base, bool enable)
Enables or disables the UART receiver DMA request.

FIFO control functions.

- static void [UART_SetTxFifoWatermark](#) (UART_Type *base, uint8_t watermark)
This function is used to set the watermark of UART Tx FIFO.
- static void [UART_SetRxRTSWatermark](#) (UART_Type *base, uint8_t watermark)
This function is used to set the watermark of UART RTS deassertion.
- static void [UART_SetRxFifoWatermark](#) (UART_Type *base, uint8_t watermark)
This function is used to set the watermark of UART Rx FIFO.

Auto baud rate detection.

- static void [UART_EnableAutoBaudRate](#) (UART_Type *base, bool enable)
This function is used to set the enable condition of Automatic Baud Rate Detection feature.
- static bool [UART_IsAutoBaudRateComplete](#) (UART_Type *base)
This function is used to read if the automatic baud rate detection has finished.

15.2.3 Data Structure Documentation**15.2.3.1 struct uart_config_t****Data Fields**

- uint32_t [baudRate_Bps](#)
UART baud rate.
- [uart_parity_mode_t](#) [parityMode](#)
Parity error check mode of this module.
- [uart_data_bits_t](#) [dataBitsCount](#)
Data bits count, eight (default), seven.
- [uart_stop_bit_count_t](#) [stopBitCount](#)
Number of stop bits in one frame.
- uint8_t [txFifoWatermark](#)
TX FIFO watermark.
- uint8_t [rxFifoWatermark](#)
RX FIFO watermark.
- uint8_t [rxRTSWatermark](#)
RX RTS watermark, RX FIFO data count being larger than this triggers RTS deassertion.
- bool [enableAutoBaudRate](#)
Enable automatic baud rate detection.
- bool [enableTx](#)

- *Enable TX.*
bool [enableRx](#)
- *Enable RX.*
bool [enableRxRTS](#)
- *RX RTS enable.*
bool [enableTxCTS](#)
- *TX CTS enable.*

15.2.3.1.0.10 Field Documentation

15.2.3.1.0.10.1 uint32_t uart_config_t::baudRate_Bps

15.2.3.1.0.10.2 uart_parity_mode_t uart_config_t::parityMode

15.2.3.1.0.10.3 uart_stop_bit_count_t uart_config_t::stopBitCount

15.2.3.2 struct uart_transfer_t

Data Fields

- uint8_t * [data](#)
The buffer of data to be transfer.
- size_t [dataSize](#)
The byte count to be transfer.

15.2.3.2.0.11 Field Documentation

15.2.3.2.0.11.1 uint8_t* uart_transfer_t::data

15.2.3.2.0.11.2 size_t uart_transfer_t::dataSize

15.2.3.3 struct _uart_handle

Forward declaration of the handle typedef.

Data Fields

- uint8_t *volatile [txData](#)
Address of remaining data to send.
- volatile size_t [txDataSize](#)
Size of the remaining data to send.
- size_t [txDataSizeAll](#)
Size of the data to send out.
- uint8_t *volatile [rxData](#)
Address of remaining data to receive.
- volatile size_t [rxDataSize](#)
Size of the remaining data to receive.
- size_t [rxDataSizeAll](#)
Size of the data to receive.
- uint8_t * [rxRingBuffer](#)

- *Start address of the receiver ring buffer.*
size_t [rxRingBufferSize](#)
- *Size of the ring buffer.*
volatile uint16_t [rxRingBufferHead](#)
- *Index for the driver to store received data into ring buffer.*
volatile uint16_t [rxRingBufferTail](#)
- *Index for the user to get data from the ring buffer.*
[uart_transfer_callback_t](#) [callback](#)
- *Callback function.*
void * [userData](#)
- *UART callback function parameter.*
volatile uint8_t [txState](#)
- *TX transfer state.*
volatile uint8_t [rxState](#)
- *RX transfer state.*

15.2.3.3.0.12 Field Documentation

- 15.2.3.3.0.12.1 `uint8_t* volatile uart_handle_t::txData`
- 15.2.3.3.0.12.2 `volatile size_t uart_handle_t::txDataSize`
- 15.2.3.3.0.12.3 `size_t uart_handle_t::txDataSizeAll`
- 15.2.3.3.0.12.4 `uint8_t* volatile uart_handle_t::rxData`
- 15.2.3.3.0.12.5 `volatile size_t uart_handle_t::rxDataSize`
- 15.2.3.3.0.12.6 `size_t uart_handle_t::rxDataSizeAll`
- 15.2.3.3.0.12.7 `uint8_t* uart_handle_t::rxRingBuffer`
- 15.2.3.3.0.12.8 `size_t uart_handle_t::rxRingBufferSize`
- 15.2.3.3.0.12.9 `volatile uint16_t uart_handle_t::rxRingBufferHead`
- 15.2.3.3.0.12.10 `volatile uint16_t uart_handle_t::rxRingBufferTail`
- 15.2.3.3.0.12.11 `uart_transfer_callback_t uart_handle_t::callback`
- 15.2.3.3.0.12.12 `void* uart_handle_t::userData`
- 15.2.3.3.0.12.13 `volatile uint8_t uart_handle_t::txState`

15.2.4 Macro Definition Documentation

- 15.2.4.1 `#define FSL_UART_DRIVER_VERSION (MAKE_VERSION(2, 2, 0))`
- 15.2.4.2 `#define UART_RETRY_TIMES 0U /* Defining to zero means to keep waiting for the flag until it is assert/deassert. */`

15.2.5 Typedef Documentation

- 15.2.5.1 `typedef void(* uart_transfer_callback_t)(UART_Type *base, uart_handle_t *handle, status_t status, void *userData)`

15.2.6 Enumeration Type Documentation

15.2.6.1 anonymous enum

Enumerator

- kStatus_UART_TxBusy* Transmitter is busy.
- kStatus_UART_RxBusy* Receiver is busy.

kStatus_UART_TxIdle UART transmitter is idle.
kStatus_UART_RxIdle UART receiver is idle.
kStatus_UART_TxWatermarkTooLarge TX FIFO watermark too large.
kStatus_UART_RxWatermarkTooLarge RX FIFO watermark too large.
kStatus_UART_FlagCannotClearManually UART flag can't be manually cleared.
kStatus_UART_Error Error happens on UART.
kStatus_UART_RxRingBufferOverflow UART RX software ring buffer overrun.
kStatus_UART_RxHardwareOverflow UART RX receiver overrun.
kStatus_UART_NoiseError UART noise error.
kStatus_UART_FramingError UART framing error.
kStatus_UART_ParityError UART parity error.
kStatus_UART_BaudrateNotSupport Baudrate is not support in current clock source.
kStatus_UART_BreakDetect Receiver detect BREAK signal.
kStatus_UART_Timeout UART times out.

15.2.6.2 enum uart_data_bits_t

Enumerator

kUART_SevenDataBits Seven data bit.
kUART_EightDataBits Eight data bit.

15.2.6.3 enum uart_parity_mode_t

Enumerator

kUART_ParityDisabled Parity disabled.
kUART_ParityEven Even error check is selected.
kUART_ParityOdd Odd error check is selected.

15.2.6.4 enum uart_stop_bit_count_t

Enumerator

kUART_OneStopBit One stop bit.
kUART_TwoStopBit Two stop bits.

15.2.6.5 enum uart_idle_condition_t

Enumerator

kUART_IdleFor4Frames Idle for more than 4 frames.

kUART_IdleFor8Frames Idle for more than 8 frames.
kUART_IdleFor16Frames Idle for more than 16 frames.
kUART_IdleFor32Frames Idle for more than 32 frames.

15.2.6.6 enum _uart_interrupt_enable

15.2.6.7 anonymous enum

This provides constants for the UART status flags for use in the UART functions.

Enumerator

kUART_RxCharReadyFlag Rx Character Ready Flag.
kUART_RxErrorFlag Rx Error Detect Flag.
kUART_RxOverrunErrorFlag Rx Overrun Flag.
kUART_RxFrameErrorFlag Rx Frame Error Flag.
kUART_RxBreakDetectFlag Rx Break Detect Flag.
kUART_RxParityErrorFlag Rx Parity Error Flag.
kUART_ParityErrorFlag Parity Error Interrupt Flag.
kUART_RtsStatusFlag RTS_B Pin Status Flag.
kUART_TxReadyFlag Transmitter Ready Interrupt/DMA Flag.
kUART_RtsDeltaFlag RTS Delta Flag.
kUART_EscapeFlag Escape Sequence Interrupt Flag.
kUART_FrameErrorFlag Frame Error Interrupt Flag.
kUART_RxReadyFlag Receiver Ready Interrupt/DMA Flag.
kUART_AgingTimerFlag Aging Timer Interrupt Flag.
kUART_DtrDeltaFlag DTR Delta Flag.
kUART_RxDsFlag Receiver IDLE Interrupt Flag.
kUART_tAirWakeFlag Asynchronous IR WAKE Interrupt Flag.
kUART_AwakeFlag Asynchronous WAKE Interrupt Flag.
kUART_Rs485SlaveAddrMatchFlag RS-485 Slave Address Detected Interrupt Flag.
kUART_AutoBaudFlag Automatic Baud Rate Detect Complete Flag.
kUART_TxEmptyFlag Transmit Buffer FIFO Empty.
kUART_DtrFlag DTR edge triggered interrupt flag.
kUART_IdleFlag Idle Condition Flag.
kUART_AutoBaudCntStopFlag Auto-baud Counter Stopped Flag.
kUART_RiDeltaFlag Ring Indicator Delta Flag.
kUART_RiFlag Ring Indicator Input Flag.
kUART_IrFlag Serial Infrared Interrupt Flag.
kUART_WakeFlag Wake Flag.
kUART_DcdDeltaFlag Data Carrier Detect Delta Flag.
kUART_DcdFlag Data Carrier Detect Input Flag.
kUART_RtsFlag RTS Edge Triggered Interrupt Flag.
kUART_TxCompleteFlag Transmitter Complete Flag.

kUART_BreakDetectFlag BREAK Condition Detected Flag.

kUART_RxOverrunFlag Overrun Error Flag.

kUART_RxDataReadyFlag Receive Data Ready Flag.

15.2.7 Function Documentation

15.2.7.1 uint32_t UART_GetInstance (UART_Type * *base*)

Parameters

<i>base</i>	UART peripheral base address.
-------------	-------------------------------

Returns

UART instance.

15.2.7.2 static void UART_SoftwareReset (UART_Type * *base*) [inline], [static]

This function resets the transmit and receive state machines, all FIFOs and register USR1, USR2, UBIR, UBMR, UBRC , URXD, UTXD and UTS[6-3]

Parameters

<i>base</i>	UART peripheral base address.
-------------	-------------------------------

15.2.7.3 status_t UART_Init (UART_Type * *base*, const uart_config_t * *config*, uint32_t *srcClock_Hz*)

This function configures the UART module with user-defined settings. Call the [UART_GetDefault-Config\(\)](#) function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the UART.

```
*  uart_config_t uartConfig;
*  uartConfig.baudRate_Bps = 115200U;
*  uartConfig.parityMode = kUART_ParityDisabled;
*  uartConfig.dataBitsCount = kUART_EightDataBits;
*  uartConfig.stopBitCount = kUART_OneStopBit;
*  uartConfig.txFifoWatermark = 2;
*  uartConfig.rxFifoWatermark = 1;
*  uartConfig.enableAutoBaudrate = false;
*  uartConfig.enableTx = true;
*  uartConfig.enableRx = true;
*  UART_Init(UART1, &uartConfig, 24000000U);
*
```

Parameters

<i>base</i>	UART peripheral base address.
<i>config</i>	Pointer to a user-defined configuration structure.
<i>srcClock_Hz</i>	UART clock source frequency in HZ.

Return values

<i>kStatus_Success</i>	UART initialize succeed
------------------------	-------------------------

15.2.7.4 void UART_Deinit (UART_Type * *base*)

This function waits for transmit to complete, disables TX and RX, and disables the UART clock.

Parameters

<i>base</i>	UART peripheral base address.
-------------	-------------------------------

15.2.7.5 void UART_GetDefaultConfig (uart_config_t * *config*)

Gets the default configuration structure.

This function initializes the UART configuration structure to a default value. The default values are:
: uartConfig->baudRate_Bps = 115200U; uartConfig->parityMode = kUART_ParityDisabled; uartConfig->dataBitsCount = kUART_EightDataBits; uartConfig->stopBitCount = kUART_OneStopBit; uartConfig->txFifoWatermark = 2; uartConfig->rxFifoWatermark = 1; uartConfig->enableAutoBaudrate = false; uartConfig->enableTx = false; uartConfig->enableRx = false;

Parameters

<i>config</i>	Pointer to a configuration structure.
---------------	---------------------------------------

15.2.7.6 status_t UART_SetBaudRate (UART_Type * *base*, uint32_t *baudRate_Bps*, uint32_t *srcClock_Hz*)

This function configures the UART module baud rate. This function is used to update the UART module baud rate after the UART module is initialized by the UART_Init.

```
* UART_SetBaudRate(UART1, 115200U, 200000000U);
*
```

Parameters

<i>base</i>	UART peripheral base address.
<i>baudRate_Bps</i>	UART baudrate to be set.
<i>srcClock_Hz</i>	UART clock source frequency in Hz.

Return values

<i>kStatus_UART_Baudrate-NotSupport</i>	Baudrate is not support in the current clock source.
<i>kStatus_Success</i>	Set baudrate succeeded.

15.2.7.7 static void UART_Enable (UART_Type * *base*) [inline], [static]

Parameters

<i>base</i>	UART base pointer.
-------------	--------------------

15.2.7.8 static void UART_SetIdleCondition (UART_Type * *base*, uart_idle_condition_t *condition*) [inline], [static]

Parameters

<i>base</i>	UART base pointer.
<i>condition</i>	IDLE line detect condition of the enumerators in uart_idle_condition_t .

15.2.7.9 static void UART_Disable (UART_Type * *base*) [inline], [static]

Parameters

<i>base</i>	UART base pointer.
-------------	--------------------

15.2.7.10 bool UART_GetStatusFlag (UART_Type * *base*, uint32_t *flag*)

The available status flag can be select from [uart_status_flag_t](#) enumeration.

Parameters

<i>base</i>	UART base pointer.
<i>flag</i>	Status flag to check.

Return values

<i>current</i>	state of corresponding status flag.
----------------	-------------------------------------

15.2.7.11 void UART_ClearStatusFlag (UART_Type * *base*, uint32_t *flag*)

The available status flag can be select from `uart_status_flag_t` enumeration.

Parameters

<i>base</i>	UART base pointer.
<i>flag</i>	Status flag to clear.

15.2.7.12 void UART_EnableInterrupts (UART_Type * *base*, uint32_t *mask*)

This function enables the UART interrupts according to the provided mask. The mask is a logical OR of enumeration members. See [_uart_interrupt_enable](#). For example, to enable TX empty interrupt and RX data ready interrupt, do the following.

```
*  UART_EnableInterrupts(UART1, kUART_TxEmptyEnable | kUART_RxDataReadyEnable);
*
```

Parameters

<i>base</i>	UART peripheral base address.
<i>mask</i>	The interrupts to enable. Logical OR of _uart_interrupt_enable .

15.2.7.13 void UART_DisableInterrupts (UART_Type * *base*, uint32_t *mask*)

This function disables the UART interrupts according to the provided mask. The mask is a logical OR of enumeration members. See [_uart_interrupt_enable](#). For example, to disable TX empty interrupt and RX data ready interrupt do the following.

```
*  UART_EnableInterrupts(UART1, kUART_TxEmptyEnable | kUART_RxDataReadyEnable);
*
```

Parameters

<i>base</i>	UART peripheral base address.
<i>mask</i>	The interrupts to disable. Logical OR of _uart_interrupt_enable .

15.2.7.14 uint32_t UART_GetEnabledInterrupts (UART_Type * *base*)

This function gets the enabled UART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators [_uart_interrupt_enable](#). To check a specific interrupt enable status, compare the return value with enumerators in [_uart_interrupt_enable](#). For example, to check whether the TX empty interrupt is enabled:

```
*    uint32_t enabledInterrupts = UART_GetEnabledInterrupts(UART1);
*
*    if (kUART_TxEmptyEnable & enabledInterrupts)
*    {
*        ...
*    }
*
```

Parameters

<i>base</i>	UART peripheral base address.
-------------	-------------------------------

Returns

UART interrupt flags which are logical OR of the enumerators in [_uart_interrupt_enable](#).

15.2.7.15 static void UART_EnableTx (UART_Type * *base*, bool *enable*) [inline], [static]

This function enables or disables the UART transmitter.

Parameters

<i>base</i>	UART peripheral base address.
<i>enable</i>	True to enable, false to disable.

15.2.7.16 static void UART_EnableRx (UART_Type * *base*, bool *enable*) [inline], [static]

This function enables or disables the UART receiver.

Parameters

<i>base</i>	UART peripheral base address.
<i>enable</i>	True to enable, false to disable.

15.2.7.17 static void UART_WriteByte (UART_Type * *base*, uint8_t *data*) [inline], [static]

This function is used to write data to transmitter register. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

<i>base</i>	UART peripheral base address.
<i>data</i>	Data write to the TX register.

15.2.7.18 static uint8_t UART_ReadByte (UART_Type * *base*) [inline], [static]

This function is used to read data from receiver register. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

<i>base</i>	UART peripheral base address.
-------------	-------------------------------

Returns

Data read from data register.

15.2.7.19 status_t UART_WriteBlocking (UART_Type * *base*, const uint8_t * *data*, size_t *length*)

This function polls the TX register, waits for the TX register to be empty or for the TX FIFO to have room and writes data to the TX buffer.

Parameters

<i>base</i>	UART peripheral base address.
<i>data</i>	Start address of the data to write.
<i>length</i>	Size of the data to write.

Return values

<i>kStatus_UART_Timeout</i>	Transmission timed out and was aborted.
<i>kStatus_Success</i>	Successfully wrote all data.

15.2.7.20 **status_t UART_ReadBlocking (UART_Type * *base*, uint8_t * *data*, size_t *length*)**

This function polls the RX register, waits for the RX register to be full or for RX FIFO to have data, and reads data from the TX register.

Parameters

<i>base</i>	UART peripheral base address.
<i>data</i>	Start address of the buffer to store the received data.
<i>length</i>	Size of the buffer.

Return values

<i>kStatus_UART_Rx-HardwareOverrun</i>	Receiver overrun occurred while receiving data.
<i>kStatus_UART_Noise-Error</i>	A noise error occurred while receiving data.
<i>kStatus_UART_Framing-Error</i>	A framing error occurred while receiving data.
<i>kStatus_UART_Parity-Error</i>	A parity error occurred while receiving data.
<i>kStatus_UART_Timeout</i>	Transmission timed out and was aborted.
<i>kStatus_Success</i>	Successfully received all data.

15.2.7.21 **void UART_TransferCreateHandle (UART_Type * *base*, uart_handle_t * *handle*, uart_transfer_callback_t *callback*, void * *userData*)**

This function initializes the UART handle which can be used for other UART transactional APIs. Usually, for a specified UART instance, call this API once to get the initialized handle.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.
<i>callback</i>	The callback function.
<i>userData</i>	The parameter of the callback function.

15.2.7.22 void UART_TransferStartRingBuffer (UART_Type * *base*, uart_handle_t * *handle*, uint8_t * *ringBuffer*, size_t *ringBufferSize*)

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received are stored into the ring buffer even when the user doesn't call the [UART_TransferReceiveNonBlocking\(\)](#) API. If data is already received in the ring buffer, the user can get the received data from the ring buffer directly.

Note

When using the RX ring buffer, one byte is reserved for internal use. In other words, if `ringBufferSize` is 32, only 31 bytes are used for saving data.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.
<i>ringBuffer</i>	Start address of the ring buffer for background receiving. Pass NULL to disable the ring buffer.
<i>ringBufferSize</i>	Size of the ring buffer.

15.2.7.23 void UART_TransferStopRingBuffer (UART_Type * *base*, uart_handle_t * *handle*)

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.

15.2.7.24 **size_t UART_TransferGetRxRingBufferLength (uart_handle_t * *handle*)**

Parameters

<i>handle</i>	UART handle pointer.
---------------	----------------------

Returns

Length of received data in RX ring buffer.

15.2.7.25 **status_t UART_TransferSendNonBlocking (UART_Type * *base*, uart_handle_t * *handle*, uart_transfer_t * *xfer*)**

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in the ISR, the UART driver calls the callback function and passes the [kStatus_UART_TxIdle](#) as status parameter.

Note

The [kStatus_UART_TxIdle](#) is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out. Before disabling the TX, check the [kUART_TransmissionCompleteFlag](#) to ensure that the TX is finished.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.
<i>xfer</i>	UART transfer structure. See uart_transfer_t .

Return values

<i>kStatus_Success</i>	Successfully start the data transmission.
<i>kStatus_UART_TxBusy</i>	Previous transmission still not finished; data not all written to TX register yet.
<i>kStatus_InvalidArgument</i>	Invalid argument.

15.2.7.26 void UART_TransferAbortSend (UART_Type * *base*, uart_handle_t * *handle*)

This function aborts the interrupt-driven data sending. The user can get the remainBytes to find out how many bytes are not sent out.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.

15.2.7.27 status_t UART_TransferGetSendCount (UART_Type * *base*, uart_handle_t * *handle*, uint32_t * *count*)

This function gets the number of bytes written to the UART TX register by using the interrupt method.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.
<i>count</i>	Send bytes count.

Return values

<i>kStatus_NoTransferInProgress</i>	No send in progress.
<i>kStatus_InvalidArgument</i>	The parameter is invalid.
<i>kStatus_Success</i>	Get successfully through the parameter <i>count</i> ;

15.2.7.28 status_t UART_TransferReceiveNonBlocking (UART_Type * *base*, uart_handle_t * *handle*, uart_transfer_t * *xfer*, size_t * *receivedBytes*)

This function receives data using an interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter *receivedBytes* shows how many bytes are copied from the ring

buffer. After copying, if the data in the ring buffer is not enough to read, the receive request is saved by the UART driver. When the new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer. The 5 bytes are copied to the `xfer->data` and this function returns with the parameter `receivedBytes` set to 5. For the left 5 bytes, newly arrived data is saved from the `xfer->data[5]`. When 5 bytes are received, the UART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to the `xfer->data`. When all data is received, the upper layer is notified.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.
<i>xfer</i>	UART transfer structure, see uart_transfer_t .
<i>receivedBytes</i>	Bytes received from the ring buffer directly.

Return values

<i>kStatus_Success</i>	Successfully queue the transfer into transmit queue.
<i>kStatus_UART_RxBusy</i>	Previous receive request is not finished.
<i>kStatus_InvalidArgument</i>	Invalid argument.

15.2.7.29 void UART_TransferAbortReceive (UART_Type * *base*, uart_handle_t * *handle*)

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to know how many bytes are not received yet.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.

15.2.7.30 status_t UART_TransferGetReceiveCount (UART_Type * *base*, uart_handle_t * *handle*, uint32_t * *count*)

This function gets the number of bytes that have been received.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.
<i>count</i>	Receive bytes count.

Return values

<i>kStatus_NoTransferInProgress</i>	No receive in progress.
<i>kStatus_InvalidArgument</i>	Parameter is invalid.
<i>kStatus_Success</i>	Get successfully through the parameter count;

15.2.7.31 void UART_TransferHandleIRQ (UART_Type * *base*, uart_handle_t * *handle*)

This function handles the UART transmit and receive IRQ request.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.

15.2.7.32 static void UART_EnableTxDMA (UART_Type * *base*, bool *enable*) [inline], [static]

This function enables or disables the transmit request when the transmitter has one or more slots available in the TxFIFO. The fill level in the TxFIFO that generates the DMA request is controlled by the TXTL bits.

Parameters

<i>base</i>	UART peripheral base address.
<i>enable</i>	True to enable, false to disable.

15.2.7.33 static void UART_EnableRxDMA (UART_Type * *base*, bool *enable*) [inline], [static]

This function enables or disables the receive request when the receiver has data in the Rx FIFO. The fill level in the Rx FIFO at which a DMA request is generated is controlled by the RXTL bits .

Parameters

<i>base</i>	UART peripheral base address.
<i>enable</i>	True to enable, false to disable.

15.2.7.34 static void UART_SetTxFifoWatermark (UART_Type * *base*, uint8_t *watermark*) [inline], [static]

A maskable interrupt is generated whenever the data level in the TxFIFO falls below the Tx FIFO watermark.

Parameters

<i>base</i>	UART base pointer.
<i>watermark</i>	The Tx FIFO watermark.

15.2.7.35 static void UART_SetRxRTSWatermark (UART_Type * *base*, uint8_t *watermark*) [inline], [static]

The RTS signal deasserts whenever the data count in RxFIFO reaches the Rx RTS watermark.

Parameters

<i>base</i>	UART base pointer.
<i>watermark</i>	The Rx RTS watermark.

15.2.7.36 static void UART_SetRxFifoWatermark (UART_Type * *base*, uint8_t *watermark*) [inline], [static]

A maskable interrupt is generated whenever the data level in the RxFIFO reaches the Rx FIFO watermark.

Parameters

<i>base</i>	UART base pointer.
-------------	--------------------

<i>watermark</i>	The Rx FIFO watermark.
------------------	------------------------

15.2.7.37 static void UART_EnableAutoBaudRate (UART_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	UART base pointer.
<i>enable</i>	Enable/Disable Automatic Baud Rate Detection feature. <ul style="list-style-type: none"> • true: Enable Automatic Baud Rate Detection feature. • false: Disable Automatic Baud Rate Detection feature.

15.2.7.38 static bool UART_IsAutoBaudRateComplete (UART_Type * *base*) [inline], [static]

Parameters

<i>base</i>	UART base pointer.
-------------	--------------------

Returns

- true: Automatic baud rate detection has finished.
 - false: Automatic baud rate detection has not finished.

UART FreeRTOS Driver

15.3.1 Overview

Data Structures

- struct [uart_rtos_config_t](#)
UART configuration structure. [More...](#)

Driver version

- #define [FSL_UART_FREERTOS_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 1, 1))
UART FreeRTOS driver version 2.1.1.

UART RTOS Operation

- int [UART_RTOS_Init](#) (uart_rtos_handle_t *handle, uart_handle_t *t_handle, const [uart_rtos_config_t](#) *cfg)
Initializes a UART instance for operation in RTOS.
- int [UART_RTOS_Deinit](#) (uart_rtos_handle_t *handle)
Deinitializes a UART instance for operation.

UART transactional Operation

- int [UART_RTOS_Send](#) (uart_rtos_handle_t *handle, uint8_t *buffer, uint32_t length)
Sends data in the background.
- int [UART_RTOS_Receive](#) (uart_rtos_handle_t *handle, uint8_t *buffer, uint32_t length, size_t *received)
Receives data.

15.3.2 Data Structure Documentation

15.3.2.1 struct uart_rtos_config_t

Data Fields

- UART_Type * [base](#)
UART base address.
- uint32_t [srcclk](#)
UART source clock in Hz.
- uint32_t [baudrate](#)
Desired communication speed.
- [uart_parity_mode_t](#) [parity](#)
Parity setting.

- `uart_stop_bit_count_t` stopbits
Number of stop bits to use.
- `uint8_t * buffer`
Buffer for background reception.
- `uint32_t buffer_size`
Size of buffer for background reception.

15.3.3 Macro Definition Documentation

15.3.3.1 `#define FSL_UART_FREERTOS_DRIVER_VERSION (MAKE_VERSION(2, 1, 1))`

15.3.4 Function Documentation

15.3.4.1 `int UART_RTOS_Init (uart_rtos_handle_t * handle, uart_handle_t * t_handle, const uart_rtos_config_t * cfg)`

Parameters

<i>handle</i>	The RTOS UART handle, the pointer to an allocated space for RTOS context.
<i>t_handle</i>	The pointer to the allocated space to store the transactional layer internal state.
<i>cfg</i>	The pointer to the parameters required to configure the UART after initialization.

Returns

0 succeed; otherwise fail.

15.3.4.2 `int UART_RTOS_Deinit (uart_rtos_handle_t * handle)`

This function deinitializes the UART module, sets all register values to reset value, and frees the resources.

Parameters

<i>handle</i>	The RTOS UART handle.
---------------	-----------------------

15.3.4.3 `int UART_RTOS_Send (uart_rtos_handle_t * handle, uint8_t * buffer, uint32_t length)`

This function sends data. It is a synchronous API. If the hardware buffer is full, the task is in the blocked state.

Parameters

<i>handle</i>	The RTOS UART handle.
<i>buffer</i>	The pointer to the buffer to send.
<i>length</i>	The number of bytes to send.

15.3.4.4 int UART_RTOS_Receive (uart_rtos_handle_t * *handle*, uint8_t * *buffer*, uint32_t *length*, size_t * *received*)

This function receives data from UART. It is a synchronous API. If data is immediately available, it is returned immediately and the number of bytes received.

Parameters

<i>handle</i>	The RTOS UART handle.
<i>buffer</i>	The pointer to the buffer to write received data.
<i>length</i>	The number of bytes to receive.
<i>received</i>	The pointer to a variable of size_t where the number of received data is filled.

Chapter 16

MU: Messaging Unit

Overview

The MCUXpresso SDK provides a driver for the MU module of MCUXpresso SDK devices.

Function description

The MU driver provides these functions:

- Functions to initialize the MU module.
- Functions to send and receive messages.
- Functions for MU flags for both MU sides.
- Functions for status flags and interrupts.
- Other miscellaneous functions.

16.2.1 MU initialization

The function [MU_Init\(\)](#) initializes the MU module and enables the MU clock. It should be called before any other MU functions.

The function [MU_Deinit\(\)](#) deinitializes the MU module and disables the MU clock. No MU functions can be called after this function.

16.2.2 MU message

The MU message must be sent when the transmit register is empty. The MU driver provides blocking API and non-blocking API to send message.

The [MU_SendMsgNonBlocking\(\)](#) function writes a message to the MU transmit register without checking the transmit register status. The upper layer should check that the transmit register is empty before calling this function. This function can be used in the ISR for better performance.

The [MU_SendMsg\(\)](#) function is a blocking function. It waits until the transmit register is empty and sends the message.

Correspondingly, there are blocking and non-blocking APIs for receiving a message. The [MU_ReadMsgNonBlocking\(\)](#) function is a non-blocking API. The [MU_ReadMsg\(\)](#) function is the blocking API.

16.2.3 MU flags

The MU driver provides 3-bit general purpose flags. When the flags are set on one side, they are reflected on the other side.

The MU flags must be set when the previous flags have been updated to the other side. The MU driver provides a non-blocking function and a blocking function. The blocking function [MU_SetFlags\(\)](#) waits until previous flags have been updated to the other side and then sets flags. The non-blocking function sets the flags directly. Ensure that the `kMU_FlagsUpdatingFlag` is not pending before calling this function.

The function [MU_GetFlags\(\)](#) gets the MU flags on the current side.

16.2.4 Status and interrupt

The function [MU_GetStatusFlags\(\)](#) returns all MU status flags. Use the `_mu_status_flags` to check for specific flags, for example, to check RX0 and RX1 register full, use the following code:

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/mu`. The receive full flags are cleared automatically after messages are read out. The transmit empty flags are cleared automatically after new messages are written to the transmit register. The general purpose interrupt flags must be cleared manually using the function [MU_ClearStatusFlags\(\)](#).

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/mu`. To enable or disable a specific interrupt, use [MU_EnableInterrupts\(\)](#) and [MU_DisableInterrupts\(\)](#) functions. The interrupts to enable or disable should be passed in as a bit mask of the `_mu_interrupt_enable`.

The [MU_TriggerInterrupts\(\)](#) function triggers general purpose interrupts and NMI to the other core. The interrupts to trigger are passed in as a bit mask of the `_mu_interrupt_trigger`. If previously triggered interrupts have not been processed by the other side, this function returns an error.

16.2.5 MU misc functions

The [MU_BootCoreB\(\)](#) and [MU_HoldCoreBReset\(\)](#) functions should only be used from A side. They are used to boot the core B or to hold core B in reset.

The [MU_ResetBothSides\(\)](#) function resets MU at both A and B sides. However, only the A side can call this function.

If a core enters stop mode, the platform clock of this core is disabled by default. The function [MU_SetClockOnOtherCoreEnable\(\)](#) forces the other core's platform clock to remain enabled even after that core has entered a stop mode. In this case, the other core's platform clock keeps running until the current core enters stop mode too.

Function [MU_GetOtherCorePowerMode\(\)](#) gets the power mode of the other core.

Enumerations

- enum `_mu_status_flags` {
`kMU_Tx0EmptyFlag` = (1U << (MU_SR_TEn_SHIFT + 3U)),
`kMU_Tx1EmptyFlag` = (1U << (MU_SR_TEn_SHIFT + 2U)),
`kMU_Tx2EmptyFlag` = (1U << (MU_SR_TEn_SHIFT + 1U)),
`kMU_Tx3EmptyFlag` = (1U << (MU_SR_TEn_SHIFT + 0U)),
`kMU_Rx0FullFlag` = (1U << (MU_SR_RFn_SHIFT + 3U)),
`kMU_Rx1FullFlag` = (1U << (MU_SR_RFn_SHIFT + 2U)),
`kMU_Rx2FullFlag` = (1U << (MU_SR_RFn_SHIFT + 1U)),
`kMU_Rx3FullFlag` = (1U << (MU_SR_RFn_SHIFT + 0U)),
`kMU_GenInt0Flag` = (1U << (MU_SR_GIPn_SHIFT + 3U)),
`kMU_GenInt1Flag` = (1U << (MU_SR_GIPn_SHIFT + 2U)),
`kMU_GenInt2Flag` = (1U << (MU_SR_GIPn_SHIFT + 1U)),
`kMU_GenInt3Flag` = (1U << (MU_SR_GIPn_SHIFT + 0U)),
`kMU_EventPendingFlag` = MU_SR_EP_MASK,
`kMU_FlagsUpdatingFlag` = MU_SR_FUP_MASK,
`kMU_OtherSideInResetFlag` = MU_SR_RS_MASK }
MU status flags.
- enum `_mu_interrupt_enable` {
`kMU_Tx0EmptyInterruptEnable` = (1U << (MU_CR_TIEEn_SHIFT + 3U)),
`kMU_Tx1EmptyInterruptEnable` = (1U << (MU_CR_TIEEn_SHIFT + 2U)),
`kMU_Tx2EmptyInterruptEnable` = (1U << (MU_CR_TIEEn_SHIFT + 1U)),
`kMU_Tx3EmptyInterruptEnable` = (1U << (MU_CR_TIEEn_SHIFT + 0U)),
`kMU_Rx0FullInterruptEnable` = (1U << (MU_CR_RIEEn_SHIFT + 3U)),
`kMU_Rx1FullInterruptEnable` = (1U << (MU_CR_RIEEn_SHIFT + 2U)),
`kMU_Rx2FullInterruptEnable` = (1U << (MU_CR_RIEEn_SHIFT + 1U)),
`kMU_Rx3FullInterruptEnable` = (1U << (MU_CR_RIEEn_SHIFT + 0U)),
`kMU_GenInt0InterruptEnable` = (int)(1U << (MU_CR_GIEEn_SHIFT + 3U)),
`kMU_GenInt1InterruptEnable` = (1U << (MU_CR_GIEEn_SHIFT + 2U)),
`kMU_GenInt2InterruptEnable` = (1U << (MU_CR_GIEEn_SHIFT + 1U)),
`kMU_GenInt3InterruptEnable` = (1U << (MU_CR_GIEEn_SHIFT + 0U)) }
MU interrupt source to enable.
- enum `_mu_interrupt_trigger` {
`kMU_GenInt0InterruptTrigger` = (1U << (MU_CR_GIRn_SHIFT + 3U)),
`kMU_GenInt1InterruptTrigger` = (1U << (MU_CR_GIRn_SHIFT + 2U)),
`kMU_GenInt2InterruptTrigger` = (1U << (MU_CR_GIRn_SHIFT + 1U)),
`kMU_GenInt3InterruptTrigger` = (1U << (MU_CR_GIRn_SHIFT + 0U)) }
MU interrupt that could be triggered to the other core.

Driver version

- #define `FSL_MU_DRIVER_VERSION` (MAKE_VERSION(2, 0, 6))
MU driver version.

MU initialization.

- void [MU_Init](#) (MU_Type *base)
Initializes the MU module.
- void [MU_Deinit](#) (MU_Type *base)
De-initializes the MU module.

MU Message

- static void [MU_SendMsgNonBlocking](#) (MU_Type *base, uint32_t regIndex, uint32_t msg)
Writes a message to the TX register.
- void [MU_SendMsg](#) (MU_Type *base, uint32_t regIndex, uint32_t msg)
Blocks to send a message.
- static uint32_t [MU_ReceiveMsgNonBlocking](#) (MU_Type *base, uint32_t regIndex)
Reads a message from the RX register.
- uint32_t [MU_ReceiveMsg](#) (MU_Type *base, uint32_t regIndex)
Blocks to receive a message.

MU Flags

- static void [MU_SetFlagsNonBlocking](#) (MU_Type *base, uint32_t flags)
Sets the 3-bit MU flags reflect on the other MU side.
- void [MU_SetFlags](#) (MU_Type *base, uint32_t flags)
Blocks setting the 3-bit MU flags reflect on the other MU side.
- static uint32_t [MU_GetFlags](#) (MU_Type *base)
Gets the current value of the 3-bit MU flags set by the other side.

Status and Interrupt.

- static uint32_t [MU_GetStatusFlags](#) (MU_Type *base)
Gets the MU status flags.
- static uint32_t [MU_GetInterruptsPending](#) (MU_Type *base)
Gets the MU IRQ pending status.
- static void [MU_ClearStatusFlags](#) (MU_Type *base, uint32_t mask)
Clears the specific MU status flags.
- static void [MU_EnableInterrupts](#) (MU_Type *base, uint32_t mask)
Enables the specific MU interrupts.
- static void [MU_DisableInterrupts](#) (MU_Type *base, uint32_t mask)
Disables the specific MU interrupts.
- [status_t](#) [MU_TriggerInterrupts](#) (MU_Type *base, uint32_t mask)
Triggers interrupts to the other core.

MU misc functions

- static void [MU_MaskHardwareReset](#) (MU_Type *base, bool mask)
Mask hardware reset by the other core.

Macro Definition Documentation

16.3.1 #define FSL_MU_DRIVER_VERSION (MAKE_VERSION(2, 0, 6))

Enumeration Type Documentation

16.4.1 enum _mu_status_flags

Enumerator

kMU_Tx0EmptyFlag TX0 empty.
kMU_Tx1EmptyFlag TX1 empty.
kMU_Tx2EmptyFlag TX2 empty.
kMU_Tx3EmptyFlag TX3 empty.
kMU_Rx0FullFlag RX0 full.
kMU_Rx1FullFlag RX1 full.
kMU_Rx2FullFlag RX2 full.
kMU_Rx3FullFlag RX3 full.
kMU_GenInt0Flag General purpose interrupt 0 pending.
kMU_GenInt1Flag General purpose interrupt 0 pending.
kMU_GenInt2Flag General purpose interrupt 0 pending.
kMU_GenInt3Flag General purpose interrupt 0 pending.
kMU_EventPendingFlag MU event pending.
kMU_FlagsUpdatingFlag MU flags update is on-going.
kMU_OtherSideInResetFlag The other side is in reset.

16.4.2 enum _mu_interrupt_enable

Enumerator

kMU_Tx0EmptyInterruptEnable TX0 empty.
kMU_Tx1EmptyInterruptEnable TX1 empty.
kMU_Tx2EmptyInterruptEnable TX2 empty.
kMU_Tx3EmptyInterruptEnable TX3 empty.
kMU_Rx0FullInterruptEnable RX0 full.
kMU_Rx1FullInterruptEnable RX1 full.
kMU_Rx2FullInterruptEnable RX2 full.
kMU_Rx3FullInterruptEnable RX3 full.
kMU_GenInt0InterruptEnable General purpose interrupt 0.
kMU_GenInt1InterruptEnable General purpose interrupt 1.
kMU_GenInt2InterruptEnable General purpose interrupt 2.
kMU_GenInt3InterruptEnable General purpose interrupt 3.

16.4.3 enum _mu_interrupt_trigger

Enumerator

kMU_GenInt0InterruptTrigger General purpose interrupt 0.

kMU_GenInt1InterruptTrigger General purpose interrupt 1.
kMU_GenInt2InterruptTrigger General purpose interrupt 2.
kMU_GenInt3InterruptTrigger General purpose interrupt 3.

Function Documentation

16.5.1 void MU_Init (MU_Type * *base*)

This function enables the MU clock only.

Parameters

<i>base</i>	MU peripheral base address.
-------------	-----------------------------

16.5.2 void MU_Deinit (MU_Type * *base*)

This function disables the MU clock only.

Parameters

<i>base</i>	MU peripheral base address.
-------------	-----------------------------

16.5.3 static void MU_SendMsgNonBlocking (MU_Type * *base*, uint32_t *regIndex*, uint32_t *msg*) [inline], [static]

This function writes a message to the specific TX register. It does not check whether the TX register is empty or not. The upper layer should make sure the TX register is empty before calling this function. This function can be used in ISR for better performance.

```
* while (!(kMU_Tx0EmptyFlag & MU_GetStatusFlags(base))) { } Wait for TX0
  register empty.
* MU_SendMsgNonBlocking(base, 0U, MSG_VAL); Write message to the TX0 register.
*
```

Parameters

<i>base</i>	MU peripheral base address.
-------------	-----------------------------

<i>regIndex</i>	TX register index.
<i>msg</i>	Message to send.

16.5.4 void MU_SendMsg (MU_Type * *base*, uint32_t *regIndex*, uint32_t *msg*)

This function waits until the TX register is empty and sends the message.

Parameters

<i>base</i>	MU peripheral base address.
<i>regIndex</i>	TX register index.
<i>msg</i>	Message to send.

16.5.5 static uint32_t MU_ReceiveMsgNonBlocking (MU_Type * *base*, uint32_t *regIndex*) [inline], [static]

This function reads a message from the specific RX register. It does not check whether the RX register is full or not. The upper layer should make sure the RX register is full before calling this function. This function can be used in ISR for better performance.

```
* uint32_t msg;
* while (!(kMU_Rx0FullFlag & MU_GetStatusFlags(base)))
* {
* } Wait for the RX0 register full.
*
* msg = MU_ReceiveMsgNonBlocking(base, 0U); Read message from RX0 register.
*
```

Parameters

<i>base</i>	MU peripheral base address.
<i>regIndex</i>	TX register index.

Returns

The received message.

16.5.6 uint32_t MU_ReceiveMsg (MU_Type * *base*, uint32_t *regIndex*)

This function waits until the RX register is full and receives the message.

Parameters

<i>base</i>	MU peripheral base address.
<i>regIndex</i>	RX register index.

Returns

The received message.

16.5.7 static void MU_SetFlagsNonBlocking (MU_Type * *base*, uint32_t *flags*) [inline], [static]

This function sets the 3-bit MU flags directly. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. The upper layer should make sure the status flag kMU_FlagsUpdatingFlag is cleared before calling this function.

```
* while (kMU_FlagsUpdatingFlag & MU_GetStatusFlags(base))
* {
*   Wait for previous MU flags updating.
* }
* MU_SetFlagsNonBlocking(base, 0U); Set the mU flags.
*
```

Parameters

<i>base</i>	MU peripheral base address.
<i>flags</i>	The 3-bit MU flags to set.

16.5.8 void MU_SetFlags (MU_Type * *base*, uint32_t *flags*)

This function blocks setting the 3-bit MU flags. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. This function waits for the MU status flag kMU_FlagsUpdatingFlag cleared and sets the 3-bit MU flags.

Parameters

<i>base</i>	MU peripheral base address.
<i>flags</i>	The 3-bit MU flags to set.

16.5.9 static uint32_t MU_GetFlags (MU_Type * *base*) [inline], [static]

This function gets the current 3-bit MU flags on the current side.

Parameters

<i>base</i>	MU peripheral base address.
-------------	-----------------------------

Returns

flags Current value of the 3-bit flags.

16.5.10 static uint32_t MU_GetStatusFlags (MU_Type * *base*) [inline], [static]

This function returns the bit mask of the MU status flags. See `_mu_status_flags`.

```
* uint32_t flags;
* flags = MU_GetStatusFlags(base); Get all status flags.
* if (kMU_Tx0EmptyFlag & flags)
* {
*     The TX0 register is empty. Message can be sent.
*     MU_SendMsgNonBlocking(base, 0U, MSG0_VAL);
* }
* if (kMU_Tx1EmptyFlag & flags)
* {
*     The TX1 register is empty. Message can be sent.
*     MU_SendMsgNonBlocking(base, 1U, MSG1_VAL);
* }
*
```

Parameters

<i>base</i>	MU peripheral base address.
-------------	-----------------------------

Returns

Bit mask of the MU status flags, see `_mu_status_flags`.

16.5.11 `static uint32_t MU_GetInterruptsPending (MU_Type * base) [inline],
[static]`

This function returns the bit mask of the pending MU IRQs.

Parameters

<i>base</i>	MU peripheral base address.
-------------	-----------------------------

Returns

Bit mask of the MU IRQs pending.

16.5.12 static void MU_ClearStatusFlags (MU_Type * *base*, uint32_t *mask*) [inline], [static]

This function clears the specific MU status flags. The flags to clear should be passed in as bit mask. See `_mu_status_flags`.

```
* Clear general interrupt 0 and general interrupt 1 pending flags.
* MU_ClearStatusFlags(base, kMU_GenInt0Flag |
    kMU_GenInt1Flag);
*
```

Parameters

<i>base</i>	MU peripheral base address.
<i>mask</i>	Bit mask of the MU status flags. See <code>_mu_status_flags</code> . The following flags are cleared by hardware, this function could not clear them. <ul style="list-style-type: none"> • kMU_Tx0EmptyFlag • kMU_Tx1EmptyFlag • kMU_Tx2EmptyFlag • kMU_Tx3EmptyFlag • kMU_Rx0FullFlag • kMU_Rx1FullFlag • kMU_Rx2FullFlag • kMU_Rx3FullFlag • kMU_EventPendingFlag • kMU_FlagsUpdatingFlag • kMU_OtherSideInResetFlag

16.5.13 static void MU_EnableInterrupts (MU_Type * *base*, uint32_t *mask*) [inline], [static]

This function enables the specific MU interrupts. The interrupts to enable should be passed in as bit mask. See `_mu_interrupt_enable`.

```

*   Enable general interrupt 0 and TX0 empty interrupt.
*   MU_EnableInterrupts(base, kMU_GenInt0InterruptEnable |
*       kMU_Tx0EmptyInterruptEnable);
*

```

Parameters

<i>base</i>	MU peripheral base address.
<i>mask</i>	Bit mask of the MU interrupts. See <code>_mu_interrupt_enable</code> .

16.5.14 static void MU_DisableInterrupts (MU_Type * *base*, uint32_t *mask*) [inline], [static]

This function disables the specific MU interrupts. The interrupts to disable should be passed in as bit mask. See `_mu_interrupt_enable`.

```

*   Disable general interrupt 0 and TX0 empty interrupt.
*   MU_DisableInterrupts(base, kMU_GenInt0InterruptEnable |
*       kMU_Tx0EmptyInterruptEnable);
*

```

Parameters

<i>base</i>	MU peripheral base address.
<i>mask</i>	Bit mask of the MU interrupts. See <code>_mu_interrupt_enable</code> .

16.5.15 status_t MU_TriggerInterrupts (MU_Type * *base*, uint32_t *mask*)

This function triggers the specific interrupts to the other core. The interrupts to trigger are passed in as bit mask. See `_mu_interrupt_trigger`. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```

*   if (kStatus_Success != MU_TriggerInterrupts(base,
*       kMU_GenInt0InterruptTrigger |
*       kMU_GenInt2InterruptTrigger))
*   {
*       Previous general purpose interrupt 0 or general purpose interrupt 2
*       has not been processed by the other core.
*   }
*

```

Parameters

<i>base</i>	MU peripheral base address.
<i>mask</i>	Bit mask of the interrupts to trigger. See <code>_mu_interrupt_trigger</code> .

Return values

<i>kStatus_Success</i>	Interrupts have been triggered successfully.
<i>kStatus_Fail</i>	Previous interrupts have not been accepted.

16.5.16 `static void MU_MaskHardwareReset (MU_Type * base, bool mask)` `[inline], [static]`

The other core could call `MU_HardwareResetOtherCore()` to reset current core. To mask the reset, call this function and pass in true.

Parameters

<i>base</i>	MU peripheral base address.
<i>mask</i>	Pass true to mask the hardware reset, pass false to unmask it.



Chapter 17

PDM: Microphone Interface

Overview

Modules

- [PDM Driver](#)

PDM Driver

17.2.1 Overview

The MCUXpresso SDK provides a peripheral driver for the Microphone Interface (PDM) module of MCUXpresso SDK devices.

PDM driver includes functional APIs and transactional APIs.

Functional APIs target low-level APIs. Functional APIs can be used for PDM initialization, configuration, and operation for the optimization and customization purpose. Using the functional API requires the knowledge of the PDM peripheral and how to organize functional APIs to meet the application requirements. All functional API use the peripheral base address as the first parameter. PDM functional operation groups provide the functional API set.

Transactional APIs target high-level APIs. Transactional APIs can be used to enable the peripheral and in the application if the code size and performance of transactional APIs satisfy the requirements. If the code size and performance are a critical requirement, see the transactional API implementation and write a custom code. Initialize the handle by calling the [PDM_TransferCreateHandle\(\)](#) API.

Transactional APIs support asynchronous transfer. This means that the functions [PDM_TransferReceiveNonBlocking\(\)](#) set up the interrupt for data transfer. When the transfer completes, the upper layer is notified through a callback function with `kStatus_PDM_Idle` status.

17.2.2 Typical use case

17.2.2.1 PDM receive using an interrupt method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/pdm-_interrupt`

17.2.2.2 PDM receive using a SDMA method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/pdm/pdm-_sdma_transfer`

17.2.2.3 PDM receive using a EDMA method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/pdm/pdm-_edma_transfer` Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/pdm/pdm_sai_edma` Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/pdm/pdm_sai_multi_channel_edma`

17.2.2.4 PDM receive using a transactional method

Refer to the driver examples codes located at <SDK_ROOT>/boards/<BOARD>/driver_examples/pdm/pdm-interrupt_transfer

Data Structures

- struct [pdm_channel_config_t](#)
PDM channel configurations. [More...](#)
- struct [pdm_config_t](#)
PDM user configuration structure. [More...](#)
- struct [pdm_hwvad_config_t](#)
PDM voice activity detector user configuration structure. [More...](#)
- struct [pdm_hwvad_noise_filter_t](#)
PDM voice activity detector noise filter user configuration structure. [More...](#)
- struct [pdm_hwvad_zero_cross_detector_t](#)
PDM voice activity detector zero cross detector configuration structure. [More...](#)
- struct [pdm_transfer_t](#)
PDM SDMA transfer structure. [More...](#)
- struct [pdm_handle_t](#)
PDM handle structure. [More...](#)

Macros

- #define [PDM_XFER_QUEUE_SIZE](#) (4U)
PDM XFER QUEUE SIZE.

Typedefs

- typedef void(* [pdm_transfer_callback_t](#))(PDM_Type *base, pdm_handle_t *handle, [status_t](#) status, void *userData)
PDM transfer callback prototype.

Enumerations

- enum {
[kStatus_PDM_Busy](#) = MAKE_STATUS(kStatusGroup_PDM, 0),
[kStatus_PDM_CLK_LOW](#) = MAKE_STATUS(kStatusGroup_PDM, 1),
[kStatus_PDM_FIFO_ERROR](#) = MAKE_STATUS(kStatusGroup_PDM, 2),
[kStatus_PDM_QueueFull](#) = MAKE_STATUS(kStatusGroup_PDM, 3),
[kStatus_PDM_Idle](#) = MAKE_STATUS(kStatusGroup_PDM, 4),
[kStatus_PDM_Output_ERROR](#) = MAKE_STATUS(kStatusGroup_PDM, 5),
[kStatus_PDM_ChannelConfig_Failed](#) = MAKE_STATUS(kStatusGroup_PDM, 6) }
PDM return status.

- enum `_pdm_interrupt_enable` {
`kPDM_ErrorInterruptEnable` = `PDM_CTRL_1_ERREN_MASK`,
`kPDM_FIFOInterruptEnable` = `PDM_CTRL_1_DISEL(2U)` }
The PDM interrupt enable flag.
- enum `_pdm_internal_status` {
`kPDM_StatusDfBusyFlag` = `(int)PDM_STAT_BSY_FIL_MASK`,
`kPDM_StatusFIRFilterReady` = `PDM_STAT_FIR_RDY_MASK`,
`kPDM_StatusFrequencyLow` = `PDM_STAT_LOWFREQF_MASK`,
`kPDM_StatusCh0FifoDataAvaliable` = `PDM_STAT_CH0F_MASK`,
`kPDM_StatusCh1FifoDataAvaliable` = `PDM_STAT_CH1F_MASK`,
`kPDM_StatusCh2FifoDataAvaliable` = `PDM_STAT_CH2F_MASK`,
`kPDM_StatusCh3FifoDataAvaliable` = `PDM_STAT_CH3F_MASK`,
`kPDM_StatusCh4FifoDataAvaliable` = `PDM_STAT_CH4F_MASK`,
`kPDM_StatusCh5FifoDataAvaliable` = `PDM_STAT_CH5F_MASK`,
`kPDM_StatusCh6FifoDataAvaliable` = `PDM_STAT_CH6F_MASK`,
`kPDM_StatusCh7FifoDataAvaliable` = `PDM_STAT_CH7F_MASK` }
The PDM status.
- enum `_pdm_channel_enable_mask` {
`kPDM_EnableChannel0` = `PDM_STAT_CH0F_MASK`,
`kPDM_EnableChannel1` = `PDM_STAT_CH1F_MASK`,
`kPDM_EnableChannel2` = `PDM_STAT_CH2F_MASK`,
`kPDM_EnableChannel3` = `PDM_STAT_CH3F_MASK`,
`kPDM_EnableChannel4` = `PDM_STAT_CH4F_MASK`,
`kPDM_EnableChannel5` = `PDM_STAT_CH5F_MASK`,
`kPDM_EnableChannel6` = `PDM_STAT_CH6F_MASK`,
`kPDM_EnableChannel7` = `PDM_STAT_CH7F_MASK` }
PDM channel enable mask.
- enum `_pdm_fifo_status` {
`kPDM_FifoStatusUnderflowCh0` = `PDM_FIFO_STAT_FIFOUND0_MASK`,
`kPDM_FifoStatusUnderflowCh1` = `PDM_FIFO_STAT_FIFOUND1_MASK`,
`kPDM_FifoStatusUnderflowCh2` = `PDM_FIFO_STAT_FIFOUND2_MASK`,
`kPDM_FifoStatusUnderflowCh3` = `PDM_FIFO_STAT_FIFOUND3_MASK`,
`kPDM_FifoStatusUnderflowCh4` = `PDM_FIFO_STAT_FIFOUND4_MASK`,
`kPDM_FifoStatusUnderflowCh5` = `PDM_FIFO_STAT_FIFOUND5_MASK`,
`kPDM_FifoStatusUnderflowCh6` = `PDM_FIFO_STAT_FIFOUND6_MASK`,
`kPDM_FifoStatusUnderflowCh7` = `PDM_FIFO_STAT_FIFOUND6_MASK`,
`kPDM_FifoStatusOverflowCh0` = `PDM_FIFO_STAT_FIFOOVF0_MASK`,
`kPDM_FifoStatusOverflowCh1` = `PDM_FIFO_STAT_FIFOOVF1_MASK`,
`kPDM_FifoStatusOverflowCh2` = `PDM_FIFO_STAT_FIFOOVF2_MASK`,
`kPDM_FifoStatusOverflowCh3` = `PDM_FIFO_STAT_FIFOOVF3_MASK`,
`kPDM_FifoStatusOverflowCh4` = `PDM_FIFO_STAT_FIFOOVF4_MASK`,
`kPDM_FifoStatusOverflowCh5` = `PDM_FIFO_STAT_FIFOOVF5_MASK`,
`kPDM_FifoStatusOverflowCh6` = `PDM_FIFO_STAT_FIFOOVF6_MASK`,
`kPDM_FifoStatusOverflowCh7` = `PDM_FIFO_STAT_FIFOOVF7_MASK` }
The PDM fifo status.
- enum `_pdm_output_status` {

```

kPDM_OutputStatusUnderFlowCh0 = PDM_OUT_STAT_OUTUNF0_MASK,
kPDM_OutputStatusUnderFlowCh1 = PDM_OUT_STAT_OUTUNF1_MASK,
kPDM_OutputStatusUnderFlowCh2 = PDM_OUT_STAT_OUTUNF2_MASK,
kPDM_OutputStatusUnderFlowCh3 = PDM_OUT_STAT_OUTUNF3_MASK,
kPDM_OutputStatusUnderFlowCh4 = PDM_OUT_STAT_OUTUNF4_MASK,
kPDM_OutputStatusUnderFlowCh5 = PDM_OUT_STAT_OUTUNF5_MASK,
kPDM_OutputStatusUnderFlowCh6 = PDM_OUT_STAT_OUTUNF6_MASK,
kPDM_OutputStatusUnderFlowCh7 = PDM_OUT_STAT_OUTUNF7_MASK,
kPDM_OutputStatusOverFlowCh0 = PDM_OUT_STAT_OUTOVF0_MASK,
kPDM_OutputStatusOverFlowCh1 = PDM_OUT_STAT_OUTOVF1_MASK,
kPDM_OutputStatusOverFlowCh2 = PDM_OUT_STAT_OUTOVF2_MASK,
kPDM_OutputStatusOverFlowCh3 = PDM_OUT_STAT_OUTOVF3_MASK,
kPDM_OutputStatusOverFlowCh4 = PDM_OUT_STAT_OUTOVF4_MASK,
kPDM_OutputStatusOverFlowCh5 = PDM_OUT_STAT_OUTOVF5_MASK,
kPDM_OutputStatusOverFlowCh6 = PDM_OUT_STAT_OUTOVF6_MASK,
kPDM_OutputStatusOverFlowCh7 = PDM_OUT_STAT_OUTOVF7_MASK }

```

The PDM output status.

- enum `pdm_dc_removal_t` {
`kPDM_DcRemoverCutOff21Hz` = 0U,
`kPDM_DcRemoverCutOff83Hz` = 1U,
`kPDM_DcRemoverCutOff152Hz` = 2U,
`kPDM_DcRemoverBypass` = 3U }

PDM DC remover configurations.

- enum `pdm_df_quality_mode_t` {
`kPDM_QualityModeMedium` = 0U,
`kPDM_QualityModeHigh` = 1U,
`kPDM_QualityModeLow` = 7U,
`kPDM_QualityModeVeryLow0` = 6U,
`kPDM_QualityModeVeryLow1` = 5U,
`kPDM_QualityModeVeryLow2` = 4U }

PDM decimation filter quality mode.

- enum `_pdm_qulaity_mode_k_factor` {
`kPDM_QualityModeHighKFactor` = 1U,
`kPDM_QualityModeMediumKFactor` = 2U,
`kPDM_QualityModeLowKFactor` = 4U,
`kPDM_QualityModeVeryLow2KFactor` = 8U }

PDM quality mode K factor.

- enum `pdm_df_output_gain_t` {

```

kPDM_DfOutputGain0 = 0U,
kPDM_DfOutputGain1 = 1U,
kPDM_DfOutputGain2 = 2U,
kPDM_DfOutputGain3 = 3U,
kPDM_DfOutputGain4 = 4U,
kPDM_DfOutputGain5 = 5U,
kPDM_DfOutputGain6 = 6U,
kPDM_DfOutputGain7 = 7U,
kPDM_DfOutputGain8 = 8U,
kPDM_DfOutputGain9 = 9U,
kPDM_DfOutputGain10 = 0xAU,
kPDM_DfOutputGain11 = 0xBU,
kPDM_DfOutputGain12 = 0xCU,
kPDM_DfOutputGain13 = 0xDU,
kPDM_DfOutputGain14 = 0xEU,
kPDM_DfOutputGain15 = 0xFU }

```

PDM decimation filter output gain.

- enum `_pdm_data_width` { `kPDM_DataWidth16` = 2U }

PDM data width.

- enum `_pdm_hwvad_interrupt_enable` {
`kPDM_HwvadErrorInterruptEnable` = PDM_VAD0_CTRL_1_VADERIE_MASK,
`kPDM_HwvadInterruptEnable` = PDM_VAD0_CTRL_1_VADIE_MASK }

PDM voice activity detector interrupt type.

- enum `_pdm_hwvad_int_status` {
`kPDM_HwvadStatusInputSaturation` = PDM_VAD0_STAT_VADINSATF_MASK,
`kPDM_HwvadStatusVoiceDetectFlag` = PDM_VAD0_STAT_VADIF_MASK }

The PDM hwvad interrupt status flag.

- enum `pdm_hwvad_hpf_config_t` {
`kPDM_HwvadHpfBypassed` = 0x0U,
`kPDM_HwvadHpfCutOffFreq1750Hz` = 0x1U,
`kPDM_HwvadHpfCutOffFreq215Hz` = 0x2U,
`kPDM_HwvadHpfCutOffFreq102Hz` = 0x3U }

High pass filter configure cut-off frequency.

- enum `pdm_hwvad_filter_status_t` {
`kPDM_HwvadInternalFilterNormalOperation` = 0U,
`kPDM_HwvadInternalFilterInitial` = PDM_VAD0_CTRL_1_VADST10_MASK }

HWVAD internal filter status.

- enum `pdm_hwvad_zcd_result_t` {
`kPDM_HwvadResultOREnergyBasedDetection`,
`kPDM_HwvadResultANDEnergyBasedDetection` }

PDM voice activity detector zero cross detector result.

Driver version

- #define `FSL_PDM_DRIVER_VERSION` (MAKE_VERSION(2, 5, 0))
Version 2.5.0.

Initialization and deinitialization

- void **PDM_Init** (PDM_Type *base, const **pdm_config_t** *config)
Initializes the PDM peripheral.
- void **PDM_Deinit** (PDM_Type *base)
De-initializes the PDM peripheral.
- static void **PDM_Reset** (PDM_Type *base)
Resets the PDM module.
- static void **PDM_Enable** (PDM_Type *base, bool enable)
Enables/disables PDM interface.
- static void **PDM_EnableDoze** (PDM_Type *base, bool enable)
Enables/disables DOZE.
- static void **PDM_EnableDebugMode** (PDM_Type *base, bool enable)
Enables/disables debug mode for PDM.
- static void **PDM_EnableInDebugMode** (PDM_Type *base, bool enable)
Enables/disables PDM interface in debug mode.
- static void **PDM_EnterLowLeakageMode** (PDM_Type *base, bool enable)
Enables/disables PDM interface disable/Low Leakage mode.
- static void **PDM_EnableChannel** (PDM_Type *base, uint8_t channel, bool enable)
Enables/disables the PDM channel.
- void **PDM_SetChannelConfig** (PDM_Type *base, uint32_t channel, const **pdm_channel_config_t** *config)
PDM one channel configurations.
- **status_t** **PDM_SetSampleRateConfig** (PDM_Type *base, uint32_t sourceClock_HZ, uint32_t sampleRate_HZ)
PDM set sample rate.
- **status_t** **PDM_SetSampleRate** (PDM_Type *base, uint32_t enableChannelMask, **pdm_df_quality_mode_t** qualityMode, uint8_t osr, uint32_t clkDiv)
PDM set sample rate.
- uint32_t **PDM_GetInstance** (PDM_Type *base)
Get the instance number for PDM.

Status

- static uint32_t **PDM_GetStatus** (PDM_Type *base)
Gets the PDM internal status flag.
- static uint32_t **PDM_GetFifoStatus** (PDM_Type *base)
Gets the PDM FIFO status flag.
- static uint32_t **PDM_GetOutputStatus** (PDM_Type *base)
Gets the PDM output status flag.
- static void **PDM_ClearStatus** (PDM_Type *base, uint32_t mask)
Clears the PDM Tx status.
- static void **PDM_ClearFIFOStatus** (PDM_Type *base, uint32_t mask)
Clears the PDM Tx status.
- static void **PDM_ClearOutputStatus** (PDM_Type *base, uint32_t mask)
Clears the PDM output status.

Interrupts

- void [PDM_EnableInterrupts](#) (PDM_Type *base, uint32_t mask)
Enables the PDM interrupt requests.
- static void [PDM_DisableInterrupts](#) (PDM_Type *base, uint32_t mask)
Disables the PDM interrupt requests.

DMA Control

- static void [PDM_EnableDMA](#) (PDM_Type *base, bool enable)
Enables/disables the PDM DMA requests.
- static uint32_t [PDM_GetDataRegisterAddress](#) (PDM_Type *base, uint32_t channel)
Gets the PDM data register address.

Bus Operations

- static int16_t [PDM_ReadData](#) (PDM_Type *base, uint32_t channel)
Reads data from the PDM FIFO.
- void [PDM_ReadNonBlocking](#) (PDM_Type *base, uint32_t startChannel, uint32_t channelNums, int16_t *buffer, size_t size)
PDM read data non blocking.
- void [PDM_ReadFifo](#) (PDM_Type *base, uint32_t startChannel, uint32_t channelNums, void *buffer, size_t size, uint32_t dataWidth)
PDM read fifo.

Voice Activity Detector

- void [PDM_SetHwvadConfig](#) (PDM_Type *base, const [pdm_hwvad_config_t](#) *config)
Configure voice activity detector.
- static void [PDM_ForceHwvadOutputDisable](#) (PDM_Type *base, bool enable)
PDM hwvad force output disable.
- static void [PDM_ResetHwvad](#) (PDM_Type *base)
PDM hwvad reset.
- static void [PDM_EnableHwvad](#) (PDM_Type *base, bool enable)
Enable/Disable Voice activity detector.
- static void [PDM_EnableHwvadInterrupts](#) (PDM_Type *base, uint32_t mask)
Enables the PDM Voice Detector interrupt requests.
- static void [PDM_DisableHwvadInterrupts](#) (PDM_Type *base, uint32_t mask)
Disables the PDM Voice Detector interrupt requests.
- static void [PDM_ClearHwvadInterruptStatusFlags](#) (PDM_Type *base, uint32_t mask)
Clears the PDM voice activity detector status flags.
- static uint32_t [PDM_GetHwvadInterruptStatusFlags](#) (PDM_Type *base)
Clears the PDM voice activity detector status flags.
- static uint32_t [PDM_GetHwvadInitialFlag](#) (PDM_Type *base)
Get the PDM voice activity detector initial flags.
- static uint32_t [PDM_GetHwvadVoiceDetectedFlag](#) (PDM_Type *base)
Get the PDM voice activity detector voice detected flags.

- static void [PDM_EnableHwvadSignalFilter](#) (PDM_Type *base, bool enable)
Enables/disables voice activity detector signal filter.
- void [PDM_SetHwvadSignalFilterConfig](#) (PDM_Type *base, bool enableMaxBlock, uint32_t signalGain)
Configure voice activity detector signal filter.
- void [PDM_SetHwvadNoiseFilterConfig](#) (PDM_Type *base, const [pdm_hwvad_noise_filter_t](#) *config)
Configure voice activity detector noise filter.
- static void [PDM_EnableHwvadZeroCrossDetector](#) (PDM_Type *base, bool enable)
Enables/disables voice activity detector zero cross detector.
- void [PDM_SetHwvadZeroCrossDetectorConfig](#) (PDM_Type *base, const [pdm_hwvad_zero_cross-_detector_t](#) *config)
Configure voice activity detector zero cross detector.
- static uint16_t [PDM_GetNoiseData](#) (PDM_Type *base)
Reads noise data.
- static void [PDM_SetHwvadInternalFilterStatus](#) (PDM_Type *base, [pdm_hwvad_filter_status_t](#) status)
set hwvad internal filter status .
- void [PDM_SetHwvadInEnvelopeBasedMode](#) (PDM_Type *base, const [pdm_hwvad_config_t](#) *hwvadConfig, const [pdm_hwvad_noise_filter_t](#) *noiseConfig, const [pdm_hwvad_zero_cross-_detector_t](#) *zcdConfig, uint32_t signalGain)
set HWVAD in envelope based mode .
- void [PDM_SetHwvadInEnergyBasedMode](#) (PDM_Type *base, const [pdm_hwvad_config_t](#) *hwvadConfig, const [pdm_hwvad_noise_filter_t](#) *noiseConfig, const [pdm_hwvad_zero_cross-_detector_t](#) *zcdConfig, uint32_t signalGain)
brief set HWVAD in energy based mode .

Transactional

- void [PDM_TransferCreateHandle](#) (PDM_Type *base, [pdm_handle_t](#) *handle, [pdm_transfer_callback_t](#) callback, void *userData)
Initializes the PDM handle.
- [status_t](#) [PDM_TransferSetChannelConfig](#) (PDM_Type *base, [pdm_handle_t](#) *handle, uint32_t channel, const [pdm_channel_config_t](#) *config, uint32_t format)
PDM set channel transfer config.
- [status_t](#) [PDM_TransferReceiveNonBlocking](#) (PDM_Type *base, [pdm_handle_t](#) *handle, [pdm_transfer_t](#) *xfer)
Performs an interrupt non-blocking receive transfer on PDM.
- void [PDM_TransferAbortReceive](#) (PDM_Type *base, [pdm_handle_t](#) *handle)
Aborts the current IRQ receive.
- void [PDM_TransferHandleIRQ](#) (PDM_Type *base, [pdm_handle_t](#) *handle)
Tx interrupt handler.

17.2.3 Data Structure Documentation

17.2.3.1 struct pdm_channel_config_t

Data Fields

- [pdm_dc_remover_t cutOffFreq](#)
DC remover cut off frequency.
- [pdm_df_output_gain_t gain](#)
Decimation Filter Output Gain.

17.2.3.2 struct pdm_config_t

Data Fields

- bool [enableDoze](#)
This module will enter disable/low leakage mode if DOZEN is active with ipg_doze is asserted.
- uint8_t [fifoWatermark](#)
Watermark value for FIFO.
- [pdm_df_quality_mode_t qualityMode](#)
Quality mode.
- uint8_t [cicOverSampleRate](#)
CIC filter over sampling rate.

17.2.3.3 struct pdm_hwvad_config_t

Data Fields

- uint8_t [channel](#)
Which channel uses voice activity detector.
- uint8_t [initializeTime](#)
Number of frames or samples to initialize voice activity detector.
- uint8_t [cicOverSampleRate](#)
CIC filter over sampling rate.
- uint8_t [inputGain](#)
Voice activity detector input gain.
- uint32_t [frameTime](#)
Voice activity frame time.
- [pdm_hwvad_hpf_config_t cutOffFreq](#)
High pass filter cut off frequency.
- bool [enableFrameEnergy](#)
If frame energy enabled, true means enable.
- bool [enablePreFilter](#)
If pre-filter enabled.

17.2.3.3.0.13 Field Documentation

17.2.3.3.0.13.1 uint8_t pdm_hwvad_config_t::initializeTime

17.2.3.4 struct pdm_hwvad_noise_filter_t

Data Fields

- bool [enableAutoNoiseFilter](#)
If noise fileter automatically activated, true means enable.
- bool [enableNoiseMin](#)
If Noise minimum block enabled, true means enabled.
- bool [enableNoiseDecimation](#)
If enable noise input decimation.
- bool [enableNoiseDetectOR](#)
Enables a OR logic in the output of minimum noise estimator block.
- uint32_t [noiseFilterAdjustment](#)
The adjustment value of the noise filter.
- uint32_t [noiseGain](#)
Gain value for the noise energy or envelope estimated.

17.2.3.5 struct pdm_hwvad_zero_cross_detector_t

Data Fields

- bool [enableAutoThreshold](#)
If ZCD auto-threshold enabled, true means enabled.
- [pdm_hwvad_zcd_result_t](#) [zcdAnd](#)
Is ZCD result is AND'ed with energy-based detection, false means OR'ed.
- uint32_t [threshold](#)
The adjustment value of the noise filter.
- uint32_t [adjustmentThreshold](#)
Gain value for the noise energy or envelope estimated.

17.2.3.5.0.14 Field Documentation

17.2.3.5.0.14.1 bool pdm_hwvad_zero_cross_detector_t::enableAutoThreshold

17.2.3.6 struct pdm_transfer_t

Data Fields

- volatile uint8_t * [data](#)
Data start address to transfer.
- volatile size_t [dataSize](#)
Total Transfer bytes size.

17.2.3.6.0.15 Field Documentation

17.2.3.6.0.15.1 `volatile uint8_t* pdm_transfer_t::data`

17.2.3.6.0.15.2 `volatile size_t pdm_transfer_t::dataSize`

17.2.3.7 struct `_pdm_handle`

PDM handle.

Data Fields

- `uint32_t state`
Transfer status.
- `pdm_transfer_callback_t callback`
Callback function called at transfer event.
- `void * userData`
Callback parameter passed to callback function.
- `pdm_transfer_t pdmQueue [PDM_XFER_QUEUE_SIZE]`
Transfer queue storing queued transfer.
- `size_t transferSize [PDM_XFER_QUEUE_SIZE]`
Data bytes need to transfer.
- `volatile uint8_t queueUser`
Index for user to queue transfer.
- `volatile uint8_t queueDriver`
Index for driver to get the transfer data and size.
- `uint32_t format`
data format
- `uint8_t watermark`
Watermark value.
- `uint8_t startChannel`
end channel
- `uint8_t channelNums`
Enabled channel number.

17.2.4 Enumeration Type Documentation

17.2.4.1 anonymous enum

Enumerator

kStatus_PDM_Busy PDM is busy.
kStatus_PDM_CLK_LOW PDM clock frequency low.
kStatus_PDM_FIFO_ERROR PDM FIFO underrun or overflow.
kStatus_PDM_QueueFull PDM FIFO underrun or overflow.
kStatus_PDM_Idle PDM is idle.
kStatus_PDM_Output_ERROR PDM is output error.
kStatus_PDM_ChannelConfig_Failed PDM channel config failed.

17.2.4.2 enum _pdm_interrupt_enable

Enumerator

kPDM_ErrorInterruptEnable PDM channel error interrupt enable.
kPDM_FIFOInterruptEnable PDM channel FIFO interrupt.

17.2.4.3 enum _pdm_internal_status

Enumerator

kPDM_StatusDfBusyFlag Decimation filter is busy processing data.
kPDM_StatusFIRFilterReady FIR filter data is ready.
kPDM_StatusFrequencyLow Mic app clock frequency not high enough.
kPDM_StatusCh0FifoDataAvaliable channel 0 fifo data reached watermark level
kPDM_StatusCh1FifoDataAvaliable channel 1 fifo data reached watermark level
kPDM_StatusCh2FifoDataAvaliable channel 2 fifo data reached watermark level
kPDM_StatusCh3FifoDataAvaliable channel 3 fifo data reached watermark level
kPDM_StatusCh4FifoDataAvaliable channel 4 fifo data reached watermark level
kPDM_StatusCh5FifoDataAvaliable channel 5 fifo data reached watermark level
kPDM_StatusCh6FifoDataAvaliable channel 6 fifo data reached watermark level
kPDM_StatusCh7FifoDataAvaliable channel 7 fifo data reached watermark level

17.2.4.4 enum _pdm_channel_enable_mask

Enumerator

kPDM_EnableChannel0 channigel 0 enable mask
kPDM_EnableChannel1 channigel 1 enable mask
kPDM_EnableChannel2 channigel 2 enable mask
kPDM_EnableChannel3 channigel 3 enable mask
kPDM_EnableChannel4 channigel 4 enable mask
kPDM_EnableChannel5 channigel 5 enable mask
kPDM_EnableChannel6 channigel 6 enable mask
kPDM_EnableChannel7 channigel 7 enable mask

17.2.4.5 enum _pdm_fifo_status

Enumerator

kPDM_FifoStatusUnderflowCh0 channel0 fifo status underflow
kPDM_FifoStatusUnderflowCh1 channel1 fifo status underflow
kPDM_FifoStatusUnderflowCh2 channel2 fifo status underflow

kPDM_FifoStatusUnderflowCh3 channel3 fifo status underflow
kPDM_FifoStatusUnderflowCh4 channel4 fifo status underflow
kPDM_FifoStatusUnderflowCh5 channel5 fifo status underflow
kPDM_FifoStatusUnderflowCh6 channel6 fifo status underflow
kPDM_FifoStatusUnderflowCh7 channel7 fifo status underflow
kPDM_FifoStatusOverflowCh0 channel0 fifo status overflow
kPDM_FifoStatusOverflowCh1 channel1 fifo status overflow
kPDM_FifoStatusOverflowCh2 channel2 fifo status overflow
kPDM_FifoStatusOverflowCh3 channel3 fifo status overflow
kPDM_FifoStatusOverflowCh4 channel4 fifo status overflow
kPDM_FifoStatusOverflowCh5 channel5 fifo status overflow
kPDM_FifoStatusOverflowCh6 channel6 fifo status overflow
kPDM_FifoStatusOverflowCh7 channel7 fifo status overflow

17.2.4.6 enum _pdm_output_status

Enumerator

kPDM_OutputStatusUnderFlowCh0 channel0 output status underflow
kPDM_OutputStatusUnderFlowCh1 channel1 output status underflow
kPDM_OutputStatusUnderFlowCh2 channel2 output status underflow
kPDM_OutputStatusUnderFlowCh3 channel3 output status underflow
kPDM_OutputStatusUnderFlowCh4 channel4 output status underflow
kPDM_OutputStatusUnderFlowCh5 channel5 output status underflow
kPDM_OutputStatusUnderFlowCh6 channel6 output status underflow
kPDM_OutputStatusUnderFlowCh7 channel7 output status underflow
kPDM_OutputStatusOverFlowCh0 channel0 output status overflow
kPDM_OutputStatusOverFlowCh1 channel1 output status overflow
kPDM_OutputStatusOverFlowCh2 channel2 output status overflow
kPDM_OutputStatusOverFlowCh3 channel3 output status overflow
kPDM_OutputStatusOverFlowCh4 channel4 output status overflow
kPDM_OutputStatusOverFlowCh5 channel5 output status overflow
kPDM_OutputStatusOverFlowCh6 channel6 output status overflow
kPDM_OutputStatusOverFlowCh7 channel7 output status overflow

17.2.4.7 enum pdm_dc_removal_t

Enumerator

kPDM_DcRemoverCutOff21Hz DC remover cut off 21HZ.
kPDM_DcRemoverCutOff83Hz DC remover cut off 83HZ.
kPDM_DcRemoverCutOff152Hz DC remover cut off 152HZ.
kPDM_DcRemoverBypass DC remover bypass.

17.2.4.8 enum pdm_df_quality_mode_t

Enumerator

kPDM_QualityModeMedium quality mode medium
kPDM_QualityModeHigh quality mode high
kPDM_QualityModeLow quality mode low
kPDM_QualityModeVeryLow0 quality mode very low0
kPDM_QualityModeVeryLow1 quality mode very low1
kPDM_QualityModeVeryLow2 quality mode very low2

17.2.4.9 enum _pdm_qulaity_mode_k_factor

Enumerator

kPDM_QualityModeHighKFactor high quality mode K factor = 1 / 2
kPDM_QualityModeMediumKFactor medium/very low0 quality mode K factor = 2 / 2
kPDM_QualityModeLowKFactor low/very low1 quality mode K factor = 4 / 2
kPDM_QualityModeVeryLow2KFactor very low2 quality mode K factor = 8 / 2

17.2.4.10 enum pdm_df_output_gain_t

Enumerator

kPDM_DfOutputGain0 Decimation filter output gain 0.
kPDM_DfOutputGain1 Decimation filter output gain 1.
kPDM_DfOutputGain2 Decimation filter output gain 2.
kPDM_DfOutputGain3 Decimation filter output gain 3.
kPDM_DfOutputGain4 Decimation filter output gain 4.
kPDM_DfOutputGain5 Decimation filter output gain 5.
kPDM_DfOutputGain6 Decimation filter output gain 6.
kPDM_DfOutputGain7 Decimation filter output gain 7.
kPDM_DfOutputGain8 Decimation filter output gain 8.
kPDM_DfOutputGain9 Decimation filter output gain 9.
kPDM_DfOutputGain10 Decimation filter output gain 10.
kPDM_DfOutputGain11 Decimation filter output gain 11.
kPDM_DfOutputGain12 Decimation filter output gain 12.
kPDM_DfOutputGain13 Decimation filter output gain 13.
kPDM_DfOutputGain14 Decimation filter output gain 14.
kPDM_DfOutputGain15 Decimation filter output gain 15.

17.2.4.11 enum _pdm_data_width

Enumerator

kPDM_DataWidth16 PDM data width 16bit.**17.2.4.12 enum _pdm_hwvad_interrupt_enable**

Enumerator

kPDM_HwvadErrorInterruptEnable PDM channel HWVAD error interrupt enable.*kPDM_HwvadInterruptEnable* PDM channel HWVAD interrupt.**17.2.4.13 enum _pdm_hwvad_int_status**

Enumerator

kPDM_HwvadStatusInputSaturation HWVAD saturation condition.*kPDM_HwvadStatusVoiceDetectFlag* HWVAD voice detect interrupt triggered.**17.2.4.14 enum pdm_hwvad_hpf_config_t**

Enumerator

kPDM_HwvadHpfBypassed High-pass filter bypass.*kPDM_HwvadHpfCutOffFreq1750Hz* High-pass filter cut off frequency 1750HZ.*kPDM_HwvadHpfCutOffFreq215Hz* High-pass filter cut off frequency 215HZ.*kPDM_HwvadHpfCutOffFreq102Hz* High-pass filter cut off frequency 102HZ.**17.2.4.15 enum pdm_hwvad_filter_status_t**

Enumerator

kPDM_HwvadInternalFilterNormalOperation internal filter ready for normal operation*kPDM_HwvadInternalFilterInitial* internal filter are initial**17.2.4.16 enum pdm_hwvad_zcd_result_t**

Enumerator

kPDM_HwvadResultOREnergyBasedDetection zero cross detector result will be OR with energy based detection*kPDM_HwvadResultANDEnergyBasedDetection* zero cross detector result will be AND with energy based detection

17.2.5 Function Documentation

17.2.5.1 void PDM_Init (PDM_Type * *base*, const pdm_config_t * *config*)

Ungates the PDM clock, resets the module, and configures PDM with a configuration structure. The configuration structure can be custom filled or set with default values by PDM_GetDefaultConfig().

Note

This API should be called at the beginning of the application to use the PDM driver. Otherwise, accessing the PDM module can cause a hard fault because the clock is not enabled.

Parameters

<i>base</i>	PDM base pointer
<i>config</i>	PDM configuration structure.

17.2.5.2 void PDM_Deinit (PDM_Type * *base*)

This API gates the PDM clock. The PDM module can't operate unless PDM_Init is called to enable the clock.

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

17.2.5.3 static void PDM_Reset (PDM_Type * *base*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

17.2.5.4 static void PDM_Enable (PDM_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means PDM interface is enabled, false means PDM interface is disabled.

17.2.5.5 static void PDM_EnableDoze (PDM_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means the module will enter Disable/Low Leakage mode when ipg_doze is asserted, false means the module will not enter Disable/Low Leakage mode when ipg_doze is asserted.

17.2.5.6 static void PDM_EnableDebugMode (PDM_Type * *base*, bool *enable*) [inline], [static]

The PDM interface cannot enter debug mode once in Disable/Low Leakage or Low Power mode.

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means PDM interface enter debug mode, false means PDM interface in normal mode.

17.2.5.7 static void PDM_EnableInDebugMode (PDM_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means PDM interface is enabled debug mode, false means PDM interface is disabled after after completing the current frame in debug mode.

17.2.5.8 static void PDM_EnterLowLeakageMode (PDM_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means PDM interface is in disable/low leakage mode, False means PDM interface is in normal mode.

17.2.5.9 static void PDM_EnableChannel (PDM_Type * *base*, uint8_t *channel*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>channel</i>	PDM channel number need to enable or disable.
<i>enable</i>	True means enable PDM channel, false means disable.

17.2.5.10 void PDM_SetChannelConfig (PDM_Type * *base*, uint32_t *channel*, const pdm_channel_config_t * *config*)

Parameters

<i>base</i>	PDM base pointer
<i>config</i>	PDM channel configurations.
<i>channel</i>	channel number. after completing the current frame in debug mode.

17.2.5.11 status_t PDM_SetSampleRateConfig (PDM_Type * *base*, uint32_t *sourceClock_HZ*, uint32_t *sampleRate_HZ*)

Note

This function is depend on the configuration of the PDM and PDM channel, so the correct call sequence is

```
* PDM_Init(base, pdmConfig)
* PDM_SetChannelConfig(base, channel, &channelConfig)
* PDM_SetSampleRateConfig(base, source, sampleRate)
*
```

Parameters

<i>base</i>	PDM base pointer
<i>sourceClock_HZ</i>	PDM source clock frequency.
<i>sampleRate_HZ</i>	PDM sample rate.

17.2.5.12 `status_t PDM_SetSampleRate (PDM_Type * base, uint32_t enableChannelMask, pdm_df_quality_mode_t qualityMode, uint8_t osr, uint32_t clkDiv)`

Deprecated Do not use this function. It has been superseded by [PDM_SetSampleRateConfig](#)

Parameters

<i>base</i>	PDM base pointer
<i>enable-ChannelMask</i>	PDM channel enable mask.
<i>qualityMode</i>	quality mode.
<i>osr</i>	cic oversample rate
<i>clkDiv</i>	clock divider

17.2.5.13 `uint32_t PDM_GetInstance (PDM_Type * base)`

Parameters

<i>base</i>	PDM base pointer.
-------------	-------------------

17.2.5.14 `static uint32_t PDM_GetStatus (PDM_Type * base) [inline], [static]`

Use the Status Mask in `_pdm_internal_status` to get the status value needed

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

Returns

PDM status flag value.

17.2.5.15 **static uint32_t PDM_GetFifoStatus (PDM_Type * *base*) [inline], [static]**

Use the Status Mask in `_pdm_fifo_status` to get the status value needed

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

Returns

FIFO status.

17.2.5.16 **static uint32_t PDM_GetOutputStatus (PDM_Type * *base*) [inline], [static]**

Use the Status Mask in `_pdm_output_status` to get the status value needed

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

Returns

output status.

17.2.5.17 **static void PDM_ClearStatus (PDM_Type * *base*, uint32_t *mask*) [inline], [static]**

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	State mask. It can be a combination of the status between kPDM_StatusFrequency-Low and kPDM_StatusCh7FifoDataAvaliable.

17.2.5.18 static void PDM_ClearFIFOStatus (PDM_Type * *base*, uint32_t *mask*)
[inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	State mask. It can be a combination of the status in _pdm_fifo_status.

17.2.5.19 static void PDM_ClearOutputStatus (PDM_Type * *base*, uint32_t *mask*)
[inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	State mask. It can be a combination of the status in _pdm_output_status.

17.2.5.20 void PDM_EnableInterrupts (PDM_Type * *base*, uint32_t *mask*)

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kPDM_ErrorInterruptEnable • kPDM_FIFOInterruptEnable

17.2.5.21 static void PDM_DisableInterrupts (PDM_Type * *base*, uint32_t *mask*)
[inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kPDM_ErrorInterruptEnable • kPDM_FIFOInterruptEnable

17.2.5.22 `static void PDM_EnableDMA (PDM_Type * base, bool enable) [inline], [static]`

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means enable DMA, false means disable DMA.

17.2.5.23 `static uint32_t PDM_GetDataRegisterAddress (PDM_Type * base, uint32_t channel) [inline], [static]`

This API is used to provide a transfer address for the PDM DMA transfer configuration.

Parameters

<i>base</i>	PDM base pointer.
<i>channel</i>	Which data channel used.

Returns

data register address.

17.2.5.24 `static int16_t PDM_ReadData (PDM_Type * base, uint32_t channel) [inline], [static]`

Parameters

<i>base</i>	PDM base pointer.
<i>channel</i>	Data channel used.

Returns

Data in PDM FIFO.

17.2.5.25 void PDM_ReadNonBlocking (PDM_Type * *base*, uint32_t *startChannel*, uint32_t *channelNums*, int16_t * *buffer*, size_t *size*)

So the actually read data byte size in this function is (size * 2 * channelNums).

Parameters

<i>base</i>	PDM base pointer.
<i>startChannel</i>	start channel number.
<i>channelNums</i>	total enabled channelnums.
<i>buffer</i>	received buffer address.
<i>size</i>	number of 16bit data to read.

17.2.5.26 void PDM_ReadFifo (PDM_Type * *base*, uint32_t *startChannel*, uint32_t *channelNums*, void * *buffer*, size_t *size*, uint32_t *dataWidth*)

Note

: This function support 16 bit only for IP version that only supports 16bit.

Parameters

<i>base</i>	PDM base pointer.
<i>startChannel</i>	start channel number.
<i>channelNums</i>	total enabled channelnums.
<i>buffer</i>	received buffer address.
<i>size</i>	number of samples to read.
<i>dataWidth</i>	sample width.

17.2.5.27 void PDM_SetHwvadConfig (PDM_Type * *base*, const pdm_hwvad_config_t * *config*)

Parameters

<i>base</i>	PDM base pointer
<i>config</i>	Voice activity detector configure structure pointer .

17.2.5.28 static void PDM_ForceHwvadOutputDisable (PDM_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	true is output force disable, false is output not force.

17.2.5.29 static void PDM_ResetHwvad (PDM_Type * *base*) [inline], [static]

It will reset VADNDATA register and will clean all internal buffers, should be called when the PDM isn't running.

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

17.2.5.30 static void PDM_EnableHwvad (PDM_Type * *base*, bool *enable*) [inline], [static]

Should be called when the PDM isn't running.

Parameters

<i>base</i>	PDM base pointer.
<i>enable</i>	True means enable voice activity detector, false means disable.

17.2.5.31 static void PDM_EnableHwvadInterrupts (PDM_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kPDM_HWVADErrorInterruptEnable • kPDM_HWVADInterruptEnable

17.2.5.32 `static void PDM_DisableHwvadInterrupts (PDM_Type * base, uint32_t mask)`
[inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kPDM_HWVADErrorInterruptEnable • kPDM_HWVADInterruptEnable

17.2.5.33 `static void PDM_ClearHwvadInterruptStatusFlags (PDM_Type * base, uint32_t mask)`
[inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>mask</i>	State mask,reference _pdm_hwvad_int_status.

17.2.5.34 `static uint32_t PDM_GetHwvadInterruptStatusFlags (PDM_Type * base)`
[inline], [static]

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

Returns

status, reference `_pdm_hwvad_int_status`

17.2.5.35 `static uint32_t PDM_GetHwvadInitialFlag (PDM_Type * base) [inline], [static]`

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

Returns

initial flag.

17.2.5.36 `static uint32_t PDM_GetHwvadVoiceDetectedFlag (PDM_Type * base) [inline], [static]`

NOte: this flag is auto cleared when voice gone.

Parameters

<i>base</i>	PDM base pointer
-------------	------------------

Returns

voice detected flag.

17.2.5.37 `static void PDM_EnableHwvadSignalFilter (PDM_Type * base, bool enable) [inline], [static]`

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means enable signal filter, false means disable.

17.2.5.38 `void PDM_SetHwvadSignalFilterConfig (PDM_Type * base, bool enableMaxBlock, uint32_t signalGain)`

Parameters

<i>base</i>	PDM base pointer
<i>enableMax-Block</i>	If signal maximum block enabled.
<i>signalGain</i>	Gain value for the signal energy.

17.2.5.39 void PDM_SetHwvadNoiseFilterConfig (PDM_Type * *base*, const pdm_hwvad_noise_filter_t * *config*)

Parameters

<i>base</i>	PDM base pointer
<i>config</i>	Voice activity detector noise filter configure structure pointer .

17.2.5.40 static void PDM_EnableHwvadZeroCrossDetector (PDM_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer
<i>enable</i>	True means enable zero cross detector, false means disable.

17.2.5.41 void PDM_SetHwvadZeroCrossDetectorConfig (PDM_Type * *base*, const pdm_hwvad_zero_cross_detector_t * *config*)

Parameters

<i>base</i>	PDM base pointer
<i>config</i>	Voice activity detector zero cross detector configure structure pointer .

17.2.5.42 static uint16_t PDM_GetNoiseData (PDM_Type * *base*) [inline], [static]

Parameters

<i>base</i>	PDM base pointer.
-------------	-------------------

Returns

Data in PDM noise data register.

17.2.5.43 static void PDM_SetHwvadInternalFilterStatus (PDM_Type * *base*, pdm_hwvad_filter_status_t *status*) [inline], [static]

Note: filter initial status should be asserted for two more cycles, then set it to normal operation.

Parameters

<i>base</i>	PDM base pointer.
<i>status</i>	internal filter status.

17.2.5.44 void PDM_SetHwvadInEnvelopeBasedMode (PDM_Type * *base*, const pdm_hwvad_config_t * *hwvadConfig*, const pdm_hwvad_noise_filter_t * *noiseConfig*, const pdm_hwvad_zero_cross_detector_t * *zcdConfig*, uint32_t *signalGain*)

Recommand configurations,

```
* static const pdm_hwvad_config_t hwvadConfig = {
*   .channel          = 0,
*   .initializeTime   = 10U,
*   .cicOverSampleRate = 0U,
*   .inputGain        = 0U,
*   .frameTime        = 10U,
*   .cutOffFreq       = kPDM_HwvadHpfBypassed,
*   .enableFrameEnergy = false,
*   .enablePreFilter   = true,
* };

* static const pdm_hwvad_noise_filter_t noiseFilterConfig = {
*   .enableAutoNoiseFilter = false,
*   .enableNoiseMin        = true,
*   .enableNoiseDecimation = true,
*   .noiseFilterAdjustment = 0U,
*   .noiseGain             = 7U,
*   .enableNoiseDetectOR   = true,
* };
*
```

Parameters

<i>base</i>	PDM base pointer.
<i>hwvadConfig</i>	internal filter status.
<i>noiseConfig</i>	Voice activity detector noise filter configure structure pointer.
<i>zcdConfig</i>	Voice activity detector zero cross detector configure structure pointer .
<i>signalGain</i>	signal gain value.

17.2.5.45 void PDM_SetHwvadInEnergyBasedMode (PDM_Type * *base*, const pdm_hwvad_config_t * *hwvadConfig*, const pdm_hwvad_noise_filter_t * *noiseConfig*, const pdm_hwvad_zero_cross_detector_t * *zcdConfig*, uint32_t *signalGain*)

Recommand configurations, code static const [pdm_hwvad_config_t](#) hwvadConfig = { .channel = 0, .initializeTime = 10U, .cicOverSampleRate = 0U, .inputGain = 0U, .frameTime = 10U, .cutOffFreq = kPDM_HwvadHpfBypassed, .enableFrameEnergy = true, .enablePreFilter = true, };

static const [pdm_hwvad_noise_filter_t](#) noiseFilterConfig = { .enableAutoNoiseFilter = true, .enableNoiseMin = false, .enableNoiseDecimation = false, .noiseFilterAdjustment = 0U, .noiseGain = 7U, .enableNoiseDetectOR = false, }; code param *base* PDM base pointer. param *hwvadConfig* internal filter status. param *noiseConfig* Voice activity detector noise filter configure structure pointer. param *zcdConfig* Voice activity detector zero cross detector configure structure pointer . param *signalGain* signal gain value, signal gain value should be properly according to application.

17.2.5.46 void PDM_TransferCreateHandle (PDM_Type * *base*, pdm_handle_t * *handle*, pdm_transfer_callback_t *callback*, void * *userData*)

This function initializes the handle for the PDM transactional APIs. Call this function once to get the handle initialized.

Parameters

<i>base</i>	PDM base pointer.
<i>handle</i>	PDM handle pointer.
<i>callback</i>	Pointer to the user callback function.
<i>userData</i>	User parameter passed to the callback function.

17.2.5.47 status_t PDM_TransferSetChannelConfig (PDM_Type * *base*, pdm_handle_t * *handle*, uint32_t *channel*, const pdm_channel_config_t * *config*, uint32_t *format*)

Parameters

<i>base</i>	PDM base pointer.
<i>handle</i>	PDM handle pointer.
<i>channel</i>	PDM channel.
<i>config</i>	channel config.
<i>format</i>	data format, support data width configurations, <code>_pdm_data_width</code> .

Return values

<i>kStatus_PDM_Channel-Config_Failed</i>	or <code>kStatus_Success</code> .
--	-----------------------------------

17.2.5.48 `status_t PDM_TransferReceiveNonBlocking (PDM_Type * base, pdm_handle_t * handle, pdm_transfer_t * xfer)`

Note

This API returns immediately after the transfer initiates. Call the `PDM_RxGetTransferStatusIRQ` to poll the transfer status and check whether the transfer is finished. If the return status is not `kStatus_PDM_Busy`, the transfer is finished.

Parameters

<i>base</i>	PDM base pointer
<i>handle</i>	Pointer to the <code>pdm_handle_t</code> structure which stores the transfer state.
<i>xfer</i>	Pointer to the pdm_transfer_t structure.

Return values

<i>kStatus_Success</i>	Successfully started the data receive.
<i>kStatus_PDM_Busy</i>	Previous receive still not finished.

17.2.5.49 `void PDM_TransferAbortReceive (PDM_Type * base, pdm_handle_t * handle)`

Note

This API can be called when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

<i>base</i>	PDM base pointer
<i>handle</i>	Pointer to the pdm_handle_t structure which stores the transfer state.

17.2.5.50 void PDM_TransferHandleIRQ (PDM_Type * *base*, pdm_handle_t * *handle*)

Parameters

<i>base</i>	PDM base pointer.
<i>handle</i>	Pointer to the pdm_handle_t structure.

Chapter 18

RDC: Resource Domain Controller

Overview

The MCUXpresso SDK provides a driver for the RDC module of MCUXpresso SDK devices.

The Resource Domain Controller (RDC) provides robust support for the isolation of destination memory mapped locations such as peripherals and memory to a single core, a bus master, or set of cores and bus masters.

The RDC driver should be used together with the RDC_SEMA42 driver.

Data Structures

- struct [rdc_hardware_config_t](#)
RDC hardware configuration. [More...](#)
- struct [rdc_domain_assignment_t](#)
Master domain assignment. [More...](#)
- struct [rdc_periph_access_config_t](#)
Peripheral domain access permission configuration. [More...](#)
- struct [rdc_mem_access_config_t](#)
Memory region domain access control configuration. [More...](#)
- struct [rdc_mem_status_t](#)
Memory region access violation status. [More...](#)

Enumerations

- enum [_rdc_interrupts](#) { [kRDC_RestoreCompleteInterrupt](#) = RDC_INTCTRL_RCI_EN_MASK }
RDC interrupts.
- enum [_rdc_flags](#) { [kRDC_PowerDownDomainOn](#) = RDC_STAT_PDS_MASK }
RDC status.
- enum [_rdc_access_policy](#) {
 [kRDC_NoAccess](#) = 0,
 [kRDC_WriteOnly](#) = 1,
 [kRDC_ReadOnly](#) = 2,
 [kRDC_ReadWrite](#) = 3 }
Access permission policy.

Functions

- void [RDC_Init](#) (RDC_Type *base)
Initializes the RDC module.
- void [RDC_Deinit](#) (RDC_Type *base)
De-initializes the RDC module.
- void [RDC_GetHardwareConfig](#) (RDC_Type *base, [rdc_hardware_config_t](#) *config)
Gets the RDC hardware configuration.

- static void [RDC_EnableInterrupts](#) (RDC_Type *base, uint32_t mask)
Enable interrupts.
- static void [RDC_DisableInterrupts](#) (RDC_Type *base, uint32_t mask)
Disable interrupts.
- static uint32_t [RDC_GetInterruptStatus](#) (RDC_Type *base)
Get the interrupt pending status.
- static void [RDC_ClearInterruptStatus](#) (RDC_Type *base, uint32_t mask)
Clear interrupt pending status.
- static uint32_t [RDC_GetStatus](#) (RDC_Type *base)
Get RDC status.
- static void [RDC_ClearStatus](#) (RDC_Type *base, uint32_t mask)
Clear RDC status.
- void [RDC_SetMasterDomainAssignment](#) (RDC_Type *base, rdc_master_t master, const [rdc_domain_assignment_t](#) *domainAssignment)
Set master domain assignment.
- void [RDC_GetDefaultMasterDomainAssignment](#) ([rdc_domain_assignment_t](#) *domainAssignment)
Get default master domain assignment.
- static void [RDC_LockMasterDomainAssignment](#) (RDC_Type *base, rdc_master_t master)
Lock master domain assignment.
- void [RDC_SetPeriphAccessConfig](#) (RDC_Type *base, const [rdc_periph_access_config_t](#) *config)
Set peripheral access policy.
- void [RDC_GetDefaultPeriphAccessConfig](#) ([rdc_periph_access_config_t](#) *config)
Get default peripheral access policy.
- static void [RDC_LockPeriphAccessConfig](#) (RDC_Type *base, rdc_periph_t periph)
Lock peripheral access policy configuration.
- void [RDC_SetMemAccessConfig](#) (RDC_Type *base, const [rdc_mem_access_config_t](#) *config)
Set memory region access policy.
- void [RDC_GetDefaultMemAccessConfig](#) ([rdc_mem_access_config_t](#) *config)
Get default memory region access policy.
- static void [RDC_LockMemAccessConfig](#) (RDC_Type *base, rdc_mem_t mem)
Lock memory access policy configuration.
- static void [RDC_SetMemAccessValid](#) (RDC_Type *base, rdc_mem_t mem, bool valid)
Enable or disable memory access policy configuration.
- void [RDC_GetMemViolationStatus](#) (RDC_Type *base, rdc_mem_t mem, [rdc_mem_status_t](#) *status)
Get the memory region violation status.
- static void [RDC_ClearMemViolationFlag](#) (RDC_Type *base, rdc_mem_t mem)
Clear the memory region violation flag.
- static uint8_t [RDC_GetCurrentMasterDomainId](#) (RDC_Type *base)
Gets the domain ID of the current bus master.

Data Structure Documentation

18.2.1 struct rdc_hardware_config_t

Data Fields

- uint32_t [domainNumber](#): 4
Number of domains.
- uint32_t [masterNumber](#): 8

- *Number of bus masters.*
uint32_t [periphNumber](#): 8
- *Number of peripherals.*
uint32_t [memNumber](#): 8
- *Number of memory regions.*

18.2.1.0.0.16 Field Documentation

18.2.1.0.0.16.1 uint32_t rdc_hardware_config_t::domainNumber

18.2.1.0.0.16.2 uint32_t rdc_hardware_config_t::masterNumber

18.2.1.0.0.16.3 uint32_t rdc_hardware_config_t::periphNumber

18.2.1.0.0.16.4 uint32_t rdc_hardware_config_t::memNumber

18.2.2 struct rdc_domain_assignment_t

Data Fields

- uint32_t [domainId](#): 2U
Domain ID.
- uint32_t [__pad0__](#): 29U
Reserved.
- uint32_t [lock](#): 1U
Lock the domain assignment.

18.2.2.0.0.17 Field Documentation

18.2.2.0.0.17.1 uint32_t rdc_domain_assignment_t::domainId

18.2.2.0.0.17.2 uint32_t rdc_domain_assignment_t::__pad0__

18.2.2.0.0.17.3 uint32_t rdc_domain_assignment_t::lock

18.2.3 struct rdc_periph_access_config_t

Data Fields

- rdc_periph_t [periph](#)
Peripheral name.
- bool [lock](#)
Lock the permission until reset.
- bool [enableSema](#)
Enable semaphore or not, when enabled, master should call [RDC_SEMA42_Lock](#) to lock the semaphore gate accordingly before access the peripheral.
- uint16_t [policy](#)
Access policy.

18.2.3.0.0.18 Field Documentation**18.2.3.0.0.18.1** `rdc_periph_t rdc_periph_access_config_t::periph`**18.2.3.0.0.18.2** `bool rdc_periph_access_config_t::lock`**18.2.3.0.0.18.3** `bool rdc_periph_access_config_t::enableSema`**18.2.3.0.0.18.4** `uint16_t rdc_periph_access_config_t::policy`**18.2.4 struct rdc_mem_access_config_t**

Note that when setting the [baseAddress](#) and [endAddress](#), should be aligned to the region resolution, see `rdc_mem_t` definitions.

Data Fields

- `rdc_mem_t` [mem](#)
Memory region descriptor name.
- `bool` [lock](#)
Lock the configuration.
- `uint64_t` [baseAddress](#)
Start address of the memory region.
- `uint64_t` [endAddress](#)
End address of the memory region.
- `uint16_t` [policy](#)
Access policy.

18.2.4.0.0.19 Field Documentation**18.2.4.0.0.19.1** `rdc_mem_t rdc_mem_access_config_t::mem`**18.2.4.0.0.19.2** `bool rdc_mem_access_config_t::lock`**18.2.4.0.0.19.3** `uint64_t rdc_mem_access_config_t::baseAddress`**18.2.4.0.0.19.4** `uint64_t rdc_mem_access_config_t::endAddress`**18.2.4.0.0.19.5** `uint16_t rdc_mem_access_config_t::policy`**18.2.5 struct rdc_mem_status_t****Data Fields**

- `bool` [hasViolation](#)
Violating happens or not.
- `uint8_t` [domainID](#)
Violating Domain ID.

- uint64_t [address](#)
Violating Address.

18.2.5.0.0.20 Field Documentation

18.2.5.0.0.20.1 bool rdc_mem_status_t::hasViolation

18.2.5.0.0.20.2 uint8_t rdc_mem_status_t::domainID

18.2.5.0.0.20.3 uint64_t rdc_mem_status_t::address

Enumeration Type Documentation

18.3.1 enum _rdc_interrupts

Enumerator

kRDC_RestoreCompleteInterrupt Interrupt generated when the RDC has completed restoring state to a recently re-powered memory regions.

18.3.2 enum _rdc_flags

Enumerator

kRDC_PowerDownDomainOn Power down domain is ON.

18.3.3 enum _rdc_access_policy

Enumerator

kRDC_NoAccess Could not read or write.

kRDC_WriteOnly Write only.

kRDC_ReadOnly Read only.

kRDC_ReadWrite Read and write.

Function Documentation

18.4.1 void RDC_Init (RDC_Type * *base*)

This function enables the RDC clock.

Parameters

<i>base</i>	RDC peripheral base address.
-------------	------------------------------

18.4.2 void RDC_Deinit (RDC_Type * *base*)

This function disables the RDC clock.

Parameters

<i>base</i>	RDC peripheral base address.
-------------	------------------------------

18.4.3 void RDC_GetHardwareConfig (RDC_Type * *base*, rdc_hardware_config_t * *config*)

This function gets the RDC hardware configurations, including number of bus masters, number of domains, number of memory regions and number of peripherals.

Parameters

<i>base</i>	RDC peripheral base address.
<i>config</i>	Pointer to the structure to get the configuration.

18.4.4 static void RDC_EnableInterrupts (RDC_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
<i>mask</i>	Interrupts to enable, it is OR'ed value of enum _rdc_interrupts .

18.4.5 static void RDC_DisableInterrupts (RDC_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
<i>mask</i>	Interrupts to disable, it is OR'ed value of enum _rdc_interrupts .

18.4.6 static uint32_t RDC_GetInterruptStatus (RDC_Type * *base*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
-------------	------------------------------

Returns

Interrupts pending status, it is OR'ed value of enum [_rdc_interrupts](#).

18.4.7 static void RDC_ClearInterruptStatus (RDC_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
<i>mask</i>	Status to clear, it is OR'ed value of enum _rdc_interrupts .

18.4.8 static uint32_t RDC_GetStatus (RDC_Type * *base*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
-------------	------------------------------

Returns

mask RDC status, it is OR'ed value of enum [_rdc_flags](#).

18.4.9 static void RDC_ClearStatus (RDC_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
<i>mask</i>	RDC status to clear, it is OR'ed value of enum _rdc_flags .

18.4.10 void RDC_SetMasterDomainAssignment (RDC_Type * *base*, rdc_master_t *master*, const rdc_domain_assignment_t * *domainAssignment*)

Parameters

<i>base</i>	RDC peripheral base address.
<i>master</i>	Which master to set.
<i>domain-Assignment</i>	Pointer to the assignment.

18.4.11 void RDC_GetDefaultMasterDomainAssignment (rdc_domain_assignment_t * *domainAssignment*)

The default configuration is:

```
assignment->domainId = 0U;
assignment->lock = 0U;
```

Parameters

<i>domain-Assignment</i>	Pointer to the assignment.
--------------------------	----------------------------

18.4.12 static void RDC_LockMasterDomainAssignment (RDC_Type * *base*, rdc_master_t *master*) [inline], [static]

Once locked, it could not be unlocked until next reset.

Parameters

<i>base</i>	RDC peripheral base address.
<i>master</i>	Which master to lock.

18.4.13 void RDC_SetPeriphAccessConfig (RDC_Type * *base*, const rdc_periph_access_config_t * *config*)

Parameters

<i>base</i>	RDC peripheral base address.
<i>config</i>	Pointer to the policy configuration.

18.4.14 void RDC_GetDefaultPeriphAccessConfig (rdc_periph_access_config_t * *config*)

The default configuration is:

```
config->lock = false;
config->enableSema = false;
config->policy = RDC_ACCESS_POLICY(0, kRDC_ReadWrite) |
                RDC_ACCESS_POLICY(1, kRDC_ReadWrite) |
                RDC_ACCESS_POLICY(2, kRDC_ReadWrite) |
                RDC_ACCESS_POLICY(3, kRDC_ReadWrite);
```

Parameters

<i>config</i>	Pointer to the policy configuration.
---------------	--------------------------------------

18.4.15 static void RDC_LockPeriphAccessConfig (RDC_Type * *base*, rdc_periph_t *periph*) [inline], [static]

Once locked, it could not be unlocked until reset.

Parameters

<i>base</i>	RDC peripheral base address.
-------------	------------------------------

<i>periph</i>	Which peripheral to lock.
---------------	---------------------------

18.4.16 void RDC_SetMemAccessConfig (RDC_Type * *base*, const rdc_mem_access_config_t * *config*)

Note that when setting the baseAddress and endAddress in `config`, should be aligned to the region resolution, see `rdc_mem_t` definitions.

Parameters

<i>base</i>	RDC peripheral base address.
<i>config</i>	Pointer to the policy configuration.

18.4.17 void RDC_GetDefaultMemAccessConfig (rdc_mem_access_config_t * *config*)

The default configuration is:

```
config->lock = false;
config->baseAddress = 0;
config->endAddress = 0;
config->policy = RDC_ACCESS_POLICY(0, kRDC_ReadWrite) |
                RDC_ACCESS_POLICY(1, kRDC_ReadWrite) |
                RDC_ACCESS_POLICY(2, kRDC_ReadWrite) |
                RDC_ACCESS_POLICY(3, kRDC_ReadWrite);
```

Parameters

<i>config</i>	Pointer to the policy configuration.
---------------	--------------------------------------

18.4.18 static void RDC_LockMemAccessConfig (RDC_Type * *base*, rdc_mem_t *mem*) [inline], [static]

Once locked, it could not be unlocked until reset. After locked, you can only call [RDC_SetMemAccess-Valid](#) to enable the configuration, but can not disable it or change other settings.

Parameters

<i>base</i>	RDC peripheral base address.
<i>mem</i>	Which memory region to lock.

18.4.19 static void RDC_SetMemAccessValid (RDC_Type * *base*, rdc_mem_t *mem*, bool *valid*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
<i>mem</i>	Which memory region to operate.
<i>valid</i>	Pass in true to valid, false to invalid.

18.4.20 void RDC_GetMemViolationStatus (RDC_Type * *base*, rdc_mem_t *mem*, rdc_mem_status_t * *status*)

The first access violation is captured. Subsequent violations are ignored until the status register is cleared. Contents are cleared upon reading the register. Clearing of contents occurs only when the status is read by the memory region's associated domain ID(s).

Parameters

<i>base</i>	RDC peripheral base address.
<i>mem</i>	Which memory region to get.
<i>status</i>	The returned status.

18.4.21 static void RDC_ClearMemViolationFlag (RDC_Type * *base*, rdc_mem_t *mem*) [inline], [static]

Parameters

<i>base</i>	RDC peripheral base address.
<i>mem</i>	Which memory region to clear.

18.4.22 static uint8_t RDC_GetCurrentMasterDomainId (RDC_Type * *base*) [inline], [static]

This function returns the domain ID of the current bus master.

Parameters

<i>base</i>	RDC peripheral base address.
-------------	------------------------------

Returns

Domain ID of current bus master.

Chapter 19

RDC_SEMA42: Hardware Semaphores Driver

Overview

The MCUXpresso SDK provides a driver for the RDC_SEMA42 module of MCUXpresso SDK devices.

The RDC_SEMA42 driver should be used together with RDC driver.

Before using the RDC_SEMA42, call the [RDC_SEMA42_Init\(\)](#) function to initialize the module. Note that this function only enables the clock but does not reset the gates because the module might be used by other processors at the same time. To reset the gates, call either the [RDC_SEMA42_ResetGate\(\)](#) or [RDC_SEMA42_ResetAllGates\(\)](#) functions. The function [RDC_SEMA42_Deinit\(\)](#) deinitializes the RDC_SEMA42.

The RDC_SEMA42 provides two functions to lock the RDC_SEMA42 gate. The function [RDC_SEMA42_TryLock\(\)](#) tries to lock the gate. If the gate has been locked by another processor, this function returns an error immediately. The function [RDC_SEMA42_Lock\(\)](#) is a blocking method, which waits until the gate is free and locks it.

The [RDC_SEMA42_Unlock\(\)](#) unlocks the RDC_SEMA42 gate. The gate can only be unlocked by the processor which locked it. If the gate is not locked by the current processor, this function takes no effect. The function [RDC_SEMA42_GetGateStatus\(\)](#) returns a status whether the gate is unlocked and which processor locks the gate. The function [RDC_SEMA42_GetLockDomainID\(\)](#) returns the ID of the domain which has locked the gate.

The RDC_SEMA42 gate can be reset to unlock forcefully. The function [RDC_SEMA42_ResetGate\(\)](#) resets a specific gate. The function [RDC_SEMA42_ResetAllGates\(\)](#) resets all gates.

Macros

- #define [RDC_SEMA42_GATE_NUM_RESET_ALL](#) (64U)
The number to reset all RDC_SEMA42 gates.
- #define [RDC_SEMA42_GATEn](#)(base, n) (((volatile uint8_t *)&((base)->GATE0)))[(n)]
RDC_SEMA42 gate n register address.
- #define [RDC_SEMA42_GATE_COUNT](#) (64U)
RDC_SEMA42 gate count.

Functions

- void [RDC_SEMA42_Init](#) (RDC_SEMAPHORE_Type *base)
Initializes the RDC_SEMA42 module.
- void [RDC_SEMA42_Deinit](#) (RDC_SEMAPHORE_Type *base)
De-initializes the RDC_SEMA42 module.
- [status_t](#) [RDC_SEMA42_TryLock](#) (RDC_SEMAPHORE_Type *base, uint8_t gateNum, uint8_t masterIndex, uint8_t domainId)
Tries to lock the RDC_SEMA42 gate.

- void [RDC_SEMA42_Lock](#) (RDC_SEMAPHORE_Type *base, uint8_t gateNum, uint8_t masterIndex, uint8_t domainId)
Locks the RDC_SEMA42 gate.
- static void [RDC_SEMA42_Unlock](#) (RDC_SEMAPHORE_Type *base, uint8_t gateNum)
Unlocks the RDC_SEMA42 gate.
- static int32_t [RDC_SEMA42_GetLockMasterIndex](#) (RDC_SEMAPHORE_Type *base, uint8_t gateNum)
Gets which master has currently locked the gate.
- int32_t [RDC_SEMA42_GetLockDomainID](#) (RDC_SEMAPHORE_Type *base, uint8_t gateNum)
Gets which domain has currently locked the gate.
- status_t [RDC_SEMA42_ResetGate](#) (RDC_SEMAPHORE_Type *base, uint8_t gateNum)
Resets the RDC_SEMA42 gate to an unlocked status.
- static status_t [RDC_SEMA42_ResetAllGates](#) (RDC_SEMAPHORE_Type *base)
Resets all RDC_SEMA42 gates to an unlocked status.

Driver version

- #define [FSL_RDC_SEMA42_DRIVER_VERSION](#) (MAKE_VERSION(2, 0, 3))
RDC_SEMA42 driver version.

Macro Definition Documentation

19.2.1 #define RDC_SEMA42_GATE_NUM_RESET_ALL (64U)

19.2.2 #define RDC_SEMA42_GATEn(base, n) (((volatile uint8_t *)(&((base)->GATE0)))[(n)])

19.2.3 #define RDC_SEMA42_GATE_COUNT (64U)

Function Documentation

19.3.1 void RDC_SEMA42_Init (RDC_SEMAPHORE_Type * base)

This function initializes the RDC_SEMA42 module. It only enables the clock but does not reset the gates because the module might be used by other processors at the same time. To reset the gates, call either RDC_SEMA42_ResetGate or RDC_SEMA42_ResetAllGates function.

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
-------------	-------------------------------------

19.3.2 void RDC_SEMA42_Deinit (RDC_SEMAPHORE_Type * base)

This function de-initializes the RDC_SEMA42 module. It only disables the clock.

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
-------------	-------------------------------------

19.3.3 **status_t RDC_SEMA42_TryLock (RDC_SEMAPHORE_Type * *base*, uint8_t *gateNum*, uint8_t *masterIndex*, uint8_t *domainId*)**

This function tries to lock the specific RDC_SEMA42 gate. If the gate has been locked by another processor, this function returns an error code.

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
<i>gateNum</i>	Gate number to lock.
<i>masterIndex</i>	Current processor master index.
<i>domainId</i>	Current processor domain ID.

Return values

<i>kStatus_Success</i>	Lock the sema42 gate successfully.
<i>kStatus_Failed</i>	Sema42 gate has been locked by another processor.

19.3.4 **void RDC_SEMA42_Lock (RDC_SEMAPHORE_Type * *base*, uint8_t *gateNum*, uint8_t *masterIndex*, uint8_t *domainId*)**

This function locks the specific RDC_SEMA42 gate. If the gate has been locked by other processors, this function waits until it is unlocked and then lock it.

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
<i>gateNum</i>	Gate number to lock.
<i>masterIndex</i>	Current processor master index.
<i>domainId</i>	Current processor domain ID.

19.3.5 static void RDC_SEMA42_Unlock (RDC_SEMAPHORE_Type * *base*, uint8_t *gateNum*) [inline], [static]

This function unlocks the specific RDC_SEMA42 gate. It only writes unlock value to the RDC_SEMA42 gate register. However, it does not check whether the RDC_SEMA42 gate is locked by the current processor or not. As a result, if the RDC_SEMA42 gate is not locked by the current processor, this function has no effect.

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
<i>gateNum</i>	Gate number to unlock.

19.3.6 static int32_t RDC_SEMA42_GetLockMasterIndex (RDC_SEMAPHORE_Type * *base*, uint8_t *gateNum*) [inline], [static]

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
<i>gateNum</i>	Gate number.

Returns

Return -1 if the gate is not locked by any master, otherwise return the master index.

19.3.7 int32_t RDC_SEMA42_GetLockDomainID (RDC_SEMAPHORE_Type * *base*, uint8_t *gateNum*)

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
<i>gateNum</i>	Gate number.

Returns

Return -1 if the gate is not locked by any domain, otherwise return the domain ID.

19.3.8 `status_t RDC_SEMA42_ResetGate (RDC_SEMAPHORE_Type * base, uint8_t gateNum)`

This function resets a RDC_SEMA42 gate to an unlocked status.

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
<i>gateNum</i>	Gate number.

Return values

<i>kStatus_Success</i>	RDC_SEMA42 gate is reset successfully.
<i>kStatus_Failed</i>	Some other reset process is ongoing.

19.3.9 static status_t RDC_SEMA42_ResetAllGates (RDC_SEMAPHORE_Type * *base*) [inline], [static]

This function resets all RDC_SEMA42 gate to an unlocked status.

Parameters

<i>base</i>	RDC_SEMA42 peripheral base address.
-------------	-------------------------------------

Return values

<i>kStatus_Success</i>	RDC_SEMA42 is reset successfully.
<i>kStatus_RDC_SEMA42_-Reseting</i>	Some other reset process is ongoing.

Chapter 20

SAI: Serial Audio Interface

Overview

The MCUXpresso SDK provides a peripheral driver for the Serial Audio Interface (SAI) module of MCUXpresso SDK devices.

SAI driver includes functional APIs and transactional APIs.

Functional APIs target low-level APIs. Functional APIs can be used for SAI initialization, configuration and operation, and for optimization and customization purposes. Using the functional API requires the knowledge of the SAI peripheral and how to organize functional APIs to meet the application requirements. All functional API use the peripheral base address as the first parameter. SAI functional operation groups provide the functional API set.

Transactional APIs target high-level APIs. Transactional APIs can be used to enable the peripheral and in the application if the code size and performance of transactional APIs satisfy the requirements. If the code size and performance are a critical requirement, see the transactional API implementation and write a custom code. All transactional APIs use the `sai_handle_t` as the first parameter. Initialize the handle by calling the [SAI_TransferTxCreateHandle\(\)](#) or [SAI_TransferRxCreateHandle\(\)](#) API.

Transactional APIs support asynchronous transfer. This means that the functions [SAI_TransferSendNonBlocking\(\)](#) and [SAI_TransferReceiveNonBlocking\(\)](#) set up the interrupt for data transfer. When the transfer completes, the upper layer is notified through a callback function with the `kStatus_SAI_TxIdle` and `kStatus_SAI_RxIdle` status.

Typical configurations

Bit width configuration

SAI driver support 8/16/24/32bits stereo/mono raw audio data transfer. SAI EDMA driver support 8/16/32bits stereo/mono raw audio data transfer, since the EDMA doesn't support 24bit data width, so application should pre-convert the 24bit data to 32bit. SAI DMA driver support 8/16/32bits stereo/mono raw audio data transfer, since the EDMA doesn't support 24bit data width, so application should pre-convert the 24bit data to 32bit. SAI SDMA driver support 8/16/24/32bits stereo/mono raw audio data transfer.

Frame configuration

SAI driver support I2S, DSP, Left justified, Right justified, TDM mode. Application can call the api directly: `SAI_GetClassicI2SConfig` `SAI_GetLeftJustifiedConfig` `SAI_GetRightJustifiedConfig` `SAI_GetTDMConfig` `SAI_GetDSPConfig`

Typical use case

20.3.1 SAI Send/receive using an interrupt method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/sai`

20.3.2 SAI Send/receive using a DMA method

Refer to the driver examples codes located at `<SDK_ROOT>/boards/<BOARD>/driver_examples/sai`

Modules

- [SAI Driver](#)

SAI Driver

20.4.1 Overview

Data Structures

- struct [sai_config_t](#)
SAI user configuration structure. [More...](#)
- struct [sai_transfer_format_t](#)
sai transfer format [More...](#)
- struct [sai_master_clock_t](#)
master clock configurations [More...](#)
- struct [sai_fifo_t](#)
sai fifo configurations [More...](#)
- struct [sai_bit_clock_t](#)
sai bit clock configurations [More...](#)
- struct [sai_frame_sync_t](#)
sai frame sync configurations [More...](#)
- struct [sai_serial_data_t](#)
sai serial data configurations [More...](#)
- struct [sai_transceiver_t](#)
sai transceiver configurations [More...](#)
- struct [sai_transfer_t](#)
SAI transfer structure. [More...](#)
- struct [sai_handle_t](#)
SAI handle structure. [More...](#)

Macros

- #define [SAI_XFER_QUEUE_SIZE](#) (4U)
SAI transfer queue size, user can refine it according to use case.
- #define [FSL_SAI_HAS_FIFO_EXTEND_FEATURE](#) 1
sai fifo feature

Typedefs

- typedef void(* [sai_transfer_callback_t](#))(I2S_Type *base, sai_handle_t *handle, [status_t](#) status, void *userData)
SAI transfer callback prototype.

Enumerations

- enum {
 - kStatus_SAI_TxBusy = MAKE_STATUS(kStatusGroup_SAI, 0),
 - kStatus_SAI_RxBusy = MAKE_STATUS(kStatusGroup_SAI, 1),
 - kStatus_SAI_TxError = MAKE_STATUS(kStatusGroup_SAI, 2),
 - kStatus_SAI_RxError = MAKE_STATUS(kStatusGroup_SAI, 3),
 - kStatus_SAI_QueueFull = MAKE_STATUS(kStatusGroup_SAI, 4),
 - kStatus_SAI_TxIdle = MAKE_STATUS(kStatusGroup_SAI, 5),
 - kStatus_SAI_RxIdle = MAKE_STATUS(kStatusGroup_SAI, 6) }*_sai_status_t, SAI return status.*
- enum {
 - kSAI_Channel0Mask = 1 << 0U,
 - kSAI_Channel1Mask = 1 << 1U,
 - kSAI_Channel2Mask = 1 << 2U,
 - kSAI_Channel3Mask = 1 << 3U,
 - kSAI_Channel4Mask = 1 << 4U,
 - kSAI_Channel5Mask = 1 << 5U,
 - kSAI_Channel6Mask = 1 << 6U,
 - kSAI_Channel7Mask = 1 << 7U }*_sai_channel_mask, sai channel mask value, actual channel numbers is depend soc specific*
- enum sai_protocol_t {
 - kSAI_BusLeftJustified = 0x0U,
 - kSAI_BusRightJustified,
 - kSAI_BusI2S,
 - kSAI_BusPCMA,
 - kSAI_BusPCMB }*Define the SAI bus type.*
- enum sai_master_slave_t {
 - kSAI_Master = 0x0U,
 - kSAI_Slave = 0x1U,
 - kSAI_Bclk_Master_FrameSync_Slave = 0x2U,
 - kSAI_Bclk_Slave_FrameSync_Master = 0x3U }*Master or slave mode.*
- enum sai_mono_stereo_t {
 - kSAI_Stereo = 0x0U,
 - kSAI_MonoRight,
 - kSAI_MonoLeft }*Mono or stereo audio format.*
- enum sai_data_order_t {
 - kSAI_DataLSB = 0x0U,
 - kSAI_DataMSB }*SAI data order, MSB or LSB.*
- enum sai_clock_polarity_t {

- kSAI_PolarityActiveHigh = 0x0U,
 - kSAI_PolarityActiveLow = 0x1U,
 - kSAI_SampleOnFallingEdge = 0x0U,
 - kSAI_SampleOnRisingEdge = 0x1U }

SAI clock polarity, active high or low.
- enum sai_sync_mode_t {
 - kSAI_ModeAsync = 0x0U,
 - kSAI_ModeSync }

Synchronous or asynchronous mode.
- enum sai_bclk_source_t {
 - kSAI_BclkSourceBusclk = 0x0U,
 - kSAI_BclkSourceMclkOption1 = 0x1U,
 - kSAI_BclkSourceMclkOption2 = 0x2U,
 - kSAI_BclkSourceMclkOption3 = 0x3U,
 - kSAI_BclkSourceMclkDiv = 0x1U,
 - kSAI_BclkSourceOtherSai0 = 0x2U,
 - kSAI_BclkSourceOtherSai1 = 0x3U }

Bit clock source.
- enum {
 - kSAI_WordStartInterruptEnable,
 - kSAI_SyncErrorInterruptEnable = I2S_TCSR_SEIE_MASK,
 - kSAI_FIFOWarningInterruptEnable = I2S_TCSR_FWIE_MASK,
 - kSAI_FIFOErrorInterruptEnable = I2S_TCSR_FEIE_MASK,
 - kSAI_FIFORequestInterruptEnable = I2S_TCSR_FRIE_MASK }

_sai_interrupt_enable_t, The SAI interrupt enable flag
- enum {
 - kSAI_FIFOWarningDMAEnable = I2S_TCSR_FWDE_MASK,
 - kSAI_FIFORequestDMAEnable = I2S_TCSR_FRDE_MASK }

_sai_dma_enable_t, The DMA request sources
- enum {
 - kSAI_WordStartFlag = I2S_TCSR_WSF_MASK,
 - kSAI_SyncErrorFlag = I2S_TCSR_SEF_MASK,
 - kSAI_FIFOErrorFlag = I2S_TCSR_FEF_MASK,
 - kSAI_FIFORequestFlag = I2S_TCSR_FRF_MASK,
 - kSAI_FIFOWarningFlag = I2S_TCSR_FWF_MASK }

_sai_flags, The SAI status flag
- enum sai_reset_type_t {
 - kSAI_ResetTypeSoftware = I2S_TCSR_SR_MASK,
 - kSAI_ResetTypeFIFO = I2S_TCSR_FR_MASK,
 - kSAI_ResetAll = I2S_TCSR_SR_MASK | I2S_TCSR_FR_MASK }

The reset type.
- enum sai_fifo_packing_t {
 - kSAI_FifoPackingDisabled = 0x0U,
 - kSAI_FifoPacking8bit = 0x2U,
 - kSAI_FifoPacking16bit = 0x3U }

The SAI packing mode The mode includes 8 bit and 16 bit packing.
- enum sai_sample_rate_t {

```

kSAI_SampleRate8KHz = 8000U,
kSAI_SampleRate11025Hz = 11025U,
kSAI_SampleRate12KHz = 12000U,
kSAI_SampleRate16KHz = 16000U,
kSAI_SampleRate22050Hz = 22050U,
kSAI_SampleRate24KHz = 24000U,
kSAI_SampleRate32KHz = 32000U,
kSAI_SampleRate44100Hz = 44100U,
kSAI_SampleRate48KHz = 48000U,
kSAI_SampleRate96KHz = 96000U,
kSAI_SampleRate192KHz = 192000U,
kSAI_SampleRate384KHz = 384000U }

```

Audio sample rate.

- enum `sai_word_width_t` {
`kSAI_WordWidth8bits` = 8U,
`kSAI_WordWidth16bits` = 16U,
`kSAI_WordWidth24bits` = 24U,
`kSAI_WordWidth32bits` = 32U }

Audio word width.

- enum `sai_data_pin_state_t` {
`kSAI_DataPinStateTriState`,
`kSAI_DataPinStateOutputZero` = 1U }

sai data pin state definition

- enum `sai_transceiver_type_t` {
`kSAI_Transmitter` = 0U,
`kSAI_Receiver` = 1U }

sai transceiver type

- enum `sai_frame_sync_len_t` {
`kSAI_FrameSyncLenOneBitClk` = 0U,
`kSAI_FrameSyncLenPerWordWidth` = 1U }

sai frame sync len

Driver version

- #define `FSL_SAI_DRIVER_VERSION` (`MAKE_VERSION(2, 3, 2)`)
Version 2.3.2.

Initialization and deinitialization

- void `SAI_TxInit` (I2S_Type *base, const `sai_config_t` *config)
Initializes the SAI Tx peripheral.
- void `SAI_RxInit` (I2S_Type *base, const `sai_config_t` *config)
Initializes the SAI Rx peripheral.
- void `SAI_TxGetDefaultConfig` (`sai_config_t` *config)
Sets the SAI Tx configuration structure to default values.

- void **SAI_RxGetDefaultConfig** (**sai_config_t** *config)
Sets the SAI Rx configuration structure to default values.
- void **SAI_Init** (**I2S_Type** *base)
Initializes the SAI peripheral.
- void **SAI_Deinit** (**I2S_Type** *base)
De-initializes the SAI peripheral.
- void **SAI_TxReset** (**I2S_Type** *base)
Resets the SAI Tx.
- void **SAI_RxReset** (**I2S_Type** *base)
Resets the SAI Rx.
- void **SAI_TxEnable** (**I2S_Type** *base, bool enable)
Enables/disables the SAI Tx.
- void **SAI_RxEnable** (**I2S_Type** *base, bool enable)
Enables/disables the SAI Rx.
- static void **SAI_TxSetBitClockDirection** (**I2S_Type** *base, **sai_master_slave_t** masterSlave)
Set Rx bit clock direction.
- static void **SAI_RxSetBitClockDirection** (**I2S_Type** *base, **sai_master_slave_t** masterSlave)
Set Rx bit clock direction.
- static void **SAI_RxSetFrameSyncDirection** (**I2S_Type** *base, **sai_master_slave_t** masterSlave)
Set Rx frame sync direction.
- static void **SAI_TxSetFrameSyncDirection** (**I2S_Type** *base, **sai_master_slave_t** masterSlave)
Set Tx frame sync direction.
- void **SAI_TxSetBitClockRate** (**I2S_Type** *base, uint32_t sourceClockHz, uint32_t sampleRate, uint32_t bitWidth, uint32_t channelNumbers)
Transmitter bit clock rate configurations.
- void **SAI_RxSetBitClockRate** (**I2S_Type** *base, uint32_t sourceClockHz, uint32_t sampleRate, uint32_t bitWidth, uint32_t channelNumbers)
Receiver bit clock rate configurations.
- void **SAI_TxSetBitclockConfig** (**I2S_Type** *base, **sai_master_slave_t** masterSlave, **sai_bit_clock_t** *config)
Transmitter Bit clock configurations.
- void **SAI_RxSetBitclockConfig** (**I2S_Type** *base, **sai_master_slave_t** masterSlave, **sai_bit_clock_t** *config)
Receiver Bit clock configurations.
- void **SAI_SetMasterClockConfig** (**I2S_Type** *base, **sai_master_clock_t** *config)
Master clock configurations.
- void **SAI_TxSetFifoConfig** (**I2S_Type** *base, **sai_fifo_t** *config)
SAI transmitter fifo configurations.
- void **SAI_RxSetFifoConfig** (**I2S_Type** *base, **sai_fifo_t** *config)
SAI receiver fifo configurations.
- void **SAI_TxSetFrameSyncConfig** (**I2S_Type** *base, **sai_master_slave_t** masterSlave, **sai_frame_sync_t** *config)
SAI transmitter Frame sync configurations.
- void **SAI_RxSetFrameSyncConfig** (**I2S_Type** *base, **sai_master_slave_t** masterSlave, **sai_frame_sync_t** *config)
SAI receiver Frame sync configurations.
- void **SAI_TxSetSerialDataConfig** (**I2S_Type** *base, **sai_serial_data_t** *config)
SAI transmitter Serial data configurations.
- void **SAI_RxSetSerialDataConfig** (**I2S_Type** *base, **sai_serial_data_t** *config)
SAI receiver Serial data configurations.

- void **SAI_TxSetConfig** (I2S_Type *base, sai_transceiver_t *config)
SAI transmitter configurations.
- void **SAI_RxSetConfig** (I2S_Type *base, sai_transceiver_t *config)
SAI receiver configurations.
- void **SAI_GetClassicI2SConfig** (sai_transceiver_t *config, sai_word_width_t bitWidth, sai_mono_stereo_t mode, uint32_t saiChannelMask)
Get classic I2S mode configurations.
- void **SAI_GetLeftJustifiedConfig** (sai_transceiver_t *config, sai_word_width_t bitWidth, sai_mono_stereo_t mode, uint32_t saiChannelMask)
Get left justified mode configurations.
- void **SAI_GetRightJustifiedConfig** (sai_transceiver_t *config, sai_word_width_t bitWidth, sai_mono_stereo_t mode, uint32_t saiChannelMask)
Get right justified mode configurations.
- void **SAI_GetTDMConfig** (sai_transceiver_t *config, sai_frame_sync_len_t frameSyncWidth, sai_word_width_t bitWidth, uint32_t dataWordNum, uint32_t saiChannelMask)
Get TDM mode configurations.
- void **SAI_GetDSPConfig** (sai_transceiver_t *config, sai_frame_sync_len_t frameSyncWidth, sai_word_width_t bitWidth, sai_mono_stereo_t mode, uint32_t saiChannelMask)
Get DSP mode configurations.

Status

- static uint32_t **SAI_TxGetStatusFlag** (I2S_Type *base)
Gets the SAI Tx status flag state.
- static void **SAI_TxClearStatusFlags** (I2S_Type *base, uint32_t mask)
Clears the SAI Tx status flag state.
- static uint32_t **SAI_RxGetStatusFlag** (I2S_Type *base)
Gets the SAI Rx status flag state.
- static void **SAI_RxClearStatusFlags** (I2S_Type *base, uint32_t mask)
Clears the SAI Rx status flag state.
- void **SAI_TxSoftwareReset** (I2S_Type *base, sai_reset_type_t type)
Do software reset or FIFO reset .
- void **SAI_RxSoftwareReset** (I2S_Type *base, sai_reset_type_t type)
Do software reset or FIFO reset .
- void **SAI_TxSetChannelFIFOMask** (I2S_Type *base, uint8_t mask)
Set the Tx channel FIFO enable mask.
- void **SAI_RxSetChannelFIFOMask** (I2S_Type *base, uint8_t mask)
Set the Rx channel FIFO enable mask.
- void **SAI_TxSetDataOrder** (I2S_Type *base, sai_data_order_t order)
Set the Tx data order.
- void **SAI_RxSetDataOrder** (I2S_Type *base, sai_data_order_t order)
Set the Rx data order.
- void **SAI_TxSetBitClockPolarity** (I2S_Type *base, sai_clock_polarity_t polarity)
Set the Tx data order.
- void **SAI_RxSetBitClockPolarity** (I2S_Type *base, sai_clock_polarity_t polarity)
Set the Rx data order.
- void **SAI_TxSetFrameSyncPolarity** (I2S_Type *base, sai_clock_polarity_t polarity)
Set the Tx data order.
- void **SAI_RxSetFrameSyncPolarity** (I2S_Type *base, sai_clock_polarity_t polarity)

- *Set the Rx data order.*
- void [SAI_TxSetFIFOPacking](#) (I2S_Type *base, [sai_fifo_packing_t](#) pack)
Set Tx FIFO packing feature.
- void [SAI_RxSetFIFOPacking](#) (I2S_Type *base, [sai_fifo_packing_t](#) pack)
Set Rx FIFO packing feature.
- static void [SAI_TxSetFIFOErrorContinue](#) (I2S_Type *base, bool isEnabled)
Set Tx FIFO error continue.
- static void [SAI_RxSetFIFOErrorContinue](#) (I2S_Type *base, bool isEnabled)
Set Rx FIFO error continue.

Interrupts

- static void [SAI_TxEnableInterrupts](#) (I2S_Type *base, uint32_t mask)
Enables the SAI Tx interrupt requests.
- static void [SAI_RxEnableInterrupts](#) (I2S_Type *base, uint32_t mask)
Enables the SAI Rx interrupt requests.
- static void [SAI_TxDisableInterrupts](#) (I2S_Type *base, uint32_t mask)
Disables the SAI Tx interrupt requests.
- static void [SAI_RxDisableInterrupts](#) (I2S_Type *base, uint32_t mask)
Disables the SAI Rx interrupt requests.

DMA Control

- static void [SAI_TxEnableDMA](#) (I2S_Type *base, uint32_t mask, bool enable)
Enables/disables the SAI Tx DMA requests.
- static void [SAI_RxEnableDMA](#) (I2S_Type *base, uint32_t mask, bool enable)
Enables/disables the SAI Rx DMA requests.
- static uint32_t [SAI_TxGetDataRegisterAddress](#) (I2S_Type *base, uint32_t channel)
Gets the SAI Tx data register address.
- static uint32_t [SAI_RxGetDataRegisterAddress](#) (I2S_Type *base, uint32_t channel)
Gets the SAI Rx data register address.

Bus Operations

- void [SAI_TxSetFormat](#) (I2S_Type *base, [sai_transfer_format_t](#) *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)
Configures the SAI Tx audio format.
- void [SAI_RxSetFormat](#) (I2S_Type *base, [sai_transfer_format_t](#) *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)
Configures the SAI Rx audio format.
- void [SAI_WriteBlocking](#) (I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer, uint32_t size)
Sends data using a blocking method.
- void [SAI_WriteMultiChannelBlocking](#) (I2S_Type *base, uint32_t channel, uint32_t channelMask, uint32_t bitWidth, uint8_t *buffer, uint32_t size)
Sends data to multi channel using a blocking method.
- static void [SAI_WriteData](#) (I2S_Type *base, uint32_t channel, uint32_t data)

- Writes data into SAI FIFO.
- void [SAI_ReadBlocking](#) (I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer, uint32_t size)
Receives data using a blocking method.
- void [SAI_ReadMultiChannelBlocking](#) (I2S_Type *base, uint32_t channel, uint32_t channelMask, uint32_t bitWidth, uint8_t *buffer, uint32_t size)
Receives multi channel data using a blocking method.
- static uint32_t [SAI_ReadData](#) (I2S_Type *base, uint32_t channel)
Reads data from the SAI FIFO.

Transactional

- void [SAI_TransferTxCreateHandle](#) (I2S_Type *base, sai_handle_t *handle, sai_transfer_callback_t callback, void *userData)
Initializes the SAI Tx handle.
- void [SAI_TransferRxCreateHandle](#) (I2S_Type *base, sai_handle_t *handle, sai_transfer_callback_t callback, void *userData)
Initializes the SAI Rx handle.
- void [SAI_TransferTxSetConfig](#) (I2S_Type *base, sai_handle_t *handle, sai_transceiver_t *config)
SAI transmitter transfer configurations.
- void [SAI_TransferRxSetConfig](#) (I2S_Type *base, sai_handle_t *handle, sai_transceiver_t *config)
SAI receiver transfer configurations.
- status_t [SAI_TransferTxSetFormat](#) (I2S_Type *base, sai_handle_t *handle, sai_transfer_format_t *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)
Configures the SAI Tx audio format.
- status_t [SAI_TransferRxSetFormat](#) (I2S_Type *base, sai_handle_t *handle, sai_transfer_format_t *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)
Configures the SAI Rx audio format.
- status_t [SAI_TransferSendNonBlocking](#) (I2S_Type *base, sai_handle_t *handle, sai_transfer_t *xfer)
Performs an interrupt non-blocking send transfer on SAI.
- status_t [SAI_TransferReceiveNonBlocking](#) (I2S_Type *base, sai_handle_t *handle, sai_transfer_t *xfer)
Performs an interrupt non-blocking receive transfer on SAI.
- status_t [SAI_TransferGetSendCount](#) (I2S_Type *base, sai_handle_t *handle, size_t *count)
Gets a set byte count.
- status_t [SAI_TransferGetReceiveCount](#) (I2S_Type *base, sai_handle_t *handle, size_t *count)
Gets a received byte count.
- void [SAI_TransferAbortSend](#) (I2S_Type *base, sai_handle_t *handle)
Aborts the current send.
- void [SAI_TransferAbortReceive](#) (I2S_Type *base, sai_handle_t *handle)
Aborts the current IRQ receive.
- void [SAI_TransferTerminateSend](#) (I2S_Type *base, sai_handle_t *handle)
Terminate all SAI send.
- void [SAI_TransferTerminateReceive](#) (I2S_Type *base, sai_handle_t *handle)
Terminate all SAI receive.
- void [SAI_TransferTxHandleIRQ](#) (I2S_Type *base, sai_handle_t *handle)
Tx interrupt handler.
- void [SAI_TransferRxHandleIRQ](#) (I2S_Type *base, sai_handle_t *handle)

Tx interrupt handler.

20.4.2 Data Structure Documentation

20.4.2.1 struct sai_config_t

Data Fields

- [sai_protocol_t protocol](#)
Audio bus protocol in SAI.
- [sai_sync_mode_t syncMode](#)
SAI sync mode, control Tx/Rx clock sync.
- bool [mclkOutputEnable](#)
Master clock output enable, true means master clock divider enabled.
- [sai_bclk_source_t bclkSource](#)
Bit Clock source.
- [sai_master_slave_t masterSlave](#)
Master or slave.

20.4.2.2 struct sai_transfer_format_t

Data Fields

- uint32_t [sampleRate_Hz](#)
Sample rate of audio data.
- uint32_t [bitWidth](#)
Data length of audio data, usually 8/16/24/32 bits.
- [sai_mono_stereo_t stereo](#)
Mono or stereo.
- uint8_t [watermark](#)
Watermark value.
- uint8_t [channel](#)
Transfer start channel.
- uint8_t [channelMask](#)
enabled channel mask value, reference `_sai_channel_mask`
- uint8_t [endChannel](#)
end channel number
- uint8_t [channelNums](#)
Total enabled channel numbers.
- [sai_protocol_t protocol](#)
Which audio protocol used.
- bool [isFrameSyncCompact](#)
True means Frame sync length is configurable according to bitWidth, false means frame sync length is 64 times of bit clock.

20.4.2.2.0.21 Field Documentation

20.4.2.2.0.21.1 bool sai_transfer_format_t::isFrameSyncCompact

20.4.2.3 struct sai_master_clock_t

Data Fields

- bool [mclkOutputEnable](#)
master clock output enable
- uint32_t [mclkHz](#)
target mclk frequency
- uint32_t [mclkSourceClkHz](#)
mclk source frequency

20.4.2.4 struct sai_fifo_t

Data Fields

- bool [fifoContinueOnError](#)
fifo continues when error occur
- [sai_fifo_packing_t](#) [fifoPacking](#)
fifo packing mode
- uint8_t [fifoWatermark](#)
fifo watermark

20.4.2.5 struct sai_bit_clock_t

Data Fields

- bool [bclkSrcSwap](#)
bit clock source swap
- bool [bclkInputDelay](#)
bit clock actually used by the transmitter is delayed by the pad output delay, this has effect of decreasing the data input setup time, but increasing the data output valid time .
- [sai_clock_polarity_t](#) [bclkPolarity](#)
bit clock polarity
- [sai_bclk_source_t](#) [bclkSource](#)
bit Clock source

20.4.2.5.0.22 Field Documentation

20.4.2.5.0.22.1 bool sai_bit_clock_t::bclkInputDelay

20.4.2.6 struct sai_frame_sync_t

Data Fields

- uint8_t [frameSyncWidth](#)

- *frame sync width in number of bit clocks*
- bool [frameSyncEarly](#)
TRUE is frame sync assert one bit before the first bit of frame FALSE is frame sync assert with the first bit of the frame.
- [sai_clock_polarity_t](#) [frameSyncPolarity](#)
frame sync polarity

20.4.2.7 struct [sai_serial_data_t](#)

Data Fields

- [sai_data_pin_state_t](#) [dataMode](#)
sai data pin state when slots masked or channel disabled
- [sai_data_order_t](#) [dataOrder](#)
configure whether the LSB or MSB is transmitted first
- [uint8_t](#) [dataWord0Length](#)
configure the number of bits in the first word in each frame
- [uint8_t](#) [dataWordNLength](#)
configure the number of bits in the each word in each frame, except the first word
- [uint8_t](#) [dataWordLength](#)
used to record the data length for dma transfer
- [uint8_t](#) [dataFirstBitShifted](#)
Configure the bit index for the first bit transmitted for each word in the frame.
- [uint8_t](#) [dataWordNum](#)
configure the number of words in each frame
- [uint32_t](#) [dataMaskedWord](#)
configure whether the transmit word is masked

20.4.2.8 struct [sai_transceiver_t](#)

Data Fields

- [sai_serial_data_t](#) [serialData](#)
serial data configurations
- [sai_frame_sync_t](#) [frameSync](#)
ws configurations
- [sai_bit_clock_t](#) [bitClock](#)
bit clock configurations
- [sai_fifo_t](#) [fifo](#)
fifo configurations
- [sai_master_slave_t](#) [masterSlave](#)
transceiver is master or slave
- [sai_sync_mode_t](#) [syncMode](#)
transceiver sync mode
- [uint8_t](#) [startChannel](#)
Transfer start channel.
- [uint8_t](#) [channelMask](#)
enabled channel mask value, reference [_sai_channel_mask](#)
- [uint8_t](#) [endChannel](#)

- *end channel number*
uint8_t [channelNums](#)
Total enabled channel numbers.

20.4.2.9 struct sai_transfer_t

Data Fields

- uint8_t * [data](#)
Data start address to transfer.
- size_t [dataSize](#)
Transfer size.

20.4.2.9.0.23 Field Documentation

20.4.2.9.0.23.1 uint8_t* sai_transfer_t::data

20.4.2.9.0.23.2 size_t sai_transfer_t::dataSize

20.4.2.10 struct _sai_handle

Data Fields

- I2S_Type * [base](#)
base address
- uint32_t [state](#)
Transfer status.
- [sai_transfer_callback_t](#) [callback](#)
Callback function called at transfer event.
- void * [userData](#)
Callback parameter passed to callback function.
- uint8_t [bitWidth](#)
Bit width for transfer, 8/16/24/32 bits.
- uint8_t [channel](#)
Transfer start channel.
- uint8_t [channelMask](#)
enabled channel mask value, refernece _sai_channel_mask
- uint8_t [endChannel](#)
end channel number
- uint8_t [channelNums](#)
Total enabled channel numbers.
- [sai_transfer_t](#) [saiQueue](#) [SAI_XFER_QUEUE_SIZE]
Transfer queue storing queued transfer.
- size_t [transferSize](#) [SAI_XFER_QUEUE_SIZE]
Data bytes need to transfer.
- volatile uint8_t [queueUser](#)
Index for user to queue transfer.
- volatile uint8_t [queueDriver](#)
Index for driver to get the transfer data and size.
- uint8_t [watermark](#)

Watermark value.

20.4.3 Macro Definition Documentation

20.4.3.1 #define SAI_XFER_QUEUE_SIZE (4U)

20.4.4 Enumeration Type Documentation

20.4.4.1 anonymous enum

Enumerator

kStatus_SAI_TxBusy SAI Tx is busy.
kStatus_SAI_RxBusy SAI Rx is busy.
kStatus_SAI_TxError SAI Tx FIFO error.
kStatus_SAI_RxError SAI Rx FIFO error.
kStatus_SAI_QueueFull SAI transfer queue is full.
kStatus_SAI_TxIdle SAI Tx is idle.
kStatus_SAI_RxIdle SAI Rx is idle.

20.4.4.2 anonymous enum

Enumerator

kSAI_Channel0Mask channel 0 mask value
kSAI_Channel1Mask channel 1 mask value
kSAI_Channel2Mask channel 2 mask value
kSAI_Channel3Mask channel 3 mask value
kSAI_Channel4Mask channel 4 mask value
kSAI_Channel5Mask channel 5 mask value
kSAI_Channel6Mask channel 6 mask value
kSAI_Channel7Mask channel 7 mask value

20.4.4.3 enum sai_protocol_t

Enumerator

kSAI_BusLeftJustified Uses left justified format.
kSAI_BusRightJustified Uses right justified format.
kSAI_BusI2S Uses I2S format.
kSAI_BusPCMA Uses I2S PCM A format.
kSAI_BusPCMB Uses I2S PCM B format.

20.4.4.4 enum sai_master_slave_t

Enumerator

kSAI_Master Master mode include bclk and frame sync.

kSAI_Slave Slave mode include bclk and frame sync.

kSAI_Bclk_Master_FrameSync_Slave bclk in master mode, frame sync in slave mode

kSAI_Bclk_Slave_FrameSync_Master bclk in slave mode, frame sync in master mode

20.4.4.5 enum sai_mono_stereo_t

Enumerator

kSAI_Stereo Stereo sound.

kSAI_MonoRight Only Right channel have sound.

kSAI_MonoLeft Only left channel have sound.

20.4.4.6 enum sai_data_order_t

Enumerator

kSAI_DataLSB LSB bit transferred first.

kSAI_DataMSB MSB bit transferred first.

20.4.4.7 enum sai_clock_polarity_t

Enumerator

kSAI_PolarityActiveHigh Drive outputs on rising edge.

kSAI_PolarityActiveLow Drive outputs on falling edge.

kSAI_SampleOnFallingEdge Sample inputs on falling edge.

kSAI_SampleOnRisingEdge Sample inputs on rising edge.

20.4.4.8 enum sai_sync_mode_t

Enumerator

kSAI_ModeAsync Asynchronous mode.

kSAI_ModeSync Synchronous mode (with receiver or transmit)

20.4.4.9 enum sai_bclk_source_t

Enumerator

kSAI_BclkSourceBusclk Bit clock using bus clock.
kSAI_BclkSourceMclkOption1 Bit clock MCLK option 1.
kSAI_BclkSourceMclkOption2 Bit clock MCLK option2.
kSAI_BclkSourceMclkOption3 Bit clock MCLK option3.
kSAI_BclkSourceMclkDiv Bit clock using master clock divider.
kSAI_BclkSourceOtherSai0 Bit clock from other SAI device.
kSAI_BclkSourceOtherSai1 Bit clock from other SAI device.

20.4.4.10 anonymous enum

Enumerator

kSAI_WordStartInterruptEnable Word start flag, means the first word in a frame detected.
kSAI_SyncErrorInterruptEnable Sync error flag, means the sync error is detected.
kSAI_FIFOWarningInterruptEnable FIFO warning flag, means the FIFO is empty.
kSAI_FIFOErrorInterruptEnable FIFO error flag.
kSAI_FIFORequestInterruptEnable FIFO request, means reached watermark.

20.4.4.11 anonymous enum

Enumerator

kSAI_FIFOWarningDMAEnable FIFO warning caused by the DMA request.
kSAI_FIFORequestDMAEnable FIFO request caused by the DMA request.

20.4.4.12 anonymous enum

Enumerator

kSAI_WordStartFlag Word start flag, means the first word in a frame detected.
kSAI_SyncErrorFlag Sync error flag, means the sync error is detected.
kSAI_FIFOErrorFlag FIFO error flag.
kSAI_FIFORequestFlag FIFO request flag.
kSAI_FIFOWarningFlag FIFO warning flag.

20.4.4.13 enum sai_reset_type_t

Enumerator

kSAI_ResetTypeSoftware Software reset, reset the logic state.
kSAI_ResetTypeFIFO FIFO reset, reset the FIFO read and write pointer.

kSAI_ResetAll All reset.

20.4.4.14 enum sai_fifo_packing_t

Enumerator

kSAI_FifoPackingDisabled Packing disabled.

kSAI_FifoPacking8bit 8 bit packing enabled

kSAI_FifoPacking16bit 16bit packing enabled

20.4.4.15 enum sai_sample_rate_t

Enumerator

kSAI_SampleRate8KHz Sample rate 8000 Hz.

kSAI_SampleRate11025Hz Sample rate 11025 Hz.

kSAI_SampleRate12KHz Sample rate 12000 Hz.

kSAI_SampleRate16KHz Sample rate 16000 Hz.

kSAI_SampleRate22050Hz Sample rate 22050 Hz.

kSAI_SampleRate24KHz Sample rate 24000 Hz.

kSAI_SampleRate32KHz Sample rate 32000 Hz.

kSAI_SampleRate44100Hz Sample rate 44100 Hz.

kSAI_SampleRate48KHz Sample rate 48000 Hz.

kSAI_SampleRate96KHz Sample rate 96000 Hz.

kSAI_SampleRate192KHz Sample rate 192000 Hz.

kSAI_SampleRate384KHz Sample rate 384000 Hz.

20.4.4.16 enum sai_word_width_t

Enumerator

kSAI_WordWidth8bits Audio data width 8 bits.

kSAI_WordWidth16bits Audio data width 16 bits.

kSAI_WordWidth24bits Audio data width 24 bits.

kSAI_WordWidth32bits Audio data width 32 bits.

20.4.4.17 enum sai_data_pin_state_t

Enumerator

kSAI_DataPinStateTriState transmit data pins are tri-stated when slots are masked or channels are disabled

kSAI_DataPinStateOutputZero transmit data pins are never tri-stated and will output zero when slots are masked or channel disabled

20.4.4.18 enum sai_transceiver_type_t

Enumerator

kSAI_Transmitter sai transmitter
kSAI_Receiver sai receiver

20.4.4.19 enum sai_frame_sync_len_t

Enumerator

kSAI_FrameSyncLenOneBitClk 1 bit clock frame sync len for DSP mode
kSAI_FrameSyncLenPerWordWidth Frame sync length decided by word width.

20.4.5 Function Documentation

20.4.5.1 void SAI_TxInit (I2S_Type * *base*, const sai_config_t * *config*)

Deprecated Do not use this function. It has been superceded by [SAI_Init](#)

Ungates the SAI clock, resets the module, and configures SAI Tx with a configuration structure. The configuration structure can be custom filled or set with default values by [SAI_TxGetDefaultConfig\(\)](#).

Note

This API should be called at the beginning of the application to use the SAI driver. Otherwise, accessing the SAIM module can cause a hard fault because the clock is not enabled.

Parameters

<i>base</i>	SAI base pointer
<i>config</i>	SAI configuration structure.

20.4.5.2 void SAI_RxInit (I2S_Type * *base*, const sai_config_t * *config*)

Deprecated Do not use this function. It has been superceded by [SAI_Init](#)

Ungates the SAI clock, resets the module, and configures the SAI Rx with a configuration structure. The configuration structure can be custom filled or set with default values by [SAI_RxGetDefaultConfig\(\)](#).

Note

This API should be called at the beginning of the application to use the SAI driver. Otherwise, accessing the SAI module can cause a hard fault because the clock is not enabled.

Parameters

<i>base</i>	SAI base pointer
<i>config</i>	SAI configuration structure.

20.4.5.3 void SAI_TxGetDefaultConfig (sai_config_t * config)

Deprecated Do not use this function. It has been superseded by [SAI_GetClassicI2SConfig](#), [SAI_GetLeft-JustifiedConfig](#) , [SAI_GetRightJustifiedConfig](#), [SAI_GetDSPConfig](#), [SAI_GetTDMConfig](#)

This API initializes the configuration structure for use in SAI_TxConfig(). The initialized structure can remain unchanged in SAI_TxConfig(), or it can be modified before calling SAI_TxConfig(). This is an example.

```
sai_config_t config;
SAI_TxGetDefaultConfig(&config);
```

Parameters

<i>config</i>	pointer to master configuration structure
---------------	---

20.4.5.4 void SAI_RxGetDefaultConfig (sai_config_t * config)

Deprecated Do not use this function. It has been superseded by [SAI_GetClassicI2SConfig](#), [SAI_GetLeft-JustifiedConfig](#) , [SAI_GetRightJustifiedConfig](#), [SAI_GetDSPConfig](#), [SAI_GetTDMConfig](#)

This API initializes the configuration structure for use in SAI_RxConfig(). The initialized structure can remain unchanged in SAI_RxConfig() or it can be modified before calling SAI_RxConfig(). This is an example.

```
sai_config_t config;
SAI_RxGetDefaultConfig(&config);
```

Parameters

<i>config</i>	pointer to master configuration structure
---------------	---

20.4.5.5 void SAI_Init (I2S_Type * base)

This API gates the SAI clock. The SAI module can't operate unless SAI_Init is called to enable the clock.

Parameters

<i>base</i>	SAI base pointer.
-------------	-------------------

20.4.5.6 void SAI_Deinit (I2S_Type * *base*)

This API gates the SAI clock. The SAI module can't operate unless SAI_TxInit or SAI_RxInit is called to enable the clock.

Parameters

<i>base</i>	SAI base pointer.
-------------	-------------------

20.4.5.7 void SAI_TxReset (I2S_Type * *base*)

This function enables the software reset and FIFO reset of SAI Tx. After reset, clear the reset bit.

Parameters

<i>base</i>	SAI base pointer
-------------	------------------

20.4.5.8 void SAI_RxReset (I2S_Type * *base*)

This function enables the software reset and FIFO reset of SAI Rx. After reset, clear the reset bit.

Parameters

<i>base</i>	SAI base pointer
-------------	------------------

20.4.5.9 void SAI_TxEnable (I2S_Type * *base*, bool *enable*)

Parameters

<i>base</i>	SAI base pointer.
<i>enable</i>	True means enable SAI Tx, false means disable.

20.4.5.10 void SAI_RxEnable (I2S_Type * *base*, bool *enable*)

Parameters

<i>base</i>	SAI base pointer.
<i>enable</i>	True means enable SAI Rx, false means disable.

20.4.5.11 static void SAI_TxSetBitClockDirection (I2S_Type * *base*, sai_master_slave_t *masterSlave*) [inline], [static]

Select bit clock direction, master or slave.

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	reference sai_master_slave_t.

20.4.5.12 static void SAI_RxSetBitClockDirection (I2S_Type * *base*, sai_master_slave_t *masterSlave*) [inline], [static]

Select bit clock direction, master or slave.

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	reference sai_master_slave_t.

20.4.5.13 static void SAI_RxSetFrameSyncDirection (I2S_Type * *base*, sai_master_slave_t *masterSlave*) [inline], [static]

Select frame sync direction, master or slave.

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	reference sai_master_slave_t.

20.4.5.14 static void SAI_TxSetFrameSyncDirection (I2S_Type * *base*, sai_master_slave_t *masterSlave*) [inline], [static]

Select frame sync direction, master or slave.

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	reference sai_master_slave_t.

20.4.5.15 void SAI_TxSetBitClockRate (I2S_Type * *base*, uint32_t *sourceClockHz*, uint32_t *sampleRate*, uint32_t *bitWidth*, uint32_t *channelNumbers*)

Parameters

<i>base</i>	SAI base pointer.
<i>sourceClockHz</i>	Bit clock source frequency.
<i>sampleRate</i>	Audio data sample rate.
<i>bitWidth</i>	Audio data bitWidth.
<i>channel-Numbers</i>	Audio channel numbers.

20.4.5.16 void SAI_RxSetBitClockRate (I2S_Type * *base*, uint32_t *sourceClockHz*, uint32_t *sampleRate*, uint32_t *bitWidth*, uint32_t *channelNumbers*)

Parameters

<i>base</i>	SAI base pointer.
<i>sourceClockHz</i>	Bit clock source frequency.
<i>sampleRate</i>	Audio data sample rate.
<i>bitWidth</i>	Audio data bitWidth.
<i>channel-Numbers</i>	Audio channel numbers.

20.4.5.17 void SAI_TxSetBitclockConfig (I2S_Type * *base*, sai_master_slave_t *masterSlave*, sai_bit_clock_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	master or slave.
<i>config</i>	bit clock other configurations, can be NULL in slave mode.

20.4.5.18 void SAI_RxSetBitclockConfig (I2S_Type * *base*, sai_master_slave_t *masterSlave*, sai_bit_clock_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	master or slave.
<i>config</i>	bit clock other configurations, can be NULL in slave mode.

20.4.5.19 void SAI_SetMasterClockConfig (I2S_Type * *base*, sai_master_clock_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>config</i>	master clock configurations.

20.4.5.20 void SAI_TxSetFifoConfig (I2S_Type * *base*, sai_fifo_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>config</i>	fifo configurations.

20.4.5.21 void SAI_RxSetFifoConfig (I2S_Type * *base*, sai_fifo_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>config</i>	fifo configurations.

20.4.5.22 void SAI_TxSetFrameSyncConfig (I2S_Type * *base*, sai_master_slave_t *masterSlave*, sai_frame_sync_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	master or slave.
<i>config</i>	frame sync configurations, can be NULL in slave mode.

20.4.5.23 void SAI_RxSetFrameSyncConfig (I2S_Type * *base*, sai_master_slave_t *masterSlave*, sai_frame_sync_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>masterSlave</i>	master or slave.
<i>config</i>	frame sync configurations, can be NULL in slave mode.

20.4.5.24 void SAI_TxSetSerialDataConfig (I2S_Type * *base*, sai_serial_data_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>config</i>	serial data configurations.

20.4.5.25 void SAI_RxSetSerialDataConfig (I2S_Type * *base*, sai_serial_data_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>config</i>	serial data configurations.

20.4.5.26 void SAI_TxSetConfig (I2S_Type * *base*, sai_transceiver_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>config</i>	transmitter configurations.

20.4.5.27 void SAI_RxSetConfig (I2S_Type * *base*, sai_transceiver_t * *config*)

Parameters

<i>base</i>	SAI base pointer.
<i>config</i>	receiver configurations.

20.4.5.28 void SAI_GetClassicI2SConfig (sai_transceiver_t * *config*, sai_word_width_t *bitWidth*, sai_mono_stereo_t *mode*, uint32_t *saiChannelMask*)

Parameters

<i>config</i>	transceiver configurations.
<i>bitWidth</i>	audio data bitWidth.
<i>mode</i>	audio data channel.
<i>saiChannelMask</i>	mask value of the channel to be enable.

20.4.5.29 void SAI_GetLeftJustifiedConfig (sai_transceiver_t * *config*, sai_word_width_t *bitWidth*, sai_mono_stereo_t *mode*, uint32_t *saiChannelMask*)

Parameters

<i>config</i>	transceiver configurations.
<i>bitWidth</i>	audio data bitWidth.
<i>mode</i>	audio data channel.
<i>saiChannel-Mask</i>	mask value of the channel to be enable.

**20.4.5.30 void SAI_GetRightJustifiedConfig (sai_transceiver_t * *config*,
sai_word_width_t *bitWidth*, sai_mono_stereo_t *mode*, uint32_t *saiChannelMask*
)**

Parameters

<i>config</i>	transceiver configurations.
<i>bitWidth</i>	audio data bitWidth.
<i>mode</i>	audio data channel.
<i>saiChannel-Mask</i>	mask value of the channel to be enable.

**20.4.5.31 void SAI_GetTDMConfig (sai_transceiver_t * *config*, sai_frame_sync_len_t
frameSyncWidth, sai_word_width_t *bitWidth*, uint32_t *dataWordNum*, uint32_t
saiChannelMask)**

Parameters

<i>config</i>	transceiver configurations.
<i>frameSync-Width</i>	length of frame sync.
<i>bitWidth</i>	audio data word width.
<i>dataWordNum</i>	word number in one frame.
<i>saiChannel-Mask</i>	mask value of the channel to be enable.

20.4.5.32 `void SAI_GetDSPConfig (sai_transceiver_t * config, sai_frame_sync_len_t frameSyncWidth, sai_word_width_t bitWidth, sai_mono_stereo_t mode, uint32_t saiChannelMask)`

Note

DSP mode is also called PCM mode which support MODE A and MODE B, DSP/PCM MODE A configuration flow. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
* SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth,
    kSAI_Stereo, channelMask)
* config->frameSync.frameSyncEarly = true;
* SAI_TxSetConfig(base, config)
*
```

DSP/PCM MODE B configuration flow for TX. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
* SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth,
    kSAI_Stereo, channelMask)
* SAI_TxSetConfig(base, config)
*
```

Parameters

<i>config</i>	transceiver configurations.
<i>frameSync-Width</i>	length of frame sync.
<i>bitWidth</i>	audio data bitWidth.
<i>mode</i>	audio data channel.
<i>saiChannel-Mask</i>	mask value of the channel to enable.

20.4.5.33 `static uint32_t SAI_TxGetStatusFlag (I2S_Type * base) [inline], [static]`

Parameters

<i>base</i>	SAI base pointer
-------------	------------------

Returns

SAI Tx status flag value. Use the Status Mask to get the status value needed.

20.4.5.34 `static void SAI_TxClearStatusFlags (I2S_Type * base, uint32_t mask) [inline], [static]`

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	State mask. It can be a combination of the following source if defined: <ul style="list-style-type: none"> • kSAI_WordStartFlag • kSAI_SyncErrorFlag • kSAI_FIFOErrorFlag

20.4.5.35 `static uint32_t SAI_RxGetStatusFlag (I2S_Type * base) [inline], [static]`

Parameters

<i>base</i>	SAI base pointer
-------------	------------------

Returns

SAI Rx status flag value. Use the Status Mask to get the status value needed.

20.4.5.36 `static void SAI_RxClearStatusFlags (I2S_Type * base, uint32_t mask) [inline], [static]`

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	State mask. It can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kSAI_WordStartFlag • kSAI_SyncErrorFlag • kSAI_FIFOErrorFlag

20.4.5.37 `void SAI_TxSoftwareReset (I2S_Type * base, sai_reset_type_t type)`

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Tx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like TCR1~TCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

<i>base</i>	SAI base pointer
<i>type</i>	Reset type, FIFO reset or software reset

20.4.5.38 void SAI_RxSoftwareReset (I2S_Type * *base*, sai_reset_type_t *type*)

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Rx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like RCR1~RCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

<i>base</i>	SAI base pointer
<i>type</i>	Reset type, FIFO reset or software reset

20.4.5.39 void SAI_TxSetChannelFIFOMask (I2S_Type * *base*, uint8_t *mask*)

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

20.4.5.40 void SAI_RxSetChannelFIFOMask (I2S_Type * *base*, uint8_t *mask*)

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

20.4.5.41 void SAI_TxSetDataOrder (I2S_Type * *base*, sai_data_order_t *order*)

Parameters

<i>base</i>	SAI base pointer
<i>order</i>	Data order MSB or LSB

20.4.5.42 void SAI_RxSetDataOrder (I2S_Type * *base*, sai_data_order_t *order*)

Parameters

<i>base</i>	SAI base pointer
<i>order</i>	Data order MSB or LSB

20.4.5.43 void SAI_TxSetBitClockPolarity (I2S_Type * *base*, sai_clock_polarity_t *polarity*)

Parameters

<i>base</i>	SAI base pointer
<i>polarity</i>	

20.4.5.44 void SAI_RxSetBitClockPolarity (I2S_Type * *base*, sai_clock_polarity_t *polarity*)

Parameters

<i>base</i>	SAI base pointer
<i>polarity</i>	

20.4.5.45 void SAI_TxSetFrameSyncPolarity (I2S_Type * *base*, sai_clock_polarity_t *polarity*)

Parameters

<i>base</i>	SAI base pointer
<i>polarity</i>	

20.4.5.46 void SAI_RxSetFrameSyncPolarity (I2S_Type * *base*, sai_clock_polarity_t *polarity*)

Parameters

<i>base</i>	SAI base pointer
<i>polarity</i>	

20.4.5.47 void SAI_TxSetFIFOPacking (I2S_Type * *base*, sai_fifo_packing_t *pack*)

Parameters

<i>base</i>	SAI base pointer.
<i>pack</i>	FIFO pack type. It is element of sai_fifo_packing_t.

20.4.5.48 void SAI_RxSetFIFOPacking (I2S_Type * *base*, sai_fifo_packing_t *pack*)

Parameters

<i>base</i>	SAI base pointer.
<i>pack</i>	FIFO pack type. It is element of sai_fifo_packing_t.

20.4.5.49 static void SAI_TxSetFIFOErrorContinue (I2S_Type * *base*, bool *isEnabled*) [inline], [static]

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in TCSR register.

Parameters

<i>base</i>	SAI base pointer.
<i>isEnabled</i>	Is FIFO error continue enabled, true means enable, false means disable.

20.4.5.50 `static void SAI_RxSetFIFOErrorContinue (I2S_Type * base, bool isEnabled)`
`[inline], [static]`

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in RCSR register.

Parameters

<i>base</i>	SAI base pointer.
<i>isEnabled</i>	Is FIFO error continue enabled, true means enable, false means disable.

20.4.5.51 static void SAI_TxEnableInterrupts (I2S_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kSAI_WordStartInterruptEnable • kSAI_SyncErrorInterruptEnable • kSAI_FIFOWarningInterruptEnable • kSAI_FIFORequestInterruptEnable • kSAI_FIFOErrorInterruptEnable

20.4.5.52 static void SAI_RxEnableInterrupts (I2S_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kSAI_WordStartInterruptEnable • kSAI_SyncErrorInterruptEnable • kSAI_FIFOWarningInterruptEnable • kSAI_FIFORequestInterruptEnable • kSAI_FIFOErrorInterruptEnable

20.4.5.53 static void SAI_TxDisableInterrupts (I2S_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kSAI_WordStartInterruptEnable • kSAI_SyncErrorInterruptEnable • kSAI_FIFOWarningInterruptEnable • kSAI_FIFOResultInterruptEnable • kSAI_FIFOErrorInterruptEnable

20.4.5.54 static void SAI_RxDisableInterrupts (I2S_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	interrupt source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kSAI_WordStartInterruptEnable • kSAI_SyncErrorInterruptEnable • kSAI_FIFOWarningInterruptEnable • kSAI_FIFOResultInterruptEnable • kSAI_FIFOErrorInterruptEnable

20.4.5.55 static void SAI_TxEnableDMA (I2S_Type * *base*, uint32_t *mask*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	DMA source The parameter can be combination of the following sources if defined. <ul style="list-style-type: none"> • kSAI_FIFOWarningDMAEnable • kSAI_FIFOResultDMAEnable

<i>enable</i>	True means enable DMA, false means disable DMA.
---------------	---

20.4.5.56 `static void SAI_RxEnableDMA (I2S_Type * base, uint32_t mask, bool enable) [inline], [static]`

Parameters

<i>base</i>	SAI base pointer
<i>mask</i>	DMA source The parameter can be a combination of the following sources if defined. <ul style="list-style-type: none"> • kSAI_FIFOWarningDMAEnable • kSAI_FIFOResultDMAEnable
<i>enable</i>	True means enable DMA, false means disable DMA.

20.4.5.57 `static uint32_t SAI_TxGetDataRegisterAddress (I2S_Type * base, uint32_t channel) [inline], [static]`

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Which data channel used.

Returns

data register address.

20.4.5.58 `static uint32_t SAI_RxGetDataRegisterAddress (I2S_Type * base, uint32_t channel) [inline], [static]`

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Which data channel used.

Returns

data register address.

20.4.5.59 void SAI_TxSetFormat (I2S_Type * *base*, sai_transfer_format_t * *format*, uint32_t *mclkSourceClockHz*, uint32_t *bclkSourceClockHz*)

Deprecated Do not use this function. It has been superseded by [SAI_TxSetConfig](#)

The audio format can be changed at run-time. This function configures the sample rate and audio data format to be transferred.

Parameters

<i>base</i>	SAI base pointer.
<i>format</i>	Pointer to the SAI audio data format structure.
<i>mclkSource-ClockHz</i>	SAI master clock source frequency in Hz.
<i>bclkSource-ClockHz</i>	SAI bit clock source frequency in Hz. If the bit clock source is a master clock, this value should equal the masterClockHz.

20.4.5.60 void SAI_RxSetFormat (I2S_Type * *base*, sai_transfer_format_t * *format*, uint32_t *mclkSourceClockHz*, uint32_t *bclkSourceClockHz*)

Deprecated Do not use this function. It has been superseded by [SAI_RxSetConfig](#)

The audio format can be changed at run-time. This function configures the sample rate and audio data format to be transferred.

Parameters

<i>base</i>	SAI base pointer.
<i>format</i>	Pointer to the SAI audio data format structure.
<i>mclkSource-ClockHz</i>	SAI master clock source frequency in Hz.
<i>bclkSource-ClockHz</i>	SAI bit clock source frequency in Hz. If the bit clock source is a master clock, this value should equal the masterClockHz.

20.4.5.61 void SAI_WriteBlocking (I2S_Type * *base*, uint32_t *channel*, uint32_t *bitWidth*, uint8_t * *buffer*, uint32_t *size*)

Note

This function blocks by polling until data is ready to be sent.

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Data channel used.
<i>bitWidth</i>	How many bits in an audio word; usually 8/16/24/32 bits.
<i>buffer</i>	Pointer to the data to be written.
<i>size</i>	Bytes to be written.

20.4.5.62 void SAI_WriteMultiChannelBlocking (I2S_Type * *base*, uint32_t *channel*, uint32_t *channelMask*, uint32_t *bitWidth*, uint8_t * *buffer*, uint32_t *size*)

Note

This function blocks by polling until data is ready to be sent.

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Data channel used.
<i>channelMask</i>	channel mask.
<i>bitWidth</i>	How many bits in an audio word; usually 8/16/24/32 bits.
<i>buffer</i>	Pointer to the data to be written.
<i>size</i>	Bytes to be written.

**20.4.5.63 static void SAI_WriteData (I2S_Type * *base*, uint32_t *channel*, uint32_t *data*)
[inline], [static]**

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Data channel used.
<i>data</i>	Data needs to be written.

20.4.5.64 void SAI_ReadBlocking (I2S_Type * *base*, uint32_t *channel*, uint32_t *bitWidth*, uint8_t * *buffer*, uint32_t *size*)

Note

This function blocks by polling until data is ready to be sent.

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Data channel used.
<i>bitWidth</i>	How many bits in an audio word; usually 8/16/24/32 bits.
<i>buffer</i>	Pointer to the data to be read.
<i>size</i>	Bytes to be read.

20.4.5.65 void SAI_ReadMultiChannelBlocking (I2S_Type * *base*, uint32_t *channel*, uint32_t *channelMask*, uint32_t *bitWidth*, uint8_t * *buffer*, uint32_t *size*)

Note

This function blocks by polling until data is ready to be sent.

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Data channel used.
<i>channelMask</i>	channel mask.
<i>bitWidth</i>	How many bits in an audio word; usually 8/16/24/32 bits.
<i>buffer</i>	Pointer to the data to be read.
<i>size</i>	Bytes to be read.

**20.4.5.66 static uint32_t SAI_ReadData (I2S_Type * *base*, uint32_t *channel*)
[inline], [static]**

Parameters

<i>base</i>	SAI base pointer.
<i>channel</i>	Data channel used.

Returns

Data in SAI FIFO.

20.4.5.67 void SAI_TransferTxCreateHandle (I2S_Type * *base*, sai_handle_t * *handle*, sai_transfer_callback_t *callback*, void * *userData*)

This function initializes the Tx handle for the SAI Tx transactional APIs. Call this function once to get the handle initialized.

Parameters

<i>base</i>	SAI base pointer
<i>handle</i>	SAI handle pointer.
<i>callback</i>	Pointer to the user callback function.
<i>userData</i>	User parameter passed to the callback function

20.4.5.68 void SAI_TransferRxCreateHandle (I2S_Type * *base*, sai_handle_t * *handle*, sai_transfer_callback_t *callback*, void * *userData*)

This function initializes the Rx handle for the SAI Rx transactional APIs. Call this function once to get the handle initialized.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI handle pointer.
<i>callback</i>	Pointer to the user callback function.
<i>userData</i>	User parameter passed to the callback function.

20.4.5.69 void SAI_TransferTxSetConfig (I2S_Type * *base*, sai_handle_t * *handle*, sai_transceiver_t * *config*)

This function initializes the Tx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI handle pointer.
<i>config</i>	transmitter configurations.

20.4.5.70 void SAI_TransferRxSetConfig (I2S_Type * *base*, sai_handle_t * *handle*, sai_transceiver_t * *config*)

This function initializes the Rx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI handle pointer.
<i>config</i>	receiver configurations.

20.4.5.71 status_t SAI_TransferTxSetFormat (I2S_Type * *base*, sai_handle_t * *handle*, sai_transfer_format_t * *format*, uint32_t *mclkSourceClockHz*, uint32_t *bclkSourceClockHz*)

Deprecated Do not use this function. It has been superceded by [SAI_TransferTxSetConfig](#)

The audio format can be changed at run-time. This function configures the sample rate and audio data format to be transferred.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI handle pointer.
<i>format</i>	Pointer to the SAI audio data format structure.
<i>mclkSource-ClockHz</i>	SAI master clock source frequency in Hz.
<i>bclkSource-ClockHz</i>	SAI bit clock source frequency in Hz. If a bit clock source is a master clock, this value should equal the masterClockHz in format.

Returns

Status of this function. Return value is the status_t.

20.4.5.72 `status_t SAI_TransferRxSetFormat (I2S_Type * base, sai_handle_t * handle, sai_transfer_format_t * format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)`

Deprecated Do not use this function. It has been superseded by [SAI_TransferRxSetConfig](#)

The audio format can be changed at run-time. This function configures the sample rate and audio data format to be transferred.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI handle pointer.
<i>format</i>	Pointer to the SAI audio data format structure.
<i>mclkSource-ClockHz</i>	SAI master clock source frequency in Hz.
<i>bclkSource-ClockHz</i>	SAI bit clock source frequency in Hz. If a bit clock source is a master clock, this value should equal the masterClockHz in format.

Returns

Status of this function. Return value is one of `status_t`.

20.4.5.73 `status_t SAI_TransferSendNonBlocking (I2S_Type * base, sai_handle_t * handle, sai_transfer_t * xfer)`

Note

This API returns immediately after the transfer initiates. Call the `SAI_TxGetTransferStatusIRQ` to poll the transfer status and check whether the transfer is finished. If the return status is not `kStatus_-SAI_Busy`, the transfer is finished.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	Pointer to the <code>sai_handle_t</code> structure which stores the transfer state.
<i>xfer</i>	Pointer to the sai_transfer_t structure.

Return values

<i>kStatus_Success</i>	Successfully started the data receive.
<i>kStatus_SAI_TxBusy</i>	Previous receive still not finished.
<i>kStatus_InvalidArgument</i>	The input parameter is invalid.

20.4.5.74 **status_t SAI_TransferReceiveNonBlocking (I2S_Type * *base*, sai_handle_t * *handle*, sai_transfer_t * *xfer*)**

Note

This API returns immediately after the transfer initiates. Call the SAI_RxGetTransferStatusIRQ to poll the transfer status and check whether the transfer is finished. If the return status is not kStatus_SAI_Busy, the transfer is finished.

Parameters

<i>base</i>	SAI base pointer
<i>handle</i>	Pointer to the sai_handle_t structure which stores the transfer state.
<i>xfer</i>	Pointer to the sai_transfer_t structure.

Return values

<i>kStatus_Success</i>	Successfully started the data receive.
<i>kStatus_SAI_RxBusy</i>	Previous receive still not finished.
<i>kStatus_InvalidArgument</i>	The input parameter is invalid.

20.4.5.75 **status_t SAI_TransferGetSendCount (I2S_Type * *base*, sai_handle_t * *handle*, size_t * *count*)**

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	Pointer to the sai_handle_t structure which stores the transfer state.
<i>count</i>	Bytes count sent.

Return values

<i>kStatus_Success</i>	Succeed get the transfer count.
<i>kStatus_NoTransferInProgress</i>	There is not a non-blocking transaction currently in progress.

20.4.5.76 **status_t SAI_TransferGetReceiveCount (I2S_Type * *base*, sai_handle_t * *handle*, size_t * *count*)**

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	Pointer to the sai_handle_t structure which stores the transfer state.
<i>count</i>	Bytes count received.

Return values

<i>kStatus_Success</i>	Succeed get the transfer count.
<i>kStatus_NoTransferInProgress</i>	There is not a non-blocking transaction currently in progress.

20.4.5.77 **void SAI_TransferAbortSend (I2S_Type * *base*, sai_handle_t * *handle*)**

Note

This API can be called any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	Pointer to the sai_handle_t structure which stores the transfer state.

20.4.5.78 **void SAI_TransferAbortReceive (I2S_Type * *base*, sai_handle_t * *handle*)**

Note

This API can be called when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

<i>base</i>	SAI base pointer
<i>handle</i>	Pointer to the sai_handle_t structure which stores the transfer state.

20.4.5.79 void SAI_TransferTerminateSend (I2S_Type * *base*, sai_handle_t * *handle*)

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortSend.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI eDMA handle pointer.

20.4.5.80 void SAI_TransferTerminateReceive (I2S_Type * *base*, sai_handle_t * *handle*)

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortReceive.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI eDMA handle pointer.

20.4.5.81 void SAI_TransferTxHandleIRQ (I2S_Type * *base*, sai_handle_t * *handle*)

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	Pointer to the sai_handle_t structure.

20.4.5.82 void SAI_TransferRxHandleIRQ (I2S_Type * *base*, sai_handle_t * *handle*)

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	Pointer to the sai_handle_t structure.

Chapter 21

SDMA: Smart Direct Memory Access (SDMA) Controller Driver

Overview

The MCUXpresso SDK provides a peripheral driver for the Smart Direct Memory Access (SDMA) of devices.

Typical use case

21.2.1 SDMA Operation

Refer to the driver examples codes located at <SDK_ROOT>/boards/<BOARD>/driver_examples/sdma

Data Structures

- struct [sdma_config_t](#)
SDMA global configuration structure. [More...](#)
- struct [sdma_multi_fifo_config_t](#)
SDMA multi fifo configurations. [More...](#)
- struct [sdma_sw_done_config_t](#)
SDMA sw done configurations. [More...](#)
- struct [sdma_p2p_config_t](#)
SDMA peripheral to peripheral R7 config. [More...](#)
- struct [sdma_transfer_config_t](#)
SDMA transfer configuration. [More...](#)
- struct [sdma_buffer_descriptor_t](#)
SDMA buffer descriptor structure. [More...](#)
- struct [sdma_channel_control_t](#)
SDMA channel control descriptor structure. [More...](#)
- struct [sdma_context_data_t](#)
SDMA context structure for each channel. [More...](#)
- struct [sdma_handle_t](#)
SDMA transfer handle structure. [More...](#)

Typedefs

- typedef void(* [sdma_callback](#))(struct _sdma_handle *handle, void *userData, bool transferDone, uint32_t bdIndex)
Define callback function for SDMA.

Enumerations

- enum `sdma_transfer_size_t` {
`kSDMA_TransferSize1Bytes` = 0x1U,
`kSDMA_TransferSize2Bytes` = 0x2U,
`kSDMA_TransferSize3Bytes` = 0x3U,
`kSDMA_TransferSize4Bytes` = 0x0U }
SDMA transfer configuration.
- enum `sdma_bd_status_t` {
`kSDMA_BDStatusDone` = 0x1U,
`kSDMA_BDStatusWrap` = 0x2U,
`kSDMA_BDStatusContinuous` = 0x4U,
`kSDMA_BDStatusInterrupt` = 0x8U,
`kSDMA_BDStatusError` = 0x10U,
`kSDMA_BDStatusLast`,
`kSDMA_BDStatusExtend` = 0x80U }
SDMA buffer descriptor status.
- enum `sdma_bd_command_t` {
`kSDMA_BDCommandSETDM` = 0x1U,
`kSDMA_BDCommandGETDM` = 0x2U,
`kSDMA_BDCommandSETPM` = 0x4U,
`kSDMA_BDCommandGETPM` = 0x6U,
`kSDMA_BDCommandSETCTX` = 0x7U,
`kSDMA_BDCommandGETCTX` = 0x3U }
SDMA buffer descriptor command.
- enum `sdma_context_switch_mode_t` {
`kSDMA_ContextSwitchModeStatic` = 0x0U,
`kSDMA_ContextSwitchModeDynamicLowPower`,
`kSDMA_ContextSwitchModeDynamicWithNoLoop`,
`kSDMA_ContextSwitchModeDynamic` }
SDMA context switch mode.
- enum `sdma_clock_ratio_t` {
`kSDMA_HalfARMClockFreq` = 0x0U,
`kSDMA_ARMClockFreq` }
SDMA core clock frequency ratio to the ARM DMA interface.
- enum `sdma_transfer_type_t` {
`kSDMA_MemoryToMemory` = 0x0U,
`kSDMA_PeripheralToMemory`,
`kSDMA_MemoryToPeripheral`,
`kSDMA_PeripheralToPeripheral` }
SDMA transfer type.
- enum `sdma_peripheral_t` {

```

kSDMA_PeripheralTypeMemory = 0x0,
kSDMA_PeripheralTypeUART,
kSDMA_PeripheralTypeUART_SP,
kSDMA_PeripheralTypeSPDIF,
kSDMA_PeripheralNormal,
kSDMA_PeripheralNormal_SP,
kSDMA_PeripheralMultiFifoPDM,
kSDMA_PeripheralMultiFifoSaiRX,
kSDMA_PeripheralMultiFifoSaiTX,
kSDMA_PeripheralASRCM2P,
kSDMA_PeripheralASRCP2M,
kSDMA_PeripheralASRCP2P }

```

Peripheral type use SDMA.

- enum {


```

kStatus_SDMA_ERROR = MAKE_STATUS(kStatusGroup_SDMA, 0),
kStatus_SDMA_Busy = MAKE_STATUS(kStatusGroup_SDMA, 1) }

```

_sdma_transfer_status SDMA transfer status
- enum {


```

kSDMA_MultiFifoWatermarkLevelMask = 0xFFFU,
kSDMA_MultiFifoNumsMask = 0xFU,
kSDMA_MultiFifoOffsetMask = 0xFU,
kSDMA_MultiFifoSwDoneMask = 0x1U,
kSDMA_MultiFifoSwDoneSelectorMask = 0xFU }

```

_sdma_multi_fifo_mask SDMA multi fifo mask
- enum {


```

kSDMA_MultiFifoWatermarkLevelShift = 0U,
kSDMA_MultiFifoNumsShift = 12U,
kSDMA_MultiFifoOffsetShift = 16U,
kSDMA_MultiFifoSwDoneShift = 23U,
kSDMA_MultiFifoSwDoneSelectorShift = 24U }

```

_sdma_multi_fifo_shift SDMA multi fifo shift
- enum {


```

kSDMA_DoneChannel0 = 0U,
kSDMA_DoneChannel1 = 1U,
kSDMA_DoneChannel2 = 2U,
kSDMA_DoneChannel3 = 3U,
kSDMA_DoneChannel4 = 4U,
kSDMA_DoneChannel5 = 5U,
kSDMA_DoneChannel6 = 6U,
kSDMA_DoneChannel7 = 7U }

```

_sdma_done_channel SDMA done channel
- enum `sdma_done_src_t` {

```

kSDMA_DoneSrcSW = 0U,
kSDMA_DoneSrcHwEvent0U = 1U,
kSDMA_DoneSrcHwEvent1U = 2U,
kSDMA_DoneSrcHwEvent2U = 3U,
kSDMA_DoneSrcHwEvent3U = 4U,
kSDMA_DoneSrcHwEvent4U = 5U,
kSDMA_DoneSrcHwEvent5U = 6U,
kSDMA_DoneSrcHwEvent6U = 7U,
kSDMA_DoneSrcHwEvent7U = 8U,
kSDMA_DoneSrcHwEvent8U = 9U,
kSDMA_DoneSrcHwEvent9U = 10U,
kSDMA_DoneSrcHwEvent10U = 11U,
kSDMA_DoneSrcHwEvent11U = 12U,
kSDMA_DoneSrcHwEvent12U = 13U,
kSDMA_DoneSrcHwEvent13U = 14U,
kSDMA_DoneSrcHwEvent14U = 15U,
kSDMA_DoneSrcHwEvent15U = 16U,
kSDMA_DoneSrcHwEvent16U = 17U,
kSDMA_DoneSrcHwEvent17U = 18U,
kSDMA_DoneSrcHwEvent18U = 19U,
kSDMA_DoneSrcHwEvent19U = 20U,
kSDMA_DoneSrcHwEvent20U = 21U,
kSDMA_DoneSrcHwEvent21U = 22U,
kSDMA_DoneSrcHwEvent22U = 23U,
kSDMA_DoneSrcHwEvent23U = 24U,
kSDMA_DoneSrcHwEvent24U = 25U,
kSDMA_DoneSrcHwEvent25U = 26U,
kSDMA_DoneSrcHwEvent26U = 27U,
kSDMA_DoneSrcHwEvent27U = 28U,
kSDMA_DoneSrcHwEvent28U = 29U,
kSDMA_DoneSrcHwEvent29U = 30U,
kSDMA_DoneSrcHwEvent30U = 31U,
kSDMA_DoneSrcHwEvent31U = 32U }

```

SDMA done source.

Driver version

- #define `FSL_SDMA_DRIVER_VERSION` (`MAKE_VERSION(2, 3, 2)`)
SDMA driver version.

SDMA initialization and de-initialization

- void `SDMA_Init` (`SDMAARM_Type *base`, const `sdma_config_t *config`)
Initializes the SDMA peripheral.
- void `SDMA_Deinit` (`SDMAARM_Type *base`)
Deinitializes the SDMA peripheral.

- void [SDMA_GetDefaultConfig](#) ([sdma_config_t](#) *config)
Gets the SDMA default configuration structure.
- void [SDMA_ResetModule](#) ([SDMAARM_Type](#) *base)
Sets all SDMA core register to reset status.

SDMA Channel Operation

- static void [SDMA_EnableChannelErrorInterrupts](#) ([SDMAARM_Type](#) *base, [uint32_t](#) channel)
Enables the interrupt source for the SDMA error.
- static void [SDMA_DisableChannelErrorInterrupts](#) ([SDMAARM_Type](#) *base, [uint32_t](#) channel)
Disables the interrupt source for the SDMA error.

SDMA Buffer Descriptor Operation

- void [SDMA_ConfigBufferDescriptor](#) ([sdma_buffer_descriptor_t](#) *bd, [uint32_t](#) srcAddr, [uint32_t](#) destAddr, [sdma_transfer_size_t](#) busWidth, [size_t](#) bufferSize, bool isLast, bool enableInterrupt, bool isWrap, [sdma_transfer_type_t](#) type)
Sets buffer descriptor contents.

SDMA Channel Transfer Operation

- static void [SDMA_SetChannelPriority](#) ([SDMAARM_Type](#) *base, [uint32_t](#) channel, [uint8_t](#) priority)
Set SDMA channel priority.
- static void [SDMA_SetSourceChannel](#) ([SDMAARM_Type](#) *base, [uint32_t](#) source, [uint32_t](#) channelMask)
Set SDMA request source mapping channel.
- static void [SDMA_StartChannelSoftware](#) ([SDMAARM_Type](#) *base, [uint32_t](#) channel)
Start a SDMA channel by software trigger.
- static void [SDMA_StartChannelEvents](#) ([SDMAARM_Type](#) *base, [uint32_t](#) channel)
Start a SDMA channel by hardware events.
- static void [SDMA_StopChannel](#) ([SDMAARM_Type](#) *base, [uint32_t](#) channel)
Stop a SDMA channel.
- void [SDMA_SetContextSwitchMode](#) ([SDMAARM_Type](#) *base, [sdma_context_switch_mode_t](#) mode)
Set the SDMA context switch mode.

SDMA Channel Status Operation

- static [uint32_t](#) [SDMA_GetChannelInterruptStatus](#) ([SDMAARM_Type](#) *base)
Gets the SDMA interrupt status of all channels.
- static void [SDMA_ClearChannelInterruptStatus](#) ([SDMAARM_Type](#) *base, [uint32_t](#) mask)
Clear the SDMA channel interrupt status of specific channels.
- static [uint32_t](#) [SDMA_GetChannelStopStatus](#) ([SDMAARM_Type](#) *base)
Gets the SDMA stop status of all channels.
- static void [SDMA_ClearChannelStopStatus](#) ([SDMAARM_Type](#) *base, [uint32_t](#) mask)
Clear the SDMA channel stop status of specific channels.
- static [uint32_t](#) [SDMA_GetChannelPendStatus](#) ([SDMAARM_Type](#) *base)
Gets the SDMA channel pending status of all channels.
- static void [SDMA_ClearChannelPendStatus](#) ([SDMAARM_Type](#) *base, [uint32_t](#) mask)

- *Clear the SDMA channel pending status of specific channels.*
- static uint32_t [SDMA_GetErrorStatus](#) (SDMAARM_Type *base)
Gets the SDMA channel error status.
- bool [SDMA_GetRequestSourceStatus](#) (SDMAARM_Type *base, uint32_t source)
Gets the SDMA request source pending status.

SDMA Transactional Operation

- void [SDMA_CreateHandle](#) (sdma_handle_t *handle, SDMAARM_Type *base, uint32_t channel, sdma_context_data_t *context)
Creates the SDMA handle.
- void [SDMA_InstallBDMemory](#) (sdma_handle_t *handle, sdma_buffer_descriptor_t *BDPool, uint32_t BDCount)
Installs the BDs memory pool into the SDMA handle.
- void [SDMA_SetCallback](#) (sdma_handle_t *handle, sdma_callback callback, void *userData)
Installs a callback function for the SDMA transfer.
- void [SDMA_SetMultiFifoConfig](#) (sdma_transfer_config_t *config, uint32_t fifoNums, uint32_t fifoOffset)
multi fifo configurations.
- void [SDMA_EnableSwDone](#) (SDMAARM_Type *base, sdma_transfer_config_t *config, uint8_t sel, sdma_peripheral_t type)
enable sdma sw done feature.
- void [SDMA_SetDoneConfig](#) (SDMAARM_Type *base, sdma_transfer_config_t *config, sdma_peripheral_t type, sdma_done_src_t doneSrc)
sdma channel done configurations.
- void [SDMA_LoadScript](#) (SDMAARM_Type *base, uint32_t destAddr, void *srcAddr, size_t bufferSizeBytes)
load script to sdma program memory.
- void [SDMA_DumpScript](#) (SDMAARM_Type *base, uint32_t srcAddr, void *destAddr, size_t bufferSizeBytes)
dump script from sdma program memory.
- void [SDMA_PrepareTransfer](#) (sdma_transfer_config_t *config, uint32_t srcAddr, uint32_t destAddr, uint32_t srcWidth, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferSize, uint32_t eventSource, sdma_peripheral_t peripheral, sdma_transfer_type_t type)
Prepares the SDMA transfer structure.
- void [SDMA_PrepareP2PTransfer](#) (sdma_transfer_config_t *config, uint32_t srcAddr, uint32_t destAddr, uint32_t srcWidth, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferSize, uint32_t eventSource, uint32_t eventSource1, sdma_peripheral_t peripheral, sdma_p2p_config_t *p2p)
Prepares the SDMA P2P transfer structure.
- void [SDMA_SubmitTransfer](#) (sdma_handle_t *handle, const sdma_transfer_config_t *config)
Submits the SDMA transfer request.
- void [SDMA_StartTransfer](#) (sdma_handle_t *handle)
SDMA starts transfer.
- void [SDMA_StopTransfer](#) (sdma_handle_t *handle)
SDMA stops transfer.
- void [SDMA_AbortTransfer](#) (sdma_handle_t *handle)
SDMA aborts transfer.
- uint32_t [SDMA_GetTransferredBytes](#) (sdma_handle_t *handle)
Get transferred bytes while not using BD pools.

- bool [SDMA_IsPeripheralInSPBA](#) (uint32_t addr)
Judge if address located in SPBA.
- void [SDMA_HandleIRQ](#) (sdma_handle_t *handle)
SDMA IRQ handler for complete a buffer descriptor transfer.

Data Structure Documentation

21.3.1 struct sdma_config_t

Data Fields

- bool [enableRealTimeDebugPin](#)
If enable real-time debug pin, default is closed to reduce power consumption.
- bool [isSoftwareResetClearLock](#)
If software reset clears the LOCK bit which prevent writing SDMA scripts into SDMA.
- [sdma_clock_ratio_t](#) ratio
SDMA core clock ratio to ARM platform DMA interface.

21.3.1.0.0.24 Field Documentation

21.3.1.0.0.24.1 bool sdma_config_t::enableRealTimeDebugPin

21.3.1.0.0.24.2 bool sdma_config_t::isSoftwareResetClearLock

21.3.2 struct sdma_multi_fifo_config_t

Data Fields

- uint8_t [fifoNums](#)
fifo numbers
- uint8_t [fifoOffset](#)
offset between multi fifo data register address

21.3.3 struct sdma_sw_done_config_t

Data Fields

- bool [enableSwDone](#)
true is enable sw done, false is disable
- uint8_t [swDoneSel](#)
sw done channel number per peripheral type

21.3.4 struct sdma_p2p_config_t

Data Fields

- uint8_t [sourceWatermark](#)
lower watermark value
- uint8_t [destWatermark](#)
higher watermark value
- bool [continuousTransfer](#)
0: the amount of samples to be transferred is equal to the cont field of mode word 1: the amount of samples to be transferred is unknown and script will keep on transferring as long as both events are detected and script must be stopped by application.

21.3.4.0.0.25 Field Documentation

21.3.4.0.0.25.1 bool sdma_p2p_config_t::continuousTransfer

21.3.5 struct sdma_transfer_config_t

This structure configures the source/destination transfer attribute.

Data Fields

- uint32_t [srcAddr](#)
Source address of the transfer.
- uint32_t [destAddr](#)
Destination address of the transfer.
- [sdma_transfer_size_t](#) [srcTransferSize](#)
Source data transfer size.
- [sdma_transfer_size_t](#) [destTransferSize](#)
Destination data transfer size.
- uint32_t [bytesPerRequest](#)
Bytes to transfer in a minor loop.
- uint32_t [transferSzie](#)
Bytes to transfer for this descriptor.
- uint32_t [scriptAddr](#)
SDMA script address located in SDMA ROM.
- uint32_t [eventSource](#)
Event source number for the channel.
- uint32_t [eventSource1](#)
event source 1
- bool [isEventIgnore](#)
True means software trigger, false means hardware trigger.
- bool [isSoftTriggerIgnore](#)
If ignore the HE bit, 1 means use hardware events trigger, 0 means software trigger.
- [sdma_transfer_type_t](#) [type](#)
Transfer type, transfer type used to decide the SDMA script.
- [sdma_multi_fifo_config_t](#) [multiFifo](#)

- *multi fifo configurations*
- `sdma_sw_done_config_t` `swDone`
sw done selector
- `uint32_t` `watermarkLevel`
watermark level
- `uint32_t` `eventMask0`
event mask 0
- `uint32_t` `eventMask1`
event mask 1

21.3.5.0.0.26 Field Documentation

21.3.5.0.0.26.1 `sdma_transfer_size_t` `sdma_transfer_config_t::srcTransferSize`

21.3.5.0.0.26.2 `sdma_transfer_size_t` `sdma_transfer_config_t::destTransferSize`

21.3.5.0.0.26.3 `uint32_t` `sdma_transfer_config_t::scriptAddr`

21.3.5.0.0.26.4 `uint32_t` `sdma_transfer_config_t::eventSource`

0 means no event, use software trigger

21.3.5.0.0.26.5 `sdma_transfer_type_t` `sdma_transfer_config_t::type`

21.3.6 struct `sdma_buffer_descriptor_t`

This structure is a buffer descriptor, this structure describes the buffer start address and other options

Data Fields

- `uint32_t` `count`: 16
Bytes of the buffer length for this buffer descriptor.
- `uint32_t` `status`: 8
E,R,I,C,W,D status bits stored here.
- `uint32_t` `command`: 8
command mostly used for channel 0
- `uint32_t` `bufferAddr`
Buffer start address for this descriptor.
- `uint32_t` `extendBufferAddr`
External buffer start address, this is an optional for a transfer.

21.3.6.0.0.27 Field Documentation

21.3.6.0.0.27.1 uint32_t sdma_buffer_descriptor_t::count

21.3.6.0.0.27.2 uint32_t sdma_buffer_descriptor_t::bufferAddr

21.3.6.0.0.27.3 uint32_t sdma_buffer_descriptor_t::extendBufferAddr

21.3.7 struct sdma_channel_control_t

Data Fields

- uint32_t [currentBDAddr](#)
Address of current buffer descriptor processed.
- uint32_t [baseBDAddr](#)
The start address of the buffer descriptor array.
- uint32_t [channelDesc](#)
Optional for transfer.
- uint32_t [status](#)
Channel status.

21.3.8 struct sdma_context_data_t

This structure can be load into SDMA core, with this structure, SDMA scripts can start work.

Data Fields

- uint32_t [GeneralReg](#) [8]
8 general registers used for SDMA RISC core

21.3.9 struct sdma_handle_t

Data Fields

- [sdma_callback](#) callback
Callback function for major count exhausted.
- void * [userData](#)
Callback function parameter.
- SDMAARM_Type * [base](#)
SDMA peripheral base address.
- [sdma_buffer_descriptor_t](#) * [BDPool](#)
Pointer to memory stored BD arrays.
- uint32_t [bdCount](#)
How many buffer descriptor.
- uint32_t [bdIndex](#)

- *How many buffer descriptor.*
uint32_t [eventSource](#)
- *Event source count for the channel.*
uint32_t [eventSource1](#)
- *Event source 1 count for the channel.*
[sdma_context_data_t](#) * [context](#)
- *Channel context to execute in SDMA.*
uint8_t [channel](#)
- *SDMA channel number.*
uint8_t [priority](#)
- *SDMA channel priority.*
uint8_t [flags](#)
- *The status of the current channel.*

21.3.9.0.0.28 Field Documentation

21.3.9.0.0.28.1 [sdma_callback](#) [sdma_handle_t::callback](#)

21.3.9.0.0.28.2 void* [sdma_handle_t::userData](#)

21.3.9.0.0.28.3 [SDMAARM_Type](#)* [sdma_handle_t::base](#)

21.3.9.0.0.28.4 [sdma_buffer_descriptor_t](#)* [sdma_handle_t::BDPool](#)

21.3.9.0.0.28.5 uint8_t [sdma_handle_t::channel](#)

21.3.9.0.0.28.6 uint8_t [sdma_handle_t::flags](#)

Macro Definition Documentation

21.4.1 **#define FSL_SDMA_DRIVER_VERSION (MAKE_VERSION(2, 3, 2))**

Version 2.3.2.

Typedef Documentation

21.5.1 **typedef void(* [sdma_callback](#))(struct [_sdma_handle](#) *[handle](#), void *[userData](#), bool [transferDone](#), uint32_t [bdIndex](#))**

Enumeration Type Documentation

21.6.1 **enum [sdma_transfer_size_t](#)**

Enumerator

- | | |
|---|--|
| <i>kSDMA_TransferSize1Bytes</i> | Source/Destination data transfer size is 1 byte every time. |
| <i>kSDMA_TransferSize2Bytes</i> | Source/Destination data transfer size is 2 bytes every time. |
| <i>kSDMA_TransferSize3Bytes</i> | Source/Destination data transfer size is 3 bytes every time. |
| <i>kSDMA_TransferSize4Bytes</i> | Source/Destination data transfer size is 4 bytes every time. |

21.6.2 enum sdma_bd_status_t

Enumerator

- kSDMA_BDStatusDone* BD ownership, 0 means ARM core owns the BD, while 1 means SDMA owns BD.
- kSDMA_BDStatusWrap* While this BD is last one, the next BD will be the first one.
- kSDMA_BDStatusContinuous* Buffer is allowed to transfer/receive to/from multiple buffers.
- kSDMA_BDStatusInterrupt* While this BD finished, send an interrupt.
- kSDMA_BDStatusError* Error occurred on buffer descriptor command.
- kSDMA_BDStatusLast* This BD is the last BD in this array. It means the transfer ended after this buffer
- kSDMA_BDStatusExtend* Buffer descriptor extend status for SDMA scripts.

21.6.3 enum sdma_bd_command_t

Enumerator

- kSDMA_BDCommandSETDM* Load SDMA data memory from ARM core memory buffer.
- kSDMA_BDCommandGETDM* Copy SDMA data memory to ARM core memory buffer.
- kSDMA_BDCommandSETPM* Load SDMA program memory from ARM core memory buffer.
- kSDMA_BDCommandGETPM* Copy SDMA program memory to ARM core memory buffer.
- kSDMA_BDCommandSETCTX* Load context for one channel into SDMA RAM from ARM platform memory buffer.
- kSDMA_BDCommandGETCTX* Copy context for one channel from SDMA RAM to ARM platform memory buffer.

21.6.4 enum sdma_context_switch_mode_t

Enumerator

- kSDMA_ContextSwitchModeStatic* SDMA context switch mode static.
- kSDMA_ContextSwitchModeDynamicLowPower* SDMA context switch mode dynamic with low power.
- kSDMA_ContextSwitchModeDynamicWithNoLoop* SDMA context switch mode dynamic with no loop.
- kSDMA_ContextSwitchModeDynamic* SDMA context switch mode dynamic.

21.6.5 enum sdma_clock_ratio_t

Enumerator

- kSDMA_HalfARMClockFreq* SDMA core clock frequency half of ARM platform.

kSDMA_ARMClockFreq SDMA core clock frequency equals to ARM platform.

21.6.6 enum sdma_transfer_type_t

Enumerator

kSDMA_MemoryToMemory Transfer from memory to memory.
kSDMA_PeripheralToMemory Transfer from peripheral to memory.
kSDMA_MemoryToPeripheral Transfer from memory to peripheral.
kSDMA_PeripheralToPeripheral Transfer from peripheral to peripheral.

21.6.7 enum sdma_peripheral_t

Enumerator

kSDMA_PeripheralTypeMemory Peripheral DDR memory.
kSDMA_PeripheralTypeUART UART use SDMA.
kSDMA_PeripheralTypeUART_SP UART instance in SPBA use SDMA.
kSDMA_PeripheralTypeSPDIF SPDIF use SDMA.
kSDMA_PeripheralNormal Normal peripheral use SDMA.
kSDMA_PeripheralNormal_SP Normal peripheral in SPBA use SDMA.
kSDMA_PeripheralMultiFifoPDM multi fifo PDM
kSDMA_PeripheralMultiFifoSaiRX multi fifo sai rx use SDMA
kSDMA_PeripheralMultiFifoSaiTX multi fifo sai tx use SDMA
kSDMA_PeripheralASRCM2P asrc m2p
kSDMA_PeripheralASRCP2M asrc p2m
kSDMA_PeripheralASRCP2P asrc p2p

21.6.8 anonymous enum

Enumerator

kStatus_SDMA_ERROR SDMA context error.
kStatus_SDMA_Busy Channel is busy and can't handle the transfer request.

21.6.9 anonymous enum

Enumerator

kSDMA_MultiFifoWatermarkLevelMask multi fifo watermark level mask
kSDMA_MultiFifoNumsMask multi fifo nums mask
kSDMA_MultiFifoOffsetMask multi fifo offset mask

kSDMA_MultiFifoSwDoneMask multi fifo sw done mask

kSDMA_MultiFifoSwDoneSelectorMask multi fifo sw done selector mask

21.6.10 anonymous enum

Enumerator

kSDMA_MultiFifoWatermarkLevelShift multi fifo watermark level shift

kSDMA_MultiFifoNumsShift multi fifo nums shift

kSDMA_MultiFifoOffsetShift multi fifo offset shift

kSDMA_MultiFifoSwDoneShift multi fifo sw done shift

kSDMA_MultiFifoSwDoneSelectorShift multi fifo sw done selector shift

21.6.11 anonymous enum

Enumerator

kSDMA_DoneChannel0 SDMA done channel 0.

kSDMA_DoneChannel1 SDMA done channel 1.

kSDMA_DoneChannel2 SDMA done channel 2.

kSDMA_DoneChannel3 SDMA done channel 3.

kSDMA_DoneChannel4 SDMA done channel 4.

kSDMA_DoneChannel5 SDMA done channel 5.

kSDMA_DoneChannel6 SDMA done channel 6.

kSDMA_DoneChannel7 SDMA done channel 7.

21.6.12 enum sdma_done_src_t

Enumerator

kSDMA_DoneSrcSW software done

kSDMA_DoneSrcHwEvent0U HW event 0 is used for DONE event.

kSDMA_DoneSrcHwEvent1U HW event 1 is used for DONE event.

kSDMA_DoneSrcHwEvent2U HW event 2 is used for DONE event.

kSDMA_DoneSrcHwEvent3U HW event 3 is used for DONE event.

kSDMA_DoneSrcHwEvent4U HW event 4 is used for DONE event.

kSDMA_DoneSrcHwEvent5U HW event 5 is used for DONE event.

kSDMA_DoneSrcHwEvent6U HW event 6 is used for DONE event.

kSDMA_DoneSrcHwEvent7U HW event 7 is used for DONE event.

kSDMA_DoneSrcHwEvent8U HW event 8 is used for DONE event.

kSDMA_DoneSrcHwEvent9U HW event 9 is used for DONE event.

kSDMA_DoneSrcHwEvent10U HW event 10 is used for DONE event.

kSDMA_DoneSrcHwEvent11U HW event 11 is used for DONE event.

kSDMA_DoneSrcHwEvent12U HW event 12 is used for DONE event.
kSDMA_DoneSrcHwEvent13U HW event 13 is used for DONE event.
kSDMA_DoneSrcHwEvent14U HW event 14 is used for DONE event.
kSDMA_DoneSrcHwEvent15U HW event 15 is used for DONE event.
kSDMA_DoneSrcHwEvent16U HW event 16 is used for DONE event.
kSDMA_DoneSrcHwEvent17U HW event 17 is used for DONE event.
kSDMA_DoneSrcHwEvent18U HW event 18 is used for DONE event.
kSDMA_DoneSrcHwEvent19U HW event 19 is used for DONE event.
kSDMA_DoneSrcHwEvent20U HW event 20 is used for DONE event.
kSDMA_DoneSrcHwEvent21U HW event 21 is used for DONE event.
kSDMA_DoneSrcHwEvent22U HW event 22 is used for DONE event.
kSDMA_DoneSrcHwEvent23U HW event 23 is used for DONE event.
kSDMA_DoneSrcHwEvent24U HW event 24 is used for DONE event.
kSDMA_DoneSrcHwEvent25U HW event 25 is used for DONE event.
kSDMA_DoneSrcHwEvent26U HW event 26 is used for DONE event.
kSDMA_DoneSrcHwEvent27U HW event 27 is used for DONE event.
kSDMA_DoneSrcHwEvent28U HW event 28 is used for DONE event.
kSDMA_DoneSrcHwEvent29U HW event 29 is used for DONE event.
kSDMA_DoneSrcHwEvent30U HW event 30 is used for DONE event.
kSDMA_DoneSrcHwEvent31U HW event 31 is used for DONE event.

Function Documentation

21.7.1 void SDMA_Init (SDMAARM_Type * *base*, const sdma_config_t * *config*)

This function ungates the SDMA clock and configures the SDMA peripheral according to the configuration structure.

Parameters

<i>base</i>	SDMA peripheral base address.
<i>config</i>	A pointer to the configuration structure, see "sdma_config_t".

Note

This function enables the minor loop map feature.

21.7.2 void SDMA_Deinit (SDMAARM_Type * *base*)

This function gates the SDMA clock.

Parameters

<i>base</i>	SDMA peripheral base address.
-------------	-------------------------------

21.7.3 void SDMA_GetDefaultConfig (sdma_config_t * *config*)

This function sets the configuration structure to default values. The default configuration is set to the following values.

```
* config.enableRealTimeDebugPin = false;
* config.isSoftwareResetClearLock = true;
* config.ratio = kSDMA_HalfARMClockFreq;
*
```

Parameters

<i>config</i>	A pointer to the SDMA configuration structure.
---------------	--

21.7.4 void SDMA_ResetModule (SDMAARM_Type * *base*)

If only reset ARM core, SDMA register cannot return to reset value, shall call this function to reset all SDMA register to reset value. But the internal status cannot be reset.

Parameters

<i>base</i>	SDMA peripheral base address.
-------------	-------------------------------

21.7.5 static void SDMA_EnableChannelErrorInterrupts (SDMAARM_Type * *base*, uint32_t *channel*) [inline], [static]

Enable this will trigger an interrupt while SDMA occurs error while executing scripts.

Parameters

<i>base</i>	SDMA peripheral base address.
<i>channel</i>	SDMA channel number.

21.7.6 static void SDMA_DisableChannelErrorInterrupts (SDMAARM_Type * *base*, uint32_t *channel*) [inline], [static]

Parameters

<i>base</i>	SDMA peripheral base address.
<i>channel</i>	SDMA channel number.

21.7.7 void SDMA_ConfigBufferDescriptor (sdma_buffer_descriptor_t * *bd*, uint32_t *srcAddr*, uint32_t *destAddr*, sdma_transfer_size_t *busWidth*, size_t *bufferSize*, bool *isLast*, bool *enableInterrupt*, bool *isWrap*, sdma_transfer_type_t *type*)

This function sets the descriptor contents such as source, dest address and status bits.

Parameters

<i>bd</i>	Pointer to the buffer descriptor structure.
<i>srcAddr</i>	Source address for the buffer descriptor.
<i>destAddr</i>	Destination address for the buffer descriptor.
<i>busWidth</i>	The transfer width, it only can be a member of sdma_transfer_size_t.
<i>bufferSize</i>	Buffer size for this descriptor, this number shall less than 0xFFFF. If need to transfer a big size, shall divide into several buffer descriptors.
<i>isLast</i>	Is the buffer descriptor the last one for the channel to transfer. If only one descriptor used for the channel, this bit shall set to TRUE.
<i>enableInterrupt</i>	If trigger an interrupt while this buffer descriptor transfer finished.
<i>isWrap</i>	Is the buffer descriptor need to be wrapped. While this bit set to true, it will automatically wrap to the first buffer descrtiptor to do transfer.
<i>type</i>	Transfer type, memory to memory, peripheral to memory or memory to peripheral.

21.7.8 static void SDMA_SetChannelPriority (SDMAARM_Type * *base*, uint32_t *channel*, uint8_t *priority*) [inline], [static]

This function sets the channel priority. The default value is 0 for all channels, priority 0 will prevents channel from starting, so the priority must be set before start a channel.

Parameters

<i>base</i>	SDMA peripheral base address.
<i>channel</i>	SDMA channel number.
<i>priority</i>	SDMA channel priority.

21.7.9 static void SDMA_SetSourceChannel (SDMAARM_Type * *base*, uint32_t *source*, uint32_t *channelMask*) [inline], [static]

This function sets which channel will be triggered by the dma request source.

Parameters

<i>base</i>	SDMA peripheral base address.
<i>source</i>	SDMA dma request source number.
<i>channelMask</i>	SDMA channel mask. 1 means channel 0, 2 means channel 1, 4 means channel 3. SDMA supports an event trigger multi-channel. A channel can also be triggered by several source events.

21.7.10 static void SDMA_StartChannelSoftware (SDMAARM_Type * *base*, uint32_t *channel*) [inline], [static]

This function start a channel.

Parameters

<i>base</i>	SDMA peripheral base address.
<i>channel</i>	SDMA channel number.

21.7.11 static void SDMA_StartChannelEvents (SDMAARM_Type * *base*, uint32_t *channel*) [inline], [static]

This function start a channel.

Parameters

<i>base</i>	SDMA peripheral base address.
<i>channel</i>	SDMA channel number.

21.7.12 `static void SDMA_StopChannel (SDMAARM_Type * base, uint32_t channel) [inline], [static]`

This function stops a channel.

Parameters

<i>base</i>	SDMA peripheral base address.
<i>channel</i>	SDMA channel number.

**21.7.13 void SDMA_SetContextSwitchMode (SDMAARM_Type * *base*,
sdma_context_switch_mode_t *mode*)**

Parameters

<i>base</i>	SDMA peripheral base address.
<i>mode</i>	SDMA context switch mode.

**21.7.14 static uint32_t SDMA_GetChannelInterruptStatus (SDMAARM_Type * *base*
) [inline], [static]**

Parameters

<i>base</i>	SDMA peripheral base address.
-------------	-------------------------------

Returns

The interrupt status for all channels. Check the relevant bits for specific channel.

**21.7.15 static void SDMA_ClearChannelInterruptStatus (SDMAARM_Type * *base*,
uint32_t *mask*) [inline], [static]**

Parameters

<i>base</i>	SDMA peripheral base address.
<i>mask</i>	The interrupt status need to be cleared.

**21.7.16 static uint32_t SDMA_GetChannelStopStatus (SDMAARM_Type * *base*)
[inline], [static]**

Parameters

<i>base</i>	SDMA peripheral base address.
-------------	-------------------------------

Returns

The stop status for all channels. Check the relevant bits for specific channel.

**21.7.17 static void SDMA_ClearChannelStopStatus (SDMAARM_Type * *base*,
uint32_t *mask*) [inline], [static]**

Parameters

<i>base</i>	SDMA peripheral base address.
<i>mask</i>	The stop status need to be cleared.

**21.7.18 static uint32_t SDMA_GetChannelPendStatus (SDMAARM_Type * *base*)
[inline], [static]**

Parameters

<i>base</i>	SDMA peripheral base address.
-------------	-------------------------------

Returns

The pending status for all channels. Check the relevant bits for specific channel.

**21.7.19 static void SDMA_ClearChannelPendStatus (SDMAARM_Type * *base*,
uint32_t *mask*) [inline], [static]**

Parameters

<i>base</i>	SDMA peripheral base address.
-------------	-------------------------------

<i>mask</i>	The pending status need to be cleared.
-------------	--

21.7.20 static uint32_t SDMA_GetErrorStatus (SDMAARM_Type * *base*) [inline], [static]

SDMA channel error flag is asserted while an incoming DMA request was detected and it triggers a channel that is already pending or being serviced. This probably means there is an overflow of data for that channel.

Parameters

<i>base</i>	SDMA peripheral base address.
-------------	-------------------------------

Returns

The error status for all channels. Check the relevant bits for specific channel.

21.7.21 bool SDMA_GetRequestSourceStatus (SDMAARM_Type * *base*, uint32_t *source*)

Parameters

<i>base</i>	SDMA peripheral base address.
<i>source</i>	DMA request source number.

Returns

True means the request source is pending, otherwise not pending.

21.7.22 void SDMA_CreateHandle (sdma_handle_t * *handle*, SDMAARM_Type * *base*, uint32_t *channel*, sdma_context_data_t * *context*)

This function is called if using the transactional API for SDMA. This function initializes the internal state of the SDMA handle.

Parameters

<i>handle</i>	SDMA handle pointer. The SDMA handle stores callback function and parameters.
<i>base</i>	SDMA peripheral base address.
<i>channel</i>	SDMA channel number.
<i>context</i>	Context structure for the channel to download into SDMA. Users shall make sure the context located in a non-cacheable memory, or it will cause SDMA run fail. Users shall not touch the context contents, it only be filled by SDMA driver in SDMA_SubmitTransfer function.

21.7.23 void SDMA_InstallBDMemory (sdma_handle_t * *handle*, sdma_buffer_descriptor_t * *BDPool*, uint32_t *BDCount*)

This function is called after the SDMA_CreateHandle to use multi-buffer feature.

Parameters

<i>handle</i>	SDMA handle pointer.
<i>BDPool</i>	A memory pool to store BDs. It must be located in non-cacheable address.
<i>BDCount</i>	The number of BD slots.

21.7.24 void SDMA_SetCallback (sdma_handle_t * *handle*, sdma_callback *callback*, void * *userData*)

This callback is called in the SDMA IRQ handler. Use the callback to do something after the current major loop transfer completes.

Parameters

<i>handle</i>	SDMA handle pointer.
<i>callback</i>	SDMA callback function pointer.
<i>userData</i>	A parameter for the callback function.

21.7.25 void SDMA_SetMultiFifoConfig (sdma_transfer_config_t * *config*, uint32_t *fifoNums*, uint32_t *fifoOffset*)

This api is used to support multi fifo for SDMA, if user want to get multi fifo data, then this api should be called before submit transfer.

Parameters

<i>config</i>	transfer configurations.
<i>fifoNums</i>	fifo numbers that multi fifo operation perform.
<i>fifoOffset</i>	offset between multififo address.

21.7.26 void SDMA_EnableSwDone (SDMAARM_Type * *base*, sdma_transfer_config_t * *config*, uint8_t *sel*, sdma_peripheral_t *type*)

Deprecated Do not use this function. It has been superceded by [SDMA_SetDoneConfig](#).

Parameters

<i>base</i>	SDMA base.
<i>config</i>	transfer configurations.
<i>sel</i>	sw done selector.
<i>type</i>	peripheral type is used to determine the corresponding peripheral sw done selector bit.

21.7.27 void SDMA_SetDoneConfig (SDMAARM_Type * *base*, sdma_transfer_config_t * *config*, sdma_peripheral_t *type*, sdma_done_src_t *doneSrc*)

Parameters

<i>base</i>	SDMA base.
<i>config</i>	transfer configurations.
<i>type</i>	peripheral type.
<i>doneSrc</i>	reference sdma_done_src_t.

21.7.28 void SDMA_LoadScript (SDMAARM_Type * *base*, uint32_t *destAddr*, void * *srcAddr*, size_t *bufferSizeBytes*)

Parameters

<i>base</i>	SDMA base.
<i>destAddr</i>	dest script address, should be SDMA program memory address.
<i>srcAddr</i>	source address of target script.
<i>bufferSizeBytes</i>	bytes size of script.

21.7.29 void SDMA_DumpScript (SDMAARM_Type * *base*, uint32_t *srcAddr*, void * *destAddr*, size_t *bufferSizeBytes*)

Parameters

<i>base</i>	SDMA base.
<i>srcAddr</i>	should be SDMA program memory address.
<i>destAddr</i>	address to store scripts.
<i>bufferSizeBytes</i>	bytes size of script.

21.7.30 void SDMA_PrepareTransfer (sdma_transfer_config_t * *config*, uint32_t *srcAddr*, uint32_t *destAddr*, uint32_t *srcWidth*, uint32_t *destWidth*, uint32_t *bytesEachRequest*, uint32_t *transferSize*, uint32_t *eventSource*, sdma_peripheral_t *peripheral*, sdma_transfer_type_t *type*)

This function prepares the transfer configuration structure according to the user input.

Parameters

<i>config</i>	The user configuration structure of type <code>sdma_transfer_t</code> .
<i>srcAddr</i>	SDMA transfer source address.
<i>destAddr</i>	SDMA transfer destination address.
<i>srcWidth</i>	SDMA transfer source address width(bytes).
<i>destWidth</i>	SDMA transfer destination address width(bytes).
<i>bytesEachRequest</i>	SDMA transfer bytes per channel request.
<i>transferSize</i>	SDMA transfer bytes to be transferred.
<i>eventSource</i>	Event source number for the transfer, if use software trigger, just write 0.
<i>peripheral</i>	Peripheral type, used to decide if need to use some special scripts.
<i>type</i>	SDMA transfer type. Used to decide the correct SDMA script address in SDMA ROM.

Note

The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error.

21.7.31 `void SDMA_PrepareP2PTransfer (sdma_transfer_config_t * config, uint32_t srcAddr, uint32_t destAddr, uint32_t srcWidth, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferSize, uint32_t eventSource, uint32_t eventSource1, sdma_peripheral_t peripheral, sdma_p2p_config_t * p2p)`

This function prepares the transfer configuration structure according to the user input.

Parameters

<i>config</i>	The user configuration structure of type <code>sdma_transfer_t</code> .
<i>srcAddr</i>	SDMA transfer source address.
<i>destAddr</i>	SDMA transfer destination address.
<i>srcWidth</i>	SDMA transfer source address width(bytes).
<i>destWidth</i>	SDMA transfer destination address width(bytes).
<i>bytesEachRequest</i>	SDMA transfer bytes per channel request.
<i>transferSize</i>	SDMA transfer bytes to be transferred.
<i>eventSource</i>	Event source number for the transfer.
<i>eventSource1</i>	Event source1 number for the transfer.
<i>peripheral</i>	Peripheral type, used to decide if need to use some special scripts.
<i>p2p</i>	sdma p2p configuration pointer.

Note

The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error.

21.7.32 void SDMA_SubmitTransfer (`sdma_handle_t` * *handle*, const `sdma_transfer_config_t` * *config*)

This function submits the SDMA transfer request according to the transfer configuration structure.

Parameters

<i>handle</i>	SDMA handle pointer.
<i>config</i>	Pointer to SDMA transfer configuration structure.

21.7.33 void SDMA_StartTransfer (`sdma_handle_t` * *handle*)

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

<i>handle</i>	SDMA handle pointer.
---------------	----------------------

21.7.34 void SDMA_StopTransfer (sdma_handle_t * *handle*)

This function disables the channel request to pause the transfer. Users can call [SDMA_StartTransfer\(\)](#) again to resume the transfer.

Parameters

<i>handle</i>	SDMA handle pointer.
---------------	----------------------

21.7.35 void SDMA_AbortTransfer (sdma_handle_t * *handle*)

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

<i>handle</i>	DMA handle pointer.
---------------	---------------------

21.7.36 uint32_t SDMA_GetTransferredBytes (sdma_handle_t * *handle*)

This function returns the buffer descriptor count value if not using buffer descriptor. While do a simple transfer, which only uses one descriptor, the SDMA driver inside handle the buffer descriptor. In uart receive case, it can tell users how many data already received, also it can tells users how many data transfferd while error occurred. Notice, the count would not change while transfer is on-going using default SDMA script.

Parameters

<i>handle</i>	DMA handle pointer.
---------------	---------------------

Returns

Transferred bytes.

21.7.37 bool SDMA_IsPeripheralInSPBA (uint32_t *addr*)

Parameters

<i>addr</i>	Address which need to judge.
-------------	------------------------------

Return values

<i>True</i>	means located in SPBA, false means not.
-------------	---

21.7.38 void SDMA_HandleIRQ (sdma_handle_t * *handle*)

This function clears the interrupt flags and also handle the CCB for the channel.

Parameters

<i>handle</i>	SDMA handle pointer.
---------------	----------------------

Chapter 22

SEMA4: Hardware Semaphores Driver

Overview

The MCUXpresso SDK provides a driver for the SEMA4 module of MCUXpresso SDK devices.

Macros

- #define [SEMA4_GATE_NUM_RESET_ALL](#) (64U)
The number to reset all SEMA4 gates.
- #define [SEMA4_GATEn](#)(base, n) (((volatile uint8_t *)(&((base)->Gate00)))[(n)])
SEMA4 gate n register address.

Functions

- void [SEMA4_Init](#) (SEMA4_Type *base)
Initializes the SEMA4 module.
- void [SEMA4_Deinit](#) (SEMA4_Type *base)
De-initializes the SEMA4 module.
- [status_t SEMA4_TryLock](#) (SEMA4_Type *base, uint8_t gateNum, uint8_t procNum)
Tries to lock the SEMA4 gate.
- void [SEMA4_Lock](#) (SEMA4_Type *base, uint8_t gateNum, uint8_t procNum)
Locks the SEMA4 gate.
- static void [SEMA4_Unlock](#) (SEMA4_Type *base, uint8_t gateNum)
Unlocks the SEMA4 gate.
- static int32_t [SEMA4_GetLockProc](#) (SEMA4_Type *base, uint8_t gateNum)
Gets the status of the SEMA4 gate.
- [status_t SEMA4_ResetGate](#) (SEMA4_Type *base, uint8_t gateNum)
Resets the SEMA4 gate to an unlocked status.
- static [status_t SEMA4_ResetAllGates](#) (SEMA4_Type *base)
Resets all SEMA4 gates to an unlocked status.
- static void [SEMA4_EnableGateNotifyInterrupt](#) (SEMA4_Type *base, uint8_t procNum, uint32_t mask)
Enable the gate notification interrupt.
- static void [SEMA4_DisableGateNotifyInterrupt](#) (SEMA4_Type *base, uint8_t procNum, uint32_t mask)
Disable the gate notification interrupt.
- static uint32_t [SEMA4_GetGateNotifyStatus](#) (SEMA4_Type *base, uint8_t procNum)
Get the gate notification flags.
- [status_t SEMA4_ResetGateNotify](#) (SEMA4_Type *base, uint8_t gateNum)
Resets the SEMA4 gate IRQ notification.
- static [status_t SEMA4_ResetAllGateNotify](#) (SEMA4_Type *base)
Resets all SEMA4 gates IRQ notification.

Driver version

- #define **FSL_SEMA4_DRIVER_VERSION** (**MAKE_VERSION**(2, 0, 2))
SEMA4 driver version.

Macro Definition Documentation

22.2.1 #define SEMA4_GATE_NUM_RESET_ALL (64U)

Function Documentation

22.3.1 void SEMA4_Init (SEMA4_Type * *base*)

This function initializes the SEMA4 module. It only enables the clock but does not reset the gates because the module might be used by other processors at the same time. To reset the gates, call either SEMA4_ResetGate or SEMA4_ResetAllGates function.

Parameters

<i>base</i>	SEMA4 peripheral base address.
-------------	--------------------------------

22.3.2 void SEMA4_Deinit (SEMA4_Type * *base*)

This function de-initializes the SEMA4 module. It only disables the clock.

Parameters

<i>base</i>	SEMA4 peripheral base address.
-------------	--------------------------------

22.3.3 status_t SEMA4_TryLock (SEMA4_Type * *base*, uint8_t *gateNum*, uint8_t *procNum*)

This function tries to lock the specific SEMA4 gate. If the gate has been locked by another processor, this function returns an error code.

Parameters

<i>base</i>	SEMA4 peripheral base address.
-------------	--------------------------------

<i>gateNum</i>	Gate number to lock.
<i>procNum</i>	Current processor number.

Return values

<i>kStatus_Success</i>	Lock the sema4 gate successfully.
<i>kStatus_Fail</i>	Sema4 gate has been locked by another processor.

22.3.4 void SEMA4_Lock (SEMA4_Type * *base*, uint8_t *gateNum*, uint8_t *procNum*)

This function locks the specific SEMA4 gate. If the gate has been locked by other processors, this function waits until it is unlocked and then lock it.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>gateNum</i>	Gate number to lock.
<i>procNum</i>	Current processor number.

22.3.5 static void SEMA4_Unlock (SEMA4_Type * *base*, uint8_t *gateNum*) [inline], [static]

This function unlocks the specific SEMA4 gate. It only writes unlock value to the SEMA4 gate register. However, it does not check whether the SEMA4 gate is locked by the current processor or not. As a result, if the SEMA4 gate is not locked by the current processor, this function has no effect.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>gateNum</i>	Gate number to unlock.

22.3.6 static int32_t SEMA4_GetLockProc (SEMA4_Type * *base*, uint8_t *gateNum*) [inline], [static]

This function checks the lock status of a specific SEMA4 gate.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>gateNum</i>	Gate number.

Returns

Return -1 if the gate is unlocked, otherwise return the processor number which has locked the gate.

22.3.7 **status_t SEMA4_ResetGate (SEMA4_Type * *base*, uint8_t *gateNum*)**

This function resets a SEMA4 gate to an unlocked status.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>gateNum</i>	Gate number.

Return values

<i>kStatus_Success</i>	SEMA4 gate is reset successfully.
<i>kStatus_Fail</i>	Some other reset process is ongoing.

22.3.8 **static status_t SEMA4_ResetAllGates (SEMA4_Type * *base*) [inline], [static]**

This function resets all SEMA4 gate to an unlocked status.

Parameters

<i>base</i>	SEMA4 peripheral base address.
-------------	--------------------------------

Return values

<i>kStatus_Success</i>	SEMA4 is reset successfully.
------------------------	------------------------------

<i>kStatus_Fail</i>	Some other reset process is ongoing.
---------------------	--------------------------------------

22.3.9 static void SEMA4_EnableGateNotifyInterrupt (SEMA4_Type * *base*, uint8_t *procNum*, uint32_t *mask*) [inline], [static]

Gate notification provides such feature, when core tried to lock the gate and failed, it could get notification when the gate is idle.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>procNum</i>	Current processor number.
<i>mask</i>	OR'ed value of the gate index, for example: (1<<0) (1<<1) means gate 0 and gate 1.

22.3.10 static void SEMA4_DisableGateNotifyInterrupt (SEMA4_Type * *base*, uint8_t *procNum*, uint32_t *mask*) [inline], [static]

Gate notification provides such feature, when core tried to lock the gate and failed, it could get notification when the gate is idle.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>procNum</i>	Current processor number.
<i>mask</i>	OR'ed value of the gate index, for example: (1<<0) (1<<1) means gate 0 and gate 1.

22.3.11 static uint32_t SEMA4_GetGateNotifyStatus (SEMA4_Type * *base*, uint8_t *procNum*) [inline], [static]

Gate notification provides such feature, when core tried to lock the gate and failed, it could get notification when the gate is idle. The status flags are cleared automatically when the gate is locked by current core or locked again before the other core.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>procNum</i>	Current processor number.

Returns

OR'ed value of the gate index, for example: $(1 \ll 0) \mid (1 \ll 1)$ means gate 0 and gate 1 flags are pending.

22.3.12 `status_t SEMA4_ResetGateNotify (SEMA4_Type * base, uint8_t gateNum)`

This function resets a SEMA4 gate IRQ notification.

Parameters

<i>base</i>	SEMA4 peripheral base address.
<i>gateNum</i>	Gate number.

Return values

<i>kStatus_Success</i>	Reset successfully.
<i>kStatus_Fail</i>	Some other reset process is ongoing.

22.3.13 `static status_t SEMA4_ResetAllGateNotify (SEMA4_Type * base) [inline], [static]`

This function resets all SEMA4 gate IRQ notifications.

Parameters

<i>base</i>	SEMA4 peripheral base address.
-------------	--------------------------------

Return values

<i>kStatus_Success</i>	Reset successfully.
<i>kStatus_Fail</i>	Some other reset process is ongoing.

Chapter 23

TMU: Thermal Management Unit Driver

Overview

The MCUXpresso SDK provides a peripheral driver for the thermal management unit (TMU) module of MCUXpresso SDK devices.

Typical use case

23.2.1 Monitor and report Configuration

Refer to the driver examples codes located at <SDK_ROOT>/boards/<BOARD>/driver_examples/tmu-_1

Data Structures

- struct `tmu_threshold_config_t`
configuration for TMU threshold. [More...](#)
- struct `tmu_interrupt_status_t`
TMU interrupt status. [More...](#)
- struct `tmu_config_t`
Configuration for TMU module. [More...](#)

Macros

- #define `FSL_TMU_DRIVER_VERSION` (MAKE_VERSION(2, 1, 1))
TMU driver version.

Enumerations

- enum `_tmu_interrupt_enable` {
 `kTMU_ImmediateTemperatureInterruptEnable`,
 `kTMU_AverageTemperatureInterruptEnable`,
 `kTMU_AverageTemperatureCriticalInterruptEnable` }
TMU interrupt enable.
- enum `_tmu_interrupt_status_flags` {
 `kTMU_ImmediateTemperatureStatusFlags` = `TMU_TIDR_ITTE_MASK`,
 `kTMU_AverageTemperatureStatusFlags` = `TMU_TIDR_ATTTE_MASK`,
 `kTMU_AverageTemperatureCriticalStatusFlags` }
TMU interrupt status flags.
- enum `tmu_average_low_pass_filter_t` {
 `kTMU_AverageLowPassFilter1_0` = 0U,
 `kTMU_AverageLowPassFilter0_5` = 1U,
 `kTMU_AverageLowPassFilter0_25` = 2U,

```
kTMU_AverageLowPassFilter0_125 = 3U }
```

Average low pass filter setting.

- enum `tmu_amplifier_gain_t` {
`kTMU_AmplifierGain6_34` = 0U,
`kTMU_AmplifierGain6_485` = 1U,
`kTMU_AmplifierGain6_63` = 2U,
`kTMU_AmplifierGain6_775` = 3U,
`kTMU_AmplifierGain6_92` = 4U,
`kTMU_AmplifierGain7_065` = 5U,
`kTMU_AmplifierGain7_21` = 6U,
`kTMU_AmplifierGain7_355` = 7U,
`kTMU_AmplifierGain7_5` = 8U,
`kTMU_AmplifierGain7_645` = 9U,
`kTMU_AmplifierGain7_79` = 10U,
`kTMU_AmplifierGain7_935` = 11U,
`kTMU_AmplifierGain8_08` = 12U,
`kTMU_AmplifierGain8_225` = 13U,
`kTMU_AmplifierGain8_37` = 14U,
`kTMU_AmplifierGain8_515` = 15U }

Amplifier gain setting.

- enum `tmu_amplifier_reference_voltage_t` {

```

kTMU_AmplifierReferenceVoltage510 = 0U,
kTMU_AmplifierReferenceVoltage517_5 = 1U,
kTMU_AmplifierReferenceVoltage525 = 2U,
kTMU_AmplifierReferenceVoltage532_5 = 3U,
kTMU_AmplifierReferenceVoltage540 = 4U,
kTMU_AmplifierReferenceVoltage547_5 = 5U,
kTMU_AmplifierReferenceVoltage555 = 6U,
kTMU_AmplifierReferenceVoltage562_5 = 7U,
kTMU_AmplifierReferenceVoltage570 = 8U,
kTMU_AmplifierReferenceVoltage577_5 = 9U,
kTMU_AmplifierReferenceVoltage585 = 10U,
kTMU_AmplifierReferenceVoltage592_5 = 11U,
kTMU_AmplifierReferenceVoltage600 = 12U,
kTMU_AmplifierReferenceVoltage607_5 = 13U,
kTMU_AmplifierReferenceVoltage615 = 14U,
kTMU_AmplifierReferenceVoltage622_5 = 15U,
kTMU_AmplifierReferenceVoltage630 = 16U,
kTMU_AmplifierReferenceVoltage637_5 = 17U,
kTMU_AmplifierReferenceVoltage645 = 18U,
kTMU_AmplifierReferenceVoltage652_5 = 19U,
kTMU_AmplifierReferenceVoltage660 = 20U,
kTMU_AmplifierReferenceVoltage667_5 = 21U,
kTMU_AmplifierReferenceVoltage675 = 22U,
kTMU_AmplifierReferenceVoltage682_5 = 23U,
kTMU_AmplifierReferenceVoltage690 = 24U,
kTMU_AmplifierReferenceVoltage697_5 = 25U,
kTMU_AmplifierReferenceVoltage705 = 26U,
kTMU_AmplifierReferenceVoltage712_5 = 27U,
kTMU_AmplifierReferenceVoltage720 = 28U,
kTMU_AmplifierReferenceVoltage727_5 = 29U,
kTMU_AmplifierReferenceVoltage735 = 30U,
kTMU_AmplifierReferenceVoltage742_5 = 31U }

```

Amplifier reference voltage setting.

Functions

- void **TMU_Init** (TMU_Type *base, const **tmu_config_t** *config)
Enable the access to TMU registers and Initialize TMU module.
- void **TMU_Deinit** (TMU_Type *base)
De-initialize TMU module and Disable the access to DCDC registers.
- void **TMU_GetDefaultConfig** (**tmu_config_t** *config)
Gets the default configuration for TMU.
- static void **TMU_Enable** (TMU_Type *base, bool enable)
Enable/Disable monitoring the temperature sensor.
- static void **TMU_EnableInterrupts** (TMU_Type *base, uint32_t mask)
Enable the TMU interrupts.
- static void **TMU_DisableInterrupts** (TMU_Type *base, uint32_t mask)

- *Disable the TMU interrupts.*
- void [TMU_GetInterruptStatusFlags](#) (TMU_Type *base, [tmu_interrupt_status_t](#) *status)
Get interrupt status flags.
- void [TMU_ClearInterruptStatusFlags](#) (TMU_Type *base, uint32_t mask)
Clear interrupt status flags.
- [status_t](#) [TMU_GetImmediateTemperature](#) (TMU_Type *base, uint32_t *temperature)
Get the last immediate temperature at site.
- [status_t](#) [TMU_GetAverageTemperature](#) (TMU_Type *base, uint32_t *temperature)
Get the last average temperature at site.
- void [TMU_SetHighTemperatureThreshold](#) (TMU_Type *base, const [tmu_threshold_config_t](#) *config)
Configure the high temperature threshold value and enable/disable relevant threshold.

Data Structure Documentation

23.3.1 struct tmu_threshold_config_t

Data Fields

- bool [immediateThresholdEnable](#)
Enable high temperature immediate threshold.
- bool [AverageThresholdEnable](#)
Enable high temperature average threshold.
- bool [AverageCriticalThresholdEnable](#)
Enable high temperature average critical threshold.
- uint8_t [immediateThresholdValue](#)
Range: 10U-125U.
- uint8_t [averageThresholdValue](#)
Range: 10U-125U.
- uint8_t [averageCriticalThresholdValue](#)
Range: 10U-125U.

23.3.1.0.0.29 Field Documentation

23.3.1.0.0.29.1 bool tmu_threshold_config_t::immediateThresholdEnable

23.3.1.0.0.29.2 bool tmu_threshold_config_t::AverageThresholdEnable

23.3.1.0.0.29.3 bool tmu_threshold_config_t::AverageCriticalThresholdEnable

23.3.1.0.0.29.4 uint8_t tmu_threshold_config_t::immediateThresholdValue

Valid when corresponding threshold is enabled. High temperature immediate threshold value. Determines the current upper temperature threshold, for any enabled monitored site.

23.3.1.0.0.29.5 uint8_t tmu_threshold_config_t::averageThresholdValue

Valid when corresponding threshold is enabled. High temperature average threshold value. Determines the average upper temperature threshold, for any enabled monitored site.

23.3.1.0.0.29.6 uint8_t tmu_threshold_config_t::averageCriticalThresoldValue

Valid when corresponding threshold is enabled. High temperature average critical threshold value. Determines the average upper critical temperature threshold, for any enabled monitored site.

23.3.2 struct tmu_interrupt_status_t**Data Fields**

- uint32_t [interruptDetectMask](#)
The mask of interrupt status flags.

23.3.2.0.0.30 Field Documentation**23.3.2.0.0.30.1 uint32_t tmu_interrupt_status_t::interruptDetectMask**

Refer to "_tmu_interrupt_status_flags" enumeration.

23.3.3 struct tmu_config_t**Data Fields**

- [tmu_average_low_pass_filter_t averageLPF](#)
The average temperature is calculated as: $ALPF \times Current_Temp + (1 - ALPF) \times Average_Temp$.

23.3.3.0.0.31 Field Documentation**23.3.3.0.0.31.1 tmu_average_low_pass_filter_t tmu_config_t::averageLPF**

For proper operation, this field should only change when monitoring is disabled.

Macro Definition Documentation**23.4.1 #define FSL_TMU_DRIVER_VERSION (MAKE_VERSION(2, 1, 1))**

Version 2.1.1.

Enumeration Type Documentation**23.5.1 enum _tmu_interrupt_enable**

Enumerator

kTMU_ImmediateTemperatureInterruptEnable Immediate temperature threshold exceeded interrupt enable.

kTMU_AverageTemperatureInterruptEnable Average temperature threshold exceeded interrupt enable.

kTMU_AverageTemperatureCriticalInterruptEnable Average temperature critical threshold exceeded interrupt enable. >

23.5.2 enum _tmu_interrupt_status_flags

Enumerator

kTMU_ImmediateTemperatureStatusFlags Immediate temperature threshold exceeded(ITTE).

kTMU_AverageTemperatureStatusFlags Average temperature threshold exceeded(ATTE).

kTMU_AverageTemperatureCriticalStatusFlags Average temperature critical threshold exceeded. (ATCTE)

23.5.3 enum tmu_average_low_pass_filter_t

Enumerator

kTMU_AverageLowPassFilter1_0 Average low pass filter = 1.

kTMU_AverageLowPassFilter0_5 Average low pass filter = 0.5.

kTMU_AverageLowPassFilter0_25 Average low pass filter = 0.25.

kTMU_AverageLowPassFilter0_125 Average low pass filter = 0.125.

23.5.4 enum tmu_amplifier_gain_t

Enumerator

kTMU_AmplifierGain6_34 TMU amplifier gain voltage 6.34mV.

kTMU_AmplifierGain6_485 TMU amplifier gain voltage 6.485mV.

kTMU_AmplifierGain6_63 TMU amplifier gain voltage 6.63mV.

kTMU_AmplifierGain6_775 TMU amplifier gain voltage 6.775mV.

kTMU_AmplifierGain6_92 TMU amplifier gain voltage 6.92mV.

kTMU_AmplifierGain7_065 TMU amplifier gain voltage 7.065mV.

kTMU_AmplifierGain7_21 TMU amplifier gain voltage 7.21mV.

kTMU_AmplifierGain7_355 TMU amplifier gain voltage 7.355mV.

kTMU_AmplifierGain7_5 TMU amplifier gain voltage 7.5mV.

kTMU_AmplifierGain7_645 TMU amplifier gain voltage 7.645mV.

kTMU_AmplifierGain7_79 TMU amplifier gain voltage 7.79mV.

kTMU_AmplifierGain7_935 TMU amplifier gain voltage 7.935mV.

kTMU_AmplifierGain8_08 TMU amplifier gain voltage 8.08mV(default).

kTMU_AmplifierGain8_225 TMU amplifier gain voltage 8.225mV.

kTMU_AmplifierGain8_37 TMU amplifier gain voltage 8.37mV.

kTMU_AmplifierGain8_515 TMU amplifier gain voltage 8.515mV.

23.5.5 enum tmu_amplifier_reference_voltage_t

Enumerator

kTMU_AmplifierReferenceVoltage510 TMU amplifier reference voltage 510mV.

kTMU_AmplifierReferenceVoltage517_5 TMU amplifier reference voltage 517.5mV.

kTMU_AmplifierReferenceVoltage525 TMU amplifier reference voltage 525mV.

kTMU_AmplifierReferenceVoltage532_5 TMU amplifier reference voltage 532.5mV.

kTMU_AmplifierReferenceVoltage540 TMU amplifier reference voltage 540mV.

kTMU_AmplifierReferenceVoltage547_5 TMU amplifier reference voltage 547.5mV.

kTMU_AmplifierReferenceVoltage555 TMU amplifier reference voltage 555mV.

kTMU_AmplifierReferenceVoltage562_5 TMU amplifier reference voltage 562.5mV.

kTMU_AmplifierReferenceVoltage570 TMU amplifier reference voltage 570mV.

kTMU_AmplifierReferenceVoltage577_5 TMU amplifier reference voltage 577.5mV.

kTMU_AmplifierReferenceVoltage585 TMU amplifier reference voltage 585mV.

kTMU_AmplifierReferenceVoltage592_5 TMU amplifier reference voltage 592.5mV.

kTMU_AmplifierReferenceVoltage600 TMU amplifier reference voltage 600mV.

kTMU_AmplifierReferenceVoltage607_5 TMU amplifier reference voltage 607.5mV.

kTMU_AmplifierReferenceVoltage615 TMU amplifier reference voltage 615mV.

kTMU_AmplifierReferenceVoltage622_5 TMU amplifier reference voltage 622.5mV.

kTMU_AmplifierReferenceVoltage630 TMU amplifier reference voltage 630mV.

kTMU_AmplifierReferenceVoltage637_5 TMU amplifier reference voltage 637.5mV.

kTMU_AmplifierReferenceVoltage645 TMU amplifier reference voltage 645mV.

kTMU_AmplifierReferenceVoltage652_5 TMU amplifier reference voltage 652.5mV(default).

kTMU_AmplifierReferenceVoltage660 TMU amplifier reference voltage 660mV.

kTMU_AmplifierReferenceVoltage667_5 TMU amplifier reference voltage 667.5mV.

kTMU_AmplifierReferenceVoltage675 TMU amplifier reference voltage 675mV.

kTMU_AmplifierReferenceVoltage682_5 TMU amplifier reference voltage 682.5mV.

kTMU_AmplifierReferenceVoltage690 TMU amplifier reference voltage 690mV.

kTMU_AmplifierReferenceVoltage697_5 TMU amplifier reference voltage 697.5mV.

kTMU_AmplifierReferenceVoltage705 TMU amplifier reference voltage 705mV.

kTMU_AmplifierReferenceVoltage712_5 TMU amplifier reference voltage 712.5mV.

kTMU_AmplifierReferenceVoltage720 TMU amplifier reference voltage 720mV.

kTMU_AmplifierReferenceVoltage727_5 TMU amplifier reference voltage 727.5mV.

kTMU_AmplifierReferenceVoltage735 TMU amplifier reference voltage 735mV.

kTMU_AmplifierReferenceVoltage742_5 TMU amplifier reference voltage 742.5mV.

Function Documentation

23.6.1 void TMU_Init (TMU_Type * *base*, const tmu_config_t * *config*)

Parameters

<i>base</i>	TMU peripheral base address.
<i>config</i>	Pointer to configuration structure. Refer to "tmu_config_t" structure.

23.6.2 void TMU_Deinit (TMU_Type * *base*)

Parameters

<i>base</i>	TMU peripheral base address.
-------------	------------------------------

23.6.3 void TMU_GetDefaultConfig (tmu_config_t * *config*)

This function initializes the user configuration structure to default value. The default value are:

Example:

```
config->averageLPF = kTMU_AverageLowPassFilter0_5;
```

Parameters

<i>config</i>	Pointer to TMU configuration structure.
---------------	---

23.6.4 static void TMU_Enable (TMU_Type * *base*, bool *enable*) [inline], [static]

Parameters

<i>base</i>	TMU peripheral base address.
<i>enable</i>	Switcher to enable/disable TMU.

23.6.5 static void TMU_EnableInterrupts (TMU_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	TMU peripheral base address.
<i>mask</i>	The interrupt mask. Refer to "_tmu_interrupt_enable" enumeration.

23.6.6 static void TMU_DisableInterrupts (TMU_Type * *base*, uint32_t *mask*) [inline], [static]

Parameters

<i>base</i>	TMU peripheral base address.
<i>mask</i>	The interrupt mask. Refer to "_tmu_interrupt_enable" enumeration.

23.6.7 void TMU_GetInterruptStatusFlags (TMU_Type * *base*, tmu_interrupt_status_t * *status*)

Parameters

<i>base</i>	TMU peripheral base address.
<i>status</i>	The pointer to interrupt status structure. Record the current interrupt status. Please refer to "tmu_interrupt_status_t" structure.

23.6.8 void TMU_ClearInterruptStatusFlags (TMU_Type * *base*, uint32_t *mask*)

Parameters

<i>base</i>	TMU peripheral base address.
<i>mask</i>	The mask of interrupt status flags. Refer to "_tmu_interrupt_status_flags" enumeration.

23.6.9 status_t TMU_GetImmediateTemperature (TMU_Type * *base*, uint32_t * *temperature*)

Parameters

<i>base</i>	TMU peripheral base address.
<i>temperature</i>	Last immediate temperature reading at site when V=1.

Returns

Execution status.

Return values

<i>kStatus_Success</i>	Temperature reading is valid.
<i>kStatus_Fail</i>	Temperature reading is not valid because temperature out of sensor range or first measurement still pending.

23.6.10 `status_t TMU_GetAverageTemperature (TMU_Type * base, uint32_t * temperature)`

Parameters

<i>base</i>	TMU peripheral base address.
<i>temperature</i>	Last average temperature reading at site.

Returns

Execution status.

Return values

<i>kStatus_Success</i>	Temperature reading is valid.
<i>kStatus_Fail</i>	Temperature reading is not valid because temperature out of sensor range or first measurement still pending.

23.6.11 `void TMU_SetHighTemperatureThresold (TMU_Type * base, const tmu_threshold_config_t * config)`

Parameters

<i>base</i>	TMU peripheral base address.
<i>config</i>	Pointer to configuration structure. Refer to "tmu_threshold_config_t" structure.

Chapter 24

WDOG: Watchdog Timer Driver

Overview

The MCUXpresso SDK provides a peripheral driver for the Watchdog module (WDOG) of MCUXpresso SDK devices.

Typical use case

Refer to the driver examples codes located at <SDK_ROOT>/boards/<BOARD>/driver_examples/wdog

Data Structures

- struct [wdog_work_mode_t](#)
Defines WDOG work mode. [More...](#)
- struct [wdog_config_t](#)
Describes WDOG configuration structure. [More...](#)

Enumerations

- enum [_wdog_interrupt_enable](#) { [kWDOG_InterruptEnable](#) = WDOG_WICR_WIE_MASK }
 - enum [_wdog_status_flags](#) {
[kWDOG_RunningFlag](#) = WDOG_WCR_WDE_MASK,
[kWDOG_PowerOnResetFlag](#) = WDOG_WRSR_POR_MASK,
[kWDOG_TimeoutResetFlag](#) = WDOG_WRSR_TOUT_MASK,
[kWDOG_SoftwareResetFlag](#) = WDOG_WRSR_SFTW_MASK,
[kWDOG_InterruptFlag](#) = WDOG_WICR_WTIS_MASK }
- WDOG status flags.*

Driver version

- #define [FSL_WDOG_DRIVER_VERSION](#) (MAKE_VERSION(2, 1, 1))
Defines WDOG driver version.

Refresh sequence

- #define [WDOG_REFRESH_KEY](#) (0xAAAA5555U)

WDOG Initialization and De-initialization.

- void [WDOG_GetDefaultConfig](#) ([wdog_config_t](#) *config)
Initializes the WDOG configuration structure.
- void [WDOG_Init](#) (WDOG_Type *base, const [wdog_config_t](#) *config)

- *Initializes the WDOG.*
- void [WDOG_Deinit](#) (WDOG_Type *base)
- *Shuts down the WDOG.*
- static void [WDOG_Enable](#) (WDOG_Type *base)
- *Enables the WDOG module.*
- static void [WDOG_Disable](#) (WDOG_Type *base)
- *Disables the WDOG module.*
- static void [WDOG_TriggerSystemSoftwareReset](#) (WDOG_Type *base)
- *Trigger the system software reset.*
- static void [WDOG_TriggerSoftwareSignal](#) (WDOG_Type *base)
- *Trigger an output assertion.*
- static void [WDOG_EnableInterrupts](#) (WDOG_Type *base, uint16_t mask)
- *Enables the WDOG interrupt.*
- uint16_t [WDOG_GetStatusFlags](#) (WDOG_Type *base)
- *Gets the WDOG all reset status flags.*
- void [WDOG_ClearInterruptStatus](#) (WDOG_Type *base, uint16_t mask)
- *Clears the WDOG flag.*
- static void [WDOG_SetTimeoutValue](#) (WDOG_Type *base, uint16_t timeoutCount)
- *Sets the WDOG timeout value.*
- static void [WDOG_SetInterruptTimeoutValue](#) (WDOG_Type *base, uint16_t timeoutCount)
- *Sets the WDOG interrupt count timeout value.*
- static void [WDOG_DisablePowerDownEnable](#) (WDOG_Type *base)
- *Disable the WDOG power down enable bit.*
- void [WDOG_Refresh](#) (WDOG_Type *base)
- *Refreshes the WDOG timer.*

Data Structure Documentation

24.3.1 struct wdog_work_mode_t

Data Fields

- bool [enableWait](#)
continue or suspend WDOG in wait mode
- bool [enableStop](#)
continue or suspend WDOG in stop mode
- bool [enableDebug](#)
continue or suspend WDOG in debug mode

24.3.2 struct wdog_config_t

Data Fields

- bool [enableWdog](#)
Enables or disables WDOG.
- [wdog_work_mode_t](#) [workMode](#)
Configures WDOG work mode in debug stop and wait mode.
- bool [enableInterrupt](#)

- *Enables or disables WDOG interrupt.*
uint16_t **timeoutValue**
Timeout value.
- uint16_t **interruptTimeValue**
Interrupt count timeout value.
- bool **softwareResetExtension**
software reset extension
- bool **enablePowerDown**
power down enable bit
- bool **enableTimeOutAssert**
Enable WDOG_B timeout assertion.

24.3.2.0.0.32 Field Documentation

24.3.2.0.0.32.1 bool wdog_config_t::enableTimeOutAssert

Enumeration Type Documentation

24.4.1 enum _wdog_interrupt_enable

This structure contains the settings for all of the WDOG interrupt configurations.

Enumerator

kWDOG_InterruptEnable WDOG timeout generates an interrupt before reset.

24.4.2 enum _wdog_status_flags

This structure contains the WDOG status flags for use in the WDOG functions.

Enumerator

kWDOG_RunningFlag Running flag, set when WDOG is enabled.

kWDOG_PowerOnResetFlag Power On flag, set when reset is the result of a powerOnReset.

kWDOG_TimeoutResetFlag Timeout flag, set when reset is the result of a timeout.

kWDOG_SoftwareResetFlag Software flag, set when reset is the result of a software.

kWDOG_InterruptFlag interrupt flag, whether interrupt has occurred or not

Function Documentation

24.5.1 void WDOG_GetDefaultConfig (wdog_config_t * *config*)

This function initializes the WDOG configuration structure to default values. The default values are as follows.

```
* wdogConfig->enableWdog = true;
* wdogConfig->workMode.enableWait = true;
* wdogConfig->workMode.enableStop = false;
```

```

*  wdogConfig->workMode.enableDebug = false;
*  wdogConfig->enableInterrupt = false;
*  wdogConfig->enablePowerdown = false;
*  wdogConfig->resetExtension = false;
*  wdogConfig->timeoutValue = 0xFFU;
*  wdogConfig->interruptTimeValue = 0x04u;
*

```

Parameters

<i>config</i>	Pointer to the WDOG configuration structure.
---------------	--

See Also

[wdog_config_t](#)

24.5.2 void WDOG_Init (WDOG_Type * *base*, const wdog_config_t * *config*)

This function initializes the WDOG. When called, the WDOG runs according to the configuration.

This is an example.

```

*  wdog_config_t config;
*  WDOG_GetDefaultConfig(&config);
*  config.timeoutValue = 0xffU;
*  config->interruptTimeValue = 0x04u;
*  WDOG_Init(wdog_base, &config);
*

```

Parameters

<i>base</i>	WDOG peripheral base address
<i>config</i>	The configuration of WDOG

24.5.3 void WDOG_Deinit (WDOG_Type * *base*)

This function shuts down the WDOG. Watchdog Enable bit is a write one once only bit. It is not possible to clear this bit by a software write, once the bit is set. This bit(WDE) can be set/reset only in debug mode(exception).

24.5.4 static void WDOG_Enable (WDOG_Type * *base*) [inline], [static]

This function writes a value into the WDOG_WCR register to enable the WDOG. This is a write one once only bit. It is not possible to clear this bit by a software write, once the bit is set. only debug mode exception.

Parameters

<i>base</i>	WDOG peripheral base address
-------------	------------------------------

24.5.5 static void WDOG_Disable (WDOG_Type * *base*) [inline], [static]

This function writes a value into the WDOG_WCR register to disable the WDOG. This is a write one once only bit. It is not possible to clear this bit by a software write, once the bit is set. only debug mode exception

Parameters

<i>base</i>	WDOG peripheral base address
-------------	------------------------------

24.5.6 static void WDOG_TriggerSystemSoftwareReset (WDOG_Type * *base*) [inline], [static]

This function will write to the WCR[SRS] bit to trigger a software system reset. This bit will automatically resets to "1" after it has been asserted to "0". Note: Calling this API will reset the system right now, please using it with more attention.

Parameters

<i>base</i>	WDOG peripheral base address
-------------	------------------------------

24.5.7 static void WDOG_TriggerSoftwareSignal (WDOG_Type * *base*) [inline], [static]

This function will write to the WCR[WDA] bit to trigger WDOG_B signal assertion. The WDOG_B signal can be routed to external pin of the chip, the output pin will turn to assertion along with WDOG_B signal. Note: The WDOG_B signal will remain assert until a power on reset occurred, so, please take more attention while calling it.

Parameters

<i>base</i>	WDOG peripheral base address
-------------	------------------------------

24.5.8 static void WDOG_EnableInterrupts (WDOG_Type * *base*, uint16_t *mask*) [inline], [static]

This bit is a write once only bit. Once the software does a write access to this bit, it will get locked and cannot be reprogrammed until the next system reset assertion

Parameters

<i>base</i>	WDOG peripheral base address
<i>mask</i>	The interrupts to enable The parameter can be combination of the following source if defined. <ul style="list-style-type: none"> • kWDOG_InterruptEnable

24.5.9 uint16_t WDOG_GetStatusFlags (WDOG_Type * *base*)

This function gets all reset status flags.

```
* uint16_t status;
* status = WDOG_GetStatusFlags (wdog_base);
*
```

Parameters

<i>base</i>	WDOG peripheral base address
-------------	------------------------------

Returns

State of the status flag: asserted (true) or not-asserted (false).

See Also

[_wdog_status_flags](#)

- true: a related status flag has been set.
- false: a related status flag is not set.

24.5.10 void WDOG_ClearInterruptStatus (WDOG_Type * *base*, uint16_t *mask*)

This function clears the WDOG status flag.

This is an example for clearing the interrupt flag.

```
* WDOG_ClearStatusFlags (wdog_base, kWDOG_InterruptFlag);
*
```

Parameters

<i>base</i>	WDOG peripheral base address
<i>mask</i>	The status flags to clear. The parameter could be any combination of the following values. kWDOG_TimeoutFlag

24.5.11 static void WDOG_SetTimeoutValue (WDOG_Type * *base*, uint16_t *timeoutCount*) [inline], [static]

This function sets the timeout value. This function writes a value into WCR registers. The time-out value can be written at any point of time but it is loaded to the counter at the time when WDOG is enabled or after the service routine has been performed.

Parameters

<i>base</i>	WDOG peripheral base address
<i>timeoutCount</i>	WDOG timeout value; count of WDOG clock tick.

24.5.12 static void WDOG_SetInterruptTimeoutValue (WDOG_Type * *base*, uint16_t *timeoutCount*) [inline], [static]

This function sets the interrupt count timeout value. This function writes a value into WIC registers which are write-once. This field is write once only. Once the software does a write access to this field, it will get locked and cannot be reprogrammed until the next system reset assertion.

Parameters

<i>base</i>	WDOG peripheral base address
<i>timeoutCount</i>	WDOG timeout value; count of WDOG clock tick.

24.5.13 static void WDOG_DisablePowerDownEnable (WDOG_Type * *base*) [inline], [static]

This function disable the WDOG power down enable(PDE). This function writes a value into WMCR registers which are write-once. This field is write once only. Once software sets this bit it cannot be reset until the next system reset.

Parameters

<i>base</i>	WDOG peripheral base address
-------------	------------------------------

24.5.14 void WDOG_Refresh (WDOG_Type * *base*)

This function feeds the WDOG. This function should be called before the WDOG timer is in timeout. Otherwise, a reset is asserted.

Parameters

<i>base</i>	WDOG peripheral base address
-------------	------------------------------

Chapter 25

Debug Console

Overview

This chapter describes the programming interface of the debug console driver.

The debug console enables debug log messages to be output via the specified peripheral with frequency of the peripheral source clock and base address at the specified baud rate. Additionally, it provides input and output functions to scan and print formatted data. The below picture shows the layout of debug console.

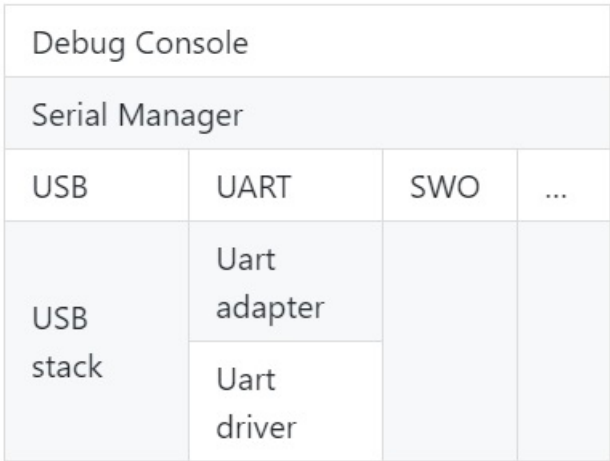


Figure 25.1.1: Debug console overview

Function groups

25.2.1 Initialization

To initialize the debug console, call the [DbgConsole_Init\(\)](#) function with these parameters. This function automatically enables the module and the clock.

```
status_t DbgConsole_Init(uint8_t instance, uint32_t baudRate,  
    serial_port_type_t device, uint32_t clkSrcFreq);
```

Select the supported debug console hardware device type, such as

```
typedef enum _serial_port_type  
{  
    kSerialPort_Uart = 1U,  
    kSerialPort_UsbCdc,  
    kSerialPort_Swo,  
} serial_port_type_t;
```


After the initialization is successful, stdout and stdin are connected to the selected peripheral.

This example shows how to call the `DbgConsole_Init()` given the user configuration structure.

```
DbgConsole_Init(BOARD_DEBUG_UART_INSTANCE, BOARD_DEBUG_UART_BAUDRATE, BOARD_DEBUG_UART_TYPE,
                BOARD_DEBUG_UART_CLK_FREQ);
```

25.2.2 Advanced Feature

The debug console provides input and output functions to scan and print formatted data.

- Support a format specifier for PRINTF following this prototype "`%[flags][width][.precision][length]specifier`", which is explained below

flags	Description
-	Left-justified within the given field width. Right-justified is the default.
+	Forces to precede the result with a plus or minus sign (+ or -) even for positive numbers. By default, only negative numbers are preceded with a - sign.
(space)	If no sign is written, a blank space is inserted before the value.
#	Used with o, x, or X specifiers the value is preceded with 0, 0x, or 0X respectively for values other than zero. Used with e, E and f, it forces the written output to contain a decimal point even if no digits would follow. By default, if no digits follow, no decimal point is written. Used with g or G the result is the same as with e or E but trailing zeros are not removed.
0	Left-pads the number with zeroes (0) instead of spaces, where padding is specified (see width sub-specifier).

Width	Description
(number)	A minimum number of characters to be printed. If the value to be printed is shorter than this number, the result is padded with blank spaces. The value is not truncated even if the result is larger.
*	The width is not specified in the format string, but as an additional integer value argument preceding the argument that has to be formatted.

.precision	Description
.number	For integer specifiers (d, i, o, u, x, X) precision specifies the minimum number of digits to be written. If the value to be written is shorter than this number, the result is padded with leading zeros. The value is not truncated even if the result is longer. A precision of 0 means that no character is written for the value 0. For e, E, and f specifiers this is the number of digits to be printed after the decimal point. For g and G specifiers This is the maximum number of significant digits to be printed. For s this is the maximum number of characters to be printed. By default, all characters are printed until the ending null character is encountered. For c type it has no effect. When no precision is specified, the default is 1. If the period is specified without an explicit value for precision, 0 is assumed.
.*	The precision is not specified in the format string, but as an additional integer value argument preceding the argument that has to be formatted.

length	Description
Do not support	

specifier	Description
d or i	Signed decimal integer
f	Decimal floating point
F	Decimal floating point capital letters
x	Unsigned hexadecimal integer
X	Unsigned hexadecimal integer capital letters
o	Signed octal
b	Binary value
p	Pointer address
u	Unsigned decimal integer
c	Character
s	String of characters
n	Nothing printed

- Support a format specifier for SCANF following this prototype " %[*][width][length]specifier", which is explained below

*	Description
	An optional starting asterisk indicates that the data is to be read from the stream but ignored. In other words, it is not stored in the corresponding argument.

width	Description
	This specifies the maximum number of characters to be read in the current reading operation.

length	Description
hh	The argument is interpreted as a signed character or unsigned character (only applies to integer specifiers: i, d, o, u, x, and X).
h	The argument is interpreted as a short integer or unsigned short integer (only applies to integer specifiers: i, d, o, u, x, and X).
l	The argument is interpreted as a long integer or unsigned long integer for integer specifiers (i, d, o, u, x, and X) and as a wide character or wide character string for specifiers c and s.
ll	The argument is interpreted as a long long integer or unsigned long long integer for integer specifiers (i, d, o, u, x, and X) and as a wide character or wide character string for specifiers c and s.
L	The argument is interpreted as a long double (only applies to floating point specifiers: e, E, f, g, and G).
j or z or t	Not supported

specifier	Qualifying Input	Type of argument
c	Single character: Reads the next character. If a width different from 1 is specified, the function reads width characters and stores them in the successive locations of the array passed as argument. No null character is appended at the end.	char *

specifier	Qualifying Input	Type of argument
i	Integer: : Number optionally preceded with a + or - sign	int *
d	Decimal integer: Number optionally preceded with a + or - sign	int *
a, A, e, E, f, F, g, G	Floating point: Decimal number containing a decimal point, optionally preceded by a + or - sign and optionally followed by the e or E character and a decimal number. Two examples of valid entries are -732.103 and 7.12e4	float *
o	Octal Integer:	int *
s	String of characters. This reads subsequent characters until a white space is found (white space characters are considered to be blank, newline, and tab).	char *
u	Unsigned decimal integer.	unsigned int *

The debug console has its own printf/scanf/putchar/getchar functions which are defined in the header file.

```
int DbgConsole_Printf(const char *fmt_s, ...);
int DbgConsole_Putchar(int ch);
int DbgConsole_Scanf(char *fmt_ptr, ...);
int DbgConsole_Getchar(void);
```

This utility supports selecting toolchain's printf/scanf or the MCUXpresso SDK printf/scanf.

```
#if SDK_DEBUGCONSOLE == DEBUGCONSOLE_DISABLE /* Disable debug console */
#define PRINTF
#define SCANF
#define PUTCHAR
#define GETCHAR
#elif SDK_DEBUGCONSOLE == DEBUGCONSOLE_REDIRECT_TO_SDK /* Select printf, scanf, putchar, getchar of SDK
    version. */
#define PRINTF DbgConsole_Printf
#define SCANF DbgConsole_Scanf
#define PUTCHAR DbgConsole_Putchar
#define GETCHAR DbgConsole_Getchar
#elif SDK_DEBUGCONSOLE == DEBUGCONSOLE_REDIRECT_TO_TOOLCHAIN /* Select printf, scanf, putchar, getchar of
    toolchain. */
#define PRINTF printf
#define SCANF scanf
#define PUTCHAR putchar
#define GETCHAR getchar
#endif /* SDK_DEBUGCONSOLE */
```

25.2.3 SDK_DEBUGCONSOLE and SDK_DEBUGCONSOLE_UART

There are two macros SDK_DEBUGCONSOLE and SDK_DEBUGCONSOLE_UART added to configure PRINTF and low level output peripheral.

- The macro SDK_DEBUGCONSOLE is used for frontend. Whether debug console redirect to toolchain or SDK or disabled, it decides which is the frontend of the debug console, Tool chain or SDK. The function can be set by the macro SDK_DEBUGCONSOLE.
- The macro SDK_DEBUGCONSOLE_UART is used for backend. It is used to decide whether provide low level IO implementation to toolchain printf and scanf. For example, within MCUXpresso, if the macro SDK_DEBUGCONSOLE_UART is defined, __sys_write and __sys_readc will be used when __REDLIB__ is defined; _write and _read will be used in other cases. The macro does not specifically refer to the peripheral "UART". It refers to the external peripheral similar to UART, like as USB CDC, UART, SWO, etc. So if the macro SDK_DEBUGCONSOLE_UART is not defined when tool-chain printf is calling, the semihosting will be used.

The following matrix shows the effects of SDK_DEBUGCONSOLE and SDK_DEBUGCONSOLE_UART on PRINTF and printf. The green mark is the default setting of the debug console.

SDK_DEBUGCONSOLE	SDK_DEBUGCONSOLE_UART	PRINTF	printf
DEBUGCONSOLE_-REDIRECT_TO_SDK	defined	Low level peripheral*	Low level peripheral
DEBUGCONSOLE_-REDIRECT_TO_SDK	undefined	Low level peripheral*	semihost
DEBUGCONSOLE_-REDIRECT_TO_TOOLCHAIN	defined	Low level peripheral*	Low level peripheral
DEBUGCONSOLE_-REDIRECT_TO_TOOLCHAIN	undefined	semihost	semihost
DEBUGCONSOLE_-DISABLE	defined	No output	Low level peripheral
DEBUGCONSOLE_-DISABLE	undefined	No output	semihost

* the **low level peripheral** could be USB CDC, UART, or SWO, and so on.

Typical use case

Some examples use the PUTCHAR & GETCHAR function

```
ch = GETCHAR();
PUTCHAR(ch);
```

Some examples use the PRINTF function

Statement prints the string format.

```
PRINTF("%s %s\r\n", "Hello", "world!");
```

Statement prints the hexadecimal format/

```
PRINTF("0x%02X hexadecimal number equivalents 255", 255);
```

Statement prints the decimal floating point and unsigned decimal.

```
PRINTF("Execution timer: %s\n\rTime: %u ticks %2.5f milliseconds\n\rDONE\n\r", "1 day", 86400, 86.4);
```

Some examples use the SCANF function

```
PRINTF("Enter a decimal number: ");
SCANF("%d", &i);
PRINTF("\r\nYou have entered %d.\r\n", i, i);
PRINTF("Enter a hexadecimal number: ");
SCANF("%x", &i);
PRINTF("\r\nYou have entered 0x%X (%d).\r\n", i, i);
```

Print out failure messages using MCUXpresso SDK __assert_func:

```
void __assert_func(const char *file, int line, const char *func, const char *failedExpr)
{
    PRINTF("ASSERT ERROR \" %s \": file \"%s\" Line \"%d\" function name \"%s\" \n", failedExpr, file
    , line, func);
    for (;;)
    {}
}
```

Note:

To use 'printf' and 'scanf' for GNUC Base, add file 'fsl_sbrk.c' in path: ..\{package}\devices\{subset}\utilities\fsl-_sbrk.c to your project.

Macros

- #define **DEBUGCONSOLE_REDIRECT_TO_TOOLCHAIN** 0U
Definition select redirect toolchain printf, scanf to uart or not.
- #define **DEBUGCONSOLE_REDIRECT_TO_SDK** 1U
Select SDK version printf, scanf.
- #define **DEBUGCONSOLE_DISABLE** 2U
Disable debugconsole function.
- #define **SDK_DEBUGCONSOLE** **DEBUGCONSOLE_REDIRECT_TO_SDK**
Definition to select sdk or toolchain printf, scanf.
- #define **PRINTF** **DbgConsole_Printf**
Definition to select redirect toolchain printf, scanf to uart or not.

Typedefs

- typedef void(* [printfCb](#))(char *buf, int32_t *indicator, char val, int len)
A function pointer which is used when format printf log.

Functions

- int [StrFormatPrintf](#) (const char *fmt, va_list ap, char *buf, [printfCb](#) cb)
This function outputs its parameters according to a formatted string.
- int [StrFormatScanf](#) (const char *line_ptr, char *format, va_list args_ptr)
Converts an input line of ASCII characters based upon a provided string format.

Variables

- [serial_handle_t g_serialHandle](#)
serial manager handle

Initialization

- [status_t DbgConsole_Init](#) (uint8_t instance, uint32_t baudRate, [serial_port_type_t](#) device, uint32_t clkSrcFreq)
Initializes the peripheral used for debug messages.
- [status_t DbgConsole_Deinit](#) (void)
De-initializes the peripheral used for debug messages.
- [status_t DbgConsole_EnterLowpower](#) (void)
Prepares to enter low power consumption.
- [status_t DbgConsole_ExitLowpower](#) (void)
Restores from low power consumption.
- int [DbgConsole_Printf](#) (const char *fmt_s,...)
Writes formatted output to the standard output stream.
- int [DbgConsole_Putchar](#) (int ch)
Writes a character to stdout.
- int [DbgConsole_Scanf](#) (char *formatString,...)
Reads formatted data from the standard input stream.
- int [DbgConsole_Getchar](#) (void)
Reads a character from standard input.
- int [DbgConsole_BlockingPrintf](#) (const char *formatString,...)
Writes formatted output to the standard output stream with the blocking mode.
- [status_t DbgConsole_Flush](#) (void)
Debug console flush.

Macro Definition Documentation

25.4.1 #define DEBUGCONSOLE_REDIRECT_TO_TOOLCHAIN 0U

Select toolchain printf and scanf.

25.4.2 #define DEBUGCONSOLE_REDIRECT_TO_SDK 1U**25.4.3 #define DEBUGCONSOLE_DISABLE 2U****25.4.4 #define SDK_DEBUGCONSOLE DEBUGCONSOLE_REDIRECT_TO_SDK**

The macro only support to be redefined in project setting.

25.4.5 #define PRINTF DbgConsole_Printf

if SDK_DEBUGCONSOLE defined to 0,it represents select toolchain printf, scanf. if SDK_DEBUGCONSOLE defined to 1,it represents select SDK version printf, scanf. if SDK_DEBUGCONSOLE defined to 2,it represents disable debugconsole function.

Function Documentation**25.5.1 status_t DbgConsole_Init (uint8_t *instance*, uint32_t *baudRate*, serial_port_type_t *device*, uint32_t *clkSrcFreq*)**

Call this function to enable debug log messages to be output via the specified peripheral initialized by the serial manager module. After this function has returned, stdout and stdin are connected to the selected peripheral.

Parameters

<i>instance</i>	The instance of the module.If the device is kSerialPort_Uart, the instance is UART peripheral instance. The UART hardware peripheral type is determined by UART adapter. For example, if the instance is 1, if the lpuart_adapter.c is added to the current project, the UART peripheral is LPUART1. If the uart_adapter.c is added to the current project, the UART peripheral is UART1.
<i>baudRate</i>	The desired baud rate in bits per second.
<i>device</i>	Low level device type for the debug console, can be one of the following. <ul style="list-style-type: none"> • kSerialPort_Uart, • kSerialPort_UsbCdc

<i>clkSrcFreq</i>	Frequency of peripheral source clock.
-------------------	---------------------------------------

Returns

Indicates whether initialization was successful or not.

Return values

<i>kStatus_Success</i>	Execution successfully
------------------------	------------------------

25.5.2 **status_t DbgConsole_Deinit (void)**

Call this function to disable debug log messages to be output via the specified peripheral initialized by the serial manager module.

Returns

Indicates whether de-initialization was successful or not.

25.5.3 **status_t DbgConsole_EnterLowpower (void)**

This function is used to prepare to enter low power consumption.

Returns

Indicates whether de-initialization was successful or not.

25.5.4 **status_t DbgConsole_ExitLowpower (void)**

This function is used to restore from low power consumption.

Returns

Indicates whether de-initialization was successful or not.

25.5.5 **int DbgConsole_Printf (const char * *fmt_s*, ...)**

Call this function to write a formatted output to the standard output stream.

Parameters

<i>fmt_s</i>	Format control string.
--------------	------------------------

Returns

Returns the number of characters printed or a negative value if an error occurs.

25.5.6 int DbgConsole_Putchar (int *ch*)

Call this function to write a character to stdout.

Parameters

<i>ch</i>	Character to be written.
-----------	--------------------------

Returns

Returns the character written.

25.5.7 int DbgConsole_Scanf (char * *formatString*, ...)

Call this function to read formatted data from the standard input stream.

Note

Due the limitation in the BM OSA environment (CPU is blocked in the function, other tasks will not be scheduled), the function cannot be used when the `DEBUG_CONSOLE_TRANSFER_NON_BLOCKING` is set in the BM OSA environment. And an error is returned when the function called in this case. The suggestion is that polling the non-blocking function `DbgConsole_TryGetchar` to get the input char.

Parameters

<i>formatString</i>	Format control string.
---------------------	------------------------

Returns

Returns the number of fields successfully converted and assigned.

25.5.8 int DbgConsole_Getchar (void)

Call this function to read a character from standard input.

Note

Due the limitation in the BM OSA environment (CPU is blocked in the function, other tasks will not be scheduled), the function cannot be used when the `DEBUG_CONSOLE_TRANSFER_NON_BLOCKING` is set in the BM OSA environment. And an error is returned when the function called in this case. The suggestion is that polling the non-blocking function `DbgConsole_TryGetchar` to get the input char.

Returns

Returns the character read.

25.5.9 int DbgConsole_BlockingPrintf (const char * *formatString*, ...)

Call this function to write a formatted output to the standard output stream with the blocking mode. The function will send data with blocking mode no matter the `DEBUG_CONSOLE_TRANSFER_NON_BLOCKING` set or not. The function could be used in system ISR mode with `DEBUG_CONSOLE_TRANSFER_NON_BLOCKING` set.

Parameters

<i>formatString</i>	Format control string.
---------------------	------------------------

Returns

Returns the number of characters printed or a negative value if an error occurs.

25.5.10 status_t DbgConsole_Flush (void)

Call this function to wait the tx buffer empty. If interrupt transfer is using, make sure the global IRQ is enable before call this function This function should be called when 1, before enter power down mode 2, log is required to print to terminal immediately

Returns

Indicates whether wait idle was successful or not.

25.5.11 int StrFormatPrintf (const char * *fmt*, va_list *ap*, char * *buf*, printfCb *cb*)

Note

I/O is performed by calling given function pointer using following (*func_ptr)(c);

Parameters

in	<i>fmt</i>	Format string for printf.
in	<i>ap</i>	Arguments to printf.
in	<i>buf</i>	pointer to the buffer
	<i>cb</i>	print callbck function pointer

Returns

Number of characters to be print

25.5.12 int StrFormatScanf (const char * *line_ptr*, char * *format*, va_list *args_ptr*)

Parameters

in	<i>line_ptr</i>	The input line of ASCII data.
in	<i>format</i>	Format first points to the format string.
in	<i>args_ptr</i>	The list of parameters.

Returns

Number of input items converted and assigned.

Return values

<i>IO_EOF</i>	When line_ptr is empty string "".
---------------	-----------------------------------



Chapter 26

CODEC codec Driver

Overview

The MCUXpresso SDK provides a codec abstraction driver interface to access codec register.

Modules

- [codec common Driver](#)

codec common Driver

26.2.1 Overview

The codec common driver provide codec control abstraction interface.

Data Structures

- struct [codec_config_t](#)
Initialize structure of the codec. [More...](#)
- struct [codec_capability_t](#)
codec capability [More...](#)
- struct [codec_handle_t](#)
Codec handle definition. [More...](#)

Macros

- #define [CODEC_VOLUME_MAX_VALUE](#) (0x80U)
codec maximum volume range

Enumerations

- enum {
 [kStatus_CODEC_NotSupport](#) = MAKE_STATUS(kStatusGroup_CODEC, 0U),
 [kStatus_CODEC_DeviceNotRegistered](#) = MAKE_STATUS(kStatusGroup_CODEC, 1U),
 [kStatus_CODEC_I2CBusInitialFailed](#),
 [kStatus_CODEC_I2CCommandTransferFailed](#) }
CODEC status.
- enum [codec_audio_protocol_t](#) {
 [kCODEC_BusI2S](#) = 0U,
 [kCODEC_BusLeftJustified](#) = 1U,
 [kCODEC_BusRightJustified](#) = 2U,
 [kCODEC_BusPCMA](#) = 3U,
 [kCODEC_BusPCMB](#) = 4U,
 [kCODEC_BusTDM](#) = 5U }
AUDIO format definition.
- enum {

```
kCODEC_AudioSampleRate8KHz = 8000U,
kCODEC_AudioSampleRate11025Hz = 11025U,
kCODEC_AudioSampleRate12KHz = 12000U,
kCODEC_AudioSampleRate16KHz = 16000U,
kCODEC_AudioSampleRate22050Hz = 22050U,
kCODEC_AudioSampleRate24KHz = 24000U,
kCODEC_AudioSampleRate32KHz = 32000U,
kCODEC_AudioSampleRate44100Hz = 44100U,
kCODEC_AudioSampleRate48KHz = 48000U,
kCODEC_AudioSampleRate96KHz = 96000U,
kCODEC_AudioSampleRate192KHz = 192000U,
kCODEC_AudioSampleRate384KHz = 384000U }
```

audio sample rate definition

- enum {


```
kCODEC_AudioBitWidth16bit = 16U,
kCODEC_AudioBitWidth20bit = 20U,
kCODEC_AudioBitWidth24bit = 24U,
kCODEC_AudioBitWidth32bit = 32U }
```

audio bit width

- enum `codec_module_t` {


```
kCODEC_ModuleADC = 0U,
kCODEC_ModuleDAC = 1U,
kCODEC_ModulePGA = 2U,
kCODEC_ModuleHeadphone = 3U,
kCODEC_ModuleSpeaker = 4U,
kCODEC_ModuleLinein = 5U,
kCODEC_ModuleLineout = 6U,
kCODEC_ModuleVref = 7U,
kCODEC_ModuleMicbias = 8U,
kCODEC_ModuleMic = 9U,
kCODEC_ModuleI2SIn = 10U,
kCODEC_ModuleI2SOut = 11U,
kCODEC_ModuleMxier = 12U }
```

audio codec module

- enum `codec_module_ctrl_cmd_t` { `kCODEC_ModuleSwitchI2SInInterface` = 0U }

audio codec module control cmd

- enum {


```
kCODEC_ModuleI2SInInterfacePCM = 0U,
kCODEC_ModuleI2SInInterfaceDSD = 1U }
```

audio codec module digital interface

- enum {


```
kCODEC_RecordSourceDifferentialLine = 1U,
kCODEC_RecordSourceLineInput = 2U,
kCODEC_RecordSourceDifferentialMic = 4U,
kCODEC_RecordSourceDigitalMic = 8U,
kCODEC_RecordSourceSingleEndMic = 16U }
```

- audio codec module record source value*
 - enum {
 - kCODEC_RecordChannelLeft1 = 1U,
 - kCODEC_RecordChannelLeft2 = 2U,
 - kCODEC_RecordChannelLeft3 = 4U,
 - kCODEC_RecordChannelRight1 = 1U,
 - kCODEC_RecordChannelRight2 = 2U,
 - kCODEC_RecordChannelRight3 = 4U,
 - kCODEC_RecordChannelDifferentialPositive1 = 1U,
 - kCODEC_RecordChannelDifferentialPositive2 = 2U,
 - kCODEC_RecordChannelDifferentialPositive3 = 4U,
 - kCODEC_RecordChannelDifferentialNegative1 = 8U,
 - kCODEC_RecordChannelDifferentialNegative2 = 16U,
 - kCODEC_RecordChannelDifferentialNegative3 = 32U }
 - audio codec record channel*
 - enum {
 - kCODEC_PlaySourcePGA = 1U,
 - kCODEC_PlaySourceInput = 2U,
 - kCODEC_PlaySourceDAC = 4U,
 - kCODEC_PlaySourceMixerIn = 1U,
 - kCODEC_PlaySourceMixerInLeft = 2U,
 - kCODEC_PlaySourceMixerInRight = 4U,
 - kCODEC_PlaySourceAux = 8U }
 - audio codec module play source value*
 - enum {
 - kCODEC_PlayChannelHeadphoneLeft = 1U,
 - kCODEC_PlayChannelHeadphoneRight = 2U,
 - kCODEC_PlayChannelSpeakerLeft = 4U,
 - kCODEC_PlayChannelSpeakerRight = 8U,
 - kCODEC_PlayChannelLineOutLeft = 16U,
 - kCODEC_PlayChannelLineOutRight = 32U,
 - kCODEC_PlayChannelLeft0 = 1U,
 - kCODEC_PlayChannelRight0 = 2U,
 - kCODEC_PlayChannelLeft1 = 4U,
 - kCODEC_PlayChannelRight1 = 8U,
 - kCODEC_PlayChannelLeft2 = 16U,
 - kCODEC_PlayChannelRight2 = 32U,
 - kCODEC_PlayChannelLeft3 = 64U,
 - kCODEC_PlayChannelRight3 = 128U }
 - codec play channel*
 - enum {


```

kCODEC_SupportModuleADC = 1U << 0U,
kCODEC_SupportModuleDAC = 1U << 1U,
kCODEC_SupportModulePGA = 1U << 2U,
kCODEC_SupportModuleHeadphone = 1U << 3U,
kCODEC_SupportModuleSpeaker = 1U << 4U,
kCODEC_SupportModuleLinein = 1U << 5U,
kCODEC_SupportModuleLineout = 1U << 6U,
kCODEC_SupportModuleVref = 1U << 7U,
kCODEC_SupportModuleMicbias = 1U << 8U,
kCODEC_SupportModuleMic = 1U << 9U,
kCODEC_SupportModuleI2SIn = 1U << 10U,
kCODEC_SupportModuleI2SOut = 1U << 11U,
kCODEC_SupportModuleMixer = 1U << 12U,
kCODEC_SupportModuleI2SInSwitchInterface = 1U << 13U,
kCODEC_SupportPlayChannelLeft0 = 1U << 0U,
kCODEC_SupportPlayChannelRight0 = 1U << 1U,
kCODEC_SupportPlayChannelLeft1 = 1U << 2U,
kCODEC_SupportPlayChannelRight1 = 1U << 3U,
kCODEC_SupportPlayChannelLeft2 = 1U << 4U,
kCODEC_SupportPlayChannelRight2 = 1U << 5U,
kCODEC_SupportPlayChannelLeft3 = 1U << 6U,
kCODEC_SupportPlayChannelRight3 = 1U << 7U,
kCODEC_SupportPlaySourcePGA = 1U << 8U,
kCODEC_SupportPlaySourceInput = 1U << 9U,
kCODEC_SupportPlaySourceDAC = 1U << 10U,
kCODEC_SupportPlaySourceMixerIn = 1U << 11U,
kCODEC_SupportPlaySourceMixerInLeft = 1U << 12U,
kCODEC_SupportPlaySourceMixerInRight = 1U << 13U,
kCODEC_SupportPlaySourceAux = 1U << 14U,
kCODEC_SupportRecordSourceDifferentialLine = 1U << 0U,
kCODEC_SupportRecordSourceLineInput = 1U << 1U,
kCODEC_SupportRecordSourceDifferentialMic = 1U << 2U,
kCODEC_SupportRecordSourceDigitalMic = 1U << 3U,
kCODEC_SupportRecordSourceSingleEndMic = 1U << 4U,
kCODEC_SupportRecordChannelLeft1 = 1U << 6U,
kCODEC_SupportRecordChannelLeft2 = 1U << 7U,
kCODEC_SupportRecordChannelLeft3 = 1U << 8U,
kCODEC_SupportRecordChannelRight1 = 1U << 9U,
kCODEC_SupportRecordChannelRight2 = 1U << 10U,
kCODEC_SupportRecordChannelRight3 = 1U << 11U }

```

audio codec capability

Functions

- [status_t CODEC_Init](#) (codec_handle_t *handle, [codec_config_t](#) *config)
Codec initialization.
- [status_t CODEC_Deinit](#) (codec_handle_t *handle)
Codec de-initialization.
- [status_t CODEC_SetFormat](#) (codec_handle_t *handle, uint32_t mclk, uint32_t sampleRate, uint32_t bitWidth)
set audio data format.
- [status_t CODEC_ModuleControl](#) (codec_handle_t *handle, [codec_module_ctrl_cmd_t](#) cmd, uint32_t data)
codec module control.
- [status_t CODEC_SetVolume](#) (codec_handle_t *handle, uint32_t channel, uint32_t volume)
set audio codec pl volume.
- [status_t CODEC_SetMute](#) (codec_handle_t *handle, uint32_t channel, bool mute)
set audio codec module mute.
- [status_t CODEC_SetPower](#) (codec_handle_t *handle, [codec_module_t](#) module, bool powerOn)
set audio codec power.
- [status_t CODEC_SetRecord](#) (codec_handle_t *handle, uint32_t recordSource)
codec set record source.
- [status_t CODEC_SetRecordChannel](#) (codec_handle_t *handle, uint32_t leftRecordChannel, uint32_t rightRecordChannel)
codec set record channel.
- [status_t CODEC_SetPlay](#) (codec_handle_t *handle, uint32_t playSource)
codec set play source.

Driver version

- #define [FSL_CODEC_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 2, 1))
CLOCK driver version 2.2.1.

26.2.2 Data Structure Documentation

26.2.2.1 struct codec_config_t

Data Fields

- uint32_t [codecDevType](#)
codec type
- void * [codecDevConfig](#)
Codec device specific configuration.

26.2.2.2 struct codec_capability_t

Data Fields

- uint32_t [codecModuleCapability](#)
codec module capability
- uint32_t [codecPlayCapability](#)
codec play capability
- uint32_t [codecRecordCapability](#)
codec record capability

26.2.2.3 struct _codec_handle

codec handle declaration

- Application should allocate a buffer with CODEC_HANDLE_SIZE for handle definition, such as uint8_t codecHandleBuffer[CODEC_HANDLE_SIZE]; codec_handle_t *codecHandle = codecHandleBuffer;

Data Fields

- [codec_config_t](#) * [codecConfig](#)
codec configuration function pointer
- const [codec_capability_t](#) * [codecCapability](#)
codec capability
- uint8_t [codecDevHandle](#) [HAL_CODEC_HANDLER_SIZE]
codec device handle

26.2.3 Macro Definition Documentation

26.2.3.1 #define FSL_CODEC_DRIVER_VERSION (MAKE_VERSION(2, 2, 1))

26.2.4 Enumeration Type Documentation

26.2.4.1 anonymous enum

Enumerator

kStatus_CODEC_NotSupport CODEC not support status.

kStatus_CODEC_DeviceNotRegistered CODEC device register failed status.

kStatus_CODEC_I2CBusInitialFailed CODEC i2c bus initialization failed status.

kStatus_CODEC_I2CCommandTransferFailed CODEC i2c bus command transfer failed status.

26.2.4.2 enum codec_audio_protocol_t

Enumerator

kCODEC_BusI2S I2S type.
kCODEC_BusLeftJustified Left justified mode.
kCODEC_BusRightJustified Right justified mode.
kCODEC_BusPCMA DSP/PCM A mode.
kCODEC_BusPCMB DSP/PCM B mode.
kCODEC_BusTDM TDM mode.

26.2.4.3 anonymous enum

Enumerator

kCODEC_AudioSampleRate8KHz Sample rate 8000 Hz.
kCODEC_AudioSampleRate11025Hz Sample rate 11025 Hz.
kCODEC_AudioSampleRate12KHz Sample rate 12000 Hz.
kCODEC_AudioSampleRate16KHz Sample rate 16000 Hz.
kCODEC_AudioSampleRate22050Hz Sample rate 22050 Hz.
kCODEC_AudioSampleRate24KHz Sample rate 24000 Hz.
kCODEC_AudioSampleRate32KHz Sample rate 32000 Hz.
kCODEC_AudioSampleRate44100Hz Sample rate 44100 Hz.
kCODEC_AudioSampleRate48KHz Sample rate 48000 Hz.
kCODEC_AudioSampleRate96KHz Sample rate 96000 Hz.
kCODEC_AudioSampleRate192KHz Sample rate 192000 Hz.
kCODEC_AudioSampleRate384KHz Sample rate 384000 Hz.

26.2.4.4 anonymous enum

Enumerator

kCODEC_AudioBitWidth16bit audio bit width 16
kCODEC_AudioBitWidth20bit audio bit width 20
kCODEC_AudioBitWidth24bit audio bit width 24
kCODEC_AudioBitWidth32bit audio bit width 32

26.2.4.5 enum codec_module_t

Enumerator

kCODEC_ModuleADC codec module ADC
kCODEC_ModuleDAC codec module DAC
kCODEC_ModulePGA codec module PGA
kCODEC_ModuleHeadphone codec module headphone

kCODEC_ModuleSpeaker codec module speaker
kCODEC_ModuleLinein codec module linein
kCODEC_ModuleLineout codec module lineout
kCODEC_ModuleVref codec module VREF
kCODEC_ModuleMicbias codec module MIC BIAS
kCODEC_ModuleMic codec module MIC
kCODEC_ModuleI2SIn codec module I2S in
kCODEC_ModuleI2SOut codec module I2S out
kCODEC_ModuleMxier codec module mixer

26.2.4.6 enum codec_module_ctrl_cmd_t

Enumerator

kCODEC_ModuleSwitchI2SInInterface module digital interface siwtch.

26.2.4.7 anonymous enum

Enumerator

kCODEC_ModuleI2SInInterfacePCM Pcm interface.
kCODEC_ModuleI2SInInterfaceDSD DSD interface.

26.2.4.8 anonymous enum

Enumerator

kCODEC_RecordSourceDifferentialLine record source from differential line
kCODEC_RecordSourceLineInput record source from line input
kCODEC_RecordSourceDifferentialMic record source from differential mic
kCODEC_RecordSourceDigitalMic record source from digital microphone
kCODEC_RecordSourceSingleEndMic record source from single microphone

26.2.4.9 anonymous enum

Enumerator

kCODEC_RecordChannelLeft1 left record channel 1
kCODEC_RecordChannelLeft2 left record channel 2
kCODEC_RecordChannelLeft3 left record channel 3
kCODEC_RecordChannelRight1 right record channel 1
kCODEC_RecordChannelRight2 right record channel 2
kCODEC_RecordChannelRight3 right record channel 3
kCODEC_RecordChannelDifferentialPositive1 differential positive record channel 1

<i>kCODEC_RecordChannelDifferentialPositive2</i>	differential positive record channel 2
<i>kCODEC_RecordChannelDifferentialPositive3</i>	differential positive record channel 3
<i>kCODEC_RecordChannelDifferentialNegative1</i>	differential negative record channel 1
<i>kCODEC_RecordChannelDifferentialNegative2</i>	differential negative record channel 2
<i>kCODEC_RecordChannelDifferentialNegative3</i>	differential negative record channel 3

26.2.4.10 anonymous enum

Enumerator

<i>kCODEC_PlaySourcePGA</i>	play source PGA, bypass ADC
<i>kCODEC_PlaySourceInput</i>	play source Input3
<i>kCODEC_PlaySourceDAC</i>	play source DAC
<i>kCODEC_PlaySourceMixerIn</i>	play source mixer in
<i>kCODEC_PlaySourceMixerInLeft</i>	play source mixer in left
<i>kCODEC_PlaySourceMixerInRight</i>	play source mixer in right
<i>kCODEC_PlaySourceAux</i>	play source mixer in AUx

26.2.4.11 anonymous enum

Enumerator

<i>kCODEC_PlayChannelHeadphoneLeft</i>	play channel headphone left
<i>kCODEC_PlayChannelHeadphoneRight</i>	play channel headphone right
<i>kCODEC_PlayChannelSpeakerLeft</i>	play channel speaker left
<i>kCODEC_PlayChannelSpeakerRight</i>	play channel speaker right
<i>kCODEC_PlayChannelLineOutLeft</i>	play channel lineout left
<i>kCODEC_PlayChannelLineOutRight</i>	play channel lineout right
<i>kCODEC_PlayChannelLeft0</i>	play channel left0
<i>kCODEC_PlayChannelRight0</i>	play channel right0
<i>kCODEC_PlayChannelLeft1</i>	play channel left1
<i>kCODEC_PlayChannelRight1</i>	play channel right1
<i>kCODEC_PlayChannelLeft2</i>	play channel left2
<i>kCODEC_PlayChannelRight2</i>	play channel right2
<i>kCODEC_PlayChannelLeft3</i>	play channel left3
<i>kCODEC_PlayChannelRight3</i>	play channel right3

26.2.4.12 anonymous enum

Enumerator

<i>kCODEC_SupportModuleADC</i>	codec capability of module ADC
<i>kCODEC_SupportModuleDAC</i>	codec capability of module DAC
<i>kCODEC_SupportModulePGA</i>	codec capability of module PGA
<i>kCODEC_SupportModuleHeadphone</i>	codec capability of module headphone

kCODEC_SupportModuleSpeaker codec capability of module speaker
kCODEC_SupportModuleLinein codec capability of module linein
kCODEC_SupportModuleLineout codec capability of module lineout
kCODEC_SupportModuleVref codec capability of module vref
kCODEC_SupportModuleMicbias codec capability of module mic bias
kCODEC_SupportModuleMic codec capability of module mic bias
kCODEC_SupportModuleI2SIn codec capability of module I2S in
kCODEC_SupportModuleI2SOut codec capability of module I2S out
kCODEC_SupportModuleMixer codec capability of module mixer
kCODEC_SupportModuleI2SInSwitchInterface codec capability of module I2S in switch interface

kCODEC_SupportPlayChannelLeft0 codec capability of play channel left 0
kCODEC_SupportPlayChannelRight0 codec capability of play channel right 0
kCODEC_SupportPlayChannelLeft1 codec capability of play channel left 1
kCODEC_SupportPlayChannelRight1 codec capability of play channel right 1
kCODEC_SupportPlayChannelLeft2 codec capability of play channel left 2
kCODEC_SupportPlayChannelRight2 codec capability of play channel right 2
kCODEC_SupportPlayChannelLeft3 codec capability of play channel left 3
kCODEC_SupportPlayChannelRight3 codec capability of play channel right 3
kCODEC_SupportPlaySourcePGA codec capability of set playback source PGA
kCODEC_SupportPlaySourceInput codec capability of set playback source INPUT
kCODEC_SupportPlaySourceDAC codec capability of set playback source DAC
kCODEC_SupportPlaySourceMixerIn codec capability of set play source Mixer in
kCODEC_SupportPlaySourceMixerInLeft codec capability of set play source Mixer in left
kCODEC_SupportPlaySourceMixerInRight codec capability of set play source Mixer in right
kCODEC_SupportPlaySourceAux codec capability of set play source aux
kCODEC_SupportRecordSourceDifferentialLine codec capability of record source differential line

kCODEC_SupportRecordSourceLineInput codec capability of record source line input
kCODEC_SupportRecordSourceDifferentialMic codec capability of record source differential mic

kCODEC_SupportRecordSourceDigitalMic codec capability of record digital mic
kCODEC_SupportRecordSourceSingleEndMic codec capability of single end mic
kCODEC_SupportRecordChannelLeft1 left record channel 1
kCODEC_SupportRecordChannelLeft2 left record channel 2
kCODEC_SupportRecordChannelLeft3 left record channel 3
kCODEC_SupportRecordChannelRight1 right record channel 1
kCODEC_SupportRecordChannelRight2 right record channel 2
kCODEC_SupportRecordChannelRight3 right record channel 3

26.2.5 Function Documentation

26.2.5.1 `status_t CODEC_Init (codec_handle_t * handle, codec_config_t * config)`

Parameters

<i>handle</i>	codec handle.
<i>config</i>	codec configurations.

Returns

kStatus_Success is success, else de-initial failed.

26.2.5.2 status_t CODEC_Deinit (codec_handle_t * *handle*)

Parameters

<i>handle</i>	codec handle.
---------------	---------------

Returns

kStatus_Success is success, else de-initial failed.

26.2.5.3 status_t CODEC_SetFormat (codec_handle_t * *handle*, uint32_t *mclk*, uint32_t *sampleRate*, uint32_t *bitWidth*)

Parameters

<i>handle</i>	codec handle.
<i>mclk</i>	master clock frequency in HZ.
<i>sampleRate</i>	sample rate in HZ.
<i>bitWidth</i>	bit width.

Returns

kStatus_Success is success, else configure failed.

26.2.5.4 status_t CODEC_ModuleControl (codec_handle_t * *handle*, codec_module_ctrl_cmd_t *cmd*, uint32_t *data*)

This function is used for codec module control, support switch digital interface cmd, can be expand to support codec module specific feature.

Parameters

<i>handle</i>	codec handle.
<i>cmd</i>	module control cmd, reference _codec_module_ctrl_cmd.
<i>data</i>	value to write, when cmd is kCODEC_ModuleRecordSourceChannel, the data should be a value combine of channel and source, please reference macro CODEC_MODULE_RECORD_SOURCE_CHANNEL(source, LP, LN, RP, RN), reference codec specific driver for detail configurations.

Returns

kStatus_Success is success, else configure failed.

26.2.5.5 status_t CODEC_SetVolume (codec_handle_t * *handle*, uint32_t *channel*, uint32_t *volume*)

Parameters

<i>handle</i>	codec handle.
<i>channel</i>	audio codec play channel, can be a value or combine value of _codec_play_channel.
<i>volume</i>	volume value, support 0 ~ 100, 0 is mute, 100 is the maximum volume value.

Returns

kStatus_Success is success, else configure failed.

26.2.5.6 status_t CODEC_SetMute (codec_handle_t * *handle*, uint32_t *channel*, bool *mute*)

Parameters

<i>handle</i>	codec handle.
<i>channel</i>	audio codec play channel, can be a value or combine value of _codec_play_channel.
<i>mute</i>	true is mute, false is unmute.

Returns

kStatus_Success is success, else configure failed.

26.2.5.7 `status_t CODEC_SetPower (codec_handle_t * handle, codec_module_t module,
bool powerOn)`

Parameters

<i>handle</i>	codec handle.
<i>module</i>	audio codec module.
<i>powerOn</i>	true is power on, false is power down.

Returns

kStatus_Success is success, else configure failed.

26.2.5.8 status_t CODEC_SetRecord (codec_handle_t * *handle*, uint32_t *recordSource*)

Parameters

<i>handle</i>	codec handle.
<i>recordSource</i>	audio codec record source, can be a value or combine value of _codec_record_source.

Returns

kStatus_Success is success, else configure failed.

26.2.5.9 status_t CODEC_SetRecordChannel (codec_handle_t * *handle*, uint32_t *leftRecordChannel*, uint32_t *rightRecordChannel*)

Parameters

<i>handle</i>	codec handle.
<i>leftRecord-Channel</i>	audio codec record channel, reference _codec_record_channel, can be a value combine of member in _codec_record_channel.
<i>rightRecord-Channel</i>	audio codec record channel, reference _codec_record_channel, can be a value combine of member in _codec_record_channel.

Returns

kStatus_Success is success, else configure failed.

26.2.5.10 status_t CODEC_SetPlay (codec_handle_t * *handle*, uint32_t *playSource*)

Parameters

<i>handle</i>	codec handle.
<i>playSource</i>	audio codec play source, can be a value or combine value of _codec_play_source.

Returns

kStatus_Success is success, else configure failed.



Chapter 27

Serial_Manager

This chapter describes the programming interface of the serial manager component.

The serial manager component provides a series of APIs to operate different serial port types. The port types it supports are UART, USB CDC and SWO.

Chapter 28

Ecspi_cmsis_driver

This section describes the programming interface of the ecspi Cortex Microcontroller Software Interface Standard (CMSIS) driver. And this driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method please refer to <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

Function groups

28.1.1 ECSPi CMSIS GetVersion Operation

This function group will return the ECSPi CMSIS Driver version to user.

28.1.2 ECSPi CMSIS GetCapabilities Operation

This function group will return the capabilities of this driver.

28.1.3 ECSPi CMSIS Initialize and Uninitialize Operation

This function will initialize and uninitialize the instance in master mode or slave mode. And this API must be called before you configure an instance or after you Deinit an instance. The right steps to start an instance is that you must initialize the instance which been selected firstly, then you can power on the instance. After these all have been done, you can configure the instance by using control operation. If you want to Uninitialize the instance, you must power off the instance first.

28.1.4 ECSPi CMSIS Transfer Operation

This function group controls the transfer, master send/receive data, and slave send/receive data.

28.1.5 ECSPi CMSIS Status Operation

This function group gets the ecspi transfer status.

28.1.6 ECSPI CMSIS Control Operation

This function can select instance as master mode or slave mode, set baudrate for master mode transfer, get current baudrate of master mode transfer, set transfer data bits and set other control command.

Typical use case

28.2.1 Master Operation

```
/* Variables */
uint8_t masterRxData[TRANSFER_SIZE] = {0U};
uint8_t masterTxData[TRANSFER_SIZE] = {0U};

/*ECSPI master init*/
Driver_SPI0.Initialize(ECSPI_MasterSignalEvent_t);
Driver_SPI0.PowerControl(ARM_POWER_FULL);
Driver_SPI0.Control(ARM_SPI_MODE_MASTER, TRANSFER_BAUDRATE);

/* Start master transfer */
Driver_SPI0.Transfer(masterTxData, masterRxData, TRANSFER_SIZE);

/* Master power off */
Driver_SPI0.PowerControl(ARM_POWER_OFF);

/* Master uninitialized */
Driver_SPI0.Uninitialize();
```

28.2.2 Slave Operation

```
/* Variables */
uint8_t slaveRxData[TRANSFER_SIZE] = {0U};
uint8_t slaveTxData[TRANSFER_SIZE] = {0U};

/*DSPI slave init*/
Driver_SPI2.Initialize(ECSPI_SlaveSignalEvent_t);
Driver_SPI2.PowerControl(ARM_POWER_FULL);
Driver_SPI2.Control(ARM_SPI_MODE_SLAVE, false);

/* Start slave transfer */
Driver_SPI2.Transfer(slaveTxData, slaveRxData, TRANSFER_SIZE);

/* slave power off */
Driver_SPI2.PowerControl(ARM_POWER_OFF);

/* slave uninitialized */
Driver_SPI2.Uninitialize();
```

Chapter 29

I2c_cmsis_driver

This section describes the programming interface of the I2C Cortex Microcontroller Software Interface Standard (CMSIS) driver. This driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method see <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

The I2C CMSIS driver includes transactional APIs.

Transactional APIs are transaction target high-level APIs. The transactional APIs can be used to enable the peripheral quickly and also in the application if the code size and performance of transactional APIs satisfy the requirements. If the code size and performance are critical requirements, see the transactional API implementation and write custom code accessing the hardware registers.

I2C CMSIS Driver

29.1.1 Master Operation in interrupt transactional method

```
void I2C_MasterSignalEvent_t(uint32_t event)
{
    if (event == ARM_I2C_EVENT_TRANSFER_DONE)
    {
        g_MasterCompletionFlag = true;
    }
}
/*Init I2C1*/
Driver_I2C1.Initialize(I2C_MasterSignalEvent_t);

Driver_I2C1.PowerControl(ARM_POWER_FULL);

/*config transmit speed*/
Driver_I2C1.Control(ARM_I2C_BUS_SPEED, ARM_I2C_BUS_SPEED_STANDARD);

/*start transmit*/
Driver_I2C1.MasterTransmit(I2C_MASTER_SLAVE_ADDR, g_master_buff, I2C_DATA_LENGTH, false);

/* Wait for transfer completed. */
while (!g_MasterCompletionFlag)
{
}
g_MasterCompletionFlag = false;
```

29.1.2 Slave Operation in interrupt transactional method

```
void I2C_SlaveSignalEvent_t(uint32_t event)
{
    /* Transfer done */
    if (event == ARM_I2C_EVENT_TRANSFER_DONE)
```



```
    {  
        g_SlaveCompletionFlag = true;  
    }  
}  
  
/*Init I2C1*/  
Driver_I2C1.Initialize(I2C_SlaveSignalEvent_t);  
  
Driver_I2C1.PowerControl(ARM_POWER_FULL);  
  
/*config slave addr*/  
Driver_I2C1.Control(ARM_I2C_OWN_ADDRESS, I2C_MASTER_SLAVE_ADDR);  
  
/*start transfer*/  
Driver_I2C1.SlaveReceive(g_slave_buff, I2C_DATA_LENGTH);  
  
/* Wait for transfer completed. */  
while (!g_SlaveCompletionFlag)  
{  
}  
g_SlaveCompletionFlag = false;
```

Chapter 30

Uart_cmsis_driver

This section describes the programming interface of the UART Cortex Microcontroller Software Interface Standard (CMSIS) driver. And this driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method please refer to <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

The UART driver includes transactional APIs.

Transactional APIs can be used to enable the peripheral quickly and in the application if the code size and performance of transactional APIs can satisfy the requirements. If the code size and performance are critical requirements please write custom code.

Function groups

30.1.1 UART CMSIS GetVersion Operation

This function group will return the UART CMSIS Driver version to user.

30.1.2 UART CMSIS GetCapabilities Operation

This function group will return the capabilities of this driver.

30.1.3 UART CMSIS Initialize and Uninitialize Operation

This function will initialize and uninitialize the uart instance . And this API must be called before you configure an uart instance or after you Deinit an uart instance. The right steps to start an instance is that you must initialize the instance which been selected firstly, then you can power on the instance. After these all have been done, you can configure the instance by using control operation. If you want to Uninitialize the instance, you must power off the instance first.

30.1.4 UART CMSIS Transfer Operation

This function group controls the transfer, send/receive data.

30.1.5 UART CMSIS Status Operation

This function group gets the UART transfer status.

30.1.6 UART CMSIS Control Operation

This function can configure an instance ,set baudrate for uart, get current baudrate ,set transfer data bits and other control command.

Chapter 31

Ecspi_freertos_driver

Overview

Driver version

- #define [FSL_ECSPI_FREERTOS_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 2, 0))
ECSPI FreeRTOS driver version.

ECSPI RTOS Operation

- [status_t ECSPI_RTOS_Init](#) (ecspi_rtos_handle_t *handle, ECSPI_Type *base, const [ecspi_master_config_t](#) *masterConfig, uint32_t srcClock_Hz)
Initializes ECSPI.
- [status_t ECSPI_RTOS_Deinit](#) (ecspi_rtos_handle_t *handle)
Deinitializes the ECSPI.
- [status_t ECSPI_RTOS_Transfer](#) (ecspi_rtos_handle_t *handle, [ecspi_transfer_t](#) *transfer)
Performs ECSPI transfer.

Macro Definition Documentation

31.2.1 #define FSL_ECSPI_FREERTOS_DRIVER_VERSION (MAKE_VERSION(2, 2, 0))

Function Documentation

31.3.1 status_t ECSPI_RTOS_Init (ecspi_rtos_handle_t * *handle*, ECSPI_Type * *base*, const ecspi_master_config_t * *masterConfig*, uint32_t *srcClock_Hz*)

This function initializes the ECSPI module and related RTOS context.

Parameters

<i>handle</i>	The RTOS ECSPI handle, the pointer to an allocated space for RTOS context.
<i>base</i>	The pointer base address of the ECSPI instance to initialize.
<i>masterConfig</i>	Configuration structure to set-up ECSPI in master mode.

<i>srcClock_Hz</i>	Frequency of input clock of the ECSPI module.
--------------------	---

Returns

status of the operation.

31.3.2 **status_t** ECSPI_RTOS_Deinit (**ecspi_rtos_handle_t** * *handle*)

This function deinitializes the ECSPI module and related RTOS context.

Parameters

<i>handle</i>	The RTOS ECSPI handle.
---------------	------------------------

31.3.3 **status_t** ECSPI_RTOS_Transfer (**ecspi_rtos_handle_t** * *handle*, **ecspi_transfer_t** * *transfer*)

This function performs an ECSPI transfer according to data given in the transfer structure.

Parameters

<i>handle</i>	The RTOS ECSPI handle.
<i>transfer</i>	Structure specifying the transfer parameters.

Returns

status of the operation.

Chapter 32

Ecspi_sdma

Overview

Data Structures

- struct `ecsapi_sdma_handle_t`
ECSPI SDMA transfer handle, users should not touch the content of the handle. [More...](#)

Typedefs

- typedef void(* `ecsapi_sdma_callback_t`)(ECSPI_Type *base, `ecsapi_sdma_handle_t` *handle, `status_t` status, void *userData)
ECSPI SDMA callback called at the end of transfer.

Driver version

- #define `FSL_ECSPI_FREERTOS_DRIVER_VERSION` (`MAKE_VERSION`(2, 2, 0))
ECSPI FreeRTOS driver version.

DMA Transactional

- void `ECSPI_MasterTransferCreateHandleSDMA` (ECSPI_Type *base, `ecsapi_sdma_handle_t` *handle, `ecsapi_sdma_callback_t` callback, void *userData, `sdma_handle_t` *txHandle, `sdma_handle_t` *rxHandle, uint32_t eventSourceTx, uint32_t eventSourceRx, uint32_t TxChannel, uint32_t RxChannel)
Initialize the ECSPI master SDMA handle.
- void `ECSPI_SlaveTransferCreateHandleSDMA` (ECSPI_Type *base, `ecsapi_sdma_handle_t` *handle, `ecsapi_sdma_callback_t` callback, void *userData, `sdma_handle_t` *txHandle, `sdma_handle_t` *rxHandle, uint32_t eventSourceTx, uint32_t eventSourceRx, uint32_t TxChannel, uint32_t RxChannel)
Initialize the ECSPI Slave SDMA handle.
- `status_t` `ECSPI_MasterTransferSDMA` (ECSPI_Type *base, `ecsapi_sdma_handle_t` *handle, `ecsapi_transfer_t` *xfer)
Perform a non-blocking ECSPI master transfer using SDMA.
- `status_t` `ECSPI_SlaveTransferSDMA` (ECSPI_Type *base, `ecsapi_sdma_handle_t` *handle, `ecsapi_transfer_t` *xfer)
Perform a non-blocking ECSPI slave transfer using SDMA.
- void `ECSPI_MasterTransferAbortSDMA` (ECSPI_Type *base, `ecsapi_sdma_handle_t` *handle)
Abort a ECSPI master transfer using SDMA.
- void `ECSPI_SlaveTransferAbortSDMA` (ECSPI_Type *base, `ecsapi_sdma_handle_t` *handle)
Abort a ECSPI slave transfer using SDMA.

Data Structure Documentation

32.2.1 struct _ecspi_sdma_handle

Data Fields

- bool [txInProgress](#)
Send transfer finished.
- bool [rxInProgress](#)
Receive transfer finished.
- [sdma_handle_t](#) * [txSdmaHandle](#)
DMA handler for ECSPI send.
- [sdma_handle_t](#) * [rxSdmaHandle](#)
DMA handler for ECSPI receive.
- [ecspi_sdma_callback_t](#) [callback](#)
Callback for ECSPI SDMA transfer.
- void * [userData](#)
User Data for ECSPI SDMA callback.
- uint32_t [state](#)
Internal state of ECSPI SDMA transfer.
- uint32_t [ChannelTx](#)
Channel for send handle.
- uint32_t [ChannelRx](#)
Channel for receive handler.

Macro Definition Documentation

32.3.1 #define FSL_ECSPi_FREERTOS_DRIVER_VERSION (MAKE_VERSION(2, 2, 0))

Typedef Documentation

32.4.1 typedef void(* ecspi_sdma_callback_t)(ECSPi_Type *base, ecspi_sdma_handle_t *handle, status_t status, void *userData)

Function Documentation

32.5.1 void ECSPi_MasterTransferCreateHandleSDMA (ECSPi_Type * base, ecspi_sdma_handle_t * handle, ecspi_sdma_callback_t callback, void * userData, sdma_handle_t * txHandle, sdma_handle_t * rxHandle, uint32_t eventSourceTx, uint32_t eventSourceRx, uint32_t TxChannel, uint32_t RxChannel)

This function initializes the ECSPi master SDMA handle which can be used for other SPI master transactional APIs. Usually, for a specified ECSPi instance, user need only call this API once to get the initialized handle.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI handle pointer.
<i>callback</i>	User callback function called at the end of a transfer.
<i>userData</i>	User data for callback.
<i>txHandle</i>	SDMA handle pointer for ECSPI Tx, the handle shall be static allocated by users.
<i>rxHandle</i>	SDMA handle pointer for ECSPI Rx, the handle shall be static allocated by users.
<i>eventSourceTx</i>	event source for ECSPI send, which can be found in SDMA mapping.
<i>eventSourceRx</i>	event source for ECSPI receive, which can be found in SDMA mapping.
<i>TxChannel</i>	SDMA channel for ECSPI send.
<i>RxChannel</i>	SDMA channel for ECSPI receive.

**32.5.2 void ECSPI_SlaveTransferCreateHandleSDMA (ECSPI_Type * *base*,
ecsapi_sdma_handle_t * *handle*, ecsapi_sdma_callback_t *callback*, void *
userData, sdma_handle_t * *txHandle*, sdma_handle_t * *rxHandle*, uint32_t
eventSourceTx, uint32_t *eventSourceRx*, uint32_t *TxChannel*, uint32_t
RxChannel)**

This function initializes the ECSPI Slave SDMA handle which can be used for other SPI Slave transactional APIs. Usually, for a specified ECSPI instance, user need only call this API once to get the initialized handle.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI handle pointer.
<i>callback</i>	User callback function called at the end of a transfer.
<i>userData</i>	User data for callback.
<i>txHandle</i>	SDMA handle pointer for ECSPI Tx, the handle shall be static allocated by users.
<i>rxHandle</i>	SDMA handle pointer for ECSPI Rx, the handle shall be static allocated by users.
<i>eventSourceTx</i>	event source for ECSPI send, which can be found in SDMA mapping.

<i>eventSourceRx</i>	event source for ECSPI receive, which can be found in SDMA mapping.
<i>TxChannel</i>	SDMA channel for ECSPI send.
<i>RxChannel</i>	SDMA channel for ECSPI receive.

32.5.3 **status_t ECSPI_MasterTransferSDMA (ECSPI_Type * *base*, ecspi_sdma_handle_t * *handle*, ecspi_transfer_t * *xfer*)**

Note

This interface returned immediately after transfer initiates.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI SDMA handle pointer.
<i>xfer</i>	Pointer to sdma transfer structure.

Return values

<i>kStatus_Success</i>	Successfully start a transfer.
<i>kStatus_InvalidArgument</i>	Input argument is invalid.
<i>kStatus_ECSPi_Busy</i>	EECSPI is not idle, is running another transfer.

32.5.4 **status_t ECSPI_SlaveTransferSDMA (ECSPI_Type * *base*, ecspi_sdma_handle_t * *handle*, ecspi_transfer_t * *xfer*)**

Note

This interface returned immediately after transfer initiates.

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI SDMA handle pointer.

<i>xfer</i>	Pointer to sdma transfer structure.
-------------	-------------------------------------

Return values

<i>kStatus_Success</i>	Successfully start a transfer.
<i>kStatus_InvalidArgument</i>	Input argument is invalid.
<i>kStatus_ECSPI_Busy</i>	EECSPI is not idle, is running another transfer.

32.5.5 void ECSPI_MasterTransferAbortSDMA (ECSPI_Type * *base*, ecspi_sdma_handle_t * *handle*)

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI SDMA handle pointer.

32.5.6 void ECSPI_SlaveTransferAbortSDMA (ECSPI_Type * *base*, ecspi_sdma_handle_t * *handle*)

Parameters

<i>base</i>	ECSPI peripheral base address.
<i>handle</i>	ECSPI SDMA handle pointer.

Chapter 33

I2C FreeRTOS Driver

Overview

Driver version

- #define `FSL_I2C_FREERTOS_DRIVER_VERSION` (`MAKE_VERSION`(2, 0, 7))
I2C FreeRTOS driver version.

I2C RTOS Operation

- `status_t I2C_RTOS_Init` (`i2c_rtos_handle_t` *handle, `I2C_Type` *base, const `i2c_master_config_t` *masterConfig, `uint32_t` srcClock_Hz)
Initializes I2C.
- `status_t I2C_RTOS_Deinit` (`i2c_rtos_handle_t` *handle)
Deinitializes the I2C.
- `status_t I2C_RTOS_Transfer` (`i2c_rtos_handle_t` *handle, `i2c_master_transfer_t` *transfer)
Performs the I2C transfer.

Macro Definition Documentation

33.2.1 #define `FSL_I2C_FREERTOS_DRIVER_VERSION` (`MAKE_VERSION`(2, 0, 7))

Function Documentation

33.3.1 `status_t I2C_RTOS_Init` (`i2c_rtos_handle_t` * *handle*, `I2C_Type` * *base*, const `i2c_master_config_t` * *masterConfig*, `uint32_t` *srcClock_Hz*)

This function initializes the I2C module and the related RTOS context.

Parameters

<i>handle</i>	The RTOS I2C handle, the pointer to an allocated space for RTOS context.
<i>base</i>	The pointer base address of the I2C instance to initialize.
<i>masterConfig</i>	The configuration structure to set-up I2C in master mode.

<i>srcClock_Hz</i>	The frequency of an input clock of the I2C module.
--------------------	--

Returns

status of the operation.

33.3.2 **status_t I2C_RTOS_Deinit (i2c_rtos_handle_t * *handle*)**

This function deinitializes the I2C module and the related RTOS context.

Parameters

<i>handle</i>	The RTOS I2C handle.
---------------	----------------------

33.3.3 **status_t I2C_RTOS_Transfer (i2c_rtos_handle_t * *handle*, i2c_master_transfer_t * *transfer*)**

This function performs the I2C transfer according to the data given in the transfer structure.

Parameters

<i>handle</i>	The RTOS I2C handle.
<i>transfer</i>	A structure specifying the transfer parameters.

Returns

status of the operation.

Chapter 34

Uart_sdma

Overview

Data Structures

- struct `uart_sdma_handle_t`
UART sDMA handle. [More...](#)

Typedefs

- typedef void(* `uart_sdma_transfer_callback_t`)(UART_Type *base, uart_sdma_handle_t *handle, `status_t` status, void *userData)
UART transfer callback function.

Driver version

- #define `FSL_UART_SDMA_DRIVER_VERSION` (`MAKE_VERSION`(2, 1, 1))
UART SDMA driver version 2.1.1.

sDMA transactional

- void `UART_TransferCreateHandleSDMA` (UART_Type *base, uart_sdma_handle_t *handle, `uart_sdma_transfer_callback_t` callback, void *userData, `sdma_handle_t` *txSdmaHandle, `sdma_handle_t` *rxSdmaHandle, uint32_t eventSourceTx, uint32_t eventSourceRx)
Initializes the UART handle which is used in transactional functions.
- `status_t` `UART_SendSDMA` (UART_Type *base, uart_sdma_handle_t *handle, `uart_transfer_t` *xfer)
Sends data using sDMA.
- `status_t` `UART_ReceiveSDMA` (UART_Type *base, uart_sdma_handle_t *handle, `uart_transfer_t` *xfer)
Receives data using sDMA.
- void `UART_TransferAbortSendSDMA` (UART_Type *base, uart_sdma_handle_t *handle)
Aborts the sent data using sDMA.
- void `UART_TransferAbortReceiveSDMA` (UART_Type *base, uart_sdma_handle_t *handle)
Aborts the receive data using sDMA.

Data Structure Documentation

34.2.1 struct _uart_sdma_handle

Data Fields

- `uart_sdma_transfer_callback_t` callback

- *Callback function.*
void * [userData](#)
- *UART callback function parameter.*
size_t [rxDataSizeAll](#)
- *Size of the data to receive.*
size_t [txDataSizeAll](#)
- *Size of the data to send out.*
[sdma_handle_t](#) * [txSdmaHandle](#)
- *The sDMA TX channel used.*
[sdma_handle_t](#) * [rxSdmaHandle](#)
- *The sDMA RX channel used.*
volatile uint8_t [txState](#)
- *TX transfer state.*
volatile uint8_t [rxState](#)
- *RX transfer state.*

34.2.1.0.0.33 Field Documentation

34.2.1.0.0.33.1 [uart_sdma_transfer_callback_t](#) [uart_sdma_handle_t::callback](#)

34.2.1.0.0.33.2 void* [uart_sdma_handle_t::userData](#)

34.2.1.0.0.33.3 size_t [uart_sdma_handle_t::rxDataSizeAll](#)

34.2.1.0.0.33.4 size_t [uart_sdma_handle_t::txDataSizeAll](#)

34.2.1.0.0.33.5 [sdma_handle_t](#)* [uart_sdma_handle_t::txSdmaHandle](#)

34.2.1.0.0.33.6 [sdma_handle_t](#)* [uart_sdma_handle_t::rxSdmaHandle](#)

34.2.1.0.0.33.7 volatile uint8_t [uart_sdma_handle_t::txState](#)

Macro Definition Documentation

34.3.1 #define [FSL_UART_SDMA_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 1, 1))

Typedef Documentation

34.4.1 typedef void(* [uart_sdma_transfer_callback_t](#))([UART_Type](#) *base,
[uart_sdma_handle_t](#) *handle, [status_t](#) status, void *userData)

Function Documentation

34.5.1 void [UART_TransferCreateHandleSDMA](#) ([UART_Type](#) * base,
[uart_sdma_handle_t](#) * handle, [uart_sdma_transfer_callback_t](#) callback,
void * userData, [sdma_handle_t](#) * txSdmaHandle, [sdma_handle_t](#) *
rxSdmaHandle, uint32_t eventSourceTx, uint32_t eventSourceRx)

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	Pointer to the <code>uart_sdma_handle_t</code> structure.
<i>callback</i>	UART callback, NULL means no callback.
<i>userData</i>	User callback function data.
<i>rxSdmaHandle</i>	User-requested DMA handle for RX DMA transfer.
<i>txSdmaHandle</i>	User-requested DMA handle for TX DMA transfer.
<i>eventSourceTx</i>	Eventsource for TX DMA transfer.
<i>eventSourceRx</i>	Eventsource for RX DMA transfer.

34.5.2 `status_t UART_SendSDMA (UART_Type * base, uart_sdma_handle_t * handle, uart_transfer_t * xfer)`

This function sends data using sDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	UART handle pointer.
<i>xfer</i>	UART sDMA transfer structure. See uart_transfer_t .

Return values

<i>kStatus_Success</i>	if succeeded; otherwise failed.
<i>kStatus_UART_TxBusy</i>	Previous transfer ongoing.
<i>kStatus_InvalidArgument</i>	Invalid argument.

34.5.3 `status_t UART_ReceiveSDMA (UART_Type * base, uart_sdma_handle_t * handle, uart_transfer_t * xfer)`

This function receives data using sDMA. This is a non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	Pointer to the <code>uart_sdma_handle_t</code> structure.
<i>xfer</i>	UART sDMA transfer structure. See uart_transfer_t .

Return values

<i>kStatus_Success</i>	if succeeded; otherwise failed.
<i>kStatus_UART_RxBusy</i>	Previous transfer ongoing.
<i>kStatus_InvalidArgument</i>	Invalid argument.

34.5.4 void UART_TransferAbortSendSDMA (UART_Type * *base*, uart_sdma_handle_t * *handle*)

This function aborts sent data using sDMA.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	Pointer to the <code>uart_sdma_handle_t</code> structure.

34.5.5 void UART_TransferAbortReceiveSDMA (UART_Type * *base*, uart_sdma_handle_t * *handle*)

This function aborts receive data using sDMA.

Parameters

<i>base</i>	UART peripheral base address.
<i>handle</i>	Pointer to the <code>uart_sdma_handle_t</code> structure.

Chapter 35

Pdm_sdma

Overview

Data Structures

- struct [pdm_sdma_handle_t](#)
PDM DMA transfer handle, users should not touch the content of the handle. [More...](#)

Typedefs

- typedef void(* [pdm_sdma_callback_t](#))(PDM_Type *base, pdm_sdma_handle_t *handle, [status_t](#) status, void *userData)
PDM eDMA transfer callback function for finish and error.

Driver version

- #define [FSL_PDM_SDMA_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 5, 0))
Version 2.5.0.

eDMA Transactional

- void [PDM_TransferCreateHandleSDMA](#) (PDM_Type *base, pdm_sdma_handle_t *handle, [pdm_sdma_callback_t](#) callback, void *userData, [sdma_handle_t](#) *dmaHandle, uint32_t eventSource)
Initializes the PDM eDMA handle.
- [status_t](#) [PDM_TransferReceiveSDMA](#) (PDM_Type *base, pdm_sdma_handle_t *handle, [pdm_transfer_t](#) *xfer)
Performs a non-blocking PDM receive using eDMA.
- void [PDM_TransferAbortReceiveSDMA](#) (PDM_Type *base, pdm_sdma_handle_t *handle)
Aborts a PDM receive using eDMA.
- void [PDM_SetChannelConfigSDMA](#) (PDM_Type *base, pdm_sdma_handle_t *handle, uint32_t channel, const [pdm_channel_config_t](#) *config)
PDM channel configurations.

Data Structure Documentation

35.2.1 struct _pdm_sdma_handle

Data Fields

- [sdma_handle_t](#) * dmaHandle
DMA handler for PDM send.
- uint8_t nbytes
eDMA minor byte transfer count initially configured.

- uint8_t [fifoWidth](#)
fifo width
- uint8_t [endChannel](#)
The last enabled channel.
- uint8_t [channelNums](#)
total channel numbers
- uint8_t [count](#)
The transfer data count in a DMA request.
- uint32_t [state](#)
Internal state for PDM eDMA transfer.
- uint32_t [eventSource](#)
PDM event source number.
- [pdm_sdma_callback_t](#) [callback](#)
Callback for users while transfer finish or error occurs.
- void * [userData](#)
User callback parameter.
- [sdma_buffer_descriptor_t](#) [bdPool](#) [PDM_XFER_QUEUE_SIZE]
BD pool for SDMA transfer.
- [pdm_transfer_t](#) [pdmQueue](#) [PDM_XFER_QUEUE_SIZE]
Transfer queue storing queued transfer.
- size_t [transferSize](#) [PDM_XFER_QUEUE_SIZE]
Data bytes need to transfer.
- volatile uint8_t [queueUser](#)
Index for user to queue transfer.
- volatile uint8_t [queueDriver](#)
Index for driver to get the transfer data and size.

35.2.1.0.0.34 Field Documentation

35.2.1.0.0.34.1 uint8_t [pdm_sdma_handle_t::nbytes](#)

35.2.1.0.0.34.2 [sdma_buffer_descriptor_t](#) [pdm_sdma_handle_t::bdPool](#)[PDM_XFER_QUEUE_SIZE]

35.2.1.0.0.34.3 [pdm_transfer_t](#) [pdm_sdma_handle_t::pdmQueue](#)[PDM_XFER_QUEUE_SIZE]

35.2.1.0.0.34.4 volatile uint8_t [pdm_sdma_handle_t::queueUser](#)

Function Documentation

**35.3.1 void PDM_TransferCreateHandleSDMA (PDM_Type * *base*,
[pdm_sdma_handle_t](#) * *handle*, [pdm_sdma_callback_t](#) *callback*, void *
userData, [sdma_handle_t](#) * *dmaHandle*, uint32_t *eventSource*)**

This function initializes the PDM DMA handle, which can be used for other PDM master transactional APIs. Usually, for a specified PDM instance, call this API once to get the initialized handle.

Parameters

<i>base</i>	PDM base pointer.
<i>handle</i>	PDM eDMA handle pointer.
<i>callback</i>	Pointer to user callback function.
<i>userData</i>	User parameter passed to the callback function.
<i>dmaHandle</i>	eDMA handle pointer, this handle shall be static allocated by users.
<i>eventSource</i>	PDM event source number.

35.3.2 **status_t PDM_TransferReceiveSDMA (PDM_Type * *base*, pdm_sdma_handle_t * *handle*, pdm_transfer_t * *xfer*)**

Note

This interface returns immediately after the transfer initiates. Call the PDM_GetReceiveRemaining-Bytes to poll the transfer status and check whether the PDM transfer is finished.

Parameters

<i>base</i>	PDM base pointer
<i>handle</i>	PDM eDMA handle pointer.
<i>xfer</i>	Pointer to DMA transfer structure.

Return values

<i>kStatus_Success</i>	Start a PDM eDMA receive successfully.
<i>kStatus_InvalidArgument</i>	The input argument is invalid.
<i>kStatus_RxBusy</i>	PDM is busy receiving data.

35.3.3 **void PDM_TransferAbortReceiveSDMA (PDM_Type * *base*, pdm_sdma_handle_t * *handle*)**

Parameters

<i>base</i>	PDM base pointer
<i>handle</i>	PDM eDMA handle pointer.

35.3.4 void PDM_SetChannelConfigSDMA (PDM_Type * *base*, pdm_sdma_handle_t * *handle*, uint32_t *channel*, const pdm_channel_config_t * *config*)

Parameters

<i>base</i>	PDM base pointer.
<i>handle</i>	PDM eDMA handle pointer.
<i>channel</i>	channel number.
<i>config</i>	channel configurations.

Chapter 36

Sai_sdma

Overview

Data Structures

- struct [sai_sdma_handle_t](#)
SAI DMA transfer handle, users should not touch the content of the handle. [More...](#)

Typedefs

- typedef void(* [sai_sdma_callback_t](#))(I2S_Type *base, sai_sdma_handle_t *handle, [status_t](#) status, void *userData)
SAI SDMA transfer callback function for finish and error.

Driver version

- #define [FSL_SAI_SDMA_DRIVER_VERSION](#) ([MAKE_VERSION](#)(2, 3, 1))
Version 2.3.1.

SDMA Transactional

- void [SAI_TransferTxCreateHandleSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_sdma_callback_t](#) callback, void *userData, [sdma_handle_t](#) *dmaHandle, uint32_t eventSource)
Initializes the SAI SDMA handle.
- void [SAI_TransferRxCreateHandleSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_sdma_callback_t](#) callback, void *userData, [sdma_handle_t](#) *dmaHandle, uint32_t eventSource)
Initializes the SAI Rx SDMA handle.
- void [SAI_TransferTxSetFormatSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_transfer_format_t](#) *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)
Configures the SAI Tx audio format.
- void [SAI_TransferRxSetFormatSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_transfer_format_t](#) *format, uint32_t mclkSourceClockHz, uint32_t bclkSourceClockHz)
Configures the SAI Rx audio format.
- [status_t](#) [SAI_TransferSendSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_transfer_t](#) *xfer)
Performs a non-blocking SAI transfer using DMA.
- [status_t](#) [SAI_TransferReceiveSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_transfer_t](#) *xfer)
Performs a non-blocking SAI receive using SDMA.
- void [SAI_TransferAbortSendSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle)
Aborts a SAI transfer using SDMA.
- void [SAI_TransferAbortReceiveSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle)
Aborts a SAI receive using SDMA.

- void [SAI_TransferRxSetConfigSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_transceiver_t](#) *saiConfig)
brief Configures the SAI RX.
- void [SAI_TransferTxSetConfigSDMA](#) (I2S_Type *base, sai_sdma_handle_t *handle, [sai_transceiver_t](#) *saiConfig)
brief Configures the SAI Tx.

Data Structure Documentation

36.2.1 struct _sai_sdma_handle

Data Fields

- [sdma_handle_t](#) * dmaHandle
DMA handler for SAI send.
- uint8_t [bytesPerFrame](#)
Bytes in a frame.
- uint8_t [channel](#)
start data channel
- uint8_t [channelNums](#)
total transfer channel numbers, used for multifo
- uint8_t [channelMask](#)
enabled channel mask value, refernece _sai_channel_mask
- uint8_t [fifoOffset](#)
fifo address offset between multifo
- uint8_t [count](#)
The transfer data count in a DMA request.
- uint32_t [state](#)
Internal state for SAI SDMA transfer.
- uint32_t [eventSource](#)
SAI event source number.
- [sai_sdma_callback_t](#) callback
Callback for users while transfer finish or error occurs.
- void * [userData](#)
User callback parameter.
- [sdma_buffer_descriptor_t](#) bdPool [[SAI_XFER_QUEUE_SIZE](#)]
BD pool for SDMA transfer.
- [sai_transfer_t](#) saiQueue [[SAI_XFER_QUEUE_SIZE](#)]
Transfer queue storing queued transfer.
- size_t [transferSize](#) [[SAI_XFER_QUEUE_SIZE](#)]
Data bytes need to transfer.
- volatile uint8_t [queueUser](#)
Index for user to queue transfer.
- volatile uint8_t [queueDriver](#)
Index for driver to get the transfer data and size.

36.2.1.0.0.35 Field Documentation

36.2.1.0.0.35.1 `sdma_buffer_descriptor_t sai_sdma_handle_t::bdPool[SAI_XFER_QUEUE_SIZE]`

36.2.1.0.0.35.2 `sai_transfer_t sai_sdma_handle_t::saiQueue[SAI_XFER_QUEUE_SIZE]`

36.2.1.0.0.35.3 `volatile uint8_t sai_sdma_handle_t::queueUser`

Function Documentation

36.3.1 `void SAI_TransferTxCreateHandleSDMA (I2S_Type * base,
sai_sdma_handle_t * handle, sai_sdma_callback_t callback, void *
userData, sdma_handle_t * dmaHandle, uint32_t eventSource)`

This function initializes the SAI master DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI SDMA handle pointer.
<i>base</i>	SAI peripheral base address.
<i>callback</i>	Pointer to user callback function.
<i>userData</i>	User parameter passed to the callback function.
<i>dmaHandle</i>	SDMA handle pointer, this handle shall be static allocated by users.
<i>eventSource</i>	SAI event source number.

36.3.2 `void SAI_TransferRxCreateHandleSDMA (I2S_Type * base,
sai_sdma_handle_t * handle, sai_sdma_callback_t callback, void *
userData, sdma_handle_t * dmaHandle, uint32_t eventSource)`

This function initializes the SAI slave DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

<i>base</i>	SAI base pointer.
-------------	-------------------

<i>handle</i>	SAI SDMA handle pointer.
<i>base</i>	SAI peripheral base address.
<i>callback</i>	Pointer to user callback function.
<i>userData</i>	User parameter passed to the callback function.
<i>dmaHandle</i>	SDMA handle pointer, this handle shall be static allocated by users.
<i>eventSource</i>	SAI event source number.

36.3.3 void SAI_TransferTxSetFormatSDMA (I2S_Type * *base*, sai_sdma_handle_t * *handle*, sai_transfer_format_t * *format*, uint32_t *mclkSourceClockHz*, uint32_t *bclkSourceClockHz*)

The audio format can be changed at run-time. This function configures the sample rate and audio data format to be transferred. This function also sets the SDMA parameter according to formatting requirements.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI SDMA handle pointer.
<i>format</i>	Pointer to SAI audio data format structure.
<i>mclkSource-ClockHz</i>	SAI master clock source frequency in Hz.
<i>bclkSource-ClockHz</i>	SAI bit clock source frequency in Hz. If bit clock source is master clock, this value should equals to masterClockHz in format.

Return values

<i>kStatus_Success</i>	Audio format set successfully.
<i>kStatus_InvalidArgument</i>	The input argument is invalid.

36.3.4 void SAI_TransferRxSetFormatSDMA (I2S_Type * *base*, sai_sdma_handle_t * *handle*, sai_transfer_format_t * *format*, uint32_t *mclkSourceClockHz*, uint32_t *bclkSourceClockHz*)

The audio format can be changed at run-time. This function configures the sample rate and audio data format to be transferred. This function also sets the SDMA parameter according to formatting requirements.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI SDMA handle pointer.
<i>format</i>	Pointer to SAI audio data format structure.
<i>mclkSource-ClockHz</i>	SAI master clock source frequency in Hz.
<i>bclkSource-ClockHz</i>	SAI bit clock source frequency in Hz. If a bit clock source is the master clock, this value should equal to masterClockHz in format.

Return values

<i>kStatus_Success</i>	Audio format set successfully.
<i>kStatus_InvalidArgument</i>	The input argument is invalid.

36.3.5 **status_t SAI_TransferSendSDMA (I2S_Type * *base*, sai_sdma_handle_t * *handle*, sai_transfer_t * *xfer*)**

Note

This interface returns immediately after the transfer initiates. Call SAI_GetTransferStatus to poll the transfer status and check whether the SAI transfer is finished.

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI SDMA handle pointer.
<i>xfer</i>	Pointer to the DMA transfer structure.

Return values

<i>kStatus_Success</i>	Start a SAI SDMA send successfully.
<i>kStatus_InvalidArgument</i>	The input argument is invalid.
<i>kStatus_TxBusy</i>	SAI is busy sending data.

36.3.6 **status_t SAI_TransferReceiveSDMA (I2S_Type * *base*, sai_sdma_handle_t * *handle*, sai_transfer_t * *xfer*)**

Note

This interface returns immediately after the transfer initiates. Call the SAI_GetReceiveRemainingBytes to poll the transfer status and check whether the SAI transfer is finished.

Parameters

<i>base</i>	SAI base pointer
<i>handle</i>	SAI SDMA handle pointer.
<i>xfer</i>	Pointer to DMA transfer structure.

Return values

<i>kStatus_Success</i>	Start a SAI SDMA receive successfully.
<i>kStatus_InvalidArgument</i>	The input argument is invalid.
<i>kStatus_RxBusy</i>	SAI is busy receiving data.

36.3.7 void SAI_TransferAbortSendSDMA (I2S_Type * *base*, sai_sdma_handle_t * *handle*)

Parameters

<i>base</i>	SAI base pointer.
<i>handle</i>	SAI SDMA handle pointer.

36.3.8 void SAI_TransferAbortReceiveSDMA (I2S_Type * *base*, sai_sdma_handle_t * *handle*)

Parameters

<i>base</i>	SAI base pointer
<i>handle</i>	SAI SDMA handle pointer.

36.3.9 void SAI_TransferRxSetConfigSDMA (I2S_Type * *base*, sai_sdma_handle_t * *handle*, sai_transceiver_t * *saiConfig*)

param base SAI base pointer. param handle SAI SDMA handle pointer. param saiConig sai configurations.

**36.3.10 void SAI_TransferTxSetConfigSDMA (I2S_Type * *base*,
sai_sdma_handle_t * *handle*, sai_transceiver_t * *saiConfig*)**

param base SAI base pointer. param handle SAI SDMA handle pointer. param saiConig sai configurations.

Chapter 37

Ak4497

Overview

Data Structures

- struct [ak4497_dsd_config_t](#)
Initialize DSD mode structure of AK4497. [More...](#)
- struct [ak4497_pcm_config_t](#)
Initialize PCM mode structure of AK4497. [More...](#)
- struct [ak4497_config_t](#)
Initialize structure of AK4497. [More...](#)
- struct [ak4497_handle_t](#)
ak4497 codec handler [More...](#)

Macros

- #define [AK4497_I2C_HANDLER_SIZE](#) CODEC_I2C_MASTER_HANDLER_SIZE
ak4497 handle size
- #define [AK4497_CONTROL1](#) (0x00U)
define the registers offset of AK4497.
- #define [AK4497_CONTROL1_RSTN_MASK](#) (0x1U)
define BIT info of AK4497.
- #define [AK4497_I2C_ADDR](#) (0x11U)
AK4497 I2C address.
- #define [AK4497_I2C_BITRATE](#) (1000000U)
AK4497 i2c baudrate.

Enumerations

- enum [ak4497_mode_t](#)
The AK4497 playback mode.
- enum [ak4497_data_channel_mode_t](#) {
 [kAK4497_NormalMode](#) = 0x0,
 [kAK4497_ExchangeMode](#) = 0x1 }
The Data selection of L-channel and R-channel for DSD mode, defined by SELLR bit.
- enum [ak4497_dsd_input_path_t](#) {
 [kAK4497_Path0](#) = 0x0,
 [kAK4497_Path1](#) = 0x1 }
The data path select for DSD mode.
- enum [ak4497_dsd_mclk_t](#) {
 [kAK4497_mclk512fs](#) = 0x0,
 [kAK4497_mclk768fs](#) = 0x1 }
The MCLK select for DSD mode, defined by DCKS bit.

- enum `ak4497_dsd_dclk_t` {
`kAK4497_dclk64fs` = 0x0,
`kAK4497_dclk128fs` = 0x1,
`kAK4497_dclk256fs` = 0x2,
`kAK4497_dclk512fs` = 0x3 }
The DCLK select for DSD mode, defined by DSDSEL[1:0].
- enum `ak4497_dsd_playback_path_t` {
`kAK4497_NormalPath` = 0x0,
`kAK4497_VolumeBypass` = 0x1 }
DSD playback path.
- enum `ak4497_dsd_data_mute_t`
DSD mute flag.
- enum `ak4497_dsd_dclk_polarity_t` {
`kAK4497_FallingEdge` = 0x0,
`kAK4497_RisingEdge` = 0x1 }
DSD bclk polarity.
- enum `ak4497_pcm_samplefreqmode_t` {
`kAK4497_ManualSettingMode` = 0x0,
`kAK4497_AutoSettingMode` = 0x1,
`kAK4497_FsAutoDetectMode` = 0x2 }
The sampling frequency mode for PCM and EXDF mode, defined by CR01[AFSD], CR00[ACKS].
- enum `ak4497_pcm_samplefreqselect_t` {
`kAK4497_NormalSpeed` = 0x0,
`kAK4497_DoubleSpeed` = 0x1,
`kAK4497_QuadSpeed` = 0x2,
`kAK4497_OctSpeed` = 0x4,
`kAK4497_HexSpeed` = 0x5 }
The sampling speed select, defined by DFS[2:0].
- enum `ak4497_pcm_sdata_format_t` {
`kAK4497_16BitLSB` = 0x0,
`kAK4497_20BitLSB` = 0x1,
`kAK4497_24BitMSB` = 0x2,
`kAK4497_16_24BitI2S` = 0x3,
`kAK4497_24BitLSB` = 0x4,
`kAK4497_32BitLSB` = 0x5,
`kAK4497_32BitMSB` = 0x6,
`kAK4497_32BitI2S` = 0x7 }
The audio data interface modes, defined by DIF[2:0].
- enum `ak4497_pcm_tdm_mode_t` {
`kAK4497_Normal` = 0x0,
`kAK4497_TDM128` = 0x1,
`kAK4497_TDM256` = 0x2,
`kAK4497_TDM512` = 0x3 }
The TDM mode select, defined by TDM[1:0].
- enum `ak4497_pcm_sds_select_t`
The audio data slot selection, defined by SDS[2:0].
- enum `ak4497_module_ctrl_cmd_t` { `kAK4497_ModuleSwitchI2SInInterface` = 0U }

- *audio codec module control cmd*
- enum {
 kAK4497_ModuleI2SInInterfacePCM = 0U,
 kAK4497_ModuleI2SInInterfaceDSD = 1U }
 audio codec module digital interface

Functions

- void AK4497_DefaultConfig (ak4497_config_t *config)
 Default initializes AK4497.
- status_t AK4497_Init (ak4497_handle_t *handle, ak4497_config_t *config)
 Initializes AK4497.
- status_t AK4497_SetEncoding (ak4497_handle_t *handle, uint8_t format)
 Set the codec PCM mode or DSD mode based on the format info.
- status_t AK4497_ConfigDataFormat (ak4497_handle_t *handle, uint32_t mclk, uint32_t sample-Rate, uint32_t bitWidth)
 Configure the data format of audio data.
- status_t AK4497_SetVolume (ak4497_handle_t *handle, uint8_t value)
 Set the volume of different modules in AK4497.
- status_t AK4497_GetVolume (ak4497_handle_t *handle, uint8_t *value)
 Get the volume of different modules in AK4497.
- status_t AK4497_ModuleControl (ak4497_handle_t *handle, ak4497_module_ctrl_cmd_t cmd, uint32_t data)
 AK4497 codec module control.
- status_t AK4497_Deinit (ak4497_handle_t *handle)
 Deinit the AK4497 codec.
- status_t AK4497_WriteReg (ak4497_handle_t *handle, uint8_t reg, uint8_t val)
 Write register to AK4497 using I2C.
- status_t AK4497_ReadReg (ak4497_handle_t *handle, uint8_t reg, uint8_t *val)
 Read register from AK4497 using I2C.
- status_t AK4497_ModifyReg (ak4497_handle_t *handle, uint8_t reg, uint8_t mask, uint8_t val)
 Modify some bits in the register using I2C.

Driver version

- #define FSL_AK4497_DRIVER_VERSION (MAKE_VERSION(2, 1, 2))
 CLOCK driver version 2.1.2.

Data Structure Documentation

37.2.1 struct ak4497_dsd_config_t

37.2.2 struct ak4497_pcm_config_t

37.2.3 struct ak4497_config_t

Data Fields

- uint8_t [slaveAddress](#)
code device slave address
- [codec_i2c_config_t](#) [i2cConfig](#)
i2c bus configuration

37.2.4 struct ak4497_handle_t

Data Fields

- [ak4497_config_t](#) * [config](#)
ak4497 config pointer
- uint8_t [i2cHandle](#) [[AK4497_I2C_HANDLER_SIZE](#)]
i2c handle

Macro Definition Documentation

37.3.1 #define AK4497_CONTROL1 (0x00U)

37.3.2 #define AK4497_CONTROL1_RSTN_MASK (0x1U)

37.3.3 #define AK4497_I2C_ADDR (0x11U)

Enumeration Type Documentation

37.4.1 enum ak4497_data_channel_mode_t

Enumerator

- kAK4497_NormalMode* L-channel output L-channel data, R-channel output R-channel data.
kAK4497_ExchangeMode L-channel output R-channel data, R-channel output L-channel data.

37.4.2 enum ak4497_dsd_input_path_t

Enumerator

kAK4497_Path0 Pin 16,17,19 used.

kAK4497_Path1 Pin 3,4,5 used.

37.4.3 enum ak4497_dsd_mclk_t

Enumerator

kAK4497_mclk512fs MCLK equals 512fs.

kAK4497_mclk768fs MCLK equals 768fs.

37.4.4 enum ak4497_dsd_dclk_t

Enumerator

kAK4497_dclk64fs DCLK equals 64fs.

kAK4497_dclk128fs DCLK equals 128fs.

kAK4497_dclk256fs DCLK equals 256fs.

kAK4497_dclk512fs DCLK equals 512fs.

37.4.5 enum ak4497_dsd_playback_path_t

Enumerator

kAK4497_NormalPath Normal path mode.

kAK4497_VolumeBypass Volume Bypass mode.

37.4.6 enum ak4497_dsd_dclk_polarity_t

Enumerator

kAK4497_FallingEdge DSD data is output from DCLK falling edge.

kAK4497_RisingEdge DSD data is output from DCLK rising edge.

37.4.7 enum ak4497_pcm_samplefreqmode_t

Enumerator

kAK4497_ManualSettingMode Manual setting mode.

kAK4497_AutoSettingMode Auto setting mode.

kAK4497_FsAutoDetectMode Auto detect mode.

37.4.8 enum ak4497_pcm_samplefreqselect_t

Enumerator

kAK4497_NormalSpeed 8kHz ~ 54kHz

kAK4497_DoubleSpeed 54kHz ~ 108kHz

kAK4497_QuadSpeed 120kHz ~ 216kHz, note that value 3 also stands for Quad Speed Mode

kAK4497_OctSpeed 384kHz, note that value 6 also stands for Oct Speed Mode

kAK4497_HexSpeed 768kHz, note that value 7 also stands for Hex Speed Mode

37.4.9 enum ak4497_pcm_sdata_format_t

Enumerator

kAK4497_16BitLSB 16-bit LSB justified

kAK4497_20BitLSB 20-bit LSB justified

kAK4497_24BitMSB 24-bit MSB justified

kAK4497_16_24BitI2S 16 and 24-bit I2S compatible

kAK4497_24BitLSB 24-bit LSB justified

kAK4497_32BitLSB 32-bit LSB justified

kAK4497_32BitMSB 32-bit MSB justified

kAK4497_32BitI2S 32-bit I2S compatible

37.4.10 enum ak4497_pcm_tdm_mode_t

Enumerator

kAK4497_Normal Normal mode.

kAK4497_TDM128 BCLK is fixed to 128fs.

kAK4497_TDM256 BCLK is fixed to 256fs.

kAK4497_TDM512 BCLK is fixed to 512fs.

37.4.11 enum ak4497_module_ctrl_cmd_t

Enumerator

kAK4497_ModuleSwitchI2SInInterface module digital interface siwtch.

37.4.12 anonymous enum

Enumerator

kAK4497_ModuleI2SInInterfacePCM Pcm interface.

kAK4497_ModuleI2SInInterfaceDSD DSD interface.

Function Documentation

37.5.1 void AK4497_DefaultConfig (ak4497_config_t * *config*)

Parameters

<i>config</i>	AK4497 configure structure.
---------------	-----------------------------

37.5.2 status_t AK4497_Init (ak4497_handle_t * *handle*, ak4497_config_t * *config*)

Parameters

<i>handle</i>	AK4497 handle structure.
<i>config</i>	AK4497 configure structure.

37.5.3 status_t AK4497_SetEncoding (ak4497_handle_t * *handle*, uint8_t *format*)

This function would configure the codec playback mode.

Parameters

<i>handle</i>	AK4497 handle structure pointer.
---------------	----------------------------------

<i>format</i>	info.
---------------	-------

37.5.4 **status_t AK4497_ConfigDataFormat (ak4497_handle_t * *handle*, uint32_t *mclk*, uint32_t *sampleRate*, uint32_t *bitWidth*)**

This function would configure the registers about the sample rate, bit depths.

Parameters

<i>handle</i>	AK4497 handle structure pointer.
<i>mclk</i>	system clock of the codec which can be generated by MCLK or PLL output.
<i>sampleRate</i>	Sample rate of audio file running in AK4497.
<i>bitWidth</i>	Bit depth of audio file.

37.5.5 **status_t AK4497_SetVolume (ak4497_handle_t * *handle*, uint8_t *value*)**

This function would set the volume of AK4497 modules. Users need to appoint the module. The function assume that left channel and right channel has the same volume.

Parameters

<i>handle</i>	AK4497 handle structure.
<i>value</i>	Volume value need to be set.

37.5.6 **status_t AK4497_GetVolume (ak4497_handle_t * *handle*, uint8_t * *value*)**

This function gets the volume of AK4497. Users need to appoint the module. The function assume that left channel and right channel has the same volume.

Parameters

<i>handle</i>	AK4497 handle structure.
<i>value</i>	volume value

Returns

value value of the module.

37.5.7 `status_t AK4497_ModuleControl (ak4497_handle_t * handle,
ak4497_module_ctrl_cmd_t cmd, uint32_t data)`

Parameters

<i>handle</i>	AK4497 handle structure pointer.
<i>cmd</i>	module control command, support cmd kAK4497_ModuleSwitchDigitalInterface.
<i>data</i>	control data, support data kCODEC_ModuleDigitalInterfacePCM/kCODEC_-ModuleDigitalInterfaceDSD.

37.5.8 status_t AK4497_Deinit (ak4497_handle_t * *handle*)

This function close all modules in AK4497 to save power.

Parameters

<i>handle</i>	AK4497 handle structure pointer.
---------------	----------------------------------

37.5.9 status_t AK4497_WriteReg (ak4497_handle_t * *handle*, uint8_t *reg*, uint8_t *val*)

Parameters

<i>handle</i>	AK4497 handle structure.
<i>reg</i>	The register address in AK4497.
<i>val</i>	Value needs to write into the register.

37.5.10 status_t AK4497_ReadReg (ak4497_handle_t * *handle*, uint8_t *reg*, uint8_t * *val*)

Parameters

<i>handle</i>	AK4497 handle structure.
<i>reg</i>	The register address in AK4497.
<i>val</i>	Value written to.

37.5.11 status_t AK4497_ModifyReg (ak4497_handle_t * *handle*, uint8_t *reg*, uint8_t *mask*, uint8_t *val*)

Parameters

<i>handle</i>	AK4497 handle structure.
<i>reg</i>	The register address in AK4497.
<i>mask</i>	The mask code for the bits want to write. The bit you want to write should be 0.
<i>val</i>	Value needs to write into the register.

Chapter 38

Ak4497_adapter

Overview

Macros

- `#define HAL_CODEC_HANDLER_SIZE (AK4497_I2C_HANDLER_SIZE + 4)`
codec handler size

Enumerations

- `enum _codec_type {`
 `kCODEC_AK4497,`
 `kCODEC_WM8524 }`
codec type

Functions

- `status_t HAL_CODEC_Init` (void *handle, void *config)
Codec initialization.
- `status_t HAL_CODEC_Deinit` (void *handle)
Codec de-initialization.
- `status_t HAL_CODEC_SetFormat` (void *handle, uint32_t mclk, uint32_t sampleRate, uint32_t bit-Width)
set audio data format.
- `status_t HAL_CODEC_SetVolume` (void *handle, uint32_t playChannel, uint32_t volume)
set audio codec module volume.
- `status_t HAL_CODEC_SetMute` (void *handle, uint32_t playChannel, bool isMute)
set audio codec module mute.
- `status_t HAL_CODEC_SetPower` (void *handle, uint32_t module, bool powerOn)
set audio codec module power.
- `status_t HAL_CODEC_SetRecord` (void *handle, uint32_t recordSource)
codec set record source.
- `status_t HAL_CODEC_SetRecordChannel` (void *handle, uint32_t leftRecordChannel, uint32_t rightRecordChannel)
codec set record channel.
- `status_t HAL_CODEC_SetPlay` (void *handle, uint32_t playSource)
codec set play source.
- `status_t HAL_CODEC_ModuleControl` (void *handle, uint32_t cmd, uint32_t data)
codec module control.

Enumeration Type Documentation

38.2.1 enum _codec_type

Enumerator

kCODEC_AK4497 AK4497.
kCODEC_WM8524 wm8524

Function Documentation

38.3.1 status_t HAL_CODEC_Init (void * *handle*, void * *config*)

Parameters

<i>handle</i>	codec handle.
<i>config</i>	codec configuration.

Returns

kStatus_Success is success, else initial failed.

38.3.2 status_t HAL_CODEC_Deinit (void * *handle*)

Parameters

<i>handle</i>	codec handle.
---------------	---------------

Returns

kStatus_Success is success, else de-initial failed.

38.3.3 status_t HAL_CODEC_SetFormat (void * *handle*, uint32_t *mclk*, uint32_t *sampleRate*, uint32_t *bitWidth*)

Parameters

<i>handle</i>	codec handle.
<i>mclk</i>	master clock frequency in HZ.
<i>sampleRate</i>	sample rate in HZ.
<i>bitWidth</i>	bit width.

Returns

kStatus_Success is success, else configure failed.

38.3.4 status_t HAL_CODEC_SetVolume (void * *handle*, uint32_t *playChannel*, uint32_t *volume*)

Parameters

<i>handle</i>	codec handle.
<i>playChannel</i>	audio codec play channel, can be a value or combine value of _codec_play_channel.
<i>volume</i>	volume value, support 0 ~ 100, 0 is mute, 100 is the maximum volume value.

Returns

kStatus_Success is success, else configure failed.

38.3.5 status_t HAL_CODEC_SetMute (void * *handle*, uint32_t *playChannel*, bool *isMute*)

Parameters

<i>handle</i>	codec handle.
<i>playChannel</i>	audio codec play channel, can be a value or combine value of _codec_play_channel.
<i>isMute</i>	true is mute, false is unmute.

Returns

kStatus_Success is success, else configure failed.

38.3.6 status_t HAL_CODEC_SetPower (void * *handle*, uint32_t *module*, bool *powerOn*)

Parameters

<i>handle</i>	codec handle.
<i>module</i>	audio codec module.
<i>powerOn</i>	true is power on, false is power down.

Returns

kStatus_Success is success, else configure failed.

38.3.7 status_t HAL_CODEC_SetRecord (void * *handle*, uint32_t *recordSource*)

Parameters

<i>handle</i>	codec handle.
<i>recordSource</i>	audio codec record source, can be a value or combine value of _codec_record_source.

Returns

kStatus_Success is success, else configure failed.

38.3.8 status_t HAL_CODEC_SetRecordChannel (void * *handle*, uint32_t *leftRecordChannel*, uint32_t *rightRecordChannel*)

Parameters

<i>handle</i>	codec handle.
<i>leftRecord-Channel</i>	audio codec record channel, reference _codec_record_channel, can be a value or combine value of member in _codec_record_channel.
<i>rightRecord-Channel</i>	audio codec record channel, reference _codec_record_channel, can be a value combine of member in _codec_record_channel.

Returns

kStatus_Success is success, else configure failed.

38.3.9 status_t HAL_CODEC_SetPlay (void * *handle*, uint32_t *playSource*)

Parameters

<i>handle</i>	codec handle.
<i>playSource</i>	audio codec play source, can be a value or combine value of <code>_codec_play_source</code> .

Returns

`kStatus_Success` is success, else configure failed.

38.3.10 `status_t HAL_CODEC_ModuleControl (void * handle, uint32_t cmd, uint32_t data)`

This function is used for codec module control, support switch digital interface cmd, can be expand to support codec module specific feature

Parameters

<i>handle</i>	codec handle.
<i>cmd</i>	module control cmd, reference <code>_codec_module_ctrl_cmd</code> .
<i>data</i>	value to write, when cmd is <code>kCODEC_ModuleRecordSourceChannel</code> , the data should be a value combine of channel and source, please reference macro <code>CODEC_MODULE_RECORD_SOURCE_CHANNEL(source, LP, LN, RP, RN)</code> , reference codec specific driver for detail configurations.

Returns

`kStatus_Success` is success, else configure failed.

Chapter 39

Wm8524_adapter

Overview

Macros

- #define [HAL_CODEC_HANDLER_SIZE](#) (4)
codec handler size

Enumerations

- enum [_codec_type](#) {
 [kCODEC_AK4497](#),
 [kCODEC_WM8524](#) }
codec type

Functions

- [status_t HAL_CODEC_Init](#) (void *handle, void *config)
Codec initialization.
- [status_t HAL_CODEC_Deinit](#) (void *handle)
Codec de-initialization.
- [status_t HAL_CODEC_SetFormat](#) (void *handle, uint32_t mclk, uint32_t sampleRate, uint32_t bit-Width)
set audio data format.
- [status_t HAL_CODEC_SetVolume](#) (void *handle, uint32_t playChannel, uint32_t volume)
set audio codec module volume.
- [status_t HAL_CODEC_SetMute](#) (void *handle, uint32_t playChannel, bool isMute)
set audio codec module mute.
- [status_t HAL_CODEC_SetPower](#) (void *handle, uint32_t module, bool powerOn)
set audio codec module power.
- [status_t HAL_CODEC_SetRecord](#) (void *handle, uint32_t recordSource)
codec set record source.
- [status_t HAL_CODEC_SetRecordChannel](#) (void *handle, uint32_t leftRecordChannel, uint32_t rightRecordChannel)
codec set record channel.
- [status_t HAL_CODEC_SetPlay](#) (void *handle, uint32_t playSource)
codec set play source.
- [status_t HAL_CODEC_ModuleControl](#) (void *handle, uint32_t cmd, uint32_t data)
codec module control.

Enumeration Type Documentation

39.2.1 enum _codec_type

Enumerator

kCODEC_AK4497 AK4497.
kCODEC_WM8524 wm8524

Function Documentation

39.3.1 status_t HAL_CODEC_Init (void * *handle*, void * *config*)

Parameters

<i>handle</i>	codec handle.
<i>config</i>	codec configuration.

Returns

kStatus_Success is success, else initial failed.

39.3.2 status_t HAL_CODEC_Deinit (void * *handle*)

Parameters

<i>handle</i>	codec handle.
---------------	---------------

Returns

kStatus_Success is success, else de-initial failed.

39.3.3 status_t HAL_CODEC_SetFormat (void * *handle*, uint32_t *mclk*, uint32_t *sampleRate*, uint32_t *bitWidth*)

Parameters

<i>handle</i>	codec handle.
<i>mclk</i>	master clock frequency in HZ.
<i>sampleRate</i>	sample rate in HZ.
<i>bitWidth</i>	bit width.

Returns

kStatus_Success is success, else configure failed.

39.3.4 **status_t HAL_CODEC_SetVolume (void * *handle*, uint32_t *playChannel*, uint32_t *volume*)**

Parameters

<i>handle</i>	codec handle.
<i>playChannel</i>	audio codec play channel, can be a value or combine value of _codec_play_channel.
<i>volume</i>	volume value, support 0 ~ 100, 0 is mute, 100 is the maximum volume value.

Returns

kStatus_Success is success, else configure failed.

39.3.5 **status_t HAL_CODEC_SetMute (void * *handle*, uint32_t *playChannel*, bool *isMute*)**

Parameters

<i>handle</i>	codec handle.
<i>playChannel</i>	audio codec play channel, can be a value or combine value of _codec_play_channel.
<i>isMute</i>	true is mute, false is unmute.

Returns

kStatus_Success is success, else configure failed.

39.3.6 **status_t HAL_CODEC_SetPower (void * *handle*, uint32_t *module*, bool *powerOn*)**

Parameters

<i>handle</i>	codec handle.
<i>module</i>	audio codec module.
<i>powerOn</i>	true is power on, false is power down.

Returns

kStatus_Success is success, else configure failed.

39.3.7 status_t HAL_CODEC_SetRecord (void * *handle*, uint32_t *recordSource*)

Parameters

<i>handle</i>	codec handle.
<i>recordSource</i>	audio codec record source, can be a value or combine value of _codec_record_source.

Returns

kStatus_Success is success, else configure failed.

39.3.8 status_t HAL_CODEC_SetRecordChannel (void * *handle*, uint32_t *leftRecordChannel*, uint32_t *rightRecordChannel*)

Parameters

<i>handle</i>	codec handle.
<i>leftRecord-Channel</i>	audio codec record channel, reference _codec_record_channel, can be a value or combine value of member in _codec_record_channel.
<i>rightRecord-Channel</i>	audio codec record channel, reference _codec_record_channel, can be a value combine of member in _codec_record_channel.

Returns

kStatus_Success is success, else configure failed.

39.3.9 status_t HAL_CODEC_SetPlay (void * *handle*, uint32_t *playSource*)

Parameters

<i>handle</i>	codec handle.
<i>playSource</i>	audio codec play source, can be a value or combine value of <code>_codec_play_source</code> .

Returns

`kStatus_Success` is success, else configure failed.

39.3.10 `status_t HAL_CODEC_ModuleControl (void * handle, uint32_t cmd, uint32_t data)`

This function is used for codec module control, support switch digital interface cmd, can be expand to support codec module specific feature

Parameters

<i>handle</i>	codec handle.
<i>cmd</i>	module control cmd, reference <code>_codec_module_ctrl_cmd</code> .
<i>data</i>	value to write, when cmd is <code>kCODEC_ModuleRecordSourceChannel</code> , the data should be a value combine of channel and source, please reference macro <code>CODEC_MODULE_RECORD_SOURCE_CHANNEL(source, LP, LN, RP, RN)</code> , reference codec specific driver for detail configurations.

Returns

`kStatus_Success` is success, else configure failed.

Chapter 40

Wm8524

Overview

Data Structures

- struct `wm8524_handle_t`
WM8524 handler. [More...](#)

Typedefs

- typedef void(* `wm8524_setMuteIO`)(uint32_t output)
< mute control io function pointer

Enumerations

- enum `wm8524_protocol_t` {
 `kWM8524_ProtocolLeftJustified` = 0x0,
 `kWM8524_ProtocolI2S` = 0x1,
 `kWM8524_ProtocolRightJustified` = 0x2 }
The audio data transfer protocol.
- enum `_wm8524_mute_control` {
 `kWM8524_Mute` = 0U,
 `kWM8524_Unmute` = 1U }
wm8524 mute operation

Functions

- `status_t WM8524_Init` (`wm8524_handle_t` *handle, `wm8524_config_t` *config)
Initializes WM8524.
- void `WM8524_ConfigFormat` (`wm8524_handle_t` *handle, `wm8524_protocol_t` protocol)
Configure WM8524 audio protocol.
- void `WM8524_SetMute` (`wm8524_handle_t` *handle, bool isMute)
Sets the codec mute state.

Driver version

- #define `FSL_WM8524_DRIVER_VERSION` (`MAKE_VERSION`(2, 1, 1))
WM8524 driver version 2.1.1.

Data Structure Documentation

40.2.1 struct wm8524_handle_t

Data Fields

- wm8524_config_t * [config](#)
wm8524 config pointer

Macro Definition Documentation

40.3.1 #define FSL_WM8524_DRIVER_VERSION (MAKE_VERSION(2, 1, 1))

Typedef Documentation

40.4.1 typedef void(* wm8524_setMutelO)(uint32_t output)

format control io function pointer

Enumeration Type Documentation

40.5.1 enum wm8524_protocol_t

Enumerator

- kWM8524_ProtocolLeftJustified* Left justified mode.
- kWM8524_ProtocolI2S* I2S mode.
- kWM8524_ProtocolRightJustified* Right justified mode.

40.5.2 enum _wm8524_mute_control

Enumerator

- kWM8524_Mute* mute left and right channel DAC
- kWM8524_Unmute* unmute left and right channel DAC

Function Documentation

40.6.1 status_t WM8524_Init (wm8524_handle_t * *handle*, wm8524_config_t * *config*)

Parameters

<i>handle</i>	WM8524 handle structure.
<i>config</i>	WM8524 configure structure.

Returns

kStatus_Success.

40.6.2 void WM8524_ConfigFormat (wm8524_handle_t * *handle*, wm8524_protocol_t *protocol*)

Parameters

<i>handle</i>	WM8524 handle structure.
<i>protocol</i>	WM8524 configuration structure.

40.6.3 void WM8524_SetMute (wm8524_handle_t * *handle*, bool *isMute*)

Parameters

<i>handle</i>	WM8524 handle structure.
<i>isMute</i>	true means mute, false means normal.

Chapter 41

Serial_Manager

Overview

Data Structures

- struct [serial_manager_config_t](#)
serial manager config structure [More...](#)
- struct [serial_manager_callback_message_t](#)
Callback message structure. [More...](#)

Macros

- #define [SERIAL_MANAGER_NON_BLOCKING_MODE](#) (0U)
Enable or disable serial manager non-blocking mode (1 - enable, 0 - disable)
- #define [SERIAL_PORT_TYPE_UART](#) (0U)
Enable or disable uart port (1 - enable, 0 - disable)
- #define [SERIAL_PORT_TYPE_USBCDC](#) (0U)
Enable or disable USB CDC port (1 - enable, 0 - disable)
- #define [SERIAL_PORT_TYPE_SWO](#) (0U)
Enable or disable SWO port (1 - enable, 0 - disable)
- #define [SERIAL_PORT_TYPE_VIRTUAL](#) (0U)
Enable or disable USB CDC virtual port (1 - enable, 0 - disable)
- #define [SERIAL_PORT_TYPE_RPMSG](#) (0U)
Enable or disable rPMSG port (1 - enable, 0 - disable)
- #define [SERIAL_MANAGER_TASK_HANDLE_TX](#) (0U)
Enable or disable SerialManager_Task() handle TX to prevent recursive calling.
- #define [SERIAL_MANAGER_TIME_DELAY_DEFAULT_VALUE](#) (1U)
Set the default delay time in ms used by SerialManager_TimeDelay().
- #define [SERIAL_MANAGER_TASK_HANDLE_RX_AVAILABLE_NOTIFY](#) (0U)
Enable or disable SerialManager_Task() handle RX data available notify.
- #define [SERIAL_MANAGER_WRITE_HANDLE_SIZE](#) (4U)
Set serial manager write handle size.
- #define [SERIAL_MANAGER_HANDLE_SIZE](#) (SERIAL_MANAGER_HANDLE_SIZE_TEMP + 12U)
SERIAL_PORT_UART_HANDLE_SIZE/SERIAL_PORT_USB_CDC_HANDLE_SIZE + serial manager dedicated size.
- #define [SERIAL_MANAGER_HANDLE_DEFINE](#)(name) uint32_t name[(([SERIAL_MANAGER_HANDLE_SIZE](#) + sizeof(uint32_t) - 1U) / sizeof(uint32_t))]
Defines the serial manager handle.
- #define [SERIAL_MANAGER_WRITE_HANDLE_DEFINE](#)(name) uint32_t name[(([SERIAL_MANAGER_WRITE_HANDLE_SIZE](#) + sizeof(uint32_t) - 1U) / sizeof(uint32_t))]
Defines the serial manager write handle.
- #define [SERIAL_MANAGER_READ_HANDLE_DEFINE](#)(name) uint32_t name[(([SERIAL_MANAGER_READ_HANDLE_SIZE](#) + sizeof(uint32_t) - 1U) / sizeof(uint32_t))]
Defines the serial manager read handle.

- #define `SERIAL_MANAGER_USE_COMMON_TASK` (0U)
Macro to determine whether use common task.
- #define `SERIAL_MANAGER_TASK_PRIORITY` (2U)
Macro to set serial manager task priority.
- #define `SERIAL_MANAGER_TASK_STACK_SIZE` (1000U)
Macro to set serial manager task stack size.

Typedefs

- typedef void * `serial_handle_t`
The handle of the serial manager module.
- typedef void * `serial_write_handle_t`
The write handle of the serial manager module.
- typedef void * `serial_read_handle_t`
The read handle of the serial manager module.
- typedef void(* `serial_manager_callback_t`)(void *callbackParam, `serial_manager_callback_message_t` *message, `serial_manager_status_t` status)
callback function

Enumerations

- enum `serial_port_type_t` {
 `kSerialPort_Uart` = 1U,
 `kSerialPort_UsbCdc`,
 `kSerialPort_Swo`,
 `kSerialPort_Virtual`,
 `kSerialPort_Rpmsg` }
serial port type
- enum `serial_manager_type_t` {
 `kSerialManager_NonBlocking` = 0x0U,
 `kSerialManager_Blocking` = 0x8F41U }
serial manager type
- enum `serial_manager_status_t` {
 `kStatus_SerialManager_Success` = `kStatus_Success`,
 `kStatus_SerialManager_Error` = `MAKE_STATUS(kStatusGroup_SERIALMANAGER, 1)`,
 `kStatus_SerialManager_Busy` = `MAKE_STATUS(kStatusGroup_SERIALMANAGER, 2)`,
 `kStatus_SerialManager_Notify` = `MAKE_STATUS(kStatusGroup_SERIALMANAGER, 3)`,
 `kStatus_SerialManager_Canceled`,
 `kStatus_SerialManager_HandleConflict` = `MAKE_STATUS(kStatusGroup_SERIALMANAGER, 5)`,
 `kStatus_SerialManager_RingBufferOverflow`,
 `kStatus_SerialManager_NotConnected` = `MAKE_STATUS(kStatusGroup_SERIALMANAGER, 7)` }
serial manager error code

Functions

- `serial_manager_status_t SerialManager_Init (serial_handle_t serialHandle, const serial_manager_config_t *config)`
Initializes a serial manager module with the serial manager handle and the user configuration structure.
- `serial_manager_status_t SerialManager_Deinit (serial_handle_t serialHandle)`
De-initializes the serial manager module instance.
- `serial_manager_status_t SerialManager_OpenWriteHandle (serial_handle_t serialHandle, serial_write_handle_t writeHandle)`
Opens a writing handle for the serial manager module.
- `serial_manager_status_t SerialManager_CloseWriteHandle (serial_write_handle_t writeHandle)`
Closes a writing handle for the serial manager module.
- `serial_manager_status_t SerialManager_OpenReadHandle (serial_handle_t serialHandle, serial_read_handle_t readHandle)`
Opens a reading handle for the serial manager module.
- `serial_manager_status_t SerialManager_CloseReadHandle (serial_read_handle_t readHandle)`
Closes a reading for the serial manager module.
- `serial_manager_status_t SerialManager_WriteBlocking (serial_write_handle_t writeHandle, uint8_t *buffer, uint32_t length)`
Transmits data with the blocking mode.
- `serial_manager_status_t SerialManager_ReadBlocking (serial_read_handle_t readHandle, uint8_t *buffer, uint32_t length)`
Reads data with the blocking mode.
- `serial_manager_status_t SerialManager_EnterLowpower (serial_handle_t serialHandle)`
Prepares to enter low power consumption.
- `serial_manager_status_t SerialManager_ExitLowpower (serial_handle_t serialHandle)`
Restores from low power consumption.

Data Structure Documentation

41.2.1 struct serial_manager_config_t

Data Fields

- `uint8_t * ringBuffer`
Ring buffer address, it is used to buffer data received by the hardware.
- `uint32_t ringBufferSize`
The size of the ring buffer.
- `serial_port_type_t type`
Serial port type.
- `serial_manager_type_t blockType`
Serial manager port type.
- `void * portConfig`
Serial port configuration.

41.2.1.0.0.36 Field Documentation

41.2.1.0.0.36.1 uint8_t* serial_manager_config_t::ringBuffer

Besides, the memory space cannot be free during the lifetime of the serial manager module.

41.2.2 struct serial_manager_callback_message_t

Data Fields

- uint8_t * [buffer](#)
Transferred buffer.
- uint32_t [length](#)
Transferred data length.

Macro Definition Documentation

41.3.1 #define SERIAL_MANAGER_TIME_DELAY_DEFAULT_VALUE (1U)

41.3.2 #define SERIAL_MANAGER_HANDLE_SIZE (SERIAL_MANAGER_HANDLE_SIZE_TEMP + 12U)

Definition of serial manager handle size.

41.3.3 #define SERIAL_MANAGER_HANDLE_DEFINE(*name*) uint32_t name[(((SERIAL_MANAGER_HANDLE_SIZE + sizeof(uint32_t) - 1U) / sizeof(uint32_t))]

This macro is used to define a 4 byte aligned serial manager handle. Then use "(serial_handle_t)name" to get the serial manager handle.

The macro should be global and could be optional. You could also define serial manager handle by yourself.

This is an example,

```
* SERIAL_MANAGER_HANDLE_DEFINE(serialManagerHandle);
*
```

Parameters

<i>name</i>	The name string of the serial manager handle.
-------------	---

41.3.4 #define SERIAL_MANAGER_WRITE_HANDLE_DEFINE(*name*) uint32_t name[(((SERIAL_MANAGER_WRITE_HANDLE_SIZE + sizeof(uint32_t) - 1U) / sizeof(uint32_t))]

This macro is used to define a 4 byte aligned serial manager write handle. Then use "(serial_write_handle_t)name" to get the serial manager write handle.

The macro should be global and could be optional. You could also define serial manager write handle by yourself.

This is an example,

```
* SERIAL_MANAGER_WRITE_HANDLE_DEFINE(serialManagerwriteHandle);
*
```

Parameters

<i>name</i>	The name string of the serial manager write handle.
-------------	---

41.3.5 #define SERIAL_MANAGER_READ_HANDLE_DEFINE(*name*) uint32_t name[(((SERIAL_MANAGER_READ_HANDLE_SIZE + sizeof(uint32_t) - 1U) / sizeof(uint32_t))]

This macro is used to define a 4 byte aligned serial manager read handle. Then use "(serial_read_handle_t)name" to get the serial manager read handle.

The macro should be global and could be optional. You could also define serial manager read handle by yourself.

This is an example,

```
* SERIAL_MANAGER_READ_HANDLE_DEFINE(serialManagerReadHandle);
*
```

Parameters

<i>name</i>	The name string of the serial manager read handle.
-------------	--

41.3.6 #define SERIAL_MANAGER_USE_COMMON_TASK (0U)

41.3.7 #define SERIAL_MANAGER_TASK_PRIORITY (2U)

41.3.8 #define SERIAL_MANAGER_TASK_STACK_SIZE (1000U)

Enumeration Type Documentation

41.4.1 enum serial_port_type_t

Enumerator

kSerialPort_Uart Serial port UART.

kSerialPort_UsbCdc Serial port USB CDC.

kSerialPort_Swo Serial port SWO.

kSerialPort_Virtual Serial port Virtual.

kSerialPort_Rpmsg Serial port RPMSG.

41.4.2 enum serial_manager_type_t

Enumerator

kSerialManager_NonBlocking None blocking handle.

kSerialManager_Blocking Blocking handle.

41.4.3 enum serial_manager_status_t

Enumerator

kStatus_SerialManager_Success Success.

kStatus_SerialManager_Error Failed.

kStatus_SerialManager_Busy Busy.

kStatus_SerialManager_Notify Ring buffer is not empty.

kStatus_SerialManager_Canceled the non-blocking request is canceled

kStatus_SerialManager_HandleConflict The handle is opened.

kStatus_SerialManager_RingBufferOverflow The ring buffer is overflowed.

kStatus_SerialManager_NotConnected The host is not connected.

Function Documentation

41.5.1 serial_manager_status_t SerialManager_Init (serial_handle_t serialHandle, const serial_manager_config_t * config)

This function configures the Serial Manager module with user-defined settings. The user can configure the configuration structure. The parameter serialHandle is a pointer to point to a memory space of size [SERIAL_MANAGER_HANDLE_SIZE](#) allocated by the caller. The Serial Manager module supports three types of serial port, UART (includes UART, USART, LPSCI, LPUART, etc), USB CDC and swo. Please refer to [serial_port_type_t](#) for serial port setting. These three types can be set by using [serial_manager_config_t](#).

Example below shows how to use this API to configure the Serial Manager. For UART,

```
* #define SERIAL_MANAGER_RING_BUFFER_SIZE (256U)
* static SERIAL_MANAGER_HANDLE_DEFINE(s_serialHandle);
* static uint8_t s_ringBuffer[SERIAL_MANAGER_RING_BUFFER_SIZE];
*
* serial_manager_config_t config;
* serial_port_uart_config_t uartConfig;
* config.type = kSerialPort_Uart;
```

```

*  config.ringBuffer = &s_ringBuffer[0];
*  config.ringBufferSize = SERIAL_MANAGER_RING_BUFFER_SIZE;
*  uartConfig.instance = 0;
*  uartConfig.clockRate = 24000000;
*  uartConfig.baudRate = 115200;
*  uartConfig.parityMode = kSerialManager_UartParityDisabled;
*  uartConfig.stopBitCount = kSerialManager_UartOneStopBit;
*  uartConfig.enableRx = 1;
*  uartConfig.enableTx = 1;
*  uartConfig.enableRxRTS = 0;
*  uartConfig.enableTxCTS = 0;
*  config.portConfig = &uartConfig;
*  SerialManager_Init((serial_handle_t)s_serialHandle, &config);
*

```

For USB CDC,

```

*  #define SERIAL_MANAGER_RING_BUFFER_SIZE (256U)
*  static SERIAL_MANAGER_HANDLE_DEFINE(s_serialHandle);
*  static uint8_t s_ringBuffer[SERIAL_MANAGER_RING_BUFFER_SIZE];
*
*  serial_manager_config_t config;
*  serial_port_usb_cdc_config_t usbCdcConfig;
*  config.type = kSerialPort_UsbCdc;
*  config.ringBuffer = &s_ringBuffer[0];
*  config.ringBufferSize = SERIAL_MANAGER_RING_BUFFER_SIZE;
*  usbCdcConfig.controllerIndex = kSerialManager_UsbControllerKhci0;
*  config.portConfig = &usbCdcConfig;
*  SerialManager_Init((serial_handle_t)s_serialHandle, &config);
*

```

Parameters

<i>serialHandle</i>	Pointer to point to a memory space of size SERIAL_MANAGER_HANDLE_SIZE allocated by the caller. The handle should be 4 byte aligned, because unaligned access doesn't be supported on some devices. You can define the handle in the following two ways: SERIAL_MANAGER_HANDLE_DEFINE(serialHandle) ; or <code>uint32_t serialHandle[((SERIAL_MANAGER_HANDLE_SIZE + sizeof(uint32_t) - 1U) / sizeof(uint32_t))];</code>
<i>config</i>	Pointer to user-defined configuration structure.

Return values

<i>kStatus_SerialManager_Error</i>	An error occurred.
<i>kStatus_SerialManager_Success</i>	The Serial Manager module initialization succeed.

41.5.2 serial_manager_status_t SerialManager_Deinit (serial_handle_t *serialHandle*)

This function de-initializes the serial manager module instance. If the opened writing or reading handle is not closed, the function will return kStatus_SerialManager_Busy.

Parameters

<i>serialHandle</i>	The serial manager module handle pointer.
---------------------	---

Return values

<i>kStatus_SerialManager_Success</i>	The serial manager de-initialization succeed.
<i>kStatus_SerialManager_Busy</i>	Opened reading or writing handle is not closed.

41.5.3 serial_manager_status_t SerialManager_OpenWriteHandle (serial_handle_t serialHandle, serial_write_handle_t writeHandle)

This function Opens a writing handle for the serial manager module. If the serial manager needs to be used in different tasks, the task should open a dedicated write handle for itself by calling [SerialManager_OpenWriteHandle](#). Since there can only one buffer for transmission for the writing handle at the same time, multiple writing handles need to be opened when the multiple transmission is needed for a task.

Parameters

<i>serialHandle</i>	The serial manager module handle pointer. The handle should be 4 byte aligned, because unaligned access doesn't be supported on some devices.
<i>writeHandle</i>	The serial manager module writing handle pointer. The handle should be 4 byte aligned, because unaligned access doesn't be supported on some devices. You can define the handle in the following two ways: SERIAL_MANAGER_WRITE_HANDLE_DEFINE(writeHandle) ; or <code>uint32_t writeHandle[((SERIAL_MANAGER_WRITE_HANDLE_SIZE + sizeof(uint32_t) - 1U) / sizeof(uint32_t))];</code>

Return values

<i>kStatus_SerialManager_Error</i>	An error occurred.
<i>kStatus_SerialManager_HandleConflict</i>	The writing handle was opened.

<i>kStatus_SerialManager_Success</i>	The writing handle is opened.
--------------------------------------	-------------------------------

Example below shows how to use this API to write data. For task 1,

```
*  static SERIAL_MANAGER_WRITE_HANDLE_DEFINE(s_serialWriteHandle1);
*  static uint8_t s_nonBlockingWelcome1[] = "This is non-blocking writing log for task1!\r\n";
*  SerialManager_OpenWriteHandle((serial_handle_t)serialHandle
*      , (serial_write_handle_t)s_serialWriteHandle1);
*  SerialManager_InstallTxCallback((serial_write_handle_t)s_serialWriteHandle1,
*      Task1_SerialManagerTxCallback,
*      s_serialWriteHandle1);
*  SerialManager_WriteNonBlocking((serial_write_handle_t)s_serialWriteHandle1,
*      s_nonBlockingWelcome1,
*      sizeof(s_nonBlockingWelcome1) - 1U);
*
```

For task 2,

```
*  static SERIAL_MANAGER_WRITE_HANDLE_DEFINE(s_serialWriteHandle2);
*  static uint8_t s_nonBlockingWelcome2[] = "This is non-blocking writing log for task2!\r\n";
*  SerialManager_OpenWriteHandle((serial_handle_t)serialHandle
*      , (serial_write_handle_t)s_serialWriteHandle2);
*  SerialManager_InstallTxCallback((serial_write_handle_t)s_serialWriteHandle2,
*      Task2_SerialManagerTxCallback,
*      s_serialWriteHandle2);
*  SerialManager_WriteNonBlocking((serial_write_handle_t)s_serialWriteHandle2,
*      s_nonBlockingWelcome2,
*      sizeof(s_nonBlockingWelcome2) - 1U);
*
```

41.5.4 serial_manager_status_t SerialManager_CloseWriteHandle (serial_write_handle_t writeHandle)

This function Closes a writing handle for the serial manager module.

Parameters

<i>writeHandle</i>	The serial manager module writing handle pointer.
--------------------	---

Return values

<i>kStatus_SerialManager_Success</i>	The writing handle is closed.
--------------------------------------	-------------------------------

41.5.5 serial_manager_status_t SerialManager_OpenReadHandle (serial_handle_t serialHandle, serial_read_handle_t readHandle)

This function Opens a reading handle for the serial manager module. The reading handle can not be opened multiple at the same time. The error code kStatus_SerialManager_Busy would be returned when

the previous reading handle is not closed. And there can only be one buffer for receiving for the reading handle at the same time.

Parameters

<i>serialHandle</i>	The serial manager module handle pointer. The handle should be 4 byte aligned, because unaligned access doesn't be supported on some devices.
<i>readHandle</i>	The serial manager module reading handle pointer. The handle should be 4 byte aligned, because unaligned access doesn't be supported on some devices. You can define the handle in the following two ways: SERIAL_MANAGER_READ_HANDLE_DEFINE(readHandle) ; or <code>uint32_t readHandle[((SERIAL_MANAGER_READ_HANDLE_SIZE + sizeof(uint32_t) - 1U) / sizeof(uint32_t))];</code>

Return values

<i>kStatus_SerialManager_Error</i>	An error occurred.
<i>kStatus_SerialManager_Success</i>	The reading handle is opened.
<i>kStatus_SerialManager_Busy</i>	Previous reading handle is not closed.

Example below shows how to use this API to read data.

```
*  static SERIAL_MANAGER_READ_HANDLE_DEFINE(s_serialReadHandle);
*  SerialManager_OpenReadHandle((serial_handle_t)serialHandle,
*      (serial_read_handle_t)s_serialReadHandle);
*  static uint8_t s_nonBlockingBuffer[64];
*  SerialManager_InstallRxCallback((serial_read_handle_t)s_serialReadHandle,
*      APP_SerialManagerRxCallback,
*      s_serialReadHandle);
*  SerialManager_ReadNonBlocking((serial_read_handle_t)s_serialReadHandle,
*      s_nonBlockingBuffer,
*      sizeof(s_nonBlockingBuffer));
*
```

41.5.6 serial_manager_status_t SerialManager_CloseReadHandle (serial_read_handle_t readHandle)

This function Closes a reading for the serial manager module.

Parameters

<i>readHandle</i>	The serial manager module reading handle pointer.
-------------------	---

Return values

<i>kStatus_SerialManager_Success</i>	The reading handle is closed.
--------------------------------------	-------------------------------

41.5.7 serial_manager_status_t SerialManager_WriteBlocking (serial_manager_write_handle_t writeHandle, uint8_t * buffer, uint32_t length)

This is a blocking function, which polls the sending queue, waits for the sending queue to be empty. This function sends data using an interrupt method. The interrupt of the hardware could not be disabled. And There can only one buffer for transmission for the writing handle at the same time.

Note

The function [SerialManager_WriteBlocking](#) and the function [SerialManager_WriteNonBlocking](#) cannot be used at the same time. And, the function [SerialManager_CancelWriting](#) cannot be used to abort the transmission of this function.

Parameters

<i>writeHandle</i>	The serial manager module handle pointer.
<i>buffer</i>	Start address of the data to write.
<i>length</i>	Length of the data to write.

Return values

<i>kStatus_SerialManager_Success</i>	Successfully sent all data.
<i>kStatus_SerialManager_Busy</i>	Previous transmission still not finished; data not all sent yet.
<i>kStatus_SerialManager_Error</i>	An error occurred.

41.5.8 serial_manager_status_t SerialManager_ReadBlocking (serial_manager_read_handle_t readHandle, uint8_t * buffer, uint32_t length)

This is a blocking function, which polls the receiving buffer, waits for the receiving buffer to be full. This function receives data using an interrupt method. The interrupt of the hardware could not be disabled. And There can only one buffer for receiving for the reading handle at the same time.

Note

The function [SerialManager_ReadBlocking](#) and the function `SerialManager_ReadNonBlocking` cannot be used at the same time. And, the function `SerialManager_CancelReading` cannot be used to abort the transmission of this function.

Parameters

<i>readHandle</i>	The serial manager module handle pointer.
<i>buffer</i>	Start address of the data to store the received data.
<i>length</i>	The length of the data to be received.

Return values

<i>kStatus_SerialManager_Success</i>	Successfully received all data.
<i>kStatus_SerialManager_Busy</i>	Previous transmission still not finished; data not all received yet.
<i>kStatus_SerialManager_Error</i>	An error occurred.

41.5.9 serial_manager_status_t SerialManager_EnterLowpower (serial_handle_t *serialHandle*)

This function is used to prepare to enter low power consumption.

Parameters

<i>serialHandle</i>	The serial manager module handle pointer.
---------------------	---

Return values

<i>kStatus_SerialManager_Success</i>	Successful operation.
--------------------------------------	-----------------------

41.5.10 serial_manager_status_t SerialManager_ExitLowpower (serial_handle_t *serialHandle*)

This function is used to restore from low power consumption.

Parameters

<i>serialHandle</i>	The serial manager module handle pointer.
---------------------	---

Return values

<i>kStatus_SerialManager_Success</i>	Successful operation.
--------------------------------------	-----------------------

Chapter 42

Serial_port_swo

Overview

Data Structures

- struct [serial_port_swo_config_t](#)
serial port swo config struct [More...](#)

Macros

- #define [SERIAL_PORT_SWO_HANDLE_SIZE](#) (12U)
serial port swo handle size

Enumerations

- enum [serial_port_swo_protocol_t](#) {
 [kSerialManager_SwoProtocolManchester](#) = 1U,
 [kSerialManager_SwoProtocolNrz](#) = 2U }
serial port swo protocol

Data Structure Documentation

42.2.1 struct serial_port_swo_config_t

Data Fields

- uint32_t [clockRate](#)
clock rate
- uint32_t [baudRate](#)
baud rate
- uint32_t [port](#)
Port used to transfer data.
- [serial_port_swo_protocol_t](#) [protocol](#)
SWO protocol.

Enumeration Type Documentation

42.3.1 enum serial_port_swo_protocol_t

Enumerator

kSerialManager_SwoProtocolManchester SWO Manchester protocol.
kSerialManager_SwoProtocolNrz SWO UART/NRZ protocol.

Chapter 43

Serial_port_uart

Overview

Macros

- #define [SERIAL_PORT_UART_HANDLE_SIZE](#) (HAL_UART_HANDLE_SIZE)
serial port uart handle size
- #define [SERIAL_USE_CONFIGURE_STRUCTURE](#) (0U)
Enable or disable the configure structure pointer.

Enumerations

- enum [serial_port_uart_parity_mode_t](#) {
 [kSerialManager_UartParityDisabled](#) = 0x0U,
 [kSerialManager_UartParityEven](#) = 0x1U,
 [kSerialManager_UartParityOdd](#) = 0x2U }
serial port uart parity mode
- enum [serial_port_uart_stop_bit_count_t](#) {
 [kSerialManager_UartOneStopBit](#) = 0U,
 [kSerialManager_UartTwoStopBit](#) = 1U }
serial port uart stop bit count

Enumeration Type Documentation

43.2.1 enum serial_port_uart_parity_mode_t

Enumerator

kSerialManager_UartParityDisabled Parity disabled.
kSerialManager_UartParityEven Parity even enabled.
kSerialManager_UartParityOdd Parity odd enabled.

43.2.2 enum serial_port_uart_stop_bit_count_t

Enumerator

kSerialManager_UartOneStopBit One stop bit.
kSerialManager_UartTwoStopBit Two stop bits.

Chapter 44

Data Structure Documentation

44.0.3 codec_i2c_config_t Struct Reference

CODEC I2C configurations structure.

```
#include <fsl_codec_i2c.h>
```

Data Fields

- uint32_t [codecI2CInstance](#)
i2c bus instance
- uint32_t [codecI2CSourceClock](#)
i2c bus source clock frequency

How to Reach Us:**Home Page:**nxp.com**Web Support:**nxp.com/support

Information in this document is provided solely to enable system and software implementers to use NXP products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

NXP makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does NXP assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in NXP data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. NXP does not convey any license under its patent rights nor the rights of others. NXP sells products pursuant to standard terms and conditions of sale, which can be found at the following address:
nxp.com/SalesTermsandConditions.

While NXP has implemented advanced security features, all products may be subject to unidentified vulnerabilities. Customers are responsible for the design and operation of their applications and products to reduce the effect of these vulnerabilities on customer's applications and products, and NXP accepts no liability for any vulnerability that is discovered. Customers should implement appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP, the NXP logo, NXP SECURE CONNECTIONS FOR A SMARTER WORLD, Freescale, the Freescale logo, Kinetis, Processor Expert, and Tower are trademarks of NXP B.V. All other product or service names are the property of their respective owners. Arm, Cortex, Keil, Mbed, Mbed Enabled, and Vision are trademarks or registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. The related technology may be protected by any or all of patents, copyrights, designs and trade secrets. All rights reserved. Oracle and Java are registered trademarks of Oracle and/or its affiliates. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org.

© 2018 NXP B.V.