

How to Start

Please follow this tutorial to set up the screen. Or the screen may not work well.

Get Support

When there are packaging damage, quality problems, questions encountering in use, etc., just send us an email. We will reply to you within one working day and provide a solution.

support@freenove.com

About

Freenove provides open source electronic products and services. We are committed to helping customers learn programming and electronic knowledge, quickly implement product prototypes, realize their creativity and launch innovative products. Our services include:

- Kits for learning programming and electronics
- Kits compatible with Arduino®, Raspberry Pi®, micro:bit®, etc.
- Kits for robots, smart cars, drones, etc.
- Components, modules and tools
- Design and customization

To learn more about us or get our latest information, please visit our website:

<http://www.freenove.com>

Copyright

All the files provided in the ZIP file are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](https://creativecommons.org/licenses/by-nc-sa/3.0/). You can find a copy of the license in the ZIP file.



It means you can use these files on your own derived works, in part or completely. But not for commercial use.

Freenove® brand and logo are trademarks of Freenove Creative Technology Co., Ltd. Must not be used without permission.



Other registered trademarks and their owners appearing in this document:

Raspberry Pi® is a trademark of Raspberry Pi Foundation (<https://www.raspberrypi.org/>).

Content

How to Start	1
Get Support.....	1
About.....	1
Copyright.....	1
Setup Screen for Raspberry Pi	2
Raspberry Pi OS.....	2
Setup SD card	2
Use screen in Raspberry Pi OS	7
Rotate screen and touch system	9
Ubuntu.....	11
Connect Screen to Windows or other PC.....	11

Setup Screen for Raspberry Pi

Raspberry Pi OS

If you have not setup raspberry Pi, please visit following website:


<https://projects.raspberrypi.org/en/projects/raspberry-pi-setting-up>

If you have any concerns, please contact us at email: support@freenove.com

Setup SD card

1. After writing OS, keep Micro SD card connected to computer. If you have written system, pull out Micro SD card from Raspberry Pi and connect it to computer via card reader. Find and open config.txt under boot.



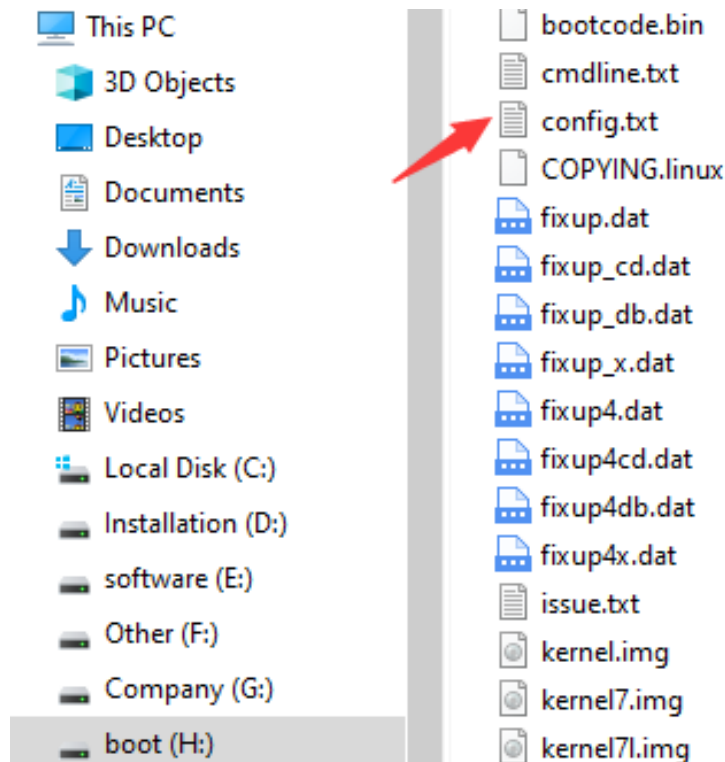

2. Add # at the beginning of all the statement “dtoverlay=vc4-fkms-V3D”.

```
*config.txt - Notepad
File Edit Format View Help
# Uncomment this to enable infr
#dtoverlay=gpio-ir,gpio_pin=17
#dtoverlay=gpio-ir-tx,gpio_pin=1

# Additional overlays and param

# Enable audio (loads snd_bcm28
dtparam=audio=on

[pi4]
# Enable DRM VC4 V3D driver or
dtoverlay=vc4-fkms-v3d
max_framebuffers=2

[all]
dtoverlay=vc4-fkms-v3d
start_x=1
gpu_mem=128
```

```
*config.txt - Notepad
File Edit Format View Help
#dtoverlay=spi=on

# Uncomment this to enable infr
#dtoverlay=gpio-ir,gpio_pin=17
#dtoverlay=gpio-ir-tx,gpio_pin=18

# Additional overlays and param

# Enable audio (loads snd_bcm283
dtparam=audio=on

[pi4]
# Enable DRM VC4 V3D driver on t
# dtoverlay=vc4-fkms-v3d
max_framebuffers=2

[all]
# dtoverlay=vc4-fkms-v3d
start_x=1
gpu_mem=128
```

3. Add the following content at the end of the text config.txt, and save all the modification, and then eject the card.

```
max_usb_current=1
[HDMI:0]
hdmi_group=2
hdmi_mode=87
hdmi_cvt 1024 600 60 6 0 0 0
hdmi_drive=1

[HDMI:1]
hdmi_group=2
hdmi_mode=87
hdmi_cvt 1024 600 60 6 0 0 0
hdmi_drive=1
```

 *config.txt - Notepad

File Edit Format View Help

```
#dtparam=spi=on
```

```
# Uncomment this to enable infrared con
```

```
#dtoverlay=gpio-ir,gpio_pin=17
```

```
#dtoverlay=gpio-ir-tx,gpio_pin=18
```

```
# Additional overlays and parameters are
```

```
# Enable audio (loads snd_bcm2835)
```

```
dtparam=audio=on
```

```
[pi4]
```

```
# Enable DRM VC4 V3D driver on top of
```

```
#dtoverlay=vc4-fkms-v3d
```

```
max_framebuffers=2
```

```
[all]
```

```
#dtoverlay=vc4-fkms-v3d
```

<

 *config.txt - Notepad

File Edit Format View Help

```
[pi4]
```

```
# Enable DRM VC4 V3D driver on top o
```

```
#dtoverlay=vc4-fkms-v3d
```

```
max_framebuffers=2
```

```
[all]
```

```
#dtoverlay=vc4-fkms-v3d
```

```
max_usb_current=1
```

```
[HDMI:0]
```

```
hdmi_group=2
```

```
hdmi_mode=87
```

```
hdmi_cvt 1024 600 60 6 0 0 0
```

```
hdmi_drive=1
```

```
[HDMI:1]
```

```
hdmi_group=2
```


```
hdmi_mode=87
```

```
hdmi_cvt 1024 600 60 6 0 0 0
```


```
hdmi_drive=1
```

<

4. Insert the micro SD card to Raspberry Pi.


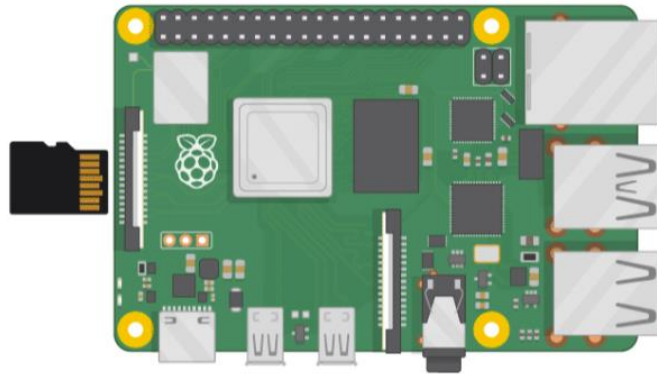


5. Connect the screen to Raspberry Pi with HDMI and Micro USB cable.

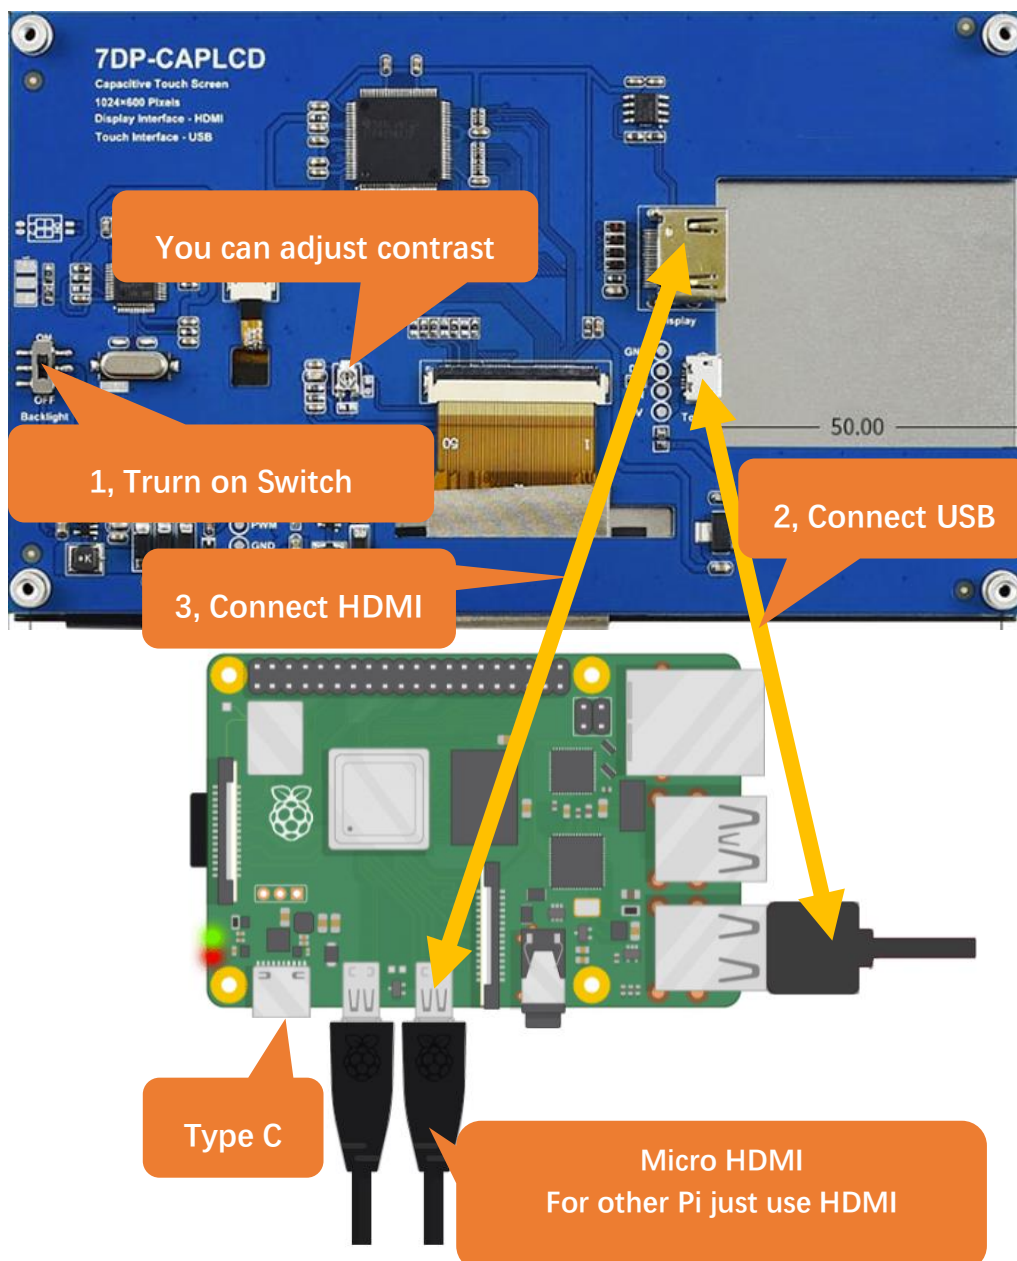




Pi zero W

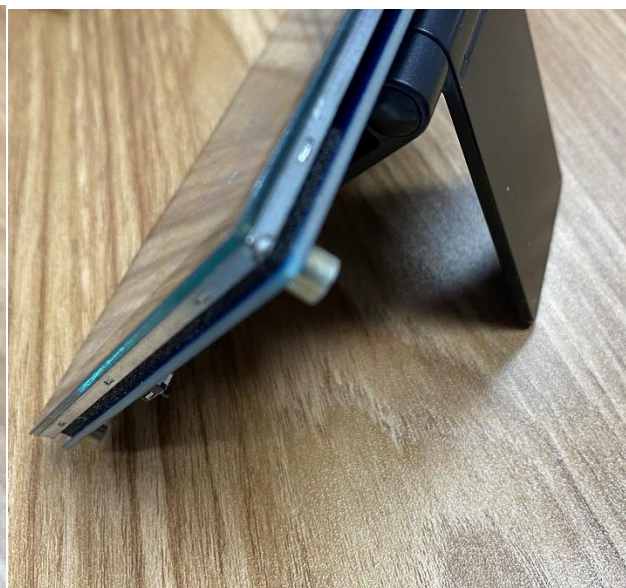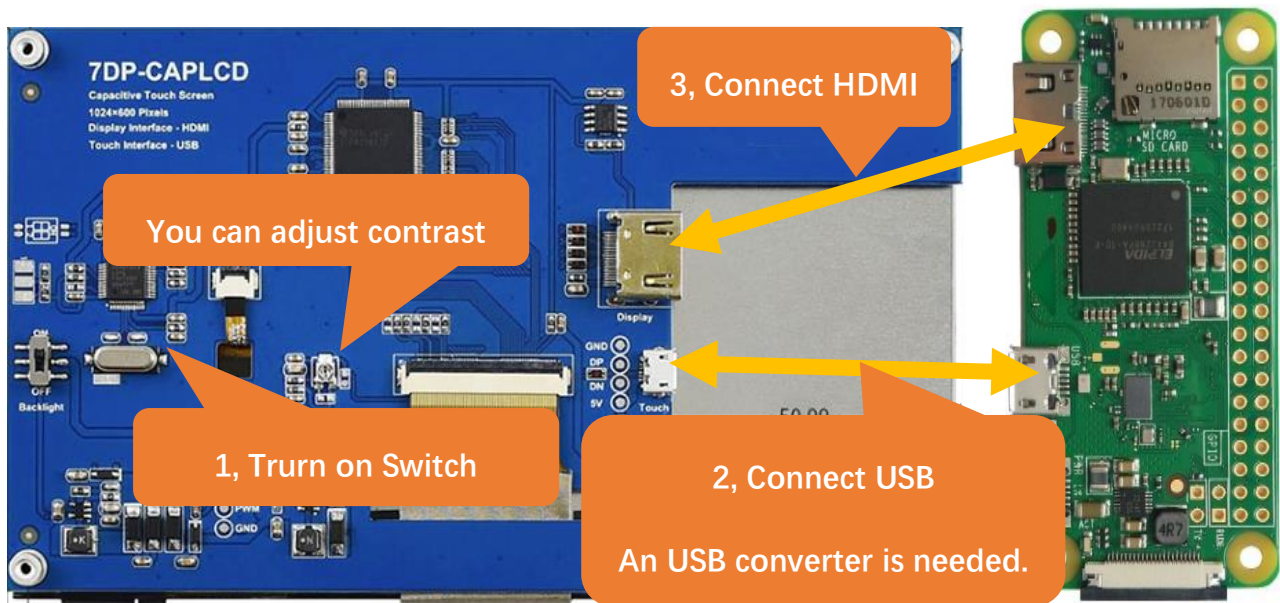


If you have any concerns, please contact us at email: support@freenove.com

Use screen in Raspberry Pi OS

You can connect Raspberry Pi to internet with Ethernet cable.


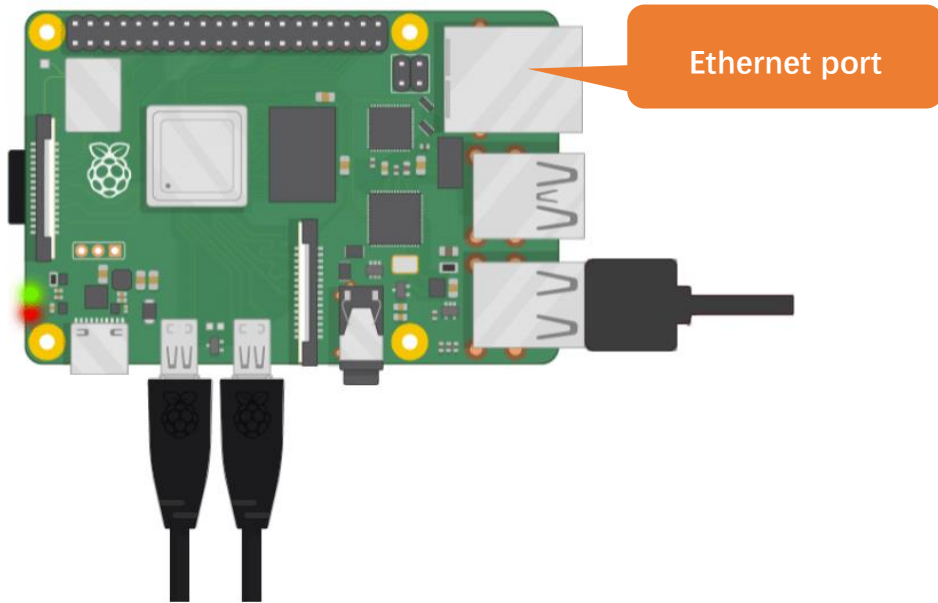


Or connect Raspberry Pi with a keypad, and connect Raspberry Pi to internet via WiFi.

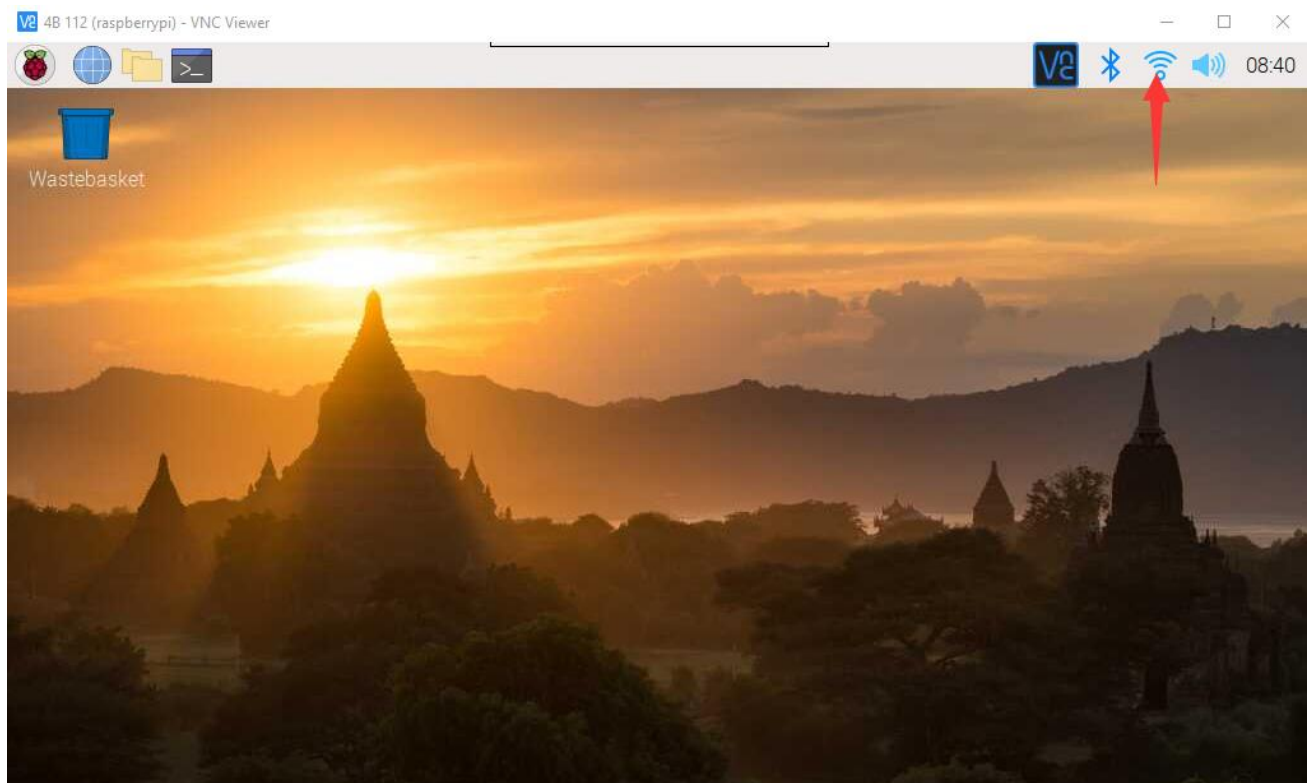


Execute the following commands in terminal to install a virtual keyboard.

```
sudo apt-get update
sudo apt-get install matchbox-keyboard
sudo reboot
```

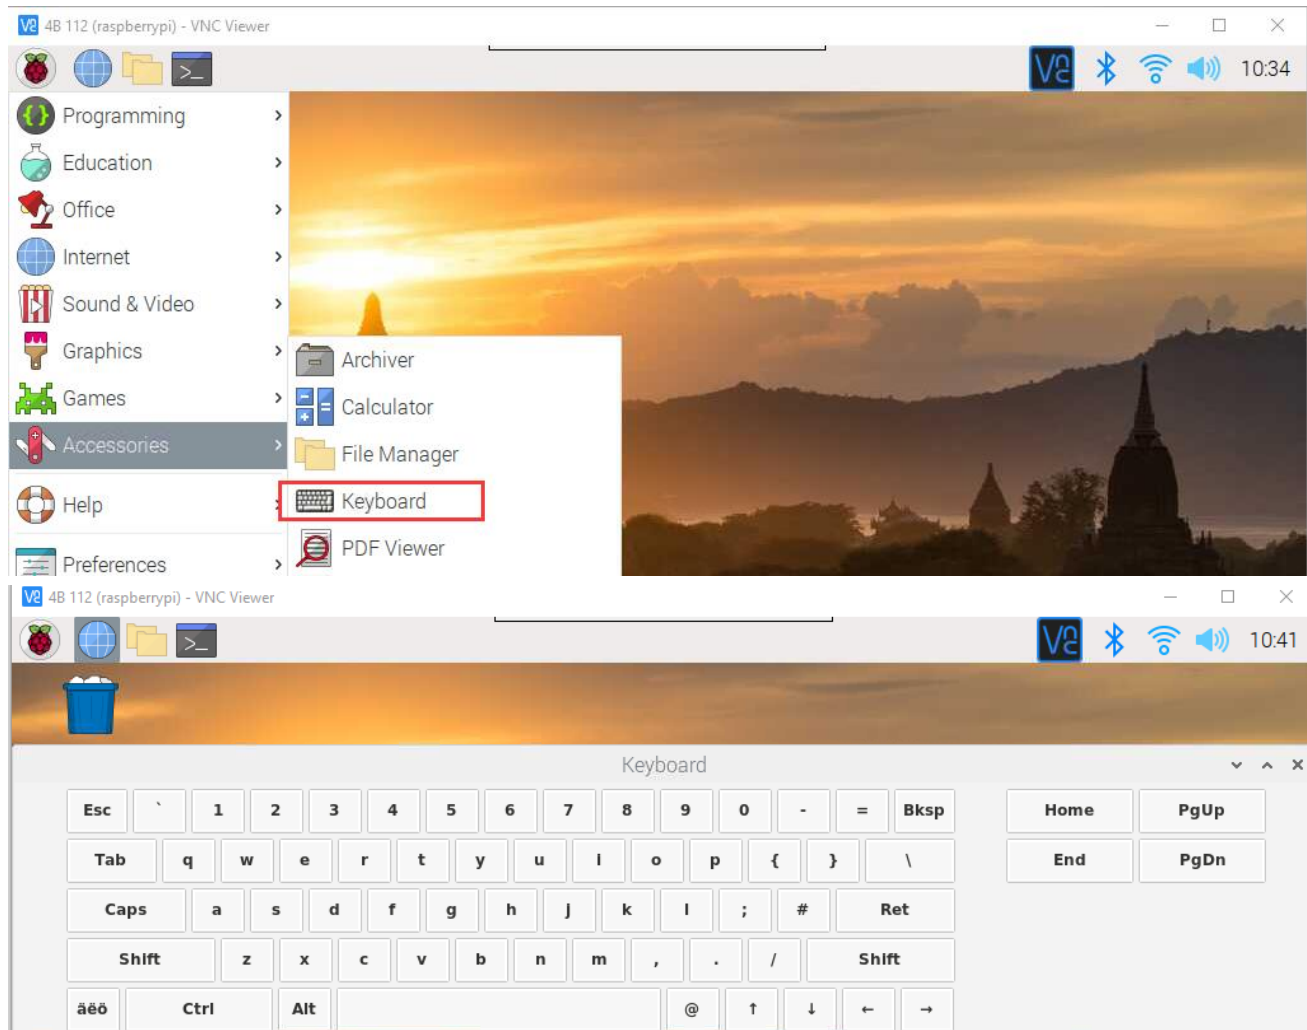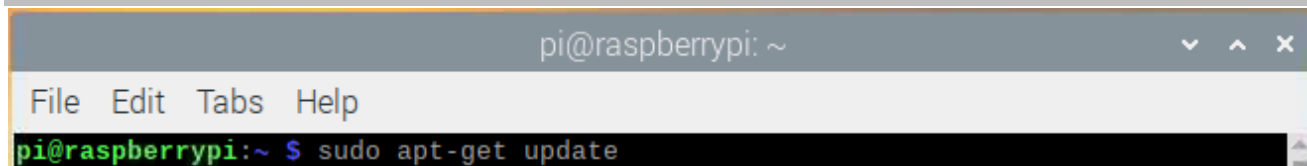

In Raspberry Pi, long press won't show the options, but it will in Windows system, which functions as right-clicking a mouse. You can also open a path in Terminal as follows:

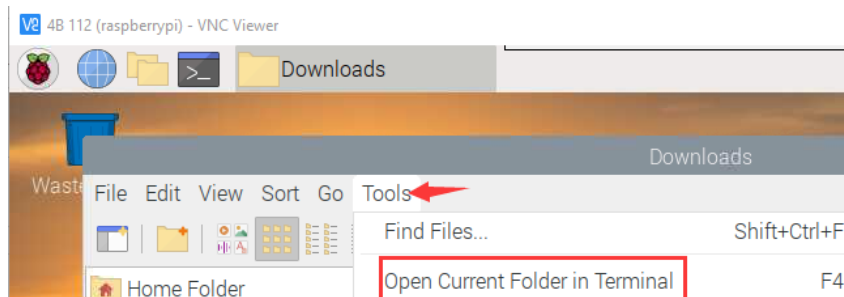

Rotate screen and touch system

Rotate screen


Open config.txt under /boot. You can also set on RaspberryPi directly. Execute following command in terminal.

```
sudo geany /boot/config.txt
```

Add following contents, delete “#” in the angle you select. Add “#” in front of other lines.

```
display_rotate=0      Normal
#display_rotate=1     90 degrees
#display_rotate=2     180 degrees
#display_rotate=3     270 degrees
```

For example, rotate 270 degrees. Then save modification.

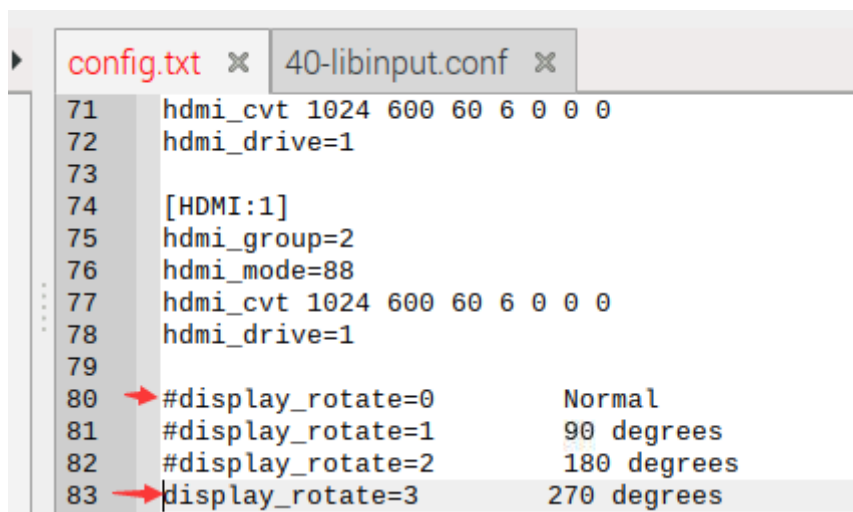

If you don't need rotate touch system, you can reboot now.

If you still need to use touch system, please follow steps below. Or touch system will work abnormal.

Rotate touch system

1, Install libinput.

On Raspberry Pi

```
sudo apt-get install xserver-xorg-input-libinput
```

If you are using **Ubuntu**, use following command.

```
sudo apt install xserver-xorg-input-synaptics
```

2, Execute following command to creat xorg.conf.d under /etc/X11/. If it has existed, move on to step 3.

```
sudo mkdir /etc/X11/xorg.conf.d
```

3, Execute following command to copy a file.

```
sudo cp /usr/share/X11/xorg.conf.d/40-libinput.conf /etc/X11/xorg.conf.d/
```

4, Open the file

```
sudo geany /etc/X11/xorg.conf.d/40-libinput.conf
```

5, Find following section and add Option like below. Here we select 270. **Touch system angle must be consistant with the one you select for screen. Then save modification.**

```
Section "InputClass"
    Identifier "libinput touchscreen catchall"
    MatchIsTouchscreen "on"
    Option "CalibrationMatrix" "0 -1 1 1 0 0 0 0 1"
    MatchDevicePath "/dev/input/event*"
    Driver "libinput"
```

Option "CalibrationMatrix" "0 1 0 -1 0 1 0 0 1" 90 degree

Option "CalibrationMatrix" "-1 0 1 0 -1 1 0 0 1" 180 degree

Option "CalibrationMatrix" "0 -1 1 1 0 0 0 0 1" 270 degree

If you want to rotate touch system to , add "#" in front or delect the line.


```
40 Section "InputClass"
41     Identifier "libinput touchscreen catchall"
42     MatchIsTouchscreen "on"
43     #Option "CalibrationMatrix" "0 -1 1 1 0 0 0 0 1"
44     MatchDevicePath "/dev/input/event*"
45     Driver "libinput"
46 EndSection
47
```



If you have any concerns, please contact us at email: support@freenove.com


Ubuntu

The boot screen may be abnormal, but everything works normally after the system is fully booted.

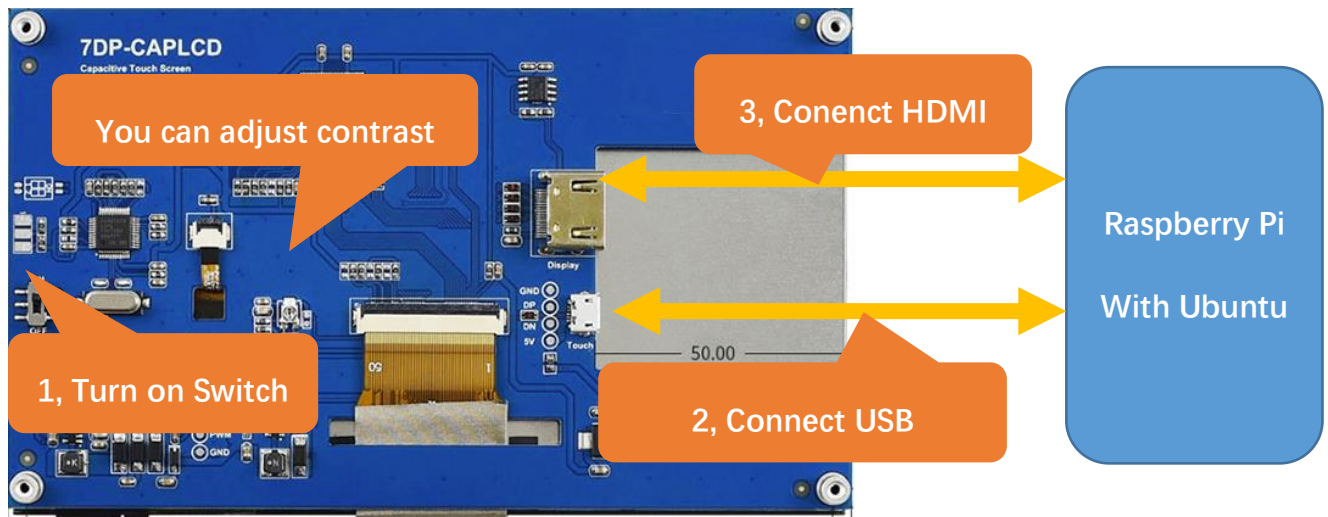

Connect Screen to Windows or other PC

The boot screen may be abnormal, but everything works normally after the system is fully booted.

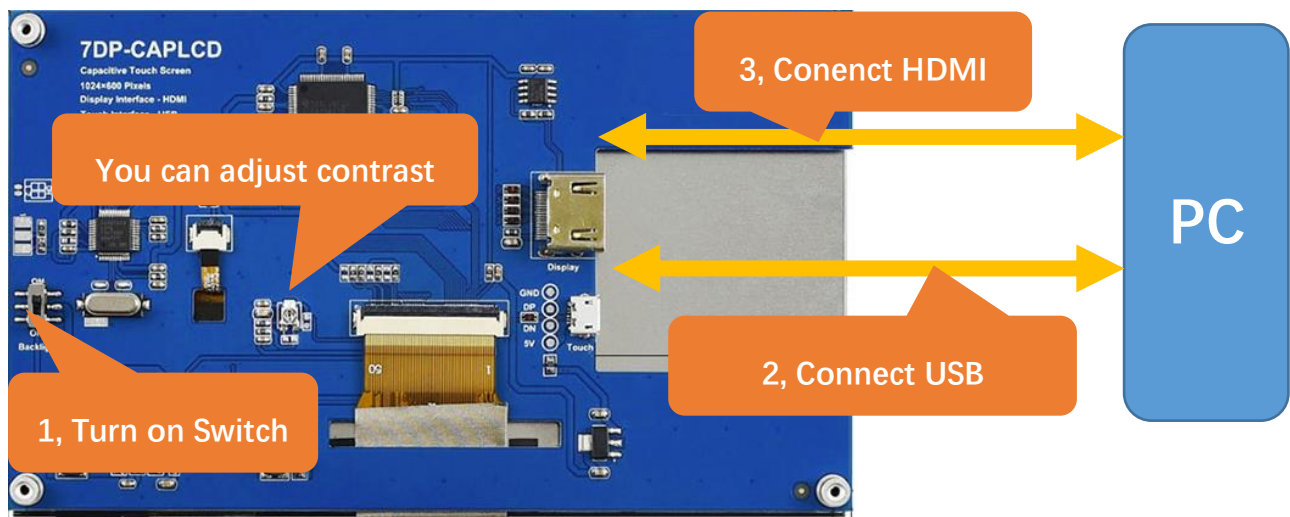



If you have any concerns, please contact us at email: support@freenove.com