

Radio Less Node Z2 (RLNZ2) User Guide

Contents

- Introduction 1
- Front and Rear Panel Details 3
- Setting up the RLNZ2 4
 - Before you start..... 4
 - Starting up and configuring the RLNZ2 4
- RLNZ2 Front Panel operation..... 6
- Accessing the RLNZ2 from any browser on your network. 7
- Accessing the RLNZ2 using the Hotspot feature 8
- Passwords..... 9
- Troubleshooting 10
 - Loading a New Software Update 11
- Node Remote 12
- New Users: Getting an AllStarLink account..... 13
- RLNZ2 Quick start guide 14

Document Version: 1

Date: February 8, 2026


Introduction

The RLNZ2 is an all-in-one appliance designed to connect to the AllStarLink (ASL) network.

The unit contains all the required components to operate as an ASL node, fabricated into a sturdy aluminum enclosure with front-panel controls, no PC required.

What's in the (Radio-less-node) RLN-Z2?


- A powerful Raspberry Pi Z2 W quad-core processor with WiFi
- 32GB SD card with ASL3 and the G1LRO custom setup firmware pre-installed
- 1.25 inch color LCD screen with button navigation to select favorite node connections in ASL3
- Audio interface based on the industry-standard CM108 sound processor
- Powerful 2.5W amplifier with internal speaker – audio design by Allscan.info
- Controls for microphone gain to support a wide range of microphone types
- Line-out for connection to auxiliary audio equipment
- Manual Bourns volume control and External speaker out
- Sturdy 88x38x100(mm) extruded aluminum case with rubber feet
- Front panel 'K1' microphone socket with supplied mic.
- Powered from 5v USB-C (cable provided)

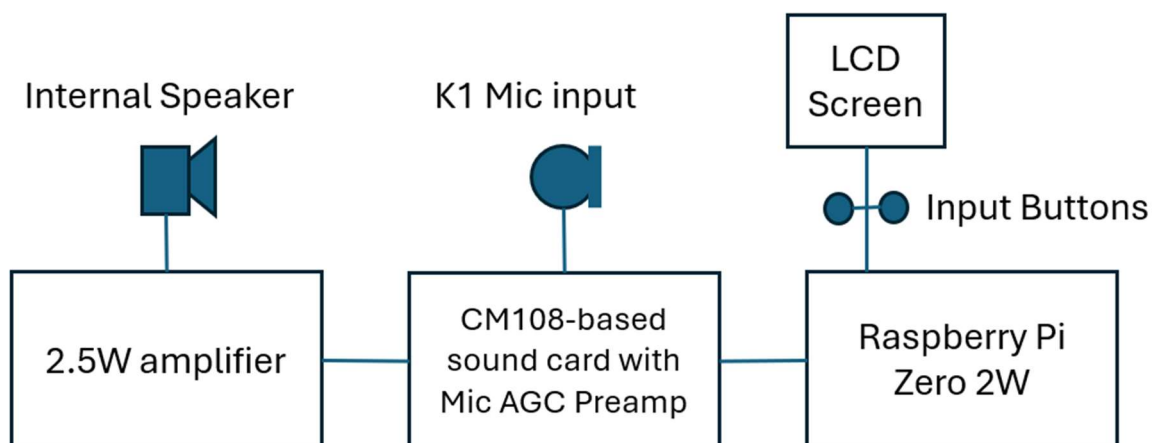

Front and Rear Panel Details



Front Panel Details

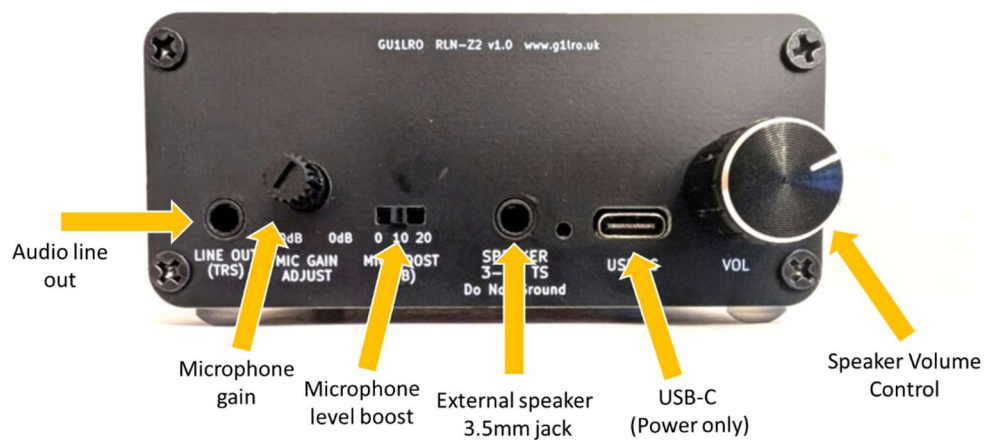

Rear panel details

Setting up the RLNZ2

The unit is shipped with a pre-installed version of the ASL3 software and custom software to manage the built-in display and operation as a simple stand-alone appliance.

Factory-configured units will arrive ready to connect to a Wi-Fi network, and the initial configuration is done via a mobile phone, tablet or laptop.

Before you start.

For the initial configuration, you will need the following 6 pieces of information to set up the RLNZ2. There is a form at the end of this document to fill in to be ready.

You must be registered on the AllStarLink.org website and have a node number and password. If you are new to AllStarLink then review the getting started guide in Appendix A.

Before you begin prepare these 6 pieces of information:

| | |
|------------------------|---|
| Wifi Access Point Name | Your home Wi-Fi access point name |
| Wifi Password | The password used to log into the Wi-Fi. |
| Node Number | From AllStarLink Server Settings |
| Node Password | From AllStarLink Server Settings |
| Callsign | Your Ham Radio callsign |
| Password | Choose the password you want to use to log in to the RLNZ2 admin portal and Allmon3 (numbers and letters only). |

Starting up and configuring the RLNZ2

When shipped from the factory the RLNZ2 is configured to automatically enter the mode to configure the initial Wi-Fi connection and node settings.

During first power-on you will see the following sequence on the display (wait for a minute for the system boot-up).


A G1LRO startup logo appears briefly, followed by a screen prompting you to press button A. You have approximately 5 seconds to press button A; if you do, or if the unit is new and has not yet been configured, the RLNZ2 will enter hotspot mode and show a “Connect to Wi-Fi” screen. (on a configured unit, if you do not press button A within the time window, the unit will proceed directly to the main operating screen once Asterisk is ready.)



The RLNZ2 will create a Wi-Fi access point for you to connect to from a phone, tablet or laptop. It will show the RLNZ2 access point name.

Select this and connect to the Wi-Fi with the password of **radioless**

The connection will show that no internet connection is available, this is ok.

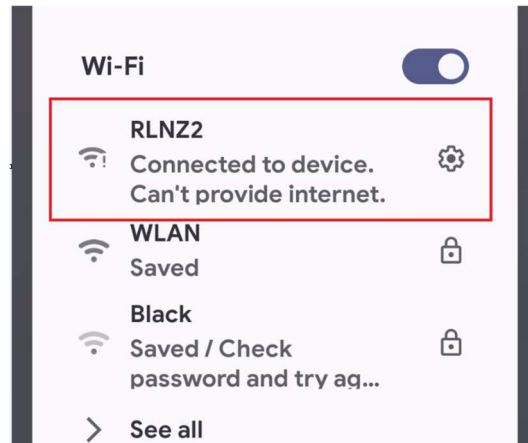

Access the RLNZ2 configuration screen by opening a browser and entering the following address: 10.1.2.3

This should bring up the RLNZ2 configuration page.

The page has 3 sections, for the initial configuration you should update the Wi-Fi settings and ASL settings to get started.

This RLNZ2 config page will be permanently available (without using the special Wi-Fi) once the unit is configured and online so the favourites can be updated at any time.

| Name | Node Number |
|--------------|-------------|
| Hubnet | 41223 |
| Freestar | 63061 |
| EC Reflector | 27339 |
| Win System | 2560 |
| DoDropin | 3546 |
| Parrot | 40894 |

WiFi Setup

Network Name (SSID): HOMEWIFI

Password: wifipassword

Country Code: United States (US)

ASL Settings

Node Number: 12345, Callsign: GU900X

Node Password: hijdsaf532l, Login and Allmon3 Password: radioless

When you press submit on the page, the Wi-Fi connection from the RLNZ2 Wi-Fi will disappear and the unit will start its configuration and reboot sequence.

Wait for a minute or so until this is completed and an IP address in your local network will show on the display.

Your phone/tablet/laptop device has probably re-connected to your home Wi-Fi.

RLNZ2 Front Panel operation

Now the unit is connected to the network and the AllStarLink system is configured, you can navigate the menus using the A and B buttons.

Important
To shut down the RLNZ2 safely hold both buttons for 5 seconds to initiate a safe closedown procedure.
Removing power to a running system can cause corruption of the SD card.


There are two buttons:

- The top (A) button moves the cursor around the screen to select things.
- The bottom button (B) does the selection.
- Pressing both (A) and (B) simultaneously for 5 seconds will make the system safely close down

The main screen uses colour coding to help you read it at a glance:

- the IP address is shown in white,
- the uptime in blue,
- the Favourites menu entry in yellow,
- currently connected nodes in green, and
- any error messages in red.

Connect to a favourite station

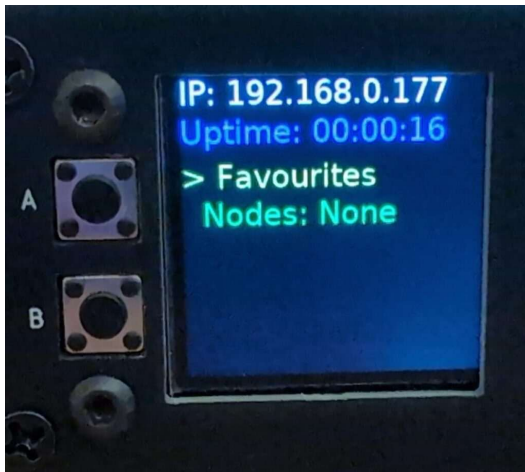


Enter the favourites menu by pressing button B when the word Favourites is selected by the '>' cursor



Press button A a few times to move to the chosen station and press the B button. This will connect to the station and take you to back the main screen

Note: if you are unable to connect to any favourites, your ASL3 credentials may be invalid. Verify them and re-enter using the config screen.

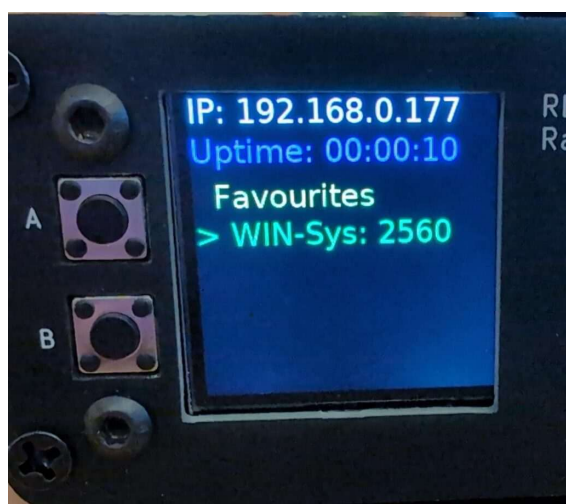

Disconnect from a station

With an active station shown on the main screen, use button A to navigate to it, then press button B to disconnect.

The main screen will display up to three currently connected nodes; if you are connected to more than three, use Allmon3 in a browser to manage the additional connections.


Accessing the RLNZ2 from any browser on your network.

The RLNZ2 has the AllStarLink web server running so the service can be administered from any browser on the network.

Enter the IP address (shown on the screen) of the RLNZ2 into the browser of your PC/Laptop/phone and this will bring up the regular AllStarLink 3 home screen.

The Node Links menu goes to the standard Allmon3 control system for manually connecting to nodes and viewing statistics.

The username for accessing allmon3 and the Web admin portal is **rln** and the password is the one you set via the initial setup screen.

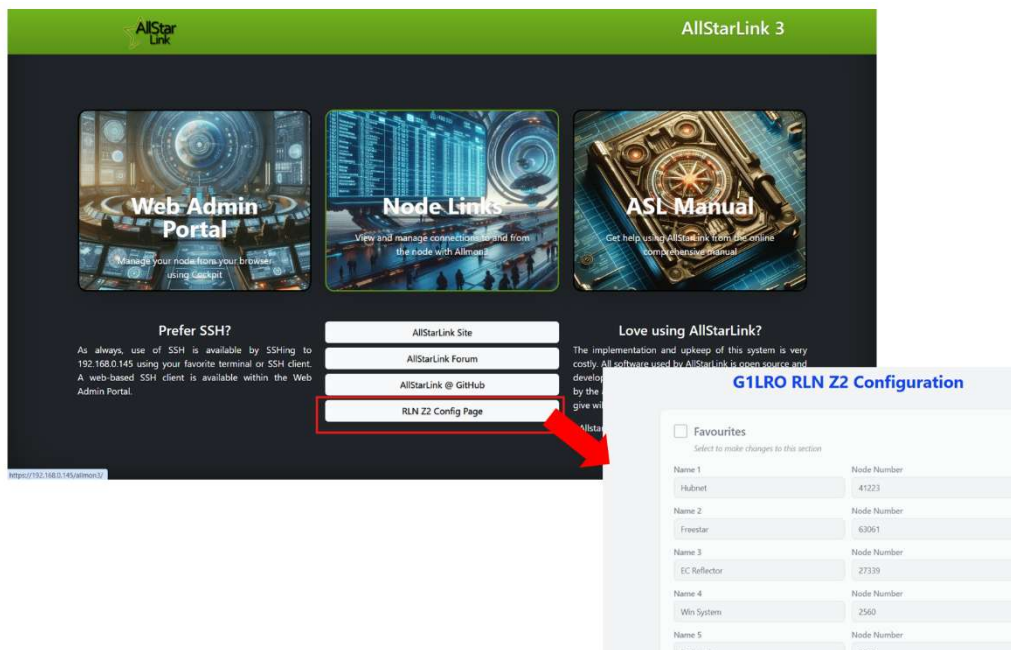

Note that there is an additional button to enter the RLNZ2 Config Page, this will allow you to manage your favourites list

Six favourites are configured from the web interface for use in the menu system. Bear in mind the limited screen width on the RLNZ2 when setting favourite names as each favourite entry has just one line.

The Wi-Fi and ASL settings can also be updated from this screen if required, so be aware that setting invalid Wi-Fi credentials will break the connection to the network and you'll need to reset these using RLNZ2 hotspot mode.

Accessing the RLNZ2 using the Hotspot feature

The Wi-Fi hotspot feature of the RLNZ2 can be invoked during startup by pressing the A button when the screen shows this option.



The two-button shutdown is not available during the hotspot mode.

To exit the hotspot mode, make an entry on the menu and the system will re-start. If you do not wish to make an entry, just select the favourites and save them unchanged. It's important to cleanly exit the menu rather than powering-off the unit to clear the message.

Passwords

The unit ships with the following default passwords set:

- Wi Fi hotspot password: **radioless**
- Web Admin Portal access: user **rln** – password **radioless***
- SSH access: user **rln** – password **radioless***
- AllMon3 & Node Links: user **rln** – password [not set]*

* The SSH, Web Portal and AllMon3 password are set to the same password from the initial setup menu.

If you want to change the password at any point, access the RLNZ2 menu from the main menu screen (reach via the unit IP address in a browser) or enter the hotspot mode and use the setup menu (ASL section).

Troubleshooting

Unable to connect to your Wi-Fi.

Most likely cause – incorrect credentials; check for numbers hiding as letters. Verify the credentials you are using with another device such as a mobile phone to be sure. Re-run the Wi-Fi setup wizard (press A after startup).

Other causes – low signal. The RLNZ2 has an internal antenna behind the front panel. Put the unit in an area with strong Wi-Fi for most reliable operation.

Try connecting to your phone hotspot to prove Wi-Fi connectivity.

No IP address displayed on LCD

Check and verify Wi-Fi credentials. Close down unit and re-start pressing A to enter hotspot mode and re-enter Wi-Fi credentials.

Unable to connect to ASL nodes

Most likely cause – if it is all nodes then your AllStarLink server credentials may be incorrect. Refer to the section on creating an account to find where to check an existing account.

If it's only one node, check that the node number is correct. Also, for some hubs there are several ASL node numbers — try a different one.

Try using Node Links (Allmon 3) on the web browser to connect to the desired nodes and if that gives any meaningful error messages.

Issues with your transmitted audio

If you are receiving reports about audio problems on your transmission then connect the Parrot node where your transmitted audio will be played back to you and you can identify the issue.

Low or too-loud audio can be caused by the microphone controls on the rear panel of the RLNZ2 being incorrectly set. Use the Parrot node to help set these correctly, or use the echo feature in the asl-menu Tune settings.

Mains hum on transmitted audio is most likely caused by a power-supply related problem with poor regulation or leakage current from the internal mains filter in the USB supply. Prove this by switching to a USB battery unit to power the unit and try alternative power supplies.

Unit shows 'Hardware Error' and won't start up.

The RLNZ2 software relies on a specific configuration of the internal hardware. If there is a problem with the hardware then the software will display an error and halt the system. Ensure the software image is used in the RLNZ2 hardware unit, it will not run in a generic Raspberry Pi.

Unit won't start

Check USB power into another device and try an alternative supply and cable.

If there is sign of the backlight being on or the Raspberry Pi being active (the RX lamp will glimmer showing the Raspberry Pi activity LED behind), then unplug the K1 connector and look in the large jack (K1 Mic) socket to see the Pi's LED clearly. If the Pi is not booting there may be an error code:

- **Continuous/Irregular Flashing:** The Pi is attempting to read the SD card, but usually fails to find a valid OS (try flashing a new image).

- **3 Green Flashes:** start.elf not found; boot partition is missing (try flashing a new image).
- **4 Green Flashes:** start.elf found but corrupt (try flashing a new image).
- **7 Green Flashes:** kernel.img not found (try flashing a new image).
- **8 Green Flashes:** SDRAM failure (hardware issue).

Most causes of the flashing error are a corrupted SD card contact G1LRO for a link to the latest software image to re-flash.

Loading a New Software Update

If there is a new software update, or to recover a corrupted SD card, then it will be necessary to re-flash the unit SD card.

Remove the SD card from the RLNZ2



The front panel sub-assembly is removed easily by pulling it forward from the chassis. The SD card is a push fit into the socket on the Raspberry Pi.

Take care when re-assembling the front panel. Align the 10-pin connector on the rear of the front-panel safely on to the pins on the main board. If installed incorrectly, the top of panel will not be lined up with the case lid.

Flashing the SD card image

Balena Etcher is recommended for re-flashing images for the RLNZ2.

Download the etcher program for your platform: <https://github.com/balena-io/etcher/releases>

- 1 Download image from the G1LRO provided link (do not unzip)
- 2 Insert sd card from the RLNZ2 into you computer (you may need an SD card adaptor)
- 3 Start belena Etcher
- 4 Click 'Flash from file'
- 5 Select your image as downloaded in step 1
- 6 Click 'Select target'
- 7 Select your sd card
- 8 Click 'Flash' and wait for the process to complete before removing the SD card


Re-install into the RLNZ2 and reassemble before applying power.

The new image may take up to 2 minutes to unpack itself in the RLNZ2 before booting to the startup screen.

Node Remote

The RLNZ2 is configured ready for use with the AllstarLink mobile App Node Remote created and maintained by M0DQW <https://dstarcomms.com/node-remote/>

Default credentials are set and the various firewall settings are already in place so all that is needed is a simple configuration of the Node Remote's App's login page:

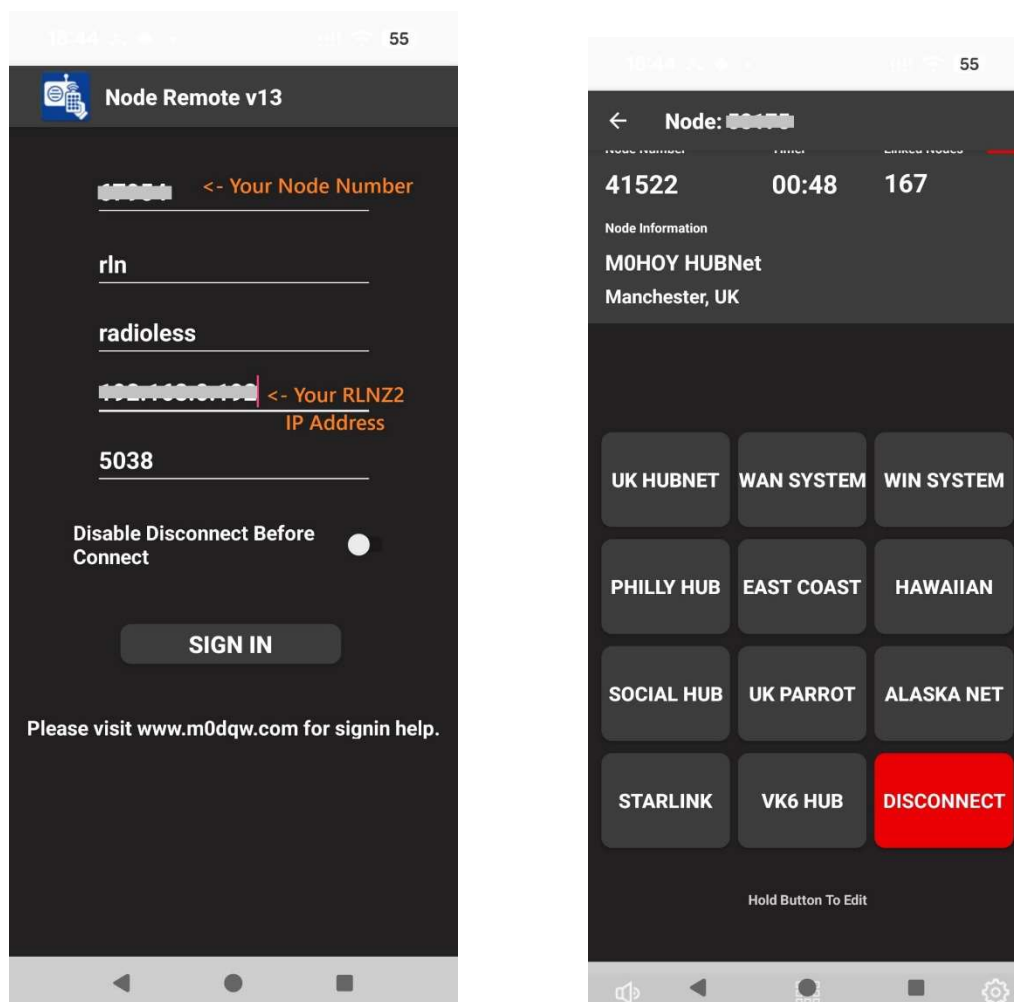

As per the image above, use a login name **rln** and a password **radioless**

Use the IP address shown on the display of the RLNZ2

Note: to increase reliability of the app, set your home router to provide a fixed address for the RLNZ2, normally available in the router's DHCP settings.

New Users: Getting an AllStarLink account

To obtain an AllStarLink node number and password, you must first create an account on the official AllStarLink website and then request a node through the portal.

Step 1: Create an Account and Verify Your Callsign

1. **Visit the Website:** Go to the [AllStarLink.org website](https://AllStarLink.org) and click on the "Login/Sign Up" link.
2. **Sign Up:** Follow the prompts to create a free account. You will need to provide your Amateur Radio call sign.
3. **Verify Information:** Verify your email address by clicking the link sent to your email. The AllStarLink system also needs to verify you are a valid ham radio operator.

Step 2: Request a New Node Number

1. **Log In to the Portal:** Once your account is set up and verified, log in to the [AllStarLink portal](#).
2. **Add a Server:** Navigate to the "Portal" and then "Server Settings". Click "add a new server" and provide details like a server name and location.
3. **Request a Node:** Go to "Node Settings" under your call sign and click "Continue" to request a new node. Select the server you just created from the dropdown menu and submit the request.
4. **Receive Your Node Number:** The request goes to the AllStarLink admin, and a new node number is typically assigned within 24 hours. Check your email or the nodes page for the assigned number.

Step 3: Obtain Your Node Password

The node password is automatically generated and available in the user portal after your node is assigned.

- **Locate the Password:** Log in to the AllStarLink portal, go to **Portal > Node Settings**, and select the specific node number. The associated password (sometimes a long, secret alphanumeric string) will be displayed on that page.
- **Use the Password for Configuration:** This is the password you will use in your AllStarLink software configuration file (e.g., iax.conf's register statement) when setting up your physical node, not your main AllStarLink website login password.

Note: If you forget your node password later, you can retrieve it from the same "Node Settings" page in the portal, provided you know your email address and node number.

RLNZ2 Quick start guide



1 Prepare these six pieces of information:

| | |
|--|--|
| Wi-Fi Access Point Name | |
| Wi-Fi Password | |
| AllStarLink Node Number | |
| AllStarLink Node Password | |
| Your Callsign | |
| Desired Password (letters & numbers only) | |

2 Power up the unit with the USB-C connector at the rear



3 Connect to Wi Fi: RLNZ2 then browse to 10.1.2.3

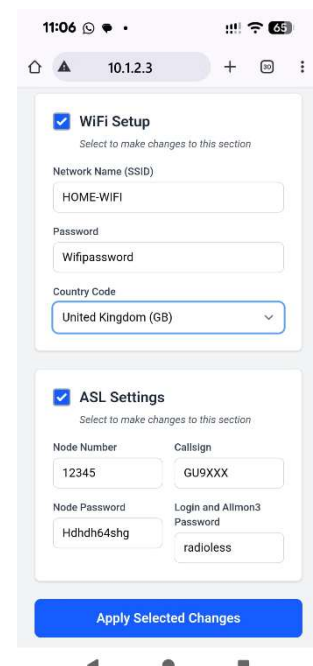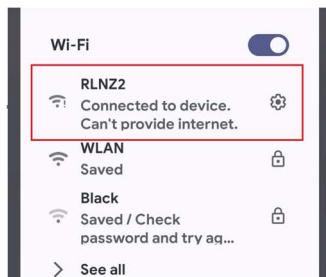

4 Enter the six pieces of information into the form

5 Apply, and system will restart, and is ready for use.