

## **Lime Microsystems Limited**

Surrey Technology Centre  
Occam Road  
The Surrey Research Park  
Guildford, Surrey GU2 7YG  
United Kingdom



Tel: +44 (0) 1483 685 063  
e-mail: [enquiries@limemicro.com](mailto:enquiries@limemicro.com)

## **LimeSDR-USB**

***- FPGA Gateware Description -***

## REVISION HISTORY

The following table shows the revision history of this document:

Date	Version	Description of Revisions
12/07/2018	1.0	Initial version
29/01/2019	1.1	Updated periphcfg register table 9.

# Table of Contents

REVISION HISTORY .....	2
<b>1 INTRODUCTION.....</b>	<b>4</b>
<b>2 FPGA GATEWARE FEATURES.....</b>	<b>5</b>
<b>3 GATEWARE DESCRIPTION .....</b>	<b>6</b>
3.1 Main block diagram.....	6
3.2 Clock network .....	7
3.3 Softcore processor – nios_cpu.....	8
3.3.1 Registers of fpgacfg module .....	11
3.3.2 Registers of pllcfg module .....	15
3.3.3 Registers of tstcfg module .....	17
3.3.4 Registers of periphcfg module.....	19
3.4 FX3 Slave FIFO interface – FX3_slaveFIFO5b.....	21
3.5 LMS7002 Receive and transmit interface – rxtx_top .....	23
3.5.1 Receive interface – rx_path_top .....	27
3.5.2 Transmit interface – tx_path_top .....	28
3.5.3 Waveform player – wfm_player_top .....	30
3.6 General periphery – general_periph_top.....	30
3.7 PLL module – pll_top.....	33
3.8 Board test module – tst_top.....	37
<b>4 EXAMPLES.....</b>	<b>39</b>
4.1 Accessing FPGA registers.....	39
4.2 Accessing LMS7002M registers.....	40
4.3 Periphery control .....	40
4.4 Configuring FPGA PLL module.....	41
4.4.1 RX PLL module - rxpll_top configuration (auto phase shift mode).....	41
4.4.2 TX PLL module - txpll_top configuration (auto phase shift mode).....	42
4.5 Controlling TX and RX data stream.....	43
4.6 Using WFM player .....	44

# 1 Introduction

This document contains functional description of FPGA gateware project suited for LimeSDR-USB board.

**FPGA project** - LimeSDR-USB\_lms7\_trx project can be downloaded from GitHub repository ([https://github.com/myriadr/LimeSDR-USB\\_GW](https://github.com/myriadr/LimeSDR-USB_GW)).

**Required hardware** – LimeSDR-USB v1.4 board.

**Development software** – project is created with Altera Quartus prime, Version 15.1.2 Build 193 02/01/2016 SJ Lite Edition with Cyclone IV device support. Mentioned software edition is free and can be downloaded from (<https://www.altera.com>). Although other Altera Quartus prime software versions supporting Cyclone IV family might work as well but it is recommended to use same version as project was created.

DRAFT

## 2 FPGA gateway features

Gateway contains following features:

- Interface to LMS7002 LimeLight™ digital IQ interface in TRXIQ double data rate mode;
- Real time data transfer between PC and LMS7002 chip.
- Connection to FX3 Slave FIFO interface for transferring data through USB3.0.
- TX samples synchronization with RX samples time stamp;
- SPI connection between LMS7002 chip and other on-board devices;
- WFM player which enables to load waveform to external DDR2 memory from USB3.0 host and translate to LMS7002 RXIQ interface.
- Reconfigurable PLL blocks for LMS7002 clocking.
- Internal SPI registers for FPGA control.

### 3 Gateway description

This chapter describes main modules of LimeSDR-USB\_lms7\_trx project.

#### 3.1 Main block diagram

Cyclone IV FPGA provides GPIF II interface with FX3 USB3.0 controller. There are two endpoints (EP0F and EP8F) implemented for control data and two endpoints for stream data (EP01 and EP81). Control endpoints are connected to NIOS II softcore processor which provides SPI and I2C communication interfaces for LMS7002M chip, TCXO DAC, ADF4002 phase detector, LM75 temperature sensor. NIOS also provides access to internal SPI configuration registers. Stream endpoints are dedicated for receiving and sending IQ data from/to LMS7002M. **Figure 1** contains top block diagram with main modules. Description of main FPGA instances can be found in **Table 1**.

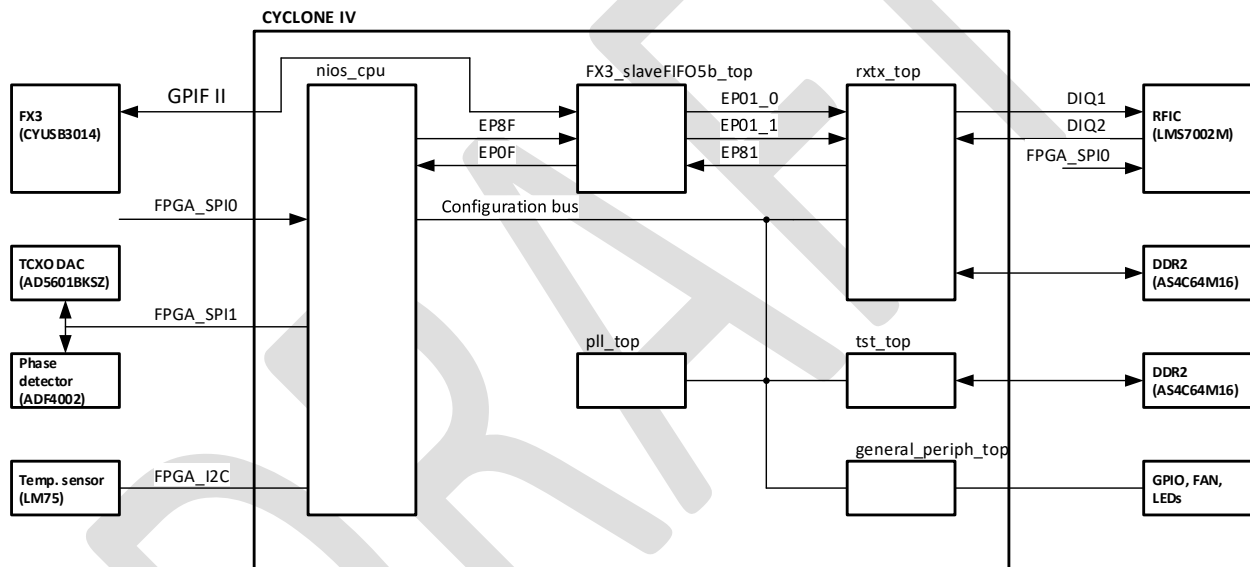



Figure 1 Top block diagram

Table 1 Description of main instances

Instance	Description
nios_cpu	NIOS II softcore processor with memory registers. Provides periphery control. See <b>3.3 Softcore processor – nios_cpu</b> .
FX3_slaveFIFO5b_top	Provides data transfer between external FX3 SuperSpeed USB 3.0 peripheral controller and FPGA. See <b>3.4 FX3 Slave FIFO interface – FX3_slaveFIFO5b</b> .
rxtx_top	Receive and transmit logic between FPGA and external LMS7002 transceiver. See <b>3.5 LMS7002 Receive and transmit interface – rxtx_top</b> .
general_periph_top	Control module for onboard periphery such as LEDs, GPIO, FAN. See <b>3.6 General periphery – general_periph_top</b> .
pll_top	Module provides required clocks for rxtx_top module. See <b>3.7 PLL module – pll_top</b> .
tst_top	Board test logic to test external DDR2 memory and external clocks. See <b>3.8 Board test module – tst_top</b> .

## 3.2 Clock network

**Figure 2** shows dataflow between main modules and clocking scheme. More details can be found in **Table 2**.

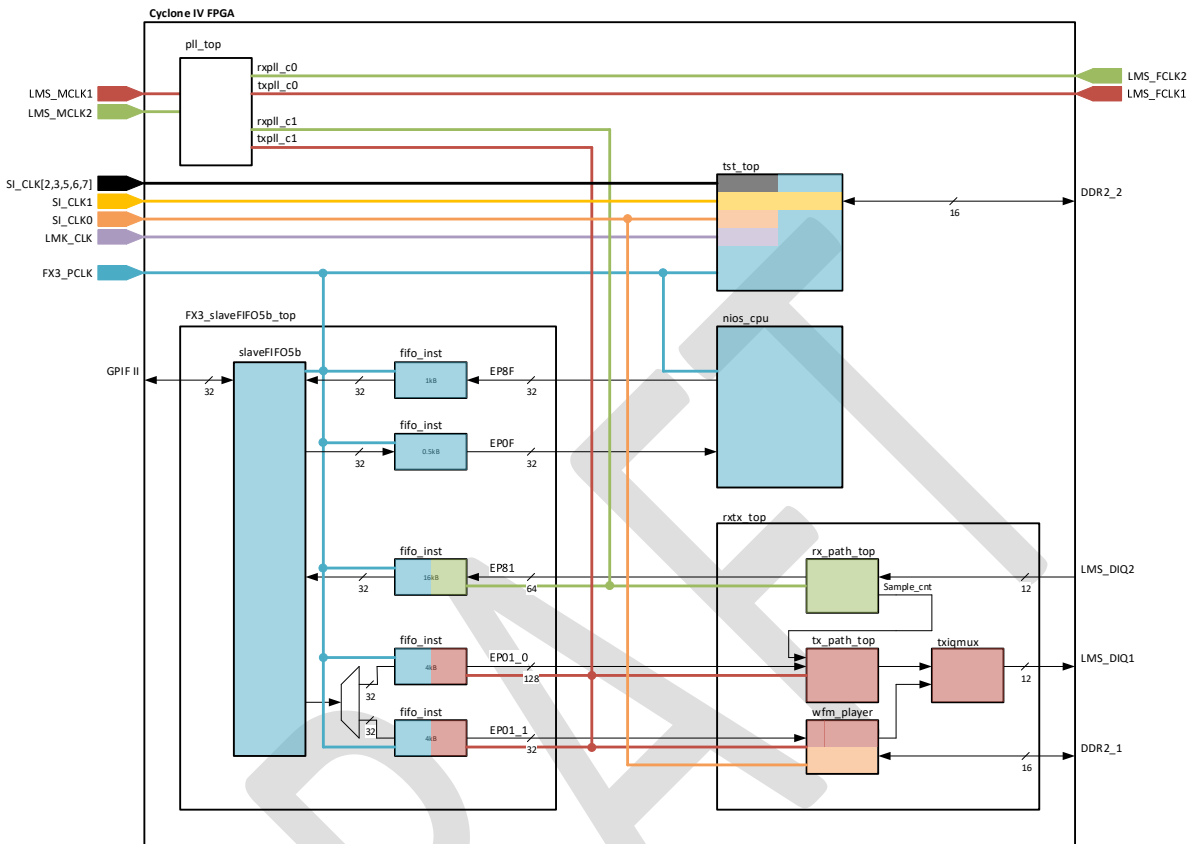

**Figure 2** Gateway clock network


**Table 2** Clock network description

Clock name	Frequency, MHz	Description
LMS_MCLK1	Configurable	Sample clock from LMS7002M IC. Used as a reference clock for TXPLL.
LMS_MCLK2	Configurable	Sample clock from LMS7002M IC. Used as a reference clock for RXPLL.
LMS_FCLK1	Configurable	Sample clock, LMS7002M IC latches LMS_DIQ1 bus signals using this clock.
LMS_FCLK2	Configurable	Not used
txpll_c1	Configurable	FPGA launches LMS_DIQ1 bus signals using this clock. Used for clocking FPGA TX modules.
rxpll_c1	Configurable	FPGA latches LMS_DIQ2 bus signals using this clock. Used for clocking FPGA RX modules.
LMK_CLK	30.72	Reference clock from LMK00105 clock buffer.
FX3_PCLK	100	FX3 USB3.0 GPIF II interface clock.
SI_CLK0	27	Used for DDR2_1 memory controller as a reference clock for controller PLL.
SI_CLK1	27	Used for DDR2_2 memory controller as a reference clock for controller PLL.
SI_CLK2	27	Connected only to tst_top module

Clock name	Frequency, MHz	Description
SI_CLK3	27	
SI_CLK5	27	
SI_CLK6	27	
SI_CLK7	27	

### 3.3 Softcore processor – nios\_cpu

**Figure 3** shows block diagram of nios\_cpu module. This module contains softcore ALTERA NIOS II CPU and user accessible configuration registers for other modules. More detailed description can be found in **Table 3**. Module generic parameters are explained in **Table 4** and ports are described in **Table 5**.

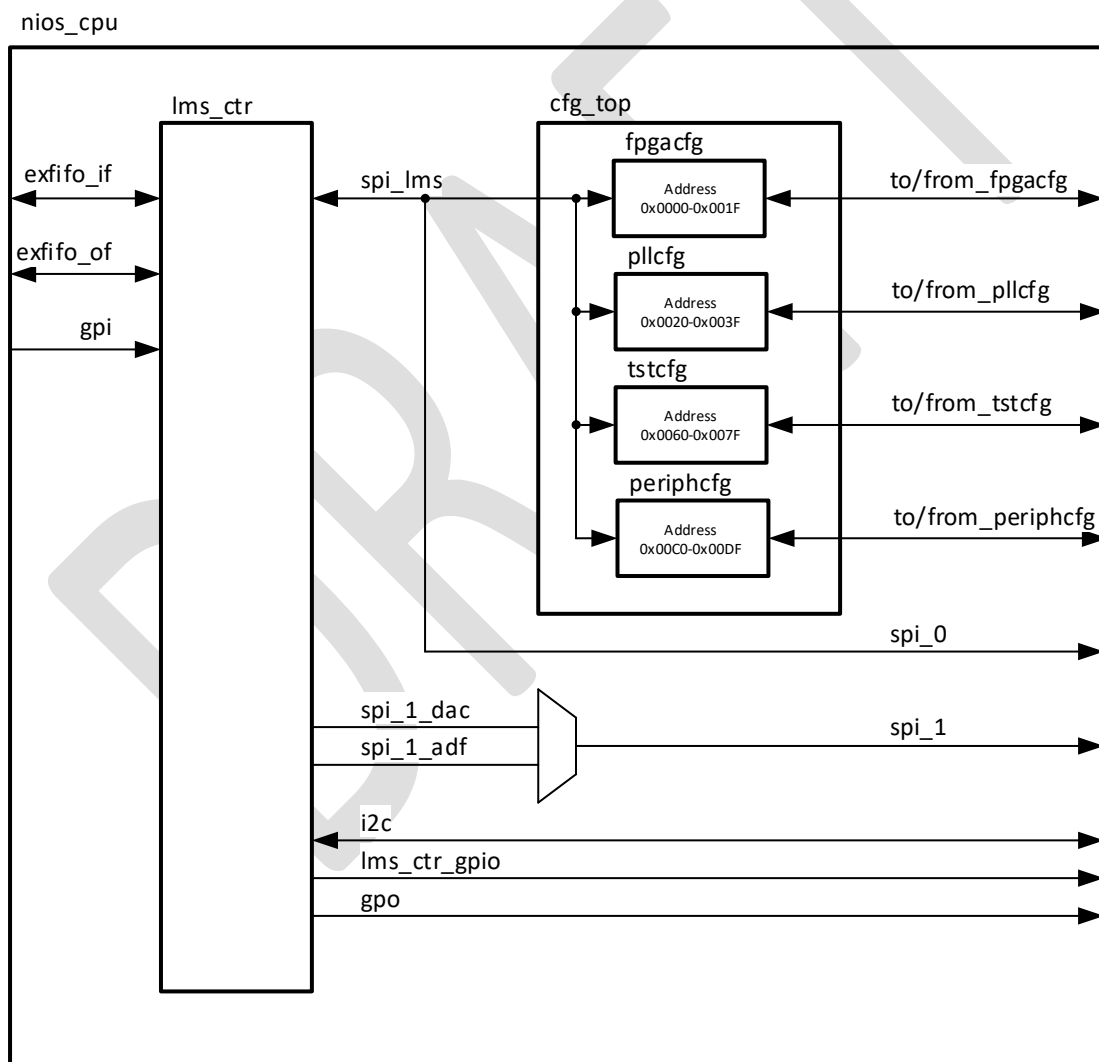

**Figure 3** nios\_cpu block diagram



**Table 3 Description of nios\_cpu instances**

Instance	Description
lms_ctr	NIOS II softcore processor instance. Processor constantly monitors input FIFO buffer connected to <i>exfifo_if</i> ports and reads one packet containing 64 bytes. See <b>LMS64C control protocol</b> document for protocol description and command list. NIOS CPU executes received command and writes 64 bytes response packet to FIFO buffer connected to <i>exfifo_of</i> ports.
cfg_top	Wrapper module for SPI configuration registers.
fpgacfg	General configuration 32x16b addressable registers. Address range 0x0000 - 0x001F. See <b>Table 6</b> for register description.
pllcfg	PLL configuration registers. Address range 0x0020 - 0x003F. See <b>Table 7</b> for register description.
tstcfg	Test module configuration registers. Address range 0x0060 - 0x007F. see <b>Table 8</b> for register description.
periphcfg	Peripheral configuration registers. Address range 0x0020 - 0x003F. See <b>Table 9</b> for register description.

**Table 4 nios\_cpu module parameters**

Parameter	Type	Default	Description
Start address of SPI registers			
FPGACFG START ADDR	integer	0	Start address of SPI register modules. Has to be multiple of 32
PLLCFG START ADDR	integer	32	
TSTCFG START ADDR	integer	64	
PERIPHCFG START ADDR	integer	192	

**Table 5 nios\_cpu module ports**

Port	Type	Width	Description
clk	in	1	Free running clock. 100MHz
reset_n	in	1	Asynchronous, active low reset
Control data FIFO			
exfifo_if_d	in	32	External control input FIFO data
exfifo_if_rd	out	1	External control input FIFO read request
exfifo_if_rdempty	in	1	External control input FIFO read empty
exfifo_of_d	out	32	External control output FIFO data
exfifo_of_wr	out	1	External control output FIFO write request
exfifo_of_wrfull	in	1	External control output FIFO write full
exfifo_of_rst	out	1	External control output FIFO reset request, active high
SPI 0			
spi_0_MISO	in	1	SPI 0 master input
spi_0_MOSI	out	1	SPI 0 master output
spi_0_SCLK	out	1	SPI 0 clock
spi_0_SS_n	out	5	SPI 0 slave select. spi_0_SS_n[0] - connected to LMS7002, spi_0_SS_n[1] - to internal SPI modules
SPI 1			
spi_1_MOSI	out	1	SPI 1 master output

Port	Type	Width	Description
spi_1_SCLK	out	1	SPI 1 clock
spi_1_SS_n	out	2	SPI 1 slave select. spi_1_SS_n[0] - connected to onboard TCXO DAC, spi_1_SS_n[1] - to phase detector ADF4002
I2C			
i2c_scl	inout	1	I2C bus clock, connected to temperature sensor and EEPROM memory.
i2c_sda	inout	1	I2C bus data, connected to temperature sensor and EEPROM memory.
General purpose I/O			
gpi	in	8	Not used
gpo	out	8	gpo[0] - indicates NIOS activity. 0 - Idle, 1 - Busy. gpo[7-1] - not used
LMS7002 control			
lms_ctr_gpio	out	4	lms_ctr_gpio[0] - LMS7002 reset. lms_ctr_gpio[3-1] - not used
Configuration registers			
from_fpgacfg	out	512	Input/output ports from/to SPI configuration registers
to_fpgacfg	in	512	
from_pllcfg	out	512	
to_pllcfg	in	512	
from_tstcfg	out	512	
to_tstcfg	in	512	
to_tstcfg_from_rxtx	in	512	
to_periphcfg	in	512	
from_periphcfg	out	512	

### 3.3.1 Registers of fpgacfg module

**Table 6 Register description of fpgacfg module**

Address	Def. value	Bits	Name	Description
0x0000		Board identification number		
		15-0	Board ID	LimeSDR-USB (Default 000E)
0x0001		Gateware version control		
		15-0	GW_VER	Gateware version number
0x0002		Gateware revision control		
		15-0	GW_REV	Gateware revision number
0x0003		Board version control		
		15-7	Reserved	
		6-4	BOM_VER	Bill of material version
		3-0	HW_VER	Hardware version.
0x0004	0000	15-0	Reserved	
0x0005	0000	Clock source selection for TX and RX interfaces		
		15-2	Reserved	
		1	DRCT_CLK_EN	RX clk: 0 - PLL source (Default) 1 - Direct clock source
		0		TX clk: 0 - PLL source (Default) 1 - Direct clock source
0x0006	0000	15-0	Reserved	
0x0007	0303	RX TX MIMO Channel control		
		15-10	Reserved	
		9	CH_EN	TX ch. 1: 0 - Disabled 1 - Enabled (Default)
		8		TX ch. 0: 0 - Disabled 1 - Enabled (Default)
		7-2	Reserved	
		1	CH_EN	RX ch. 1: 0 - Disabled 1 - Enabled (Default)
		0		RX ch. 0: 0 - Disabled 1 - Enabled (Default)
0x0008	0102	DIQ interface control		
		15-11	Reserved	
		10	DLB_EN	Not used
		9	SYNCH_DIS	Packets synchronization using timestamps: 0 - Enabled 1 - Disabled (Default)
		8	MIMO_INT_EN	MIMO mode: 0 - Disabled 1 - Enabled (Default)
		7	TRIQ_PULSE	TRXIQ_pulse mode: 0 - OFF (Default) 1 - ON
		6	DDR_EN	DIQ interface mode: 0 - SDR 1 - DDR (Default)
		5	MODE	Limelight port mode: 0 - TRXIQ (Default) 1 - JESD207 (Currently not implemented)
		4-2	Reserved	
		1-0	SMPL_WIDTH	Interface sample width selection: "10" - 12bit (Default) "01" - Do not use

Address	Def. value	Bits	Name	Description
				"00" - 16bit
				<b>Packet control</b>
		15-2	Reserved	
0x0009	0003	1	<b>TXPCT_LOSS_CLR</b>	TX packets dropping flag clear: 0 - Normal operation ( <b>Default</b> ) 1 - Rising edge clears flag
		0	<b>SMPL_NR_CLR</b>	Reset timestamp: 0 - Normal operation ( <b>Default</b> ) 1 - Timestamp is cleared
				<b>RX and TX module control</b>
		15-10	Reserved	
		9	<b>TX_PTRN_EN</b>	Test pattern on TX: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
		8	<b>RX_PTRN_EN</b>	Test pattern on RX: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
		7-2	Reserved	
		1	<b>TX_EN</b>	TX chain: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
		0	<b>RX_EN</b>	RX chain: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
0x000B	0000	15-0	Reserved	
				<b>WFM player control 1</b>
		15-2	Reserved	
0x000C	0003	1	<b>WFM_CH_EN</b>	WFM ch.1: 0 - Disabled 1 - Enabled ( <b>Default</b> )
		0		WFM ch.0: 0 - Disabled 1 - Enabled ( <b>Default</b> )
				<b>WFM player control 2</b>
		15-3	Reserved	
		2	<b>WFM_LOAD</b>	WFM player file load: 0 to 1 transition starts WFM file loading 0 - WFM file loading disabled ( <b>Default</b> )
		1	<b>WFM_PLAY</b>	WFM player loaded file play enable: 0 - Disabled 1 - Enabled ( <b>Default</b> )
		0	Reserved	
				<b>WFM player control 3</b>
		15-2	Reserved	
0x000E	0002	1-0	<b>WFM_SMPL_WIDTH</b>	WFM player sample width control: "10" - 12bit, ( <b>Default</b> ) "01" - Do not use "00" - 16bit
0x000F	0000	15-0	Reserved	
0x0010	0000	15-0	Reserved	
0x0011	0000	15-0	Reserved	
				<b>Controlled SPI enable</b>
		15-8	Reserved	Not used
		7	<b>SPI_SS7</b>	
		6	<b>SPI_SS6</b>	
		5	<b>SPI_SS5</b>	
		4	<b>SPI_SS4</b>	
		3	<b>SPI_SS3</b>	
		2	<b>SPI_SS2</b>	
		1	<b>SPI_SS1</b>	
		0	<b>SPI_SS0</b>	

Address	Def. value	Bits	Name	Description
0x0013	6F6F	<b>LMS7002 MISC pin control</b>		
		15	Reserved	Not used
		14	<b>LMS2_RXEN</b>	
		13	<b>LMS2_TXEN</b>	
		12	<b>LMS2_TXNRX2</b>	
		11	<b>LMS2_TXNRX1</b>	
		10	<b>LMS2_CORE_LDO_EN</b>	
		9	<b>LMS2_RESET</b>	
		8	<b>LMS2_SS</b>	
		7	Reserved	
		6	<b>LMS1_RXEN</b>	RX hard enable: 0 - Disabled 1 - Enabled ( <b>Default</b> )
		5	<b>LMS1_TXEN</b>	TX hard enable: 0 - Disabled 1 - Enabled ( <b>Default</b> )
		4	<b>LMS1_TXNRX2</b>	Port 2 mode selection: 0 - TXIQ ( <b>Default</b> ) 1 - RXIQ
		3	<b>LMS1_TXNRX1</b>	Port 1 mode selection: 0 - TXIQ 1 - RXIQ ( <b>Default</b> )
		2	<b>LMS1_CORE_LDO_EN</b>	Internal LDO control: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
		1	<b>LMS1_RESET</b>	Hardware reset: 0 - Reset activated 1 - Reset inactive ( <b>Default</b> )
		0	<b>LMS1_SS</b>	Not used
0x0014	0000	15-0	Reserved for lms3_4	
0x0015	0000	15-0	Reserved for lms5-6	
0x0016	0000	15-0	Reserved for lms7-8	
0x0017	0000	<b>GPIO for external periphery</b>		
		15-14	Reserved	Not used
		13	<b>GPIO13</b>	
		12	<b>GPIO12</b>	
		11	<b>GPIO11</b>	
		10	<b>GPIO10</b>	
		9	<b>GPIO9</b>	
		8	<b>GPIO8</b>	
		7	<b>GPIO7</b>	
		6	<b>GPIO6</b>	Ch. B shunt: 0 - Disabled 1 - Enabled ( <b>Default</b> )
		5	<b>GPIO5</b>	Ch. B attenuator 0 - Disabled ( <b>Default</b> ) 1 - Enabled
		4	<b>GPIO4</b>	RF loopback ch. B: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
		3	<b>GPIO3</b>	Reserved
		2	<b>GPIO2</b>	Ch. A shunt: 0 - Disabled 1 - Enabled ( <b>Default</b> )
		1	<b>GPIO1</b>	Ch. A attenuator: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
		0	<b>GPIO0</b>	RF loopback ch. A: 0 - Disabled ( <b>Default</b> ) 1 - Enabled
0x0018	0001	15-1	Reserved	

Address	Def. value	Bits	Name	Description
		0	<b>DEV_CTRL0</b>	Not used
0x0019		15-0	Reserved	
0x001A	0000	<b>Onboard led control</b>		
		15	Reserved	
		14	Reserved	
		13	Reserved	
		12	Reserved	
		11	Reserved	
		10	Reserved	
		9	Reserved	
		8	Reserved	
		7	Reserved	
		6	<b>FPGA_LED2_G</b>	Green LED2 control, do not turn on while red LED2 is on: 0 - OFF ( <b>Default</b> ) 1 - ON
		5	<b>FPGA_LED2_R</b>	Red LED2 control, do not turn on while green LED2 is on: 0 - OFF ( <b>Default</b> ) 1 - ON
0x001B	0000	4	<b>FPGA_LED2_OVRD</b>	LED2 control override: 0 - OFF ( <b>Default</b> ) 1 - ON
		3	Reserved	
		2	<b>FPGA_LED1_G</b>	Green LED1 control, do not turn on while red LED1 is on: 0 - OFF ( <b>Default</b> ) 1 - ON
		1	<b>FPGA_LED1_R</b>	Red LED1 control, do not turn on while green LED1 is on: 0 - OFF ( <b>Default</b> ) 1 - ON
		0	<b>FPGA_LED1_OVRD</b>	LED1 control override: 0 - OFF ( <b>Default</b> ) 1 - ON
		15-8	Reserved	
		7	Reserved	
		6	Reserved	
		5	Reserved	
		4	Reserved	
0x001C	0000	3	Reserved	
		2	Reserved	
		1	Reserved	
		0	Reserved	
		15-3	Reserved	Onboard led control
0x001D	0000	2	<b>FX3_LED_G</b>	Green FX3 control, do not turn on while red FX3 is on: 0 - OFF ( <b>Default</b> ) 1 - ON
		1	<b>FX3_LED_R</b>	Red FX3 control, do not turn on while green FX3 is on: 0 - OFF ( <b>Default</b> ) 1 - ON
		0	<b>FX3_LED_OVRD</b>	FX3 control override: 0 - OFF ( <b>Default</b> ) 1 - ON
0x001E	0000	15-0	Reserved	
0x001F	0000	15-0	Reserved	

### 3.3.2 Registers of pllcfg module

**Table 7 Register description of pllcfg module**

Address	Def. value	Bits	Name	Description
0x0020	0000	15-0	Reserved	
0x0021	0001	PLL configuration status		
		15-4	Reserved	
		3	AUTO_PHCFG_ERR	Auto phase configuration error status: 0 – no error 1 – Error
		2	AUTO_PHCFG_DONE	Auto phase configuration status: 0 – Not done 1 – Done
		1	BUSY	PLL reconfiguration busy status: 0 – Idle 1 – Busy
		0	DONE	PLL configuration status: 0 – Not done 1 – Done
0x0022	0000	PLL lock status		
		15-2	Reserved	
		1	PLL_LOCK	RX PLL: 0 – No lock 1 – Locked
0	TX PLL: 0 – No lock 1 – Locked			
0x0023	0000	PLL control		
		15	Reserved	
		14	PHCFG_MODE	PLL phase configuration mode: 0 - Manual 1 - AUTO
		13	PHCFG_UpDn	Phase shift direction: 0 - Down 1 - Up
		12-8	CNT_IND	Counter index for phase shift: 0000 - All output counters 0001 - M counter 0010 - C0 counter 0011 - C1 counter
		7-3	PLL_IND	PLL index for reconfiguration: 0000 - TX PLL 0001 - RX PLL Do not use other index values
		2	PLL_RST_START	Reset bit for PLL: 0 - Reset inactive 0 to 1 transition triggers reset for PLL with selected index
		1	PHCFG_START	Phase shift start: 0 - Phase shift process inactive 0 to 1 - transition triggers phase shift process for PLL with selected indexes
		0	PLL_CFG_START	PLL reconfiguration start: 0 - Phase shift process inactive 0 to 1 - transition triggers phase shift process for PLL with selected indexes
0x0024	0000	PLL reconfiguration settings		
		15-0	CNT_PHASE	Counter phase value
0x0025	01F0	15	Reserved	
		14-11	PLL_CFG_BS	Bandwidth setting (Not used)
		10-8	CHP_CURR	PLL charge Pump Current <sup>(1)</sup>
		7	PLL_CFG_VCODIV	PLL VCO division value

Address	Def. value	Bits	Name	Description
				0 = 2 1 = 1
		6-2	PLLCFG_LF_RES	PLL Loop filter resistance <sup>(1)</sup>
		1-0	PLLCFG_LF_CAP	PLL Loop filter capacitance <sup>(1)</sup>
0x0026	0001	15-4	Reserved	Counter bypass and odd division control bits <sup>(1)</sup>
		3	M_ODDDIV	
		2	M_BYP	
		1	N_ODDDIV	
		0	N_BYP	
0x0027	555A	15	C7_ODDDIV	
		14	C7_BYP	
		13	C6_ODDDIV	
		12	C6_BYP	
		11	C5_ODDDIV	
		10	C5_BYP	
		9	C4_ODDDIV	
		8	C4_BYP	
		7	C3_ODDDIV	
		6	C3_BYP	
		5	C2_ODDDIV	
		4	C2_BYP	
		3	C1_ODDDIV	
		2	C1_BYP	
		1	C0_ODDDIV	
		0	C0_BYP	
0x0028	5555	15	C15_ODDDIV	
		14	C15_BYP	
		13	C14_ODDDIV	
		12	C14_BYP	
		11	C13_ODDDIV	
		10	C13_BYP	
		9	C12_ODDDIV	
		8	C12_BYP	
		7	C11_ODDDIV	
		6	C11_BYP	
		5	C10_ODDDIV	
		4	C10_BYP	
		3	C9_ODDDIV	
		2	C9_BYP	
		1	C8_ODDDIV	
		0	C8_BYP	
0x0029		15-0	Reserved	
0x002A	0000	15-8	N_HCNT[15:8]	N counter values <sup>(1)</sup>
		7-0	N_LCNT[7:0]	
0x002B	0000	15-8	M_HCNT[15:8]	M counter values <sup>(1)</sup>
		7-0	M_LCNT[7:0]	
0x002C	0000	15-0	M_FRAC[15:0]	M fractional counter values (Only for fractional PLL) <sup>(1)</sup>
0x002D	0000	15-0	M_FRAC[31:16]	
0x002E	0000	15-8	C0_HCNT[15:8]	C0 counter values <sup>(1)</sup>
		7-0	C0_LCNT[7:0]	
0x002F	0000	15-8	C1_HCNT[15:8]	C1 counter values <sup>(1)</sup>
		7-0	C1_LCNT[7:0]	
0x0030	0000	15-8	C2_HCNT[15:8]	C2counter values <sup>(1)</sup>
		7-0	C2_LCNT[7:0]	
0x0031	0000	15-8	C3_HCNT[15:8]	C3 counter values <sup>(1)</sup>
		7-0	C3_LCNT[7:0]	
0x0032	0000	15-8	C4_HCNT[15:8]	C4 counter values <sup>(1)</sup>
		7-0	C4_LCNT[7:0]	
0x0033	0000	15-8	C5_HCNT[15:8]	C5 counter values <sup>(1)</sup>
		7-0	C5_LCNT[7:0]	
0x0034	0000	15-8	C6_HCNT[15:8]	C6 counter values (1)



Address	Def. value	Bits	Name	Description
		7-0	C6_LCNT[7:0]	
0x0035	0000	15-8	C7_HCNT[15:8]	C7 counter values <sup>(1)</sup>
		7-0	C7_LCNT[7:0]	
0x0036	0000	15-8	C8_HCNT[15:8]	C8 counter values <sup>(1)</sup>
		7-0	C8_LCNT[7:0]	
0x0037	0000	15-8	C9_HCNT[15:8]	C9 counter values <sup>(1)</sup>
		7-0	C9_LCNT[7:0]	
0x0038		15-0	Reserved	Reserved for C10-C15 counter values
0x0039		15-0	Reserved	
0x003A		15-0	Reserved	
0x003B		15-0	Reserved	
0x003C		15-0	Reserved	
0x003D		15-0	Reserved	
0x003E	0FFF	Auto phase shift options		
			AUTO_PHCFG_SMPLS	Samples to compare in auto phase shift mode
0x003F	0002		AUTO_PHCFG_STEP	Step size for auto phase

Note 1: For detailed description see "Cyclone IV Device Handbook", Chapter 5. Clock Networks and PLLs in Cyclone IV Devices.

### 3.3.3 Registers of tstcfg module

**Table 8 Register description of tstcfg module**

Address	Def. value	Bits	Type	Name	Description
0x0060	00F0	SPI signature			
		15-8		Reserved	
		7-4	R	SPI_SIGN_REZULT	Inverted bits from SPI_SIGN register
		3-0	R/W	SPI_SIGN	SPI module test register.
		Test enable			
0x0061	0000	15-6		Reserved	
		5	R/W	DDR2_2_TST_EN	DDR2_2 memory test: 0 - Disabled (Default) 1 - Enabled
		4	R/W	DDR2_1_TST_EN	DDR2_2 memory test: 0 - Disabled (Default) 1 - Enabled
		3	R/W	ADF_TST_EN	Phase detector test: 0 - Disabled (Default) 1 - Enabled
		2	R/W	VCTCXO_TST_EN	VCTCXO test: 0 - Disabled (Default) 1 - Enabled
		1	R/W	Si5351C_TST_EN	Si5351C clock test: 0 - Disabled (Default) 1 - Enabled
		0	R/W	FX3_PCLK_TST_EN	FX3 PCLK clock test: 0 - Disabled (Default) 1 - Enabled
0x0062				Reserved	
0x0063	0000	Error insertion			
		15-6		Reserved	
		5	R/W	DDR2_2_TST_FRC_ERR	DDR2_2 insert error to memory test: 0 - Disabled (Default) 1 - Enabled
		4	R/W	DDR2_1_TST_FRC_ERR	DDR2_1 insert error to memory test: 0 - Disabled (Default) 1 - Enabled
		3	R/W	ADF_TST_FRC_ERR	Insert error to phase detector test:

Address	Def. value	Bits	Type	Name	Description	
					0 - Disabled ( <b>Default</b> ) 1 - Enabled	
		2	R/W	VCTCXO_TST_FRC_ERR	Insert error to VCTCXO test: 0 - Disabled ( <b>Default</b> ) 1 - Enabled	
		1	R/W	Si5351C_TST_FRC_ERR	Insert error to Si5351C clock test: 0 - Disabled ( <b>Default</b> ) 1 - Enabled	
		0	R/W	FX3_PCLK_TST_FRC_ERR	Insert error to FX3 PCLK clock test: 0 - Disabled ( <b>Default</b> ) 1 - Enabled	
0x0064				Reserved		
0x0065	0000	Test status				
		15-6		Reserved		
		5	R	DDR2_2_TST_CMPLT	DDR2_2 test status: 0 - Not completed 1 - Completed	
		4	R	DDR2_1_TST_CMPLT	DDR2_1 test status: 0 - Not completed 1 - Completed	
		3	R	ADF_TST_CMPLT	Phase detector test status: 0 - Not completed 1 - Completed	
		2	R	VCTCXO_TST_CMPLT	VCTCXO test status: 0 - Not completed 1 - Completed	
		1	R	Si5351C_TST_CMPLT	Si5351C clock test status: 0 - Not completed 1 - Completed	
		0	R	FX3_PCLK_TST_CMPLT	FX3 PCLK clock test status: 0 - Not completed 1 - Completed	
0x0066				Reserved		
Test results						
0x0067	0000	15-6		Reserved		
		5	R	DDR2_2_TST_REZ	DDR2_2 test result: 0 - Fail 1 - Pass	
		4	R	DDR2_1_TST_REZ	DDR2_1 test result: 0 - Fail 1 - Pass	
		3	R	ADF_TST_REZ	Not used	
		2	R	VCTCXO_TST_REZ	Not used	
		1	R	Si5351C_TST_REZ	Not used	
		0	R	FX3_PCLK_TST_REZ	Not used	
Clock test counter values						
0x0068				Reserved		
0x0069			R	FX3_CLK_CNT	FX3 PCLK clock counter value	
0x006A			R	Si5351C_CLK0_CNT	Si5351C CLK0 counter value	
0x006B			R	Si5351C_CLK1_CNT	Si5351C CLK1 counter value	
0x006C			R	Si5351C_CLK2_CNT	Si5351C CLK2 counter value	
0x006D			R	Si5351C_CLK3_CNT	Si5351C CLK3 counter value	
0x006E				Reserved		
0x006F			R	Si5351C_CLK5_CNT	Si5351C CLK5 counter value	
0x0070			R	Si5351C_CLK6_CNT	Si5351C CLK6 counter value	
0x0071			R	Si5351C_CLK7_CNT	Si5351C CLK7 counter value	
0x0072			R	LMK_CLK_CNT_L	LMK clock counter value	
0x0073			R	LMK_CLK_CNT_H		
0x0074			R	ADF_CNT	ADF transition count value	
0x0075				Reserved		

Address	Def. value	Bits	Type	Name	Description
		DDR2_1 detailed test results 1			
0x0076		15-3		Reserved	
		2	R	DDR2_1_TST_FAIL	DDR2_1 test result: 0 - Test not completed 1 - Fail
		1	R	DDR2_1_TST_PASS	DDR2_1 test result: 0 - Test not completed 1 - Pass
		0	R	DDR2_1_TST_CMPLT	DDR2_1 test result: 0 - Test not completed 1 - Test complete
0x0077		DDR2_1 detailed test results 2			
		15-0	R	DDR2_1_PNF_PER_BIT_L	DDR2_1 data [15:0] bus pas not fail per bit: 0 - Fail 1 - Pass
0x0078		DDR2_1 detailed test results 3			
		15-0	R	DDR2_1_PNF_PER_BIT_H	DDR2_1 data [31:16] bus pas not fail per bit: 0 - Fail 1 - Pass
0x0079		15-0		Reserved	
0x007A		DDR2_2 detailed test results 1			
		15-3		Reserved	
		2	R	DDR2_2_TST_FAIL	DDR2_2 test result: 0 - Test not completed 1 - Fail
		1	R	DDR2_2_TST_PASS	DDR2_2 test result: 0 - Test not completed 1 - Pass
0x007B		DDR2_2 detailed test results 2			
		15-0	R	DDR2_2_PNF_PER_BIT_L	DDR2_2 data [15:0] bus pas not fail per bit: 0 - Fail 1 - Pass
0x007C		DDR2_2 detailed test results 3			
		15-0	R	DDR2_2_PNF_PER_BIT_H	DDR2_2 data [31:16] bus pas not fail per bit: 0 - Fail 1 - Pass
0x007D	AAAA	TX test pattern 1			
		15-0	R/W	TX_TST_I	TX test pattern I sample value
0x007E	5555	TX test pattern 2			
		15-0	R/W	TX_TST_Q	TX test pattern Q sample value
0x007F		15-0		Reserved	

### 3.3.4 Registers of periphcfg module

Table 9 Register description of periphcfg module

Address	Def. value	Bits	Type	Name	Description
<b>Board GPIO control 1</b>					
0x00C0	FFFF	15-8		Reserved	
		7-0	R/W	BOARD_GPIO_OVRD	GPIO control override (each bit controls corresponding GPIO): 0 - Dedicated function 1 - Overrided by user ( <b>Default</b> )
0x00C1		15-0		Reserved for GPIO	
<b>Board GPIO control 2</b>					
0x00C2	0000	15-8		Reserved	

		7-0	R	BOARD_GPIO_RD	GPIO read value (each from corresponding GPIO): 0 - Low level 1 - High level
0x00C3		15-0		Reserved for GPIO	
0x00C4	0000	Board GPIO control 3			
		15-8		Reserved	
		7-0	R/W	BOARD_GPIO_DIR	Onboard GPIO direction (each bit controls corresponding GPIO): 0 - Input (Default) 1 - Output
0x00C5		15-0		Reserved for GPIO	
0x00C6	0000	Board GPIO control 4			
		15-8		Reserved	
		7-0	R/W	BOARD_GPIO_VAL	GPIO output value (each bit controls corresponding GPIO): 0 - Low level 1 - High level
0x00C7		15-0		Reserved for GPIO	
0x00C8	0000	15-2		Reserved	
		1	R	PERIPH_INPUT_RD_0	MUXOUT output of ADF4002 phase detector 0 - no lock 1 - locked to external reference clock
		0	R		OS output of LM75 temperature sensor 0 - temperature is below 55 °C 1 - temperature is above 55 °C
0x00C9	0000	15-0		PERIPH_INPUT_RD_1	Not used
0x00CA		15-0		Reserved	
0x00CB		15-0		Reserved	
0x00CC	0000	Board peripheral control 1			
		15-1		PERIPH_OUTPUT_OVRD_0	Not used
		0	R/W		Fan control override: 0 - Dedicated function (Default) 1 - User controlled
0x00CD	0000	Board peripheral control 1			
		15-1		PERIPH_OUTPUT_VAL_0	Not used
		0	R/W		Fan control pin: 0 - OFF (Default) 1 - ON
0x00CE	0000	15-0		PERIPH_OUTPUT_OVRD_1	Not used
0x00CF	0000	15-0		PERIPH_OUTPUT_VAL_1	Not used
0x00D0		15-0		Reserved	
0x00D1		15-0		Reserved	
0x00D2		15-0		Reserved	
0x00D3		15-0		Reserved	
0x00D4		15-0		Reserved	
0x00D5		15-0		Reserved	
0x00D6		15-0		Reserved	
0x00D7		15-0		Reserved	
0x00D8		15-0		Reserved	
0x00D9		15-0		Reserved	
0x00DA		15-0		Reserved	
0x00DB		15-0		Reserved	
0x00DC		15-0		Reserved	
0x00DD		15-0		Reserved	
0x00DE		15-0		Reserved	
0x00DF		15-0		Reserved	

### 3.4 FX3 Slave FIFO interface – FX3\_slaveFIFO5b

Provides data transfer between external FX3 SuperSpeed USB 3.0 peripheral controller and FPGA through GPIF II interface (See <http://www.cypress.com/part/cyusb3014-bzxi> for documentation).

All data exchange between slaveFIFO5b module and other FPGA logic is done through FIFO buffers. Module slaveFIFO5b constantly monitors GPIF II status flags and all FIFO buffers. For example, internal logic writes IQ stream packets containing 4kB data to FIFO buffer through EP81 ports. Once slave FIFO5b module detects that EP81 FIFO buffers contains 4kB data and GPIF II flags indicate that FX3 controller is ready, all data is read from FIFO buffer and written to FX3 controller through GPIF interface.

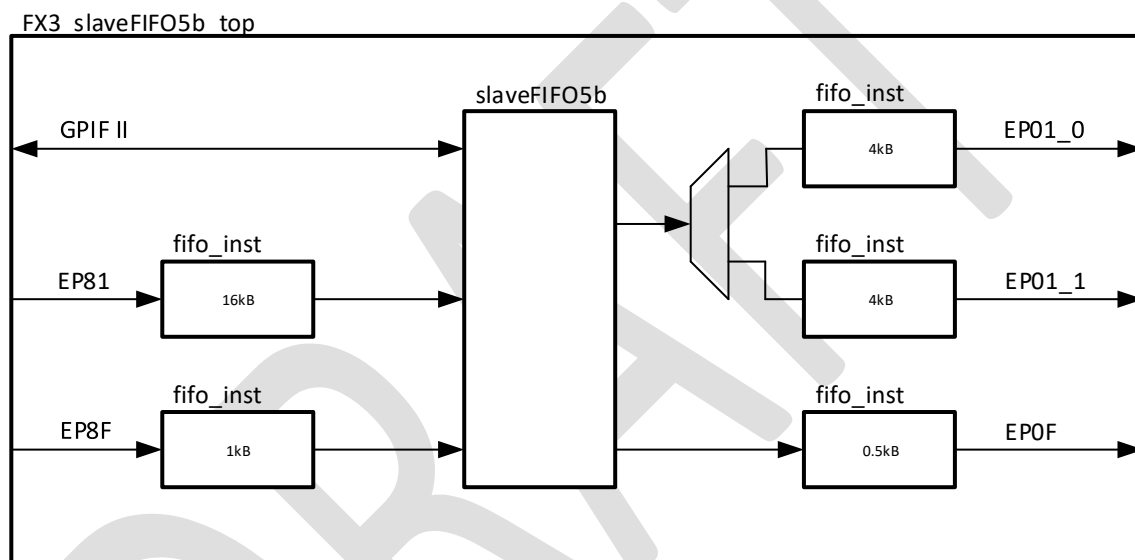


Figure 4 FX3\_slaveFIFO5b block diagram

Table 10 Description of FX3\_slaveFIFO5b instances

Instance	Description
SlaveFIFO5b	Provides data transfer between GPIF II interface and internal FIFO buffers.
fifo_inst (EP81)	Stream endpoint FIFO buffer of 16kB size.
fifo_inst (EP01_0)	Stream endpoint FIFO buffer of 4kB size.
fifo_inst (EP01_1)	Stream endpoint FIFO buffer of 4kB size.
fifo_inst (EP8F)	Control endpoint FIFO buffer of 1kB size.
fifo_inst (EP0F)	Control endpoint FIFO buffer of 0.5kB size.

Table 11 FX3\_slaveFIFO5b module parameters

Parameter	Type	Default	Description
Start address of SPI registers			
dev_family	string	Cyclone IV E	Device family name
data_width	integer	32	GPIF II interface data width
Stream, socket 0, (PC->FPGA)			

Parameter	Type	Default	Description
EP01_0_rdusedw_width	integer	9	EP01_0 FIFO read used words size ( $2^{9-1} = 256$ words)
EP01_0_rwidth	integer	128	EP01_0 FIFO read word size
EP01_1_rdusedw_width	integer	11	EP01_1 FIFO read used words size ( $2^{11-1} = 1024$ words)
EP01_1_rwidth	integer	32	EP01_1 FIFO read word size
Stream, socket 2, (FPGA->PC)			
EP81_wrusedw_width	integer	12	EP81 FIFO write used words size ( $2^{12-1} = 2048$ words)
EP81_wwidth	integer	64	EP81 FIFO write word size
Control, socket 1, (PC->FPGA)			
EP0F_rdusedw_width	integer	8	EP0F FIFO read used words size ( $2^{8-1} = 128$ words)
EP0F_rwidth	integer	32	EP0F FIFO read word size
Control, socket 3, (FPGA->PC)			
EP8F_wrusedw_width	integer	9	EP8F FIFO write used words size ( $2^{9-1} = 256$ words)
EP8F_wwidth	integer	32	EP8F FIFO write word size

Table 12 FX3\_slaveFIFO5B module ports

Port	Type	Width	Description
reset_n	in	1	Reset active low
clk	in	1	Clock 100 Mhz
usb_speed	in	1	USB speed select 0 - USB2.0, 1- USB3.0.
FX3 GPIF II interface			
slcs	out	1	Chip select
fdata	inout	32	Data
faddr	out	5	FIFO address
slrd	out	1	Read select
sloe	out	1	Output enable
slwr	out	1	Write select
flaga	in	1	
flagb	in	1	
flagc	in	1	Not used in
flagd	in	1	Not used in
pktend	out	1	Packet end
EPSWITCH	out	1	Not used
EP01 buffer select			
EP01_sel	in	1	0 - EP01_0, 1 - EP01_1
Stream endpoint FIFO 0 (PC->FPGA)			
EP01_0_rdclk	in	1	Read clock
EP01_0_aclrn	in	1	Asynchronous clear, active low
EP01_0_rd	in	1	Read request
EP01_0_rdata	out	EP01_0_rwidth	Read data
EP01_0_rempty	out	1	Read empty
EP01_0_rdusedw	out	EP01_0_rdusedw_width	Red used words
Stream endpoint FIFO 1 (PC->FPGA)			

Port	Type	Width	Description
EP01_1_rdclk	in	1	Read clock
EP01_1_aclrn	in	1	Asynchronous clear, active low
EP01_1_rd	in	1	Read request
EP01_1_rdata	out	EP01_1_rwidth	Read data
EP01_1_rempy	out	1	Read empty
EP01_1_rducedw	out	EP01_1_rducedw_width	Red used words
Stream endpoint FIFO (FPGA->PC)			
EP81_wclk	in	1	Write clock
EP81_aclrn	in	1	Asynchronous clear, active low
EP81_wr	in	1	Write request
EP81_wdata	in	EP81_wwidth	Write data
EP81_wfull	out	1	Write full
EP81_wrusedw	out	EP81_wrusedw_width	Write used words
Control endpoint FIFO (PC->FPGA)			
EP0F_rdclk	in	1	Read clock
EP0F_aclrn	in	1	Asynchronous clear, active low
EP0F_rd	in	1	Read request
EP0F_rdata	out	EP0F_rwidth	Read data
EP0F_rempy	out	1	Read empty
Control endpoint FIFO (FPGA->PC)			
EP8F_wclk	in	1	Write clock
EP8F_aclrn	in	1	Asynchronous clear, active low
EP8F_wr	in	1	Write request
EP8F_wdata	in	EP8F_wwidth	Write data
EP8F_wfull	out	1	Write full
Status			
GPIF_busy	out	1	std_logic

### 3.5 LMS7002 Receive and transmit interface – rxtx\_top

Main function of rxtx\_top module is for receive and transmit IQ samples from/to LMS7002 chip and provide IQ sample synchronization. See **Figure 5** for block diagram and **Table 13** for instance description.

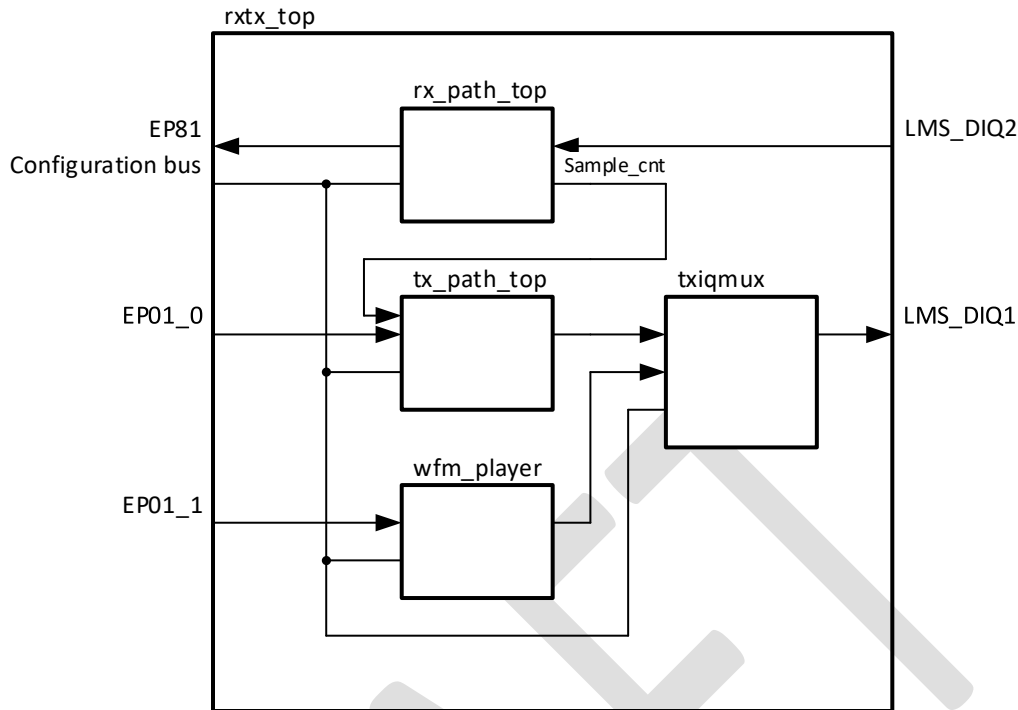


Figure 5 rxtx\_top block diagram

Table 13 Description of rxtx\_top instances

Instance	Description
tx_path_top	Transmit logic. See <b>3.5.2 Transmit interface – tx_path_top</b> .
wfm_player	Waveform player for LMS_DIQ1 interface
txiqmux	Mux for tx_path_top and wfm_player modules
rx_path_top	Receive logic. See <b>3.5.1 Receive interface – rx_path_top</b> .

Table 14 rxtx\_top parameters description

Parameter	Type	Default	Description
DEV_FAMILY	string	Cyclone IV E	Device family
TX parameters			
TX_IQ_WIDTH	integer	12	TX IQ sample width
TX_N_BUFF	integer	4	TX number of buffers, 2,4 valid values
TX_IN_PCT_SIZE	integer	4096	TX packet size in bytes
TX_IN_PCT_HDR_SIZE	integer	16	TX packet header size in bytes
TX_IN_PCT_DATA_W	integer	128	TX packet read data width
TX_IN_PCT_RDUSEDW_W	integer	11	TX packet read used words width
TX_OUT_PCT_DATA_W	integer	64	TX output packet data width
RX parameters			
RX_IQ_WIDTH	integer	12	RX IQ sample width
RX_INVERT_INPUT_CLOCKS	string	ON	Clock invert option on LMS_DIQ2 interface
RX_SMPL_BUFF_RDUSEDW_W	integer	11	RX sample buffer read used words width. Words= $2^{11-1}$
RX_PCT_BUFF_WRUSEDW_W	integer	12	RX packet buffer read used words width. Words= $2^{12-1}$



Parameter	Type	Default	Description
WFM			
WFM_IN_PCT_DATA_W	integer	32	WFM in packet read data width
WFM_IN_PCT_RDUSEDW_W	integer	11	WFM in packet read used words width. Words= $2^{11-1}$
DDR2 controller parameters			
WFM_CNTRL_RATE	integer	1	1 - full rate, 2 - half rate
WFM_CNTRL_BUS_SIZE	integer	16	DDR2 memory data width
WFM_ADDR_SIZE	integer	25	DDR2 memory address width
WFM_LCL_BUS_SIZE	integer	64	DDR2 controller local data bus size
WFM_LCL_BURST_LENGTH	integer	2	DDR2 controller local burst length
WFM player parameters			
WFM_WFM_INFIFO_SIZE	integer	12	WFM in FIFO buffer write used words width. Words= $2^{12-1}$
WFM_DATA_WIDTH	integer	32	WFM data width
WFM_IQ_WIDTH	integer	12	WFM IQ sample width

Port	Type	Width	Description
Configuration memory ports			
from_fpgacfg	in	t_FROM_FPGACFG;	Configuration registers bus
to_tstcfg_from_rxtx	out	t_TO_TSTCFG_FROM_RXTX;	
from_tstcfg	in	t_FROM_TSTCFG;	
TX path			
tx_clk	in	1	TX interface clock
tx_clk_reset_n	in	1	TX interface reset, active low
tx_pkt_loss_flg	out	1	TX packet loss flag, 0 - No packet loss, 1 - Packet lost.
tx_txant_en	out	1	TX transmit flag. 0 - No transmission, 1 - TX is transmitting samples
TX interface data			
tx_DIQ	out	TX_IQ_WIDTH	TX samples
tx_fsync	out	1	TX sync signal
TX FIFO read ports			
tx_in_pkt_reset_n_req	out	1	TX packet buffer reset request, active low
tx_in_pkt_rdreq	out	1	TX packet buffer read request
tx_in_pkt_data	in	TX_IN_PCT_DATA_W	TX packet buffer read data
tx_in_pkt_rdempty	in	1	TX packet buffer read empty
tx_in_pkt_rdusedw	in	TX_IN_PCT_RDUSEDW_W	TX packet buffer read used words
WFM Player			
wfm_pll_ref_clk	in	1	Reference clock for DDR2 controller
wfm_pll_ref_clk_reset_n	in	1	Reset for DDR2 controller, active low.
wfm_phy_clk	out	1	DDR2 controller local interface clock output
WFM FIFO read ports			
wfm_in_pkt_reset_n_req	out	1	WFM packet buffer reset request, active low
wfm_in_pkt_rdreq	out	1	WFM packet buffer read request
wfm_in_pkt_data	in	WFM_IN_PCT_DATA_W	WFM packet buffer read data
wfm_in_pkt_rdempty	in	1	WFM packet buffer read empty
wfm_in_pkt_rdusedw	in	WFM_IN_PCT_RDUSEDW_W	WFM packet buffer read used words
DDR2 external memory signals			
wfm_mem_odt	out	1	<a href="#">External memory interface</a>
wfm_mem_cs_n	out	1	
wfm_mem_cke	out	1	
wfm_mem_addr	out	13	
wfm_mem_ba	out	3	

wfm mem ras n	out	1	
wfm mem cas n	out	1	
wfm mem we n	out	1	
wfm mem dm	out	2	
wfm mem clk	inout	1	
wfm mem clk n	inout	1	
wfm mem dq	inout	16	
wfm mem dqs	inout	2	
RX path			
rx clk	in	1	RX interface clock
rx clk reset n	in	1	RX interface reset, active low
Rx interface data			
rx DIQ	in	RX_IQ_WIDTH	RX IQ samples
rx fsync	in	1	RX IQ sync signal
Packet fifo ports			
rx pct fifo aclrn req	out	1	RX packet buffer reset request, active low
rx pct fifo wusedw	in	RX_PCT_BUFF_WRUSEDW_W	RX packet buffer write used words
rx pct fifo wrreq	out	1	RX packet buffer write request
rx pct fifo wdata	out	64	RX packet buffer write data
Sample compare			
rx smpl cmp start	in	1	RX interface sample compare. 0 - disabled, 1-enabled
rx smpl cmp length	in	16	RX interface number of samples to compare.
rx smpl cmp done	out	1	RX interface sample compare done. 0 - not done, 1-done
rx smpl cmp err	out	1	RX interface sample compare status. 0 - no error, 1 - error

### 3.5.1 Receive interface – rx\_path\_top

Once rx\_path\_top **Figure 6** is enabled diq2fifo and data2packets modules starts continuously packing IQ samples into 4kB packets. For packet structure see [Stream protocol](#) document.

Packets are written to 16kB EP81 FIFO buffer to maintain continuous data flow in short periods when USB3.0 host cannot accept data. If USB3.0 host halts data transfer for longer time period and four packets are buffered into 16kB buffer, FIFO full condition arises and other packets are dropped. When host starts to receive data after FIFO full condition, host should expect to receive those four buffered packets.

Module rx\_path\_top provides two 64bit sample counters. One is for TX logic – tx\_path\_top. TX logic uses this counter to synchronize transmitted LMS\_DQ1 samples with received LMS\_DIQ2 samples. Other is used for LMS\_DI2 samples packing into 4kB packets.

When rx\_path\_top is enabled diq2fifo module starts to collect IQ samples from LMS\_DIQ2 bus, collected samples are written to FIFO buffer and each write enables smpl\_cnt:inst4 module to increase its counter value. This means that counter value increases in same continuous rate as IQ sample rate.

Module smpl\_cnt:inst3 is used for LMS\_DI2 samples packing into 4kB packets. Module data2packets reads IQ samples in bursts from FIFO buffer, each read enables smpl\_cnt:inst3 module to increase its counter value. One read burst fills one 4kB packet and there are some idle cycles between bursts.

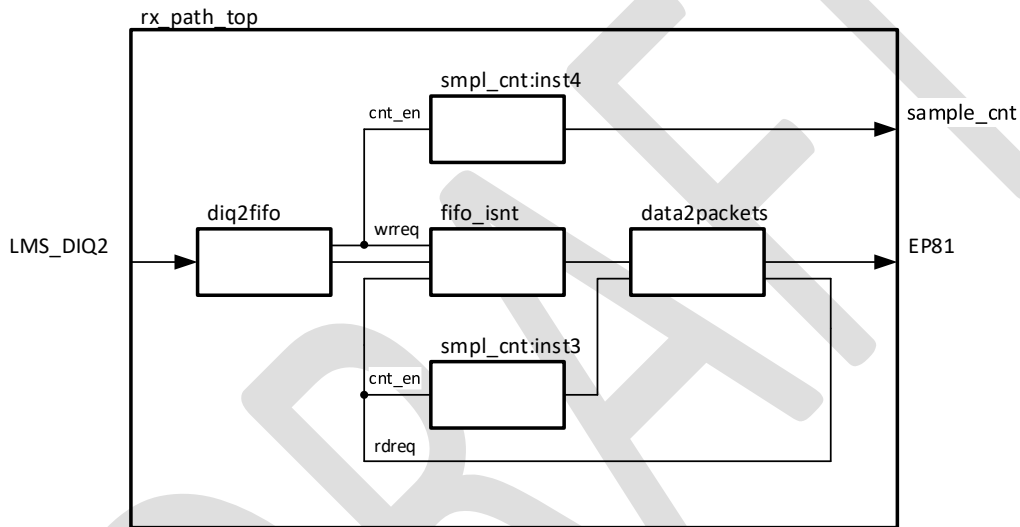


Figure 6 rx\_path\_top block diagram

Table 15 rx\_path\_top instance description

Instance	Description
diq2fifo	Captures IQ samples and writes to FIFO buffer.
fifo_inst	FIFO buffer for storing samples.
data2packets	Module for packing IQ samples to 4kB packets.
smpl_cnt:inst3	Sample counter for tx_path_top.
smpl_cnt:inst4	Sample counter for data2packets module.

### 3.5.2 Transmit interface – tx\_path\_top

Transmit module tx\_path\_top reads IQ samples from EP01\_0 FIFO buffer packed in 4kB packets. Packet header (see [Stream protocol](#) document) contains sample number (or so-called time stamp) at which packet should be transmitted.

By using sample numbers from rx\_path\_top and received sample numbers in packet header transmitted IQ samples can be synchronized with received IQ samples.

Module p2d\_wr\_fsm separates packet header and payload. Packet payload is written into one of four 4kB FIFO buffers located in packets2data module and packet header is stored in p2d\_rd module. This module can work in two modes:

- **Synchronization enabled** - module compares received sample number from packet header and sample number from rx\_path\_top. When sample number from received packet is equal to sample number of rx\_path\_top module (this means that it is time to send TX packet), read process begins and IQ samples are transmitted to LMS\_DIQ1 interface. When sample number from received packet is greater than sample number of rx\_path\_top module (this means that received packet should be sent after some time) p2d\_rd waits until those sample number will be equal. When sample number from received packet is less than sample number of rx\_path\_top module (this means that packet arrived to late) corresponding FIFO buffer is cleared.
- **Synchronization disabled** – module does not compare sample numbers and every received packet is transmitted to LMS\_DIQ1 interface.

Block diagram can be found in **Figure 7** and instance description in **Table 16**.

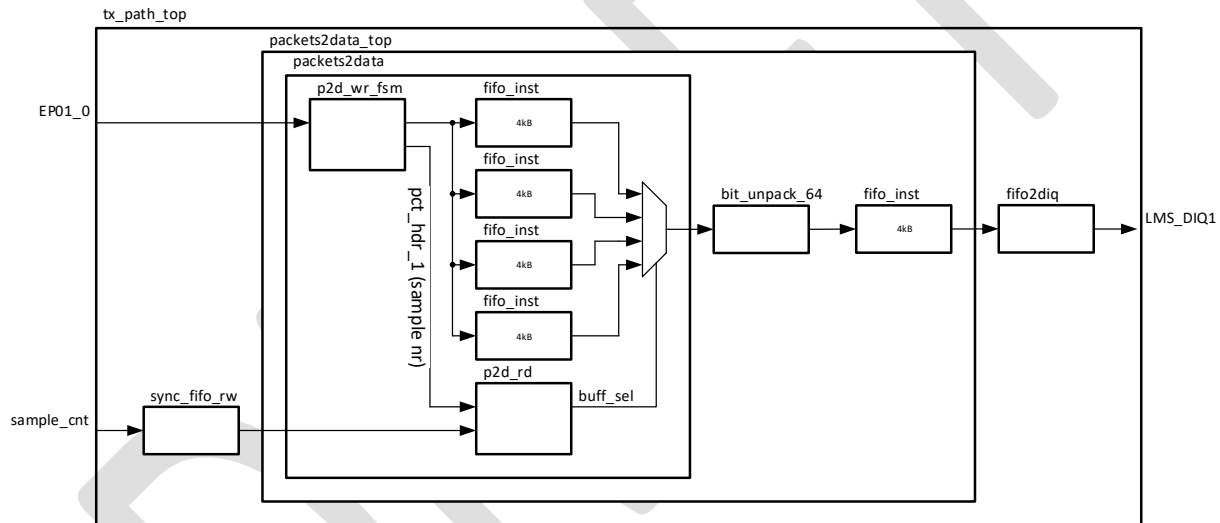


Figure 7 tx\_path\_top block diagram

Table 16 tx\_path\_top instance description

Instance	Description
packets2data_top	Wrapper file
packets2data	Wrapper file
p2d_wr_fsm	Module reads packets from EP01_0 buffer and places to one of the 4kB FIFO buffers in increasing order and stores corresponding sample number from packet header.
p2d_rd	Module checks one of the FIFO buffers if it is filled with samples in increasing order. When buffer is ready depending on received sample number from packet header and sample number from rx_path_top module buffer can be cleared or IQ sample reading begins.
fifo_inst	FIFO buffer
fifo2diq	Module reads samples from FIFO buffer and writes to LMS_DIQ1 interface.
sync_fifo_rw	Dual clock FIFO buffer for clock domain crossing.

Instance	Description
bit_unpack_64	Depending on mode selection samples are unpacked (see <a href="#">Stream protocol</a> document).

### 3.5.3 Waveform player – wfm\_player\_top

Waveform player – wfm\_player\_top can be used to load waveform from EP01\_1 endpoint to external DDR2 memory and played back to LMS\_DIQ1 interface. Samples can be loaded using 4kB packets (see [Stream protocol](#) document). External memory can store 128MB of data. Block diagram can be found in **Figure 8**.

When loading waveform for LMS\_DIQ1 channels (MIMO mode) waveforms should be same length.

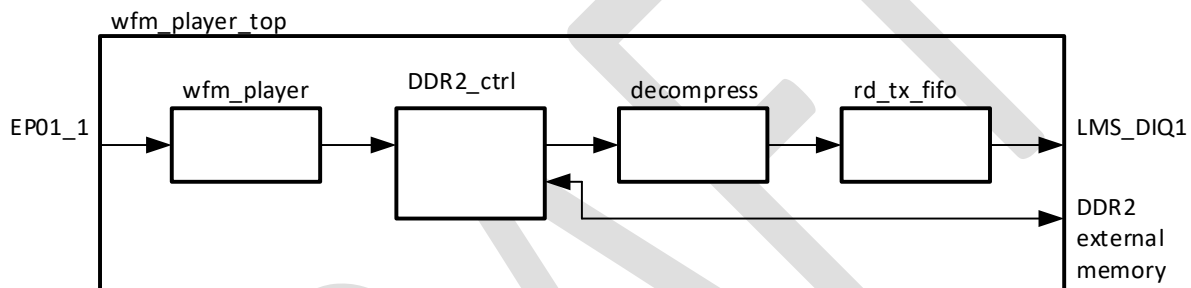


Figure 8 wfm\_player\_top block diagram

Table 17 wfm\_player\_top instance description

Instance	Description
wfm_player	Waveform player instance, reads IQ packets from EP01_1 FIFO buffer and writes to DDR2_ctrl module.
DDR2_ctrl	External DDR2 memory controller.
decompress	Decompress IQ samples.
rd_tx_fifo	Reads decompressed samples and writes to LMS_DIQ1 interface.

## 3.6 General periphery – general\_periph\_top

General periphery - general\_periph\_top module is responsible for controlling on board periphery such as LED, GPIO and Fan, default functions can be found in **Table 18**. Also default function can be overridden by internal registers see chapter **3.3 Softcore processor – nios\_cpu**.

Table 18 Default functions of LEDS, GPIO and fan

Schematic name	Board label	Type	Description
FPGA_LED1	FPGA1	Clock status	Blinking indicates presence of TCXO clock. Colour indicates status of FPGA PLLs that are used for LMS digital interface clocking: Green – both PLLs are locked; Red/Green – at least one PLL is not locked.

Schematic name	Board label	Type	Description
FPGA_LED2	FPGA2	TCXO control mode	No light – TCXO is controlled from DAC Red – TCXO is controlled from phase detector and is not locked to external reference clock Green – TCXO is controlled from phase detector and is locked to external reference clock
FX3_LED	FX3	USB activity	USB3.0 (FX3) controller, slave FIFO (GPIF) interface module and NIOS CPU activity indication: Green – idle, Red – busy.
FPGA_GPIO0	FPGA_GPIO		Indicates when TX is transmitting IQ samples. 0 – not transmitting, 1 – transmitting.
FPGA_GPIO1			Indicates RXPLL lock status. 0 – no lock, 1 - locked
FPGA_GPIO2			Indicates TXPLL lock status. 0 – no lock, 1 - locked
FPGA_GPIO3			Indicates TX packet loss, 0 – no loss, 1 – packet lost.
FPGA_GPIO4			-
FPGA_GPIO5			-
FPGA_GPIO6			-
FPGA_GPIO7			-
FAN_CTRL	FAN		Fan control pin. Connected to LM75_OS temperature sensor pin.

Block diagram can be found in **Figure 9**, instances are described in **Table 19**. See **Table 20** and **Table 21** for module parameters and port description.

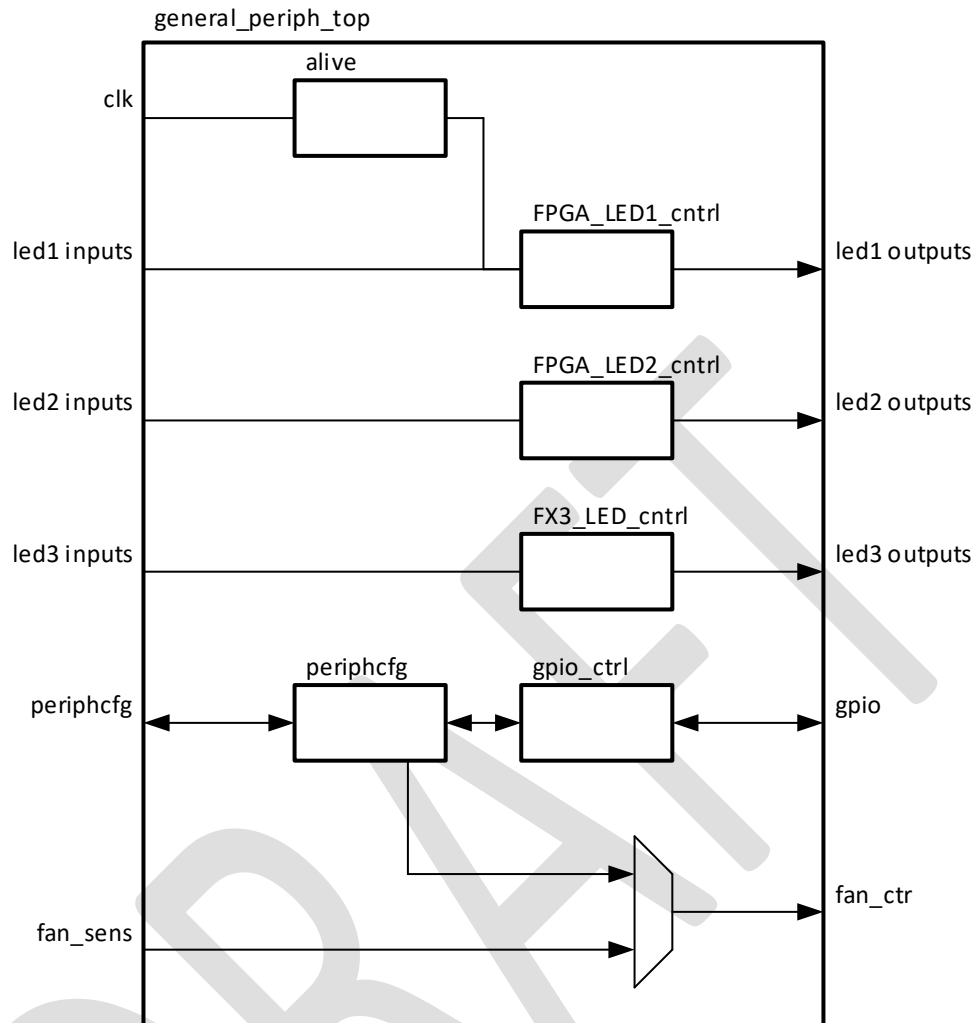


Figure 9 Module general\_periph\_top block diagram

Table 19 Module instance description

Instance	Description
alive	Basic counter to implement blinking on led1.
FPGA_LED1_cntrl	Led1 control module, for showing clock status
FPGA_LED2_cntrl	Led2 control module, for showing TCXO control mode
FX3_LED_cntrl	Led3 control module, for USB and NIOS CPU activity.
periphcfg	SPI register instance, provides control for gpio_ctrl instance and fan.
gpio_ctrl	GPIO control instance

Table 20 Module general\_periph\_top parameters

Parameter	Type	Default	Description
DEV_FAMILY	string	"CYCLONE IV E"	FPGA device family name
N_GPIO	integer	8	Number of GPIO used

Table 21 Module general\_periph\_top input and output port description

Port	Type	Width	Description
clk	in	1	Free running clock



Port	Type	Width	Description
reset_n	in	1	Asynchronous, active low reset
SPIregisters(Default address range 0x00C0-0x00DF)			
periphcfg_maddress	in	10	Address of SPI slave registers
periphcfg_sdin	in	1	SPI slave datain
periphcfg_sclk	in	1	SPI slave clock
periphcfg_sen	in	1	SPI slave select
periphcfg_sdout	out	1	SPI slave dataout
LED1(Clock and PLL lock status)			
led1_pll1_locked	in	1	Lock status from PLL1
led1_pll2_locked	in	1	Lock status from PLL2
led1_ctrl	in	3	led1_ctrl[0]-manual LED control enable; led1_ctrl[1]-red LED enable in manual mode; led1_ctrl[2]-green LED enable in manual mode;
led1_g	out	1	Output to dual colour LED1 pin
led1_r	out	1	Output to dual colour LED1 pin
LED2(TCXO control status)			
led2_clk	in	1	Clock from SPI master connected to DAC and ADF
led2_adf_muxout	in	1	Multiplexer output from ADF4002
led2_dac_ss	in	1	DAC slave select
led2_adf_ss	in	1	ADF slave select
led2_ctrl	in	3	led2_ctrl[0]-manual LED control enable; led2_ctrl[1]-red LED enable in manual mode; led2_ctrl[2]-green LED enable in manual mode;
led2_g	out	1	Output to dual colour LED2 pin
led2_r	out	1	Output to dual colour LED2 pin
LED3(FX3 and NIOS CPU busy)			
led3_g_in	in	1	Green LED input
led3_r_in	in	1	Red LED input
led3_ctrl	in	3	led3_ctrl[0]-manual LED control enable; led3_ctrl[1]-red LED enable in manual mode; led3_ctrl[2]-green LED enable in manual mode;
led3_hw_ver	in	4	Hardware version input pins
led3_g	out	1	Output to dual colour LED3 pin
led3_r	out	1	Output to dual colour LED3 pin
GPIO			
gpio_dir	in	N_GPIO	GPIO direction control, 0 – input, 1 – output
gpio_out_val	in	N_GPIO	GPIO output value when direction is set to output
gpio_rd_val	out	N_GPIO	GPIO input value when direction is set to input
gpio	inout	N_GPIO	Connected to GPIO pins
Fan control			
fan_sens_in	in	1	From temperature sensor
fan_ctrl_out	out	1	To Fan control output

### 3.7 PLL module – pll\_top

PLL module – pll\_top (**Figure 10**) provides required clock sources for LM7002 RX and TX digital interfaces. Inside this module there are two dynamically reconfigurable PLL instances **Figure 11**.

Clock frequency and phase relationship can be changed while FPGA is in user mode. Instance description can be found in **Table 22**.

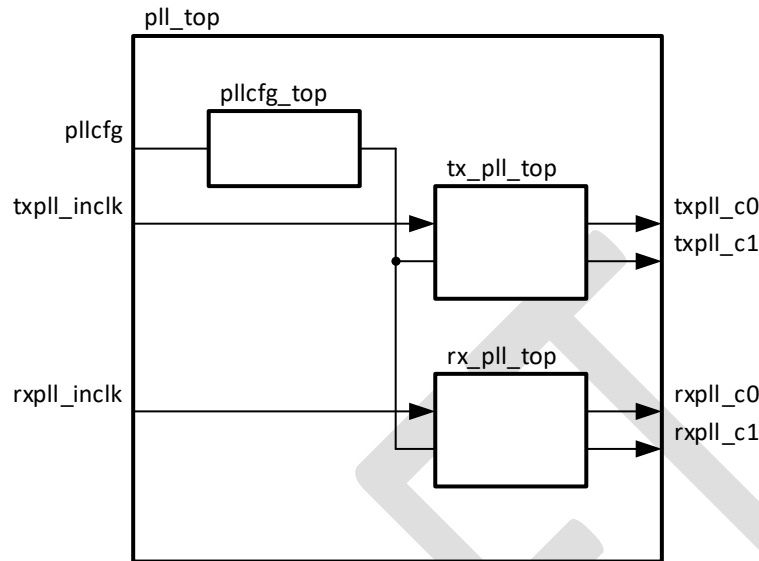


Figure 10 PLL module – pll\_top

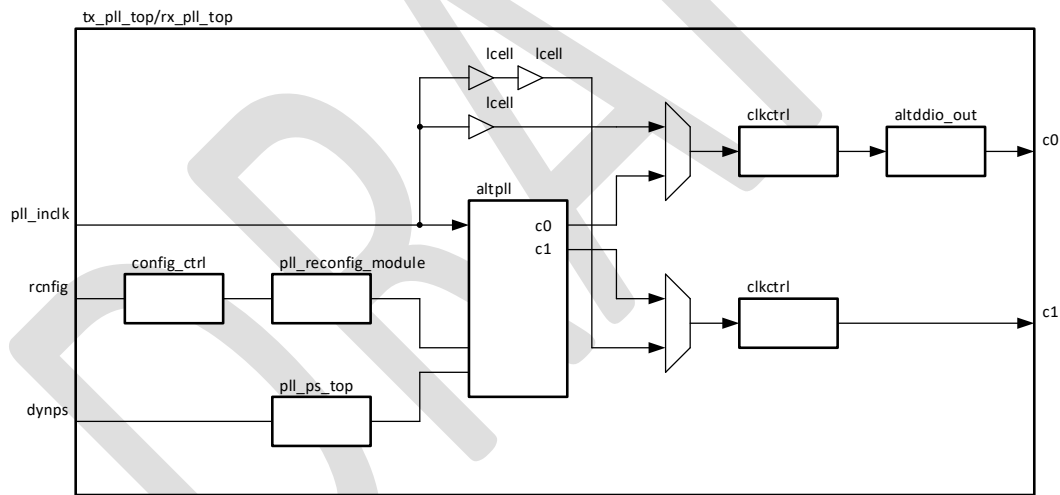


Figure 11 tx\_pll\_top/rx\_pll\_top modules

Table 22. pll\_top module instance description

Instance	Description
pllcfg_top	PLL configuration control module
tx_pll_top	PLL dedicated for TX interface
rx_pll_top	PLL dedicated for RX interface

Table 23. pll\_top module parameters

Parameter	Type	Default	Description
N_PLL	integer	2	
TX PLL parameters			
TXPLL_BANDWIDTH_TYPE	string	"AUTO"	PLL bandwidth setting

Parameter	Type	Default	Description
TXPLL CLK0 DIVIDE BY	natural	1	PLL c0 output division factor
TXPLL CLK0 DUTY CYCLE	natural	50	PLL c0 output duty cycle
TXPLL CLK0 MULTIPLY BY	natural	1	PLL c0 multiplication factor
TXPLL CLK0 PHASE SHIFT	string	"0"	PLL c0 phase shift setting in degrees
TXPLL CLK1 DIVIDE BY	natural	1	PLL c1 output division factor
TXPLL CLK1 DUTY CYCLE	natural	50	PLL c1 output duty cycle
TXPLL CLK1 MULTIPLY BY	natural	1	PLL c1 multiplication factor
TXPLL CLK1 PHASE SHIFT	string	"0"	PLL c0 phase shift setting in degrees
TXPLL COMPENSATE CLOCK	string	"CLK1"	Specifies for which PLL output delay compensation is done
TXPLL INCLK0 INPUT FREQUENCY	natural	6250	TX PLL input frequency period in ps
TXPLL INTENDED DEVICE FAMILY	string	"Cyclone IV E"	FPGA device family
TXPLL OPERATION MODE	string	"SOURCE SYNCHRONOUS"	PLL compensation mode setting
TXPLL SCAN CHAIN MIF FILE	string	"ip/txpll/pll.mif"	PLL memory initialization file location
TXPLL DRCT C0 NDLY	integer	1	Number of logic cells in c0 TX PLL output when PLL is bypassed
TXPLL DRCT C1 NDLY	integer	2	Number of logic cells in TX PLL c1 output when PLL is bypassed
RX PLL parameters			
RXPLL BANDWIDTH TYPE	string	"AUTO"	PLL bandwidth setting
RXPLL CLK0 DIVIDE BY	natural	1	PLL c0 output division factor
RXPLL CLK0 DUTY CYCLE	natural	50	PLL c0 output duty cycle
RXPLL CLK0 MULTIPLY BY	natural	1	PLL c0 multiplication factor
RXPLL CLK0 PHASE SHIFT	string	"0"	PLL c0 phase shift setting in degrees
RXPLL CLK1 DIVIDE BY	natural	1	PLL c1 output division factor
RXPLL CLK1 DUTY CYCLE	natural	50	PLL c1 output duty cycle
RXPLL CLK1 MULTIPLY BY	natural	1	PLL c1 multiplication factor
RXPLL CLK1 PHASE SHIFT	string	"0"	PLL c0 phase shift setting in degrees
RXPLL COMPENSATE CLOCK	string	"CLK1"	Specifies for which PLL output delay compensation is done
RXPLL INCLK0 INPUT FREQUENCY	natural	6250	RX PLL input frequency period in ps
RXPLL INTENDED DEVICE FAMILY	string	"Cyclone IV E"	FPGA device family

Parameter	Type	Default	Description
RXPLL_OPERATION_MODE	string	"SOURCE_SYNCHRONOUS"	PLL compensation mode setting
RXPLL_SCAN_CHAIN_MIF_FILE	string	"ip/pll/pll.mif"	PLL memory initialization file location
RXPLL_DRCT_C0_NDLY	integer	1	Number of logic cells in RX PLL c0 output when PLL is bypassed
RXPLL_DRCT_C1_NDLY	integer	2	Number of logic cells in RX PLL c1 output when PLL is bypassed

Table 24 pll\_top port description

Port	Type	Width	Description
TX PLL ports			
txpll_inclk	in	1	PLL input clock from LMS_MCLK1 pin
txpll_reconfig_clk	in	1	Free running clock, used for PLL reconfiguration.
txpll_logic_reset_n	in	1	PLL logic active low reset.
txpll_c0	out	1	TX PLL c0 output clock
txpll_c1	out	1	TX PLL c1 output clock (phase shifted version of c0)
txpll_locked	out	1	TX PLL lock status. Outputs high level when PLL is locked
txpll_smpl_cmp_en	out	1	Sample compare enable. Used in auto phase searching mode.
txpll_smpl_cmp_done	in	1	Sample compare done indication. Used in auto phase searching mode.
txpll_smpl_cmp_error	in	1	Sample compare error status. Used in auto phase searching mode.
txpll_smpl_cmp_cnt	out	16	Number of samples to be checked. Used in auto phase searching mode
RX PLL ports			
rxpll_inclk	in	1	PLL input clock from LMS_MCLK2 pin
rxpll_reconfig_clk	in	1	Free running clock, used for PLL reconfiguration.
rxpll_logic_reset_n	in	1	PLL logic active low reset.
rxpll_c0	out	1	RX PLL c0 output clock
rxpll_c1	out	1	RX PLL c1 output clock (phase shifted version of c0)
rxpll_locked	out	1	RX PLL lock status. Outputs high level when PLL is locked
rxpll_smpl_cmp_en	out	1	Sample compare enable. Used in auto phase searching mode.
rxpll_smpl_cmp_done	in	1	Sample compare done indication. Used in auto phase searching mode.
rxpll_smpl_cmp_error	in	1	Sample compare error status. Used in auto phase searching mode.
rxpll_smpl_cmp_cnt	out	16	Number of samples to be checked. Used in auto phase searching mode
pllcfg ports			
pllcfg_in	in	1	Configuration register bus
pllcfg_out	out	1	

### 3.8 Board test module – tst\_top

Board test module – **tst\_top** **Figure 12** is used to test clock inputs and DDR2 memory. Separate tests can be enabled and results can be read from internal registers see **3.3.3 Registers of tstcfg module**. Module port description can be found in **Table 25**.

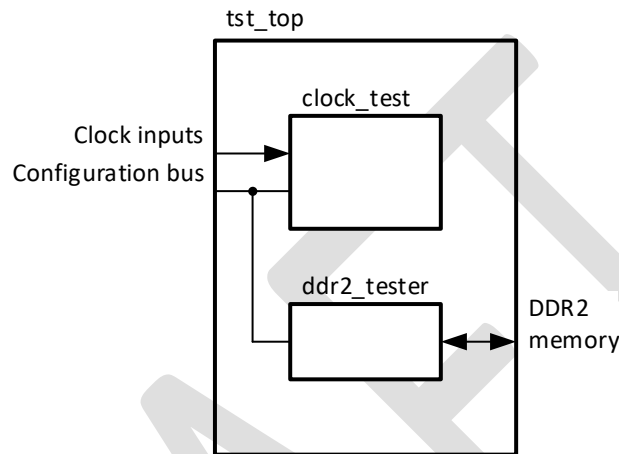


Figure 12 tst\_top block diagram

Table 25 tst\_top module port description

Port	Type	Width	Description
FX3_clk	in	1	100MHz reference clock
reset_n	in	1	Reset, active low
Clock inputs			
Si5351C_clk_0	in	1	Clock inputs form clock generator Si5351C
Si5351C_clk_1	in	1	
Si5351C_clk_2	in	1	
Si5351C_clk_3	in	1	
Si5351C_clk_5	in	1	
Si5351C_clk_6	in	1	
Si5351C_clk_7	in	1	
LMK_CLK	in	1	Clock buffer
ADF_MUXOUT	in	1	Phase detector mux output
DDR2 external memory signals			
mem_pllref_clk	in	1	<a href="#">External memory interface</a>
mem_odt	out	1	
mem_cs_n	out	1	
mem_cke	out	1	
mem_addr	out	13	
mem_ba	out	3	
mem_ras_n	out	1	
mem_cas_n	out	1	
mem_we_n	out	1	
mem_dm	out	2	

mem_clk	inout	1	
mem_clk_n	inout	1	
mem_dq	inout	16	
mem_dqs	inout	2	
To configuration memory			
to_tstcfg	out	t_TO_TSTCFG	Configuration bus
from_tstcfg	in	t_FROM_TSTCFG	

DRAFT

## 4 Examples

In this chapter various examples can be found on how to use gateway.

### 4.1 Accessing FPGA registers

Internal FPGA registers can be accessed using USB3.0 host via EP0F and EP8F endpoints. See **LMS64C\_protocol** document for protocol structure and description of commands used in examples. See chapter **3.3 Softcore processor – nios\_cpu** for internal FPGA register description.

**Read** – 64byte packet containing request command “CMD\_BRDSPI16\_RD” has to be sent to EP0F endpoint and 64 bytes response packet has to be read from EP8F endpoint. Read example reads 0x0000 address Board\_ID register value, which is 0x000E for LimeSDR-USB board.

Request – USB3.0 writes 64B to EP0F:

Address	
0000	56 00 01 00 00 00 00 00 00 00 00 00 00 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Response – USB3.0 host reads 64B from EP8F:

Address	
0000	56 01 01 00 00 00 00 00 00 00 00 00 0E 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

**Write** – 64byte packet containing request command “CMD\_BRDSPI16\_WR” has to be sent to EP0F endpoint and 64 bytes response packet has to be read from EP8F endpoint. Write example writes 0x1234 value to 0x00DF address. This register is currently reserved and has no dedicated function.

Request – USB3.0 writes 64B to EP0F:

Address	
0000	55 00 01 00 00 00 00 00 00 DF 12 34 00 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Response – USB3.0 host reads 64B from EP8F:

Address	
0000	55 01 01 00 00 00 00 00 00 00 00 00 00 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

## 4.2 Accessing LMS7002M registers

Configuration memory which is inside LMS7002M can be accessed using USB3.0 host via EP0F and EP8F endpoints. See **LMS64C\_protocol** document for protocol structure and description of commands used in examples. Registers map of LMS7002M can be found in [LMS7002M – Multi-Band, Multi-Standard MIMO, Programming and Calibration Guide](#).

**Read** – 64byte packet containing request command “CMD\_LMS7002\_RD” has to be sent to EP0F endpoint and 64 bytes response packet has to be read from EP8F endpoint. Read example reads 0x0020 address register value, which is 0xFFFF by default.

Request – USB3.0 writes 64B to EP0F:

Address	
0000	22 00 01 00 00 00 00 00 00 20 00 00 00 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Response – USB3.0 host reads 64B from EP8F:

Address	
0000	22 01 01 00 00 00 00 00 00 00 FF FF 00 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

**Write** – 64byte packet containing request command “CMD\_LMS7002\_WR” has to be sent to EP0F endpoint and 64 bytes response packet has to be read from EP8F endpoint. Write example writes 0xE4E4 value to 0x0024 address.

Request – USB3.0 writes 64B to EP0F:

Address	
0000	21 00 01 00 00 00 00 00 00 24 E4 E4 00 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Response – USB3.0 host reads 64B from EP8F:

Address	
0000	21 01 01 00 00 00 00 00 00 00 00 00 00 00 00 00
0010	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0020	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

## 4.3 Periphery control



**LED control** - modify FPGA register as showed in **Table 26** to turn on and change colour of FPGA\_LED2.

**Table 26 FPGA\_LED2 control example**

N	CMD	Address (HEX)	Value (HEX)	Description
1	WR	001A	0010	Override FPGA_LED2 control
2	WR	001A	0030	Turn on FPGA_LED2_R (red is on, green - off)
3	WR	001A	0050	Turn on FPGA_LED2_G (green is on, red - off)

## 4.4 Configuring FPGA PLL module

To configure PLLs of pll\_top module LMS7002M chip has to be already configured and valid clock sources provided to LMS\_MCLK1 (connected to txpll\_top module) and LMS\_MCLK2 (connected to rxpll\_top module) pins. For LMS7002M chip configuration see chapter 4.2 Accessing LMS7002M registers.

Configuration of pll\_top module can be done by accessing FPGA registers see chapter 4.1 **Accessing FPGA registers**. For register description see chapter 3.3 **Softcore processor – nios\_cpu**.

PLL output frequency  $F_{out}$  can be calculated using following equation:

$$F_{ref} = \frac{F_{in}}{N} \quad (1); \quad F_{VCO} = F_{ref} * M \quad (2); \quad F_{out} = \frac{F_{VCO}}{c} \quad (3);$$

where  $F_{ref}$  - PLL reference frequency,  $F_{VCO}$  – VCO frequency,  $F_{OUT}$  – Output frequency. See Cyclone IV datasheet for allowed frequency ranges.

### 4.4.1 RX PLL module - rxpll\_top configuration (auto phase shift mode)

This example assumes that LMS7002M chip is already configured, outputs 20MHz clock on LMS\_MCLK2 pin and LMS\_DIQ2 interface outputs constant IQ values (I=0xAAA, Q=0x555). See **Table 27** for configuration sequence.

**Table 27 rxpll\_top configuration sequence in auto phase shift mode**

N	CMD	Address (HEX)	Value (HEX)	Description
1	WR	0005	0000	Turn off direct clocking
2	WR	0025	01F0	Set PLL parameters
		0023	0008	Set PLL index to 1 and rest bits to zero
3	WR	0023	0008	Set PLL index to 1 and rest bits to zero

N	CMD	Address (HEX)	Value (HEX)	Description
		0026	000A	N, M division bypass and odd division values. N, M division is not bypassed, odd division values enabled
		002A	0201	N, count value = $0x02 + 0x01 = 0x03$ (3 DEC)
		002B	6261	M count value = $0x62 + 0x61 = 0xC3$ (195 DEC)
		002E	2120	C0 count value = $0x21 + 0x20 = 0x41$ (65 DEC)
		002F	2120	C1 count value = $0x21 + 0x20 = 0x41$ (65 DEC)
		0027	555a	Counter C0-C7 bypass and odd division control bits. C0 and C1 not bypassed, others bypassed. C0 and C1 odd division values enabled, others not enabled.
		0028	5555	Counter C7-C15 bypass and odd division control bits. All counters are bypassed.
		0023	0009	Trigger reconfiguration for PLL index 1.
4	WR	0023	6308	Release PLL reconfiguration bit, set PLL index - 1, cnt index - 3, phase shift - up, phase shift mode - auto
		0024	0207	Phase shift value = $0x0207$ (519 DEC), represents 360 degrees (range in which auto phase shift is executed)
		0023	630a	Trigger auto phase shift for PLL index 1, cnt index 3, phase shift - up, phase shift mode - auto
5	RD	0021	-	Read PLL configuration status register and wait for configuration done (0x0005)
6	WR	0023	6308	Release PLL phase shift bit, set PLL index - 1, cnt index - 3, phase shift - up, phase shift mode - auto

#### 4.4.2 TX PLL module - txpll\_top configuration (auto phase shift mode)

This example assumes that LMS7002M chip is already configured, outputs 20MHz clock on LMS\_MCLK1-2 pins, LimeLight digital loopback is enabled and FPGA rxpll\_top module is already configured. See **Table 28** for configuration sequence.

**Table 28 txpll\_top configuration sequence in auto phase shift mode**

N	CMD	Address (HEX)	Value (HEX)	Description
1	WR	000A	0200	Enable TX test pattern

N	CMD	Address (HEX)	Value (HEX)	Description
2	WR	0005	0000	Turn off direct clocking
3	WR	0025	01F0	Set PLL parameters
		0023	0000	Set PLL index to 0 and rest bits to zero
4	WR	0023	0000	Set PLL index to 0 and rest bits to zero
		0026	000A	N, M division bypass and odd division values. N, M division is not bypassed, odd division values enabled
		0002A	0201	N, count value = $0x02 + 0x01 = 0x03$ (3 DEC)
		002B	6261	M count value = $0x62 + 0x61 = 0xC3$ (195 DEC)
		002E	2120	C0 count value = $0x21 + 0x20 = 0x41$ (65 DEC)
		002F	2120	C1 count value = $0x21 + 0x20 = 0x41$ (65 DEC)
		0027	555a	Counter C0-C7 bypass and odd division control bits. C0 and C1 not bypassed, others bypassed. C0 and C1 odd division values enabled, others not enabled.
		0028	5555	Counter C7-C15 bypass and odd division control bits. All counters are bypassed.
		0023	0001	Trigger reconfiguration for PLL index 0.
5	WR	0023	6300	Release PLL reconfiguration bit, set PLL index - 0, cnt index - 3, phase shift - up, phase shift mode - auto
		0024	0207	Phase shift value = $0x0207$ (519 DEC), represents 360 degrees (range in which auto phase shift is executed)
		0023	6302	Trigger auto phase shift for PLL index 0, cnt index 3, phase shift - up, phase shift mode - auto
6	RD	0021	-	Read PLL configuration status register and wait for configuration done (0x0005)
7	WR	0023	6300	Release PLL phase shift bit, set PLL index - 0, cnt index - 3, phase shift - up, phase shift mode - auto

## 4.5 Controlling TX and RX data stream

Data stream can be enabled when LMS7002M chip and FPGA PLL modules are configured. See chapters **4.2 Accessing LMS7002M registers** and **4.4 Configuring FPGA PLL module**.

**To enable TX and RX data stream** – follow FPGA register write sequence described in **Table 29**.

**Table 29 enabling TX and RX data stream**

N	CMD	Address (HEX)	Value (HEX)	Description
1	WR	000A	0000	Stop data stream
2	WR	0009	0000	Clear packet loss and reset timestamp bits.
3	WR	0009	0003	Clear packet loss flag and reset timestamp.
4	WR	0009	0000	Clear packet loss and reset timestamp bits.
5				Reset USB3.0 EP01 end EP81 endpoints (Use CMD_STREAM_RST command)
6	WR	0008	102	Set sample width -12, mode - TRXIQ, DDR - enabled, TRXIQ_PULSE mode - disabled, packet synchronization - enabled
7	WR	0007	0001	Set active channels - 1
8	WR	000A	0001	Start stream

**To disable TX and RX data stream** – follow FPGA register write sequence described in **Table 30**.

**Table 30 disabling TX and RX data stream**

N	CMD	Address (HEX)	Value (HEX)	Description
1	WR	000A	0000	Stop data stream

## 4.6 Using WFM player

WFM player requires that onboard clock generator Si5351C has to be configured to output 27MHz clock on CLK0 output and LMS7002M has to be configured. See **Table 31** for data loading sequence.

**Table 31 WFM data loading**

N	CMD	Address (HEX)	Value (HEX)	Description
1	WR	000C	0003	Enable both channels
2	WR	000E	0002	Set sample width to 16bit mode
4	WR	000D	0006	Enable WFM loading
5				Load WFM data to EP01 endpoint
6	WR	000D	0002	Disable WFM loading, start playing file