

GigaDevice Semiconductor Inc.

**GD32450Z-EVAL
FreeRTOS
Getting Started Guide**

Revision 1.1

(May 2020)

Getting started with the GD32450Z-EVAL

This tutorial provides instructions for getting started with the GigaDevice GD32450Z-EVAL board. If you do not already have the GigaDevice GD32450Z-EVAL board, visit the [GigaDevice website](#) to purchase one.

Before you begin, you must configure AWS IoT and your FreeRTOS software to connect your development board to the AWS Cloud. For instructions, see [First steps](#) in FreeRTOS User Guide. Then download [FreeRTOS code](#) for GigaDevice from GitHub. In this tutorial, the path to the FreeRTOS download directory is referred to as `<amazon-freertos>`.

Overview

This tutorial guides you through the following steps:

1. Install software on your host machine for developing and debugging embedded applications for your microcontroller board.
2. Compile the FreeRTOS demos application.
3. Set up GD32450Z-EVAL board.
4. Load the application image to your board and run the application.

Set Up Your Development Environment

Using Keil MDK v5 to compile FreeRTOS demos for GD32450Z-EVAL board. You can download Keil MDK v5 at [Keil MDK](#) website. The Keil MDK v5 Essential, Plus, or Pro version should also work for the GD32F450 (Cortex-M4 core) MCU.

To install the development tool for the GD32450Z-EVAL board


1. Download the Keil MDK.
2. Install the Keil MDK on your host machine by using your license. The Keil MDK includes the Keil µVision IDE, a C/C++ compilation toolchain, and the µVision debugger.
3. Install the GD32F4xx Series Pack file from Pack Installer window of Keil IDE, you can also get pack file from the GigaDevice website.

Set up GD32450Z-EVAL board correctly


Make sure the jumper cap on the development board is set correctly. JP4, JP5, JP6 jump to 'Eth'. JP13 jump to 'Usart0'.

Build the FreeRTOS Demo Project


1. Make sure the Keil MDK v5 is installed correctly.
2. Open aws_demos folder in the *<amazon-freertos> \ projects \ gigadevice \ gd32450z_eval \ uvision* directory.
3. Double click GD32450Z_EVAL.uvprojx project file to open demo project.
4. To make sure that your settings are correct to flash the chip, click the 'Options for Target' in the project navigation pane.
5. On the 'Device' tab, verify the chip type is set to GD32F450ZK.

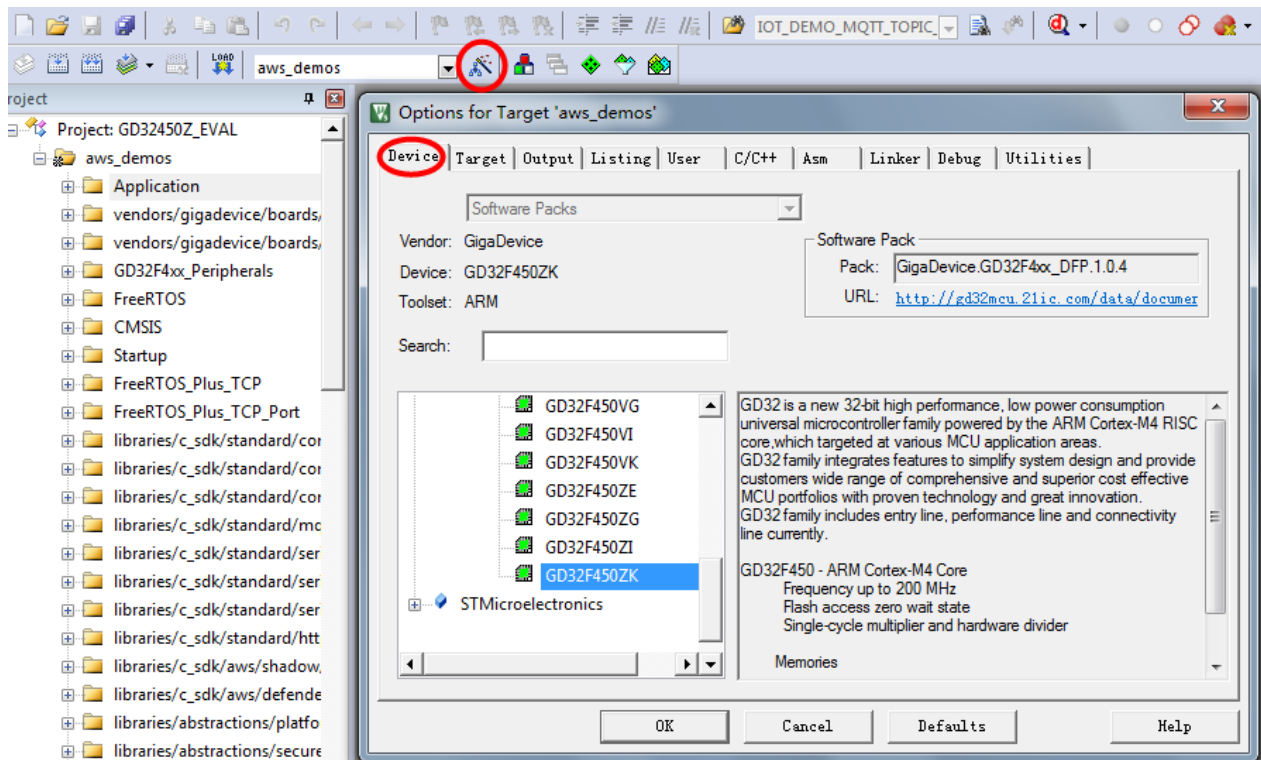

6. On the 'Utilities' tab, verify that 'Use Target Driver for Flash Programming' is selected, then click 'Settings' and verify Programming Algorithm was chosen to 'GD32F4xx_3MB FMC'.

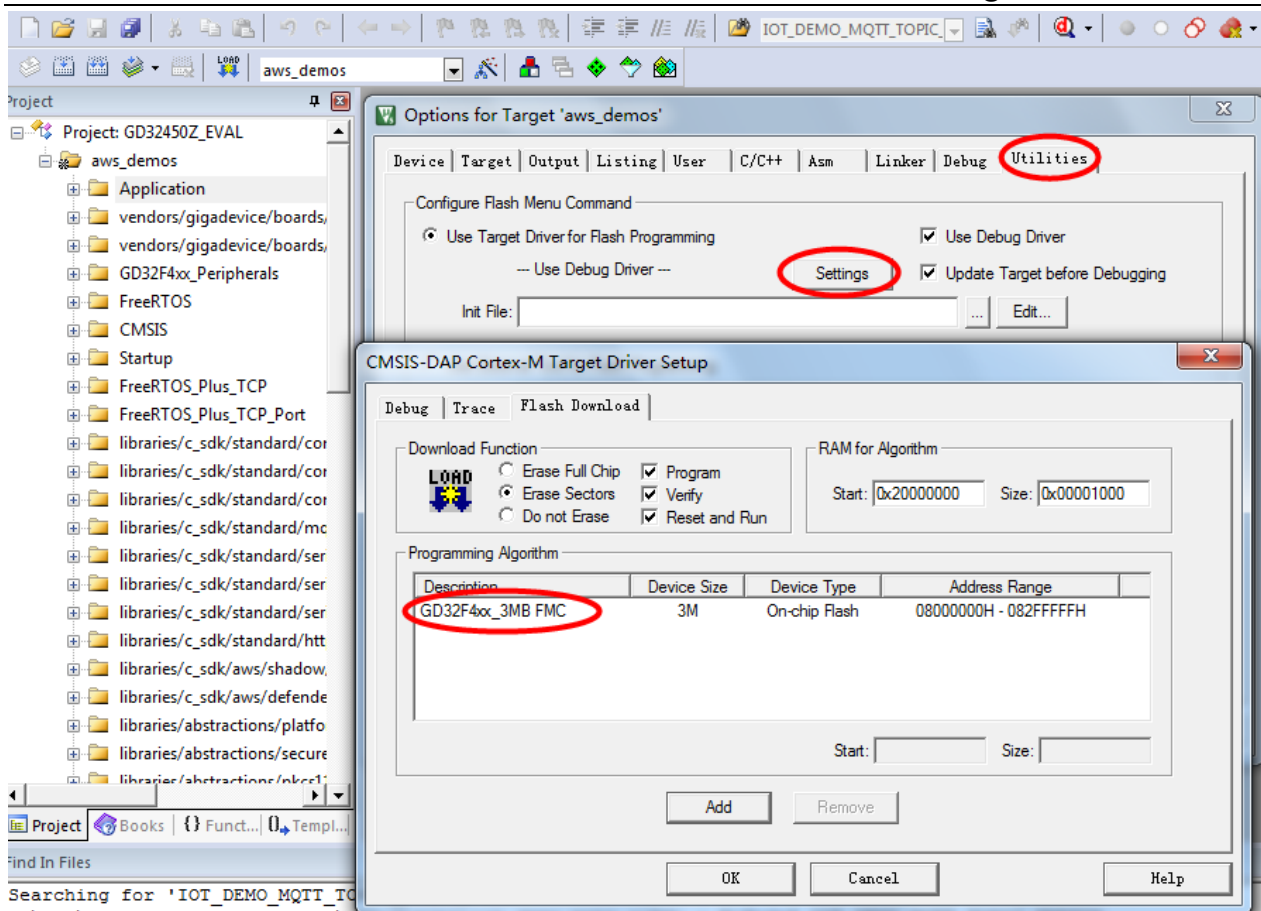

- On the 'Debug' tab, you can select the corresponding debugger as required. The default debugger is CMSIS-DAP Debugger.

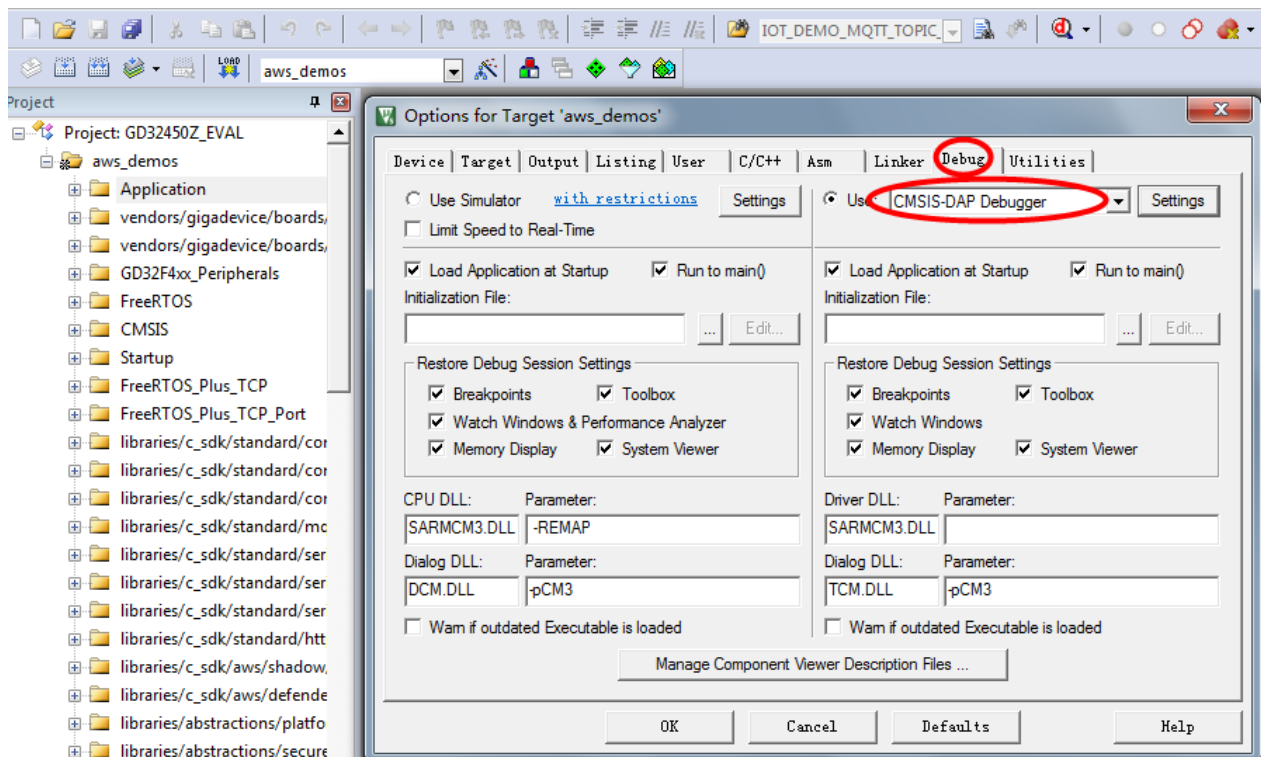

- Click 'Build' button in the project navigation pane after the above operations are completed.

Run the FreeRTOS Demo Project

1. Click the 'Download' button in the project navigation pane to flash the program to the GD32450Z-EVAL board after the correct compilation.
2. You can view the demo running result through the serial port.

Notice: If the development board of 2016-10 v1.1 and earlier version is used, the silk screen of serial port 1 on the development board is marked as COM1. If the development board of 2019-4 v1.1 is used, the silk screen of serial port 1 on the development board is marked as COM0.

```
FreeRTOS App Ver:90002
FreeRTOS_IPInit
vTaskStartScheduler

Network buffers: 16 lowest 16

Write certificate...

IP Address: 192.168.62.138
Subnet Mask: 255.255.255.0
Gateway Address: 192.168.62.1
DNS Server Address: 208.67.222.222

[INFO ][DEMO][2323] -----STARTING DEMO-----

[INFO ][INIT][2328] SDK successfully initialized.
[INFO ][DEMO][2332] Successfully initialized the demo. Network type for the
demo: 4
[INFO ][MQTT][2340] MQTT library successfully initialized.
[INFO ][DEMO][2345] MQTT demo client identifier is dyr_thing (length 9).
Network buffers: 15 lowest 15

DNS[0x06BF]: The answer to 'ak42ahou55ic7.iot.cn-north-1.amazonaws.com.cn'
```

```
[INFO ][DEMO][8000] 2 publishes received.
[INFO ][MQTT][8004] (MQTT connection 200144c0) UNSUBSCRIBE operation
scheduled.
[INFO ][MQTT][8011] (MQTT connection 200144c0, UNSUBSCRIBE operation
20014660) Waiting for operation completion.

[INFO ][MQTT][8066] (MQTT connection 200144c0, UNSUBSCRIBE operation
20014660) Wait complete with result SUCCESS.
[INFO ][MQTT][8076] (MQTT connection 200144c0) Disconnecting connection.
[INFO ][MQTT][8083] (MQTT connection 200144c0, DISCONNECT operation
20014660) Waiting for operation completion.
[INFO ][MQTT][8093] (MQTT connection 200144c0, DISCONNECT operation
20014660) Wait complete with result SUCCESS.
[INFO ][MQTT][8103] (MQTT connection 200144c0) Connection disconnected.
[INFO ][MQTT][8109] (MQTT connection 200144c0) Network connection closed.
[INFO ][MQTT][8133] (MQTT connection 200144c0) Network connection
destroyed.
[INFO ][MQTT][8140] MQTT li
140] MQTT li
brary cleanup done.
[INFO ][DEMO][8144] memory_metrics::freertos_heap::before::bytes::95016
[INFO ][DEMO][8150] memory_metrics::freertos_heap::after::bytes::14096
[INFO ][DEMO][8157] memory_metrics::demo_task_stack::before::bytes::20308
[INFO ][DEMO][8164] memory_metrics::demo_task_stack::after::bytes::16632
[INFO ][DEMO][8170] Demo completed successfully.
[INFO ][INIT][8174] SDK cleanup done.
[INFO ][DEMO][8178] -----DEMO FINISHED-----
```

To subscribe to the MQTT topic with the AWS IoT MQTT client

You can use the MQTT client in the AWS IoT console to monitor the messages that your device sends to the AWS Cloud

1. Sign in to the [AWS IoT console](#).
2. In the navigation pane, choose 'Test' to open the MQTT client.
3. In 'Subscription topic', enter `iotdemo/#`, and then choose 'Subscribe to topic'.



监控
入门培训
管理
Greengrass
安全
防护
行动
测试

软件
设置
学习

MQTT 客户端 ?

已以 iotconsole-1589339054818-1 的名义建立连接

订阅

订阅主题

发布消息至一个主题

订阅
设备会在主题下发布 MQTT 消息。您可以使用此客户端订阅一个主题并接收这些消息。

订阅主题

iotdemo/topic/1

订阅主题

最大消息捕获 ?

100

服务质量 ?

- ☒ 0 - 此客户端不会向 Device Gateway 确认已接收到消息
☐ 1 - 此客户端会向 Device Gateway 确认已接收到消息

MQTT 负载显示

- ☒ 自动格式化 JSON 负载 (提高可读性)
☐ 以字符串形式显示负载 (更准确)
☐ 显示原始负载 (十六进制)

发布

指定要发布的主题和消息, QoS 为 0。

指定要发布到的主题, 例如 myTopic/1

发布到主题



监控
入门培训
管理
Greengrass
安全
防护
行动
测试

软件
设置
学习

订阅

订阅主题

发布消息至一个主题

iotdemo/topic/1

x

iotdemo/topic/1

导出

清除

暂停

发布

指定要发布的主题和消息, QoS 为 0。

iotdemo/topic/1

发布到主题

```
1 {  
2   "message": "Hello from AWS IoT console"  
3 }
```

Hello world 12!

iotdemo/topic/1 2020年5月13日 上午10:56:04 +0800

导出 隐藏

我们无法以 JSON 格式显示消息, 转而以 UTF-8 字符串形式显示。

Hello world 8!

iotdemo/topic/1 2020年5月13日 上午10:56:04 +0800

导出 隐藏

我们无法以 JSON 格式显示消息, 转而以 UTF-8 字符串形式显示。

Hello world 4!

iotdemo/topic/1 2020年5月13日 上午10:56:04 +0800

导出 隐藏