

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

# **THINC-API Installation Manual**

**Document No.: S5015-007-08**

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

## Revision History

Date	Version	Description	Author
05/10/2007	S5015-007-00	Installation Manual	LHuynh
10/05/2007	S5015-007-01	Add Installation For Custom Application section	LHuynh
2/22/2008	S5015-007-02	Add 4.3, 4.4 section and revise section 7.2. Change name of release note for Lathe and MC and installation manual to actual name (LatheReleaseNote/MCReleaseNote, InstallationManual)	LHuynh
4/11/2008	S5015-007-03	<ul style="list-style-type: none"> <li>- Revise section 3.0 Requirement</li> <li>- Revise section 3.1 Compatibles</li> <li>- Revise section 4.1.1 Run Setup</li> <li>- Revise section 4.1.2 Setup Type</li> <li>- Revise section 4.3 Install License File</li> <li>- Revise section 4.4.1.2 Validation</li> <li>- Remove section 4.4.1.3.2 OSP System software</li> <li>- Revise 5.1.1.1 Setup</li> <li>- Revise section 7.2 License</li> <li>-Revise section 7.3 Best Practice</li> </ul>	LHuynh
6/02/2008	S5015-007-04	<ul style="list-style-type: none"> <li>- Revise section 4.3 Install license file</li> <li>- Revise section 5.1.1 Repair</li> </ul>	LHuynh
10/27/2008	S5015-007-05	Revise 4.1.5 Finish Revise 4.2.5 Finish Revise 5.1.1.3 Finish	LHuynh
02/14/2014	S5015-007-06	Revised all THINC API to THINC-API	LHuynh
11/17/2015	S5015-007-07	Revised for public release 1.18.0.0	LHuynh
11/17/2016	S5015-007-08	Revised for public release 1.19.0.0 Sessions: 1.4, 3.0, 4.0, 4.5, 6.0, 7	LHuynh

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

## Table of Contents

1.	Introduction	5
1.1	Purpose	5
1.2	Scope	5
1.3	Definitions, Acronyms, and Abbreviations	5
1.4	Overview	5
2.	References	5
3.	Requirements	5
3.1	Compatibles	5
4.	Installation Instruction	6
4.1	Machine/NC Master Installation	6
4.1.1	Run Setup	6
4.1.2	Setup Type	8
4.1.3	Setup	8
4.1.4	Installing	9
4.1.5	Finish	10
4.2	Desktop Installation	11
4.2.1	Run setup	11
4.2.2	Setup Type	12
4.2.3	Setup	13
4.2.4	Installing	13
4.2.5	Finish	14
4.3	Upgrade Installation	14
4.3.1	Run setup	15
4.3.2	Installing	16
4.3.3	Finish	17
4.4	Install License file	18
4.5	Validate Installation	18
4.5.1	THINC-API Libraries	18
4.5.1.1	Run THINC sample application	18
4.5.1.2	Validation	18
4.5.1.3	Errors	22
4.5.2	Logging Service & Logging Service Client Application	33
4.5.2.1	Logging Service	33
4.5.2.2	Logging Library	36
4.5.2.3	Logging Service Client Application	36
4.5.2.4	Logging Service for Grinder API Only	37
5.	Repair/Uninstall THINC-API	38
5.1	Repair/Un-install	38
5.1.1	Repair	38
5.1.1.1	Run Setup	38
5.1.1.2	Setup	42
5.1.1.3	Finish	43
5.1.2	Uninstall	43
5.1.2.1	Run setup	43

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

5.1.2.2	Setup Status	46
5.1.2.3	Finish	47
6.	Installation Files	48
6.1	Machine/NC Master Installation	49
6.1.1	Lathe	49
6.1.1.1	GAC Folder	49
6.1.1.2	Okuma Folders	49
6.1.2	Machining Center	49
6.1.2.1	GAC Folder	49
6.1.2.2	Okuma Folders	50
6.1.3	Grinder	50
6.1.3.1	GAC Folder	50
6.1.3.2	Okuma Folders	51
6.2	Desktop Installation	51
7.	Installation for Custom Application	51
7.1	THINC-API Spec. Code	52
7.2	License	53
7.3	Installation	55
7.4	Public Release	55
7.5	Best Practice	55

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

# Installation Manual

## 1. Introduction

### 1.1 Purpose

The purpose of this document is providing the instruction of how to install THINC-API on machine, NC Master, and desktop PC. It also provides information on how to repair and uninstall THINC-API.

### 1.2 Scope

This installation will cover installing THINC-API for different machine types, and desktop PC.

### 1.3 Definitions, Acronyms, and Abbreviations

GAC – Global Assembly Cache Windows folder located in 'C:\WINDOWS\assembly' for .NET Framework 1.1 only.

### 1.4 Overview

The THINC-API setup application will automatically detect if this installation is for Machine/NC master or desktop PC.

The THINC-API setup application will also detects and installs the correct THINC-API library files for lathe, machining center, or grinder when installing on Machine/NC Master.

For desktop installation, all libraries can be installed altogether if needed.

In either installation the setup will require D drive.

THINC-API libraries and help files can be obtained directly by copying from the installation disk under this directory:

..\program files\Okuma\THINC API\Bin  
 ..\program files\Okuma\THINC API\Help

## 2. References

None

## 3. Requirements

**The THINC-API setup application requires running under Administrator user account only. It also requires to run under Windows mode only (NC is not running). If NC is running, it requires rebooting the machine to Windows mode. D drive is required for installation.**

### 3.1 Compatibles

THINC-API must be installed on the OSP-P100II/P200 or newer OSP-P controls in order to access to machine data. It requires .NET framework 1.1 for Lathe and Machining Center API. Grinder API requires .NET Framework 4.0.

THINC-API has been tested on the following platforms:

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

- Microsoft Windows XP Professional Embedded with SP1, SP2, and SP3
- Microsoft Windows 7 x86 with SP1

THINC-API libraries can be used with Microsoft Visual Studio 2003 or newer Visual Studio version to develop custom Windows application.

## 4. Installation Instruction


Installation must be performed on machine or PC that has D drive only.

The setup must be either run from the installation disk or copied to local hard drive on the target machine/PC.

### 4.1 Machine/NC Master Installation



#### 4.1.1 Run Setup

Run the THINC-API-Setup.exe program from the provided installation disk on Machine/NC Master

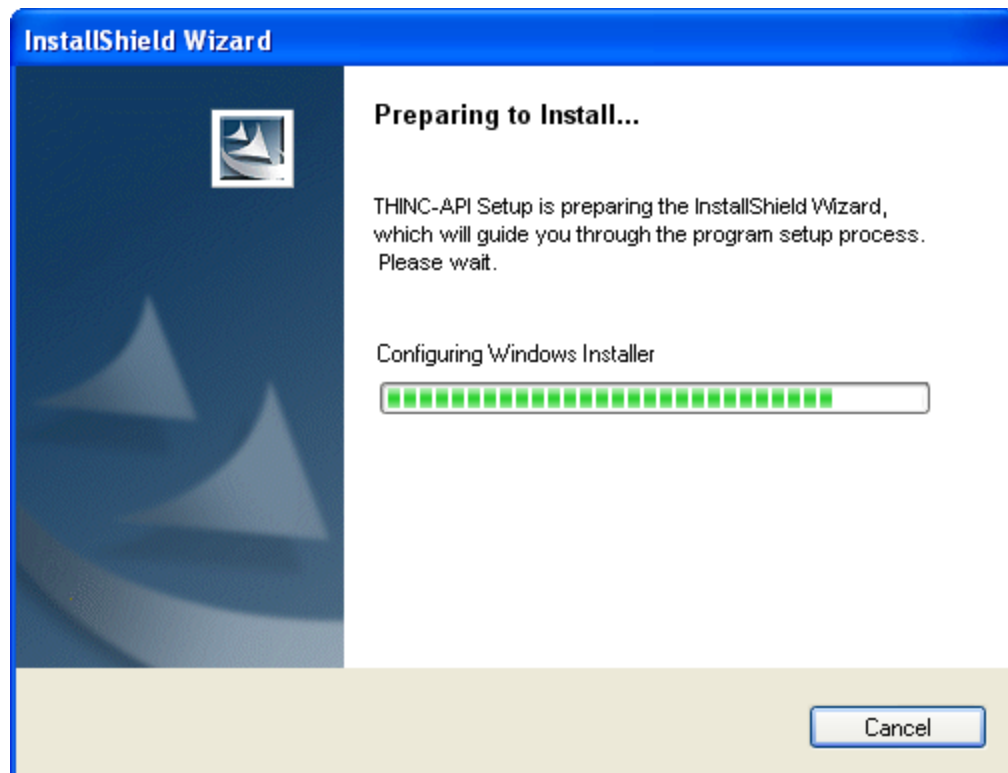

*During this stage, the installation will evaluate OSP system file to ensure that it can support current installation. If not, the setup will generate an error message and terminate the installation.*


THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

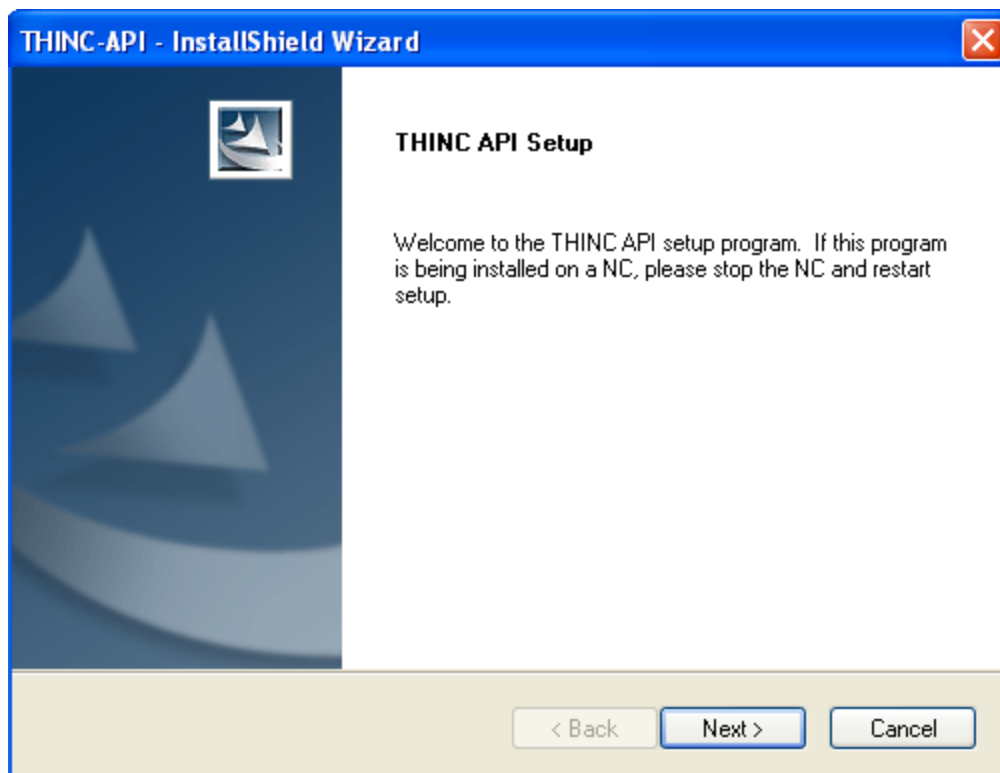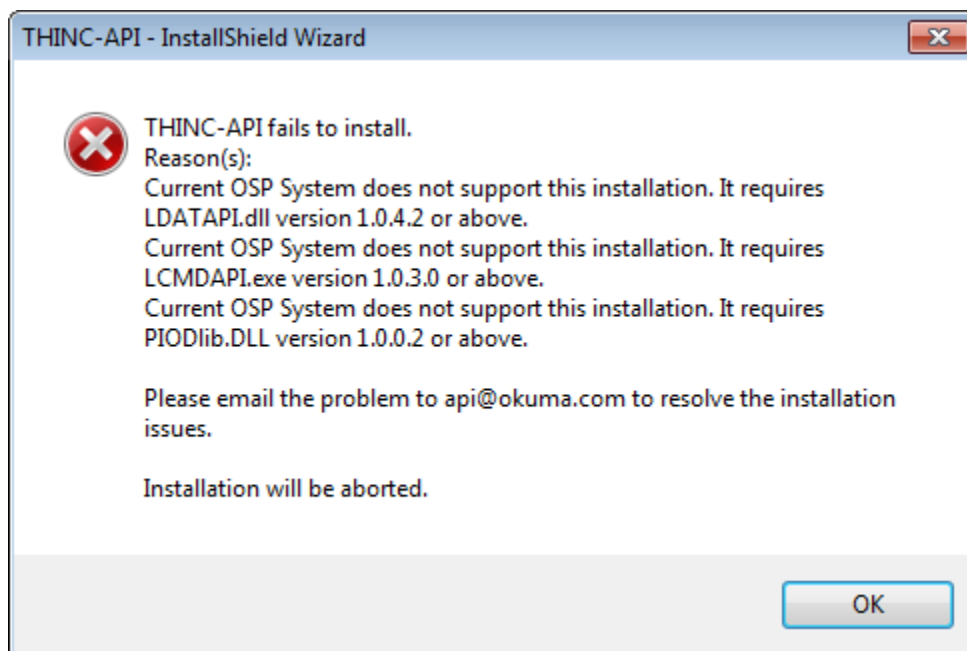

Press Next to advance to the next page

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

#### 4.1.2 Setup Type

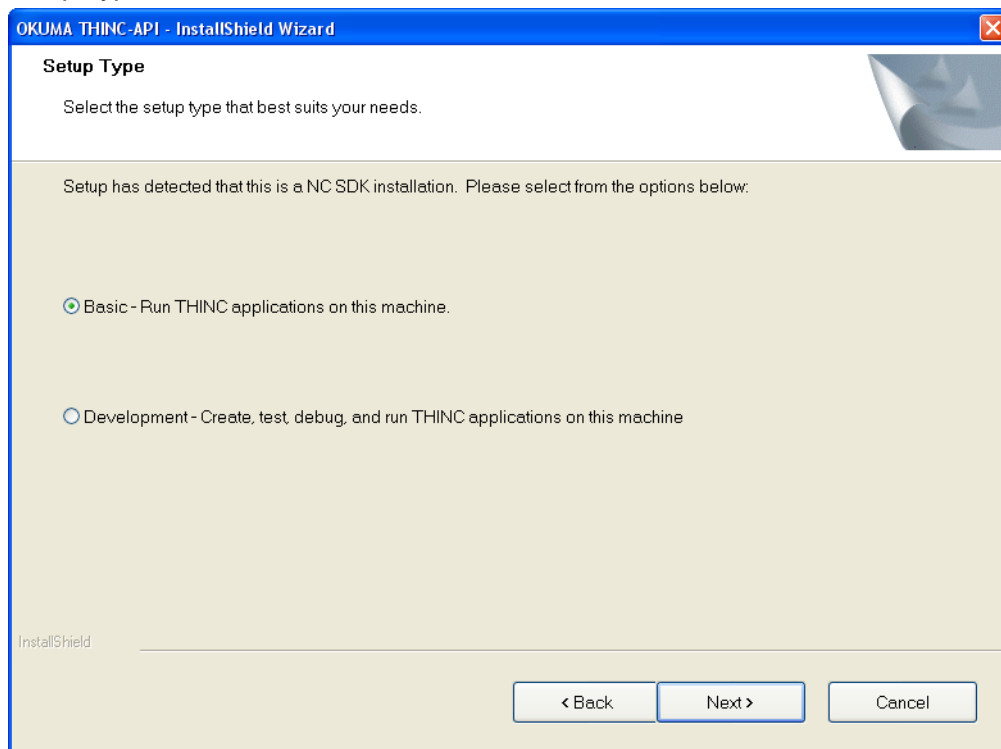


Select the appropriate option and click Next to continue with the installation process.

#### 4.1.3 Setup



THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

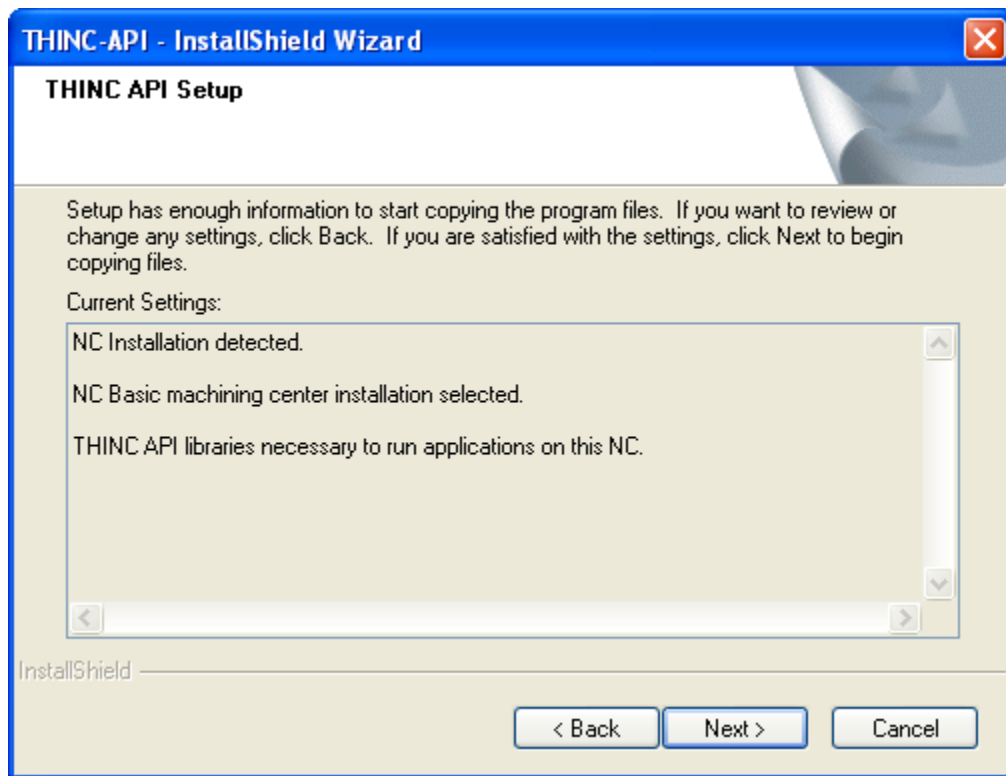


In this setup dialog, information on the selected options will be displayed.

Click Next to continue with the installation process or click Back to review/ change any settings.


#### 4.1.4 *Installing*

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

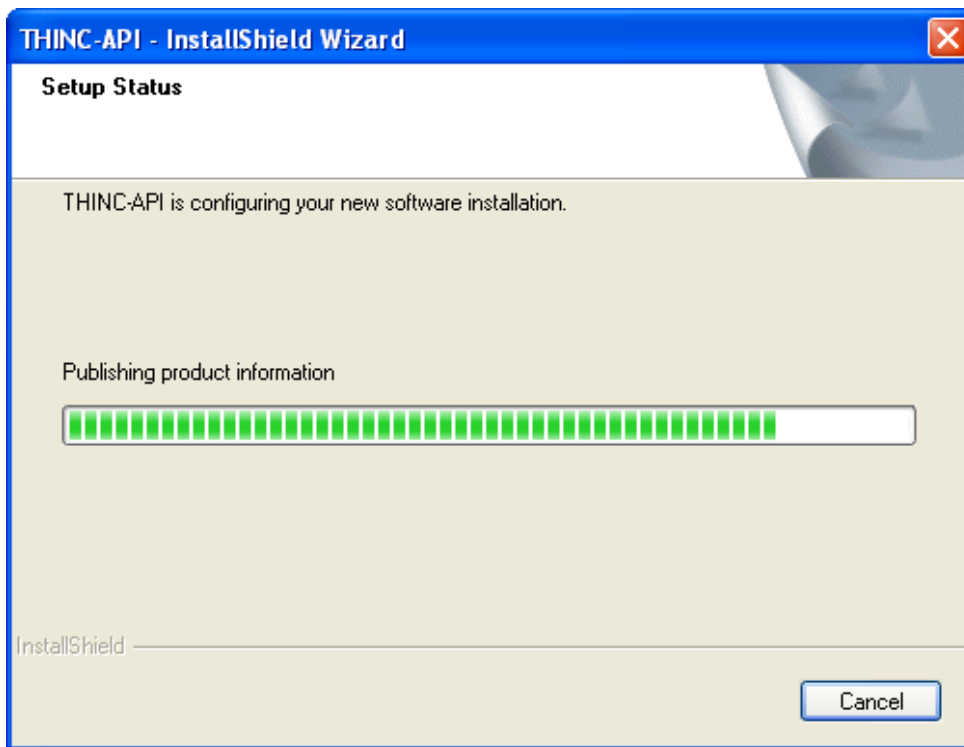

At any time, you can press Cancel button to terminate the installation.

#### 4.1.5 Finish

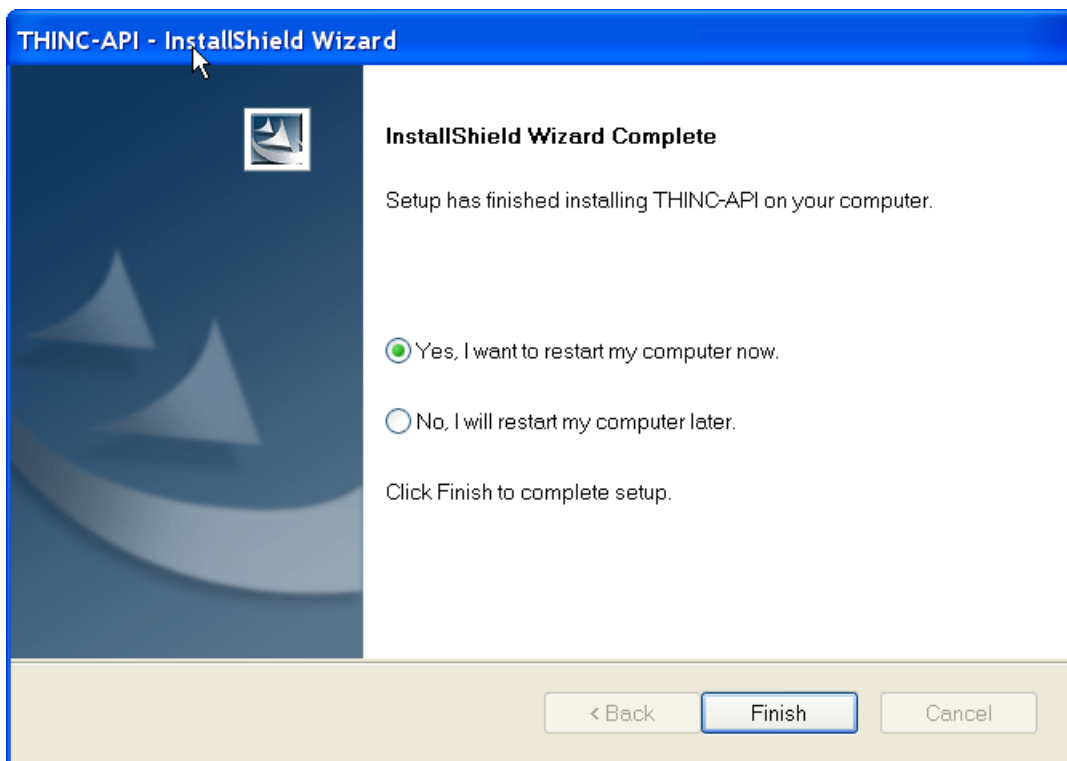

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

Click Finish to just finish the installation process.


## 4.2 Desktop Installation

All 3 libraries for Lathe, Machining Center, and Grinder can be installed when desktop installation is detected. The installation will consider desktop installation when there is no OSP-P folder on C drive.


All libraries and applications will be installed for each selection of machine types.

### 4.2.1 Run setup

Run the THINC-API-Setup.exe program from the provided installation disk on desktop PC.

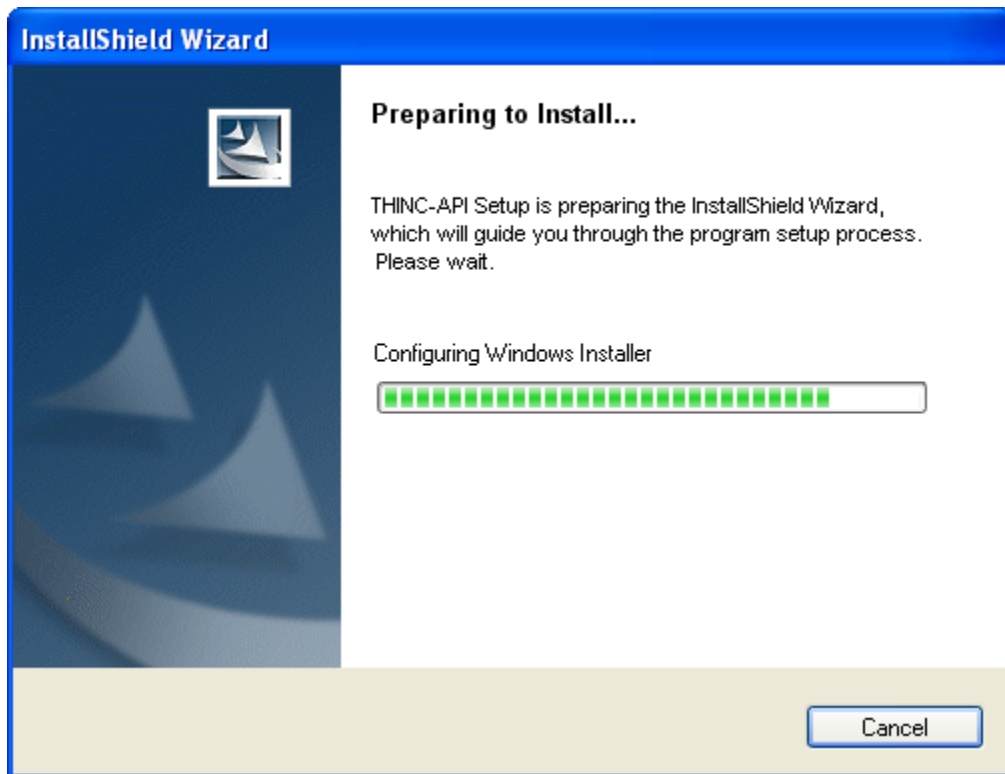


THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

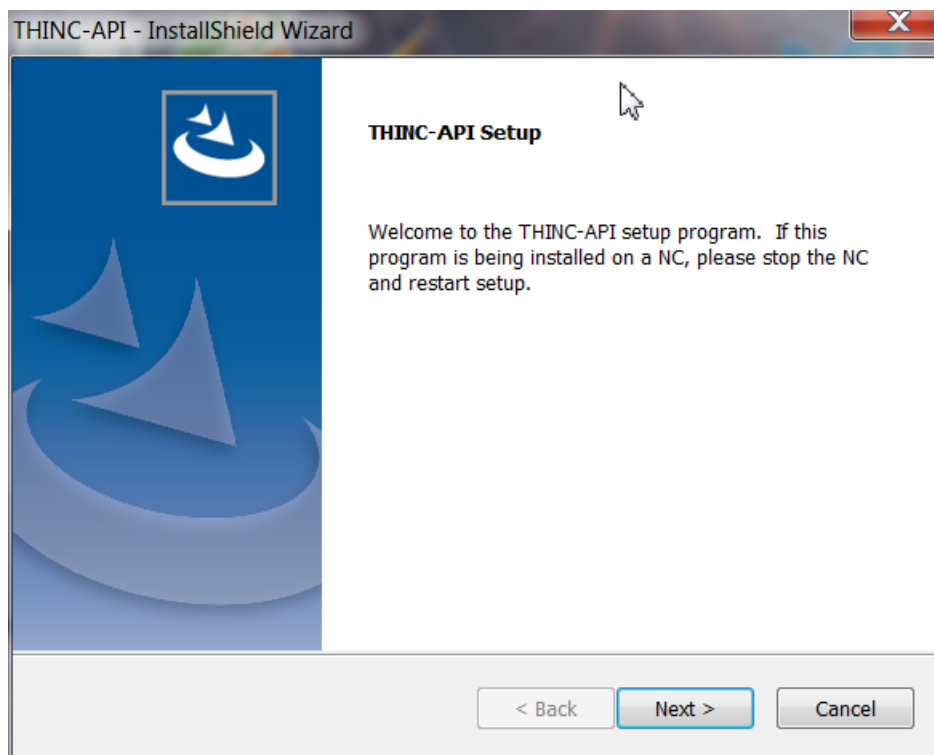

Press Next to advance to the next page


#### 4.2.2 Setup Type

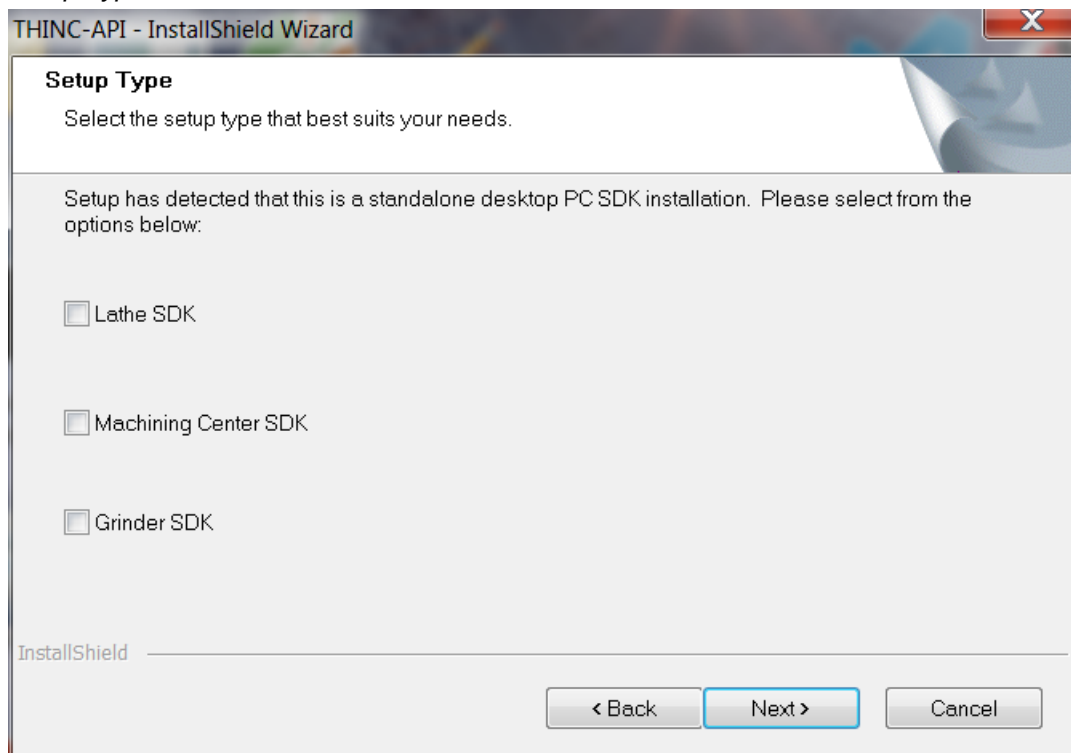

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

Select the appropriate option and click Next to continue with the installation process.

#### 4.2.3 Setup

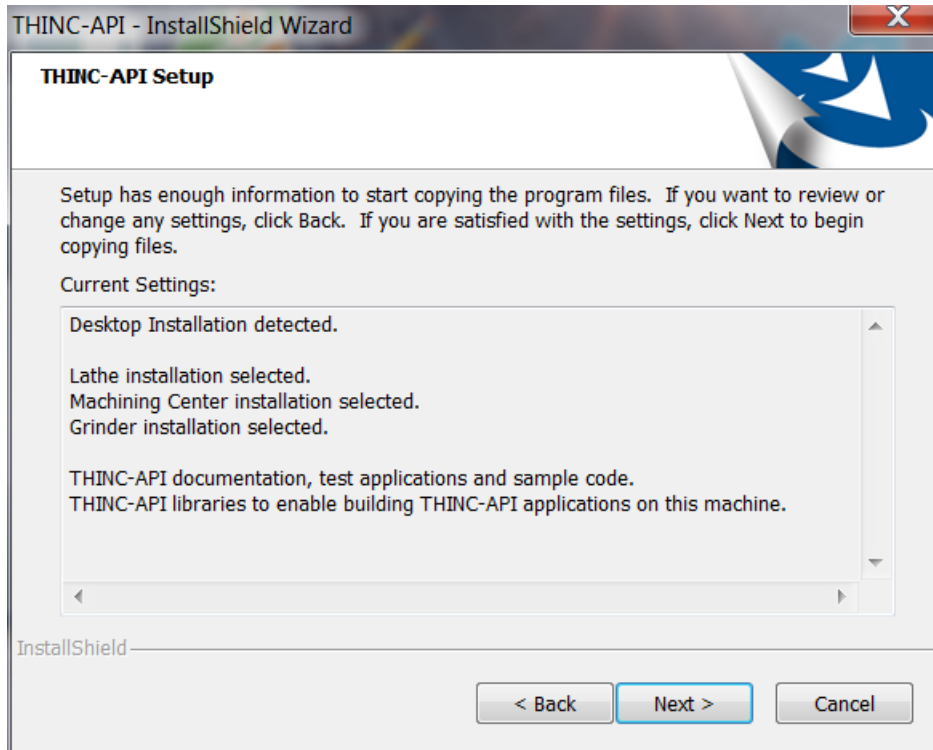


In this setup dialog, information on the selected options will be displayed.

Click Next to continue with the installation process or click Back to review/ change any settings.

#### 4.2.4 Installing

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

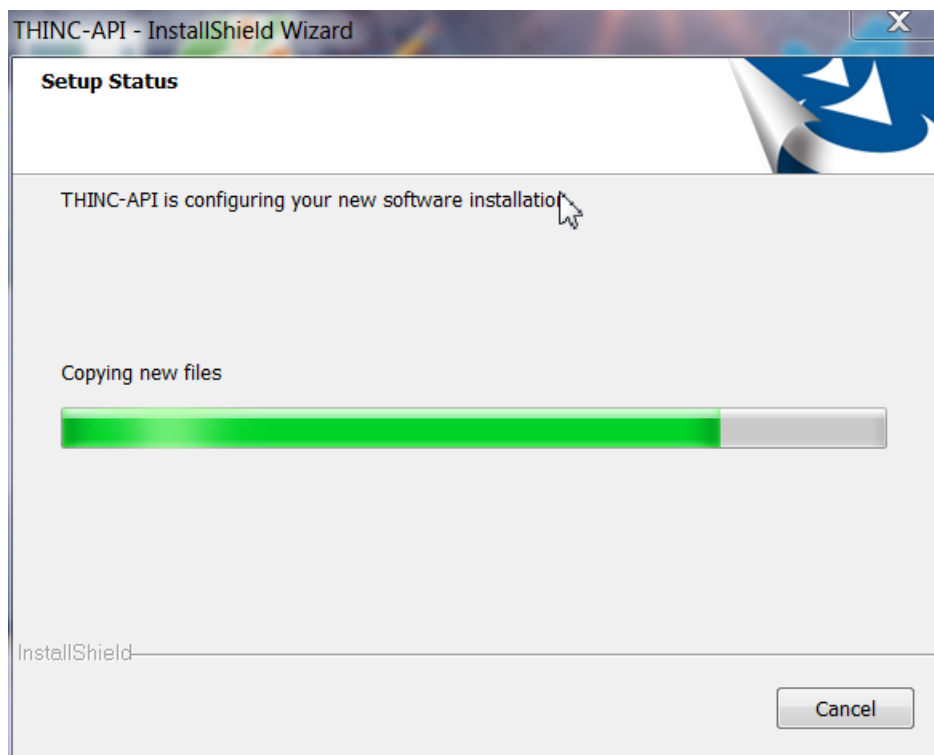

At any time, you can press Cancel button to terminate the installation.

#### 4.2.5 Finish



Click Finish to just finish the installation process.

### 4.3 Upgrade Installation


If the target machine or PC already has the previous version THINC-API then the installation will enter the

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016


upgrade installation mode.

#### 4.3.1 Run setup

Run the THINC-API-Setup.exe program from the provided installation disk on Machine/NC Master


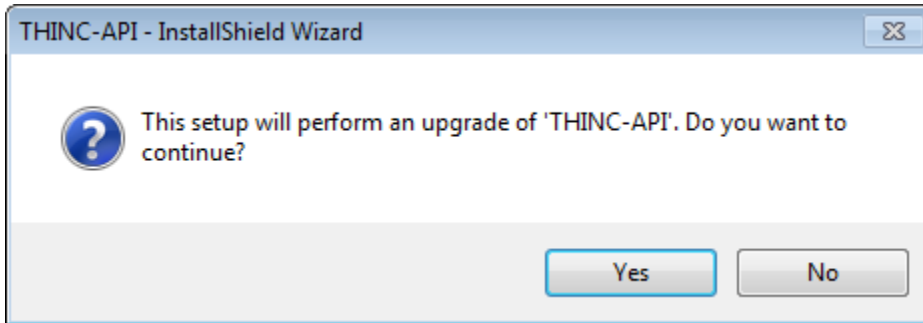


Click “Yes” button to perform upgrade THINC-API to the newer version

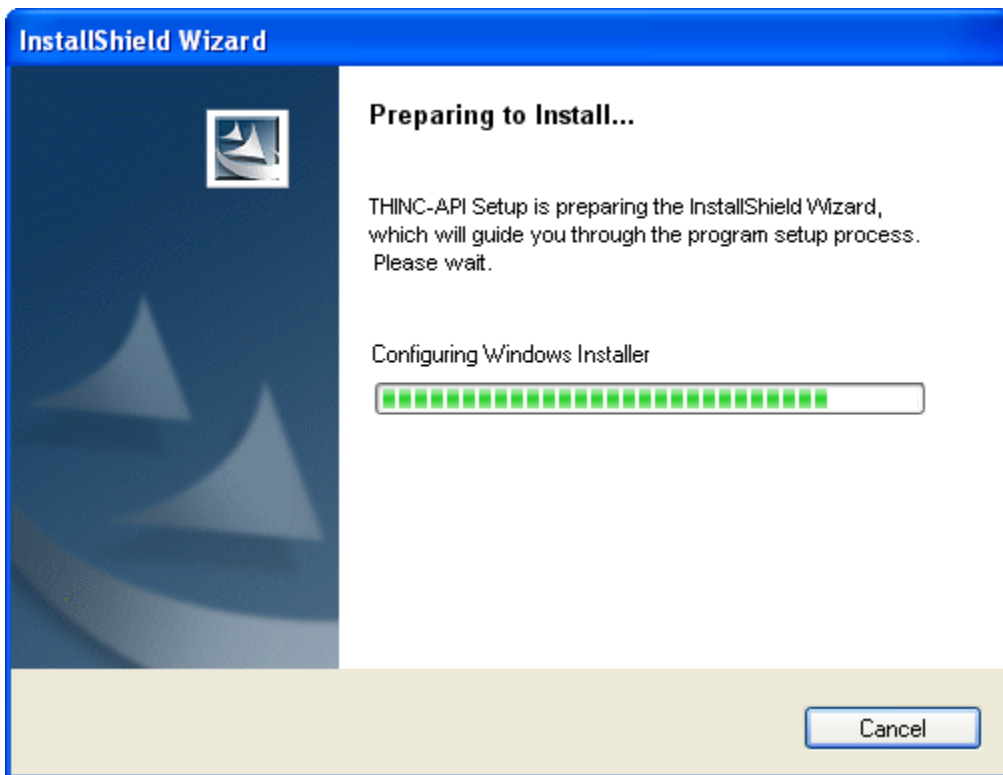

**During this stage, the installation will evaluate OSP system file to ensure that it can support current installation. If not, the setup will generate an error message and terminate the installation.**

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

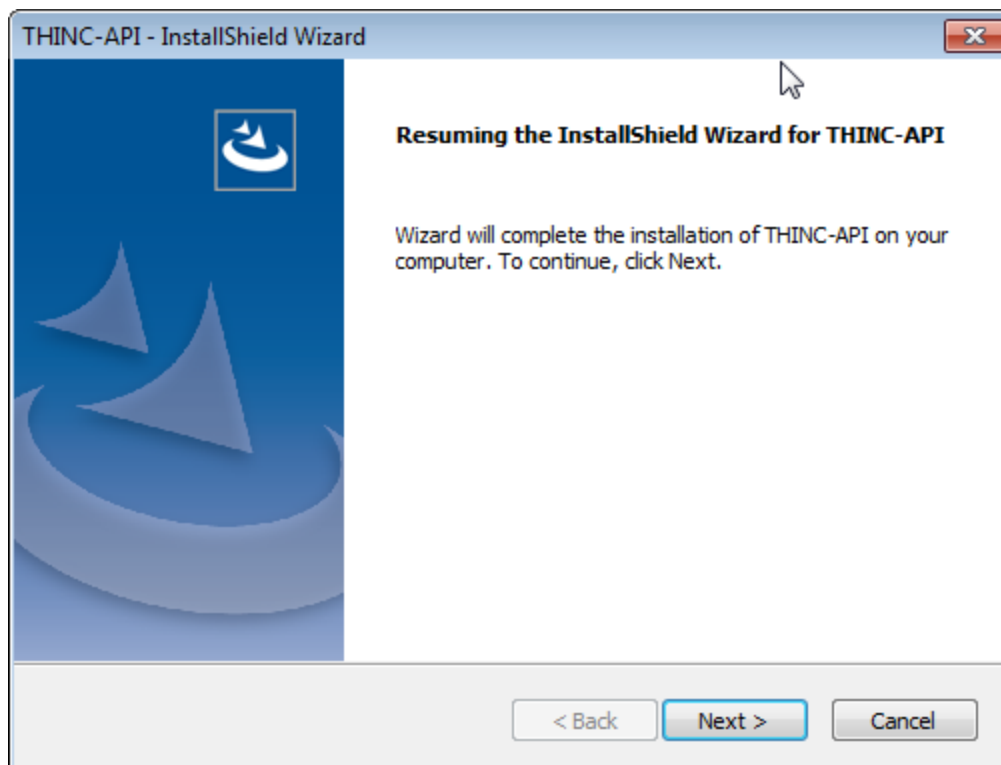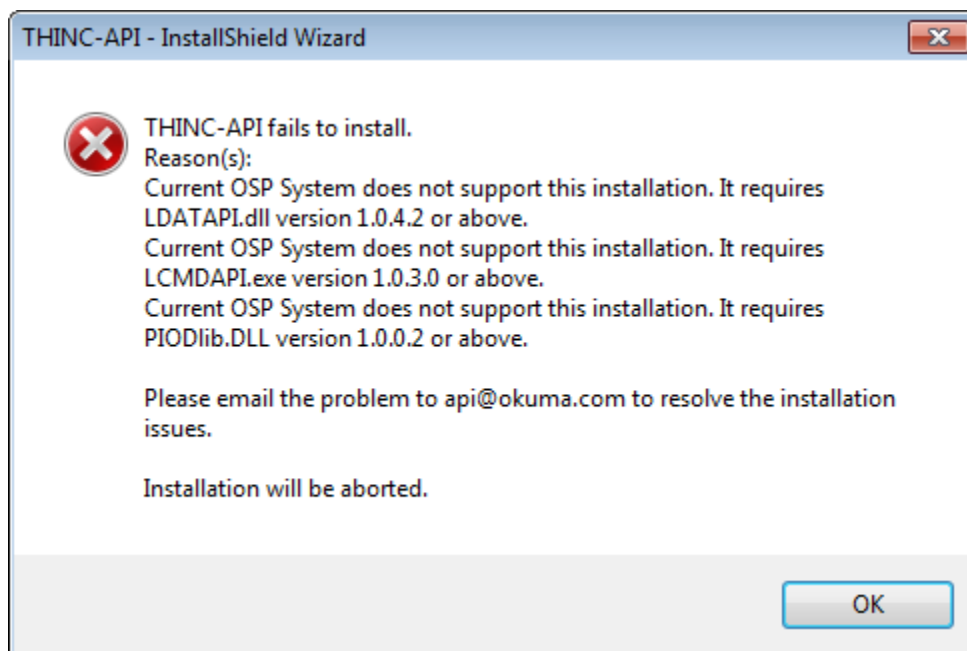


Press Next to advance to the next page

#### 4.3.2 *Installing*




THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

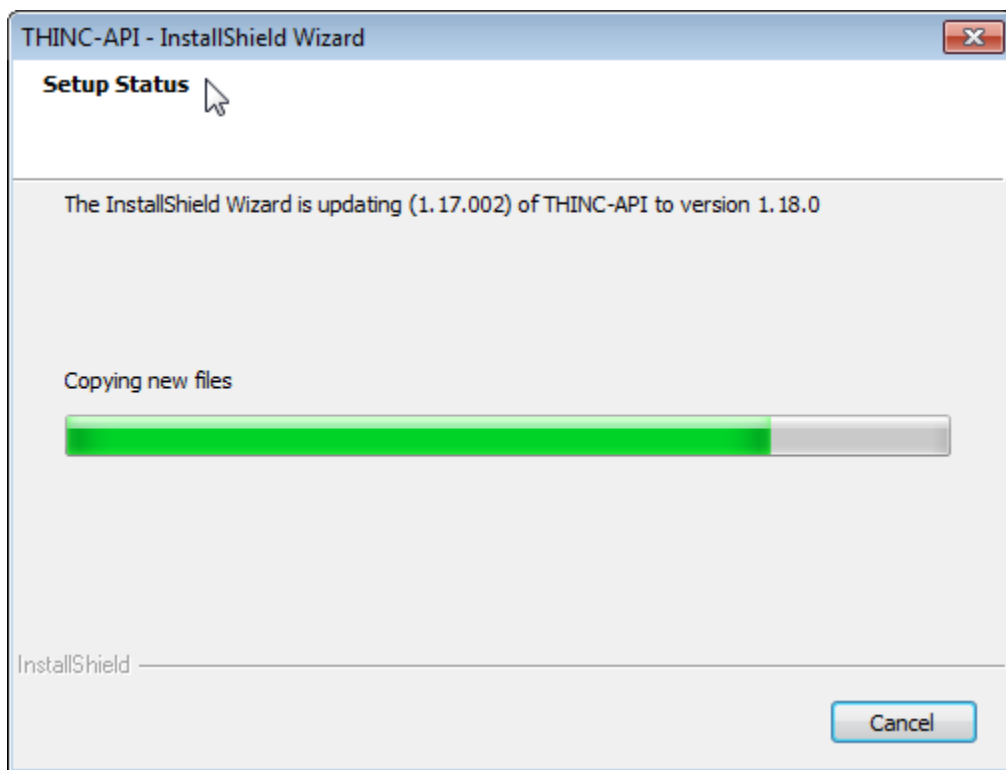

At any time, you can press Cancel button to terminate the installation.

#### 4.3.3 Finish

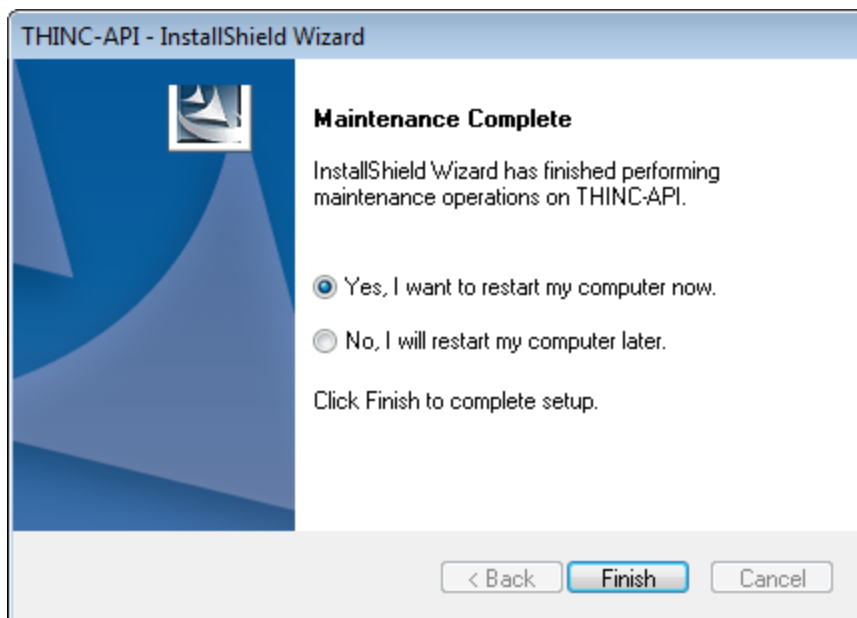

Click Finish to just complete the installation process.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

#### 4.4 Install License file

When THINC-API Setup program runs it will install either demo or permanent license version (Okuma.api.lic).

It is best to obtain the license file that supports the latest release of THINC-API libraries version although your application only requires an older THINC-API version.

License file can also manually copy to the D:\Program files\Okuma\License folder.

By default, the current version of installation will always copy the license file included with the Setup to the destination folder.

*Note: Each Public Release of THINC-API always has a license file that supports the latest version of all THINC libraries. All applications developed with THINC-API use the same license file as long as THINC-API library version that your application compiled with is less than or equal to library version in the license file.*

#### 4.5 Validate Installation

##### 4.5.1 THINC-API Libraries

For machine/NC Master installation, the test sample application can be run to ensure that THINC-API libraries can be supported under current machine configuration. By design, THINC-API libraries are tightly integrated with NC OSP System software. Therefore, a certain file version of NC OSP System files must be met in order to support all functions in the libraries.

*Note: Per function call in the libraries also depends on machine options, spec. code, NC Control software version etc...*

##### 4.5.1.1 Run THINC sample application

Based on OSP Software System files, the Setup program will only install the appropriate libraries. It will install either Lathe/Machining Center/Grinder libraries.

Using Windows Explore to navigate to D drive and subfolder:

Lathe: D:\Program Files\Okuma\THINC API\ThincLathe\bin

MC: D:\Program Files\Okuma\THINC API\ThincMC\bin

Grinder: D:\Program Files\Okuma\THINC API\ThincGrinder\bin

Run THINC sample application by double clicking on ThincLathe.exe, ThincMC.exe, and ThincGrinderApp.exe for Lathe/Machining Center/Grinder, respectively.

##### 4.5.1.2 Validation

##### 4.5.1.2.1 THINC-API Sample Applications

If current OSP System software can support current version of THINC-API libraries installed on machine, a Windows Form should be displayed without any error message as shown:

*Note: Per function call in the libraries also depends on machine options, spec. code, NC Control software version etc...*

Machining Center Test application

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

Sample Thinc API (Machining Centers)

ATC | Machine | Current Alarm | Tools 2-1 | Tools 2-2 | MacMan Alarm History | Optional Parameter | Tools | MOP Tool | Axis | Macman Operating

Pot Number: 1 [Get Tool Info]

Tool Number: [ ]

Tool Kind: [ ]

[Get Memo]

Heavy Tool Memo: [ ] [Set]

Large Tool Memo: [ ] [Set]

Magazine Number: 1 [Get Magazine]

Number of Pots: [ ]

Starting Pot Number: [ ]

Ending Pot Number: [ ]

Magazine Position: [ ]

Values with no parameters: [ ] [Update]

ATC Type: RandomMemory Tool Attribute: None

Tool Number: 1 Pot Number: 1

[Register Tool] [Register with Tool Attribute] [Unregister Tool]

[Set Actual Tool] [Set Next Tool] [Set Return Pot] [Cancel Tool]

Log [ ] [Clear]

Lathe Test application:

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

THINC Lathe Sample Application - 1.3.0.0

Axis | PLC | Tool Wear (For Multi-Tools System) | MacMan Machining Reports | Ballscrew | CMDTool | Macman Operating History | Workpiece | Sir

Current Subsystem: NC\_RUN Data unit: Unit\_mm Start Stop

Update

Axis 1: X\_Axis

Actual Position Machine Coordinates: 0 Command FeedRate: 0

Actual Position Program Coordinates: 0 Actual FeedRate: 0

Distance to Target Position: 0 Feed Hold: 0

Target Position: 0 Feedrate Override: 0

Axis 2: X\_Axis

Actual Position Encoder Coordinates: 0 B Axis Load: 0

Axis Load: 0 Max Feedrate Override: 0

All Axis: X\_Axis

Feed Rate type: 0

Axis Name: 0

Axis Type: 0

Log Clear Log

Grinder Test application:

THINC-API For Grinder

Axis | Machine | PLC I/O | Program | Spec | Spindle | Tools | Variables | Wheel | Workpiece | MacMan - Alarm History | MacMan - Machining Report | MacMan

Update Data Unit: Unit\_mm

Axis: X\_Axis Wheel Axis: U\_Axis

Actual Position Program Coordinate: Actual Position Wheel Coordinate:

Actual Position Machine Coordinate:

Axis Load:

Path Feedrate:

Actual Feedrate Per Axis:

Feedrate Type:

Feedrate Override:

Command Feedrate:

Clear Message

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

#### 4.5.1.2.2 THINC-API Notifier


There is a Windows Service called 'Okuma API Notifier' which will be installed on machine, NC Master, and desktop PC. It indicates the status of THINC-API as an icon in the system taskbar.

There are 4 states of THINC-API Notifier as shown below:

1/ Waiting State (API white-background icon) – NC is not running yet. THINC-API is not initialized yet.




2/ Initializing state (API Yellow-background icon) – NC is started and THINC-API is initializing.

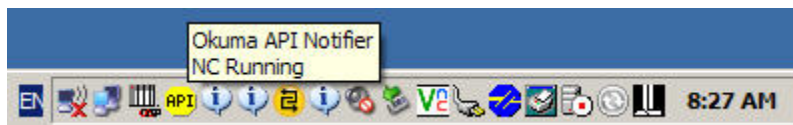

3/ Initialized (API Green-background icon) – THINC-API is successfully initialized with NC and is ready for exchanging data.




4/ Failed to initialize (API red-background icon) – NC is started and THINC-API cannot communicate with NC due to some reasons.

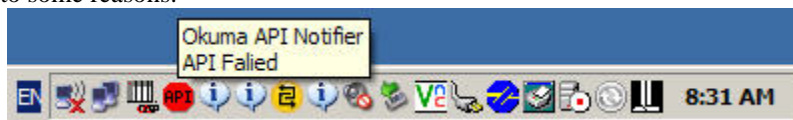

By clicking on the icon, it will bring up a dialog and shows status of THINC-API with message, for example:

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

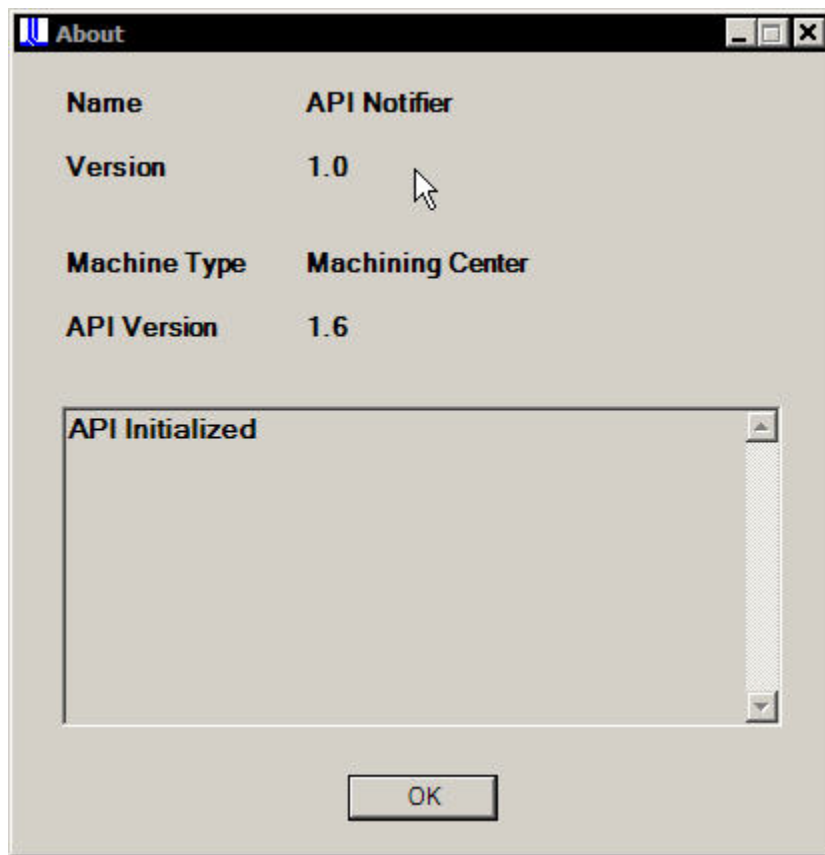


#### 4.5.1.3 Errors

##### 4.5.1.3.1 NC Not Running

##### 4.5.1.3.1.1 DATA-API


THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

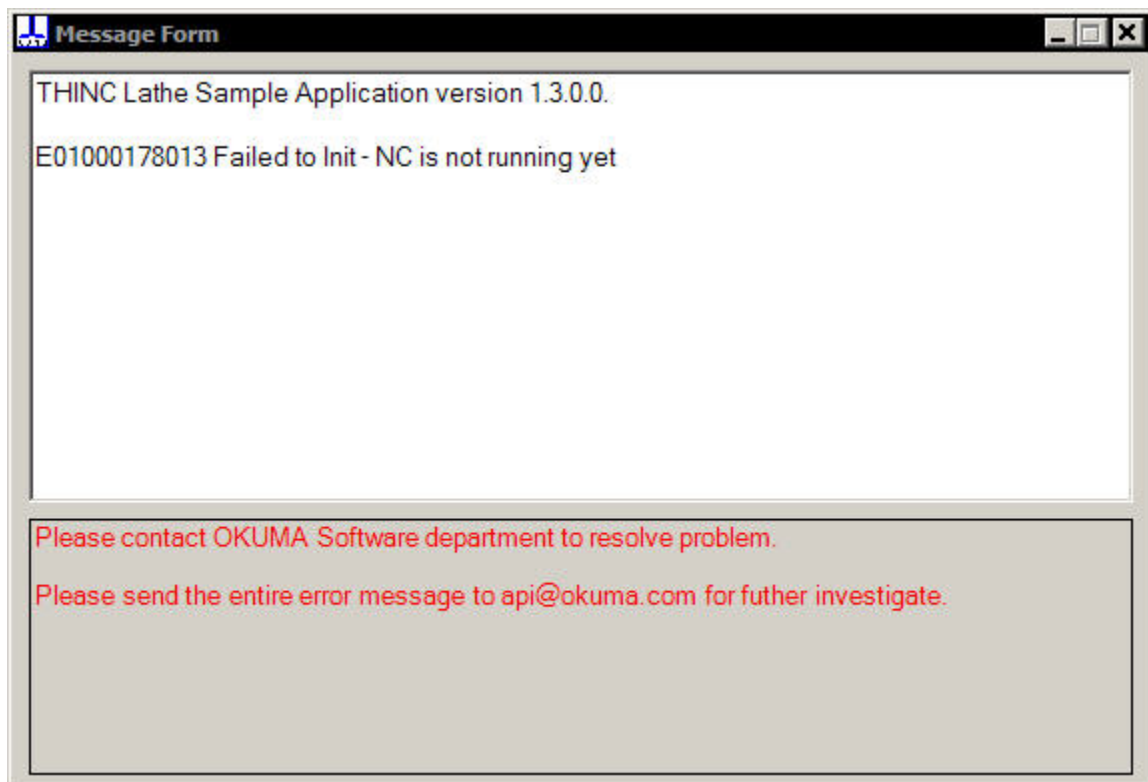


Problem: THINC-API libraries fail to initialize due to NC running condition.

Solution: Start application developed with THINC-API libraries after NC is running.  
Custom applications can utilize 'Startup Service' developed by OKUMA to ensure that your custom application starts after NC started.

#### 4.5.1.3.1.2 Command API

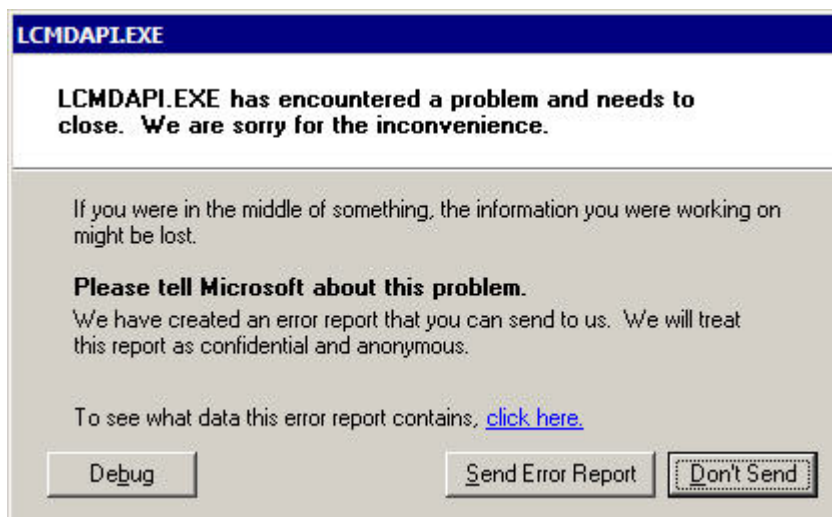

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

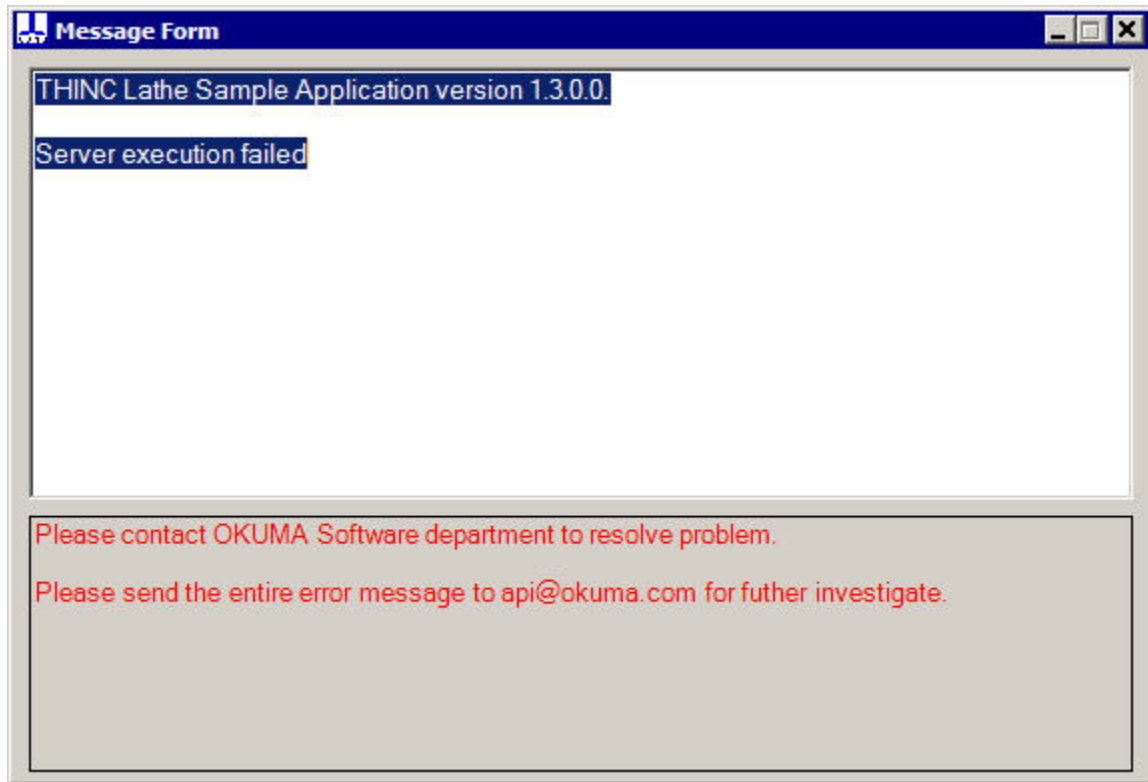

Problem: THINC-API libraries fail to initialize due to NC running condition.

Solution: Start application developed with THINC-API libraries after NC is running.  
Custom applications can utilize 'Startup Service' developed by OKUMA to ensure that your custom application starts after NC started.

#### 4.5.1.3.2 THINC-API dependency library files

THINC-API will check the following files in NC OSP system software for the same or greater file version.

For Lathe:

LDATAPI.dll  
LCMDAPI.exe  
Softswitch.exe

For MC:

MDATAPI.dll  
MCMDAPI.exe  
Softswitch.exe

For Grinder:

GDATAPI.dll  
GCMDAPI.exe  
Softswitch.exe


And PIODLIB.dll library

##### 4.5.1.3.2.1 Incorrect file version



THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

For any reason if the above files listed for Lathe/MC have incorrect file version, a dialog box will display and show the error message of what causing THINC-API sample application fails to run correctly.

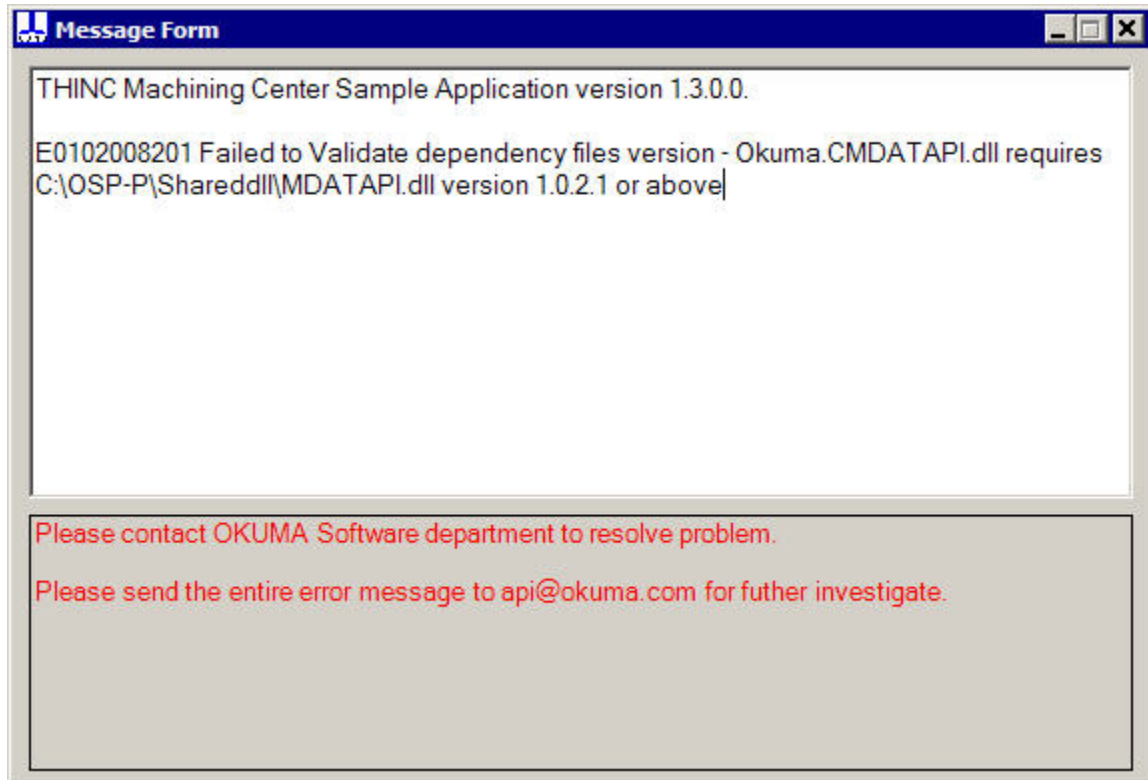


The error message shows an incorrect file version:

- Operation: Failed to Validate dependency files version
- Problem: Okuma.CMDATAPI.dll requires C:\OSP-P\SharedDll\MDATAPI.dll version 1.0.2.1 or above.

Solution: Re-Install/Install THINC-API again if any of the above file listed for Lathe/MC has incorrect file version.

#### 4.5.1.3.2.2 Missing Dependency files

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

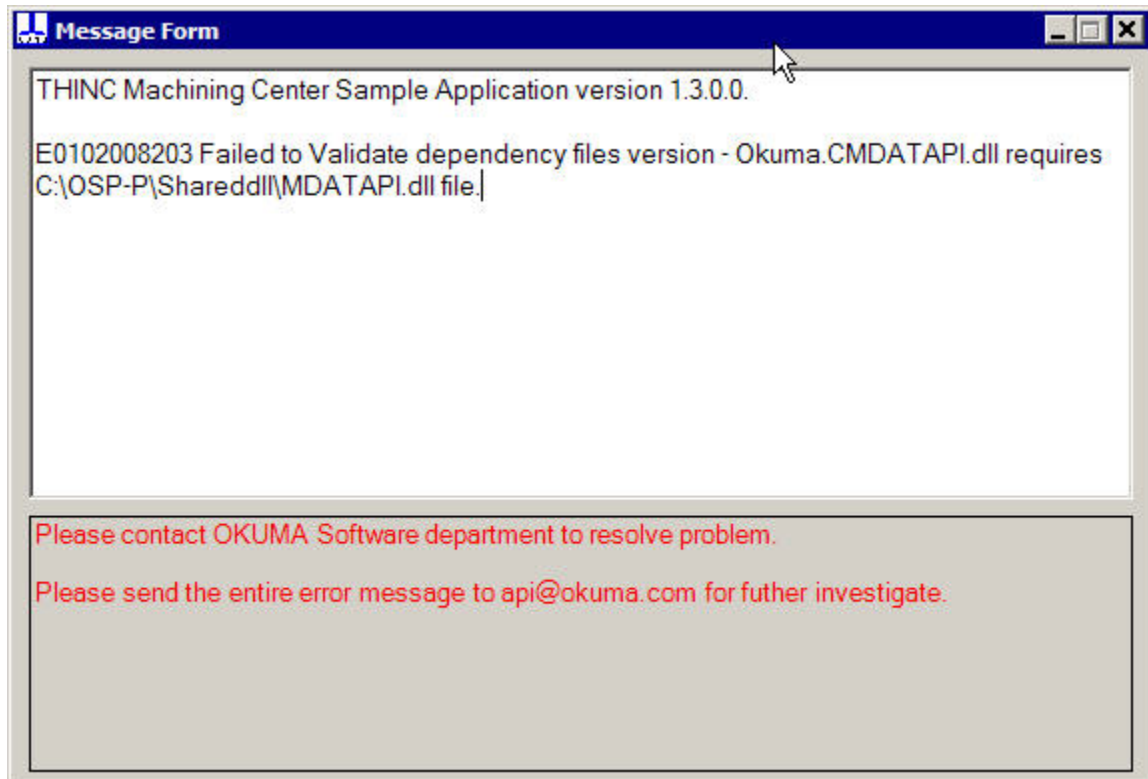

The error message shows a missing file:


- Operation: Failed to Validate dependency files version
- Problem: Okuma.CMDATAPI.dll requires C:\OSP-P\SharedDll\MDATAPI.dll file.

Solution: If any of the above files listed for Lathe/MC are missing, then an installation of THINC-API to the latest version is needed.

#### 4.5.1.3.3 THINC-API library files

##### 4.5.1.3.3.1 Missing library file

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

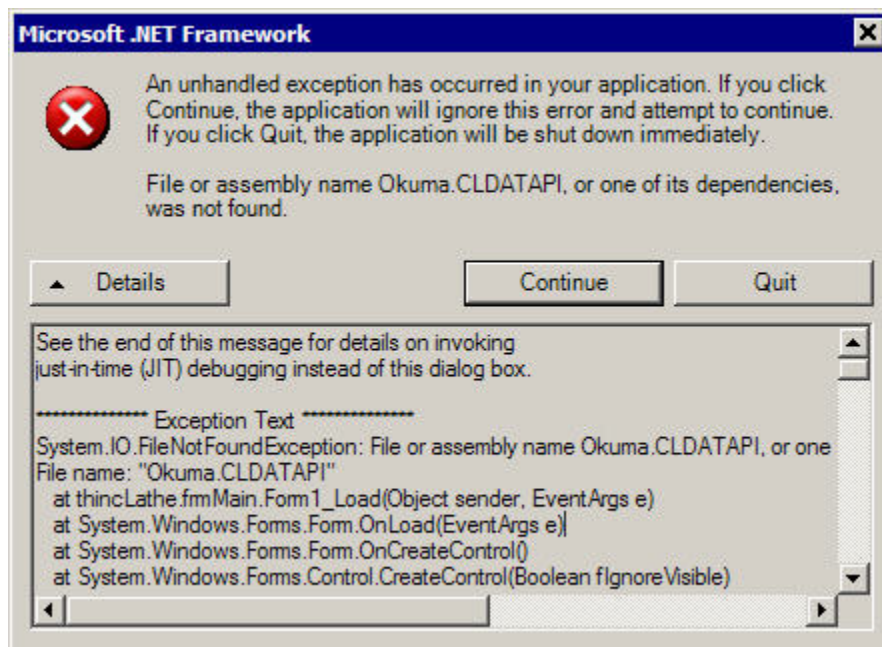


All applications developed with .NET THINC-API libraries are required to include an exact version of THINC-API libraries with the custom installation. THINC-API libraries compiled with application should be installed with your application folder.

The above error message shows that THINC-API library named Okuma.CLDATAPI.dll cannot be found at the folder where the application runs from.

Solution: Include THINC-API libraries compiled in your application with your custom setup and re-install your application with new setup.

#### 4.5.1.3.3.2 *Incorrect library file version*

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

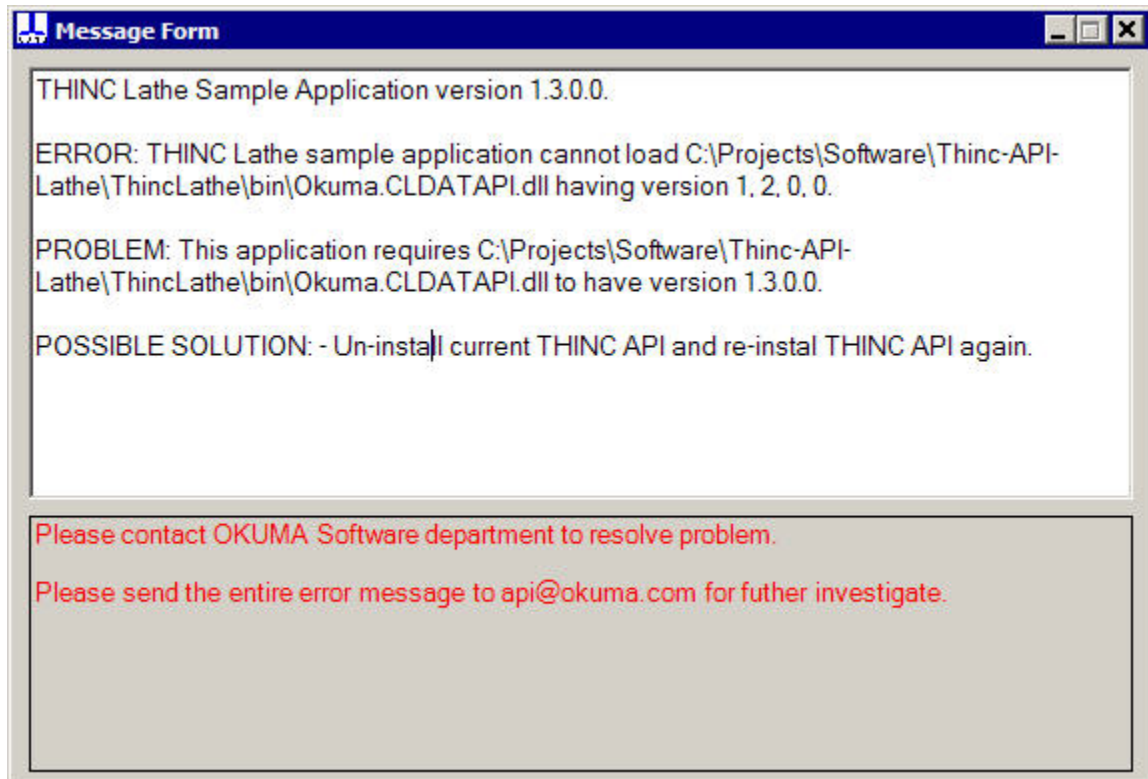

Problem: THINC-API libraries fail to load due to incorrect library version.


Solution: All custom applications developed with THINC-API libraries must install THINC-API libraries in the application's installation folder and must have the same file version as the libraries version compiled with.

#### 4.5.1.3.4 License file

At first run, THINC-API will validate its license file named Okuma.api.lic located in D:\Program Files\Okuma\Licenses folder for correct version per THINC-API library file.

##### 4.5.1.3.4.1 Missing license file

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

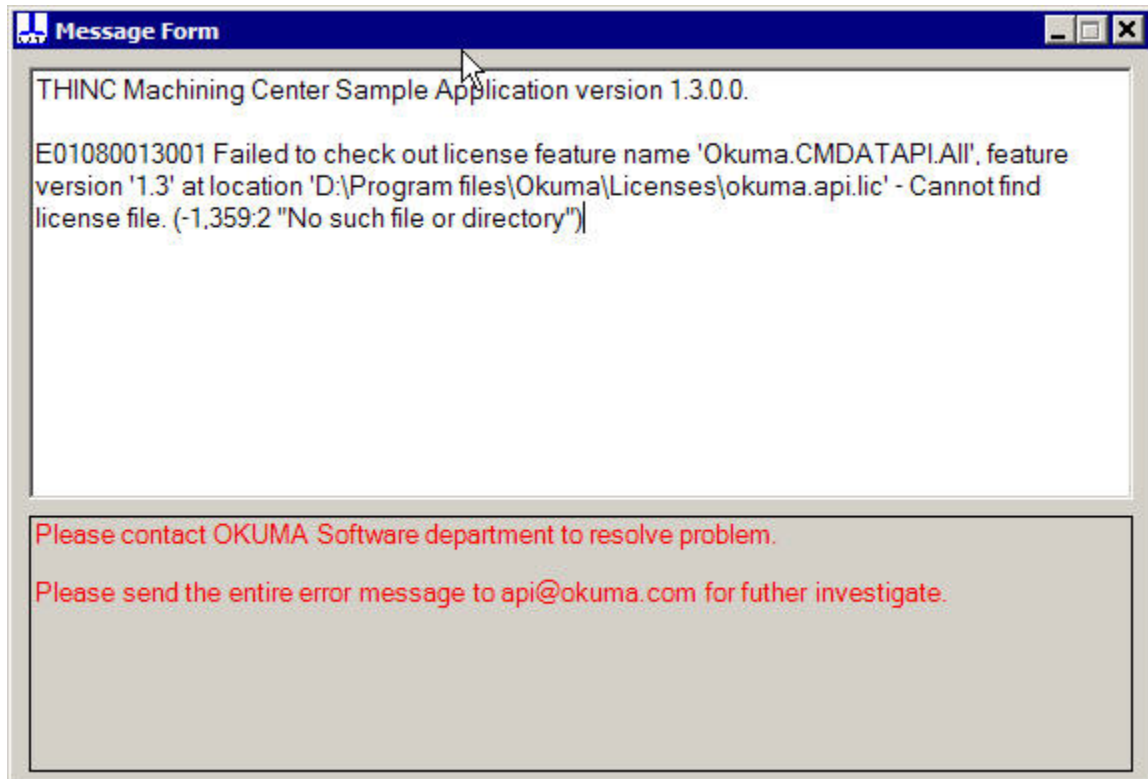


The error message shows a missing file:

- Operation: Failed to check out license feature name 'Okuma.CMDATAPI.All' feature version '1.3' at location 'D:\Program files\Okuma\Licenses\okuma.api.lic'
- Problem: Cannot find license file (-1, 359:2 "No such file or directory")

Solution: If the license is missing, then an installation of THINC-API to the latest version is needed.

#### 4.5.1.3.4.2 *Incorrect license file version*

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

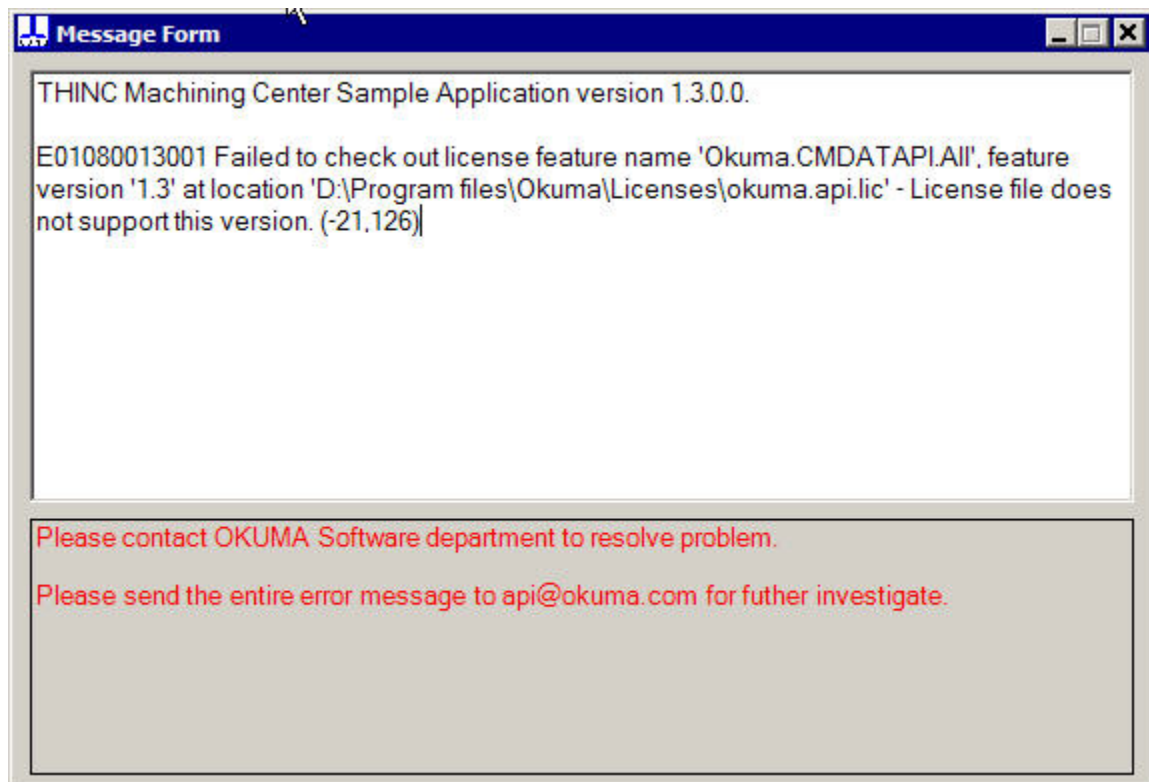


The error message shows an incorrect license version for a particular THINC-API library:

- Operation: Failed to check out license feature name 'Okuma.CMDATAPI.All' feature version '1.3' at location 'D:\Program files\Okuma\Licenses\okuma.api.lic'
- Problem: License file does not support this version. (-21, 126)

Solution: Installation of THINC-API to the latest version is needed.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

#### 4.5.1.3.4.3 Invalid license file

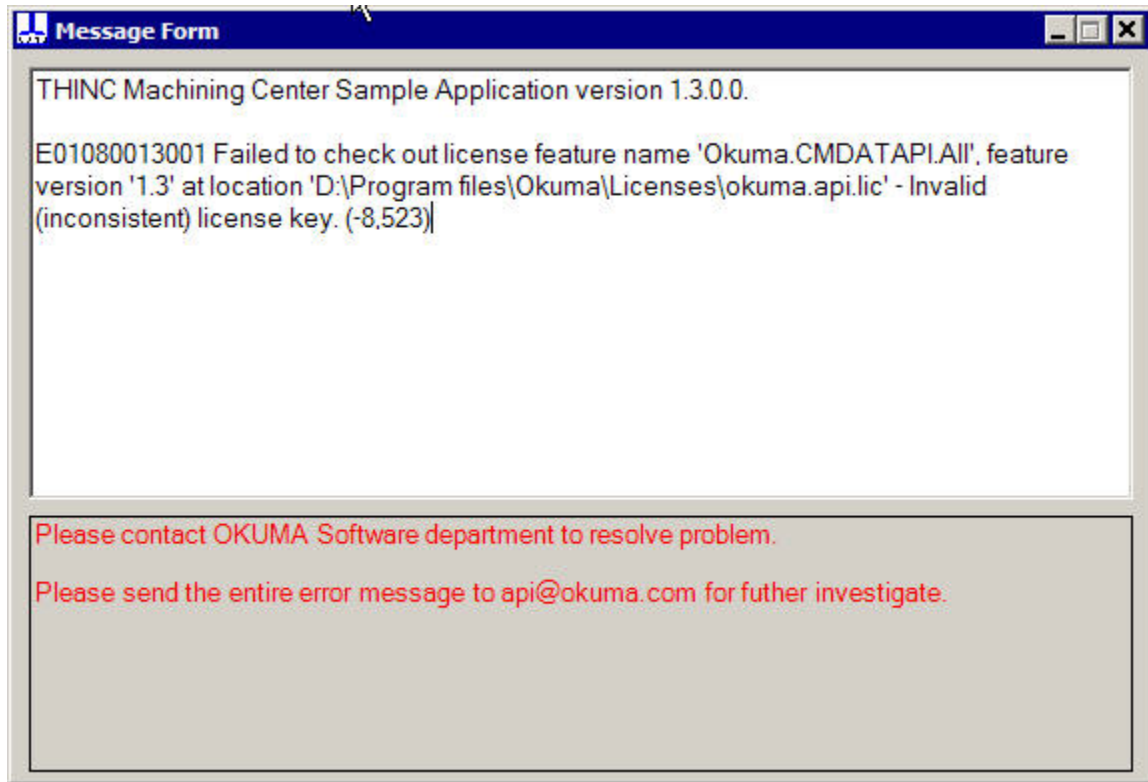


The error message shows an invalid license file for a particular THINC-API library:

- Operation: E01080013001 Failed to check out license feature name 'Okuma.CMDATAPI.All', feature version '1.3' at location 'D:\Program files\Okuma\Licenses\okuma.api.lic'
- Problem: Invalid (inconsistent) license key. (-8,523). Probably, the license file has been modified.

Solution: Un-install current version and install THINC-API to the latest version.

#### 4.5.1.3.4.4 Expired license file

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

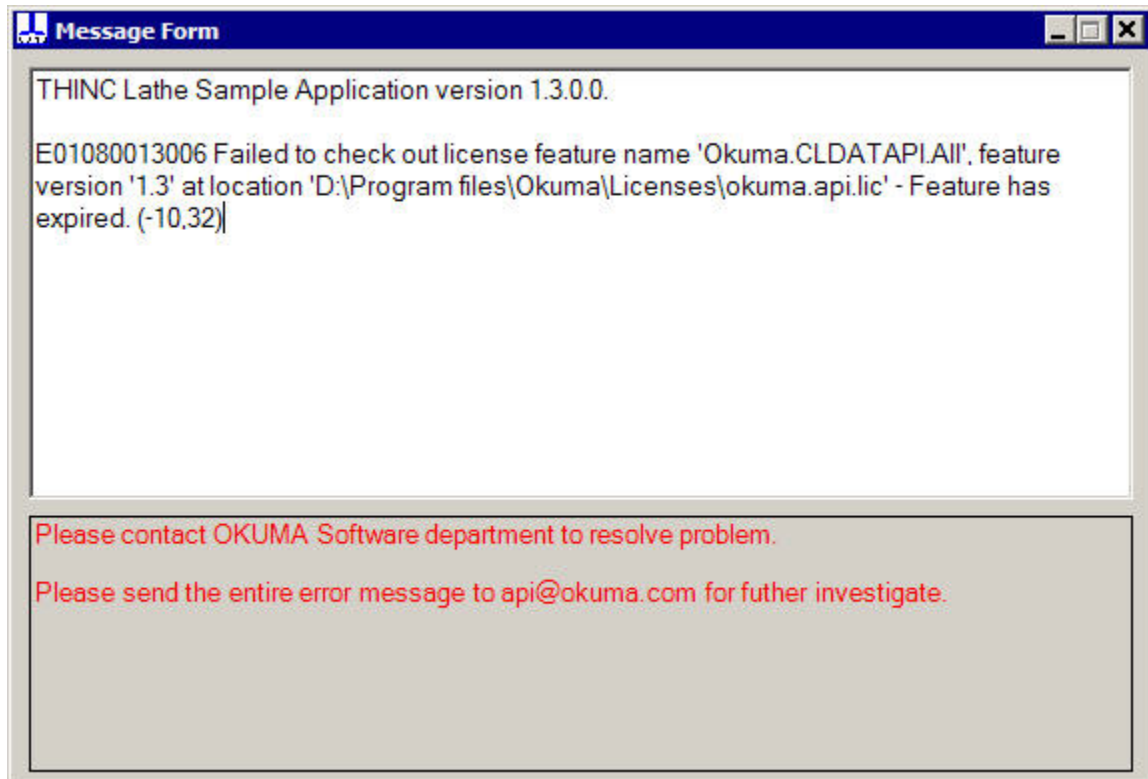

The error message shows an expired license file for a particular THINC-API library:


- Operation: E01080013001 Failed to check out license feature name 'Okuma.CLDATAPI.All', feature version '1.3' at location 'D:\Program files\Okuma\Licenses\okuma.api.lic'
- Problem: Feature has expired (-10,32)

Solution: Install THINC-API to the latest version with permanent license file. Please see section '4.3 Install External License file' for installing external license file.

#### 4.5.1.3.4.5 Flexnet License library



THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

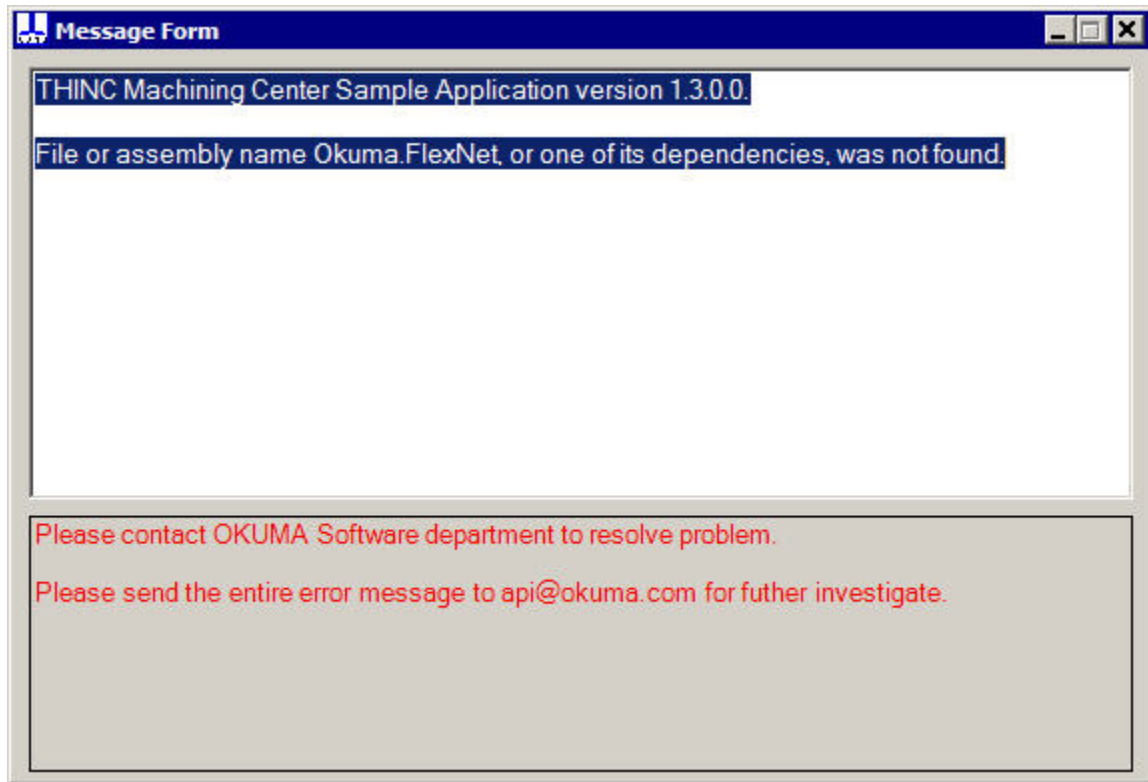

The error message shows that a dependency library for THINC-API library cannot find in GAC (Global Assembly Cached (\Windows\assembly) folder:

- Problem: File or assembly name Okuma.FlexNet, or one of its dependencies, was not found.

Solution: Install THINC-API to the latest version.


#### 4.5.2 *Logging Service & Logging Service Client Application*

##### 4.5.2.1 Logging Service

At first run, THINC-API libraries will connect with Logging Service utility.

The Logging Service could fail to load correctly as indicated below:

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

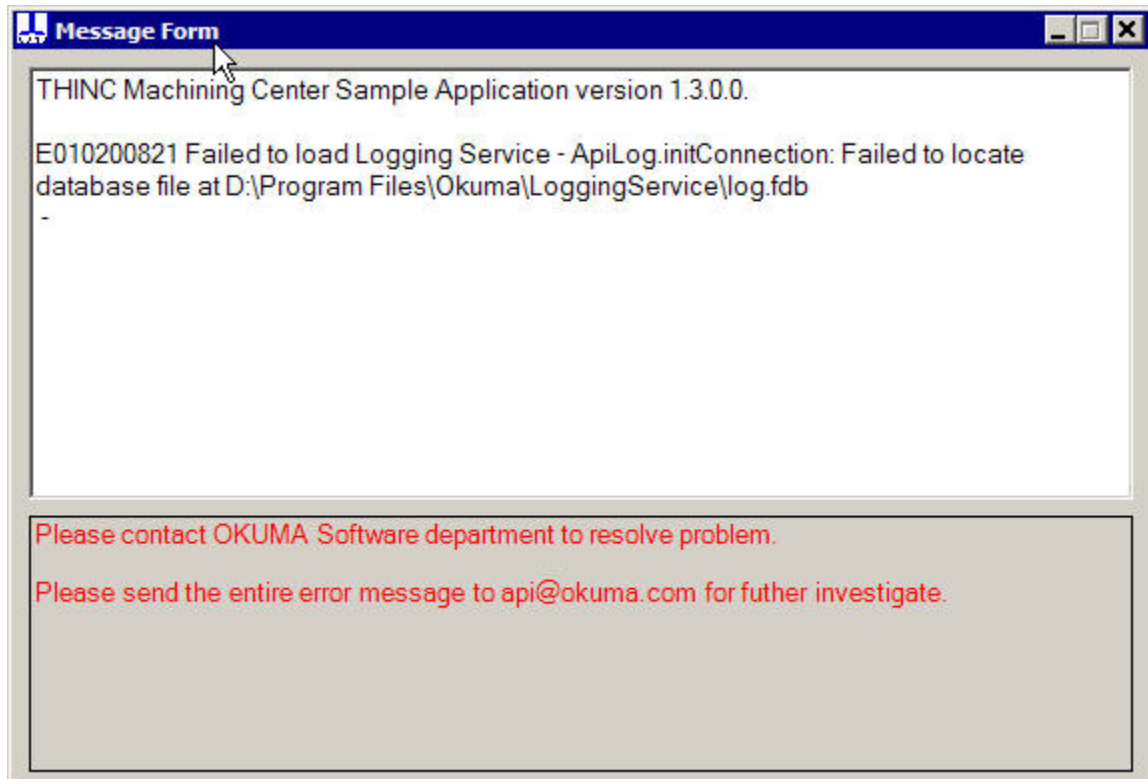


The error message shows a missing file:

- Operation: Failed to load Logging Service
- Problem: Failed to locate database file at D:\Program Files\Okuma\LoggingService\log.fdb

Solution: Re-install or install THINC-API libraries to the latest version.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

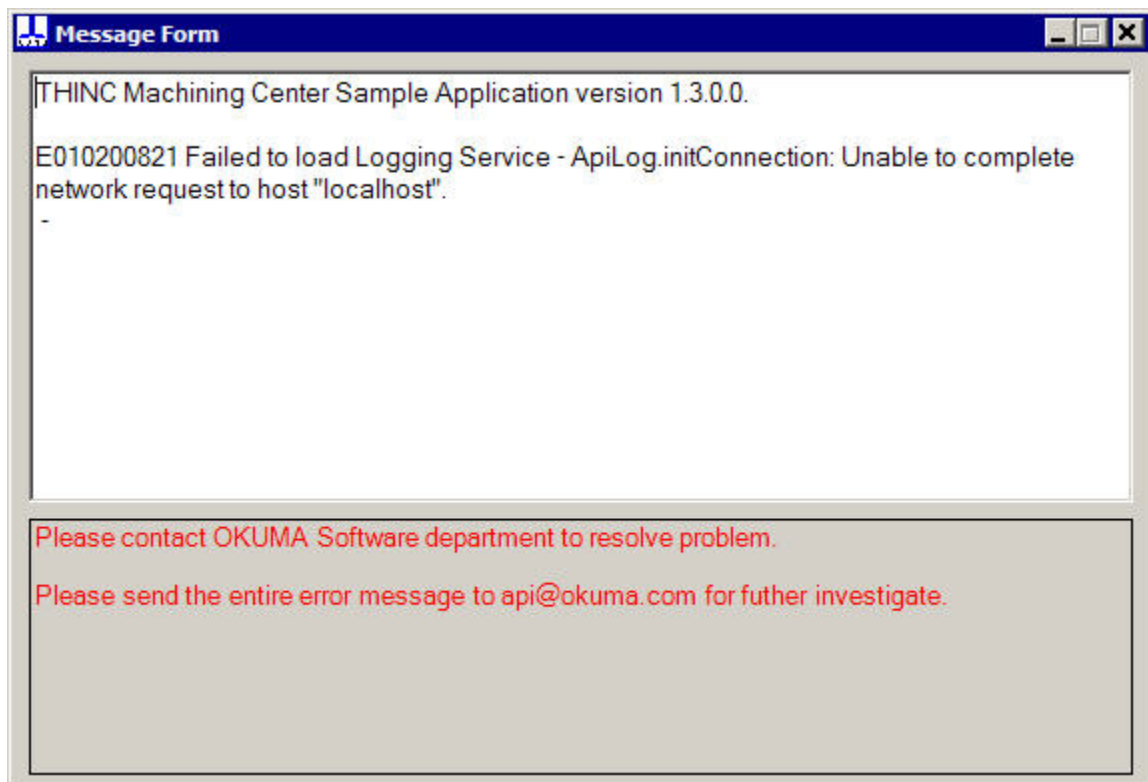


The error message shows that the Logging Service server is not running on the local machine (localhost):

- Operation: Failed to load Logging Service
- Problem: ApiLog.initConnection: Unable to complete network request to host “localhost”

Solution:

Make sure that FireBird server status is running. If not, start the FireBird server from Service

Windows

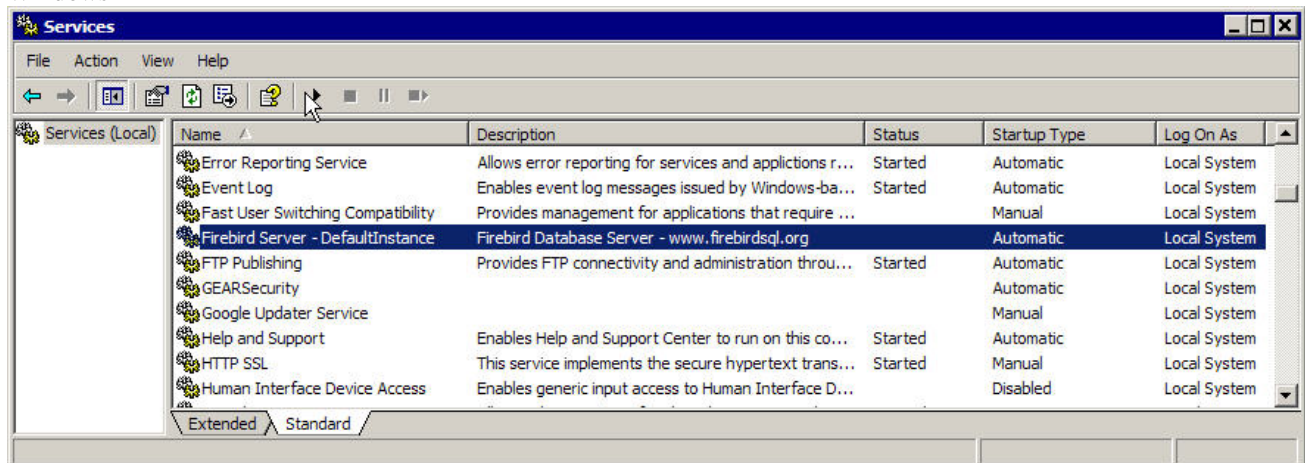


Or

Re-install or install THINC-API libraries to the latest version.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

#### 4.5.2.2 Logging Library

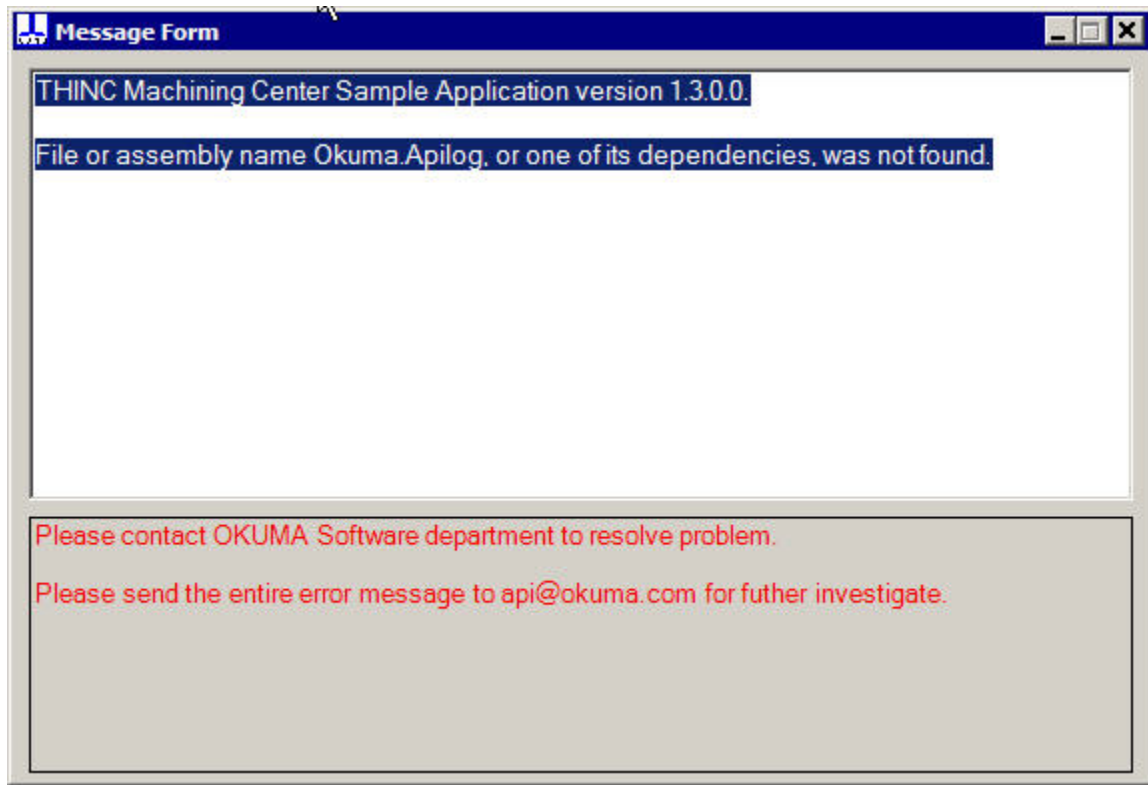

The error message shows that a dependency library for THINC-API library cannot find in GAC (Global Assembly Cached \Windows\assembly) folder:

- Problem: File or assembly name Okuma.ApiLog or one of its dependencies, was not found.

Solution: Install THINC-API to the latest version.

#### 4.5.2.3 Logging Service Client Application

The Logging Client application is a utility that allows one to view all logging records logged by THINC-API libraries at different logging level.

A successful loading of LoggingServiceClient application is shown below:

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

LoggingServiceClient application could fail to load up correctly if the logging database file is missing or Logging Service does not start yet.

Please refer to section 4.4.2.1 and 4.4.2.2 for correcting the problems.

#### 4.5.2.4 Logging Service for Grinder API Only

The following libraries and application is used for logging service and installed in D:\Program files\Okuma\LoggingService2 folder:

Okuma.Api.LogService.WinHost.exe  
Okuma.Api.LogService.dll  
System.Data.SQLite.dll  
ApiLog2

	O2FLASH		Started	Automatic (...)	Local Syst..
	Office Source Engine	Saves install...		Manual	Local Syst..
	Office Software Protection Platform	Enables the ...	Started	Manual	Network S.
	OfficeScan Common Client Solution Frame...	Manages a...	Started	Manual	Local Syst..
	OfficeScan NT Listener	Receives co...	Started	Automatic	Local Syst..
-	OfficeScan NT Proxy Service	Scans netw...		Manual	Local Syst..
	OfficeScan NT RealTime Scan	Performs Re...	Started	Automatic	Local Syst..
	Offline Files	The Offline ...		Disabled	Local Syst..
	OKUMA API Logging Service Win Host	Logging Ser...		Automatic	Local Syst..
	Okuma API Notifier	Detects that...		Automatic	Local Syst..
	OkumaWinSvcHostedCalcService	OKUMA WC...		Disabled	Local Syst..

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

The logging service client application is part of Grinder Test application as shown below:

The screenshot shows the 'THINC-API For Grinder' application window. The 'API Logging Service' tab is active. It features a 'Log Information' section with fields for 'Starting Date' (11/14/2016 15:15:41), 'Ending Date' (11/14/2016 15:15:41), 'Application Name Like:', 'Class Name Like:', 'Function Name Like:', 'I/O Parameters Like:', 'Logging Level <=:' (logException), and 'Message Like:'. A 'Display Log Records' button is located to the right. Below these fields is a large table with columns: Date Logged, Application Name, Class Name, Method Name, I/O Parameters, Logging Level, and Message. The table is currently empty. At the bottom right, there is a 'Clear Message' button.

## 5. Repair/Uninstall THINC-API

### 5.1 Repair/Un-install

If THINC-API already installed, the setup will ask for either Repair or Remove the current THINC-API installation.

#### 5.1.1 Repair



The setup will try to re-install all files current being installed on machine.

##### 5.1.1.1 Run Setup


Run the THINC-API from Add or Remove Programs or source of media

**Note:** The original source of THINC-API setup must be available and accessible from Windows drive.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

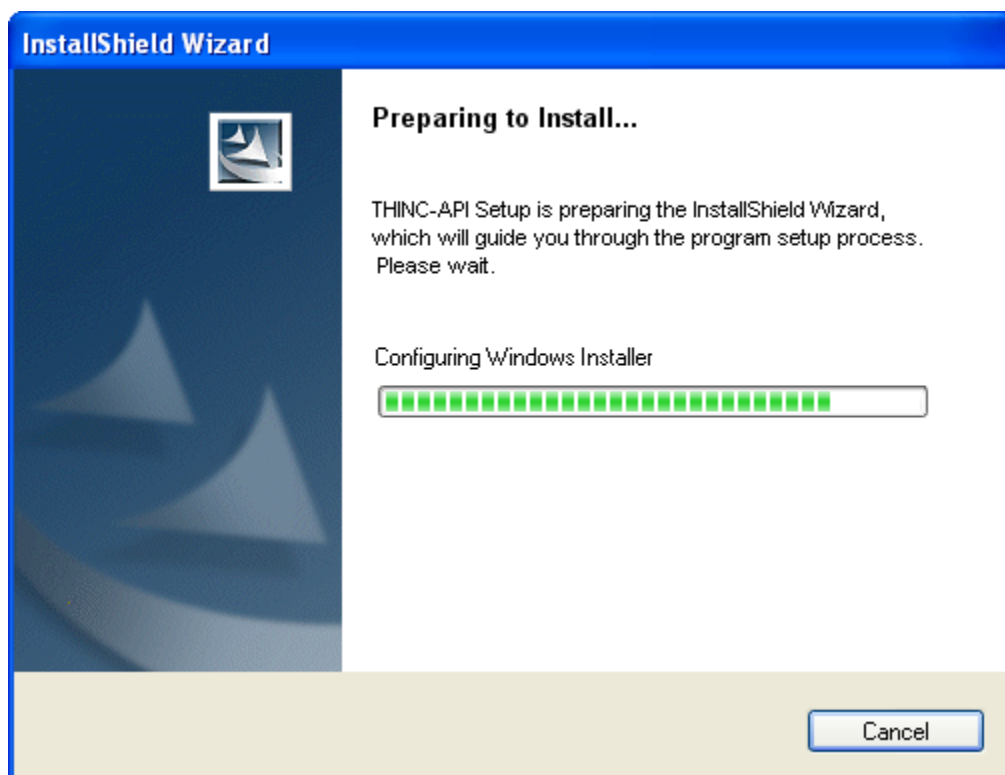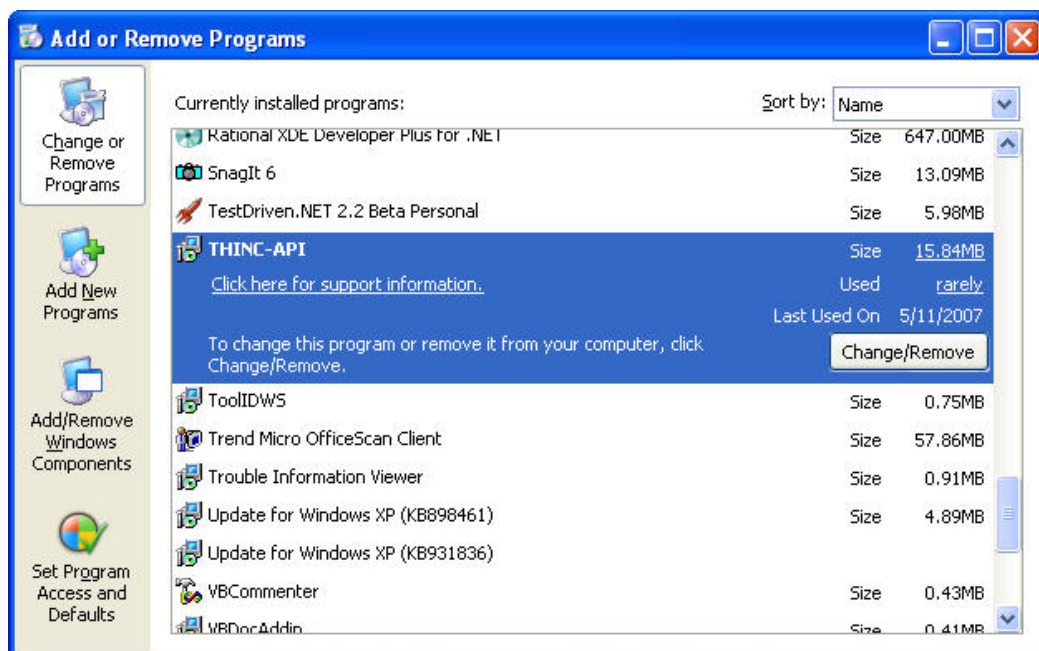

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

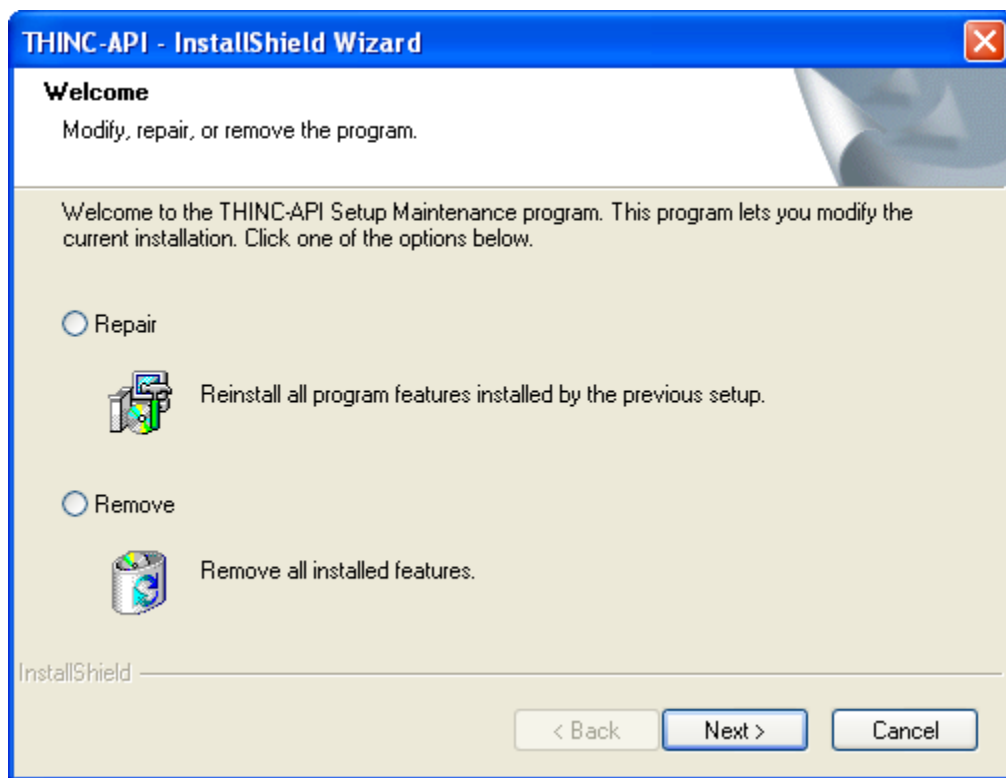


Select the “Repair” option and press Next to continue the process

If you select ‘Remove’ and press Next, the installation will ask for your confirmation to remove current THINC-API installation.




THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

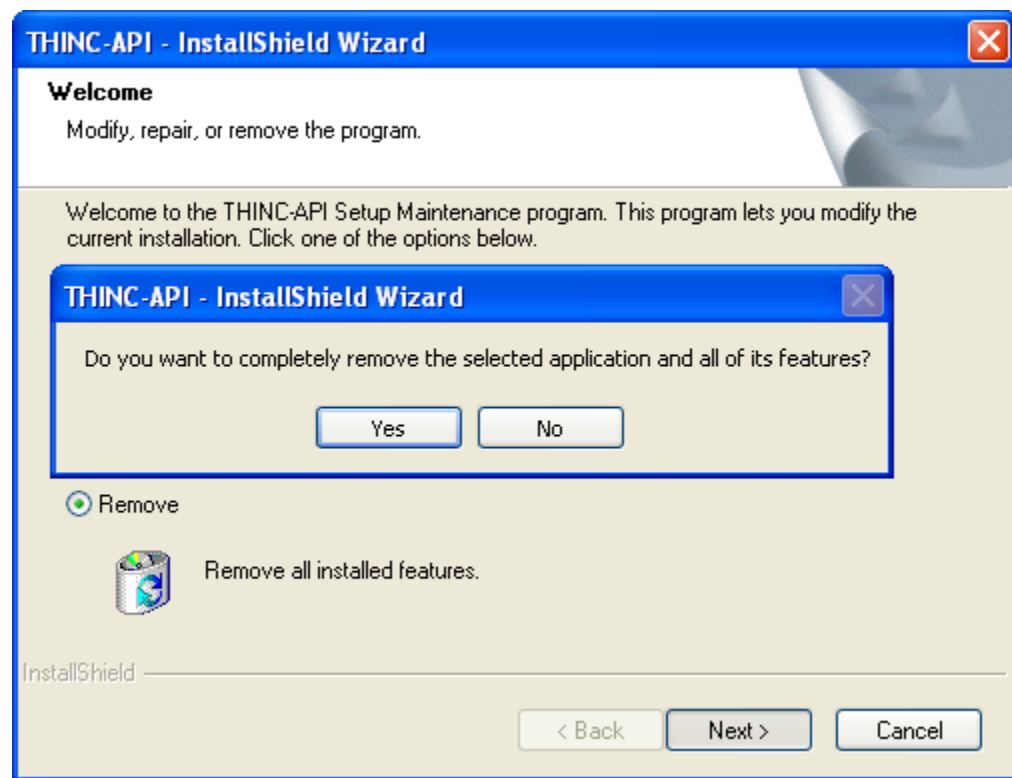

Click Yes to continue with the installation process or click No to review/change any settings.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016


5.1.1.2 Setup

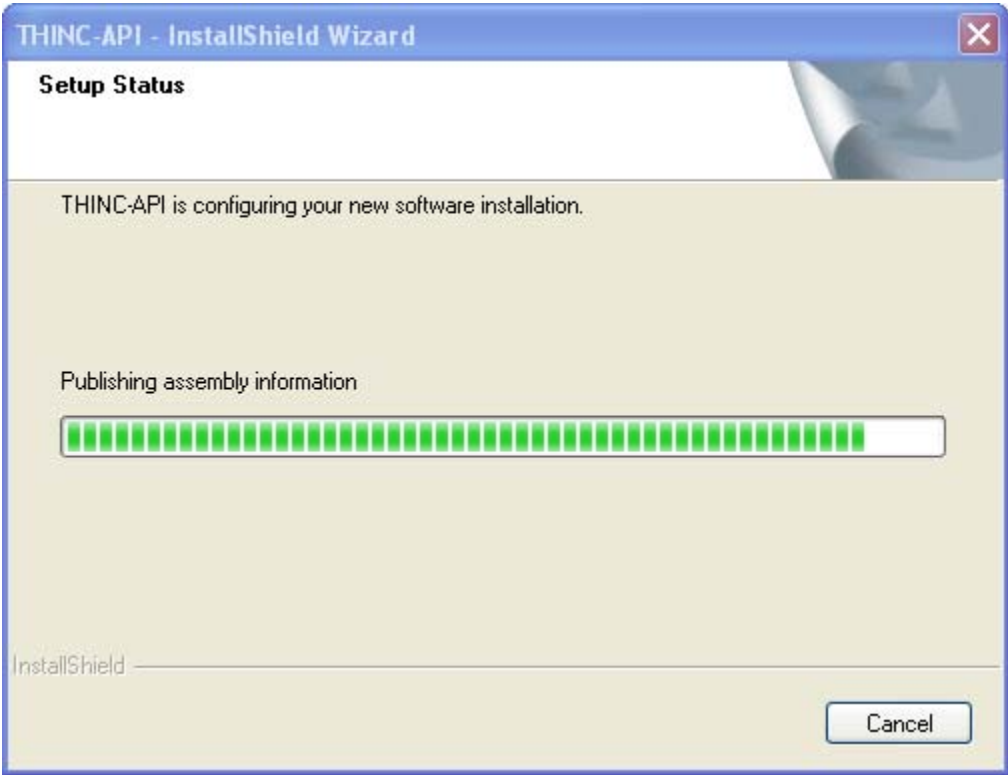

At any time, you can press Cancel button to terminate the installation.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

### 5.1.1.3 Finish


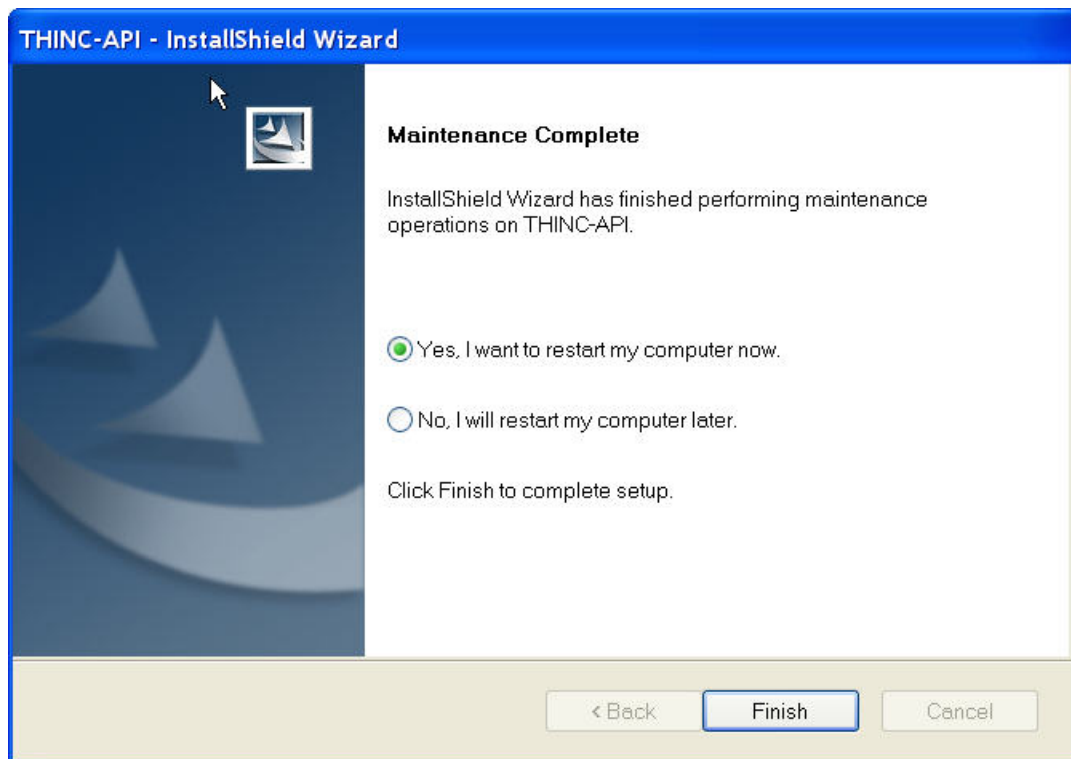


Click Finish to just finish the installation process.


## 5.1.2 Uninstall

### 5.1.2.1 Run setup

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

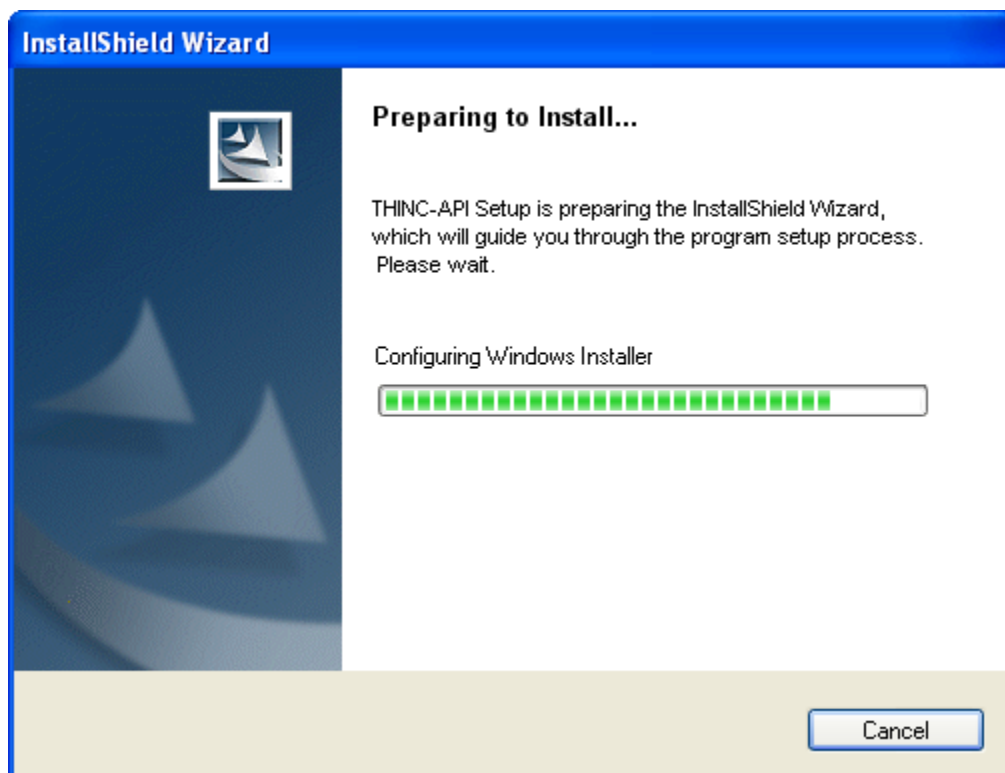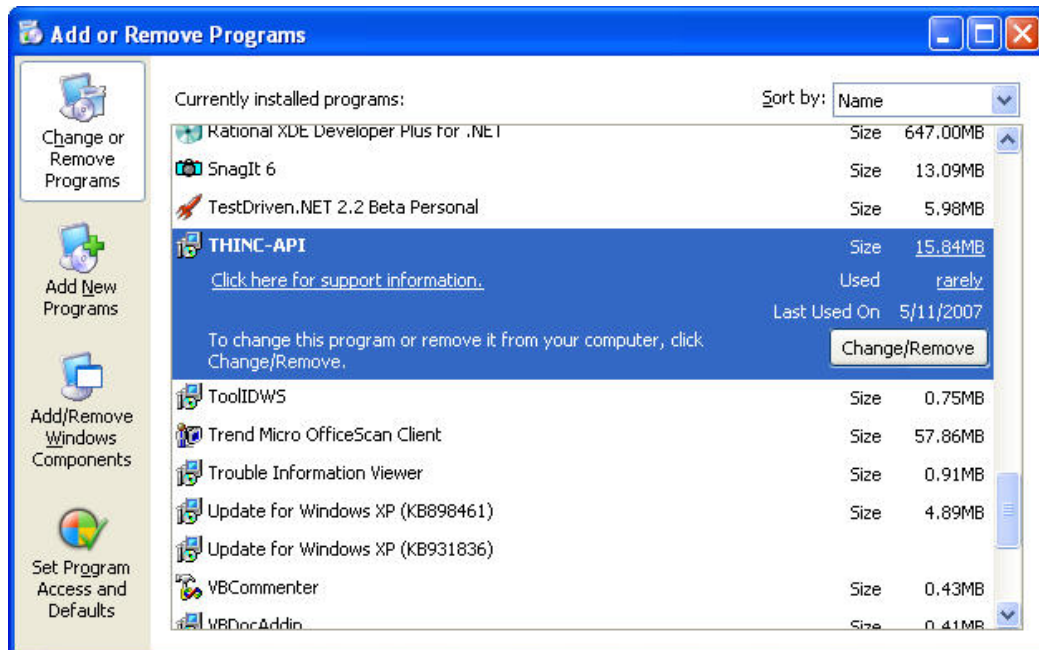


THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

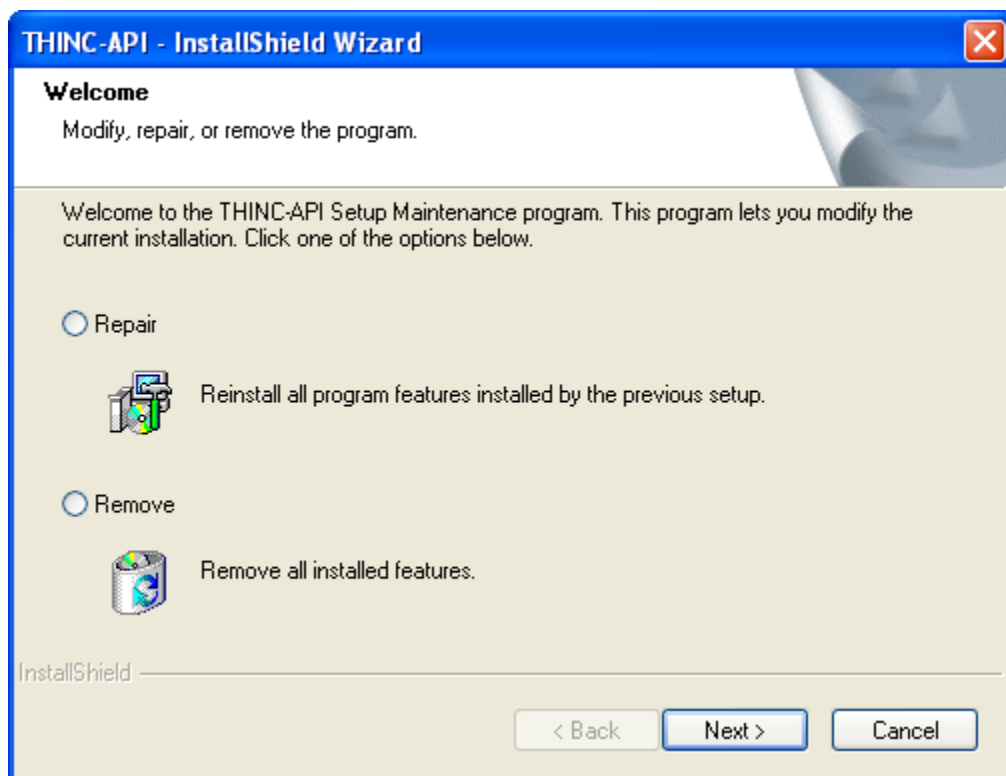

Select 'Remove' and press Next.

The installation will ask for your confirmation to remove current THINC-API installation.


THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

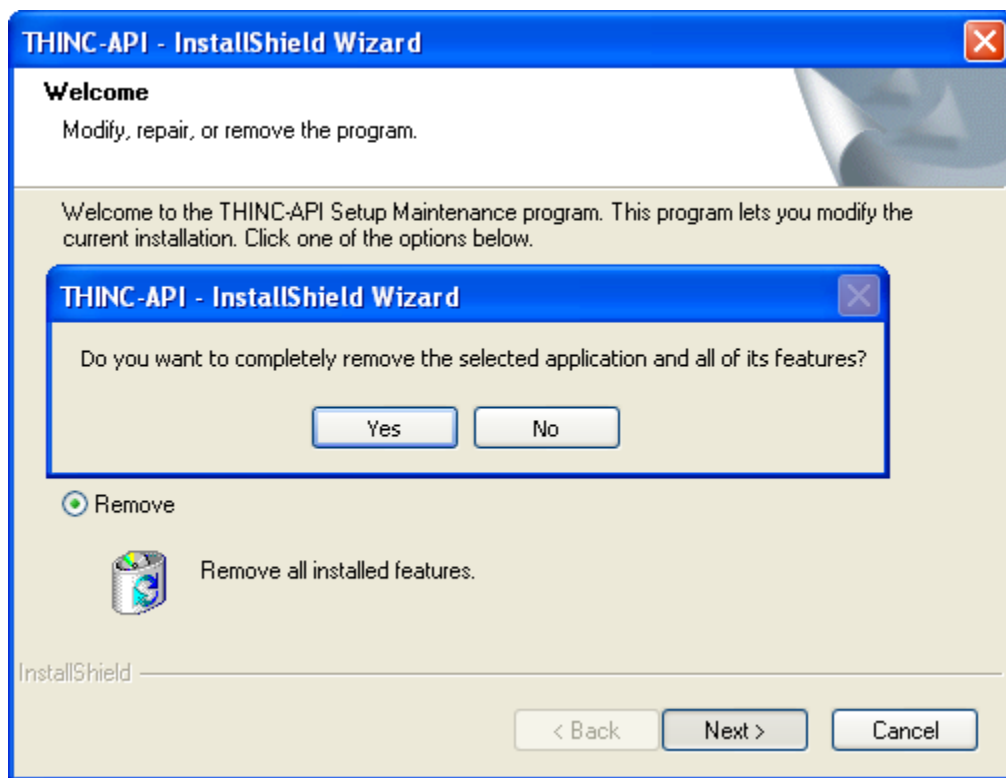

Click Yes to continue with the installation process or click No to review/change any settings.

#### 5.1.2.2 Setup Status


THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

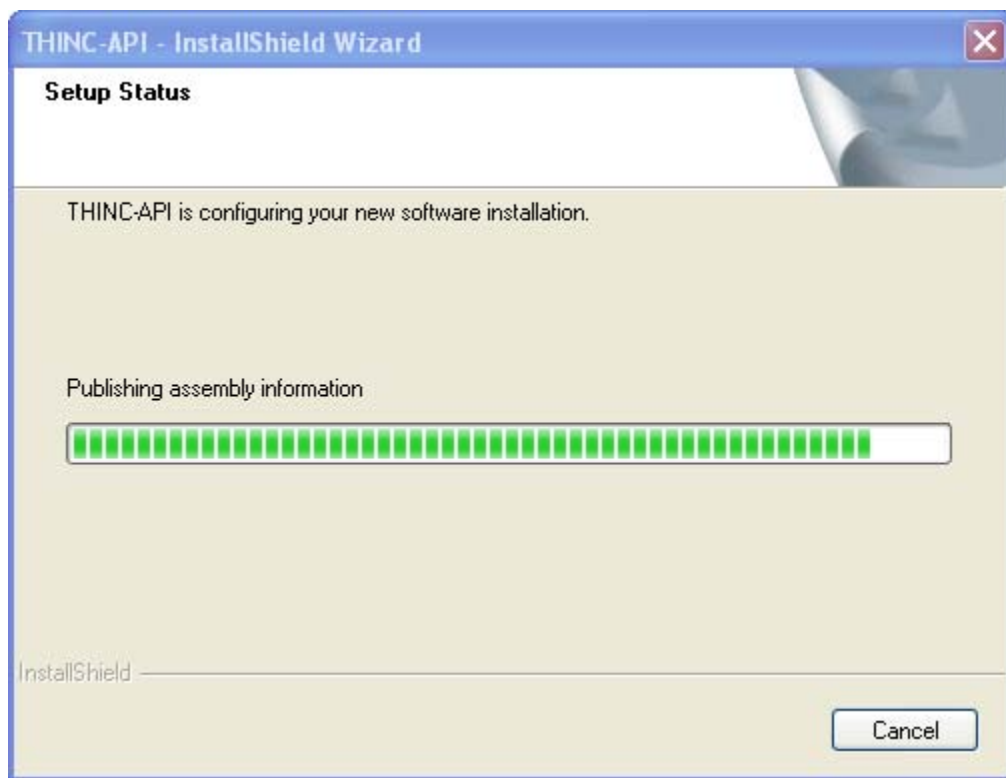

At any time, you can press Cancel button to terminate the installation.

### 5.1.2.3 Finish

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

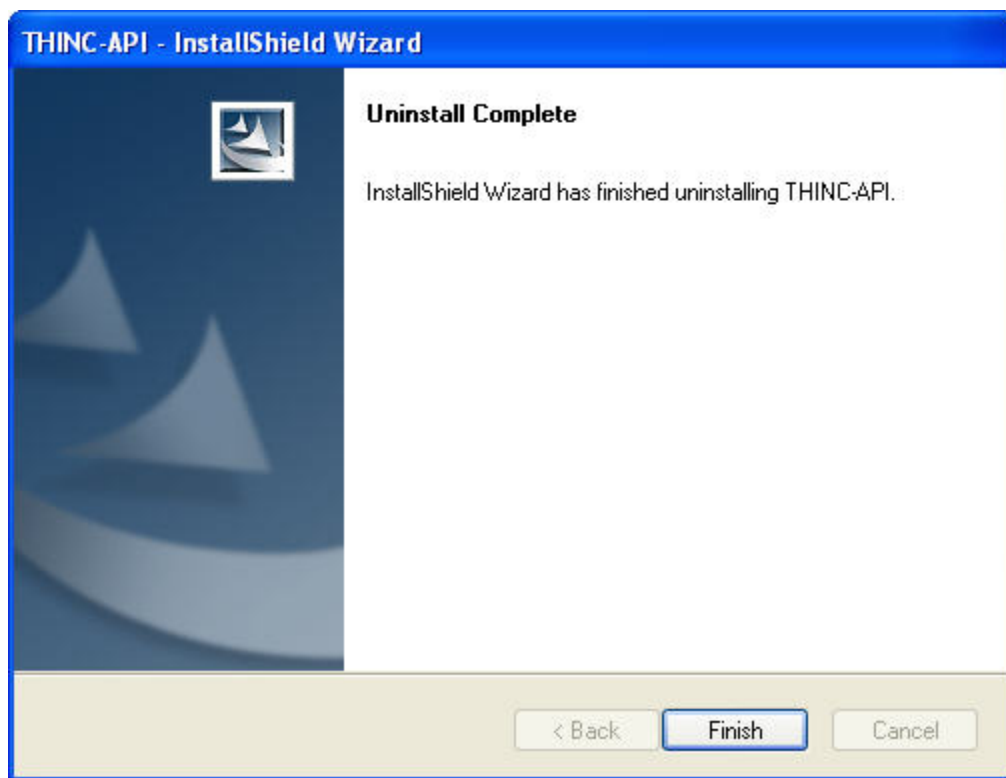

Click Finish to just finish the installation process.

## 6. Installation Files

The following files are considered *THINC-API libraries* which are included in the subfolder *program files\Okuma\THINC API\Bin*:

- Okuma.CLDATAPI.dll
- Okuma.CLCMDAPI.dll
- Okuma.CLDATAPI.xml (Visual Studio Brower Help files)
- Okuma.CLCMDAPI.xml (Visual Studio Brower Help files)
  
- Okuma.CMDATAPI.dll
- Okuma.CMCMDAPI.dll
- Okuma.CMDATAPI.xml (Visual Studio Brower Help files)
- Okuma.CMCMDAPI.xml (Visual Studio Brower Help files)
  
- Okuma.CGDATAPI.dll
- Okuma.CGCMDAPI.dll
- Okuma.CGDATAPI.xml (Visual Studio Brower Help files)
- Okuma.CGCMDAPI.xml (Visual Studio Brower Help files)



THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

## 6.1 Machine/NC Master Installation

### 6.1.1 *Lathe*

#### 6.1.1.1 GAC Folder

Location: C:\Windows\assembly

THINC-API libraries:

- Okuma.CLDATAPI.dll
- Okuma.CLCMDAPI.dll

Logging Service library:

- Okuma.Apilog.dll
- registryEngine.dll
- RegistryUtils.dll
- FirebirdSql.Data.Firebird.dll
- 

Dependency library files for THINC-API:

- Okuma.Interop.LCMDAPI.dll

#### 6.1.1.2 Okuma Folders

THINC-API Release notes:

D:\Program files\Okuma\THINC API \LatheReleaseNote.pdf

THINC-API Installation Manual:

D:\Program files\Okuma\THINC API \InstallationManual.pdf

THINC-API license file for Lathe and MC:

D:\Program files\Okuma\Licenses\Okuma.api.lic

THINC-API Help file:

D:\Program files\Okuma\THINC API\Help\THINCLathe.chm

THINC-API Sample application folder:

D:\Program files\Okuma\THINC API \THINCLathe

THINC-API libraries and Visual Studio Brower Help files:

D:\Program files\Okuma\THINC API \bin

- Okuma.CLDATAPI.dll
- Okuma.CLCMDAPI.dll
- Okuma.CLDATAPI.xml (Visual Studio Brower Help files)
- Okuma.CLCMDAPI.xml (Visual Studio Brower Help files)

Logging Service folder:

D:\Program Files\Okuma\LoggingService

### 6.1.2 *Machining Center*

#### 6.1.2.1 GAC Folder

Location: C:\Windows\assembly

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

THINC-API libraries:

- Okuma.CMDATAPI.dll
- Okuma.CMCMDAPI.dll

Logging Service library:

- Okuma.Apilog.dll
- registryEngine.dll
- RegistryUtils.dll
- FirebirdSql.Data.Firebird.dll
- 

Dependency library files for THINC-API:

- Okuma.Interop.MCMDAPI.dll

### 6.1.2.2 Okuma Folders

THINC-API Release notes:

D:\Program files\Okuma\THINC API \MCReleaseNote.pdf

THINC-API Installation Manual:

D:\Program files\Okuma\THINC API \InstallationManual.pdf

THINC-API license file for both Lathe & MC:

D:\Program files\Okuma\Licenses\Okuma.api.lic

THINC-API Help file:

D:\Program files\Okuma\THINC API\Help\THINCMC.chm

THINC-API Sample application folder:

D:\Program files\Okuma\THINC API \THINCMC

THINC-API libraries and Visual Studio Brower Help files:

D:\Program files\Okuma\THINC API \bin

- Okuma.CMDATAPI.dll
- Okuma.CMCMDAPI.dll
- Okuma.CMDATAPI.xml (Visual Studio Brower Help files)
- Okuma.CMCMDAPI.xml (Visual Studio Brower Help files)

Logging Service folder:

D:\Program Files\Okuma\LoggingService

### 6.1.3 Grinder

#### 6.1.3.1 GAC Folder

THINC-API libraries:

- Okuma.GGDATAPI.dll
- Okuma.CGCMDDAPI.dll

Logging Service library:

- Okuma.Apilog2.dll
- Okuma.Api.LogService.dll
- Okuma.Api.LogService.Data.dll

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

Dependency library files for THINC-API:

- Okuma.Interop.GCMDAPI.dll

### 6.1.3.2 Okuma Folders

THINC-API Release notes:

D:\Program files\Okuma\THINC API \GrinderReleaseNote.pdf

THINC-API Installation Manual:

D:\Program files\Okuma\THINC API \InstallationManual.pdf

THINC-API license file for Lathe, MC, and Grinder:

D:\Program files\Okuma\Licenses\Okuma.api.lic

THINC-API Help file:

D:\Program files\Okuma\THINC API\Help\THINCGrinder.chm

THINC-API Sample application folder:

D:\Program files\Okuma\THINC API \THINCGrinder

THINC-API libraries and Visual Studio Brower Help files:

D:\Program files\Okuma\THINC API \bin

- Okuma.CGDATAPI.dll
- Okuma.CGCMDAPI.dll
- Okuma.CGDATAPI.xml (Visual Studio Brower Help files)
- Okuma.CGCMDAPI.xml (Visual Studio Brower Help files)

Logging Service folder:

D:\Program Files\Okuma\LoggingService2

- ApiLog2
- Okuma.Api.LogService.dll
- Okuma.Api.LogService.WinHost.exe
- Okuma.Api.LogService.WinHost.exe.config
- System.DataSQLite.dll

## 6.2 Desktop Installation

All 3 libraries for Lathe, Machining Center, and Grinder can be installed when desktop installation is detected. The installation will consider desktop installation when there is no OSP-P folder on C drive.

All libraries and applications will be installed for each selection of machine types.

## 7. Installation for Custom Application

This section describes the process of installing custom applications developed with THINC API libraries. This process allows custom applications developed with any version of THINC-API to run on machine without affecting other custom applications running with different versions of THINC-API libraries.


In order for a custom application to run on machine, the following steps need to be done as listed below:

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

## 7.1 THINC-API Spec. Code

In order for THINC-API to function, a spec. code for THINC-API must be enabled on the machine. To enable THINC-API, it must be requested through distributor or Okuma Software Group. Currently, this process is done by installing the OSP System Software on the machine.


On Machining Center, THINC-API spec. code, **CAPI on No 32**, can be verified visually on the NC HMI screen as shown below:

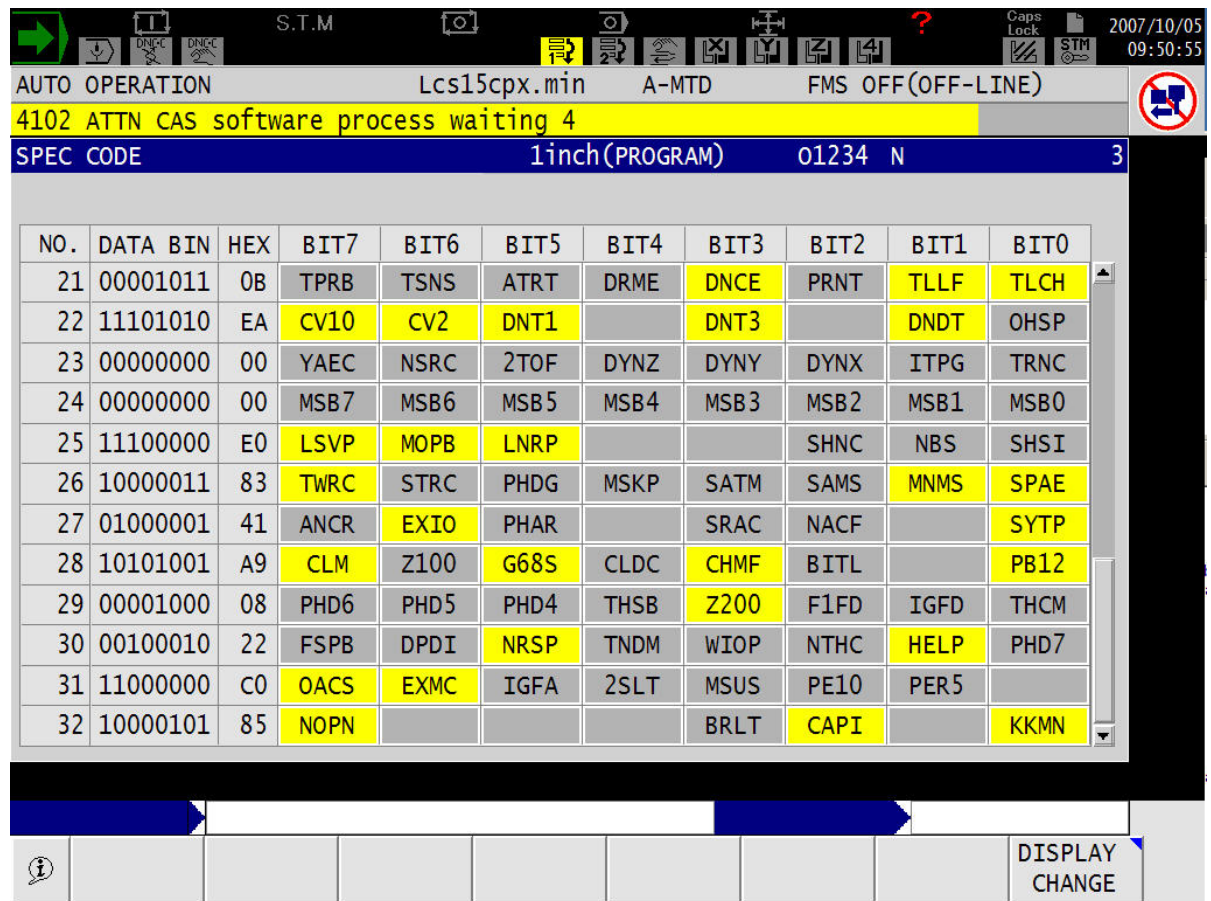

NO.	DATA BIN	HEX	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
21	00001011	0B	TPRB	TSNS	ATRT	DRME	DNCE	PRNT	TLLF	TLCH
22	11101010	EA	CV10	CV2	DNT1		DNT3		DNDT	OHSP
23	00000000	00	YAEC	NSRC	2TOF	DYNZ	DYNY	DYNX	ITPG	TRNC
24	00000000	00	MSB7	MSB6	MSB5	MSB4	MSB3	MSB2	MSB1	MSB0
25	11100000	E0	LSVP	MOPB	LNRP			SHNC	NBS	SHSI
26	10000011	83	TWRC	STRC	PHDG	MSKP	SATM	SAMS	MNMS	SPAE
27	01000001	41	ANCR	EXIO	PHAR		SRAC	NACF		SYTP
28	10101001	A9	CLM	Z100	G68S	CLDC	CHMF	BITL		PB12
29	00001000	08	PHD6	PHD5	PHD4	THSB	Z200	F1FD	IGFD	THCM
30	00100010	22	FSPB	DPDI	NRSP	TNDM	WIOP	NTHC	HELP	PHD7
31	11000000	C0	OACS	EXMC	IGFA	2SLT	MSUS	PE10	PER5	
32	10000101	85	NOPN				BRLT	CAPI		KKMN

On Grinder, THINC-API spec. code, **CAPI on No 22 bit 0**, can be verified visually on the NC HMI screen as shown below:

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

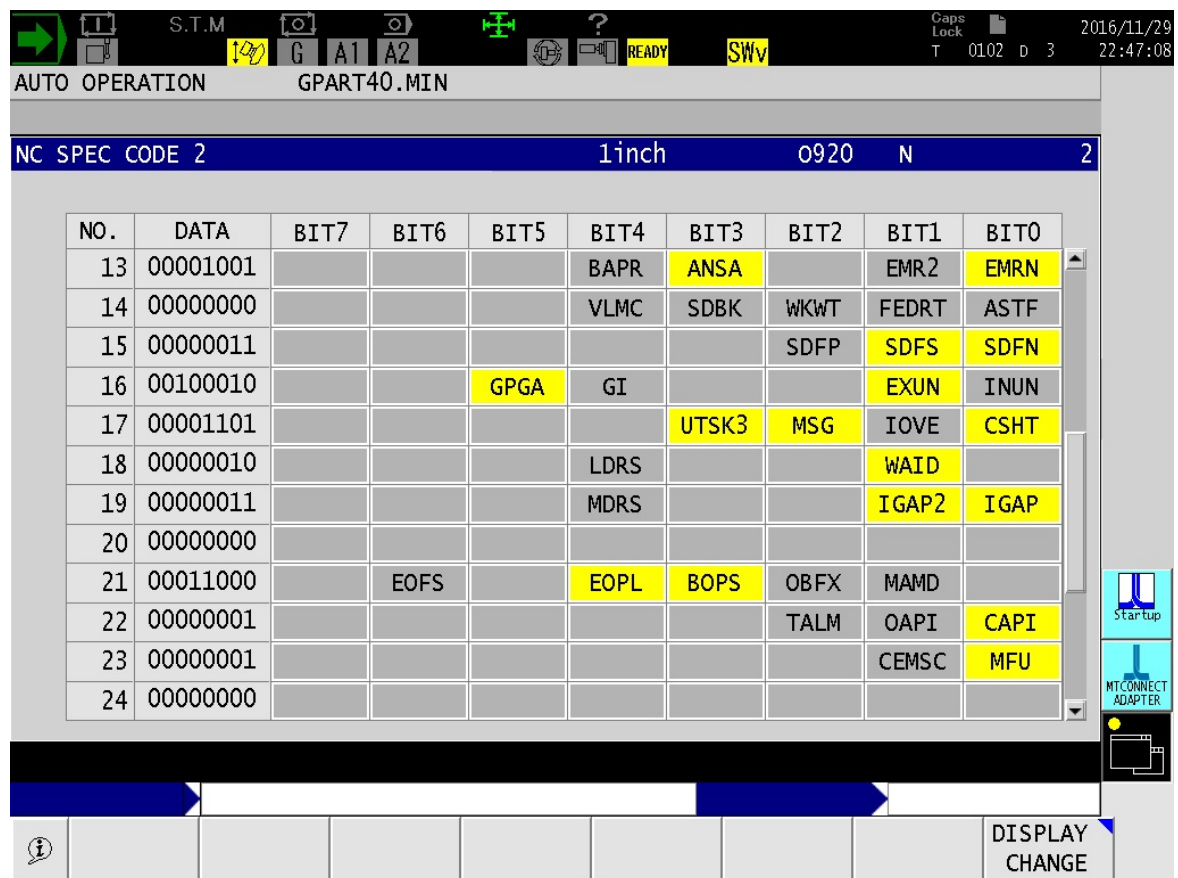

Note: There is no NC-HMI screen for verifying spec code on Lathe machine.

## 7.2 License

All *THINC-API libraries* require a valid license file to run on machine. There is only a single license file, Okuma.api.lic, for all THINC-API libraries version. The setup itself includes a time-out version of license file and is installed in D:\Program Files\Okuma\Licenses folder. Your custom application or demo application can be run in this trial period.

Currently, the trial period is fixed to certain date in the license file.

For example:

This license file will be expired in Oct 1, 2008 for Okuma.CLDATAPI.All version 1.2. This license file can be used on any machine.

```
FEATURE Okuma.CLDATAPI.All okumausa 1.2 01-oct-2008 uncounted \
HOSTID=ANY TS_OK SIGN="00EB B55A 56DD A45F 75D6 F491 231F CD00 \
2BA2 A406 AE0F 932B C574 7230 959C"
```

```
FEATURE Okuma.CMDATAPI.All okumausa 1.2 01-oct-2008 uncounted \
HOSTID=ANY TS_OK SIGN="00D7 1F45 6055 FEBE 8654 2089 A431 B100 \
EE6E 0E40 BAED 4AA3 B350 78DA 8955"
```

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

FEATURE Okuma.CLCMDAPI.All okumausa 1.0 01-oct-2008 uncounted \  
HOSTID=ANY TS\_OK SIGN="00D6 079F E750 1E50 F866 794A 9058 3900 \  
7BA4 97FD 199B 9809 7F19 DD09 41FD"

FEATURE Okuma.CMCMDAPI.All okumausa 1.0 01-oct-2008 uncounted \  
HOSTID=ANY TS\_OK SIGN="00B3 3BC6 ED99 A792 24E0 A99C B6D5 9000 \  
CCF9 B436 0BDA 7283 CCAA 5BE6 E6FC"

FEATURE Okuma.ControlType.P200 okumausa 1.0 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="006A 4D47 5A17 E95C 4AC1 1494 852F  
DB00 A98 F8BE 5366 B02E 10E4 1220 2FCF"

The non-expired license file must be obtained through Okuma Software Group if you are a customer only. Each THINC-API library will check this license for correct version. The library version should be equal or less than the version in the license file to run.

Sample valid license file per machine serial number:

FEATURE Okuma.CLDATAPI.All okumausa 1.1 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="00C3 4CCD E2DB 439D 0F83 4805 \  
9C14 DF00 291B D46A 71BD A96A 61A0 5A54 D18B"

FEATURE Okuma.CLCMDAPI.All okumausa 1.0 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="00A3 F5EF 4872 1C12 27C9 8E5B \  
C5B9 4D00 5300 1FF5 D0B4 1371 DC59 4FB9 CEDD"

FEATURE Okuma.CMDATAPI.All okumausa 1.1 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="00B8 7E90 2B05 9535 94E4 92CB \  
C8BB B100 89C1 3E47 820D E045 931C EC07 68A9"

FEATURE Okuma.CMCMDAPI.All okumausa 1.0 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="00B2 0B95 F2BC 0E10 D351 D60A \  
60F8 E100 1904 FC87 685A 09D0 A1BC 1C45 8B52"

FEATURE Okuma.CGDATAPI.All okumausa 1.0 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="00B8 7E90 2B05 9535 94E4 92CB \  
C8BB B100 89C1 3E47 820D E045 931C EC07 68A9"

FEATURE Okuma.CGCMDAPI.All okumausa 1.0 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="00B2 0B95 F2BC 0E10 D351 D60A \  
60F8 E100 1904 FC87 685A 09D0 A1BC 1C45 8B52"

FEATURE Okuma.ControlType.P200 okumausa 1.0 permanent uncounted \  
HOSTID=SERIAL=105330 TS\_OK SIGN="006A 4D47 5A17 E95C 4AC1 1494 852F  
DB00 A98 F8BE 5366 B02E 10E4 1220 2FCF"

This license file is for machine having serial number 105330 only. It will not work on other machines having different serial number. It will support Okuma.CLDATAPI.dll library having a version that equals to or less than 1.1, and so for. This license file can support function calls for P200 or newer control types.

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

### 7.3 Installation

As normal case for all Windows installation program, THINC-API Setup will run through the installation if:

- THINC-API is not installed on the target machine.
- If existing version of THINC-API on machine is less than the installing version

For custom application developed with THINC-API:

- All and **ONLY** [THINC-API libraries](#) referenced by your application such as Okuma.CLDATAPI.dll, Okuma.COMDATAPI.dll, and Okuma.CGATAPI.dll must be included in your setup and installed in the same folder of your custom application.
- The libraries version referenced in your application must match (exact match since this library is signed with strong name) the libraries installed in your application folder.
- The THINC-API license file, Okuma.api.lic, installed on machine must support the THINC-API libraries version that your application are compiled with.

For example:

The machine has installed THINC-API and the version of Okuma.CLDATAPI is 1.1 as shown below

```
FEATURE Okuma.CLDATAPI.All okumausa 1.1 permanent uncounted \
HOSTID=SERIAL=105330 TS_OK SIGN="00C3 4CCD E2DB 439D 0F83 4805 \
9C14 DF00 291B D46A 71BD A96A 61A0 5A54 D18B"
```

Your custom application is compiled with Okuma.CLDATAPI version 1.2. In this case, the customer needs to obtain the latest THINC-API release and install on the machine.

For all cases, the latest release of THINC-API will cover all custom applications running on the machine and compiled with different version of THINC-API. The latest release of THINC-API always has the latest version of THINC-API libraries and the license file supports latest THINC-API libraries versions, also.

***In all cases, the following files must not be included with the installation of custom applications developed with THINC-API libraries:***

- ***LCMDAPI.exe***
- ***MCDMAPI.exe***
- ***GCMDAPI.exe***

### 7.4 Public Release

All custom applications developed with THINC-API must use the public release 1.0.0.0 or above. Any version before public release version will have compatibility issues with public release version and will not run correctly.

### 7.5 Best Practice

An application should verify all dependency libraries during run-time and encourages using the latest version of THINC-API release if possible. A re-compile of your application is a must to leverage new version of THINC-API features or bugs/defects fixes.

An application must install .NET framework version that it is compiled with.

The installation process comprises 2 steps:

1. Install THINC-API (.NET Framework 1.1/4.0 will also be installed if needed)
2. Install custom application (requires installing .NET Framework that application compiled with. It could be .NET Framework version 2.0, 3.0, and so on)

THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

3. All exceptions generated by API and all set/add/cal functions will be logged. Therefore, an application must be designed to minimize unnecessary log by utilizing Object-Oriented Programming practices or preventing perform set/add/cal functions in a loop.

**Example of bad practice:**

```
Dim m_objTools As CTools
Dim intValue As Integer
```

```
m_objTools = New CTools
```

```
...
```

```
Private Sub UpdateThread()
```

```
While (blnRunning)
```

```
    m_objTools.SetSubSystem(SubSystemEnum: NC_AL)
```

```
    intValue = m_objTools.GetCurrentToolNumber ()
```

```
    .
```

```
    .
```

```
    m_objTools.SetSubSystem(SubSystemEnum: NC_BL)
```

```
    intValue = m_objTools.GetCurrentToolNumber ()
```

```
    .
```

```
    .
```

```
End While
```

```
End Sub
```

**Example of good practice:**

```
Dim m_objATurretTools As CTools
```

```
Dim m_objBTurretTools As CTools
```

```
Dim intValue As Integer
```

```
m_objATurretTools = New CTools
```

```
m_objATurretTools .SetSubSystem(SubSystemEnum: NC_AL)
```

```
m_objBTurretTools = New CTools
```

```
m_objBTurretTools .SetSubSystem(SubSystemEnum: NC_BL)
```

```
...
```

```
Private Sub UpdateThread()
```

```
While (blnRunning)
```

```
    intValue = m_objATurretTools . GetCurrentToolNumber ()
```

```
    .
```

```
    .
```

```
    intValue = m_objBTurretTools. GetCurrentToolNumber ()
```

```
    .
```

```
    .
```

```
End While
```



THINC-API	Version: S5015-007-08
Installation Manual	Date: 11/17/2016

End Sub

*All custom applications also need to install into D:\Program Files folder only.*