



Dreamcast cable assembly

1. If recycling a cable from a broken controller, or if using an extension cable, cut the cable 10-40cm from the plug.
2. Strip 3-5 cm of the outer insulation sleeving from the cable
3. Isolate the inner wires from the cable and strip 5mm from each wire
4. Crimp each wire with a female Dupont crimp in line with the crimping guide

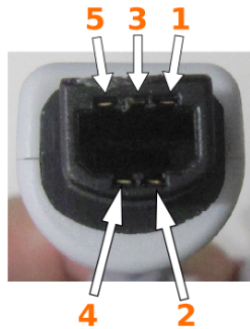


Crimping

1. Place the wire in a female Dupont crimp
2. Fold the pull relief around the wire

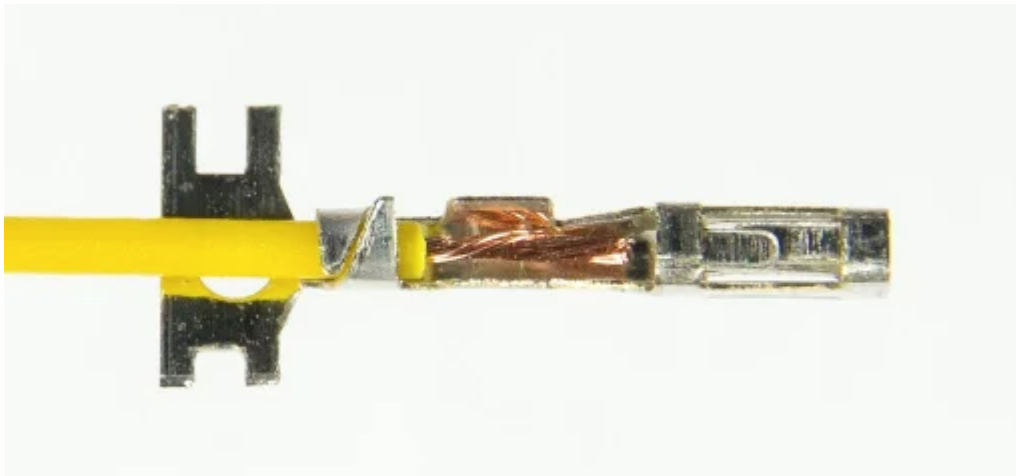

3. Use a crimping tool to shrink the connector around the wire ends
4. Slide the connector housing onto the crimp until it mounts, making sure the orientation is correct

Dreamcast 1 Player connection diagram

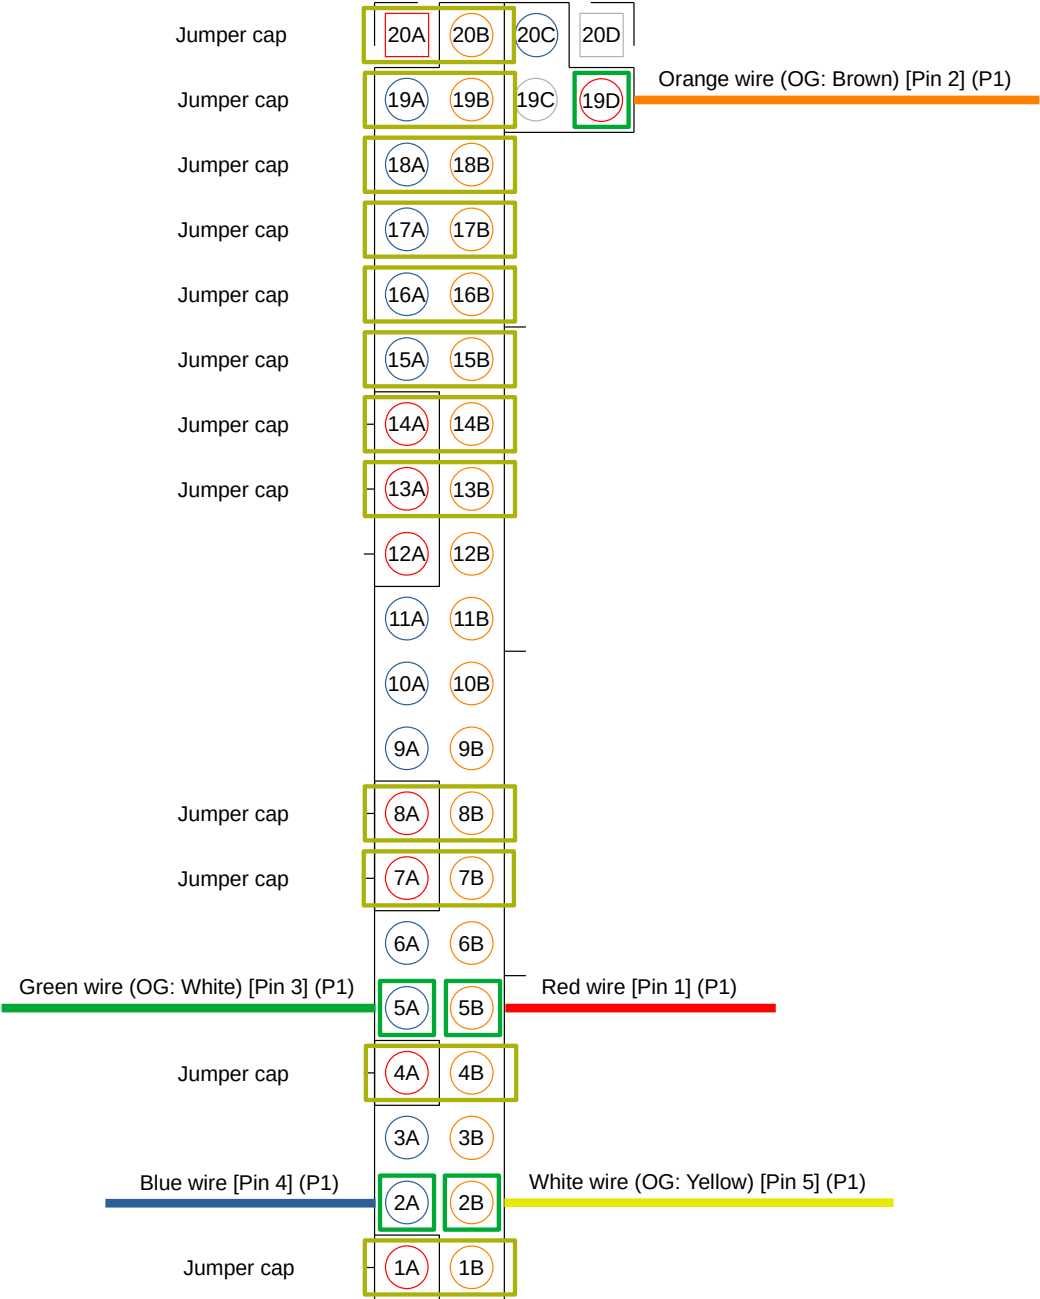

Dreamcast 1 Player connection guide

1. Place the jumper caps on rows 1, 4, 7, 8, 13, 14, 15, 16, 17, 18, 19, 20
2. Connect the blue wire [Pin 4] to pin 2A
3. Connect the white (OG yellow) wire [Pin 5] to pin 5B
4. Connect the red wire [Pin 1] to pin 5B
5. Connect the green (OG white) wire [Pin 3] to pin 5A
6. Connect the orange (OG brown) wire [Pin 2] to pin 19D
7. Connections should now resemble the diagram