


Raspberry connect:

Choose one from below.

- 1. Console
- 2. SSH

Console:

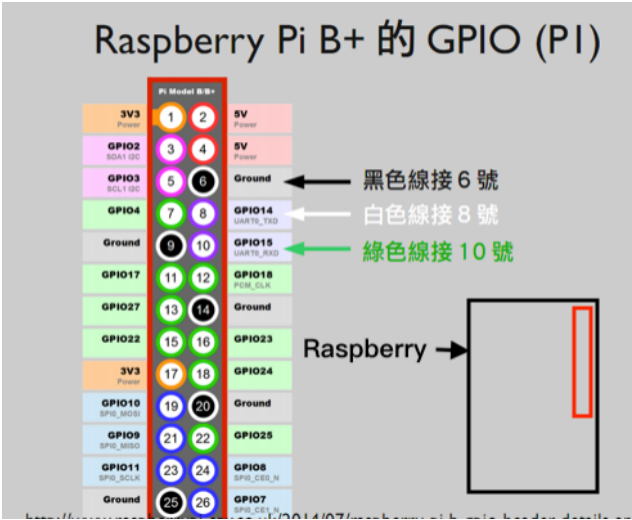


- 1. Download PL2303 drive.(<https://bit.ly/1dy3wb>)

Download Driver Setup Program:

Driver Installer	File	Installer Version	OS Support
Standard Driver	<a href="#">Download file</a>	1.20.0 (2018-7-30)	<b>Windows XP/7/8/10</b> - WDF Driver: v3.8.25.0 (7/12/2018) - Windows 7/8.1/10 - WDM Driver: v3.8.24.0 (7/05/2018) - Windows XP
DCHU (for PC Vendors)	<a href="#">Download file</a>	1.19.2 (2018-05-03)	<b>Windows 10 RS3/RS4 Only</b> - WDF Driver: v3.8.18.0 (10/17/2017) - Windows 10RS3/RS4



- 2. Decompress file and open it.


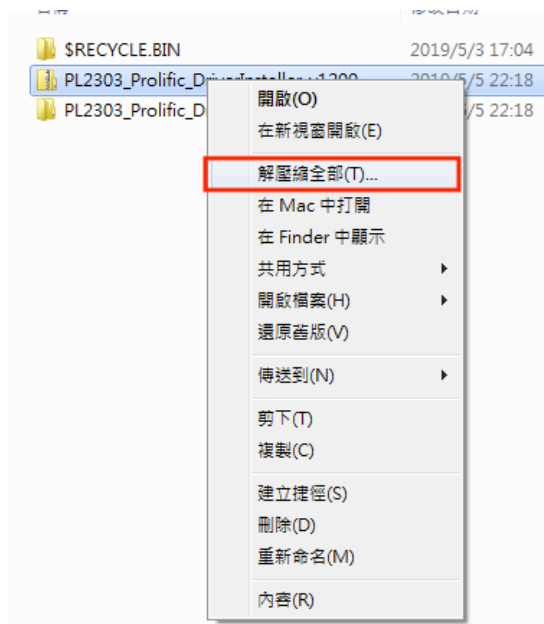


3. Install PL2303-Prolific\_DriverInstaller\_v1200.

名稱	修改日期	類型	大小
PL2303 Windows Driver Manual v1.20.0	2018/8/1 17:45	PDF 檔案	1,224 KB
PL2303_CheckChipVersion_v1006	2013/1/15 18:20	應用程式	208 KB
PL2303_DriverInstallerv1.20.0_Release...	2018/8/1 17:28	文字文件	15 KB
PL2303CheckChipVersion_ReadMe	2015/6/17 12:16	文字文件	2 KB
PL2303-Prolific_DriverInstaller_v1200	2018/7/30 18:08	應用程式	6,830 KB


4. Use serial protocol connect to raspberry by the MobaXterm application.

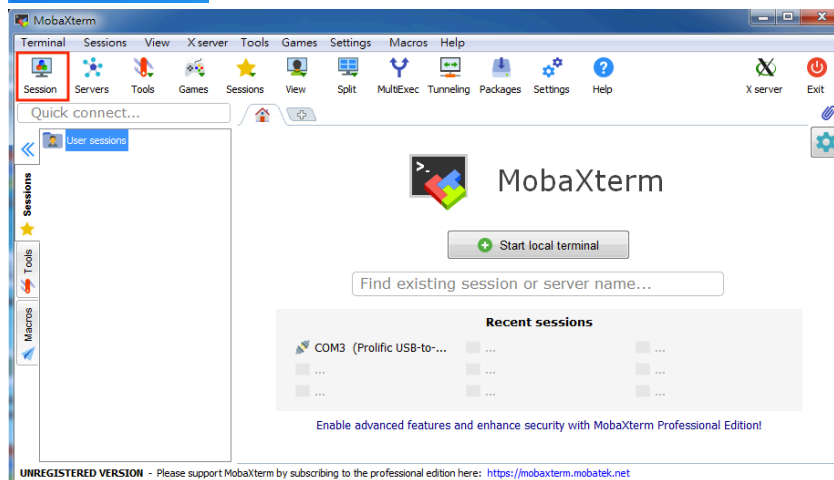
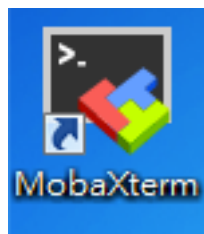


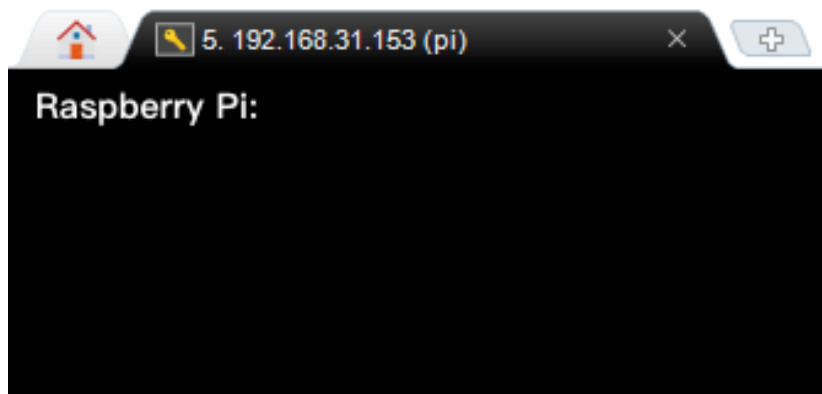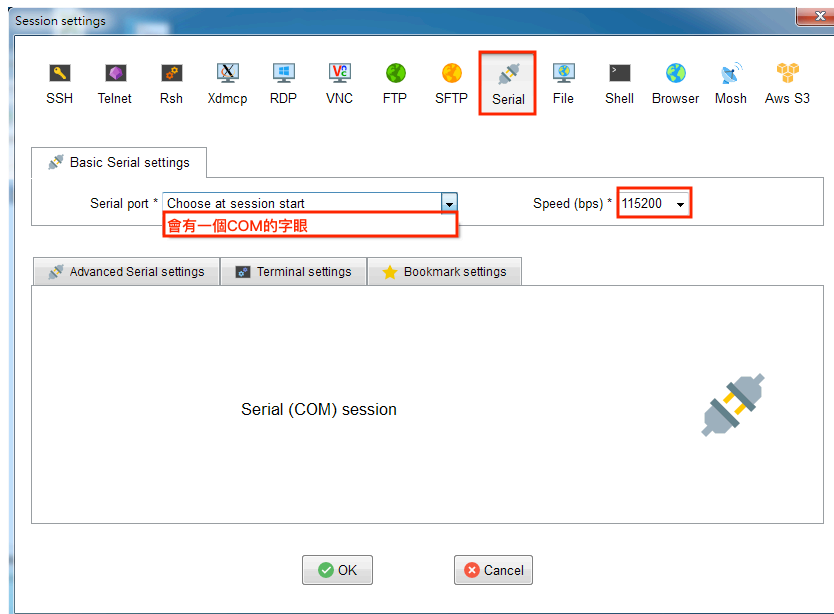


SSH :




1. Open your network setting to modify IP address.

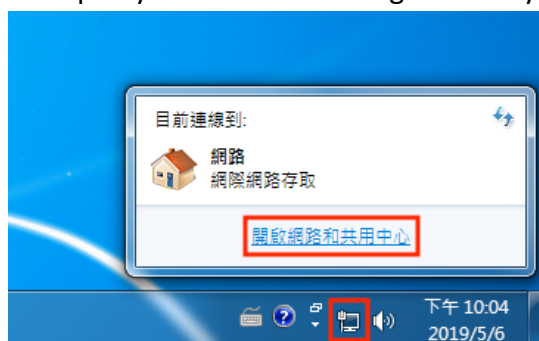

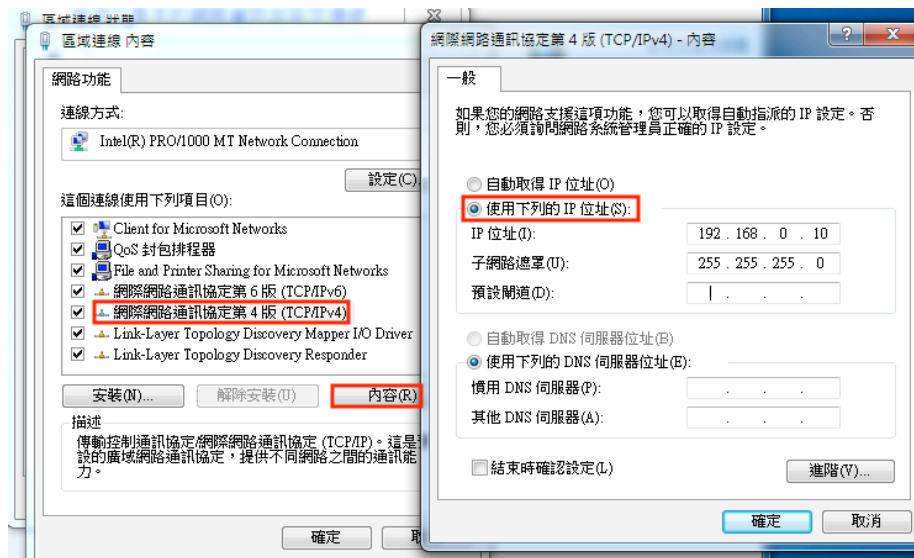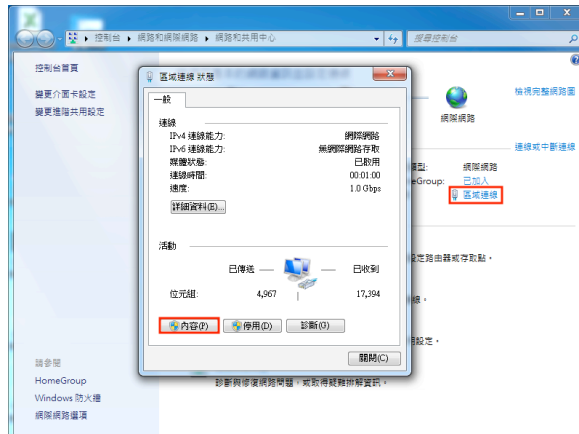

2. Use ssh protocol connect to raspberry by the MobaXterm application.

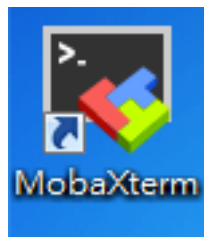

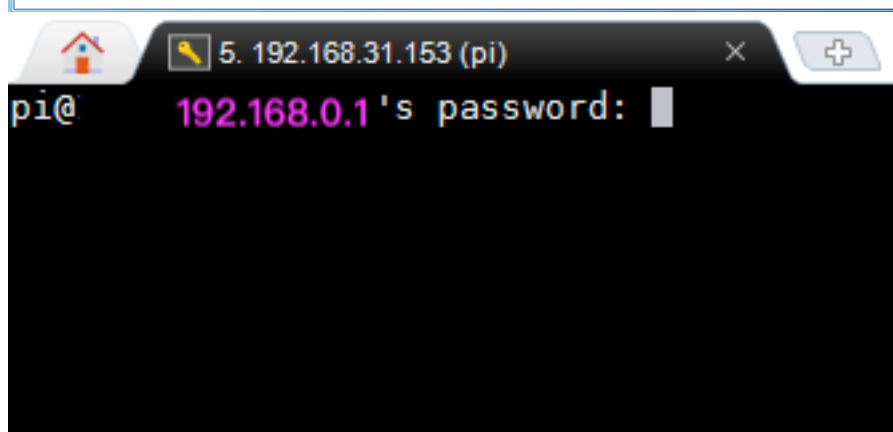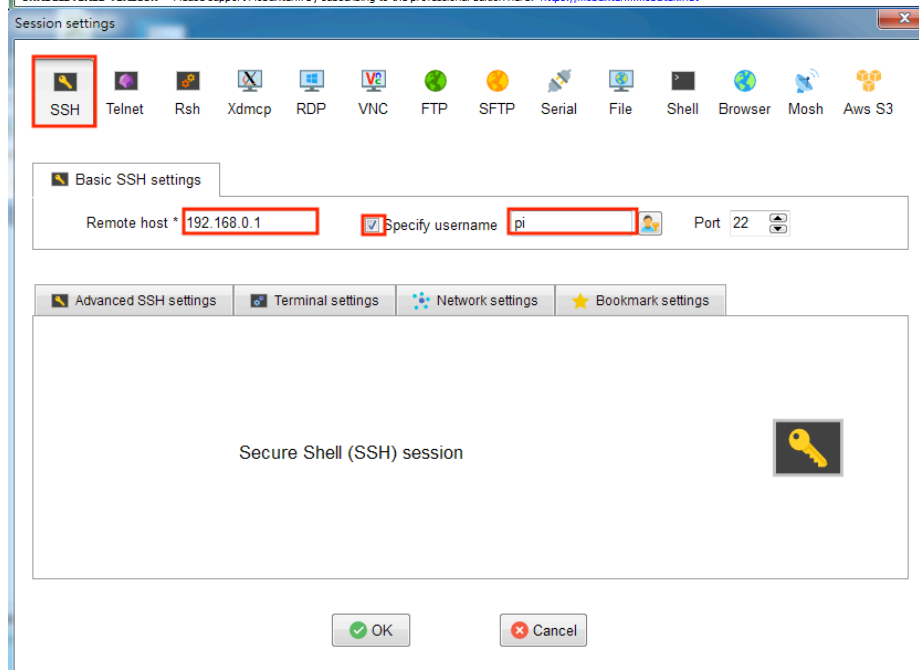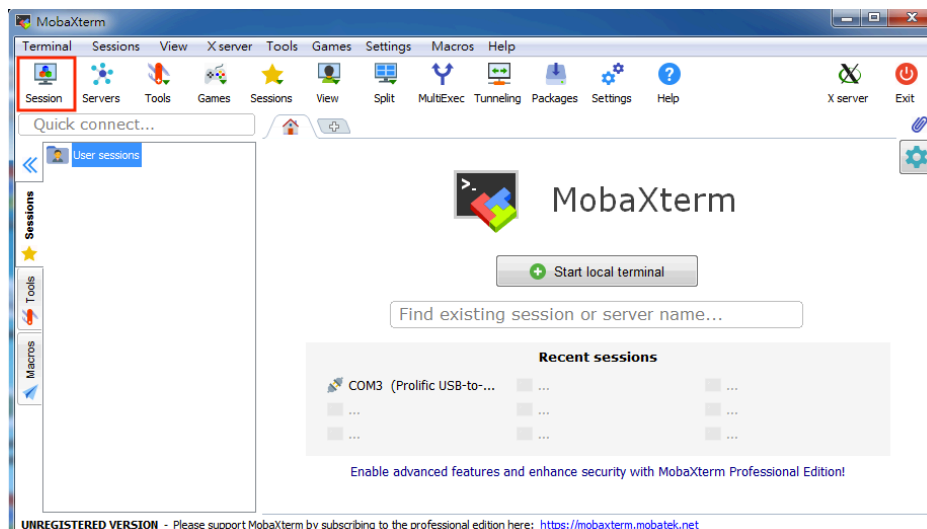

```
? MobaXterm 10.9 ?
(SSh client, X-server and networking tools)

> SSh session to root@192.168.31.153
? SSh compression : ✓
? SSh-browser      : ✓
? X11-forwarding   : ✓ (remote display is forwarded through SSh)
? DISPLAY          : ✓ (automatically set on remote server)

> For more info, ctrl+click on help or visit our website

Last login: Mon May  6 22:09:20 2019 from 192.168.31.129
[root@JWei ~]$
```

### RFID on Raspberry Pi:

RFID-RC522模組	Raspberry pi接腳
SDA	24
SCK	23
MOSI	19
MISO	21
IRQ	none
GND	6
RST	22
3.3V	1

### Ultrasonic on Arduino:

Ultrasonic:

Vcc -> pin 5v

GNG -> pin GND

Trig -> pin 7

Echo -> pin 8

2.5mm line:

Long -> pin GND

Short -> pin 11

RFID on Arduino:

RFID-RC522模組	Arduino接腳
SDA	Pin 10
SCK	Pin 13
MOSI	Pin 11
MISO	Pin 12
IRQ	None
GND	GND
RST	Pin 9
3.3V	3.3V

To know RFID time:

1. Enter `cat Desktop/topic/recordTime.json`.

```
cat Desktop/topic/recordTime.json
```

```
[{"90758C4D": [85607, 85607]}, {"906AE087": [49423, 49424]}, [804]]
```

↑ 卡號      ↑ 奇數為入場時間;  
                  偶數為出場時間      ↑ 總秒數