
Health Thermometer Profile (HTP) – Getting Started Guide

USER GUIDE

Introduction

This getting started guide describes the setup of Atmel® ATBTLC1000 with a [supported platform](#) bringing-up an example profile supplied as part of BluSDK release. The Bluetooth Health Thermometer Profile (HTP) is an example profile application that is embedded as part of the software release package. The device advertises itself as a Health Thermometer. The BTLC1000 Xplained PRO Extension board includes an on-board temperature sensor (accessible from the host MCU) for the purpose of sensing the ambient temperature.

Table of Contents

1	Features	3
2	Description.....	3
3	Services and Characteristics.....	3
4	Supported Hardware Platforms and IDEs	4
5	Demo Setup	4
6	Hardware Setup	5
6.1	SAM L21 Xplained Pro Health Thermometer Setup	5
6.2	SAM D21 Xplained Pro Health Thermometer Setup	5
6.3	SAM G55 Xplained Pro Health Thermometer Setup	6
7	Temperature Measurement Location	7
8	Temperature Type	7
9	Software Setup	8
9.1	Installation Steps	8
9.2	Build Procedure.....	9
10	Running the demo	13
11	Software Architecture	18
12	Console Logging	19
13	ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER.....	20
14	Revision History	21

1 Features

- Device Discovery and Disconnection
- Pairing / Bonding
- RSSI Sampling
- Health Thermometer Service
- Health Thermometer Profile iOS/Android Application

2 Description

The Health Thermometer Profile is used to enable a data collection device to obtain data from a thermometer sensor that exposes the Health Thermometer Service.

The profile defines two roles:

- Thermometer:

The Thermometer is the device that measures the temperature.

- Collector:

The Collector is the device that receives the temperature measurement and other data from a Thermometer.

This document explains the details about

1. Getting Started with the setup of [supported platform](#) to be used as a Thermometer
2. Getting the Health Thermometer Profile Application working on the above mentioned setup.

3 Services and Characteristics

The Thermometer implements the one and only one Health Thermometer Service in addition to the Device Information Service to display the information about the Thermometer device.

The current Thermometer profile implementation implements the following characteristics.


- Temperature Measurement
- Intermediate Temperature
- Measurement Interval

4 Supported Hardware Platforms and IDEs

Table 4-1. BluSDK – supported hardware and IDEs

Platform	MCU	Supported BLE device	Supported evaluation kits	Supported IDEs
SAM L21 (MCU)	ATSAML21J18B	ATBTLC1000	ATBTLC1000-XSTK (ATSAML21-XPRO-B + ATBTLC1000 XPRO)	Atmel Studio v6.2
SAM L21 (MCU)	ATSAML21J18A	ATBTLC1000	ATSAML21 XPRO + ATBTLC1000 XPRO	Atmel Studio v6.2
SAM D21 (MCU)	ATSAMD21J18A	ATBTLC1000	ATSAMD21-XPRO + ATBTLC1000 XPRO	Atmel Studio v6.2
SAM G55 (MCU)	ATSAMG55J19	ATBTLC1000	ATSAMG55-XPRO + ATBTLC1000 XPRO	Atmel Studio v6.2


5 Demo Setup

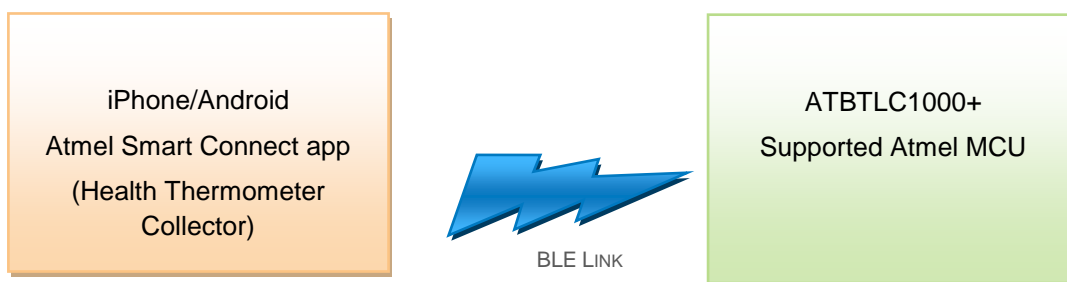

6 Hardware Setup


6.1 SAM L21 Xplained Pro Health Thermometer Setup

Figure 6-1. ATBTLC1000 Xplained Pro Extension Connected to a SAM L21 Xplained Pro

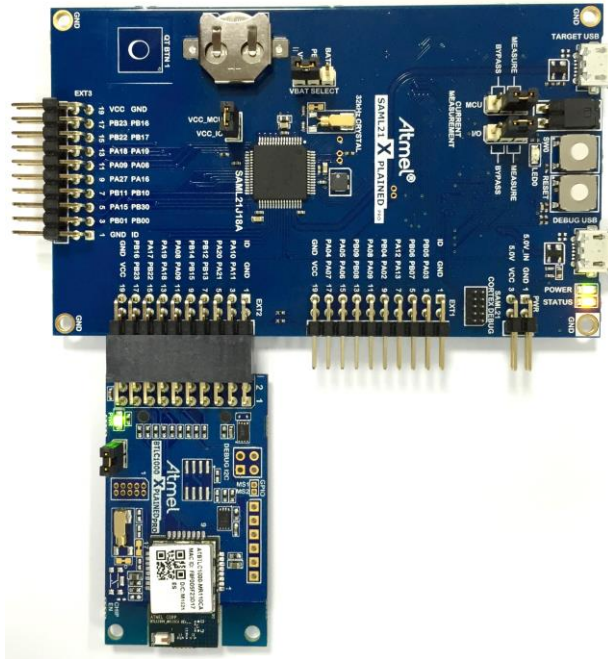


6.2 SAM D21 Xplained Pro Health Thermometer Setup

Figure 6-2. ATBTLC1000 Xplained Pro Extension Connected to a SAM D21 Xplained Pro

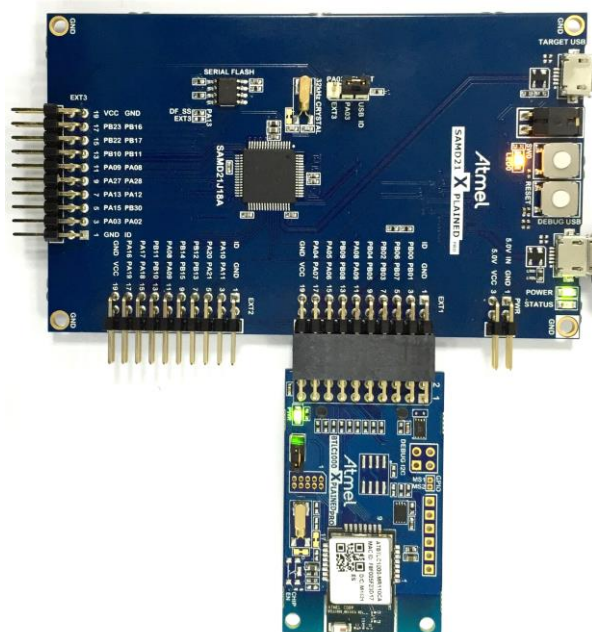

6.3 SAM G55 Xplained Pro Health Thermometer Setup

Figure 6-3. ATBTLC1000 Xplained Pro Extension Connected to a SAM G55 Xplained Pro

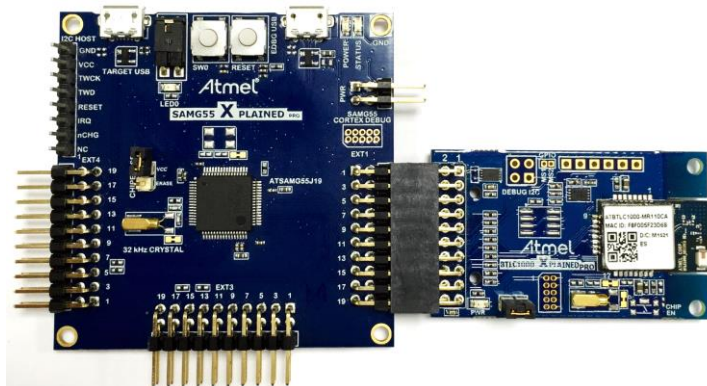

7 Temperature Measurement Location

Onboard the [supported platform](#), the user button is configured to change the temperature measurement location in the human body

The Health Thermometer profile specifies the following locations at which temperature measurements can be read.

- Body (general)
- Ear (usually ear lobe)
- Finger
- Gastro-intestinal Tract
- Mouth
- Rectum
- Toe
- Tympanum (ear drum)

So in order to simulate the change of temperature measurement location from the Thermometer Sensor device ([supported platform](#)), the user button had been programmed. So, every time the user button is pressed, the temperature location will be changed as per the above list.

This can clearly be observed on a Health Thermometer Collector (Mobile Application).

8 Temperature Type

One more parameter that needs to be simulated is the temperature measurement type which contains two values, Centigrade and Fahrenheit.

To simulate this change on the peripheral side, as there is only one user button available on board which had already been used for changing the temperature location, the trigger that is used for this is to run through all the locations once. Then the application shall toggle the temperature type.

B

9 Software Setup

9.1 Installation Steps

1. Atmel Studio installation [**Atmel Studio 6.2 sp2 (build 1563) Installer – with .NET**]
<http://www.atmel.com/tools/atmelstudio.aspx>
(Note: SAML21 Rev A/SAMD21 part pack is built-in as part of Atmel Studio 6.2 sp2)
2. Part Packs.
 - a. Install SAML21 Rev B Part Pack <http://www.atmel.com/images/ATSAML21revB-6.2.6.zip>
(Note: Atmel BTLC1000 X-STK ships with SAML21 XPRO-B and requires this installer)
 - b. Install SAMG55 Part pack <http://www.atmel.com/images/as-partpack-ATSAMG55-6.2.13.zip>.
(Note: This installer is needed only if the bring-up is being done on the SAM G55 platform)
2. Atmel USB Driver Installer from <http://www.atmel.com/tools/atmelstudio.aspx>.
3. Install the standalone ASF package from
<http://www.atmel.com/tools/AVRSOFTWAREFRAMEWORK.aspx>

Note: Refer to the BluSDK release notes for updates to version numbers of the components mentioned above.

This package will install the following examples within the Atmel Studio environment.


1. Health Thermometer Application for SAM L21
2. Health Thermometer Application for SAM D21
3. Health Thermometer Application for SAM G55

9.2 Build Procedure

The following procedure is explained for SAM L21 application example. The same procedure is valid for the case of all the other [supported platforms](#) as well.


1. Select New Example Project

Figure 9-1. Creating a New Project

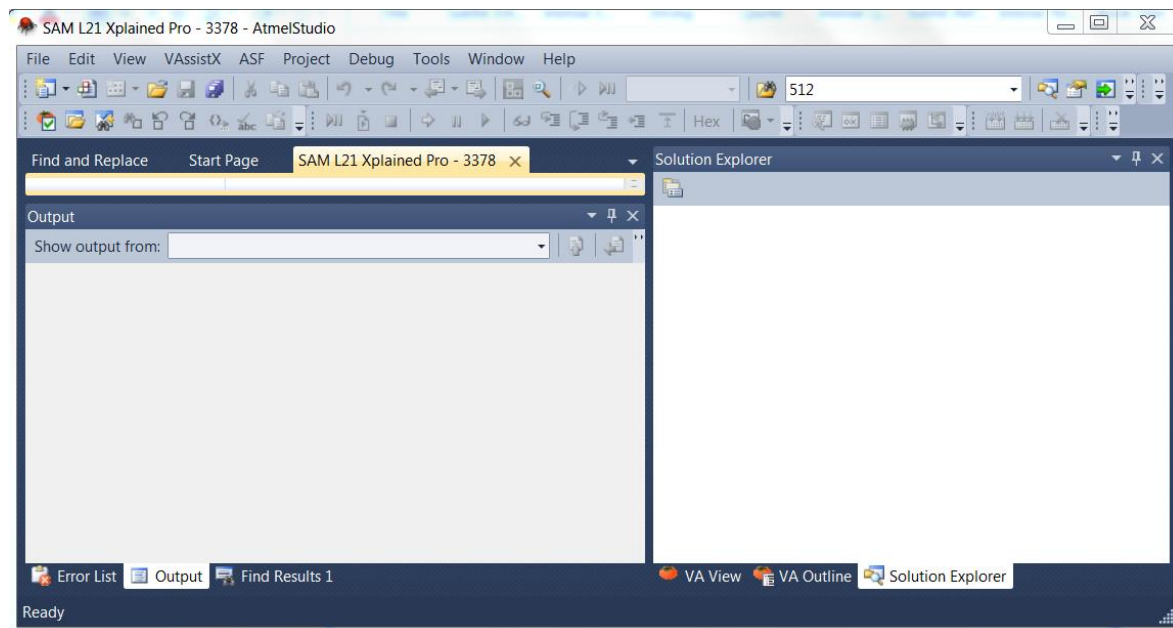

2. Enter “htpt” in search window and expand Atmel Corp Projects. The location and the name of the project can be selected in the respective fields. Click OK.


Figure 9-2. Selecting HTP Sensor Application from Example Projects

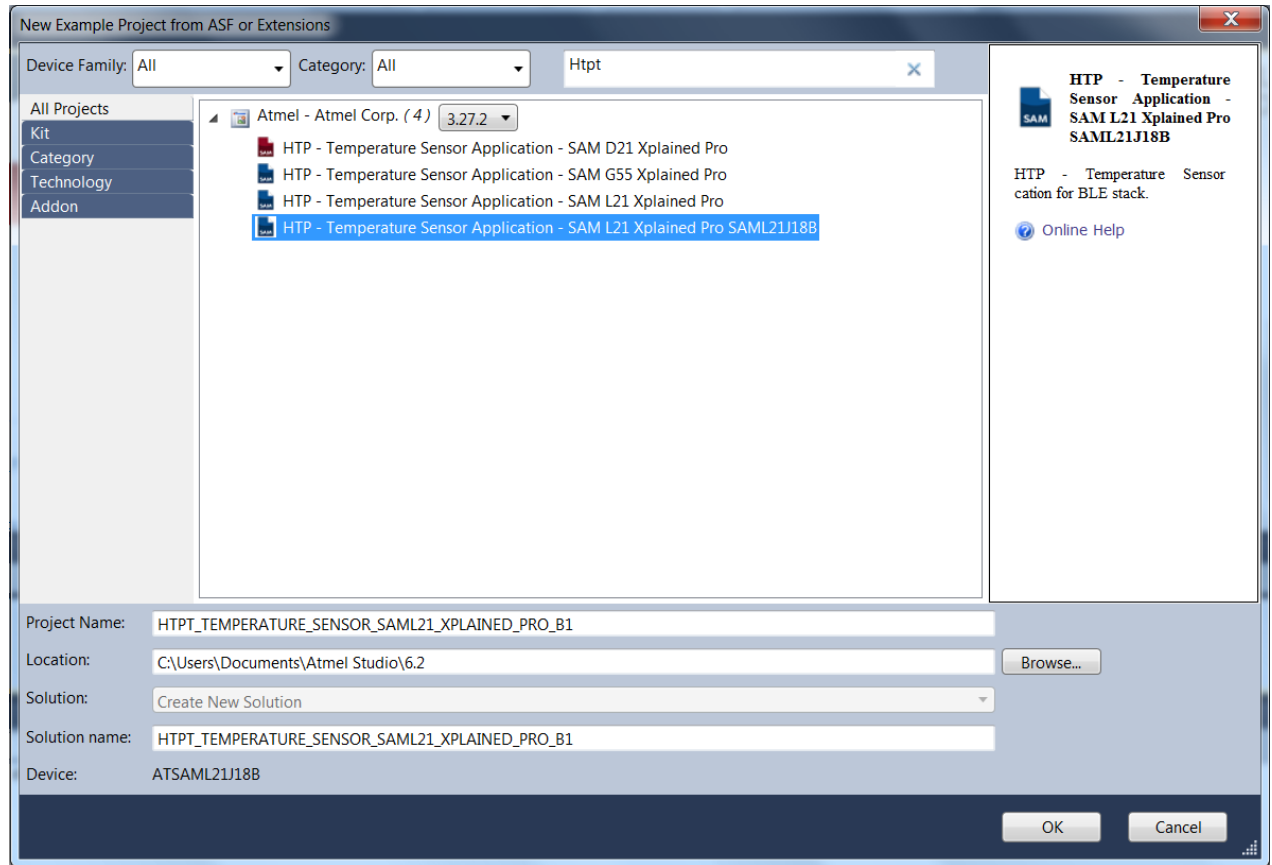

3. Accept the license Agreement. The studio will generate the Health Thermometer Profile project for SAM L21.


4. Build the solution.

Figure 9-3. Building the HTPT Temperature Sensor Application

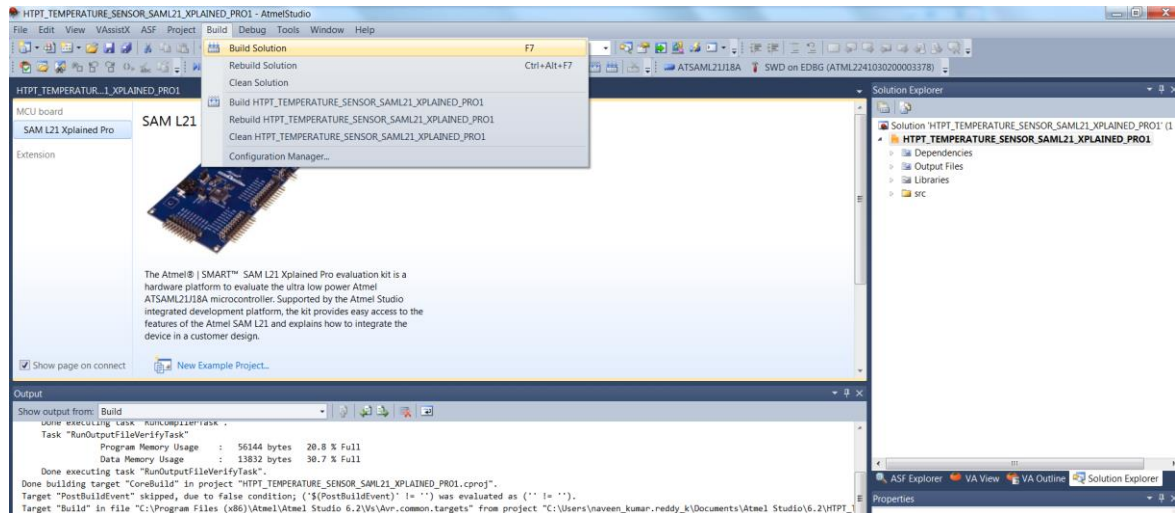

5. Download the application via the USB to the SAM L21 board
6. Once the application is flashed, it is ready to be simulated as Health Thermometer Device.


Figure 9-4. Flashing the Application on Atmel MCU

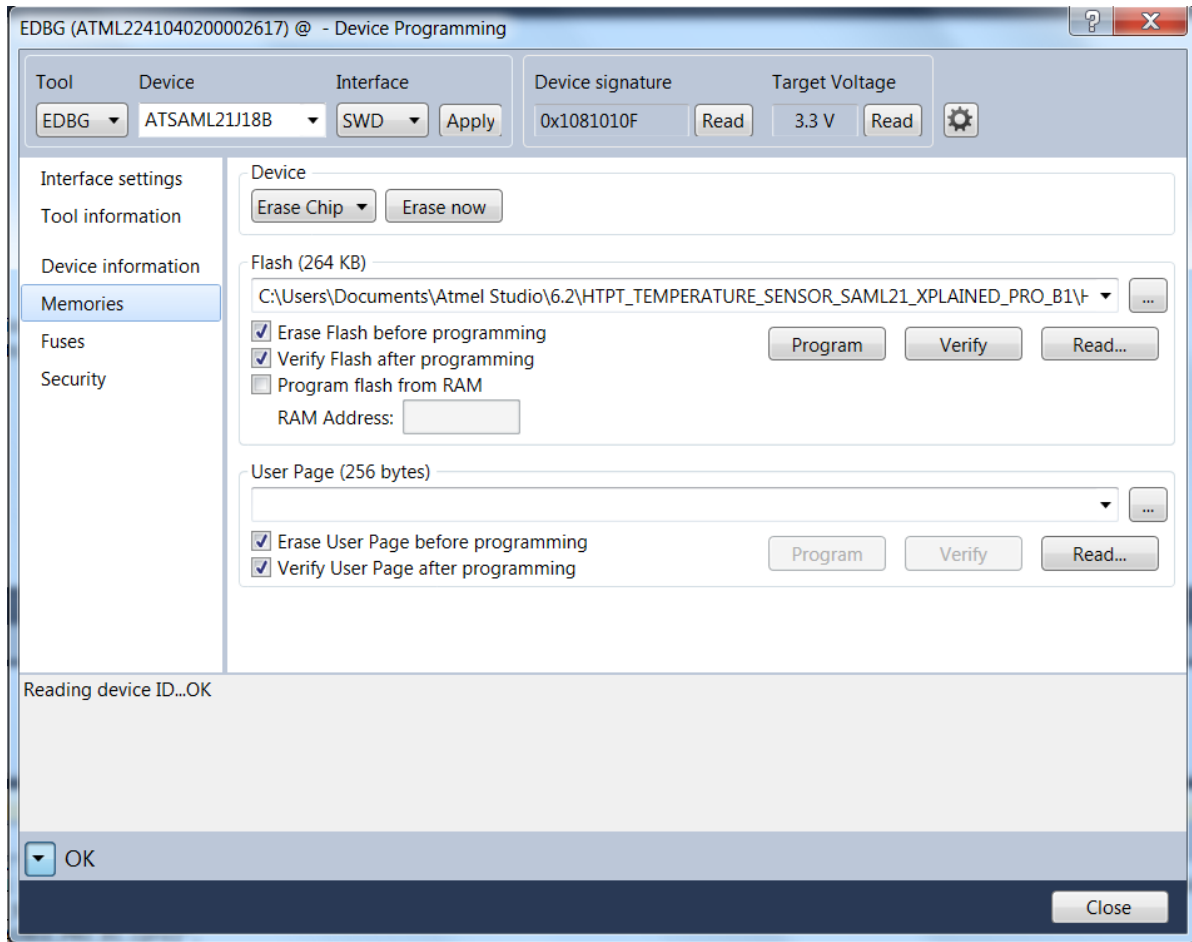

10 Running the demo


1. Power on the SAML21 + ATBTLC1000 demo setup.
2. Open the console using TeraTerm or any serial port monitor application and connect to the corresponding COM port of “EDBG”. Serial Port Settings: Baudrate 115200, Parity None, 1 Stop bit, 1 Start bit, No Hardware Handshake.
3. Press the Reset button on the SAML21 board.
4. Wait for around 10 seconds for the patches to be downloaded from SAML21 to BTLC1000 board.
5. The board should be in advertising mode. Ensure that the console log looks as shown below.

Figure 10-1. Console Log for Advertising Mode

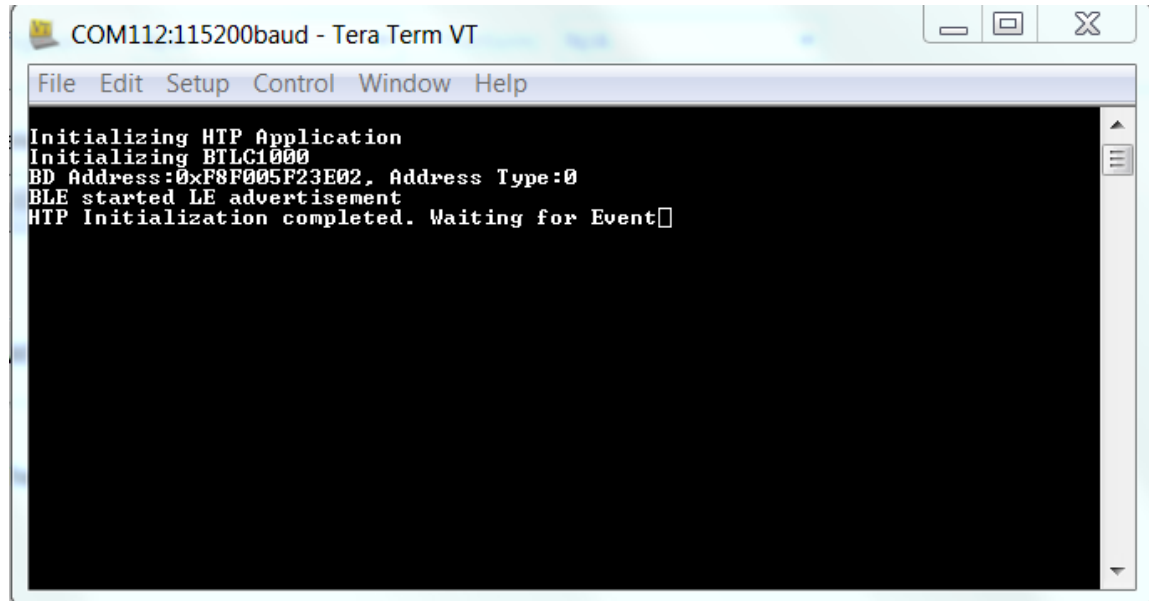


6. Start the Thermometer application on the iPhone/Android:

Figure 10-2. iOS (Left)/Android(Right) Thermometer Profile App Launch Screen

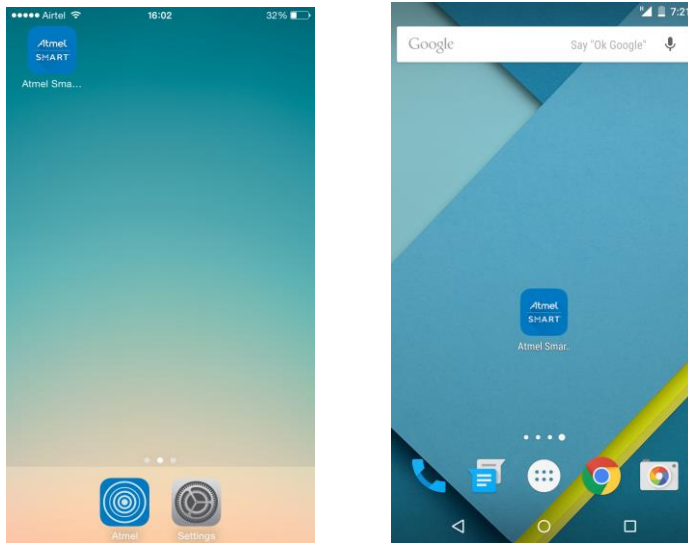

7. Use the Atmel Smart Connect app to scan for devices. A device with name 'ATMEL-HTP' will be seen in the list of discovered devices.

Figure 10-3. Atmel Smart Connect App Initial Screens

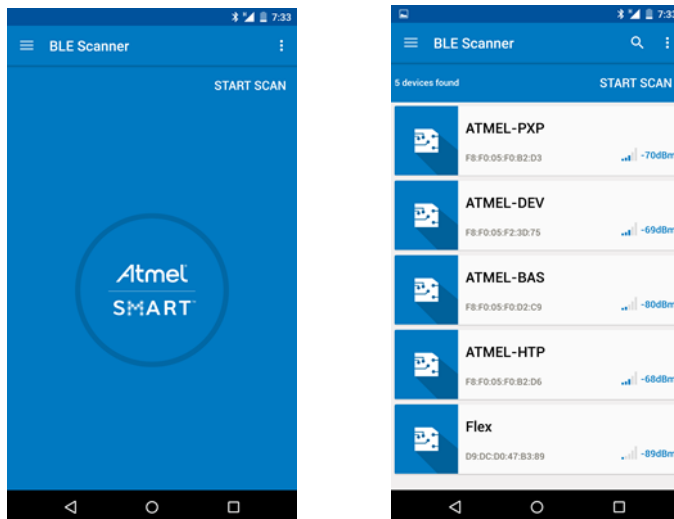

- Click on ATMEL-HTP to connect to the device. Subsequently the services page will be seen. Clicking on the services will result in initiation of pairing procedure.

Figure 10-4. Pairing Procedure Initiation iOS (left) and Android (right)


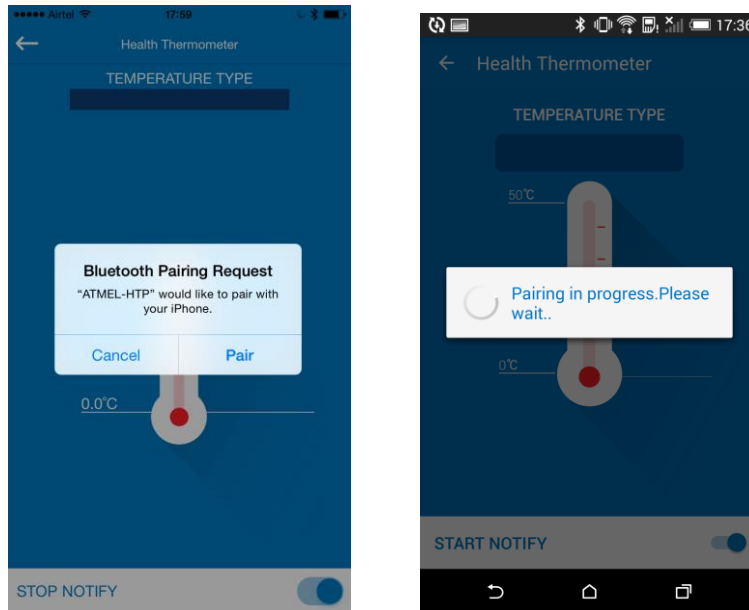


Figure 10-5. Console Log on the Device During Pairing

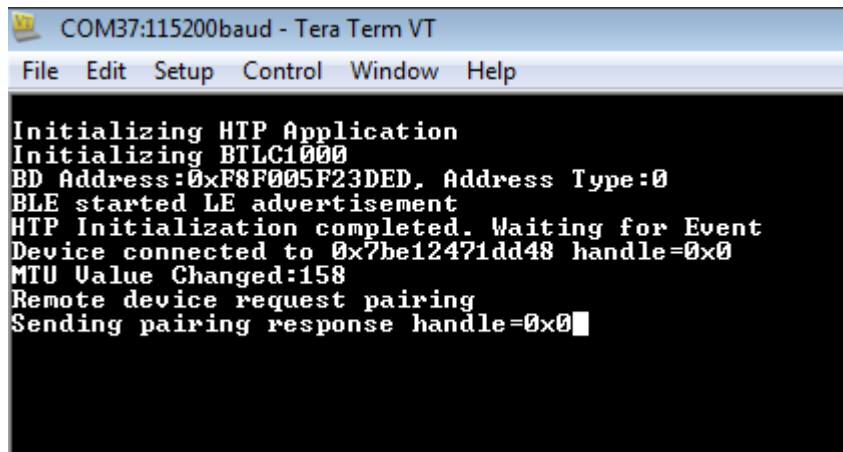

- The temperature value, RSSI and the device name are displayed on the Mobile App. Console log will be as shown below.

Figure 10-6. App Health Thermometer Connected Screen



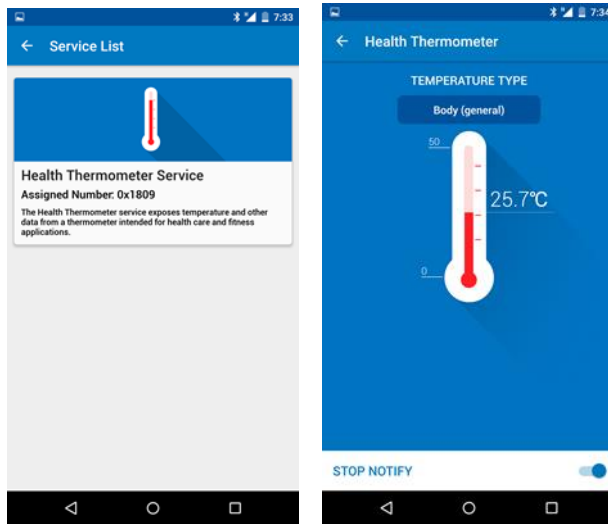


Figure 10-7. Console Log after Connection, Pairing and with Notifications

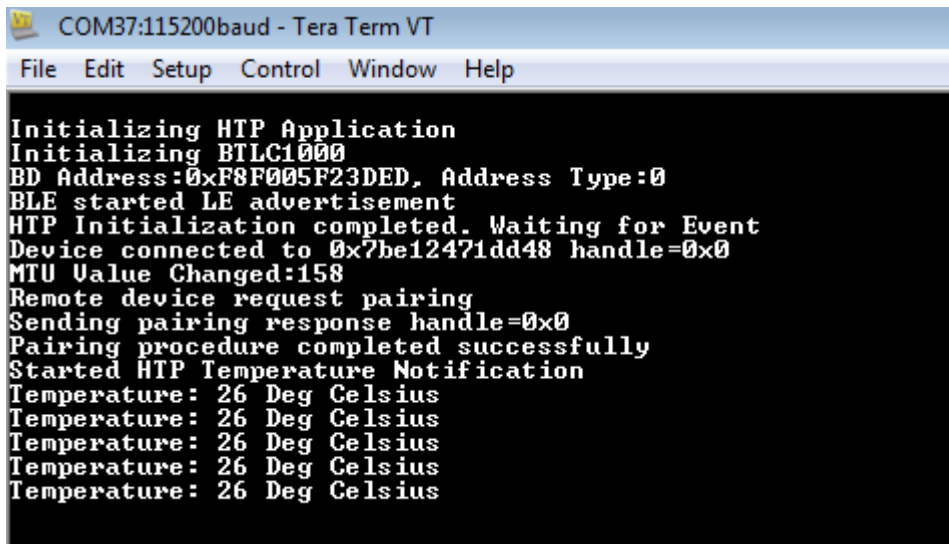

10. To change the body measurement location, press the user button (SW0) on the SAM L21 or on the [supported platform](#). The new value should be updated in the application.

Figure 10-8. SW0 button for changing body measurement location

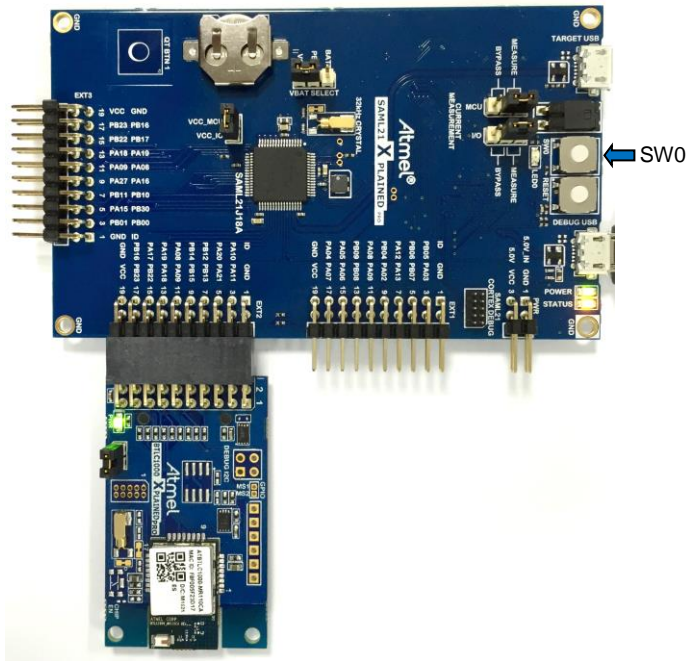


11. On the Atmel Smart Connect application, going back to the scanning screen will disconnect the device with mobile application.

11 Software Architecture

The following diagram illustrates the various layers in the BLE subsystem for the BTLC1000 configuration. The External host can be any [supported platform](#).

The application in this example is Health Thermometer Sensor. In the case of Health Thermometer Profile, the profile in itself is implemented inside ATBTLC1000. Specific HTPPT APIs are provided as part of the Adapter API that is used by the HTP example application.

Figure 11-1. BluSDK Software Architecture

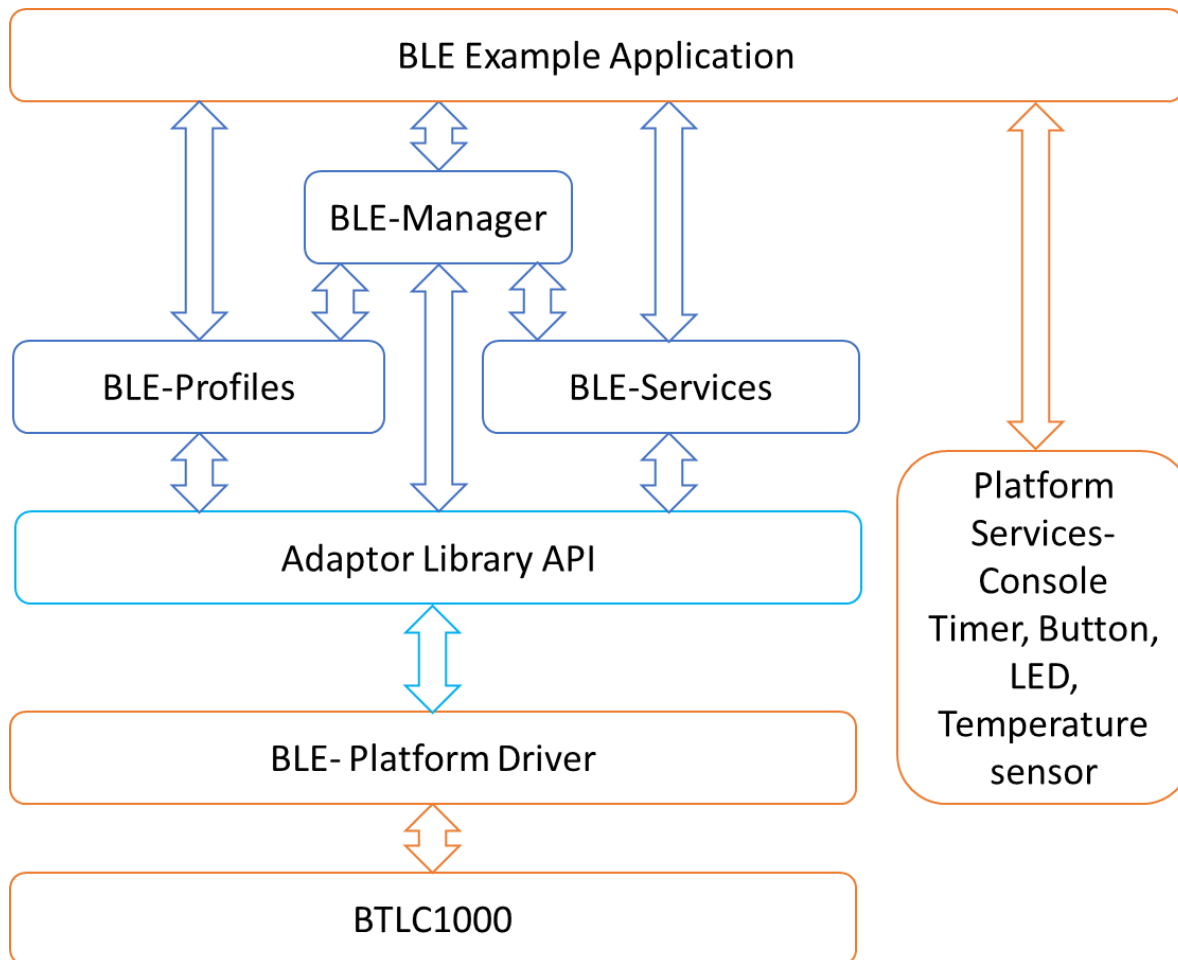


12 Console Logging

For the purpose of debugging, a logging interface had been implemented in the Health Thermometer Application.

The logging interface utilizes the same EDBG port that connects to [supported platform](#). A serial port monitor application (for example TeraTerm) shall be opened and attached to the EDBG COM port.

The screenshot below shows the information about BLE and HTP initialization and advertisement


Figure 12-1. Example HTP App console log – after initialization is completed

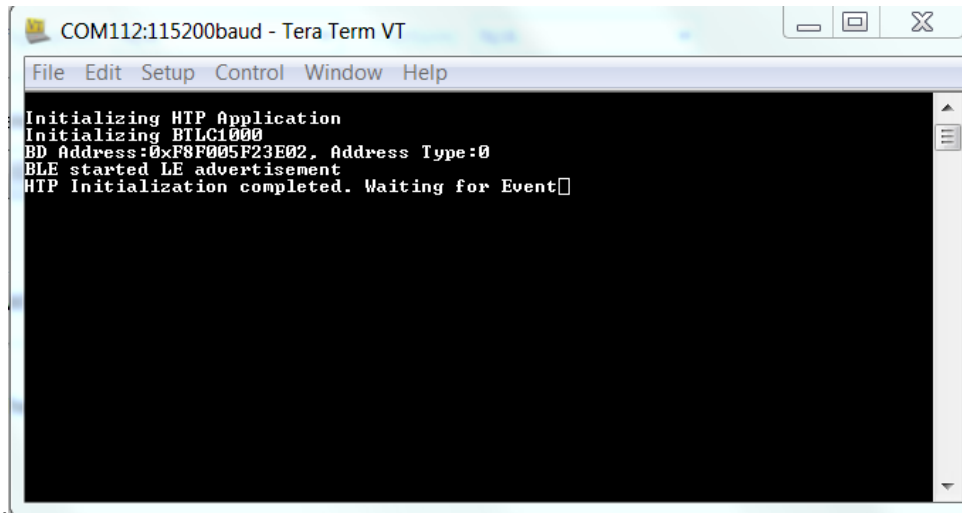

```
COM112:115200baud - Tera Term VT
File Edit Setup Control Window Help
Initializing HTP Application
Initializing BTLC1000
BD Address:0xF8F005F23E02, Address Type:0
BLE started LE advertisement
HTP Initialization completed. Waiting for Event
```

The screenshot below shows the information about connection and temperature notification.

Figure 12-2. Example HTP App console log – Connection, pairing and temperature notification

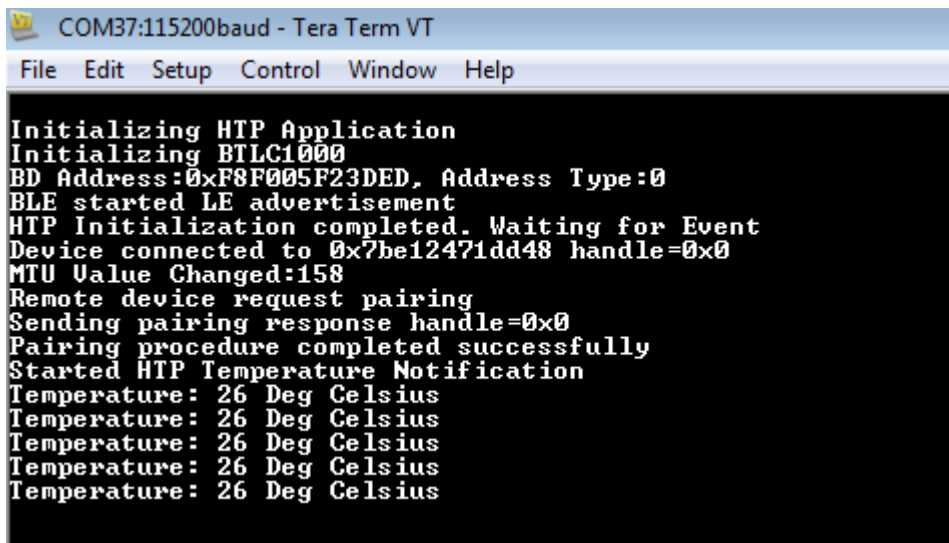

```
COM37:115200baud - Tera Term VT
File Edit Setup Control Window Help
Initializing HTP Application
Initializing BTLC1000
BD Address:0xF8F005F23DED, Address Type:0
BLE started LE advertisement
HTP Initialization completed. Waiting for Event
Device connected to 0x7be12471dd48 handle=0x0
MTU Value Changed:158
Remote device request pairing
Sending pairing response handle=0x0
Pairing procedure completed successfully
Started HTP Temperature Notification
Temperature: 26 Deg Celsius
Temperature: 26 Deg Celsius
Temperature: 26 Deg Celsius
Temperature: 26 Deg Celsius
Temperature: 26 Deg Celsius
```

13 **ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER**

This evaluation board/kit is intended for user's internal development and evaluation purposes only. It is not a finished product and may not comply with technical or legal requirements that are applicable to finished products, including, without limitation, directives or regulations relating to electromagnetic compatibility, recycling (WEE), FCC, CE or UL. Atmel is providing this evaluation board/kit "AS IS" without any warranties or indemnities. The user assumes all responsibility and liability for handling and use of the evaluation board/kit including, without limitation, the responsibility to take any and all appropriate precautions with regard to electrostatic discharge and other technical issues. User indemnifies Atmel from any claim arising from user's handling or use of this evaluation board/kit. Except for the limited purpose of internal development and evaluation as specified above, no license, express or implied, by estoppel or otherwise, to any Atmel intellectual property right is granted hereunder. ATMEL SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RELATING TO USE OF THIS EVALUATION BOARD/KIT.

ATMEL CORPORATION
1600 Technology Drive
San Jose, CA 95110
USA

14 Revision History

Doc Rev.	Date	Comments
42530A	09/2015	Initial document release.



Atmel Corporation 1600 Technology Drive, San Jose, CA 95110 USA T: (+1)(408) 441.0311 F: (+1)(408) 436.4200 | www.atmel.com

© 2015 Atmel Corporation. / Rev.: Atmel-42530A-ATBTLC1000-BluSDK-Health-Thermometer-Profile-HTP-Getting-Started-Guide_UserGuide_092015.

Atmel®, Atmel logo and combinations thereof, Enabling Unlimited Possibilities®, and others are registered trademarks or trademarks of Atmel Corporation in U.S. and other countries. ARM®, ARM Connected® logo, and others are the registered trademarks or trademarks of ARM Ltd. Other terms and product names may be trademarks of others.

DISCLAIMER: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

SAFETY-CRITICAL, MILITARY, AND AUTOMOTIVE APPLICATIONS DISCLAIMER: Atmel products are not designed for and will not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death ("Safety-Critical Applications") without an Atmel officer's specific written consent. Safety-Critical Applications include, without limitation, life support devices and systems, equipment or systems for the operation of nuclear facilities and weapons systems. Atmel products are not designed nor intended for use in military or aerospace applications or environments unless specifically designated by Atmel as military-grade. Atmel products are not designed nor intended for use in automotive applications unless specifically designated by Atmel as automotive-grade.