

## Introduction

This getting started guide describes the setup of Atmel® ATBTLC1000 with a supported platform (see [Table 2-1](#)) bringing-up an example profile supplied as part of BluSDK release. This document explains the bring up of Bluetooth® Proximity Monitor example application that is embedded as part of the software release package.

The Proximity profile defined by the Bluetooth SIG enables proximity monitoring between two devices. The Proximity Monitor (a GATT client) configures the behavior of a peer Proximity Reporter device (GATT server) based on link conditions. The Proximity Monitor configures desired behavior of the peer device through setting Alerts Levels on Link Loss and Path Loss. In addition, it also maintains the connection with the Proximity Reporter and monitors the link quality of the connection based on RSSI reporting from the peer device.

The Proximity Monitor example application supports the following features:

- Device Discovery and Disconnection
- Services and Characteristics Discovery
- Services: Link Loss Service, Immediate Alert Service and TX Power Service
- Setting up Path Loss and Link Loss
- RSSI Sampling

## Table of Contents

---

<b>1</b>	<b>Demo Setup.....</b>	<b>3</b>
<b>2</b>	<b>Supported Hardware Platforms and IDEs .....</b>	<b>3</b>
<b>3</b>	<b>Hardware Setup .....</b>	<b>4</b>
3.1	SAM L21 Xplained Pro Proximity Monitor Setup .....	4
3.2	SAM D21 Xplained Pro Proximity Monitor Setup.....	4
3.3	SAM G55 Xplained Pro Proximity Monitor Setup .....	5
<b>4</b>	<b>Software Setup.....</b>	<b>6</b>
4.1	Installation Steps .....	6
<b>5</b>	<b>Build Procedure .....</b>	<b>6</b>
<b>6</b>	<b>Console Logging .....</b>	<b>9</b>
<b>7</b>	<b>Running the Demo .....</b>	<b>10</b>
<b>8</b>	<b>BluSDK Software Architecture.....</b>	<b>14</b>
<b>9</b>	<b>ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER .....</b>	<b>15</b>
<b>10</b>	<b>Revision History .....</b>	<b>16</b>

## 1 Demo Setup

Figure 1-1. Demo Setup of Proximity Profile on ATBTLC1000



## 2 Supported Hardware Platforms and IDEs

Table 2-1. BluSDK – Supported Hardware and IDEs

Platform	MCU	Supported BLE device	Supported evaluation kits	Supported IDEs
SAM L21 (MCU)	ATSAML21J18B	ATBTLC1000	ATBTLC1000-XSTK (ATSAML21-XPRO-B + ATBTLC1000 XPRO)	Atmel Studio v7.0
SAM L21 (MCU)	ATSAML21J18A	ATBTLC1000	ATSAML21 XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0
SAM D21 (MCU)	ATSAMD21J18A	ATBTLC1000	ATSAMD21-XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0
SAM G55 (MCU)	ATSAMG55J19	ATBTLC1000	ATSAMG55-XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0

## 3 Hardware Setup


### 3.1 SAM L21 Xplained Pro Proximity Monitor Setup

Figure 3-1. ATBTLC1000 Xplained Pro Extension Connected to a SAM L21 Xplained Pro




### 3.2 SAM D21 Xplained Pro Proximity Monitor Setup

Figure 3-2. ATBTLC1000 Xplained Pro Extension Connected to a SAM D21 Xplained Pro

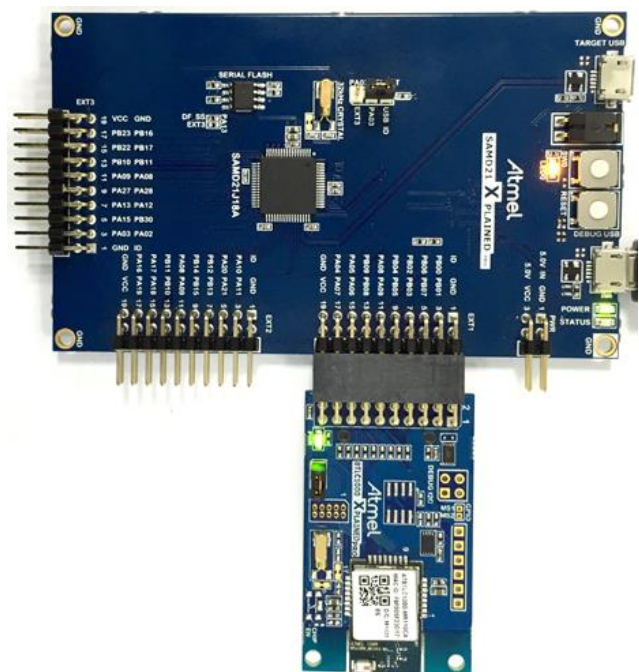

### 3.3 SAM G55 Xplained Pro Proximity Monitor Setup

Figure 3-3. ATBTLC1000 Xplained Pro Extension Connected to a SAM G55 Xplained Pro

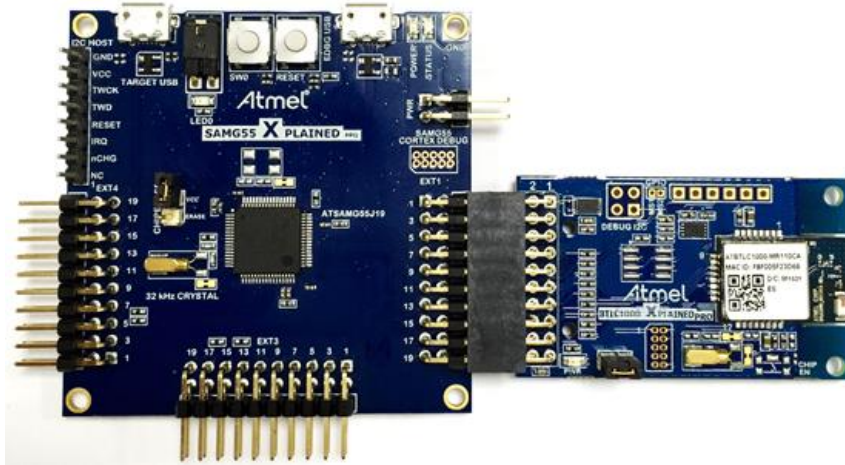

## 4 Software Setup

### 4.1 Installation Steps

1. Atmel Studio installation [**Atmel Studio 7.0 (build 594) Installer – with .NET**]  
<http://www.atmel.com/tools/atmelstudio.aspx>  
(Note: SAM L21 Rev B/SAM D21/SAM G55 part pack is built-in as part of Atmel Studio 7.0)
2. Atmel USB Driver Installer 7.0.712 <http://www.atmel.com/tools/atmelstudio.aspx>.
3. Install the standalone ASF package from  
<http://www.atmel.com/tools/AVRSOFTWAREFRAMEWORK.aspx>.

This package will install the following examples within the Atmel Studio environment.


1. Proximity Monitor Application for SAM D21.
2. Proximity Monitor Application for SAM G55.
3. Proximity Monitor Application for SAM L21.

## 5 Build Procedure

The following procedure is explained for SAM L21 application example. The same procedure is valid for the case of all the other supported platforms as well.


1. Select New Example Project

**Figure 5-1. Creating a New Project**

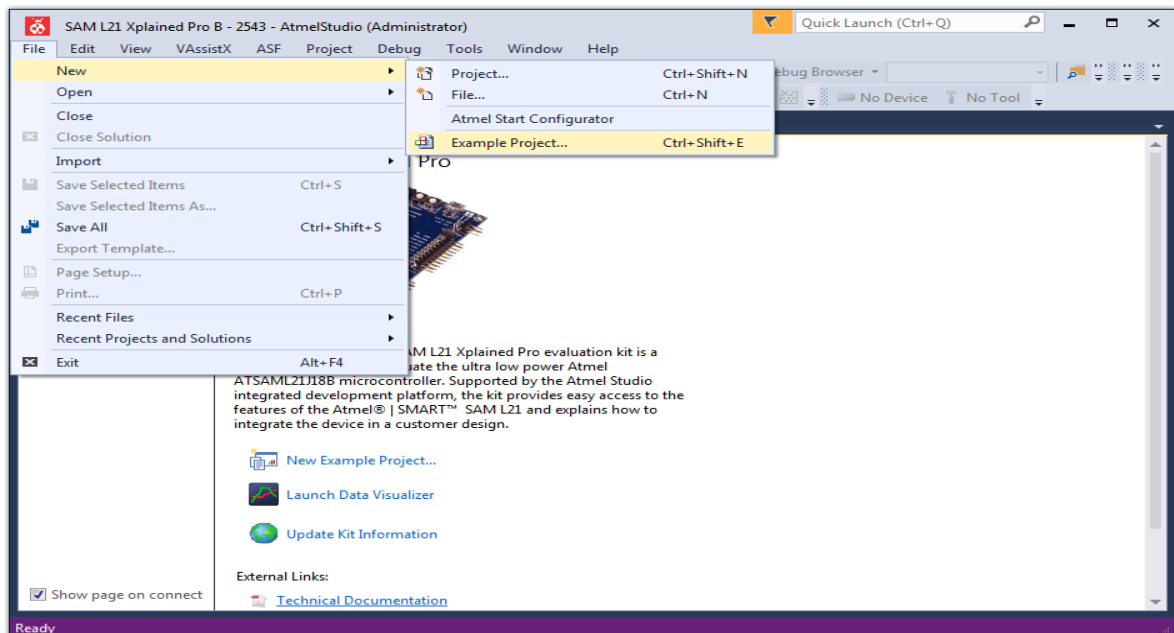

2. Enter "Proximity" in search window and expand Atmel Corp Projects. The location and the name of the project can be selected in the respective fields. Click OK.


**Figure 5-2. Selecting Proximity Monitor Profile Application from Example Projects**

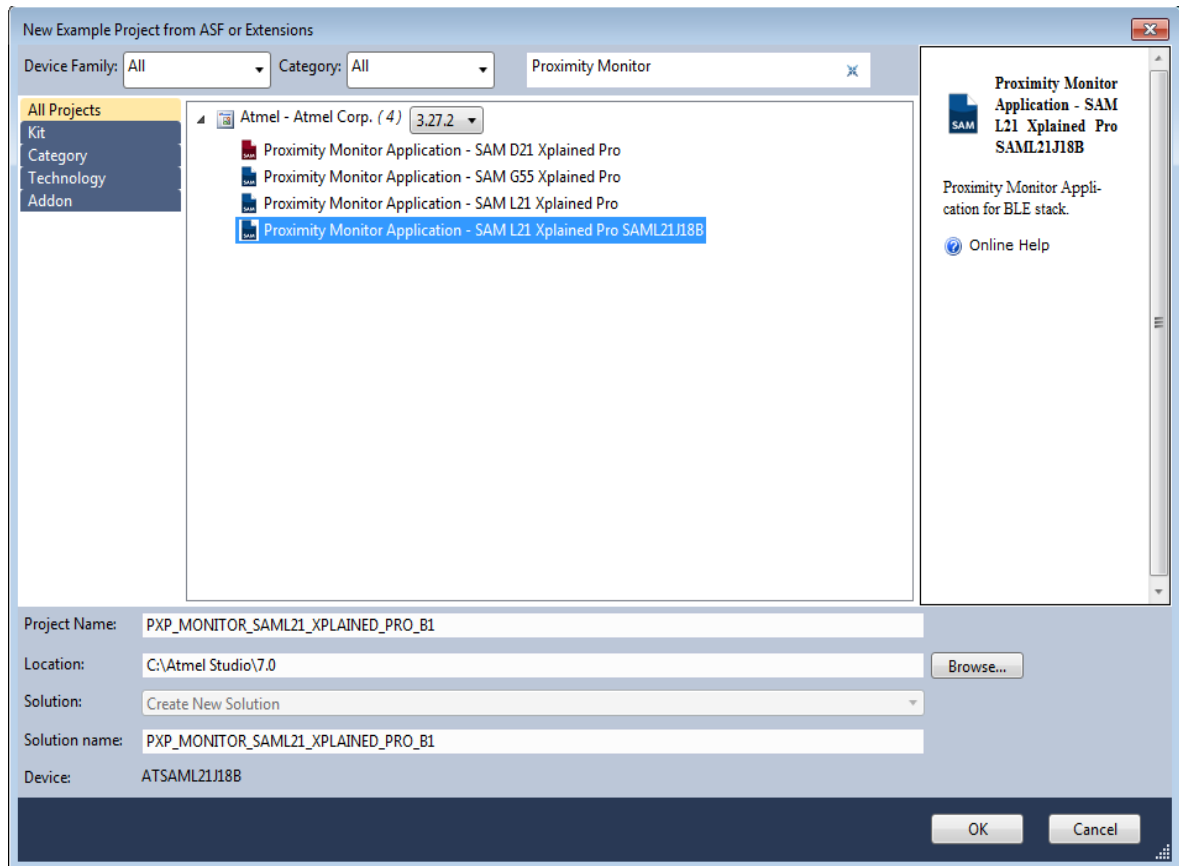

3. Accept the license Agreement. The studio will generate the Proximity Monitor project for SAM L21.


4. Build the solution.

**Figure 5-3. Building the Proximity Monitor Application**

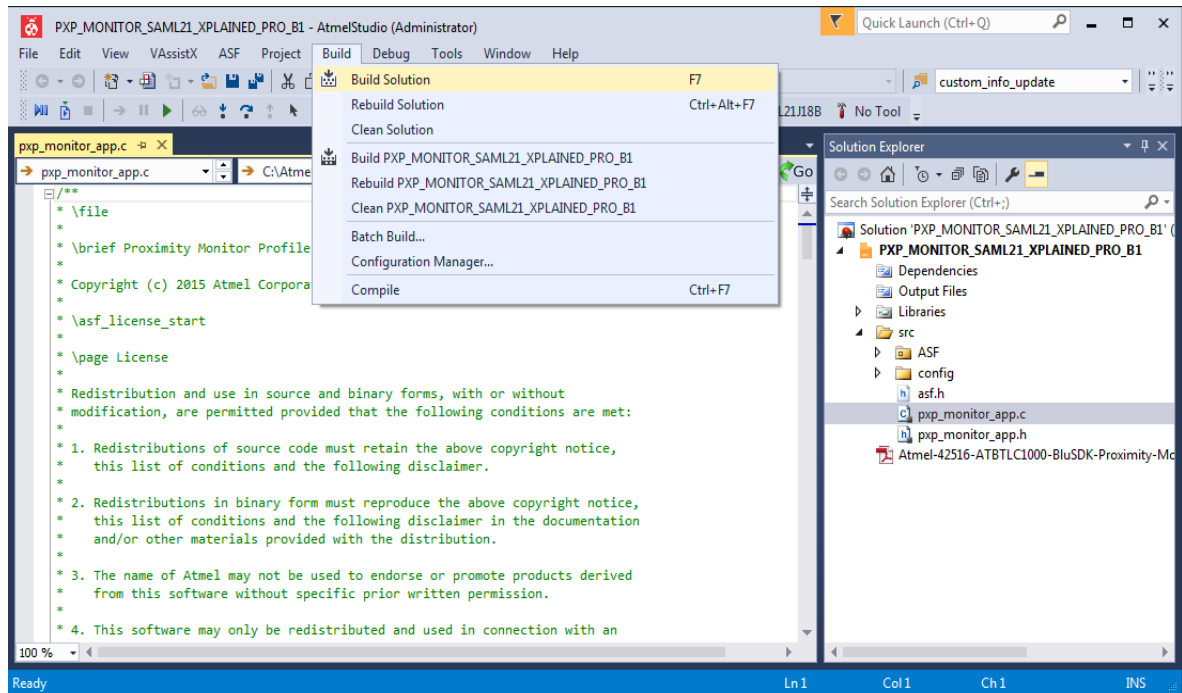

5. Download the application via the USB to the SAM L21 board using Device Programming option available in Tools as mentioned below.


**Figure 5-4. Flashing the Application on Atmel MCU**

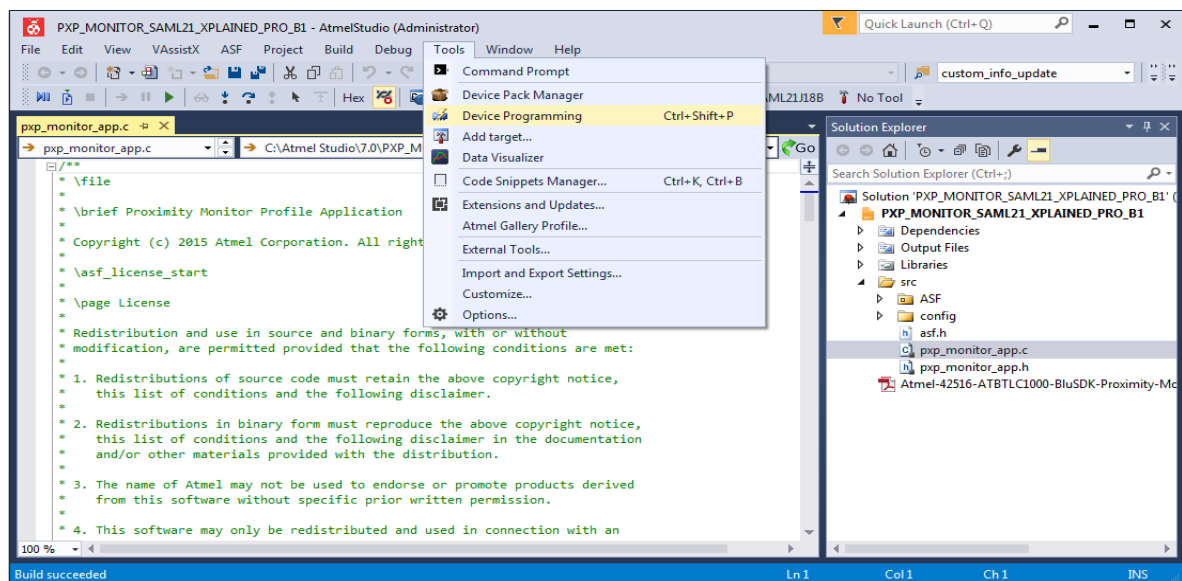



6. Inside device programming, the user has to select the correct configuration for device and finally program the device by clicking on 'Program' button as shown below.

**Figure 5-5. Flash Programming**

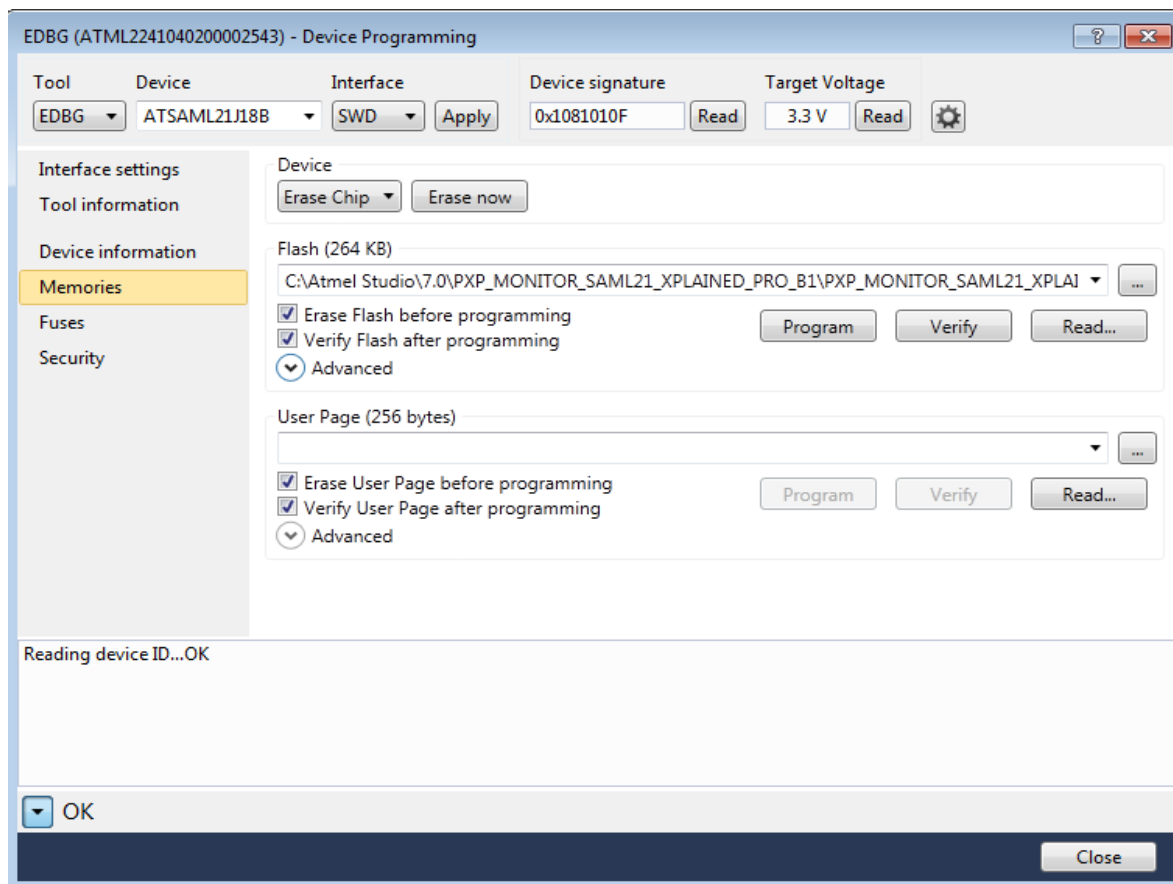

7. Once the application is flashed, it is ready to be function as a Proximity Monitor Device.

## 6 Console Logging


For the purpose of debugging, a logging interface had been implemented in the Proximity Monitor Application.

The logging interface utilizes the same EDBG port that connects to supported platform. A serial port monitor application (for example TeraTerm) shall be opened and attached to the appropriate COM port enumerated by the device on the PC.

## 7 Running the Demo

1. Power on the SAM L21 (see [Figure 3-1](#)) by connecting the USB Cable
2. Open the console using TeraTerm or any serial port monitor application and connect to the corresponding COM port enumerated by the device on the PC. (Settings: Baudrate 115200, Parity None, one Stop bit, one Start bit, no Hardware Handshake)
3. Press the Reset button on the SAM L21 or supported platform board.
4. The device will initialize and start-up – as seen in the console log shown below.

Figure 7-1. Proximity Monitor Device Initialization

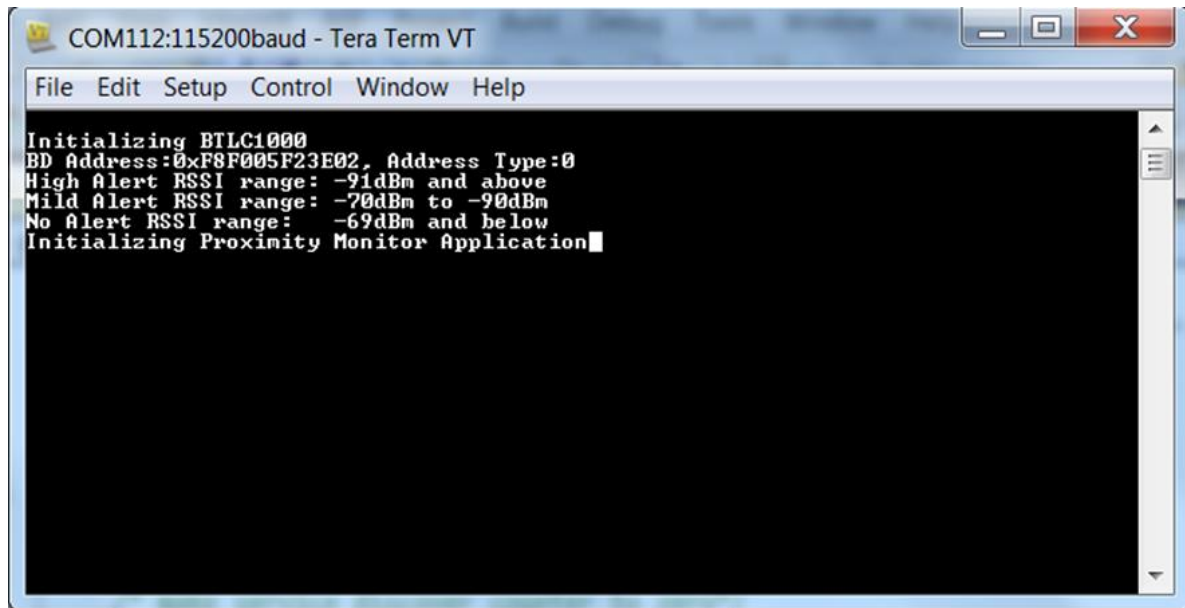


```
COM112:115200baud - Tera Term VT
File Edit Setup Control Window Help

Initializing BTLC1000
BD Address:0xF8F005F23E02, Address Type:0
High Alert RSSI range: -91dBm and above
Mild Alert RSSI range: -70dBm to -90dBm
No Alert RSSI range: -69dBm and below
Initializing Proximity Monitor Application
```

5. Device will then start scanning and will display devices found as shown below.

Figure 7-2. Proximity Monitor – Scanning Devices

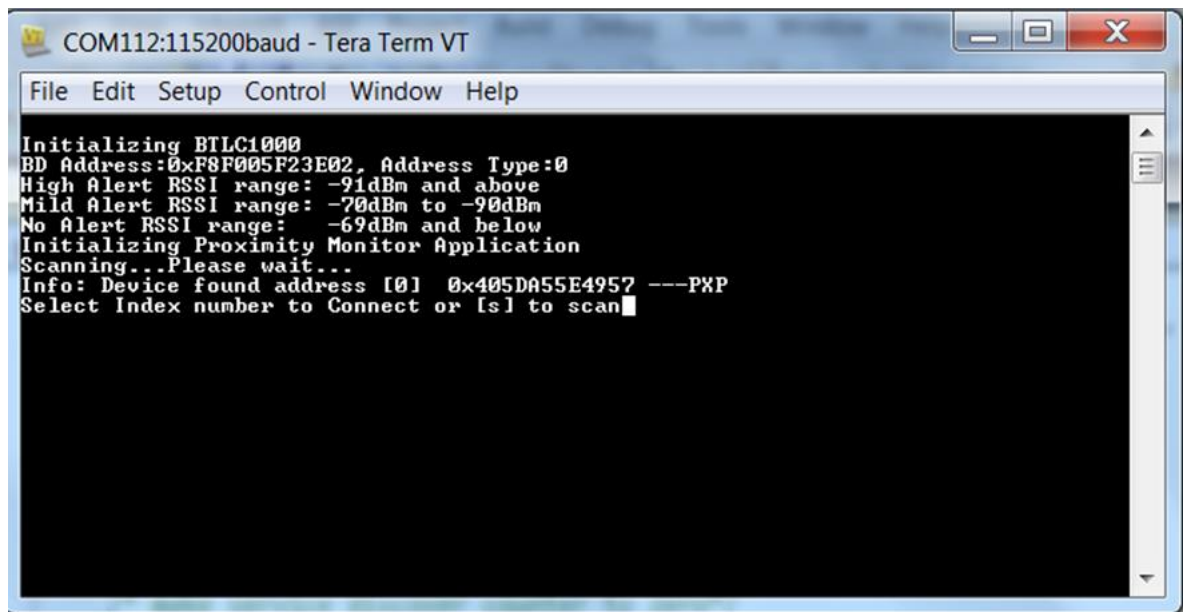


```
COM112:115200baud - Tera Term VT
File Edit Setup Control Window Help

Initializing BTLC1000
BD Address:0xF8F005F23E02, Address Type:0
High Alert RSSI range: -91dBm and above
Mild Alert RSSI range: -70dBm to -90dBm
No Alert RSSI range: -69dBm and below
Initializing Proximity Monitor Application
Scanning...Please wait...
Info: Device found address [0] 0x405DA55E4957 ---PXP
Select Index number to Connect or [s] to scan
```

6. The proximity monitor scans and then displays the list of all BLE devices which are advertising. Proximity Reporter devices (GATT server role) are indicated with tag “ ---PXP ”. Select the appropriate index number for the Proximity Reporter. The Proximity Monitor will then connect to the selected peer device.

**Figure 7-3. Proximity Monitor Connection with a Proximity Reporter**

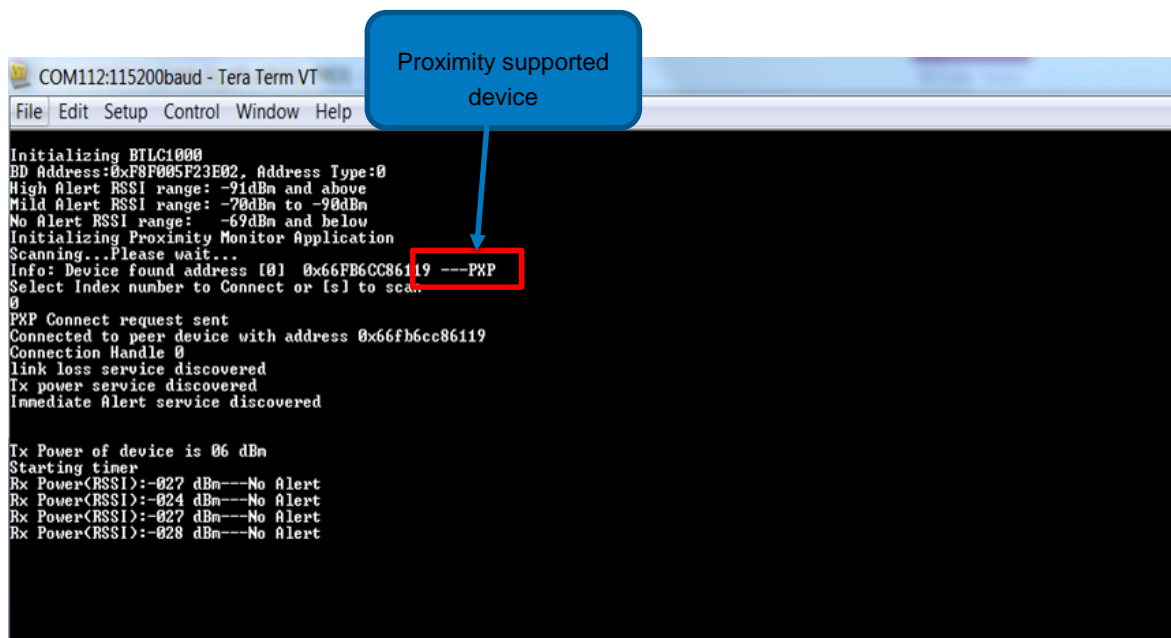

```
COM112:115200baud - Tera Term VT
File Edit Setup Control Window Help

Initializing BTLC1000
BD Address:0xF8F005F23E02, Address Type:0
High Alert RSSI range: -91dBm and above
Mild Alert RSSI range: -70dBm to -90dBm
No Alert RSSI range: -69dBm and below
Initializing Proximity Monitor Application
Scanning...Please wait...
Info: Device found address [0] 0x66FB6CC86119 ---PXP
Select Index number to Connect or [s] to scan.
0
PXP Connect request sent
Connected to peer device with address 0x66fb6cc86119
Connection Handle 0
link loss service discovered
Tx power service discovered
Immediate Alert service discovered

Tx Power of device is 06 dBm
Starting timer
Rx Power(RSSI):-027 dBm---No Alert
Rx Power(RSSI):-024 dBm---No Alert
Rx Power(RSSI):-027 dBm---No Alert
Rx Power(RSSI):-028 dBm---No Alert
```

7. Once the connection is established the Proximity Monitor will set link loss alert value to High Alert and start monitoring the RSSI value of the reporter device. The Proximity Monitor implements path loss monitoring in the case where a Proximity Reporter supports also 'Immediate Alert Service' and 'Tx-Power' service. The Atmel Proximity Reporter application referred in this example supports both these optional services.

The default alert settings are as follows:

High Alert RSSI set to -91dBm and above, alert type “HIGH ALERT”, LED will turn on

Mild Alert RSSI set to -70dBm to -90dBm, alert type “MILD ALERT”, LED will Toggling

No Alert RSSI set to -69dBm and below, alert type “No Alert”, LED will be turned off.

If Proximity Reporter device moves out of the pre-set proximity range the corresponding alert value will be set and the alert notification will be displayed on the console as shown below.

Figure 7-4. LED Indicator used for Path Loss/Alerts on SAM L21s

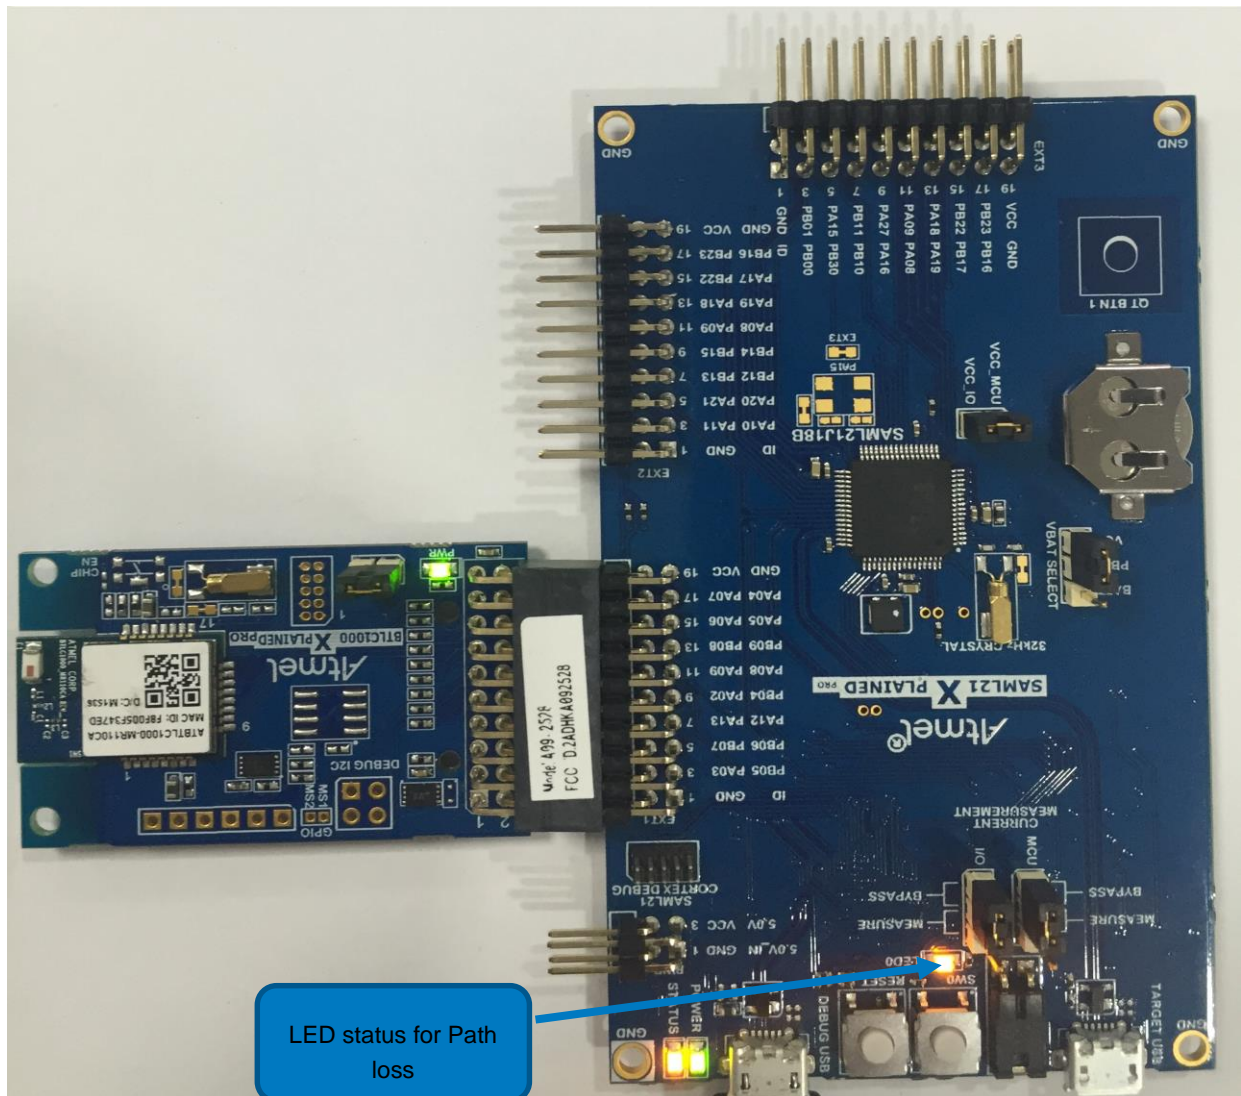


Figure 7-5. Proximity Monitor Setting Alert Levels

```
COM112:115200baud - Tera Term VT
File Edit Setup Control Window Help

Initializing BTLC1000
BD Address:0xP8F005F23E02, Address Type:0
High Alert RSSI range: -91dBm and above
Mild Alert RSSI range: -70dBm to -90dBm
No Alert RSSI range: -69dBm and below
Initializing Proximity Monitor Application
Scanning...Please wait...
Info: Device found address [0] 0x67915acd291e ---PKP
Info: Device found address [1] 0xP8F005F23E07
Select Index number to Connect or [s] to scan
0
PKP Connect request sent
Connected to peer device with address 0x67915acd291e
Connection Handle 0
Link loss service discovered
Tx power service discovered
Immediate Alert service discovered

Tx Power of device is 06 dBm
Starting timer
Rx Power(RSSI):-077 dBm---Mild Alert!

Rx Power(RSSI):-067 dBm---No Alert

Rx Power(RSSI):-075 dBm---Mild Alert!

Rx Power(RSSI):-080 dBm---Mild Alert!
Rx Power(RSSI):-072 dBm---Mild Alert!
Rx Power(RSSI):-080 dBm---Mild Alert!
Rx Power(RSSI):-072 dBm---Mild Alert!
Rx Power(RSSI):-075 dBm---Mild Alert!
Rx Power(RSSI):-066 dBm---No Alert

Rx Power(RSSI):-078 dBm---Mild Alert!

Rx Power(RSSI):-076 dBm---Mild Alert!
Rx Power(RSSI):-072 dBm---Mild Alert!
Rx Power(RSSI):-066 dBm---No Alert

Rx Power(RSSI):-061 dBm---No Alert
Rx Power(RSSI):-068 dBm---No Alert
Rx Power(RSSI):-053 dBm---No Alert
Rx Power(RSSI):-071 dBm---Mild Alert!


Rx Power(RSSI):-074 dBm---Mild Alert!
Rx Power(RSSI):-060 dBm---No Alert
```

Alert Status for Path loss

## 8 BluSDK Software Architecture

The following diagram illustrates the various layers in the BluSDK Architecture. The External host can be supported platform. The application in this example is Proximity Monitor Profile.

Figure 8-1. BluSDK Software Architecture

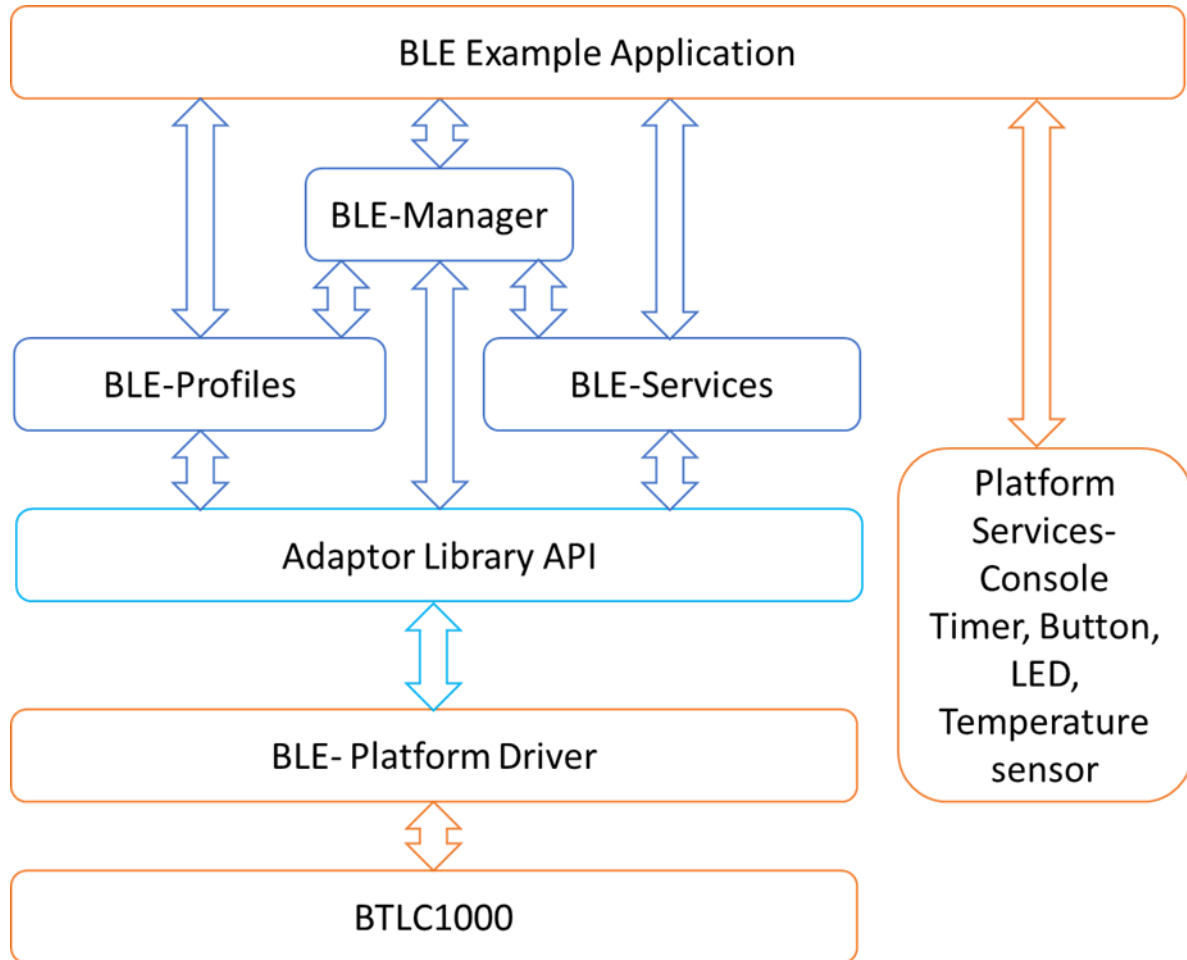

## 9 ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER

This evaluation board/kit is intended for user's internal development and evaluation purposes only. It is not a finished product and may not comply with technical or legal requirements that are applicable to finished products, including, without limitation, directives or regulations relating to electromagnetic compatibility, recycling (WEEE), FCC, CE or UL. Atmel is providing this evaluation board/kit "AS IS" without any warranties or indemnities. The user assumes all responsibility and liability for handling and use of the evaluation board/kit including, without limitation, the responsibility to take any and all appropriate precautions with regard to electrostatic discharge and other technical issues. User indemnifies Atmel from any claim arising from user's handling or use of this evaluation board/kit. Except for the limited purpose of internal development and evaluation as specified above, no license, express or implied, by estoppel or otherwise, to any Atmel intellectual property right is granted hereunder. ATMEL SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RELATING TO USE OF THIS EVALUATION BOARD/KIT.

ATMEL CORPORATION  
1600 Technology Drive  
San Jose, CA 95110  
USA

## 10 Revision History

Doc Rev.	Date	Comments
42516B	11/2015	Figure 3-1 is updated. The screenshots in Chapter 4 are updated.
42516A	09/2015	Initial document release.





**Atmel Corporation** 1600 Technology Drive, San Jose, CA 95110 USA T: (+1)(408) 441.0311 F: (+1)(408) 436.4200 | [www.atmel.com](http://www.atmel.com)

© 2015 Atmel Corporation. / Rev.: Atmel-42516B-ATBTLC1000-BluSDK-Proximity-Monitor-Getting-Started-Guide\_UserGuide\_112015.

Atmel®, Atmel logo and combinations thereof, Enabling Unlimited Possibilities®, and others are registered trademarks or trademarks of Atmel Corporation in U.S. and other countries. ARM®, ARM Connected® logo, and others are the registered trademarks or trademarks of ARM Ltd. Other terms and product names may be trademarks of others.

**DISCLAIMER:** The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

**SAFETY-CRITICAL, MILITARY, AND AUTOMOTIVE APPLICATIONS DISCLAIMER:** Atmel products are not designed for and will not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death ("Safety-Critical Applications") without an Atmel officer's specific written consent. Safety-Critical Applications include, without limitation, life support devices and systems, equipment or systems for the operation of nuclear facilities and weapons systems. Atmel products are not designed nor intended for use in military or aerospace applications or environments unless specifically designated by Atmel as military-grade. Atmel products are not designed nor intended for use in automotive applications unless specifically designated by Atmel as automotive-grade.