

## Introduction

This getting started guide describes the setup of Atmel® ATBTLC1000 with a supported platform (see [Table 2-1](#)) bringing up an example profile supplied as part of the BluSDK release. This document explains bring up of Bluetooth® Multi-Role/Multi-Connect example application that is embedded as part of the software release package.

The Multi-Role application demonstrates ATBTLC1000 as both GAP Central and GAP Peripheral at the same time. The Multi-Role application will initially scan (GAP Central) for the devices and initiate a connection to the peripheral device which is advertising using connectable advertisement packets. After the link establishment, ATBTLC1000 will be exchanging the data as a GAP Central. Then the Multi-Role application will start advertising using connectable advertisement packets as a GAP Peripheral and gets connected to the remote device, which has sent a connection request and exchanges the data on the new link established.

In the Multi-Role application the GAP Central is the Proximity Monitor (GATT Client in Proximity Profile) and GAP Peripheral is Battery Application (GATT Server containing Battery Service). As a GAP Central ATBTLC1000 will be scanning for the devices and connects to the proximity reporter to perform the link loss and path loss. As a GAP peripheral ATBTLC1000 will advertise with Battery Service UUID in the advertisement data and gets connected with remote GAP Central to send the changing battery level.


## Table of Contents

---

<b>1</b>	<b>Demo Setup.....</b>	<b>3</b>
<b>2</b>	<b>Supported Hardware Platforms and IDEs .....</b>	<b>3</b>
<b>3</b>	<b>Hardware Setup .....</b>	<b>4</b>
3.1	SAM L21 Xplained Pro Multi-Role Application Setup .....	4
3.2	SAM D21 Xplained Pro Multi-Role Application Setup.....	4
3.3	SAM G55 Xplained Pro Multi-Role Application Setup .....	5
<b>4</b>	<b>Software Setup.....</b>	<b>6</b>
4.1	Installation Steps .....	6
<b>5</b>	<b>Build Procedure .....</b>	<b>6</b>
<b>6</b>	<b>Console Logging .....</b>	<b>9</b>
<b>7</b>	<b>Running the demo .....</b>	<b>10</b>
<b>8</b>	<b>BluSDK Software Architecture.....</b>	<b>15</b>
<b>9</b>	<b>ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER .....</b>	<b>16</b>
<b>10</b>	<b>Revision History .....</b>	<b>17</b>

## 1 Demo Setup

Figure 1-1. Demo Setup of Multi Role Application on ATBTLC1000

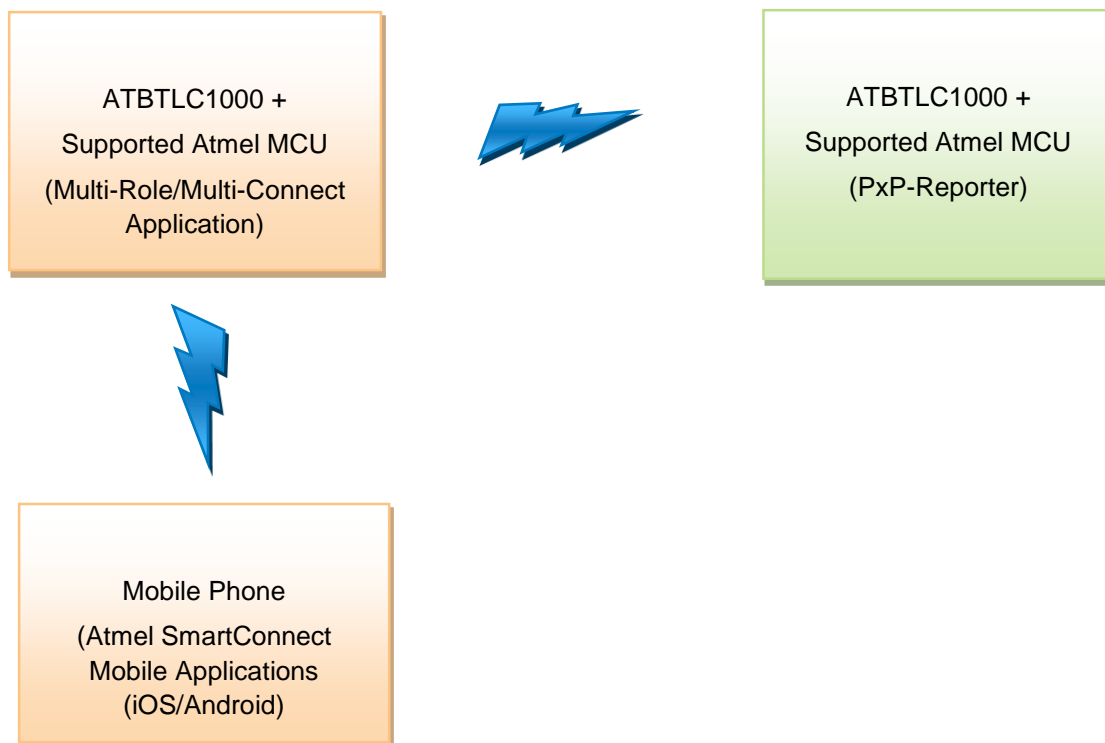

## 2 Supported Hardware Platforms and IDEs

Table 2-1. BluSDK – Supported Hardware and IDEs

Platform	MCU	Supported BLE device	Supported evaluation kits	Supported IDEs
SAM L21 (MCU)	ATSAML21J18B	ATBTLC1000	ATBTLC1000-XSTK (ATSAML21-XPRO-B + ATBTLC1000 XPRO)	Atmel Studio v7.0
SAM L21 (MCU)	ATSAML21J18A	ATBTLC1000	ATSAML21 XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0
SAM D21 (MCU)	ATSAMD21J18A	ATBTLC1000	ATSAMD21-XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0
SAM G55 (MCU)	ATSAMG55J19	ATBTLC1000	ATSAMG55-XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0

## 3 Hardware Setup

### 3.1 SAM L21 Xplained Pro Multi-Role Application Setup

Figure 3-1. ATBTLC1000 Xplained Pro Extension Connected to a SAM L21 Xplained Pro




### 3.2 SAM D21 Xplained Pro Multi-Role Application Setup

Figure 3-2. ATBTLC1000 Xplained Pro Extension Connected to a SAM D21 Xplained Pro



### 3.3 SAM G55 Xplained Pro Multi-Role Application Setup

Figure 3-3. ATBTLC1000 Xplained Pro Extension Connected to a SAM G55 Xplained Pro

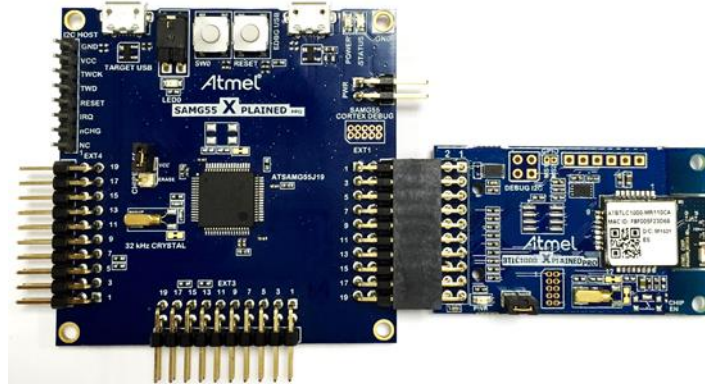

## 4 Software Setup

### 4.1 Installation Steps

1. Atmel Studio installation [**Atmel Studio 7.0 (build 594) Installer**]  
<http://www.atmel.com/tools/atmelstudio.aspx>
2. Install the standalone ASF package from  
<http://www.atmel.com/tools/AVRSOFTWAREFRAMEWORK.aspx>.

This package will install the following examples within the Atmel Studio environment.


1. Multi Role Application for SAM D21.
2. Multi Role Application for SAM G55.
3. Multi Role Application for SAM L21.

## 5 Build Procedure

The following procedure is explained for the SAM L21 application example. The same procedure is valid for the case of all the other supported platforms as well.


1. Select New Example Project.

**Figure 5-1. Creating a New Project**

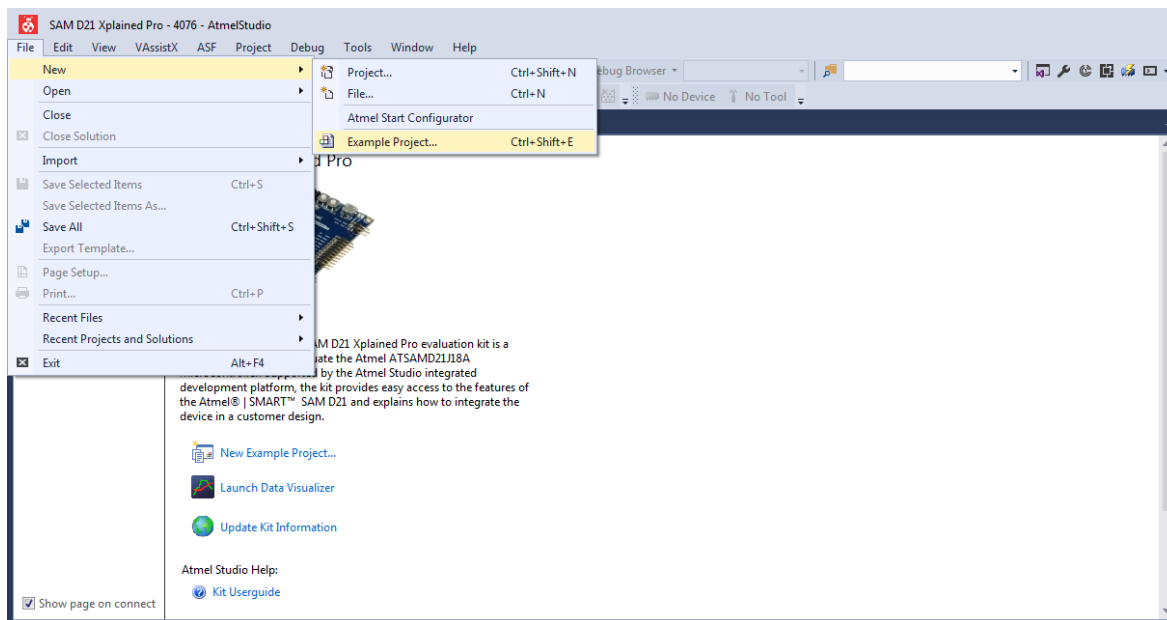

2. Enter "Multi-Role/Multi-Connect" in search window and expand Atmel Corp Projects. The location and the name of the project can be selected in the respective fields. Click OK.


**Figure 5-2. Selecting Multi-Role/Multi-Connect Profile Application from Example Projects**

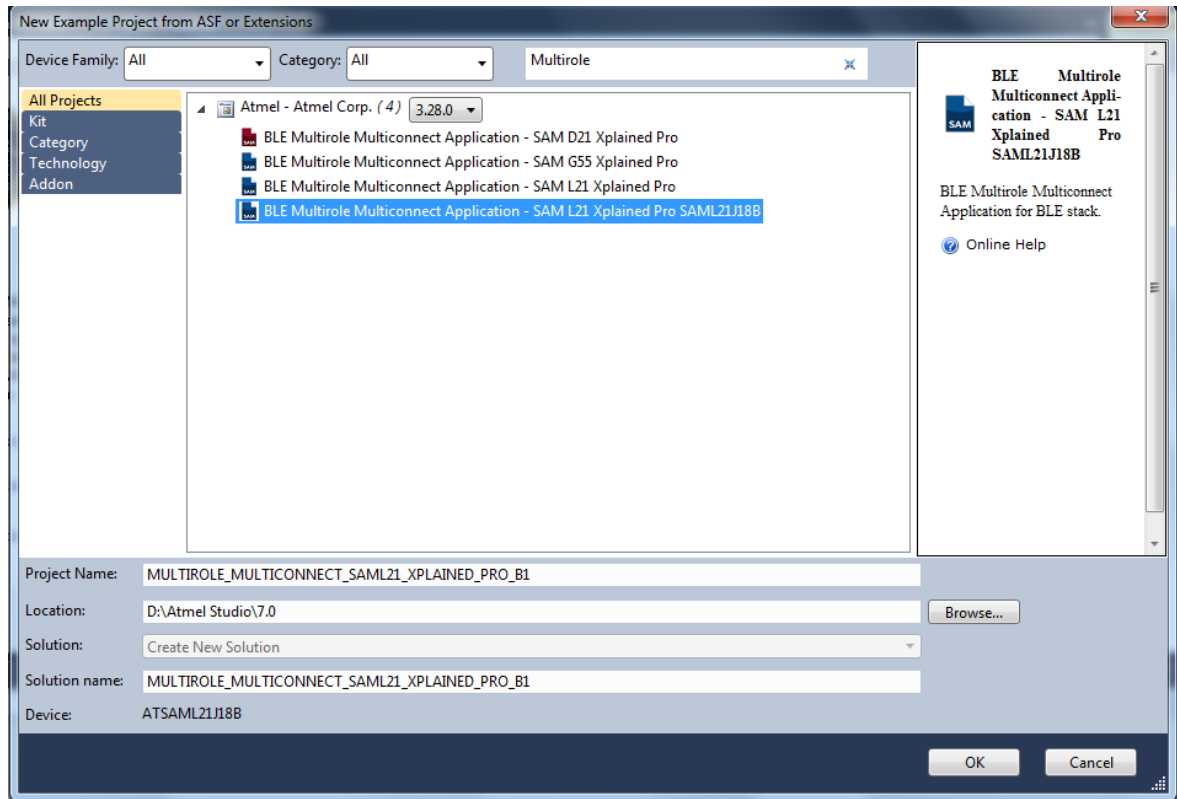

3. Accept the license agreement. The studio will generate the Multi-Role Multi-Connect project for SAM L21.


4. Build the solution.

**Figure 5-3. Building the Multi-Role/Multi-Connect Application**

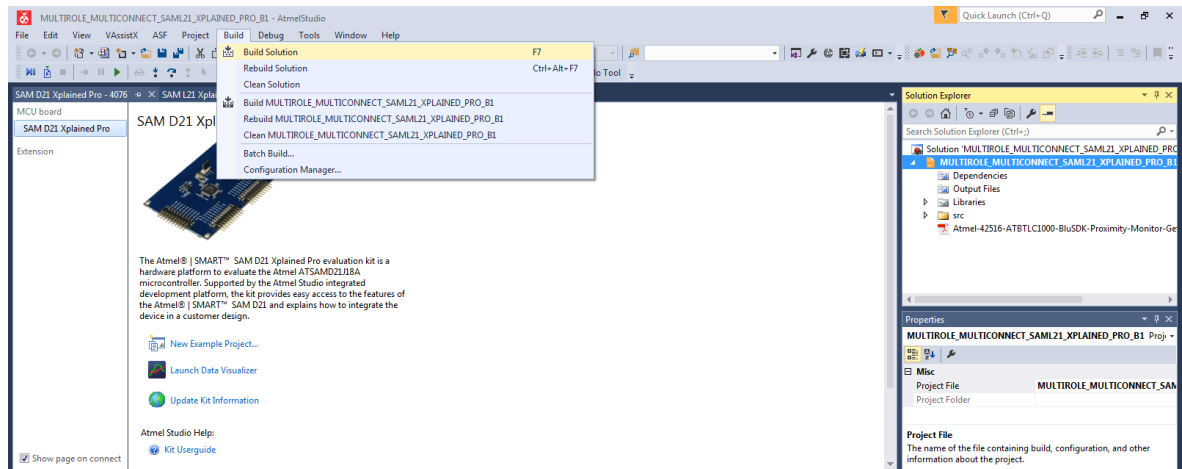

5. Download the application via the USB to the SAM L21 board using Device Programming option available in Tools as mentioned below.


**Figure 5-4. Flashing the Application on Atmel MCU**

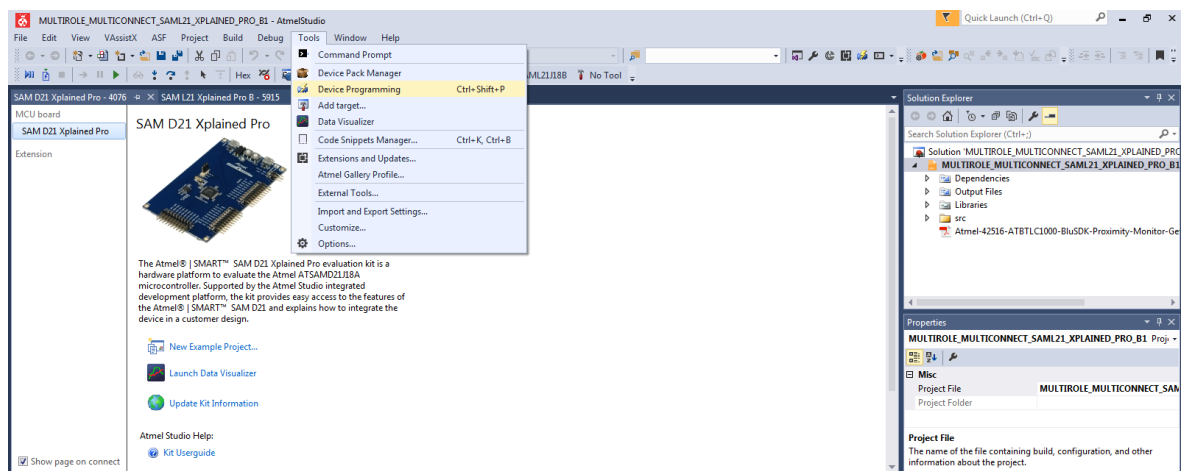



6. Inside device programming, the user has to select the correct configuration for device and finally program the device by clicking on 'Program' button as shown below.

**Figure 5-5. Flash Programming**

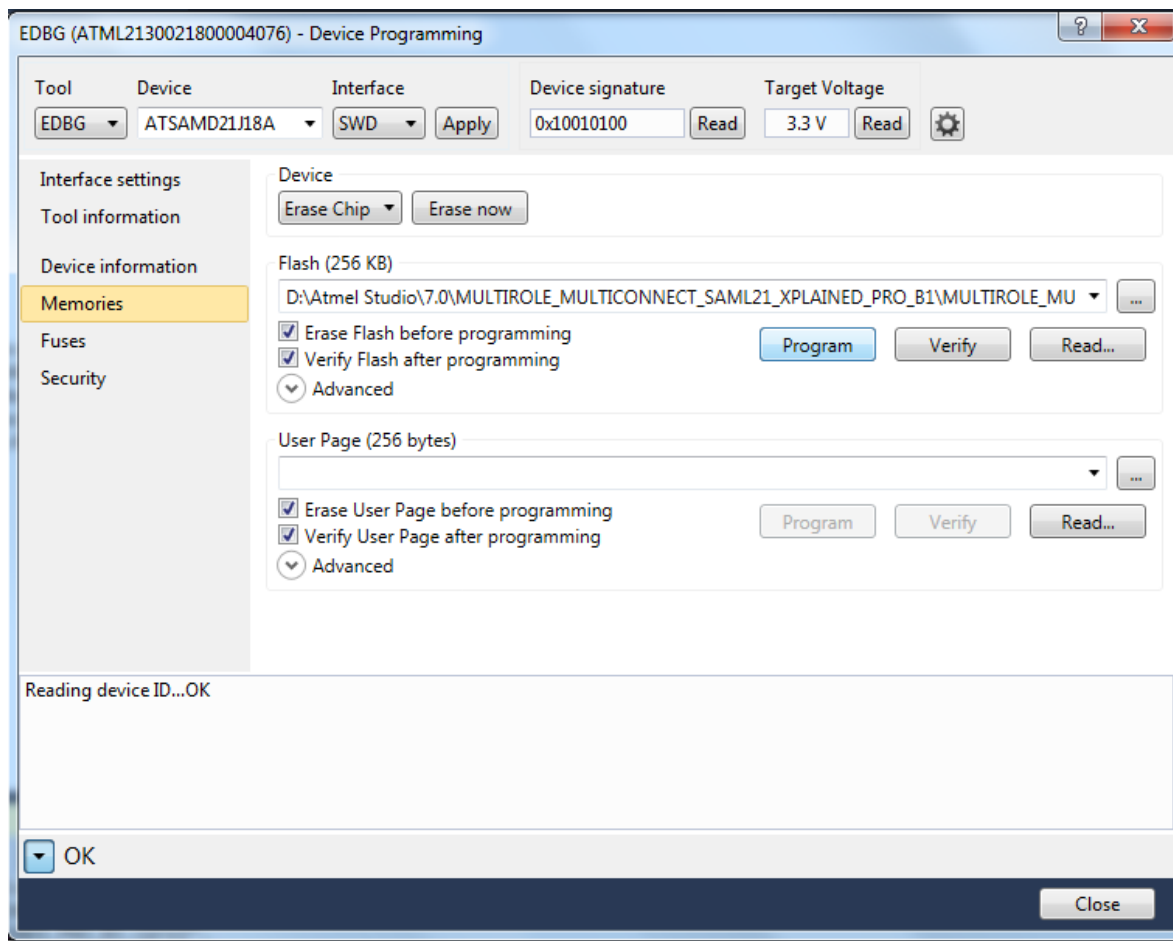

7. Once the application is flashed, it is ready to be function as a Multi Role Device.


## 6 Console Logging

For the purpose of debugging, a logging interface had been implemented in the Multi-Role Application. The logging interface utilizes the same EDBG port that connects to supported platform. A serial port monitor application (for example TeraTerm) shall be opened and attached to the appropriate COM port enumerated by the device on the PC.

## 7 Running the demo

1. Power on the SAM L21 (see [Figure 3-1](#)) by connecting the USB Cable.
2. Open the console using TeraTerm or any serial port monitor application and connect to the corresponding COM port enumerated by the device on the PC. (Settings: Baudrate 115200, Parity None, 1 Stop bit, 1 Start bit, No Hardware Handshake.)
3. Press the Reset button on the SAM L21 or supported platform board.
4. The device will initialize and start-up – as seen in the console log shown below.

**Figure 7-1. Multi-Role/Multi-Connect Application Initialization**

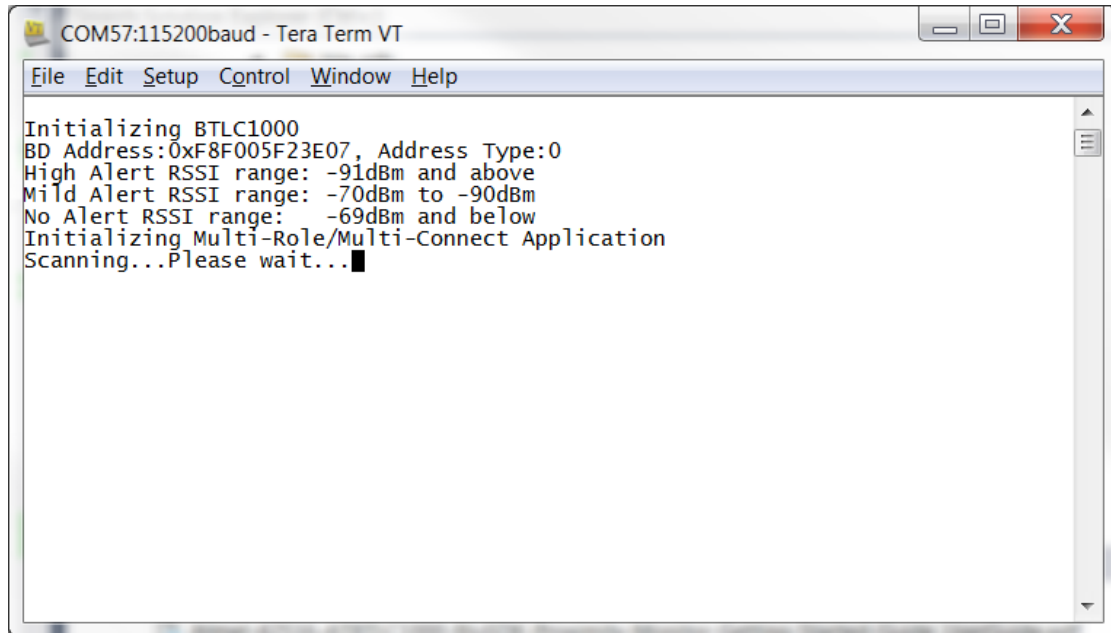


A screenshot of a TeraTerm window titled "COM57:115200baud - Tera Term VT". The window has a menu bar with "File", "Edit", "Setup", "Control", "Window", and "Help". The text area displays the following log:

```
Initializing BTLC1000
BD Address:0xF8F005F23E07, Address Type:0
High Alert RSSI range: -91dBm and above
Mild Alert RSSI range: -70dBm to -90dBm
No Alert RSSI range: -69dBm and below
Initializing Multi-Role/Multi-Connect Application
Scanning...Please wait...█
```

5. Device will then start scanning and will display devices found as shown below.

**Figure 7-2. Multi-Role/Multi-Connect Application – Scanning Devices**

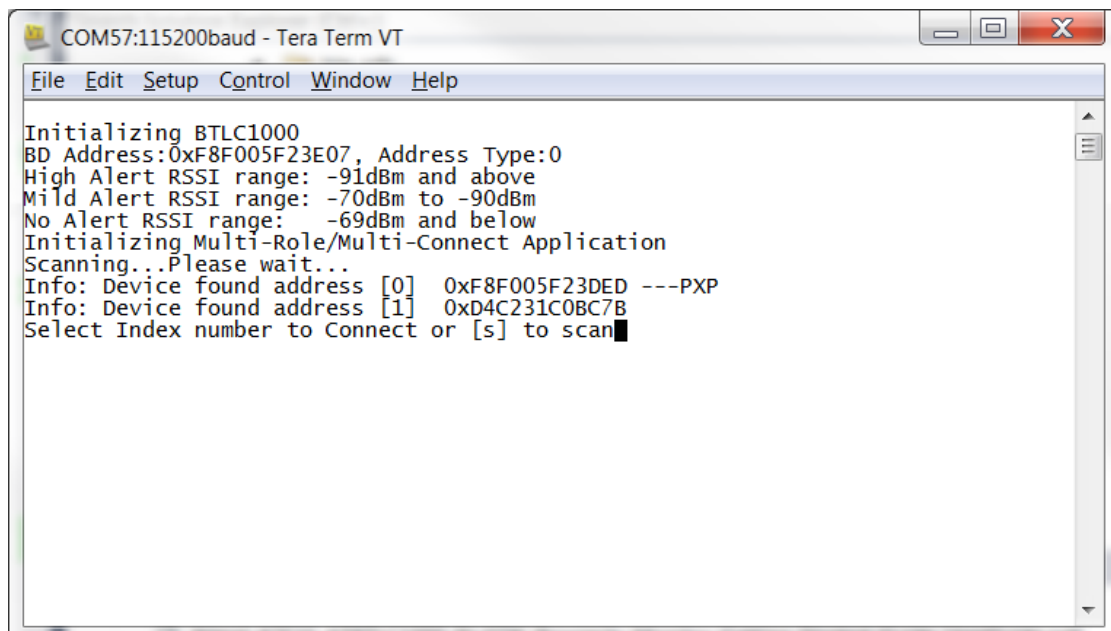


A screenshot of a TeraTerm window titled "COM57:115200baud - Tera Term VT". The window has a menu bar with "File", "Edit", "Setup", "Control", "Window", and "Help". The text area displays the following log:

```
Initializing BTLC1000
BD Address:0xF8F005F23E07, Address Type:0
High Alert RSSI range: -91dBm and above
Mild Alert RSSI range: -70dBm to -90dBm
No Alert RSSI range: -69dBm and below
Initializing Multi-Role/Multi-Connect Application
Scanning...Please wait...
Info: Device found address [0] 0xF8F005F23DED ---PXP
Info: Device found address [1] 0xD4C231C0BC7B
Select Index number to Connect or [s] to scan█
```

6. The GAP Central (Proximity Monitor) scans and then displays the list of all BLE devices which are advertising. Proximity Reporter devices (GATT server role) are indicated with tag “---PXP”. Select the appropriate index number for the Proximity Reporter. The GAP Central (Proximity Monitor) will then connect to the selected peer device.

**Figure 7-3. GAP Central (Proximity Monitor) Connection with a GAP Peripheral (Proximity Reporter)**

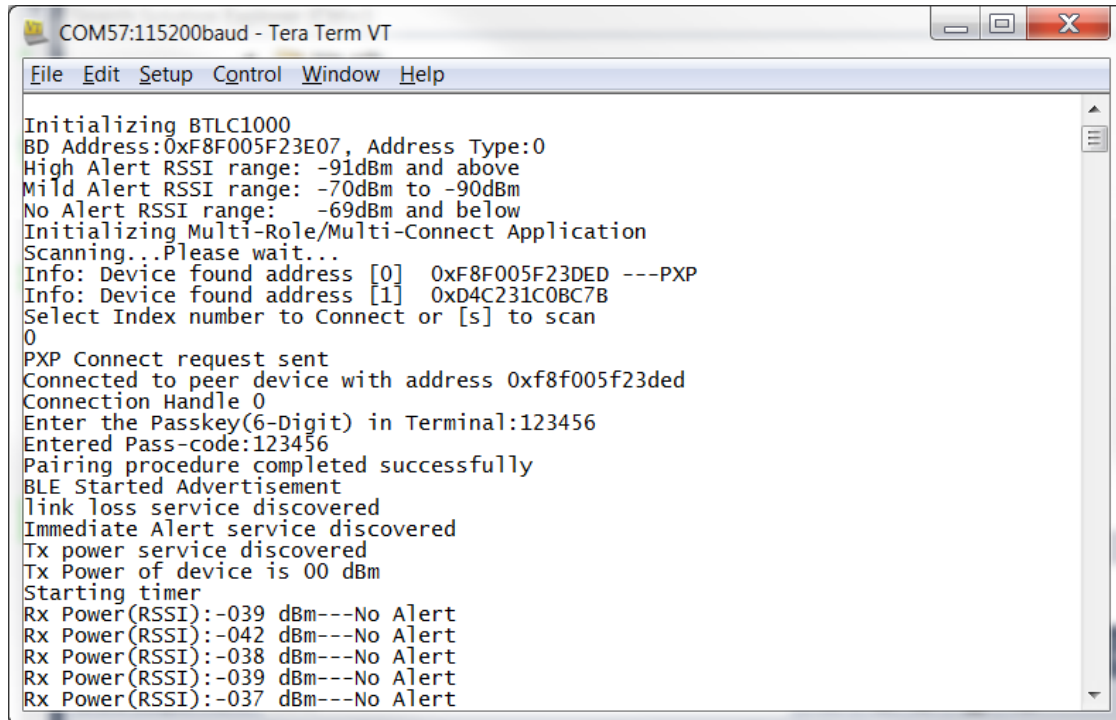


```
COM57:115200baud - Tera Term VT
File Edit Setup Control Window Help

Initializing BTLC1000
BD Address:0xF8F005F23E07, Address Type:0
High Alert RSSI range: -91dBm and above
Mild Alert RSSI range: -70dBm to -90dBm
No Alert RSSI range: -69dBm and below
Initializing Multi-Role/Multi-Connect Application
Scanning...Please wait...
Info: Device found address [0] 0xF8F005F23DED ---PXP
Info: Device found address [1] 0xD4C231C0BC7B
Select Index number to Connect or [s] to scan
0
PXP Connect request sent
Connected to peer device with address 0xf8f005f23ded
Connection Handle 0
Enter the Passkey(6-Digit) in Terminal:123456
Entered Pass-code:123456
Pairing procedure completed successfully
BLE Started Advertisement
link loss service discovered
Immediate Alert service discovered
Tx power service discovered
Tx Power of device is 00 dBm
Starting timer
Rx Power(RSSI):-039 dBm---No Alert
Rx Power(RSSI):-042 dBm---No Alert
Rx Power(RSSI):-038 dBm---No Alert
Rx Power(RSSI):-039 dBm---No Alert
Rx Power(RSSI):-037 dBm---No Alert
```


7. ATBTLC1000 as a GAP Central pairs with the connected peripheral. Then ATBTLC1000 acts as a GAP Peripheral by advertising with Battery Service UUID in the advertisement data. Now ATBTLC100 will send alert levels as a GAP Central and also starts advertising with Connectable advertisement packets.
8. Enable Bluetooth® from the Settings page on a BLE compatible Android device or iPhone®. Use the Atmel SmartConnect application to scan for peripheral devices. A device with the name ‘ATMEL-BAS’ will appear in the list of scanned devices.

**Figure 7-4. Atmel-BLE Device Discovered by Atmel SmartConnect Application**

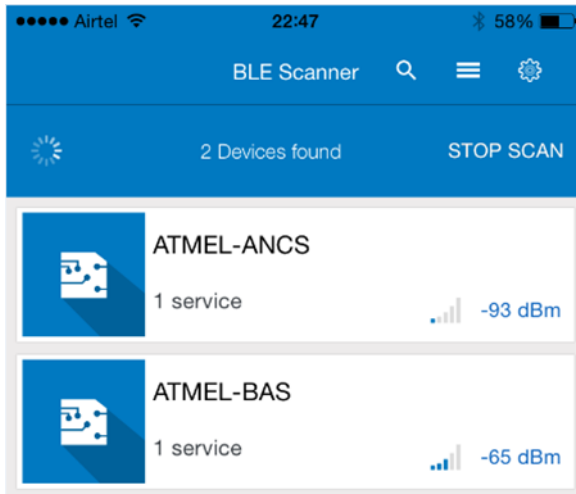


9. Click on the “ATMEL-BAS” device. A pop-up will appear requesting pass-key. Enter “123456” and click on ‘Pair’.

**Figure 7-5. Pairing Pop-up Screen**

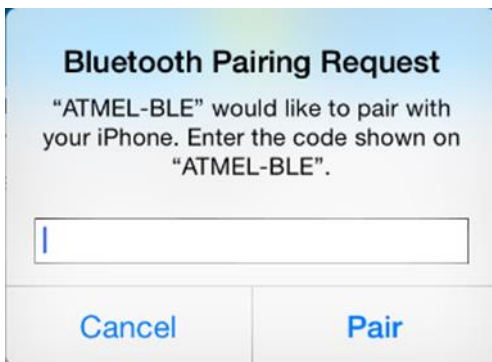


10. Once paired, the application displays the battery service as shown in [Figure 7-6](#).

**Figure 7-6. Display of Battery Service**

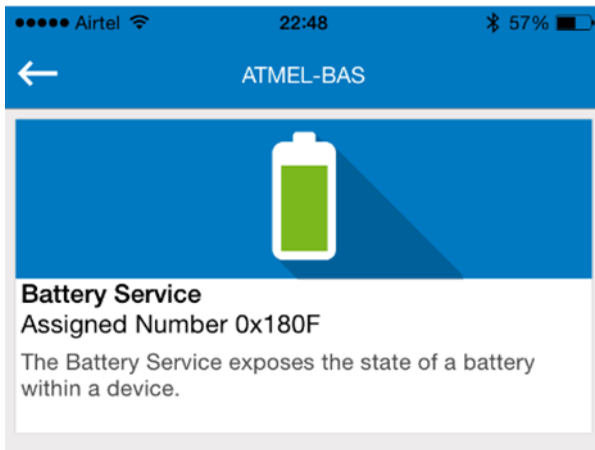


11. Once the “Battery Service” is clicked the user gets notifications for battery level characteristic. The user can stop receiving the notifications by disabling notifications as shown in [Figure 7-7](#).

**Figure 7-7. Battery Level Characteristic Notification Options**

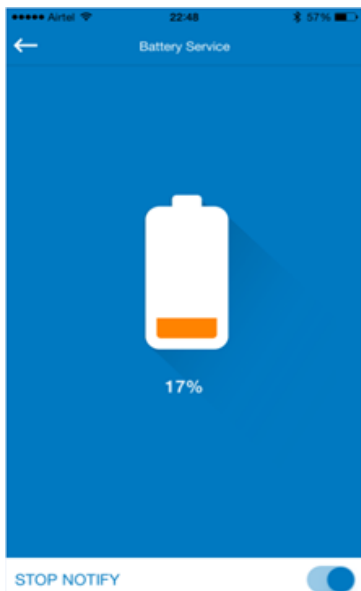

12. ATBTLC1000 will now transfer the data on the second established link with the mobile application.

**Figure 7-8. GAP Peripheral (ATBTLC1000) Connected to GAP Central(Mobile) and Transferring the Data**

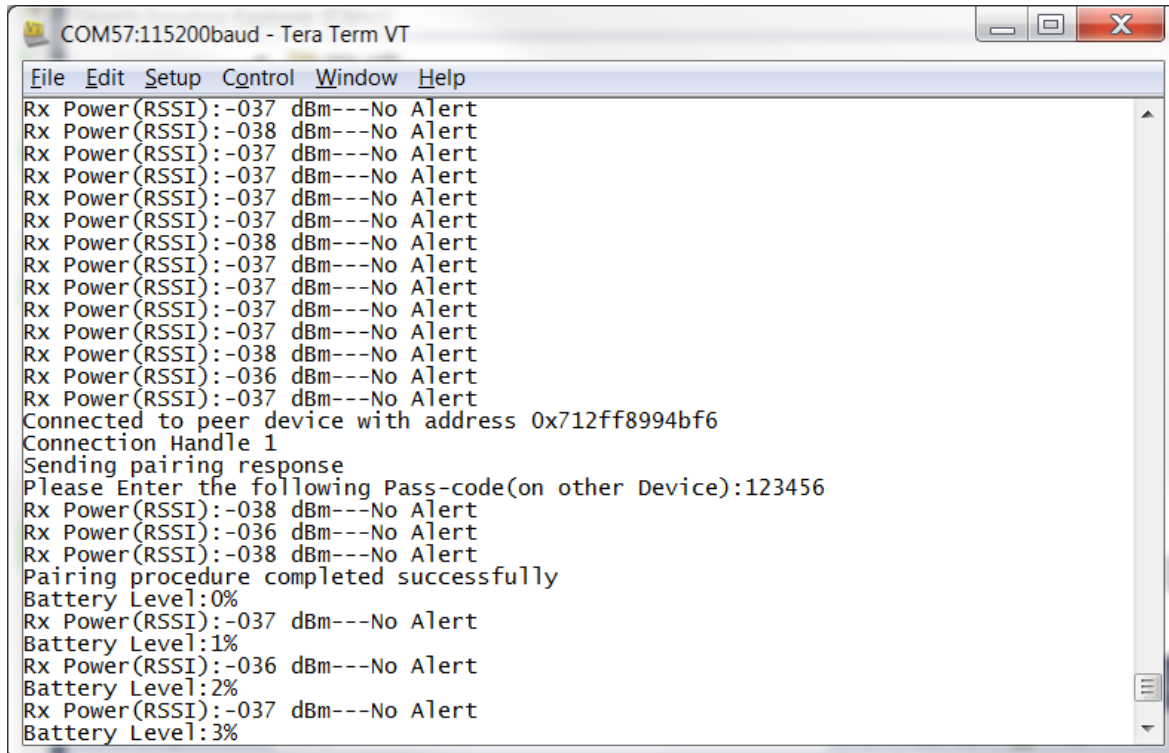


[Figure 7-8](#) shows the ATBLC1000 transferring data both as a central and a peripheral simultaneously.

13. Now the ATBTLC1000 will continue to behave as Proximity Monitor (GAP Central) and Battery Service Application (GAP Peripheral) simultaneously with two connections. A continuous data transfer happens on both the links by the ATBLC1000 and even if one link gets disconnected the data transfer will happen on the other link.

## 8 BluSDK Software Architecture

The following diagram illustrates the various layers in the BluSDK Architecture. The External host can be supported platform. The application in this example is Proximity Monitor Profile.

Figure 8-1. BluSDK Software Architecture

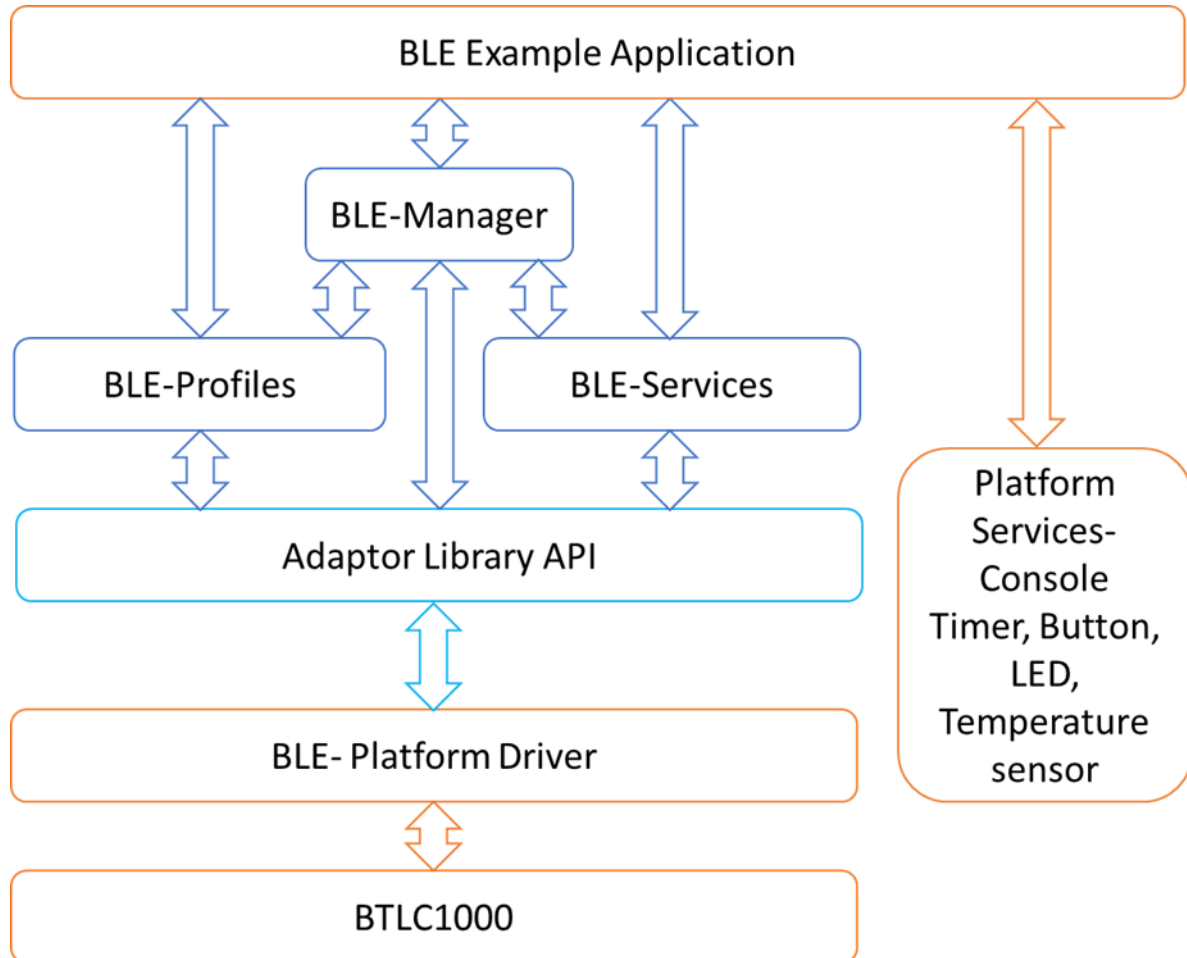

## 9 **ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER**

This evaluation board/kit is intended for user's internal development and evaluation purposes only. It is not a finished product and may not comply with technical or legal requirements that are applicable to finished products, including, without limitation, directives or regulations relating to electromagnetic compatibility, recycling (WEEE), FCC, CE or UL. Atmel is providing this evaluation board/kit "AS IS" without any warranties or indemnities. The user assumes all responsibility and liability for handling and use of the evaluation board/kit including, without limitation, the responsibility to take any and all appropriate precautions with regard to electrostatic discharge and other technical issues. User indemnifies Atmel from any claim arising from user's handling or use of this evaluation board/kit. Except for the limited purpose of internal development and evaluation as specified above, no license, express or implied, by estoppel or otherwise, to any Atmel intellectual property right is granted hereunder. ATMEL SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RELATING TO USE OF THIS EVALUATION BOARD/KIT.

ATMEL CORPORATION  
1600 Technology Drive  
San Jose, CA 95110  
USA



## 10 Revision History

Doc Rev.	Date	Comments
42635A	11/2015	Initial document release.



**Atmel Corporation** 1600 Technology Drive, San Jose, CA 95110 USA T: (+1)(408) 441.0311 F: (+1)(408) 436.4200 | [www.atmel.com](http://www.atmel.com)

© 2015 Atmel Corporation. / Rev.: Atmel-42635A-ATBTLC1000-BluSDK-MultRole-Application-Getting-Started-Guide\_UserGuide\_112015.

Atmel®, Atmel logo and combinations thereof, Enabling Unlimited Possibilities®, and others are registered trademarks or trademarks of Atmel Corporation in U.S. and other countries. ARM®, ARM Connected® logo, and others are the registered trademarks or trademarks of ARM Ltd. Other terms and product names may be trademarks of others.

**DISCLAIMER:** The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

**SAFETY-CRITICAL, MILITARY, AND AUTOMOTIVE APPLICATIONS DISCLAIMER:** Atmel products are not designed for and will not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death ("Safety-Critical Applications") without an Atmel officer's specific written consent. Safety-Critical Applications include, without limitation, life support devices and systems, equipment or systems for the operation of nuclear facilities and weapons systems. Atmel products are not designed nor intended for use in military or aerospace applications or environments unless specifically designated by Atmel as military-grade. Atmel products are not designed nor intended for use in automotive applications unless specifically designated by Atmel as automotive-grade.