




OpenAVRc

**An open source RC
transmitter based
on the ATmega
2560 AVR
microcontroller
from ATMEL /
Microchip**


Wiring the MegaMini © Version 2.1 Shield



Copyright OpenAVRc 2018

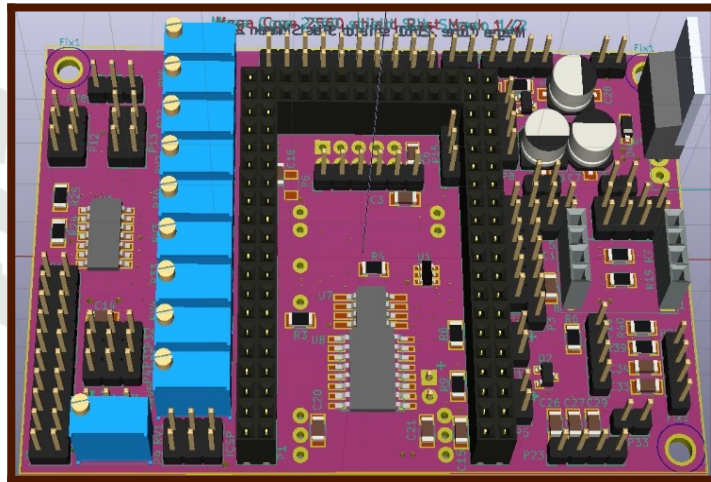

This circuit is intended for the mega2560-Core from Inhaos

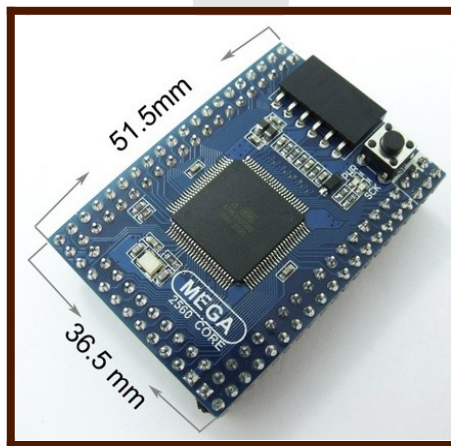

Advice :

We suggest that you read and reread this document and let it sink in before the building starts.

Prefer a "function by function" construction and test and verify the correct functioning before moving on to the next phase.

Suggested order of construction

- Power supplies and stick connectors
- Stick amplifier
- Setting up the different connectors
- Screen and Core circuit

At this point, you can then start your radio after using the document "[OpenAVRc](#) V3 Software Manual"

- SD card
- JQ6500
- etc

To wire up the circuit, one can also consider a second method, namely

- power supply
- mounting one of the screens
- setting up the 3 connectors of the Core
- configuration of the Core circuit based on the document "Software Manual"
- implementation of the Core
- power up! And verification of operation
- continued wiring

1 .Document versions

Version	Date	Reason for Change
0.1	31/07/2018	Creation of V2.1
0.2	03/10/2018	Adding 10K Resistance on Q3 Base / Silk Screen Correction LL4148
0.3	05/12/2018	Warning vibrator diodes, adding power supply part, graphic chart, updated wiring screens, various minor modifications
0.4	11/12/2018	Rear panel modification p. 6 for diode direction D1, D2 and D3
0.5	21/12/2018	Added recommendation if Hall effect sticks are used and telemetry circuit error correction with added schema
0.6	11/01/2019	Error correction and addition of Hall stick explanations
0.7	09/05/2019	Adding panel schematics ST 7920 pages 30 et 31
0,8	26/11/2021	Adding schematics of SSD 1309 panel page 32

2 Copyright


This document is Copyright © 2018 [OpenAVRc](#).

3 Caution

The [OpenAVRc](#) team is not responsible for damages that may arise from the misuse or possible malfunction of the [OpenAVRc](#) transmitter

It is therefore up to the end user to measure, assume the risks and comply with the legislation in force depending on the country of use.

Graphical charter :

Note	
Info	
<div><div>Warning</div><div></div></div>	<p>Warning 1: The first pre-wired circuits of version 2.1 were delivered with the vibrating circuit diodes wired upside down. (D1, D2 and D3).</p> <p>It is necessary to invert them if you want to use the vibrator. If not, simply remove them.</p> <p>See the correct direction of assembly of these diodes pages 6 or 33.Attention</p>

Warning



Warning 2: A circuit connection error was found in the telemetry section on the version 2.1 shield.

See pages 14-15 for correction. This change is not necessary if you are using a DC or multimodule HF circuit.


4 Table of contents

1 .Document versions.....	3
2 Copyright.....	3
3 Caution.....	3
4 Table of contents.....	5
5 Module wiring and connector locations:.....	7
5.1 Power supply section:.....	8
5.2 Common supply (LI-Ion) :.....	8
5.2.1 Solution 1 : L4940 or 4941:.....	9
5.2.2 Solution 2 : (PM-5033).....	9
5.2.3 Solution 3 : (MP1584em).....	9
5.3 Wiring of the different connectors.....	10
5.3.1 P12 and P13 : Sticks:.....	10
5.3.2 P1, P2 and P3 : Potentiometers:.....	10
5.3.3 P16 Parallel LCD screen:.....	11
5.3.4 P9 ICSP connector:.....	11
5.3.5 P11 Trim Connector:.....	11
5.3.6 P14 Switch Connector:.....	12
5.3.7 P25 key connector :.....	12
5.3.8 P19 connector, telemetry and PPM output to HF module:.....	12
5.3.9 P23 and P24 Rotary encoder connectors:.....	13
5.3.10 P5 vibrator connector:.....	13
5.3.11 P15 I2C LCD Display Connector: (SSD1306 ou SH1106).....	13
5.3.12 P20 Wiring for the telemetry module, TTL / RS232 converter:.....	14
5.3.13 P6 SD card connector:.....	16
5.3.15 P22 JQ6500-28P sound module wiring:.....	16
5.3.14 P8 Audio-Buzzer / Voice signal connector:.....	17
5.3.16 P2 DS3231 RTC module and FRAM FM24W256-G connector:.....	19
5.3.18 P18 trainer connector:.....	20
5.4 HF Modules:.....	21
5.4.1 HF Module CC2500 « yellow » :.....	21
5.4.3 P7 Connections for the HF module 4 in 1 SPI:.....	22
5.4.4 Connections for the 5v / 3,3v level converter:.....	22
5.4.5 Connections for the 4 in 1 HF module:.....	22
6 Stick signals amplification:.....	23
6.1 Purpose for the stick amplification.....	23
6.2 Schematic of the stick Amplification.....	23
6.3 Adjustment of the stick adapters:.....	25
6.3.1 Method 1.....	25
6.3.2 Method 2.....	26
7 Screen preparation:.....	28
7.1 Recall pinout for P16.....	28
7.2 Screen Zollen (7565P).....	28
7.3 Screen ARTRONIC (7565R).....	29
7.4 Screen ST 7920 :.....	30
7.5 Screen KS108B :.....	31
7.6 LCD Oled Screen 2,42 " , SSD13xx :.....	32


7.6 Summary of Arduino, Ports, P16 and Display Connections.....	33
8 Appendices :.....	34
8.1 Remove the TTL / RS232 converter from the FrSky DHT module.....	34
.....	34
9 Placement of components :.....	35
10 Various Tips.....	36

5 Module wiring and connector locations:

Top side

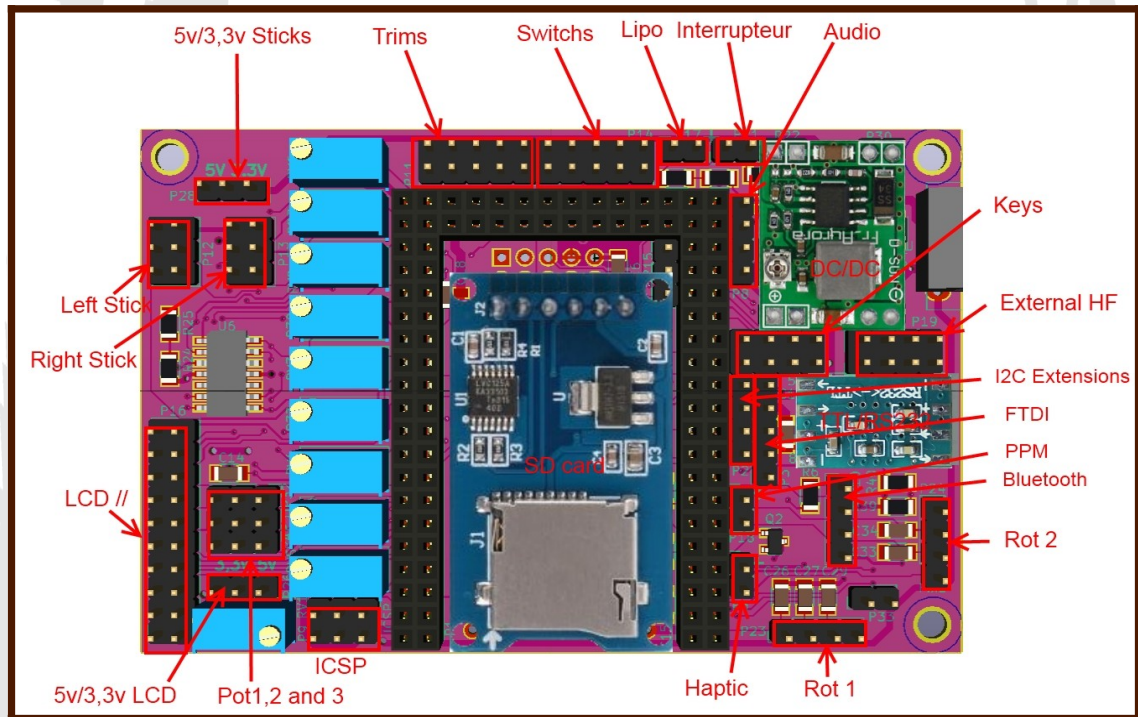

Bottom side

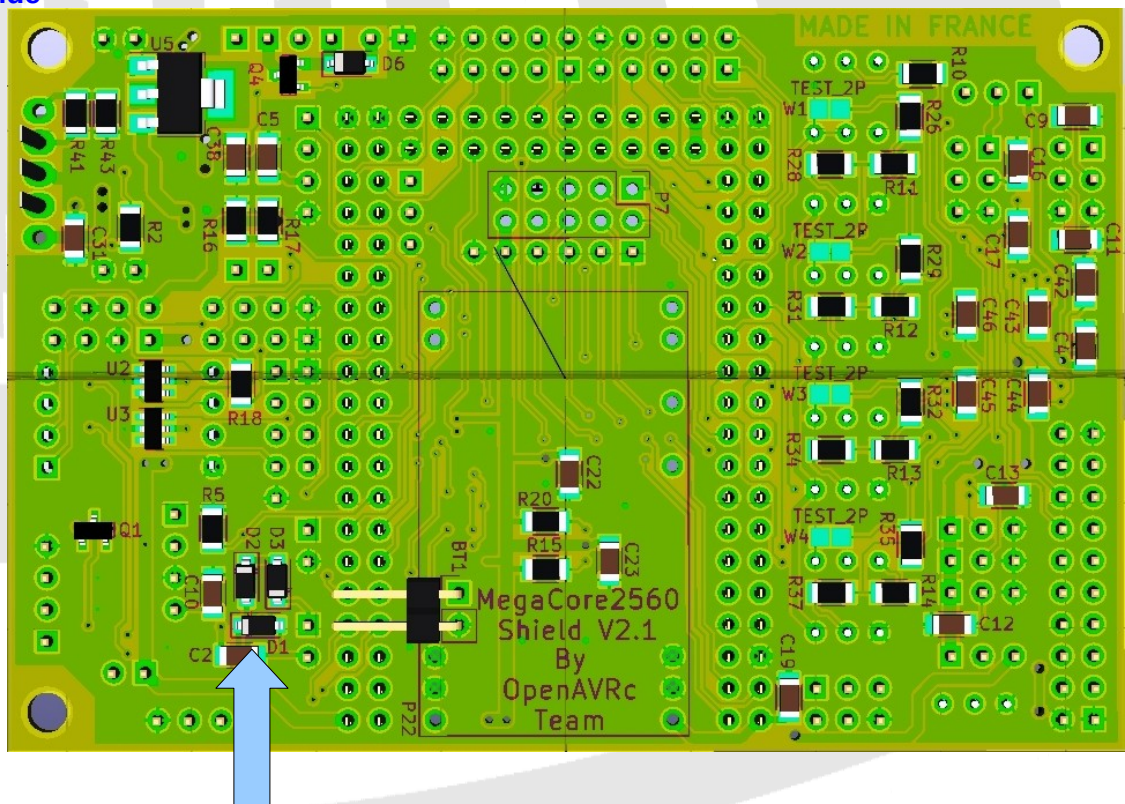


the 3 diodes D1, D2 et D3


5.1 Power supply section:

The Power supply section includes:

- a common power supply battery (Lipo, LiFe, NiMh ...)
- a protection diode D6
- a switch circuit consisting of Q3, Q4 with power switch P21
- a circuit for measuring the battery voltage R16 and R17
- a 5V regulator (3 solutions)
- and possibly a 3.3V regulator if necessary for a screen or Hall stick depending on the type of 5V power supply you choose.

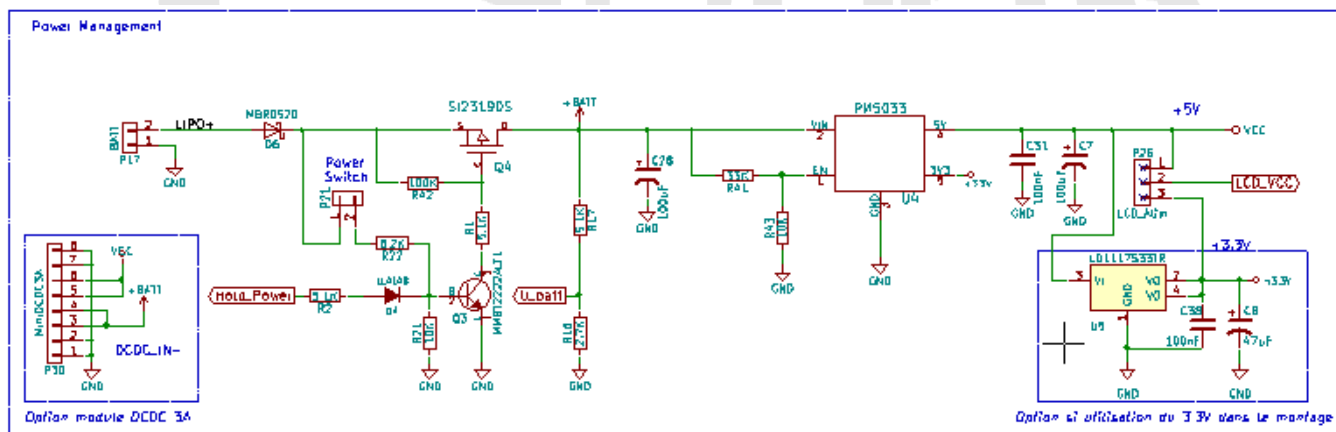


5.2 Common supply (LI-Ion) :

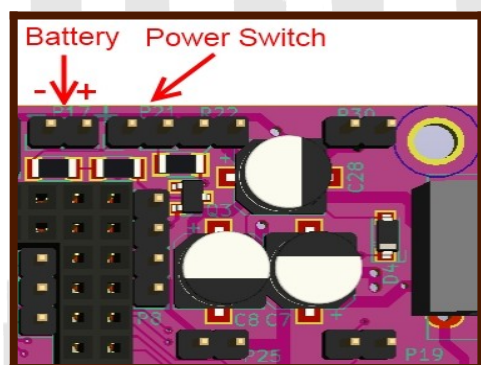

A LiPo battery or better, Li-Ion 2S or 3S (3 x 4.2v maximum) can be used to power the board.

+5 and + 3.3V Power Supply Circuits:

5.2.1 Solution 1 : L4940 or 4941:

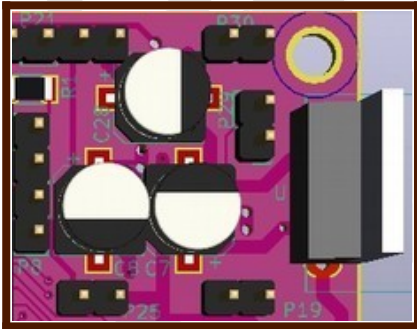


This first solution uses a linear 5v L4940 series regulator whose efficiency is much worse than the two following solutions. The TO220 three-legged housing will be wired to tabs 2, 3 and 4 of U4. In case 3.3V is needed (for Hall effect sticks), U5 must be soldered.

Warning



Except wanting to dissipate some heat, it is useless to use a 3S battery in this case!

5.2.2 Solution 2 : (PM-5033)

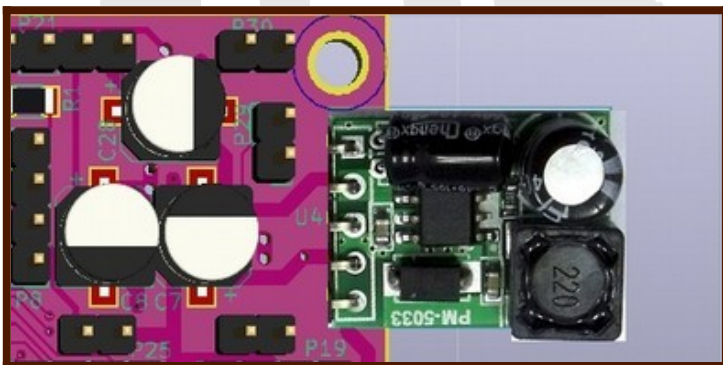

Here, the 5v AND the 3,3v are created by the PM-5033 from Inhaos (U4). Very good performance at 96%, good higher than the L4940 of solution 1, so less heat dissipation and longer battery life.

Do not solder U5 (3.3v), a 3.3V regulator is already mounted on the back of the IC.

5.2.3 Solution 3 : (MP1584em)



This last solution uses a DC / DC module (switching power supply, in place of the PM-5033 (U4). Very good performance also at 96%,

Adjustment (if any) of the output voltage:

- Replace the variable resistor with a fixed resistance of 47K ohms in parallel with a resistance of 1M ohms.
For this value the output voltage is then 4.97V.

If 3.3V is needed then U5 should be soldered.


Warning



It is imperative to adjust this module to +5v maximum before soldering it on the circuit at the risk of destroying the active components that do not support more than 5V. In addition, the SSD1306 I2c screen will not start.

5.3 Wiring of the different connectors

5.3.1 P12 and P13 : Sticks:

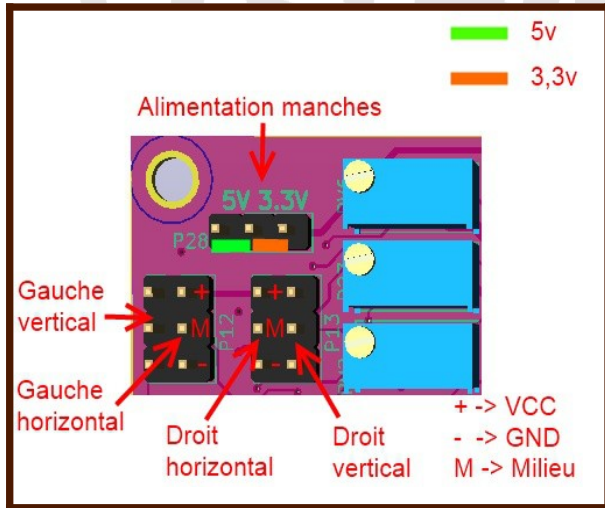

It is possible to turn the screw of each potentiometer to reverse the direction of movement.

By default, the shield is **prewired** for sticks with potentiometers powered by 5V.

There are sticks with Hall effect sensors that must be powered by 3.3V.

In this case, it will be necessary to replace a resistor on the divider bridge and one per channel,
(See page 22 "Stick Amplification P12 and P13: 5v / 3,3v").

Warning



For correct adjustment, the voltage will increase when the stick is operated from left to right or from bottom to top.


In the case an amp is being used, then the signal will be reversed, it will take this into account. This will be pointed out again in the settings.

Warning




Hall effect sleeves: It is almost certain that you will have to reverse the direction of movement of one of the two channels of each stick. For this, do not reverse the power supply (risk of destruction of the sensor electronics) but use the software reversal option described in the document "Software Manual" (Desktop)

5.3.2 P1, P2 and P3 : Potentiometers:

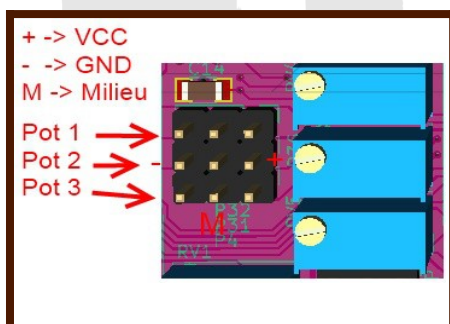

It is possible to turn the screw on each potentiometer to reverse the direction.

5.3.3 P16 Parallel LCD screen:

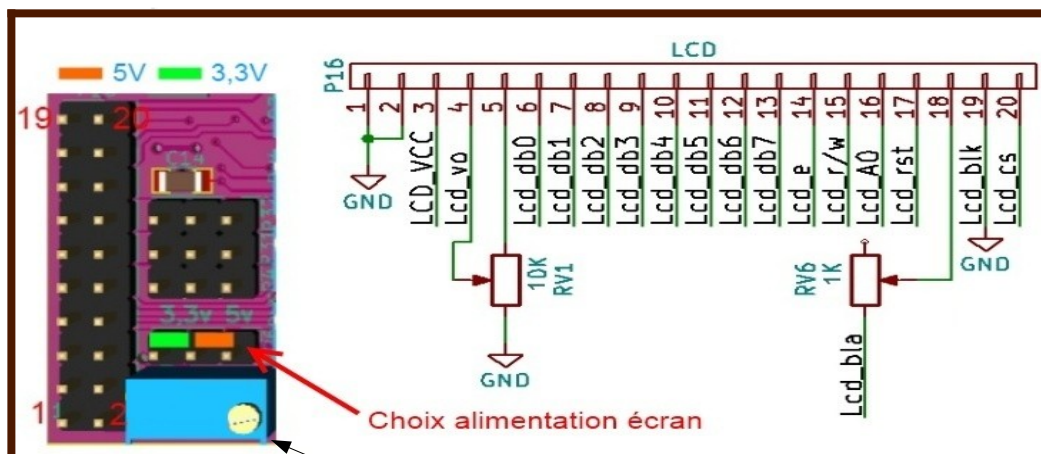

Position the RV1 potentiometer as shown in the diagram (turn to the right to be accessible if you put a jumper). See diagram page 5


For details on how to wire up screens connected in parallel, (Zolen, Artronic, ST7920 and KS108, see chapter 7, page 26)

Warning




Pay attention to the pin order for connector P16 on the connected cable (2,1,4,3, etc.) See chapter 7


5.3.4 P9 ICSP connector:

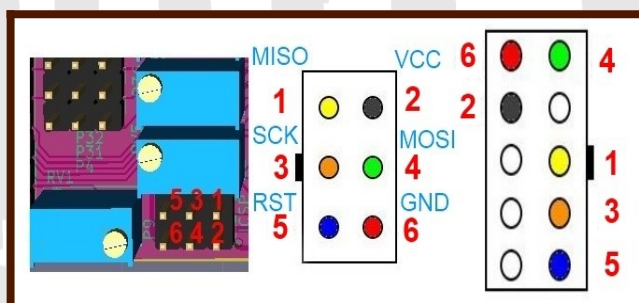


5.3.5 P11 Trim Connector:

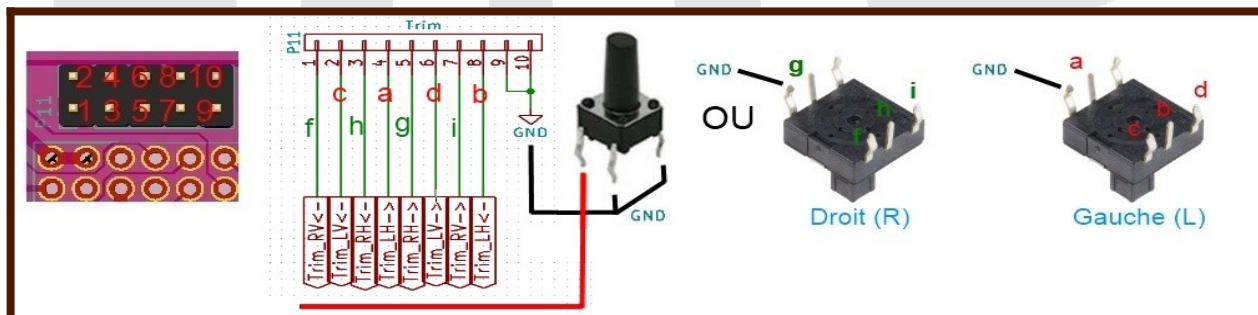

5.3.6 P14 Switch Connector:

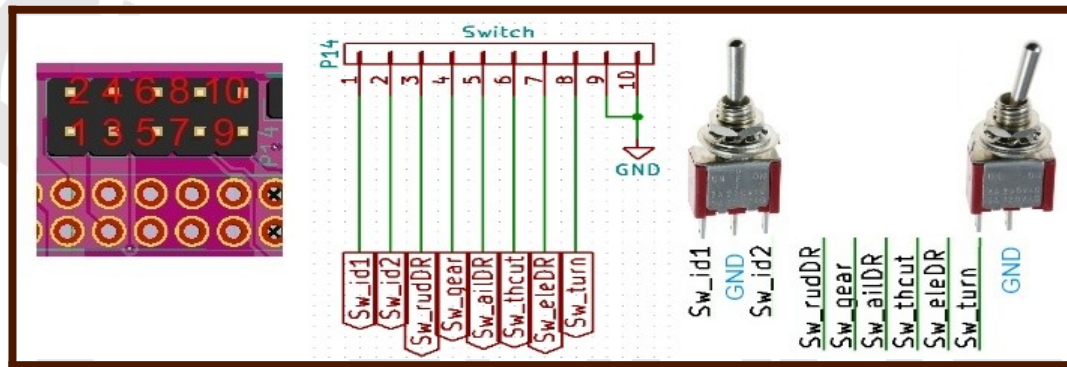


5.3.7 P25 key connector :

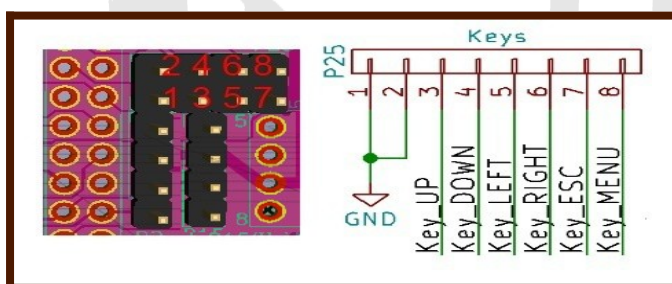

Each key will be connected between one of the pins 3 to 8 and the common (GND).

5.3.8 P19 connector, telemetry and PPM output to HF module:

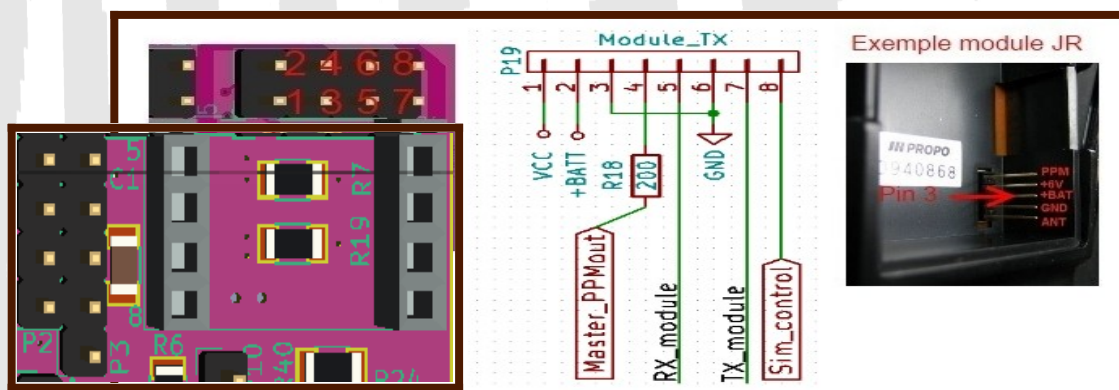


Warning




See the diagram in this section on page 14 for more explanations

5.3.9 P23 and P24 Rotary encoder connectors:

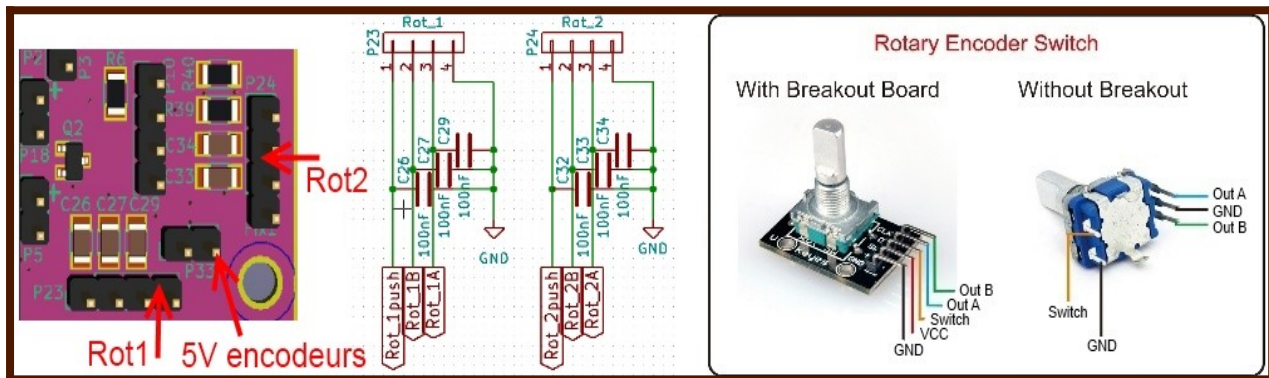

5.3.10 P5 vibrator connector:

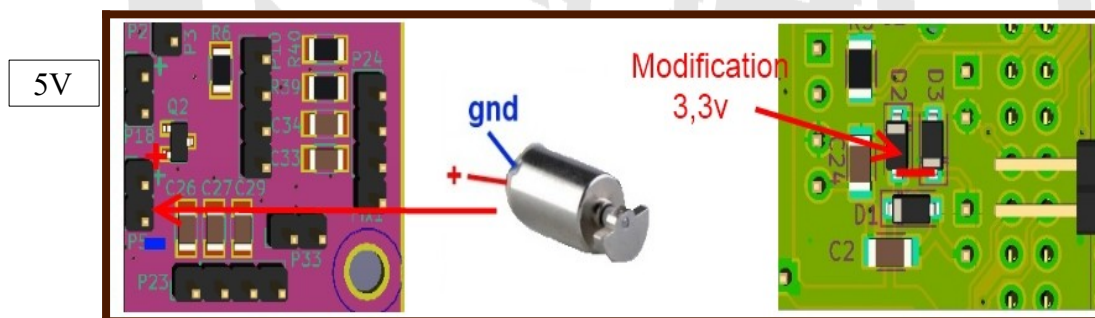


Warning



- Using a vibrator 3.3 v: Check the direction of the diodes because there was a screen printing and positioning error on the shield
- Using a vibrator 5 v: Do not wire both diodes and short circuit D2 D3

5.3.11 P15 I2C LCD Display Connector: (SSD1306 ou SH1106)

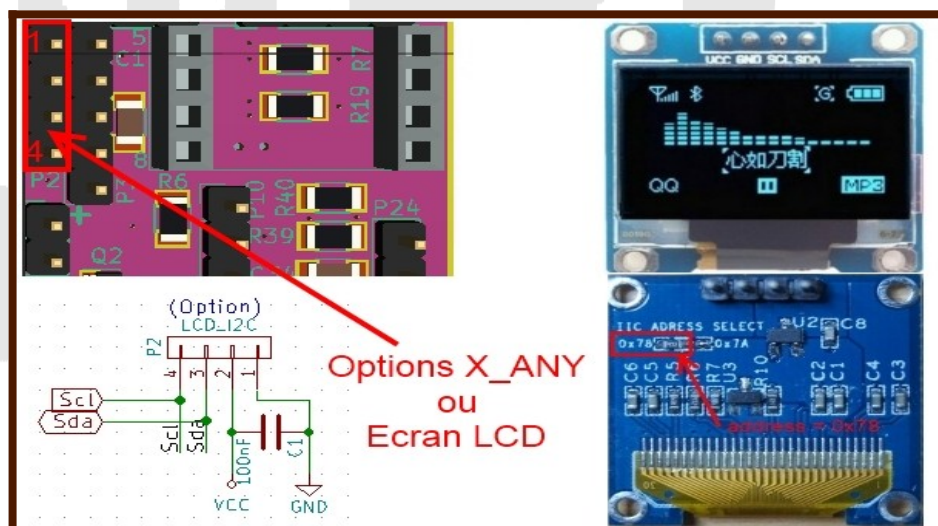


Warning



- Check that the screen address is 0x78 (which corresponds to the write address 0x3C) !!!

5.3.12 P20 Wiring for the telemetry module, TTL / RS232 converter:

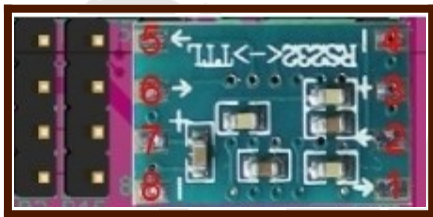

This Max3232-based module has two converters, one per side. Only the Max3232 side will be used. The module has 4 small diameter holes for VCC and GND power supplies.

For its wiring, I advise you to solder two strips of 4 pins (see first remark next page, following the error on the circuit) by centering the pins on the holes as well as the centers of the SMD pads without drilling them because that would generate a short circuit with the SMD pin from below.

Solder two female connectors on the shield, then plug the module and its connectors as specified (pins 1 and 8 down).

This cabling solution, intended for FrSky telemetry, will allow this module to be easily replaced by another type of assembly for another telemetry format.


Note

If you are using a FrSky DHT module, you have the option of removing the internal TTL / RS232 converter from the module, which becomes useless (see appendix 8,1).

Note that in this case, a firmware update of the HF module is no longer possible.


If you want to upgrade to the EU version, this must be done first.

Here is the diagram of the entire telemetry chain:

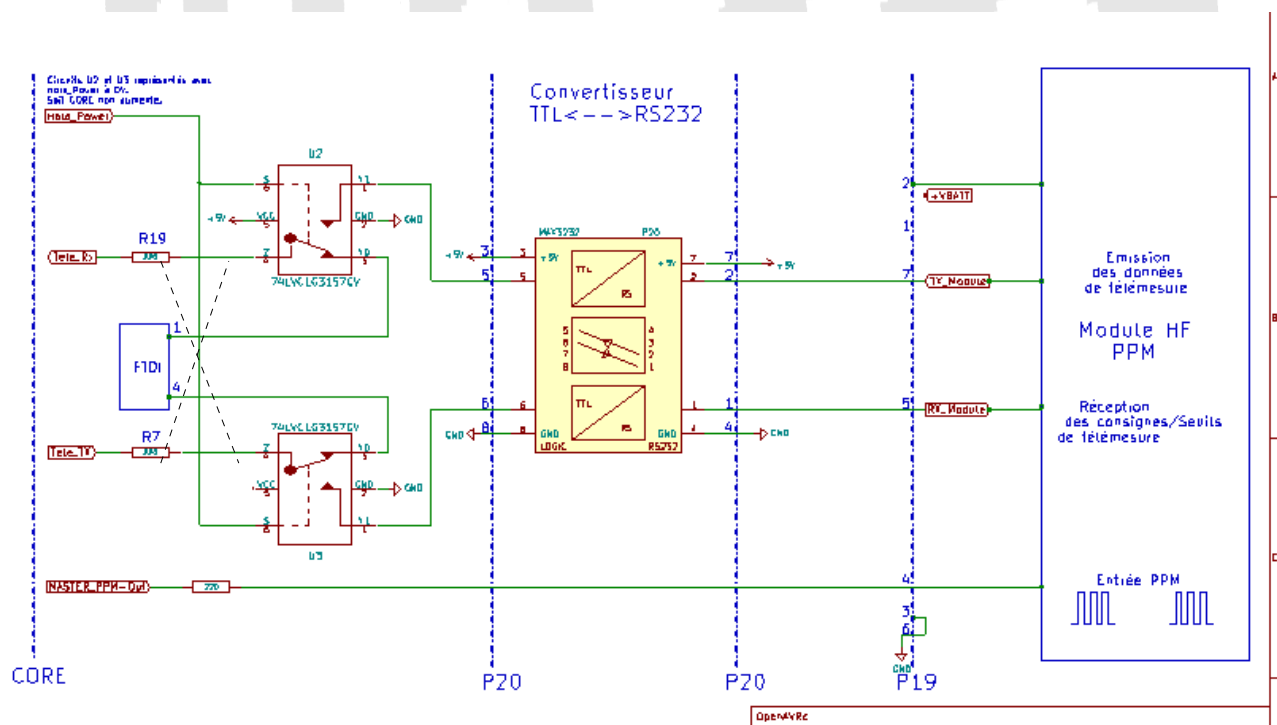

If you want to use a PPM HF module on which you will receive the telemetry signals, it is necessary to correct a link error on the shield.

If you do not intend to use the FTDI P2 jack, the easiest way is to wire the TTL RS232 converter as follows to swap the signals from pins 5 and 6:

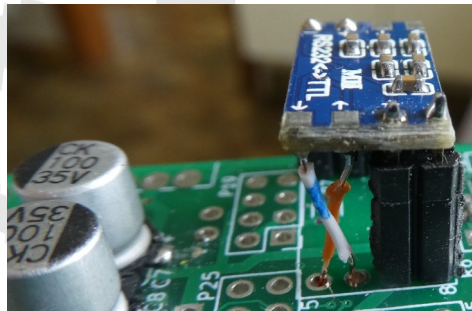


Warning




Otherwise, at present R19 goes to U3 and R7 to U2 (dotted diagram)

To do this, you will need to desolder and reposition as you please the two resistors R19 and R7 to obtain the following diagram.

Look out, the tracks are fine and fragile!

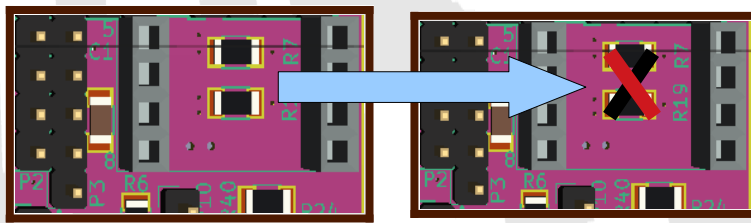

FTDI connector to **permanently leave a USB-serial converter in your radio.**
Two electronic inverters flip the pins MEGA to the telemetry connector or this one according to the power supply: Battery or USB.

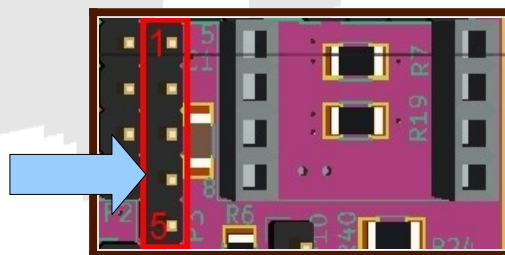

5.3.13 P6 SD card connector:



The SD card is connected under the Core. The ideal is to desolder the angled connector and replace it with a straight connector soldered from the bottom of the SD card, or to provide a removable mounting of the card, just in case!

Note:

A R 220 ohm must be added to the MISO circuit after intersected the trace


5.3.15 P22 JQ6500-28P sound module wiring:

You will use this module if you want to benefit from voice announcements from the function "Voice", to indicate flight times, telemetry values, the selected flight phase, transmitter battery voltage, etc.

Voice announcements will be stored in the module's micro SD memory.

The JQ6500-28P (28 pins) module comes with two 14-pin strips already soldered.

Note the presence of the Outputs Speaker Out + and -, allowing to directly connect a HP of 0.8W max

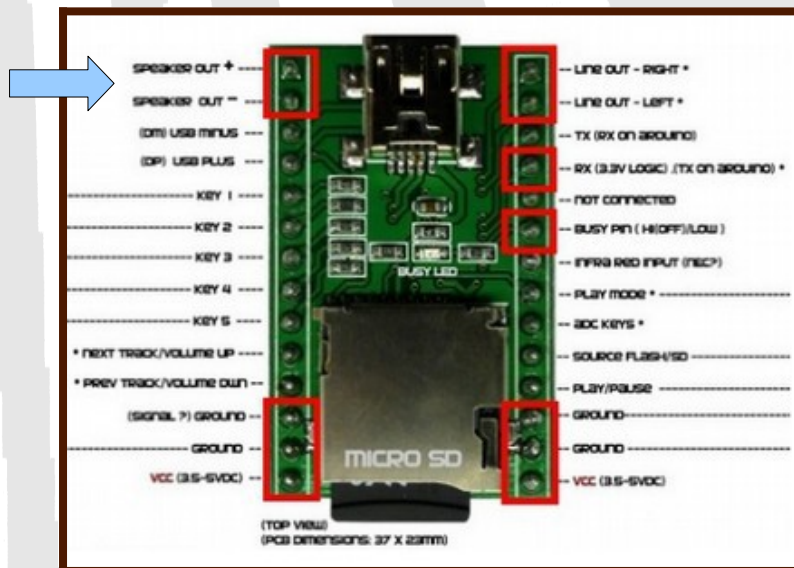


To be mounted correctly on the circuit, the module must be prepared . The pins circled in red should be kept but all other pins must be cut off.

Note

Another solution is to desolder the unused pins, so there is no risk that a unused pin touches a track of the shield!


The module will be mounted on the shield's solder side (bottom) and soldering made on the component side (top). Note: Except the JQ, all these R and C components are already wired.

5.3.14 P8 Audio-Buzzer / Voice signal connector:

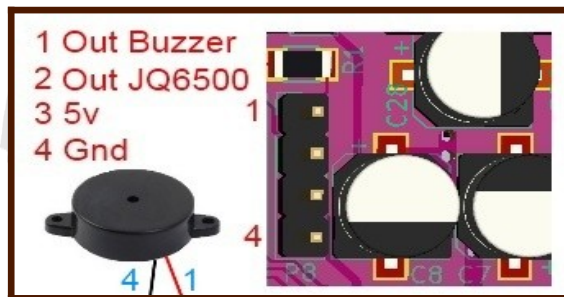

Summary of possibilities:


Without Audio function selected in **Desktop**

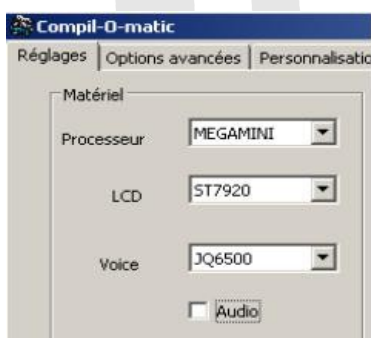

In this case, the buzzer connected between 1 and 4 will be used to indicate any action performed on a key or indicate an alarm, depending on the configuration chosen in the radio for this function.

- If the "Voice / JQ6500" function is enabled in "Desktop", pin 2 provides a signal from the JQ for voice announcements.

With Audio Function selected in **Desktop**

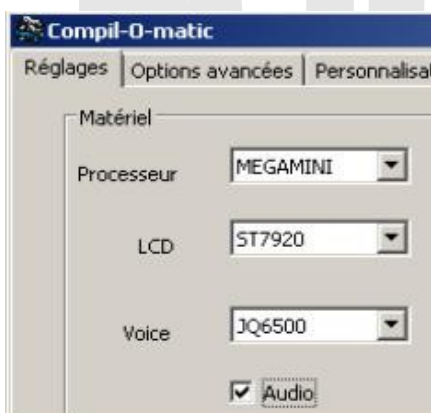

This mode of use is the smartest in our opinion

In this case, output 1 generates a simulated Buzzer signal as well as the sounds of the "Audio" function caused by pressing a key, a trim control, etc., depending on the choice made in the radio.

As before, if the "Voice / JQ6500" feature is checked in "Desktop", pin 2 provides a signal from the JQ6500-28P for voice announcements.

It will be necessary to use an amplifier (2w) described below, **and whose printed circuit is also illustrated and available**, to mix the Audio and Voice signals for sending to the 8 ohm speaker.

Mixing amp (Component list available)


It will be necessary to make a mixer assembly for the Audio-Buzzer and Voice signals before amplifying the signals to an 8-ohm loudspeaker.

If you do not want to use the "Audio" function and use a single buzzer, ("Audio" unchecked in Desktop), while using the Voice function ("Voice" checked in Desktop), only the connection to the JQ (pin 2) will be necessary and you will not need the mixing section.

As an option, a jack (3.5mm mono jack socket) can be added to connect a headset.


The resistance R5 of 220 Ohms will be adapted to your hearing. The ideal first step is to use a variable resistor of 1Kohms to find your ideal setting, then replace this resistance with a fixed resistor of similar value.

Diagram of the mixing section + LM386 amp.

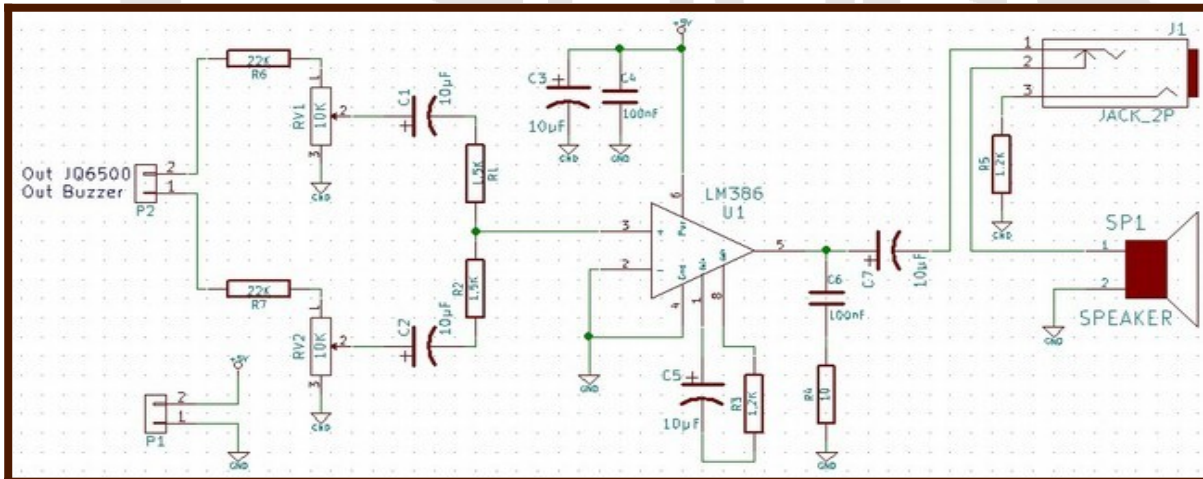

Note:
The

component references have nothing to do with the shield.

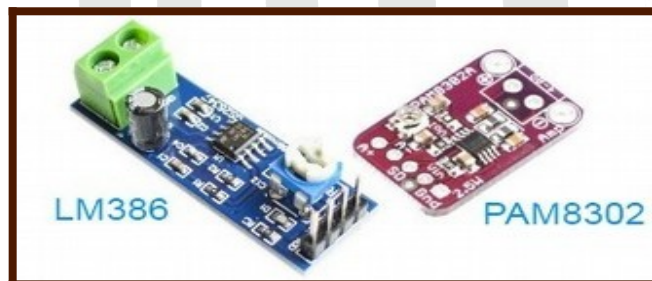


You can also make your adaptation using commercial audio amplifiers, based on LM386 or PAM8302 (class D) or any other mono amp. A power of 2w is sufficient.


Or use "our" amp [OpenAVRc](#)



5.3.16 P2 DS3231 RTC module and FRAM FM24W256-G connector:

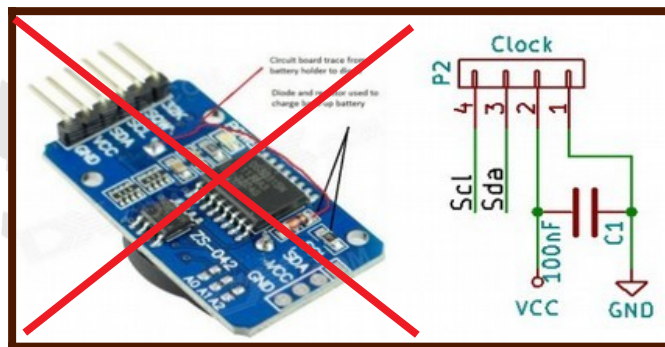

Initially this part was to connect by your self. On the version 2.1 shield it has been **preconnected**.

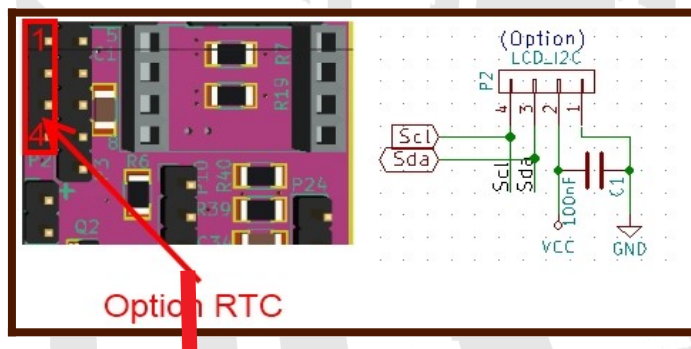

As a result, the P2 connector is free and can be used for any I2C extension.

The board therefore includes from the start

- On the one hand, an F-RAM memory FM24W256-G bringing the memory capacity for the models to 32 KB.

To date, only 16 KB are used


- a DS3231 RTC clock circuit (Real Time Clock) and as a bonus a temperature sensor.

Info

F-RAM advantages:

more memory space, faster and greater tolerance to multiple writes.

The back of the circuit board has a connector for a CR2032 battery (saves the time after transmitter is turned off).

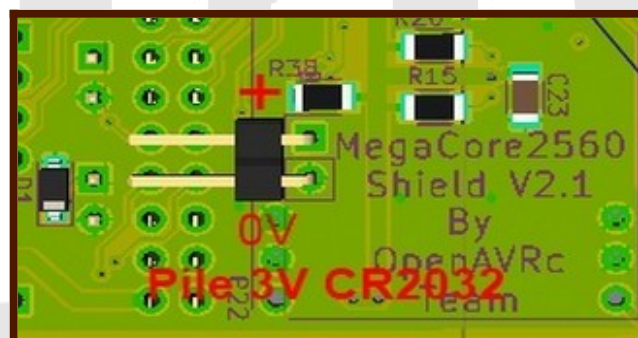


5.3.18 P18 trainer connector:

The training can be done according to two methods,


- by cable or
- by Bluetooth (functional).

Training with cable:

Just bring a ppm signal to the corresponding (+) input

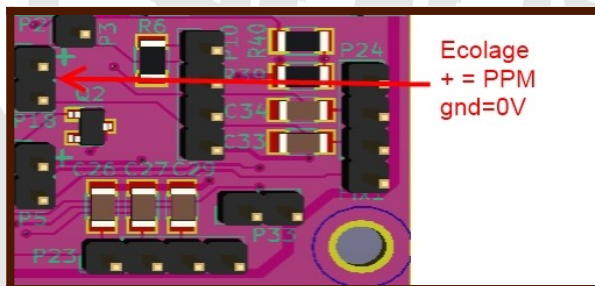

Training via Bluetooth:

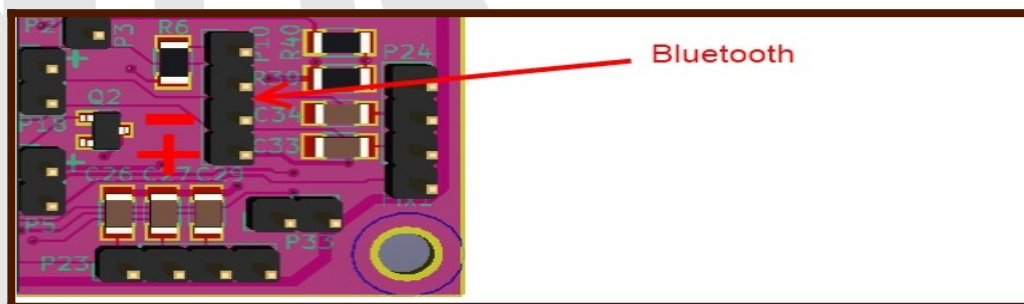

The Bluetooth module HM10 is configurable as **master** or **slave**.

During this configuration, the KEY leg must be powered by VCC.

The **teacher** module will preferably be configured as a master and the **student** preferably as a slave.


For a better differentiation of the modules, we can for example agree that the name of a teacher module starts with TEACHxx (master) and the name of the student by STUDxx (student).

A led (blue?) can be connected to the tab STATUS.. It will then be connected in series with a 180 ohm, 1/4w resistor.

5.4 HF Modules:



5.4.1 HF Module CC2500 « yellow » :

If you only use FrSky receivers, prefer the following CC2500 module that has a proven track record.

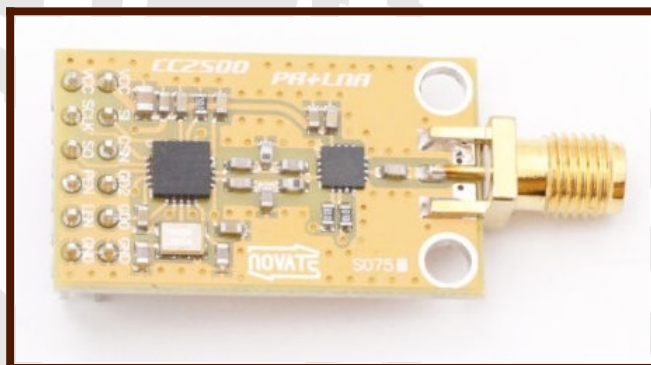



5.4.2 Wiring of the 5v / 3,3v level converter:

The input outputs only accept 3.3v signals. It is ESSENTIAL to separate this module from the Core using a 4-channel converter (MOSI, MISO, CS, SCLK) which receives 0-5v level signals and converts them into 0-3,3v level signals. and vice versa for the MISO signal.

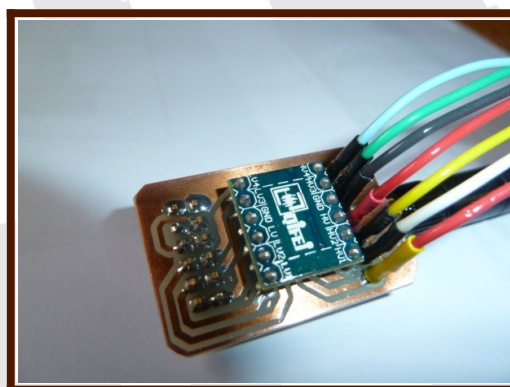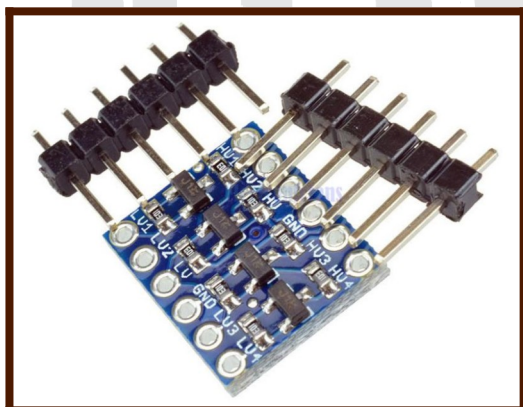


The printed circuit board (available) will allow mounting in a smaller area.

It is connected to P7 (see next page)

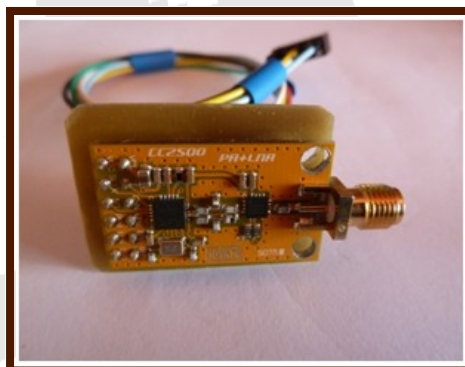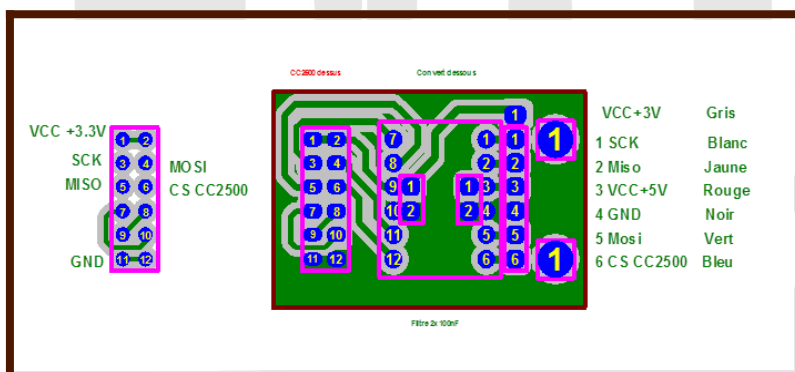

5.4.3 P7 Connections for the HF module 4 in 1 SPI:

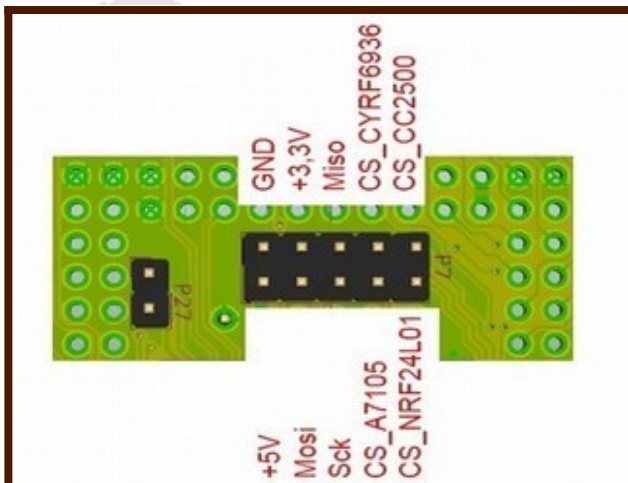


The wiring will be done, preferably from below (soldering made from above).

The 4-in-1 multi-protocol module is powered by 5V. The input / outputs only accept 3.3v signals. It is therefore ABSOLUTELY necessary to separate this module using a 5v / 3.3v signal level converter.

This converter receives 0-5v level signals and converts them into 0-3,3v level signals.

5.4.4 Connections for the 5v / 3,3v level converter:

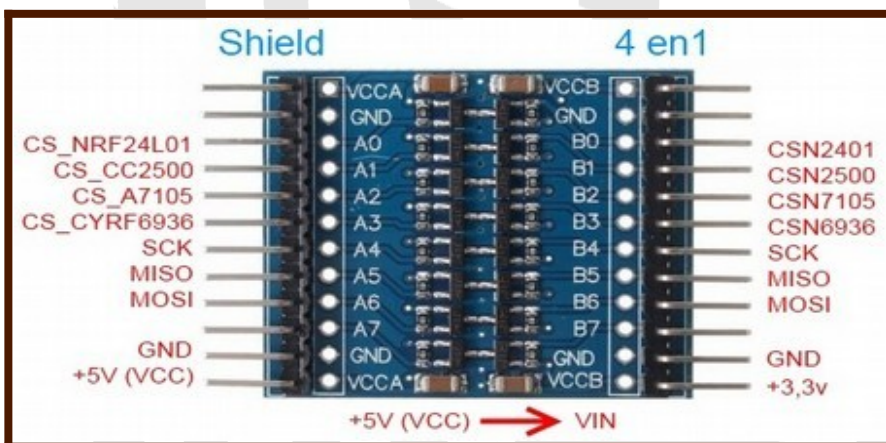

5.4.5 Connections for the 4 in 1 HF module:




6 Stick signals amplification:

Info

This pre-wired option (except the 8 potentiometers) allows a better definition of the channel signals because it uses the entire measurement range of the analog to digital converter of the MEGA-CORE board.

6.1 Purpose for the stick amplification

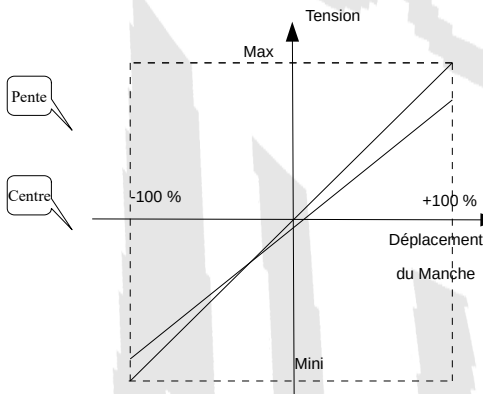

A stick produces a voltage varying proportionally with the angle of rotation.

The purpose of the amplifier part is to obtain at the analog inputs of the Core a voltage varying from Mini = 0V to Maxi = + 5V


The point "center" (neutral of the stick) is characterized by a voltage of + 2.5V with potentiometers powered by 5V and + 1.65v (approximately) with Hall effect sensors powered by 3.3V,

For this purpose, we have two potentiometers, which we will call "center or **zero**" (marked RV) and "slope or **gain**" (R)

Info

We noticed significant differences between different potentiometers, less with Hall effect sticks.

6.2 Schematic of the stick Amplification

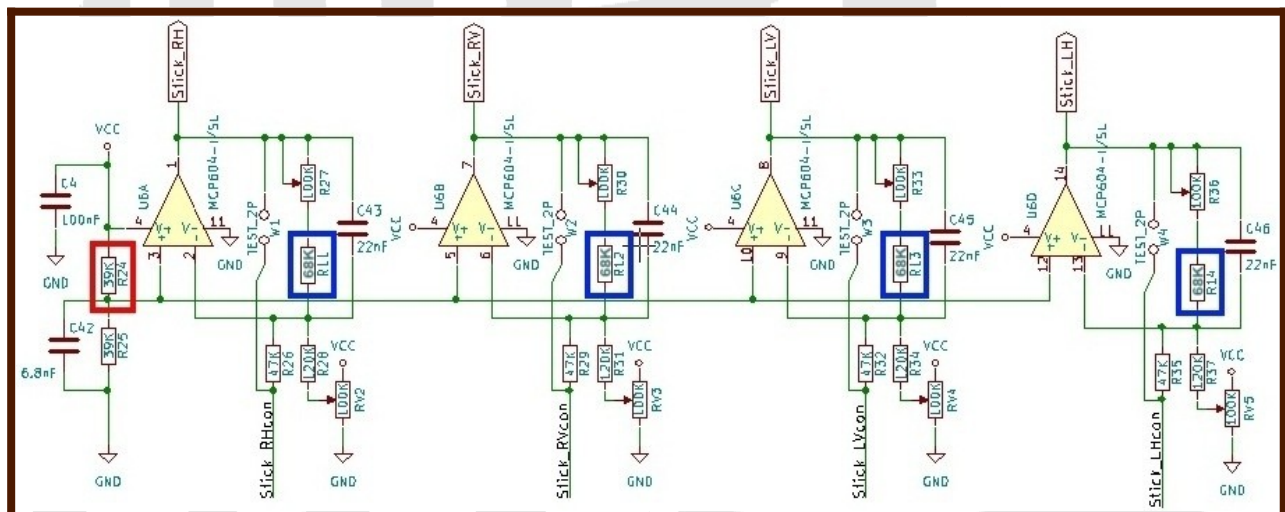

Some technical explanations:

Technical info

Although the Core converter only works on 10 bits (1024 points), the FW software, through two successive conversions, generates an 11-bit signal (0000 to 07FFh) which theoretically means that 2048 different values can be applied to servomotors.


These values will be displayed in the "Anas, 6/7" screen of the transmitter, in hexadecimal form and in %. The value in % is significant only after the calibration of the sticks (see page 17)

Warning



Note: On the ANAS screen, indications of the Dir, Prf channels will only be accurate after setting up your control mode in screen 1 "Config Radio"

The values 0400 correspond to the "Center" point

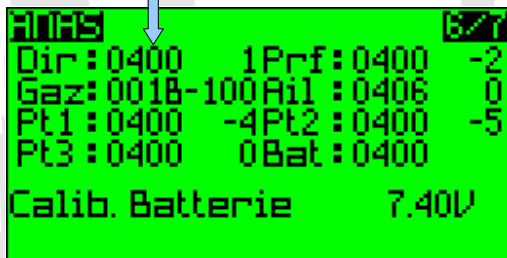

The values of the schematic components are defined for potentiometers powered by 5V. Start by setting up R27, RV2, R30 (100k), RV3 (100k), R33, RV4, R36, RV5.

Set the jumper for the supply voltage for the sticks (5V for potentiometers, 3.3V for Hall effect sticks, type M9, M9R, M7 or M7R)

5v/3,3v Sticks



If you use sleeves with **hall effect sensors**, **you must**:

- Replace R24 (39kOhms) with a resistance of 82kOhms (red in the diagram).

In this way you will get approx. 1.6V on the common point of R24 R25.

- **If necessary**, replace the resistors R11, R12, R13 and R14 with resistances of 82kOhms or more. (blue on the diagram). Try first on a track with the values in place before replacing.

Warning



Never reverse the supply of Hall effect sticks under penalty of destruction of the sensors, A compilation option of Desktop allows to change the directions of action. (see the document "Software Manual")

6.3 Adjustment of the stick adapters:

The amplifier circuit of the sticks needs a setting to obtain the voltage range in the order of 0-5V for the full movement of the handle.


Two potentiometers per stick, "zero = RV2, 3, 4, 5" and "gain = R27, 30, 33, 36", allow this setting.

Two methods can be used:

If your transmitter is already operational, go directly to method 2, much more convenient!


6.3.1 Method 1

- analog without connection to a working radio, which already allows to validate the sticks section if you started there. A little tediousbut instructive.

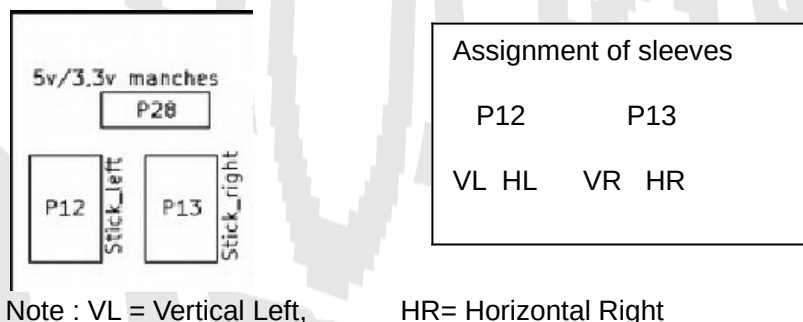

Assignment of potentiometers for mode 1

and mode 2

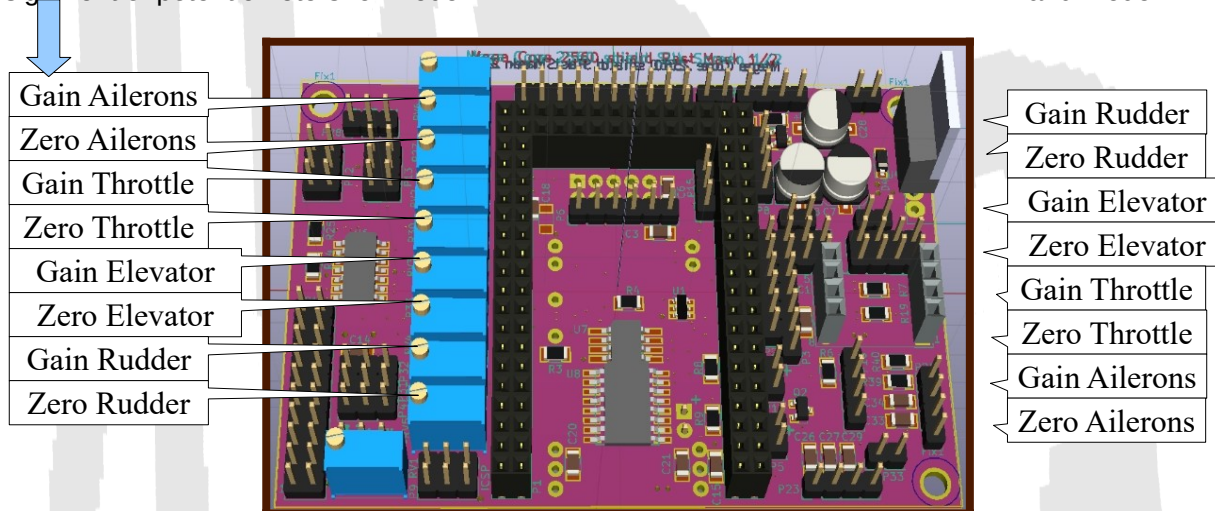

Preferably start with the throttle stick (RV mode 1, LV mode 2)

For Mode 1, Preset RV3 and R30 in the middle of the range.

Using a multimeter:

a) stick in neutral, on the corresponding pin of the Core circuit (Pin 51) measure the voltage then adjust to about 2.5v by turning on RV2.

Core / Pin Number	Stick	in Mode 1	and Mode 2
51 Analog pin 8	Stick RH	Stick RH_Ailerons	Stick_Rudder
53 Analog pin 10	Stick RV	Stick RV_Throttle	Stick LV_Elevator
54 Analog pin 9	Stick LV	Stick LV_Elevator	Stick RV_Throttle
56 Analog pin 11	Stick LH	Stick_Rudder	Stick RH_Ailerons

b) then move the stick to + 50%. (right for the horizontal sticks and at the top for the vertical sticks).

The voltage should increase and if this is not the case, see page 10 and reverse the supply direction of the stick, if it is a potentiometer.

Warning



Due to the varying range of sticks, it may be necessary to adapt the gain of the 4 amplifiers by modifying R 11, 12, 13 and 14.

(You can do this by putting the R30 gain pot in the middle of its range and look for the right value of R12 with a potentiometer in place of the resistor.

Set R27 to obtain about 4.5 to 4.8V with the handle at max. If you can not get this voltage and your voltage is higher, it is that your stick has too much variation of the signal and you will decrease the amplifier gain by replacing R30 (120k) by a lower value. (47K - 68K should be suitable)

c) Max. stick, then adjust the voltage to 4.90V max using potentiometer R27.

d) Check that you have about 0.1V at the lower end of the stick.

If the variation is not the same in both directions, then there is nothing to do. It is the linearity of your knob potentiometer that is in question, but it is not serious ... the software will then adapt. Perform the same procedure for the other sticks without seeking precision since we will adjust these values more finely thereafter.

At the end of the fourth, you should master the method!

In any case, you will need to calibrate the sticks when starting the transmitter as shown in the "Calibration" view on the next page.

6.3.2 Method 2

More practical to carry out, it can only be done if the transmitter is already operational.

- Access the "ANAS" 6 or 7 screen of the radio and consult the values delivered by each stick.

```
ANAS 6/7
Dir: 0400 1Prf: 0400 -2
Gaz: 001B-100 Ail: 0406 0
Pt1: 0400 -4 Pt2: 0400 -5
Pt3: 0400 0 Bat: 0400
Calib. Batterie 7.40V
```

- With the stick at neutral, set the zero potentiometer to obtain 0400 (H) points.

- With the stick at lowest end, set the gain potentiometer to get 0020 (H) of the converter.

Check the maximum point: if your potentiometers are linear, you should get a value close to 07E0.

Note: It may be necessary to resume settings if you need to adjust a large variation.

In any case, end with a neutral setting at 0400,

Then the « Calibration" function will be carried out, whose goal it is to take the exact values of points of the neutral and each direction of each of the sticks, to assign them coefficients in order to allow precise calculations on the trims, the mixings, display, etc., and of course the calculation of the pulse width.

In the end, a round will vary from -100% to + 100%,

On the next view, "Ail" is on a black background, which shows a saturation of the signal, the mini voltage of the stick is too low which shows that the gain is too high on this way.

CALIBRATION

[MENU] POUR DEBUT



The diagram shows a transmitter with two square buttons, each containing a small circle, and three vertical bars (LEDs) between them.

ANAL 6/7

Dir: 07F2 100 Prf: 07CB 100

Gaz: 001B-100 Bat: 0000-100



Pt1: 0400 -4 Pt2: 0400 -5

Pt3: 0400 0 Bat: 0400

Calib. Batterie 7.40V

7 Screen preparation:

7.1 Recall pinout for P16

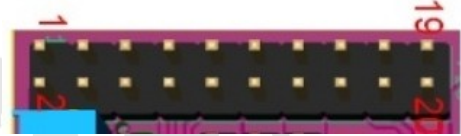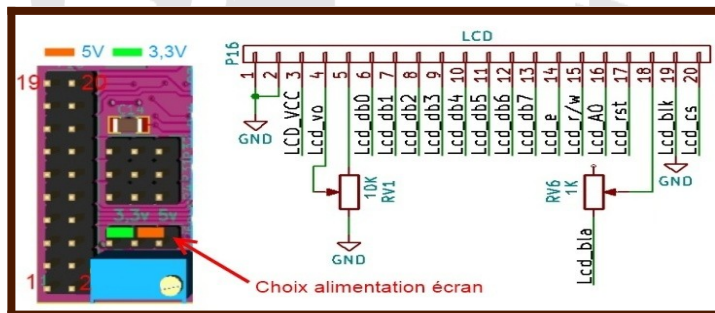


Pay attention to the cable for P16 when you wire it up since it might be in the wrong order (2,1,4,3, etc)

7.2 Screen Zollen (7565P)

Ideal screen for the reuse of small / medium cases n(see also SHxx)

Info

If when you turn on the 7565P, your screen looks dark, do not worry, look at it sideways and try to access the contrast setting that may be "stuck" at 30. Going back to an intermediate value, your screen should be more visible!

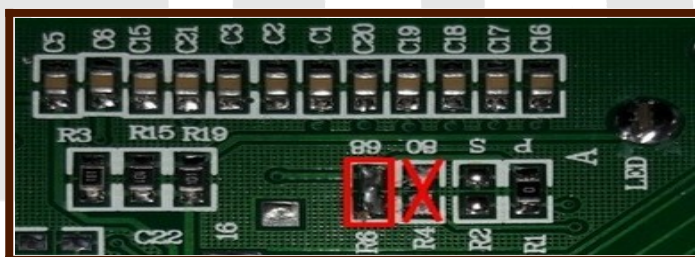


Choose **ST7565P** in Desktop.

5V power supply.

Desolder R4 (80) and bridge R6 (68).

Arrangement of the connector P16 (2 lines of the top) to the pin layout of the Zolen (2 lines of the bottom + diagram)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
	Vdd	+5V			DB0	DB1	DB2	DB3	DB4	DB5	DB6	DB7	RD	WR	D	RST	A_Lcd		CS
NC	10	9	NC	NC	1	2	3	4	5	6	7	8	16	15	14	13	11	NC	12

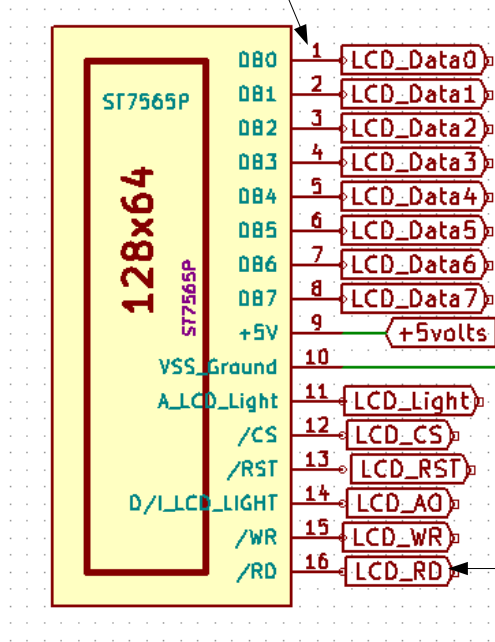

With this screen RV6 is not necessary.

RV1, will allow the brightness adjustment, the contrast being set by software.

Note: In the documentations, it is planned to insert a R of about 100 ohms in the line LCD_Light: this resistor is already in place on the Circuit (R10)

7.3 Screen ARTRONIC (7565R)


Choose **ST7565R** in Desktop. **3.3V power supply.**

Connector P16

To end




7.4 Screen ST 7920 :

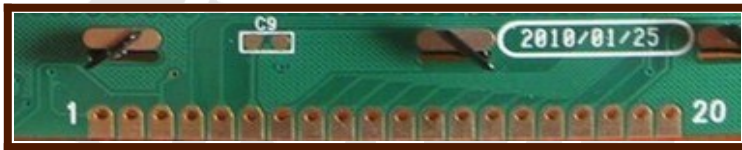

Choose **ST7920** in Desktop.
5V power supply.

Arrangement for P16 (top line) to ST7920 display pinout (type 12864B V2.0) (bottom line):

1	2	3	4	5	6	7	8	9	10	11	12	13	14	x	15	16	17	18	19	20
GN D		+5V	V 0	Vo ut	DB 0	DB 1	DB 2	DB 3	DB 4	DB 5	DB 6	DB 7	RD	PSB	R W	RS	RS T	Bla LCD	Blk Lcd	Cs
1 Vss	2	3	18	7	8	9	10	11	12	13	14	6	15	5	4	17	19	20	x	

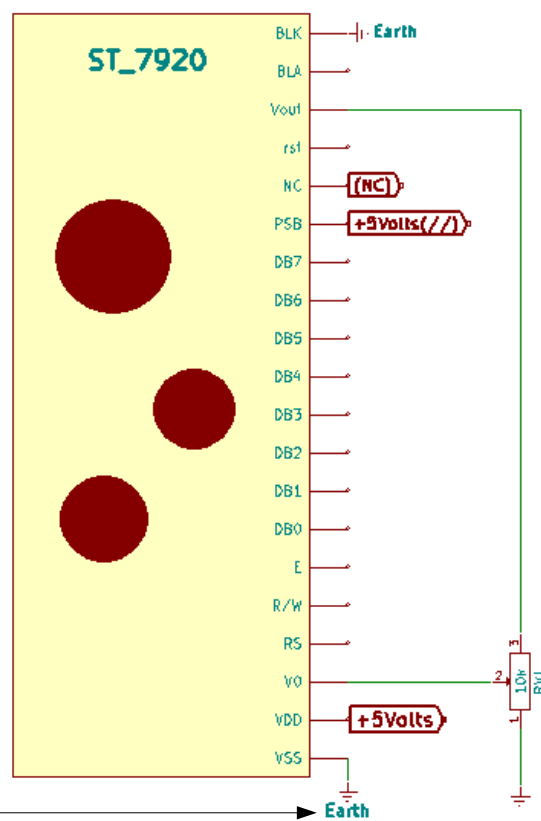

Info

This screen is particularly suitable if you have a Multiplex 30xx or 4000 transmitter box

Info


Pin 15 (PSB) of the display must be connected to + 5V to set the parallel mode.

7.5 Screen KS108B :


There are several models of KS108 screens.

Our is the KS108 "B": Screen dimensions 61 * 44 mm

Warning

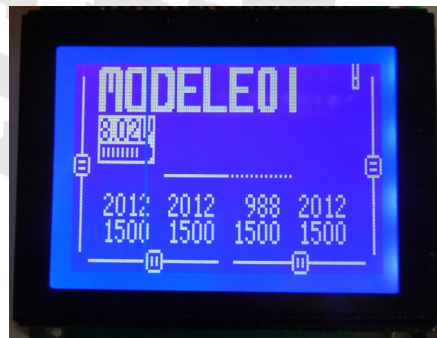

Choose **KS108** in Desktop. **5V power supply.**

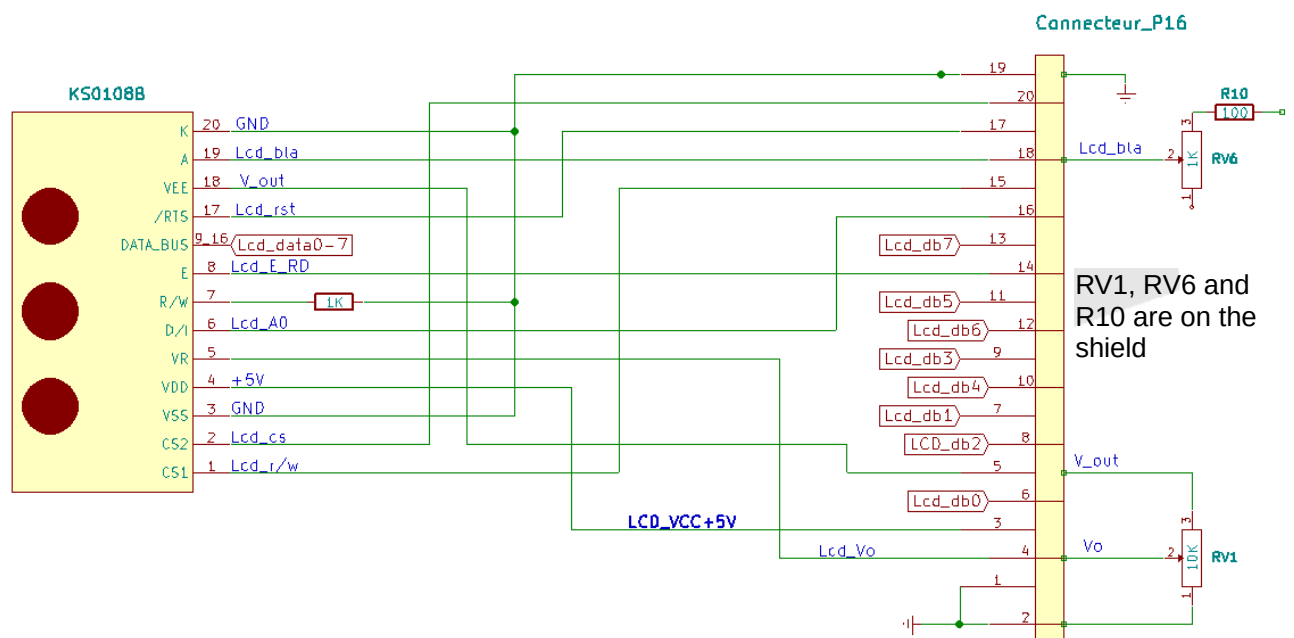

RV1, RV6 and R10 are on the shield

Arrangement for the P16 connector (top line) to the pin assignment of the KS108A (bottom line of the table):

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	X	17	18	19	20
GN D	G ND	+5 V	V 0	V out	D B0	DB 1	DB 2	DB 3	DB 4	DB 5	DB 6	DB 7	RD	R/ W	Lcd A0	R/ W	RST	Bla LCD	Blk Lcd	Cs
3	3	4	5	18	9	10	11	12	13	14	15	16	8	1	6	7	17	19	20	2

Warning



Look out :

Pin 7 of the screen should be connected to ground by a 1 kohms Resistor.

If the display is reversed, switch CS1 and CS2. (Pin 1 and 2 on the screen)

7.6 LCD Oled Screen 2,42 " , SSD13xx :

SSD screens are ideal for the reuse of small / medium cases

SSD 1306:

see page 13

SSD 1309 : Ecran OLED size 2,42 " , very easy to manage in I2C mode.

Choose SSD 1306 in the Desktop screen, it's the same driver.

Note: There are different versions of this display with connections on the side or on the top, It will therefore be necessary to ensure that the same components allow the selection of the SPI or I2C display type.

Circuit préparation :

Remove resistance R4 (which defines a SPI communication mode) and place a bridge on R3 and R5 as below to select I2C communication via SDA and SCLK signals.


In addition, it is necessary to place a resistance of 10 kohm between the +5V and the point Res (reset) and a capacitor of 100nF at qq. UF between pin Res and mass VSS,

Connect SDA and SCL and 5V power to P2 connector.

The I2C address of the screen is set by default to the correct value.

Note on the power supply.

The circuit can be supplied with 5V without worry because it has its own 3.3V regulator.

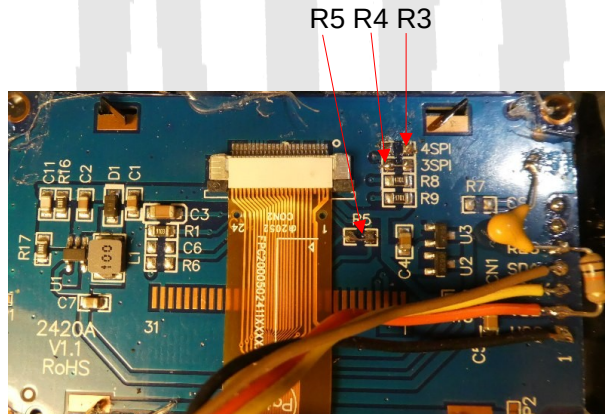

7.6 Summary of Arduino, Ports, P16 and Display Connections

Note: Column 2560 is for information only

The table is ordered according to the number of the pins of P16




2560	Core	Port	P16	Signal	7565P	7920	KS108
OV Gnd			1	Blk Display	14	20	20
OV Gnd			2	Vss	10	1	3
+5V Vss			3	Vdd	9	2	4
NC	NC	X	4	Vo or Vr (pt Medium RV1)	x	3	5
NC	NC	x	5	Vee or Vout (towards 1 side of RV6)	x	18	18
22	74	A0	6	DB0	1	7	9
23	71	A1	7	DB1	2	8	10
24	72	A2	8	DB2	3	9	11
25	69	A3	9	DB3	4	10	12
26	70	A4	10	DB4	5	11	13
27	67	A5	11	DB5	6	12	14
28	68	A6	12	DB6	7	13	15
29	65	A7	13	DB7	8	14	16
30	83	C7	14	/RD (or RD or E)	16	6	8
31	84	C6	15	WR (or RW)	15	5	7
32	85	C5	16	Lcd A0 (or RS, /DI)	14	4	6
33	86	C4	17	:RST (or /RES)	13	17	17
			18	Midpoint RV6	x	x	19
35	87	C2	19	Led Backlight 100 ohms	11	19	20
34	87	C3	20	/CS (CS1)	12	16	1
				(CS2 on KS108)	X	X	2
				PSB	X	15	x

Remarks	x			non-existent
KS108	1	CS1		Linked to Lcd_WR
	2	CS2		Linked to Lcd_Cs
	7	R/W		Grounded by R 1k ohms
ST7920	15	PSB		PSB signal to connect to + 5V
	16			Not connected
				No RV6 potentiometer
7565P				No RV6 potentiometer

8 Appendices :

8.1 Remove the TTL / RS232 converter from the FrSky DHT module.

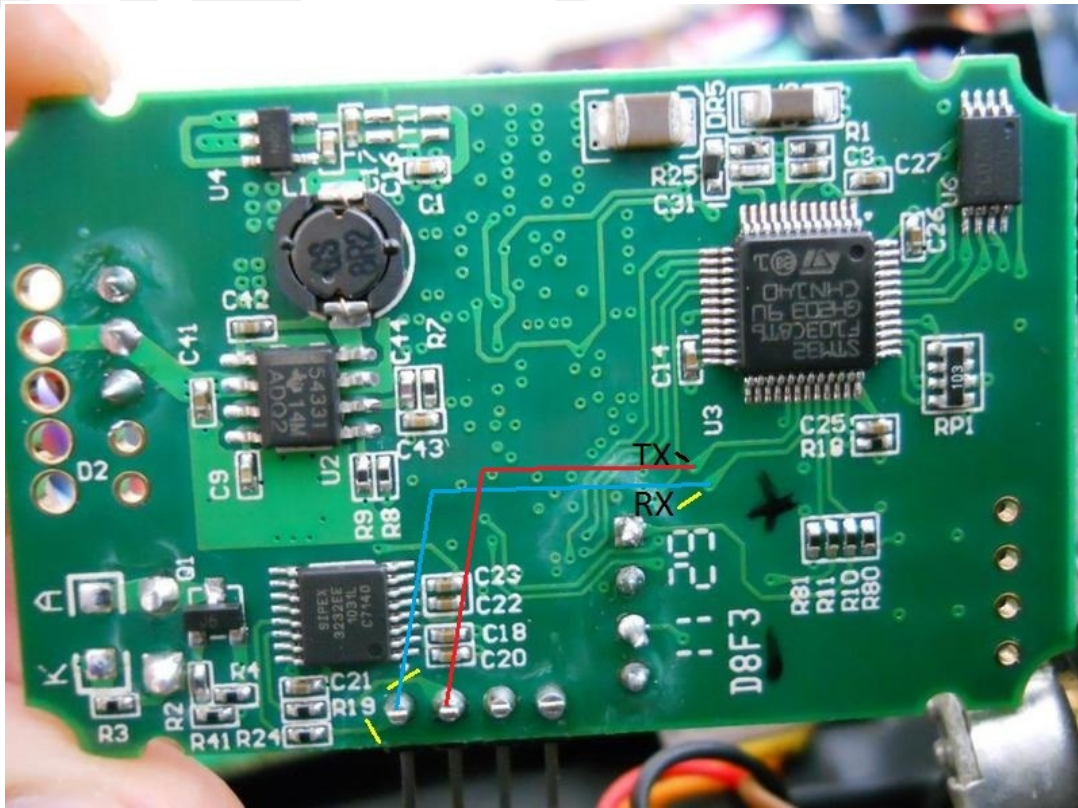


The DHT module originally incorporates an RS232 <> TTL converter on the telemetry link. This link is also used for updating the firmware of the module. If you no longer want to update this module (there will be more new versions anyway) it is advisable to remove this converter, which will allow to directly connect these signals to the input telemetry outputs and avoids the RS232 / TTL converter wiring described on page 7 of this document.

In the end, the operation is relatively simple:



Locate the Tx and Rx exit points on the map

- On the circuit board, cut the two tracks arriving at these two points
- (the two yellow lines near C21 and R19)
- Directly connect Tx and Rx to the points shown in the following view
- It will of course be necessary to bridge the connections that are no longer made by the converter on the card by connecting the following points:
- Note: The blue link in the receive line is a 220 ohm resistor

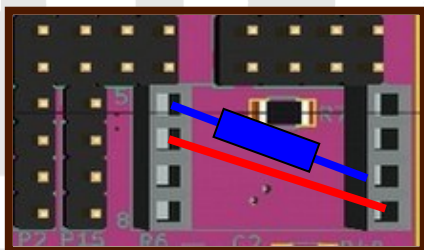

NOTE: If you are using the [2.1 shield](#), connect these points crosswise (1> 5 and 2> 6) to account for the error described at the beginning of the document

9 Placement of components :

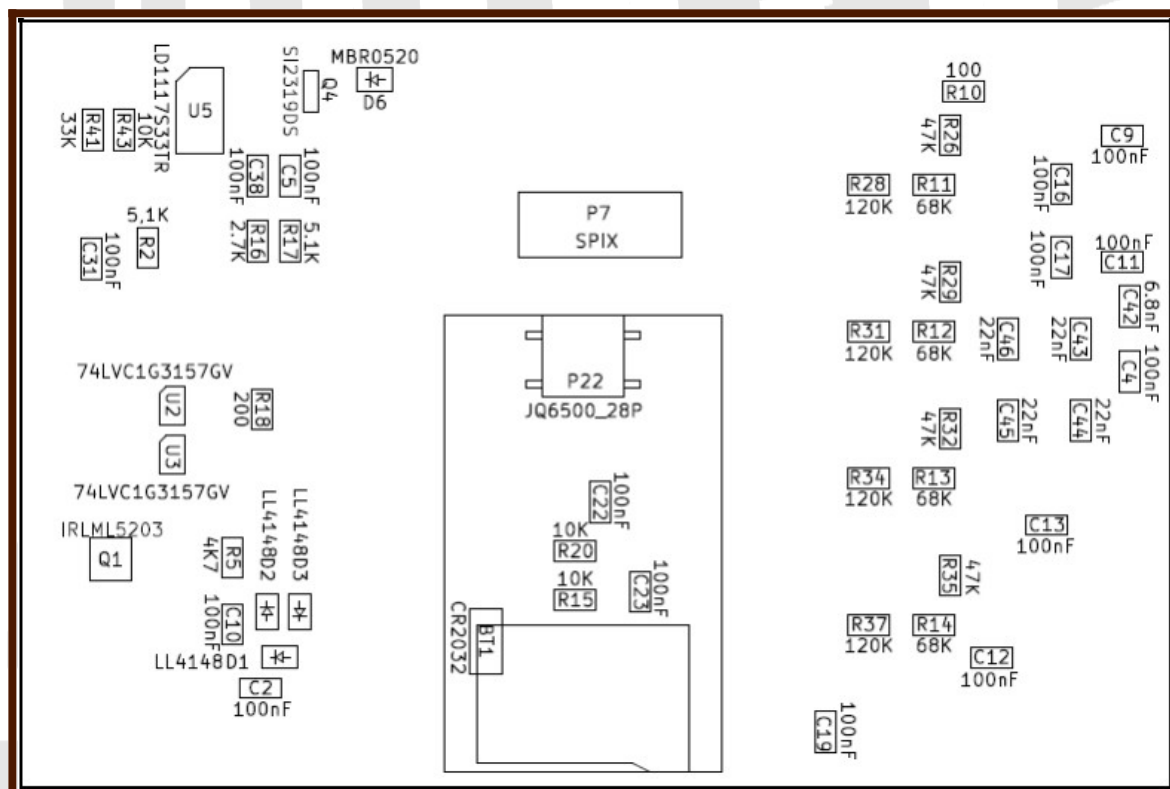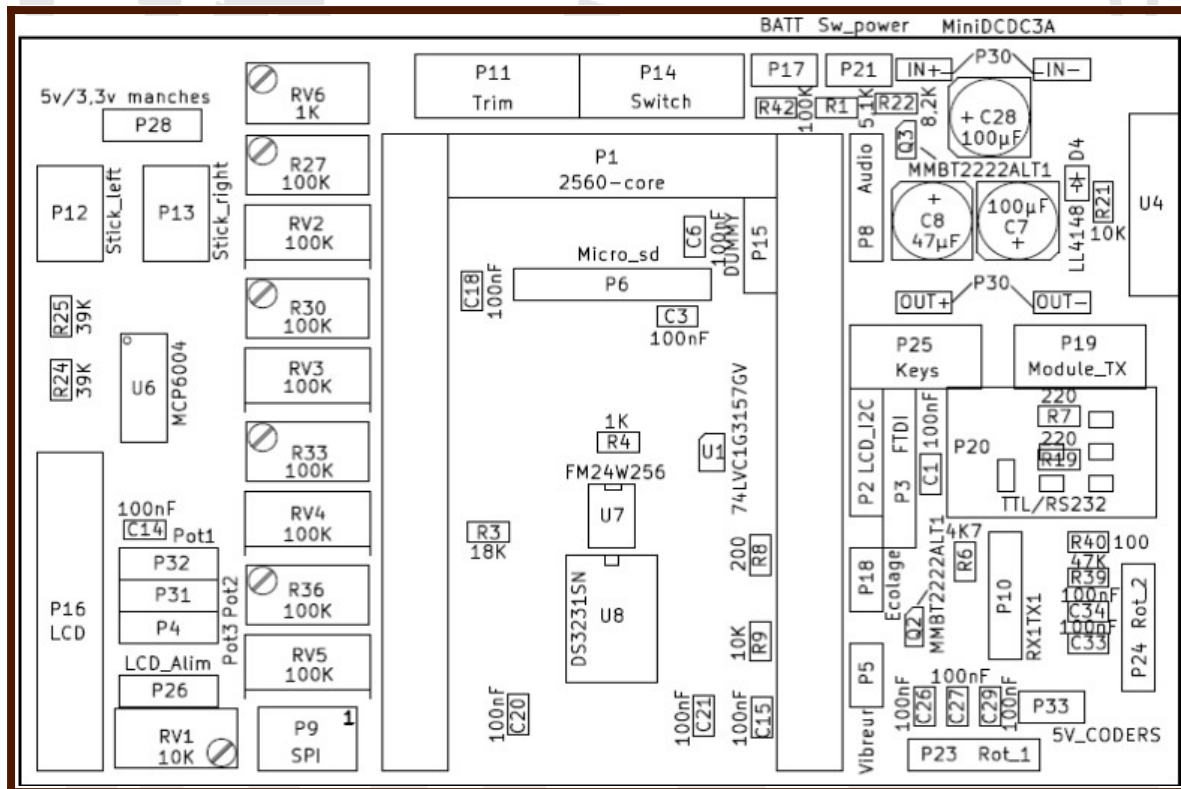

10 Various Tips

- Solder BT1 (clock battery connector) with an angled connector coming out under the JQ6500 (beware of short circuits with the pins of the core).
- Do not wire your SD card until you have tested all functions as it may block access to the F-Ram and clock if one of them fails.
- if your I2C port does not work (the F-Ram, the DS3231 clock and the SSD1306 use it), this can come from a defective DS3231. In this case, lift the legs 15 and 16 (sda and scl).
- For the adjustment of 4 sticks, there are 4 SMD pads (W1 to W4 solder side). For my part I preferred to place my multimeter tip on the legs 1,7,8 and 14 of the MCP604. This avoids turning over the shield.

Another solution: Place yourself on the corresponding pin of the Core circuit to benefit from a "non-slip" contact, see page 21.

- Some of us had problems with false contacts. A toothbrush with either alcohol to burn (my preference) or acetone (a strong one to my taste) can help you clean the shield of any solder particles.
- The PM-5033 is not very easy to find. The small DC-DC converter which is planned in double implantation of the 5v, can be an alternative solution. For easy installation, solder 4 two-point connectors on the shield (IN +, IN-, OUT + and OU-), then solder 4 x two-point connectors under the converter. Then solder all of the 4 connectors of the shield over the 3 large capacities.

If you notice any errors (and there are some), please contact me (pierrotm77) through the forum posts