

MaxAir HVAC Setup Guide

MaxAir will initially be configured as a WiFi AP (Access Point) named MaxAirHotspot, connect to the AP using the password **1234567890** and browse to IP address **192.168.5.50** where you will be presented with the initial connection screen.

Select your local WiFi SSID from the dropdown list and enter the associated password.

Alternatively, if you want MaxAir to operated as a 'stand-alone' AP, just click to select AP Mode.

Finally click on 'Set and Restart'.

If working in AP Mode you will be presented with the MaxAir login screen, otherwise reconnect to your local AP and browse to the IP address associated with MaxAir (if your AP is using DHCP, then access your router to determine which IP address has been allocated).

The system can be accessed from a suitable WEB browser using its IP address on the local network. The system can be configured with both a wireless and/or an Ethernet wired connection.

The default login credentials are username – **admin** and password - **maxair**



MaxAir - Smart Thermostat

The 'Connect To WiFi' screen features an orange header. Below it is a dropdown menu showing 'SKY5SIRH'. A 'Password' input field is present. An 'AP Mode' radio button is located below the password field. A large orange button labeled 'Set and Restart' is at the bottom. A language selection bar at the very bottom lists: English - Portuguese - Français - Română - Latviešu - Italiano - German.

MaxAir - Smart Thermostat 1.0 - Build RC1

© BrainMax 2020. All Rights Reserved




MaxAir - Smart Thermostat

The 'Please Sign In' screen has an orange header. It contains a username input field with 'admin' entered, and a password input field represented by dots. A 'Remember me' checkbox is checked. A large orange button labeled 'Login' is at the bottom. A language selection bar at the very bottom lists: English - Portuguese - Français - Română - Latviešu - Italiano - German.

MaxAir - Smart Thermostat 1.0 - Build RC1

© BrainMax 2020. All Rights Reserved

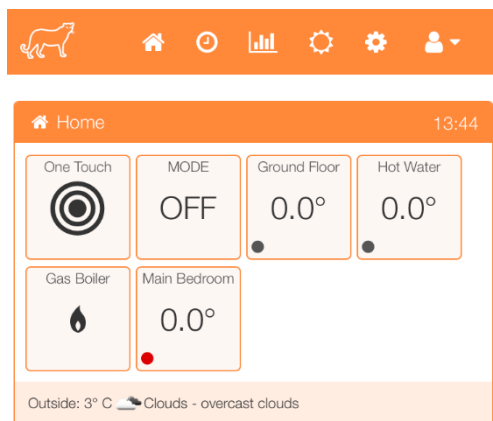

MaxAir - Smart Thermostat 0.1 - Build Beta 4.0

© BrainMax 2020. All Rights Reserved

The Home screen layout will be dependent on whether the system is operating in HVAC or Boiler Mode. The example shows a system operating in Boiler Mode with two zones. Ground Floor is the central heating zone and Hot Water is the hot water zone. The example system is configured with a 'stand-alone' temperature sensor located in the Main Bedroom.

Before use the system must be configured to match the local system to be controlled.

Configuration

The system configuration follows a four-layer model: -

Schedules
Zones
Devices
Nodes

Each layer is built from the previous layer e.g. Devices are built using Nodes and Schedules are built using Zones.

Nodes

The nodes are the basic hardware devices that control the system. Some nodes are auto-detected, others must be defined manually.

Examples of auto-detected nodes are MySensors temperature sensors and MySensors relay modules, while examples of manually defined devices are GPIO connected relays, I2C relay modules and Tasmota type switches.

Devices

Devices define how the system recognises the nodes hardware, devices are either Temperature Sensors or Relays. The devices are defined manually.

Zones

For HVAC systems a single zone will be created to control the heating, colling and fan components. Further zones can be added for example to control Tasmota switch/s.

Schedules

Schedules are time related definitions which dictate when the system performs actions and the parameters associated with those actions. An example would be a schedule to control the hot water zone, with a start time Of 0600 hours, a stop time of 0930 hours and a maximum temperature of 40°C.

Example Configuration

The system to be configured comprises the following elements:


1. A HVAC system requiring 3 controller relays
2. A MySensors Temperature to control the HVAC system.
3. A MySensors Temperature to measure a bedroom temperature

The above will determine the MaxAir nodes requirements as follows:

1. Two MySensors Temperature Sensors
2. Three GPIO pins for relays
3. A serial gateway device to send/receive messages to/from 1 and 2

Step 1 – Configure the Gateway

Gateways can be connected directly to MaxAir controller using a serial interface or network connected using either WiFi or Ethernet.

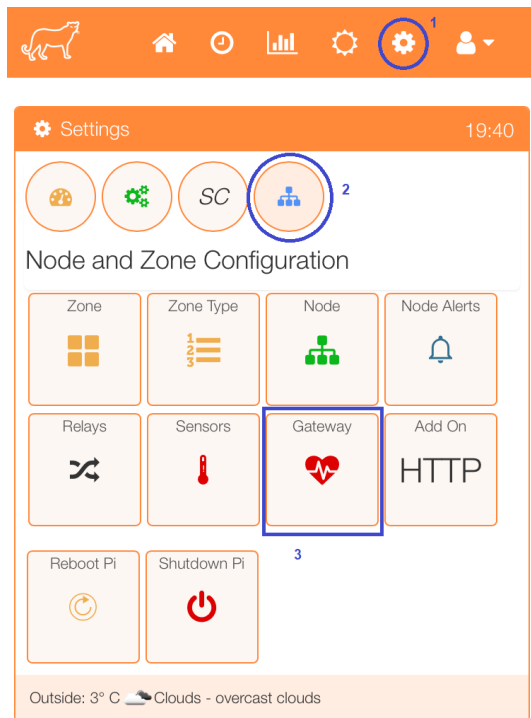

Select the Gateway menu item from the Settings/Node and Zone Configuration menu.

Smart Home Gateway

Smart Home Gateway has nRF24L01 to communicate with the nodes and Serial to connect to your home automation controller.

☒ Enable Gateway

☒ Enable Outgoing Messages (GPIO Outputs Enabled by Default)

Gateway type

Serial

Serial Port Location

/dev/ttyS3

Baud Rate for Serial


9600

Timeout

3

Gateway Version

0

 Gateway Script Process Info

PID	20095
PID Running Since:	Tue Feb 23 13:01:33 2021
Script Re-Started in Last 5 Minute:	0

Reset GW


Search GW

Save

Close


The Gateway configuration screen will be displayed. Enter the required parameters and click the 'Save' button.

Once the gateway has been configured, the script file which executes the task on a regular time interval must be set to run, a menu item exists to setup this task.

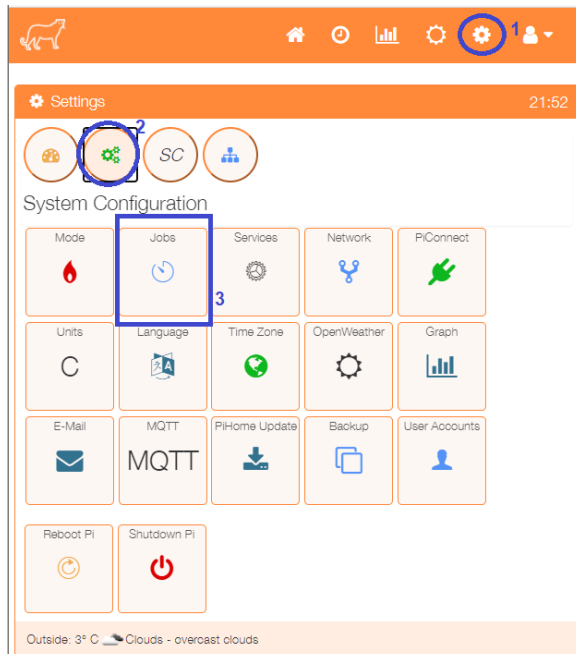

Select the Jobs menu item from the Settings/System Configuration menu.

Click on the 'Add Job' button.

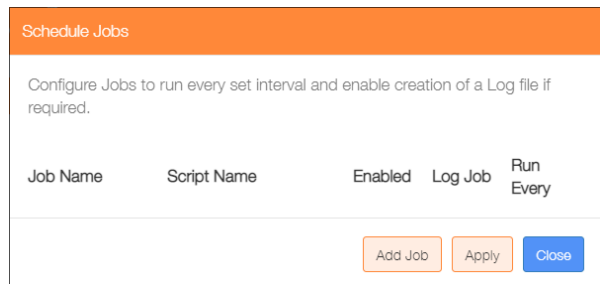

Add New Scheduled Job

Add New Job Name, Script Name, Log On/Off and run Interval.

☒ Enabled

Job Name Descriptive name for the Scheduled Job.

Script Name Full Path Name for the executable Job Script.

Run Every Run the Jobs Script Every x Seconds.

☐ Log Job

Enable the Job

Enter a name for the job

Enter the full path for the script file

`/var/www/cron/check_gw.php`


Set how often the task should run, see note below

Note: log files will be written to directory `/var/www/cron/logs/`

Note: If a numeric value 'x' is entered, then the task will execute every x seconds. If a time value is entered eg '02:00', then the task will execute once a day at the set time, in the case of this example at 2AM.

Step 2 – Layer 1 Configuration - Connect the Nodes

Once the gateway is running, connect the MySensors Temperature Sensor devices, so that they can be detected.

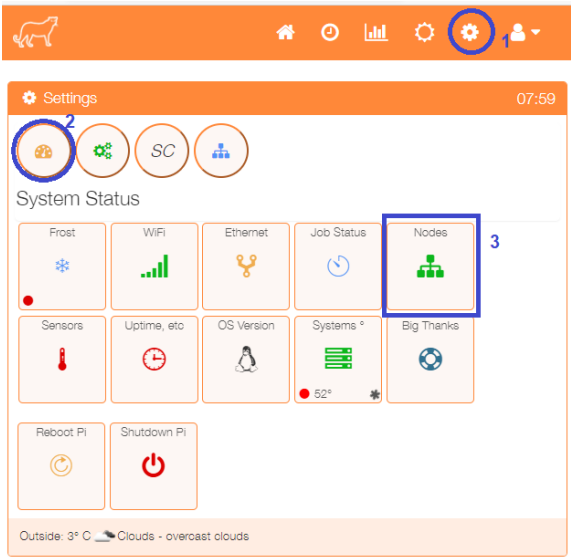


To show the nodes currently available select the Nodes menu item from the Settings/System Configuration menu.

The listing shows that three Temperature Sensor nodes have been auto-detected.

List Nodes			
List of all Nodes and the maximum number of associated Child IDs			
Node ID	Max Number of Child IDs	Name	Type
21	0	Temperature Sensor	MySensor
36	1	Temperature Sensor	MySensor

Close

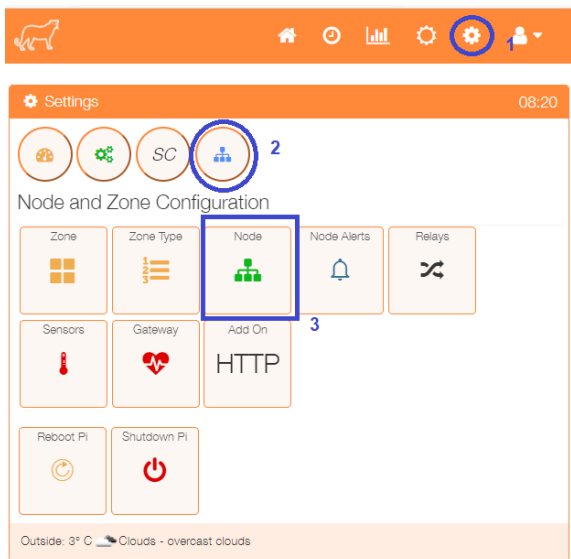

The example configuration uses relays connected via GPIO pins, in order to achieve this a GPIO node needs to be created. Select Node from the Settings/Node and Zone Configuration menu.

Click on 'Add Node'.

Node Setting				
You can Add GPIO, I2C relay board as Node, Wireless Nodes are automatically discovered.				
Type	Node ID	Max Number of Child IDs	Name	

Close Add Node

Add Node

You can Add GPIO, I2C relay board as Node, Wireless Nodes are automatically discovered.

Node Type Node you want to make available for Zone and Boiler controller

GPIO

Select GPIO from the Node type dropdown list

Node ID I2C board ID or 0 if you want to use Raspberry Pi GPIO

0

Enter a value of 0

Close

Save

Click on the 'Save' button to update the nodes table.

Re-displaying the nodes from the Settings/System Configuration menu will show that the GPIO node has been added.

List Nodes

List of all Nodes and the maximum number of associated Child IDs


Node ID	Max Number of Child IDs	Name	Type
0	0	GPIO Controller	GPIO
21	0	Temperature Sensor	MySensor
36	1	Temperature Sensor	MySensor

Close

This completes the Layer 1 configuration.

This step will add the Relay and Temperature Sensor devices.


The example system will require 3 relays and 1 boiler relay.

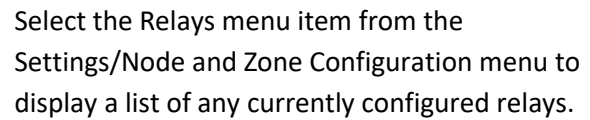

Controller Relay Settings

Edit or Delete the Relay Configuration.
Allocated Relays Cannot be Deleted until removed from the Zone or Controller.
Last Seen Date/Time is shown with Controller Relay Name.

Close Save Add Relay

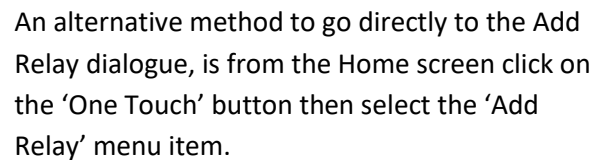

Choose the Child ID from the dropdown list, in the case of a GPIO controller, this will be a GPIO pin.

+ Add Relay

19:08

Relay Type

(Zone or Heat or Chill or Fan)

HVAC - Heat

Relay Name

(Identify where the Relay is being used.)

HEAT

Relay ID

Node ID for the Relay

0 - GPIO Controller

Relay Child ID

33

Submit

Cancel

Outside: 2° C

Clouds - overcast clouds







Repeat the process to add the two further Controller relays.

Re-selecting the Relays menu item from the Settings/Node and Zone Configuration menu will display the updated list of currently configured relays.

This dialogue can be used to Add/Delete/Edit the relay configurations.

Controller Relay Settings

Edit or Delete the Relay Configuration.
Allocated Relays Cannot be Deleted untill removed from the Zone or Controller.
Last Seen Date/Time is shown with Controller Relay Name.

Relay Name	Type	Node ID	Relay Child ID	
HEAT (2020-03-31 15:18:00)	HVAC - Heat	0	33	 
COOL (2020-03-31 15:18:00)	HVAC - Cool	0	35	 
FAN (2020-03-31 15:18:00)	HVAC - Fan	0	40	 


Close

Save

Add Relay

Temperature Sensors

The example system will use 3 temperature sensors, one for the Central Heating, one for the Hot Water and a third to monitor a bedroom temperature. The configuration process is very similar to that used to configure the relay devices.

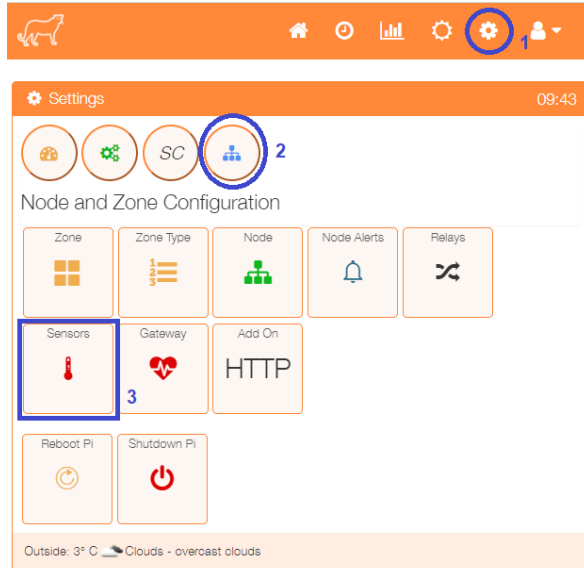

Select the Sensors menu item from the Settings/Node and Zone Configuration menu to display a list of any currently configured sensors.


Click on the 'Add Sensor' button to configure the first sensor

Temperature Sensor Settings

Edit or Delete the Temperature Sensors Configuration.
Temperature Sensors Allocated to a Zone Cannot be Deleted.
Last Seen Date/Time is shown with Sensor Name.

Sensor Name	Node ID	Child ID	Zone Name	Show	
-------------	---------	----------	-----------	------	--

Close Save Add Sensor

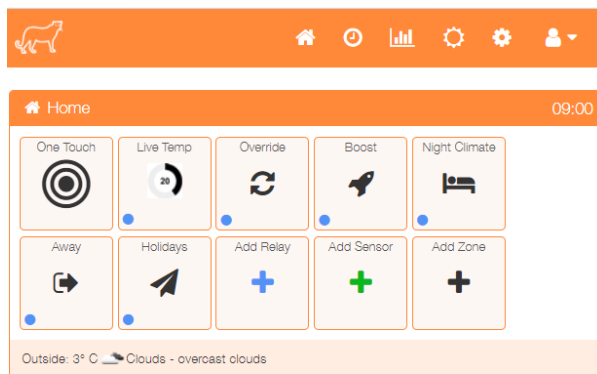

An alternative method to go directly to the Add Sensor dialogue, is from the Home screen click on the 'One Touch' button then select the 'Add Sensor' menu item.

+

Add Sensor

13:32

Before System Controller

When Sensor is NOT Allocated to a Zone, Locate Tile either Before or After the System Controller Tile on the Home Screen

Index Number

In the List of sensors where you want to place this sensor on home screen

1

Sensor Name

HVAC

Temperature Sensor ID

Node ID for the Sensor

21 - Temperature Sensor

Temperature Sensor Child ID

Node ID for the Sensor

0

Frost Protection

The System will protect itself against frost, To Disable protection you can set the temperature to 0

2

Frost Controller

The zone controller to be activated when frost protection is triggered by this temperature sensor.

HEAT

Submit

Cancel

Outside: 2° C

Clouds - overcast clouds

Show either before or after the system controller on the Home screen

Provide a name for this sensor device

Choose the Child ID from the dropdown list, for nodes with only 1 sensor, this will be 0

If frost protection is enabled, then select the zone to be activated on protection

Repeat the process to add any other temperature sensors.

This dialogue can be used to Add/Delete/Edit the sensor configurations.





All the sensors are shown as 'Not Allocated' until the later zone configuration step has been completed.

Temperature Sensor Settings

Edit or Delete the Temperature Sensors Configuration.

Temperature Sensors Allocated to a Zone Cannot be Deleted.

Last Seen Date/Time is shown with Sensor Name.





Sensor Name	Node ID	Child ID	Zone Name	Show	
HVAC (2020-12-17 07:29:25)	21	0	HVAC	<input type="checkbox"/>	 
Main Bedroom (2020-12-17 07:51:42)	36	1	Not Allocated	<input checked="" type="checkbox"/>	 

Close

Save

Add Sensor


Edit or Delete the Temperature Sensors Configuration.
Temperature Sensors Allocated to a Zone Cannot be Deleted.
Last Seen Date/Time is shown with Sensor Name.

Sensor Name	Node ID	Child ID	Zone Name	Show	
HVAC (2020-12-17 07:29:25)	21	0	HVAC	<input type="checkbox"/>	 
Main Bedroom (2020-12-17 07:51:42)	36	1	Not Allocated	<input checked="" type="checkbox"/>	 

Close Save Add Sensor

System Controller Configuration

Three relays are used to activating the heating, cooling and fan functions of the HVAC system, these relays were added as relay devices above and now need to be associated with the 'System Controller'.

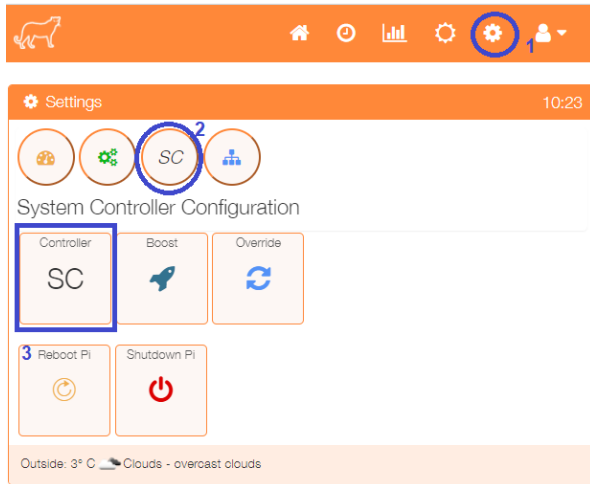

Select the SC menu item from the Settings/System Controller Configuration menu to display the configuration screen.

System Controller Settings

System Controller Settings and how it interacts with the System, i.e. Wireless Controller or Connected to GPIO Pins.

☒ Enable System Controller

System Controller Display Name

HVAC STATE

Enter a name for this controller

HEATING Relay ID System Controller Heating Switching Relay

HEAT

Select the HEATING relay from the dropdown list

COOLING Relay ID System Controller Cooling Switching Relay

COOL

Select the COOLING relay from the dropdown list

FAN Relay ID System Controller Fan Switching Relay

FAN

Select the FAN relay from the dropdown list

Hysteresis Time Delay Between Stop and Start of the System in minutes, Default is 3 minutes.

3

Enter a hysteresis value in minutes

Max Operation Time Continuous Max Running Time of the System in minutes, Set to 0 to disable.

60

Enter a maximum running time in minutes

Close

Save


Click on 'Save' to update

This completes the Layer 2 configuration.

Layers 1 and 2 define the basic hardware configuration of the system.



Step 4 – Layer 3 Configuration - Add Zones

The example configuration has a single zone to control the HVAC system..

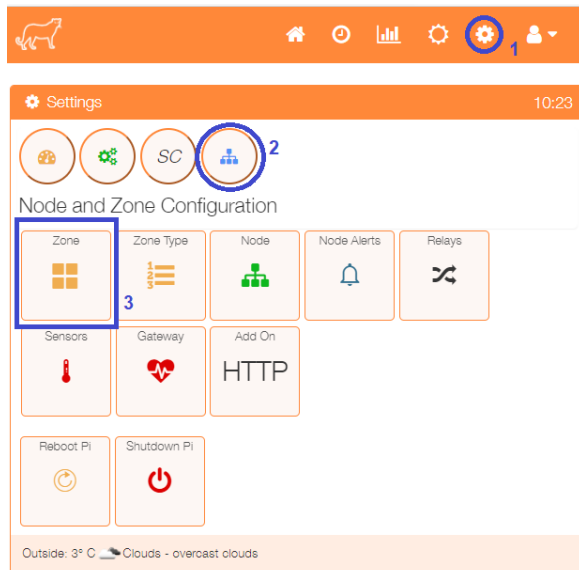

Select the Zone menu item from the Settings/Node and Zone Configuration menu to display a list of any currently configured sensors.

Click on the 'Add Zone' button to configure the first zone.

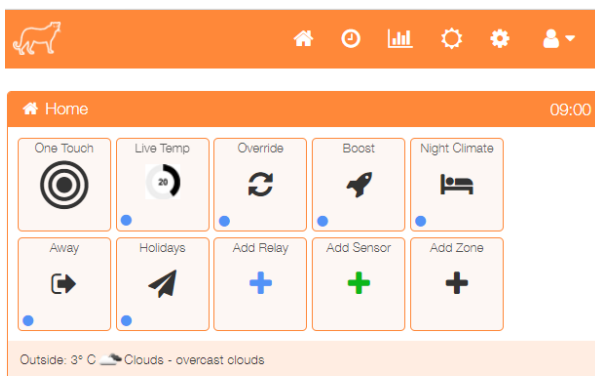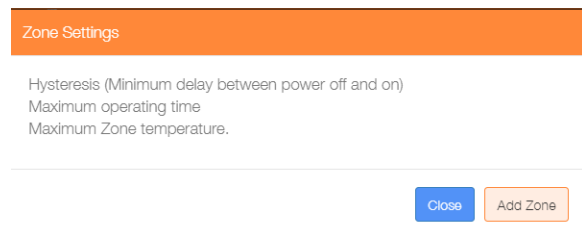

An alternative method to go directly to the Add Zone dialogue, is from the Home screen click on the 'One Touch' button then select the 'Add Zone' menu item.

MaxAir - Smart Thermostat 0.1 - Build Beta 4.0
© BrainMax 2020. All Rights Reserved

There are currently three types of zone, HVAC, Immersion and Lamp, the configuration of the Add Zone dialogue will depend on the type of zone selected. Immersion type zones will disable 'System Controller' selection, while Lamp type zones will disable all temperature sensor related selections, together with the 'System Controller' selection, as these parameters do not apply to these zone types.

The example below shows a typical HVAC zone configuration. Once the parameters have been entered, click on the 'Submit' button.

☒ **Enable Zone** Enable this Zone if you want this Zone to be controlled

Index Number In the List of Zones where you want to place this Zone on the home screen

Zone Name Zone display name

Zone Type Zone type i.e. Heating, Hot Water or Electrical Immersion

Default Temperature Default temperature this Zone, used when no scheduled temperature is active.

Minimum Temperature Minimum temperature this Zone can reach before Zone cooling will shut-off for safety

Maximum Temperature Maximum temperature this Zone can reach before Zone heating will shut-off for safety

Maximum Operation Time Maximum operation time in minutes of any continuous time

Hysteresis Time Minimum delay between Zone off and on

Temperature Setpoint Deadband Check link for [Deadband](#)

Temperature Sensor Node ID for the Sensor

Boost Button ID Boost console if you have any

Boost Button's Child ID Boost button number if you have any

System Controller

Outside: 2° C ☁ Clouds - overcast clouds

Repeat the process to add any other zones.

Re-selecting the Zone menu item from the Settings/Node and Zone Configuration menu will display the updated list of currently configured zones.

This dialogue can be used to Add/Delete/Edit the zone configurations.

Zone Settings

Hysteresis (Minimum delay between power off and on)

Maximum operating time

Maximum Zone temperature.

HVAC

Min 10° , Max 30° - Sensor: 21


Close

Add Zone

This completes the Layer 3 configuration.

Step 5 – Layer 4 Configuration - Add Schedules

The example configuration will have a single schedule to control the Central Heating and Hot Water zones.

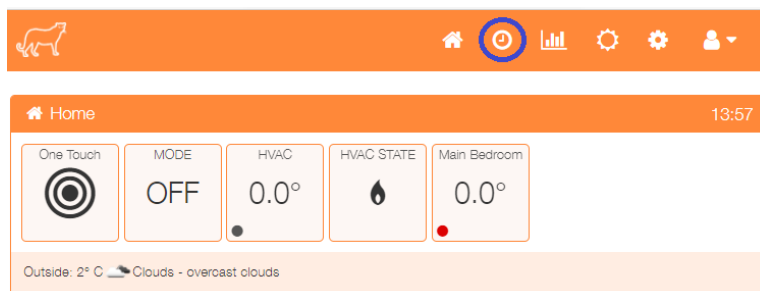

Click on the toolbar clock icon to configure the first schedule.



Click on + or 'Add Schedule'

The Add schedule screen will be presented, the example below shows:

- An enabled schedule
- Operated Monday to Friday
- Titled Weekdays AM
- Operated between 0630 hours and 0930 hours
- Uses 19°C as the Target temperature

Add Schedule14:01

☒ Enable Schedule

☐ Sun☒ Mon☒ Tue☒ Wed☒ Thu☒ Fri☐ Sat

WeekDays AM

Start Time

06:30🕒

End Time

09:30🕒

Select Zone/s

☒ HVAC☐ Coop Start 🌿📘

Temperature: 19°

CancelSubmit

Outside: 2° C 🌤️ Clouds - overcast clouds

Once configured, click on the ‘Submit’ button to add the schedule.

Add any other schedules as required.


This completes the Layer 4 configuration.

Step 6 – Add Jobs

In order for the system to function a number of tasks need to operate at pre-determined time intervals. We have already enabled the check_gw task, in addition we need to add:


Job Name	Script Name	Run Interval in seconds
Controller	/var/www/cron/controller.php	60
system_c	/var/www/cron/system_c.php	300
weather_update	/var/www/cron/weather_update.php	1800
reboot_wifi	/var/www/cron/nmcli_reboot_wifi.sh	120

Add each job using the same process as used to add the gateway job

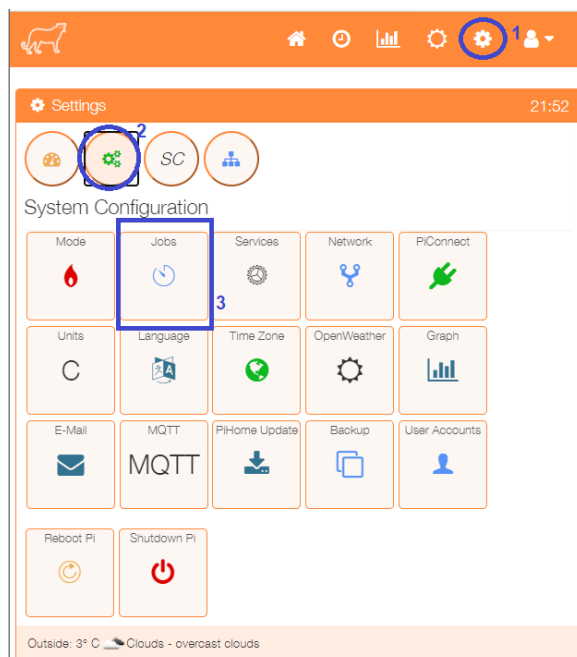

Select the Jobs menu item from the Settings/System Configuration menu.

Click on the 'Add Job' button.

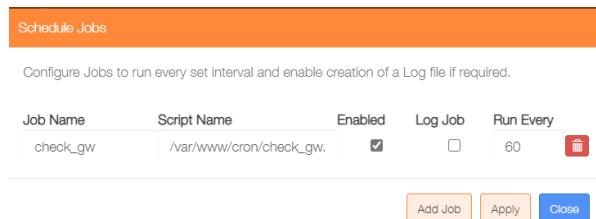

Add New Scheduled Job

Add New Job Name, Script Name, Log On/Off and run Interval.

☒ Enabled

Job Name Descriptive name for the Scheduled Job.

Script Name Full Path Name for the executable Job Script.

Run Every Run the Jobs Script Every x Seconds.

☐ Log Job

Close Save

Then add the next job and repeat until all jobs have been added.

THIS COMPLETES THE BASIC SETUP