



Version 1.0 Beta

The author of this document is NOT affiliated with Lucasfilm Ltd. LLC. All brands and trademarks listed are the exclusive property of their respective Owners.

*DIYino Prime, DIYino Stardust, and DIYino Proto are trademarks of **Protowerkstatt**.*

*Brewboard is a trademark of **Saber Republic***

Table of Contents

Introduction.....	3
Using X S.T.R.E.A.M. GUI.....	3
Starting a Session.....	3
Loading Default Settings.....	4
Ending a Session.....	4
Home Screen.....	4
Profile Editor Screen.....	4
Color Tune Screen.....	4
Options Screen.....	5
Wiring and Pinouts.....	6
Wiring for Home Brew Neopixel Variant.....	7
Basic Operation.....	8
Activation/Deactivation.....	8
Blaster Mode.....	8
Lockup Mode.....	8
Menu Mode.....	9
Entering Menu Mode.....	9
Changing Settings.....	9
Exiting Menu Mode.....	9
Switching Profiles (Sound Fonts).....	9
Firmware Features.....	10
Sound Files (SD Card).....	11
Sound File Format.....	11
Legal.....	12

Introduction

The Next-Gen Saber Transmit, Receive, Editing, and Management (X S.T.R.E.A.M.TM) software consists of two components: 1) A graphical user interface (GUI) which runs on a Windows PC, and 2) a firmware component which runs on an nRF52 microcontroller. The firmware is specifically designed to operate on the *DIYino Infinity*TM (version 1.1), FX prop boards produced by **Protowerkstatt** (<https://www.protowerkstatt.com/>) or home-brew equivalent using an Adafruit Feather nRF52 (<https://www.adafruit.com/product/3406>) .


Using X S.T.R.E.A.M. GUI

The X S.T.R.E.A.M. GUI consists of several screens that allow you to configure your saber's operating parameters.

Note: Before using the GUI, complete wiring your saber's speaker, power (if not capable of USB power), and activation button. **The activation button must be wired according to one of the wiring diagrams provided. See The section on wiring appropriate for your setup later in this document.**

Note: Instructions assume you have installed the Java Runtime Environment (JRE) and that Java is in your Windows path.

Starting a Session

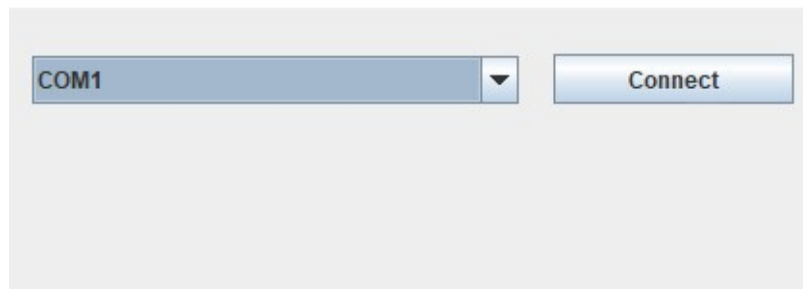

To connect the X S.T.R.E.A.M. GUI to your saber, follow these steps.

1. Remove kill key or turn on kill switch to enable battery power to your saber.
2. Connect USB cable to both the saber's microcontroller board and your PC.
3. Start the X S.T.R.E.A.M. GUI from the distribution directory by double-clicking on the **XStreamGUI.jar** file. This will bring up the **Connect Screen**.
4. Select the appropriate COM port from the pull-down menu then press the **Connect** button.

The author of this document is NOT affiliated with Lucasfilm Ltd. LLC. All brands and trademarks listed are the exclusive property of their respective Owners.



DIYino Infinity is a trademark of Protowerkstatt.

Note: Your saber may reboot at this time and play the boot sound. This is normal.

5. If this is your first session, you should load default settings or your saber may not operate properly. To do this, see **Loading Default Settings** section of this document.



Loading Default Settings

To load default settings, from the Home Screen, follow these steps:

1.  Click the **Load Factory Defaults** icon
2. Wait 5 seconds
3.  Click the **Save to Saber** button.

Ending a Session

To end your session, follow these steps:

1.  If you want to save your changes, click the **Save to Saber** button, otherwise skip to the next step.
2.  Click the **Quit** button. The S.T.R.E.A.M GUI will vanish.
3. Wait for your saber to play the boot sound.
4. Disconnect the USB cable from your microcontroller board.

Home Screen

This section is under construction.

Profile Editor Screen

This section is under construction.

Color Tune Screen

This section is under construction.

Options Screen

This screen allows for adjustment of various global options.

NOTE: The options on this screen apply to ALL profiles.

NOTE: Settings do not take effect until they are saved to saber.

Setting	Meaning
Power off after xx seconds of idle time	When the saber is on, automatically power down the saber after no motion is detected for a certain amount of time. Setting can be disabled thereby allowing the saber to stay on forever or until the battery goes dead.
Hold Switch for xx milliseconds to power off	Change the amount of time you must hold the activation button when the saber is on to power off the saber.
Deep sleep after xx minutes	Optionally enter a power saving mode after being powered off for a period of time. <i>NOTE: The benefits of this power saving mode depend on your hardware. Consult your microcontroller board's documentation to see if it supports deep sleep power saving features.</i>
One-button blaster blocks	Enables or disables the motion-activated one-button blaster block mode that is entered by rapidly pressing the main activation button.
One-button lockup	Enables or disables the one-button lockup mode entered by holding the main activation button then striking the saber.
Blade Length	Sets the number of pixels in the blade for pixel blades. Use this setting to ensure the firmware is configured for the length of your blade. <i>Note: This setting is ignored for RGB in-hilt LED sabers and has no effect in that case.</i>


Wiring and Pinouts

The microcontroller pinout configuration depends on the hardware used. See the wiring diagrams below for more details.

Note that the **Activation Switch** pin is set with the internal pull-up resistor such that the switch is activated when pulled to ground. **A normally-open momentary switch should be wired between the Activation Switch pin and ground** to control saber functions such as turning on the saber.

A 220 Ohm resistor is typically recommended on the Pixel Data Pin when using pixel blades. Refer to your pixel strip and microcontroller board documentation for details.

Wiring for Home Brew Neopixel Variant

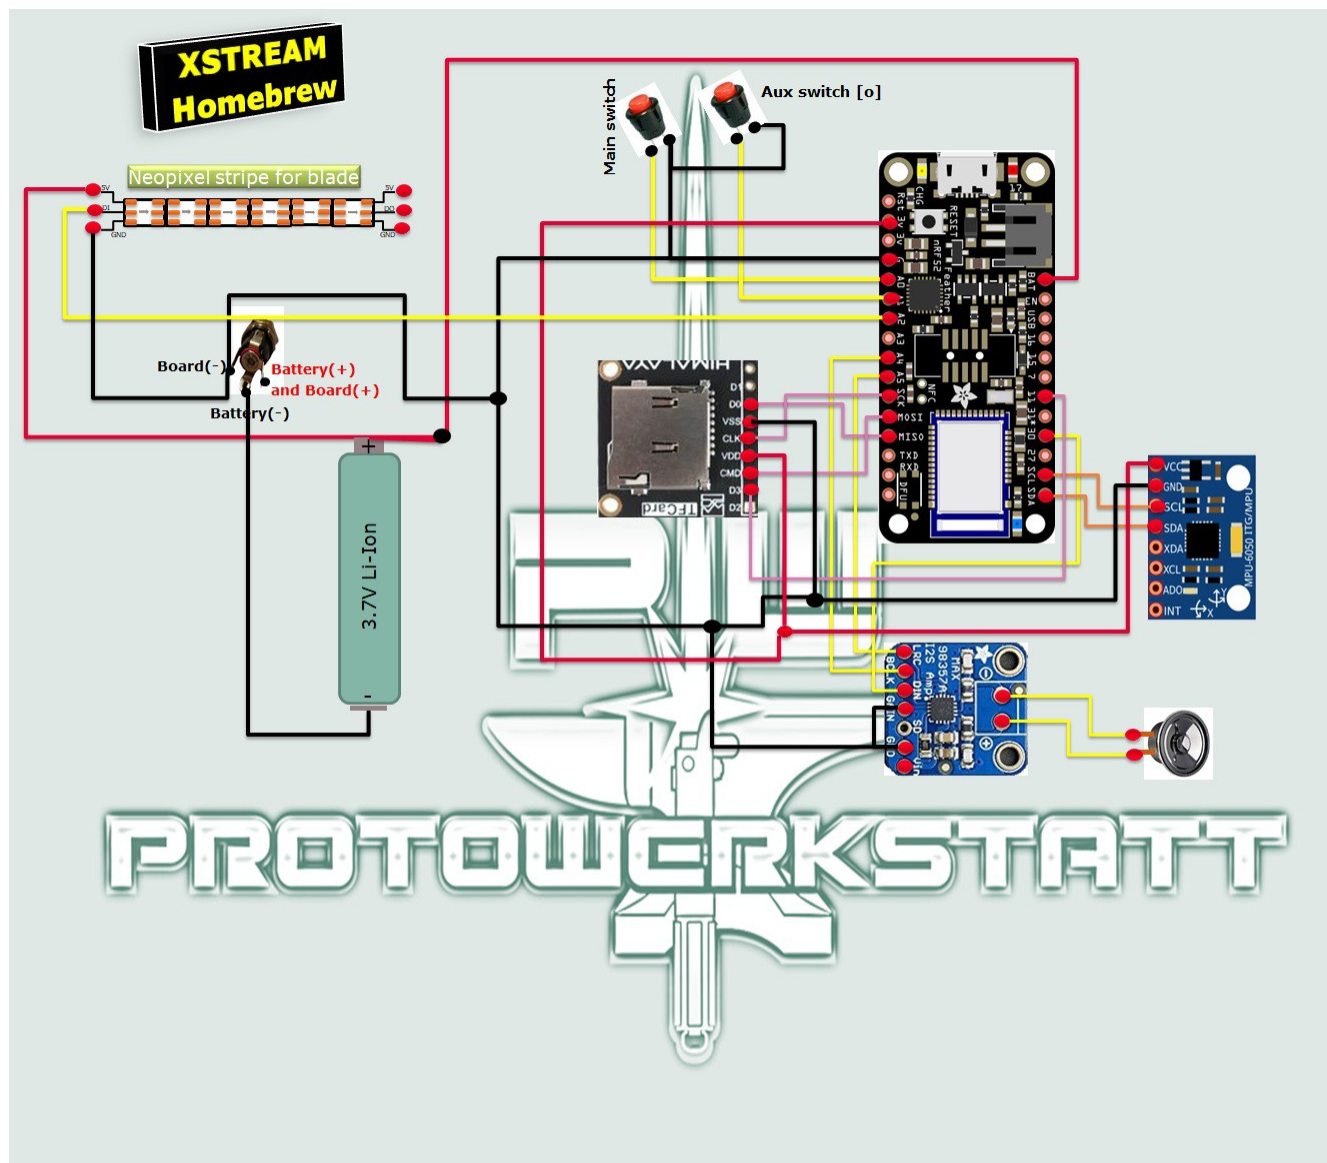

The author of this document is NOT affiliated with Lucasfilm Ltd. LLC. All brands and trademarks listed are the exclusive property of their respective Owners.
DIYino Infinity is a trademark of Protowerkstatt.

Basic Operation

This section assumes you have installed and configured the firmware making your saber ready for use.

Activation/Deactivation

With the saber off (blade is dark, sound is not playing), quickly press and release the activation button. The blade will illuminate and the sound will start playing. When you are done using your saber, press and hold the activation button to turn it off.

Blaster Mode

To enter one-button blaster mode, with the saber on, quickly press and release the activation button. The blaster sound will play and the blade will flash. The saber is now in blaster mode. Swing the saber to hear the blaster sound and see blaster effects on the blade. To exit blaster mode, quickly press and release the activation button. *Note: Some of these behaviors are influenced by settings and may change according to your selections.*

If your saber is equipped with an axillary button, quick press it to trigger a single blaster-block with each press. If the saber is in blaster-block mode as triggered by the above paragraph, a quick press of the axillary button will end blaster block mode after triggering final a blaster sound.

Lockup Mode

To enter one-button lockup mode, press and hold the activation button then strike the saber. The lockup sound will play and the blade color will change. The saber is now in lockup mode. To exit lockup mode, release the activation button. *Note: Some these behaviors are influenced by settings and may change according to your selections.*

If your saber is equipped with an axillary button, hold it in to trigger lockup. Release the axillary button to end the lockup.

Menu Mode

The firmware supports the ability to change some settings without connecting to the S.T.R.E.A.M. GUI. You may change things like motion sensitivity and select from configured blade colors in this way.

Entering Menu Mode

To enter the in-hilt menu, press and hold the activation button. Wait until the voice prompt “Menu Mode” is announced, then release the button. The saber is now in menu mode.

Changing Settings

Once in Menu mode, voice prompts will announce what setting is currently being altered. To accept a setting, press and hold the activation button until the next voice prompt is announced. To change a setting, quickly press and release the activation button. The available settings are accessed in a ring fashion so if the desired setting is accidentally scrolled past, keep quickly pressing and releasing the button and it will come around again.

If your saber is equipped with an axillary button, pressing this button will cycle through available menu options in reverse order.

Exiting Menu Mode

Once all settings have been accepted, Menu mode will automatically exit. The boot sound will play and the saber will return to the normal off state and be ready for use.

Switching Profiles (Sound Fonts)

To switch to an alternate profile, with the saber powered but off (blade is off, no sound is playing), hold the activation button then strike the saber hard enough to trigger a clash. The name of the newly selected sound font will play and the settings for the corresponding profile will be loaded.

If your saber is equipped with an axillary button, a quick press of the axillary button will advance to the next sound font.

Firmware Features

- ⌚ 3-channel LED color-change support
- ⌚ Power on/off blade ramp
- ⌚ Impact flash
- ⌚ Swing and Clash response
- ⌚ One-button motion-activated blaster-block mode
- ⌚ One-button impact-activated lockup-mode
- ⌚ Aux-button blaster-block (quick press)
- ⌚ Aux-button lockup (press and hold)
- ⌚ 10 Sound Fonts
- ⌚ Smashswitch™ profile (sound font) selection
- ⌚ Aux-button profile (sound font) selection
- ⌚ 12 blade profiles
- ⌚ Deep sleep (effectiveness depends on hardware)
- ⌚ Accent LED
- ⌚ Configuration menu
 - Sound volume
 - Main blade color
 - Flash blade color
 - 9 Swing sensitivity settings
 - 9 Clash sensitivity settings
- ⌚ XSTREAM configuration via USB

Sound Files (SD Card)

The SD card should be formatted FAT. The SD card is loaded with the menu sounds in a folder named “menu”. The sound fonts are in directories named “font<X>” where <X> is replaced with an integer from 1 to 10.

For example, the top level SD folder struture might look like this:

```
menu
font1
font2
font3
font4
```

*Note: The default menu sounds are included in the XSTREAM distribution at **distro/sd_card/menu**.*

Within each font directory, the table below shows the expected file names and meanings. Note that high and low swing sounds are optional and used for dynamic swings (“SmoothSwing” or “OmniSwing”). If no high or low swing sounds are detected by the XSTREAM firmware then playback will default to “classic” mode with no dynamic swings.

Sound Meaning	File Name Prefix	Min Index	Max Index	Example
Font ID	font	01	01	font01.wav
Power-up	out	01	16	out01.wav
Swing	swng	01	16	swng01.wav
Clash	clsh	01	16	clsh01.wav
Lockup	lock	01	16	lock01.wav
Blaster-block	blst	01	16	blst01.wav
Hum	hum	01	01	hum01.wav
Power-down	in	01	16	in01.wav
Boot	boot	01	01	boot01.wav
High Swing	swingh	01	16	swingh01.wav
Low Swing	swingl	01	16	swingl01.wav

Sound File Format

The XSTREAM firmware uses in internal audio processing rate of 22.05 kHz. For best performance, sounds should be at this native sample rate. Sounds should be in 16-bits per sample, mono, wave (.wav)

The author of this document is NOT affiliated with Lucasfilm Ltd. LLC. All brands and trademarks listed are the exclusive property of their respective Owners.

*DIYino Infinity is a trademark of **Protowerkstatt**.*

format *with NO metadata*.

Legal

End-User License Agreement for Saber Transmit Receive Editing and Management (XSTREAM)

This End-User License Agreement (EULA) is a legal agreement between you (either an individual or a single entity) and the mentioned author (JakeSoft) of this Software for the software product identified above, which includes computer software and may include associated media, printed materials, firmware, and “online” or electronic documentation (“SOFTWARE PRODUCT”).

By installing, copying, or otherwise using the SOFTWARE PRODUCT, you agree to be bounded by the terms of this EULA.

If you do not agree to the terms of this EULA, do not install or use the SOFTWARE PRODUCT.

SOFTWARE PRODUCT LICENSE

a) You are NOT allowed to make a charge for distributing this Software (either for profit or merely to recover your media and distribution costs) whether as a stand-alone product, or as part of a compilation or anthology, nor to use it for supporting your business or customers without the explicit written permission of the author.

1. GRANT OF LICENSE. This EULA grants you the following rights: Installation and Use. You may install and use an unlimited number of copies of the PC App portion of the SOFTWARE PRODUCT.

2. DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

Limitations on Reverse Engineering, Decompilation, Disassembly and change (add, delete, or modify) the resources in the compiled the assembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE PRODUCT, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Software Transfer.

You may permanently transfer all of your rights under this EULA, provided the recipient agrees to the terms of this EULA.

Termination.

Without prejudice to any other rights, the Author of this Software may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE PRODUCT and all of its component parts.

3. COPYRIGHT.

All title and copyrights in and to the SOFTWARE PRODUCT (including but not limited to any images, photographs, clipart, and examples incorporated into the SOFTWARE PRODUCT), the accompanying printed materials, and any copies of the SOFTWARE PRODUCT are owned by the Author of this Software. The SOFTWARE PRODUCT is protected by copyright laws and international

The author of this document is NOT affiliated with Lucasfilm Ltd. LLC. All brands and trademarks listed are the exclusive property of their respective Owners.

DIYino Infinity is a trademark of Protowerkstatt.

treaty provisions. Therefore, you must treat the SOFTWARE PRODUCT like any other copyrighted material.

LIMITED WARRANTY

NO WARRANTIES.

The Author of this Software expressly disclaims any warranty for the SOFTWARE PRODUCT. The SOFTWARE PRODUCT and any related documentation is provided “as is” without warranty of any kind, either express or implied, including, without limitation, the implied warranties or merchantability, fitness for a particular purpose, or noninfringement. The entire risk arising out of use or performance of the SOFTWARE PRODUCT remains with you.

NO LIABILITY FOR DAMAGES.

In no event shall the author of this Software be liable for any special, consequential, incidental or indirect damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, loss of data, or any other pecuniary loss) arising out of the use of or inability to use this product, even if the Author of this Software is aware of the possibility of such damages and known defects. The author of this Software shall be held blameless for any damage to persons, property, or data resulting from the use or misuse of the SOFTWARE PRODUCT.