

# Az-Delivery

## Welcome!

Thank you for purchasing our *AZ-Delivery DS18B20 Temperature Sensor*. On the following pages, we will introduce you to how to use and set-up this handy device.

**Have fun!**



## Areas of application

Education and teaching: Use in schools, universities and training institutions to teach the basics of electronics, programming and embedded systems. Research and development: Use in research and development projects to create prototypes and experiments in the fields of electronics and computer science. Prototype development: Use in the development and testing of new electronic circuits and devices. Hobby and Maker Projects: Used by electronics enthusiasts and hobbyists to develop and implement DIY projects.

## Required knowledge and skills

Basic understanding of electronics and electrical engineering. Knowledge of programming, especially in the C/C++ programming language. Ability to read schematics and design simple circuits. Experience working with electronic components and soldering.

## Operating conditions

The product may only be operated with the voltages specified in the data sheet to avoid damage. A stabilized DC power source is required for operation. When connecting to other electronic components and circuits, the maximum current and voltage limits must be observed to avoid overloads and damage.

## Environmental conditions

The product should be used in a clean, dry environment to avoid damage caused by moisture or dust. Protect the product from direct sunlight (UV)

## Intended Use

The product is designed for use in educational, research and development environments. It is used to develop, program and prototype electronic projects and applications. The Sensor product is not intended as a finished consumer product, but rather as a tool for technically savvy users, including engineers, developers, researchers and students.

## Improper foreseeable use

The product is not suitable for industrial use or safety-relevant applications. Use of the product in medical devices or for aviation and space travel purposes is not permitted

## disposal

Do not discard with household waste! Your product is according to the European one Directive on waste electrical and electronic equipment to be disposed of in an environmentally friendly manner. The valuable raw materials contained therein can be recycled become. The application of this directive contributes to environmental and health protection. Use the collection point set up by your municipality to return and Recycling of old electrical and electronic devices. WEEE Reg. No.: DE 62624346

## electrostatic discharge

Attention: Electrostatic discharges can damage the product. Note: Ground yourself before touching the product, such as by wearing an anti-static wrist strap or touching a grounded metal surface.

## safety instructions

Although our product complies with the requirements of the RoHS Directive (2011/65/EU) and does not contain any hazardous substances in quantities above the permitted limits, residues may still be present. Observe the following safety instructions to avoid chemical hazards: Caution: Soldering can produce fumes that can be harmful to health. Note: Use a solder fume extractor or work in a well-ventilated area. If necessary, wear a respirator mask. Caution: Some people may be sensitive to certain materials or chemicals contained in the product. Note: If skin irritation or allergic reactions occur, stop use and, if necessary, consult a doctor. Caution: Keep the product out of the reach of children and pets to avoid accidental contact and swallowing of small parts. Note: Store the product in a safe, closed container when not in use. Attention: Avoid contact of the product with food and drinks. Note: Do not store or use the product near food to prevent contamination. Although our product complies with the requirements of the RoHS Directive (2011/65/EU) and does not contain any hazardous substances in quantities above the permitted limits, residues may still be present. Observe the following safety instructions to avoid chemical hazards: Caution: Soldering can produce fumes that can be harmful to health. Note: Use a solder fume extractor or work in a well-ventilated area. If necessary, wear a respirator mask. Caution: Some people may be sensitive to certain materials or chemicals contained in the product. Note: If skin irritation or allergic reactions occur, stop use and, if necessary,

consult a doctor. Caution: Keep the product out of the reach of children and pets to avoid accidental contact and swallowing of small parts. Note: Store the product in a safe, closed container when not in use. Attention: Avoid contact of the product with food and drinks. Note: Do not store or use the product near food to prevent contamination. The product contains sensitive electronic components and sharp edges. Improper handling or assembly can result in injury or damage. Observe the following safety instructions to avoid mechanical hazards: Attention: The product's circuit board and connectors may have sharp edges. Use caution to avoid cuts. Note: Wear appropriate protective gloves when handling and assembling the product. Caution: Avoid excessive pressure or mechanical stress on the board and components. Note: Only mount the product on stable and flat surfaces. Use appropriate spacers and housings to minimize mechanical stress. Attention: Make sure the product is securely fastened to prevent accidental slipping or falling. Note: Use appropriate support or secure mounting in enclosures or on mounting plates. Caution: Make sure all cable connections are connected securely and correctly to avoid strain and accidental unplugging. Note: Route cables so that they are not under tension and do not pose a tripping hazard. The product operates with electrical voltages and currents that, if used improperly, can result in electric shocks, short circuits or other hazards. Observe the following safety instructions to avoid electrical hazards: Attention: Use the product only with the specified voltages. Note: The performance limits of the product can be found in the associated data sheet Caution: Avoid short circuits between the connectors and components of the product Note: Make sure that no conductive objects touch or bridge the circuit board. Use insulated tools and pay attention to the arrangement of connections. Caution: Do not perform any work on the product when it is connected to a power source. Note: Disconnect the product from power before making any circuit changes or connecting or removing components. Caution: Do not exceed the specified current ratings for the product's inputs and outputs. Note: The performance limits of the product can be found in the technical specifications or in the data sheet Attention: Make sure that the power sources used are stable and correctly sized. Note: Only use tested and suitable power supplies to avoid voltage fluctuations and overloads. Attention: Maintain sufficient distance from live parts to avoid accidental contact. Note: Ensure that the cabling is arranged safely and clearly according to the voltage used. Caution: Use insulating housings or protective covers to protect the product from direct contact. Note: Place the product in a non-conductive case to avoid accidental touching and short circuits. The product and the components on it may become warm during operation. Improper handling or overloading the product can result in burns, damage or fire. Observe the following safety instructions to avoid thermal hazards: Caution: Make sure the product is used within recommended operating temperatures. Note: The recommended operating temperature range is typically between -40°C and +85°C. Check the specific information in the product data sheet. Attention: Do not place the product near external heat sources such as radiators or direct sunlight. Note: Ensure that the product is operated in a cool and well-ventilated area. Attention: Make sure the product is well ventilated to avoid overheating. Note: Use fans or heat sinks when operating the product in a closed enclosure or in an environment with limited air circulation. Attention: Mount the product on heat-resistant surfaces and in heat-resistant housings. Note: Use enclosure materials that can withstand high temperatures to avoid damage or fire hazard. Caution: Implement temperature monitoring when using an enclosure and, if necessary, protection mechanisms that shut down the product if it overheats. Note: Note: Use temperature sensors and appropriate software to monitor the temperature of the product and shut down the system if necessary. Caution: Avoid overloads that can cause excessive heating of components. Note: To prevent overheating, do not exceed the specified current and voltage limits. Caution: Short circuits can generate significant heat and cause fires. Note: Make sure that all connections are correct and secure and that no conductive objects can accidentally cause short circuits.



## Table of Contents

Introduction.....	3
The pinout.....	5
How to set-up Arduino IDE.....	7
How to set-up the Raspberry Pi and the Python.....	11
Connecting the sensor with Atmega328P Board.....	12
Library for Arduino IDE.....	13
Sketch example.....	15
Connecting the sensor with Raspberry Pi.....	22
Enabling One-Wire interface.....	23
Enabling multiple One-Wire interfaces.....	26
Python script for using multiple DS18B20 sensors.....	27



## Introduction

The DS18B20 is a digital temperature sensor that provides 9 to 12 bits digital temperature measurements and has an alarm function with nonvolatile user programmable upper and lower trigger points. The sensor communicates over a bus that requires only one data pin, power supply pin and ground pin for communication with a microcontroller.

Each sensor has a 64 bit serial address, which allows multiple sensors to function on the same bus. Thus, it is simple to use one microcontroller to control many sensors distributed over a large area.

The sensor does not require standby power, which means that when temperature data is not read, the sensor does not use power at all.

Measurement temperature range is from  $-55^{\circ}\text{C}$  to  $+125^{\circ}\text{C}$  ( $67^{\circ}\text{F}$  to  $257^{\circ}\text{F}$ ), with an accuracy of  $\pm 0.5^{\circ}\text{C}$  (9 bit);  $\pm 0.25^{\circ}\text{C}$  (10 bit);  $\pm 0.125^{\circ}\text{C}$  (11 bit); and  $\pm 0.0625^{\circ}\text{C}$  (12 bit) resolution.

# Az-Delivery


**NOTE:** If you experience any communication issues, try adding a  $4.7k\Omega$  pull-up resistor on the *DATA* pin.

**NOTE:** The relevant technical data on the interface does not mention the maximum number of sensors that can be linked on the same interface, but in practical application, this number is not as high, and you should pay attention.

**NOTE:** There is a cable length limitation that should be taken into consideration when using long distance communications. You should pay attention to cable distributed capacitance and resistance.

**NOTE:** The DS18B20 and ordinary transistors look similar, so be careful not to regard it as a transistor to avoid damage!

## The pinout

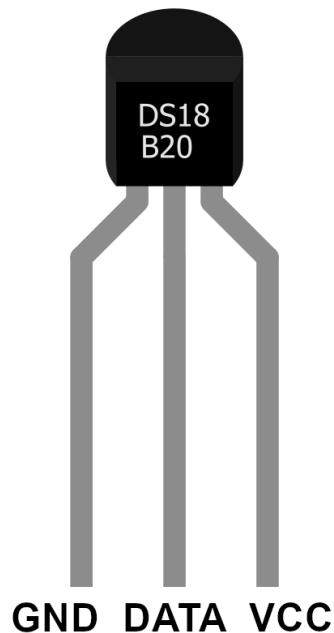

**VCC pin** - supplies power for the sensor. Although supply voltage can range between 3.3V and 5.5V; a 5V supply is recommended. In case of a 5V power supply. A cable that connect sensor and microcontroller can be up to 20 meters long. However, with 3.3V supply voltage, cable length should not be longer than one meter, otherwise, the line voltage drop will lead to errors in measurement.

**DATA pin** - is the data pin, and it is used for communication between the sensor and the microcontroller (can be connected on One-Wire interface).



**GND pin** - is ground pin and should be connected to the common ground, or 0V (on Atmega328P Board or Raspberry Pi).



## How to set-up Arduino IDE

If you did not install Arduino IDE already, follow the link:

<https://www.arduino.cc/en/Main/Software>

and download installation file for your operating system .

### Download the Arduino IDE



The screenshot shows the Arduino 1.8.9 download page. On the left, there is a teal circle containing the Arduino logo (an infinity symbol with a minus sign on the left and a plus sign on the right). To the right of the logo, the text reads: **ARDUINO 1.8.9**  
The open-source Arduino Software (IDE) makes it easy to write code and upload it to the board. It runs on Windows, Mac OS X, and Linux. The environment is written in Java and based on Processing and other open-source software.  
This software can be used with any Arduino board. Refer to the [Getting Started](#) page for Installation instructions.

On the right side, there are links for different operating systems: **Windows** Installer, for Windows XP and up; **Windows** ZIP file for non admin install; **Windows app** Requires Win 8.1 or 10 with a 'Get' button; **Mac OS X** 10.8 Mountain Lion or newer; **Linux** 32 bits; **Linux** 64 bits; **Linux** ARM 32 bits; **Linux** ARM 64 bits. At the bottom right, there are links for Release Notes, Source Code, and Checksums (sha512).

For *Windows* users, double click on downloaded *.exe* file and follow instructions in installation window.

# Az-Delivery

For *Linux* users, download a file with the extension *.tar.xz*, which you need to extract. When you extract it, go to the extracted directory, and open terminal in that directory. You need to run two *.sh* scripts, first called *arduino-linux-setup.sh* and second called *install.sh*.

To run the first script in terminal, run the following command:


```
sh arduino-linux-setup.sh user_name
```

**user\_name** - is the name of a super user in the Linux operating system. You will be prompted to provide password for the super user. Wait for a few minutes for script to complete everything.

After installation of the first script, you have to run the second script called *install.sh* script. In the terminal, run the following command:

```
sh install.sh
```

After the installation of these scripts, go to the *All Apps*, where you can find the *Arduino IDE* installed.

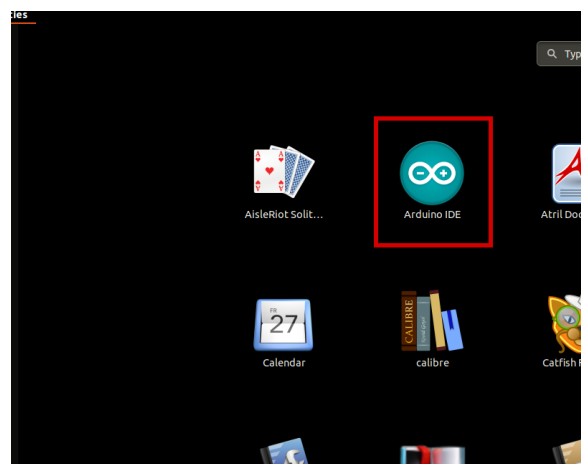


# Az-Delivery

Almost all operating systems come with a text editor preinstalled (for example *Windows* comes with the *Notepad*, *Linux Ubuntu* comes with the *Gedit*, *Linux Raspbian* comes with the *Leafpad* etc.). All of these text editors are perfectly fine for the purpose of the eBook.

Next thing is to check if your PC can detect your microcontroller board. Open freshly installed Arduino IDE, and go to:

*Tools > Board > {your board name here}*

*{your board name here}* should be the *Arduino/Genuino Uno*, as you can see on the following image:

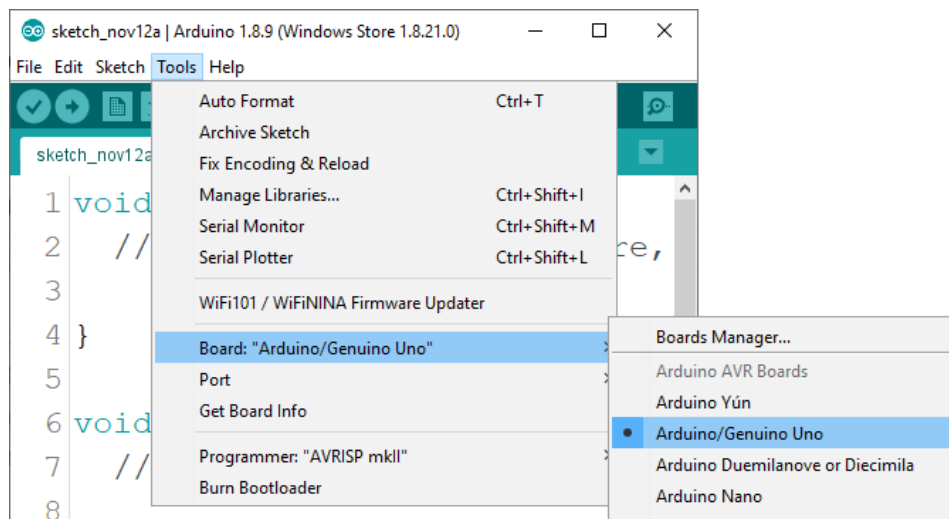


You need to select the port on which the microcontroller board is connected.

Go to: *Tools > Port > {port name goes here}*

and if you connected the microcontroller board on the usb port you should see a port name.

# Az-Delivery

If you are using Arduino IDE on Windows, port names are as follows:

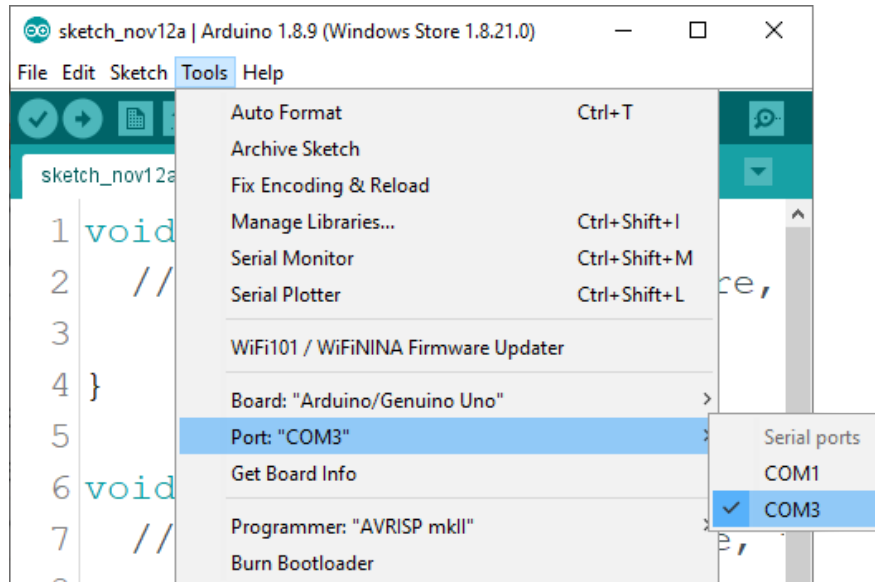

For *Linux* users, port name is `/dev/ttyUSBx` for example, where *x* represents integer number between 0 and 9, for instance.

## How to set-up the Raspberry Pi and the Python


For the Raspberry Pi, you will first have to install operating system on it, then to set-up everything, so that you can use it in the *Headless* mode. The *Headless* mode enables you to remotely connect to the Raspberry Pi, without the need for *PC* screen Monitor, mouse or keyboard. Only things that you need for this mode are the Raspberry Pi, power supply and internet connection. All of this is explained in detail in the free eBook *Raspberry Pi Quick Startup Guide*, which can be found on our site:

<https://www.az-delivery.de/products/raspberry-pi-kostenfreies-e-book?ls=en>

The *Raspbian* operating system comes with the *Python* preinstalled.

## Connecting the sensor with Atmega328P Board

Connect the DS18B20 sensor with the microcontroller board as shown on the following connection diagram:

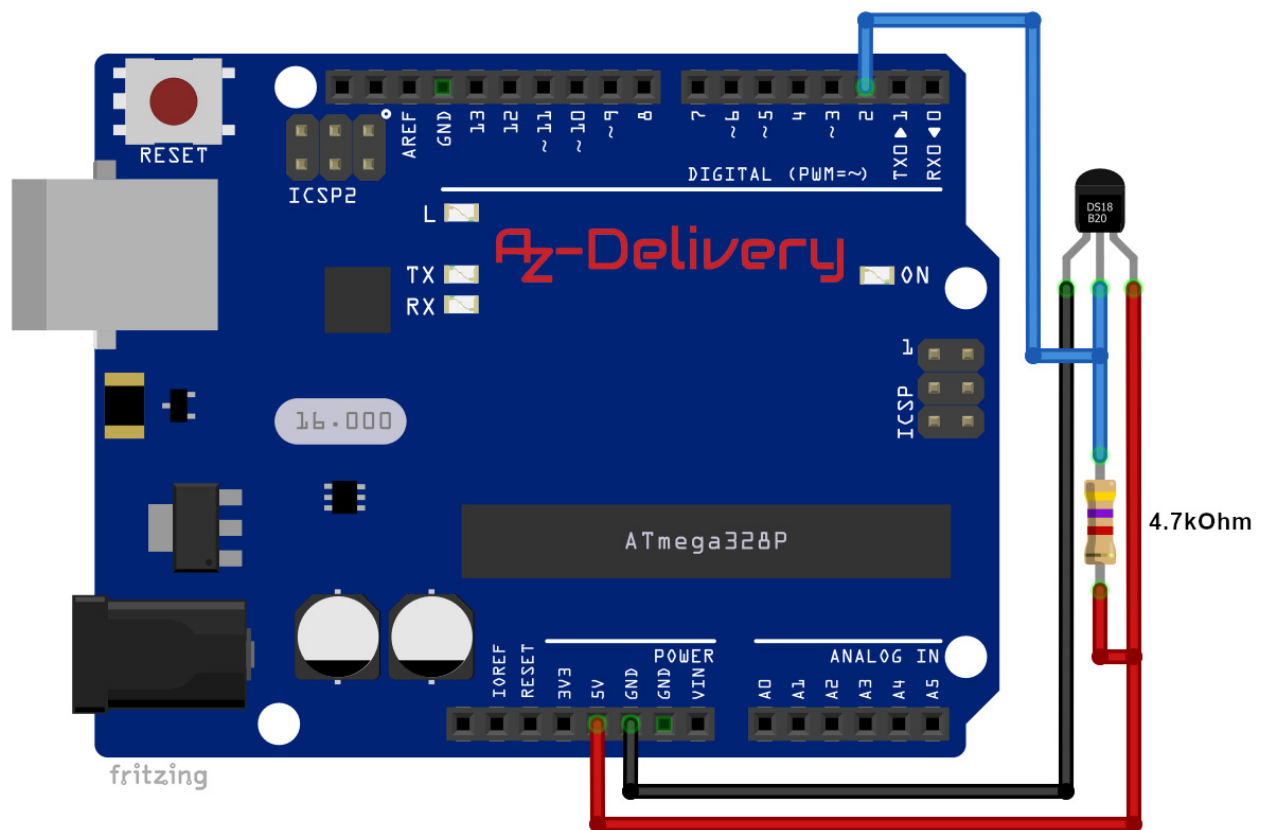

**DS18B20 pin > Microcontroller pin**

DATA > D2

**Blue wire**

VCC > 5V

**Red wire**

GND > GND


**Black wire**

**NOTE:** Pull up 4.7k $\Omega$  resistor is connected between OUT pin and VCC pin.

## Library for Arduino IDE

To use the DS18B20 sensor with Atmega328P Board, first we have to download a library for it. Go to: *Tools > Manage Libraries*

When a new window opens, type *Dallas* in the search box and download the library *DallasTemperature* by *Miles Burton, Tim Newsome, Guil Barros and Rob Tillaart*, as shown on the following image:

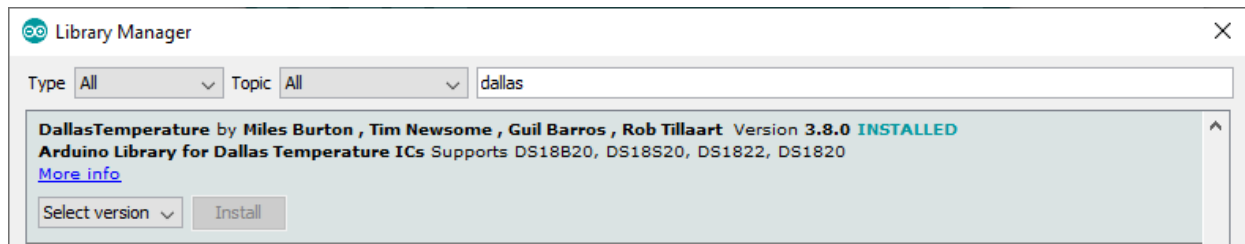

Now, go to: *File > Examples > DallasTemperature > ...* and you will find many sketch examples. We used and modified a sketch called *Multiple* in order to read temperature data from three different DS18B20 sensors.


*File > Examples > DallasTemperature > Multiple*

If you use only one DS18B20 sensor, a sketch called *Simple* is good enough:

*File > Examples > DallasTemperature > Simple*

# Az-Delivery

Connect three DS18B20 sensors with the Atmega328P board as shown on the following connection diagram:

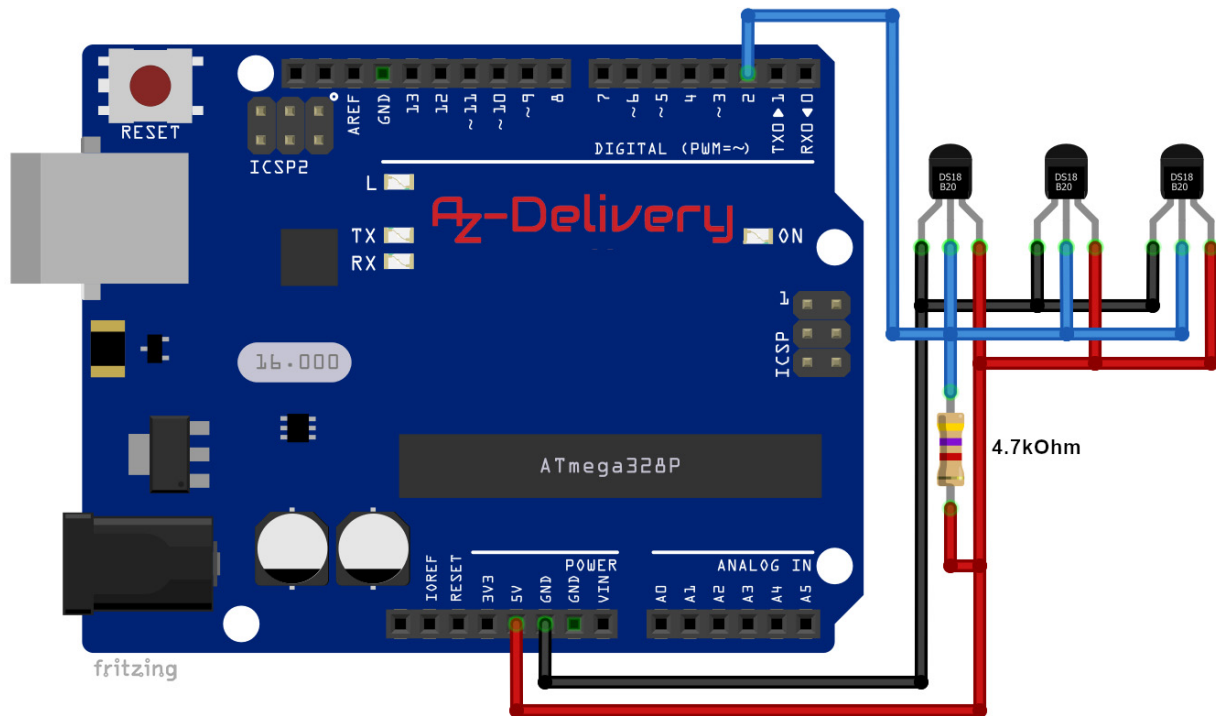





## Sketch example

The following is the sketch example for three DS18B20 sensors on the same One-Wire interface:

```
#include <OneWire.h>
#include <DallasTemperature.h>
#define ONE_WIRE_BUS 2 // Data wire is plugged into D2 pin
#define TEMPERATURE_PRECISION 12
OneWire oneWire(ONE_WIRE_BUS);
DallasTemperature sensors(&oneWire);
DeviceAddress one, two, three;

void setup() {
  Serial.begin(9600);
  Serial.println("Dallas Temperature IC Control Library Demo");
  sensors.begin();
  Serial.print("Locating devices...");
  Serial.print("Found ");
  Serial.print(sensors.getDeviceCount(), DEC);
  Serial.println(" devices.");
  Serial.print("Parasite power is: ");
  if(sensors.isParasitePowerMode()) {
    Serial.println("ON");
  }
  else {
    Serial.println("OFF");
  }
}
```

# Az-Delivery

```
// one tab
if(!sensors.getAddress(one, 0)) {
    Serial.println("Unable to find address for Device 0"); }
if(!sensors.getAddress(two, 2)) {
    Serial.println("Unable to find address for Device 2"); }
if(!sensors.getAddress(three, 1)) {
    Serial.println("Unable to find address for Device 1"); }

Serial.print("Device 0 Address: ");
printAddress(one);
Serial.println();
Serial.print("Device 1 Address: ");
printAddress(two);
Serial.println();
Serial.print("Device 2 Address: ");
printAddress(three);
Serial.println();
sensors.setResolution(one, TEMPERATURE_PRECISION);
sensors.setResolution(two, TEMPERATURE_PRECISION);
sensors.setResolution(three, TEMPERATURE_PRECISION);
Serial.print("Device 0 Resolution: ");
Serial.print(sensors.getResolution(one), DEC);
Serial.println();
Serial.print("Device 1 Resolution: ");
Serial.print(sensors.getResolution(two), DEC);
Serial.println();
Serial.print("Device 2 Resolution: ");
Serial.print(sensors.getResolution(three), DEC);
Serial.println();
}
```

# Az-Delivery

```
void printAddress(DeviceAddress deviceAddress) {
    for(uint8_t i = 0; i < 8; i++) {
        if(deviceAddress[i] < 16) Serial.print("0");
        Serial.print(deviceAddress[i], HEX);
    }
}

void printTemperature(DeviceAddress deviceAddress) {
    float tempC = sensors.getTempC(deviceAddress);
    Serial.print("Temp: ");
    Serial.print(tempC);
    Serial.print(" C; ");
    Serial.print(DallasTemperature::toFahrenheit(tempC));
    Serial.print(" F");
}


void printResolution(DeviceAddress deviceAddress) {
    Serial.print("Resolution: ");
    Serial.println(sensors.getResolution(deviceAddress));
}

void printData(DeviceAddress deviceAddress) {
    printTemperature(deviceAddress);
    Serial.print(" ; Device: ");
    printAddress(deviceAddress);
    Serial.println();
}
```

# Az-Delivery

```
void loop() {  
  Serial.print("Requesting temperatures...");  
  sensors.requestTemperatures();  
  Serial.println("DONE");  
  printData(one);  
  printData(two);  
  printData(three);  
  delay(1000);  
}
```

Upload the sketch to the microcontroller board and open Serial Monitor (*Tools > Serial Monitor*). The result should look like the output as shown on the image below:

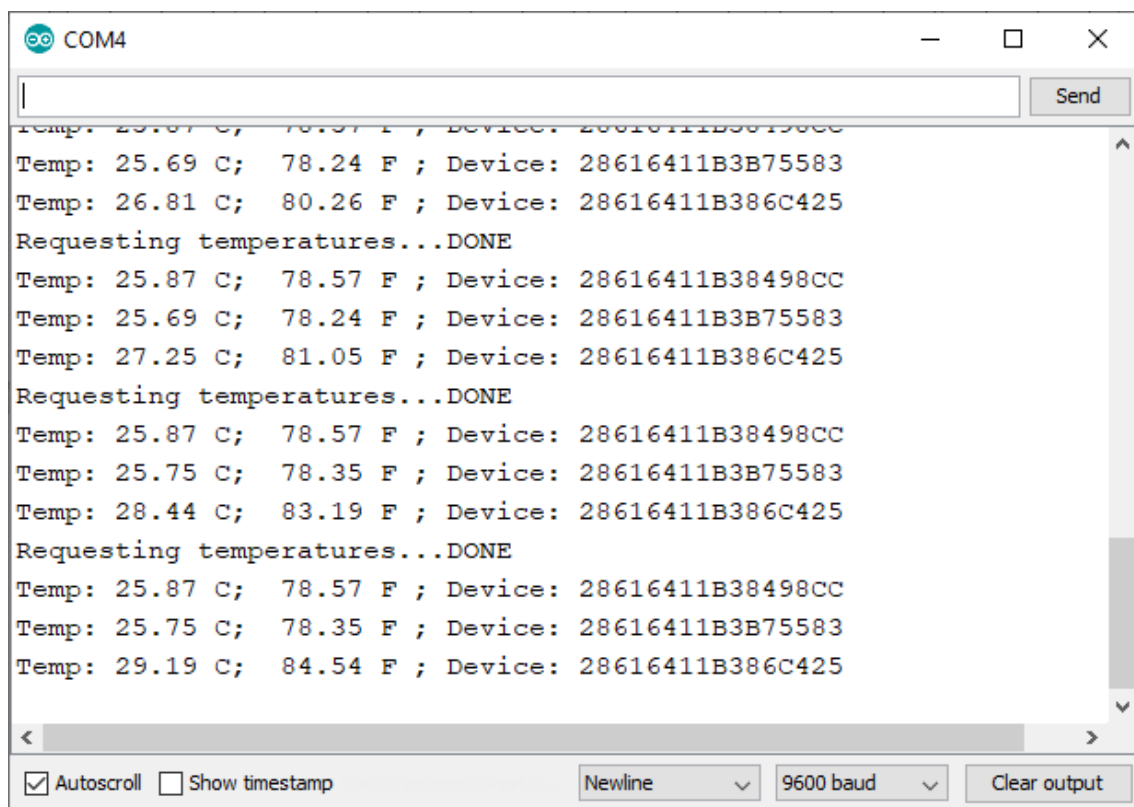

# Az-Delivery

We use `ONE_WIRE_BUS` variable to define on which digital pin we will connect the One-Wire interface. For the purpose of this eBook, the value of the `ONE_WIRE_BUS` variable is set to `D2`, but you can use any other digital pin of the microcontroller board, except the ones used in Serial Interface, `D0` and `D1` (it is a recommendation, you can use them, but you have to be sure that these pins are disconnected when you are uploading sketches).

We used the `TEMPERATURE_PRECISION` variable to set precision for DS18B20 sensors. Number saved in this variable is a digital conversion number in bits and it can be in a range from 9 to 12, any other number will result in an error. For the purpose of this eBook, we set it to the maximum value (12).

We used the following line of code:

```
DeviceAddress one, two, three
```

to create variables for sensor addresses, and in our example we created three.

We defined and created `oneWire` object, used for the bus interface:

```
OneWire oneWire(ONE_WIRE_BUS);
```

Then we used `oneWire` object to define and create `sensors` object, which is used for all connected sensors:

```
DallasTemperature sensors(&oneWire)
```

# Az-Delivery

To initialize *sensors* object we used the following line of code:

```
sensors.begin()
```

With that line of the code *sensors* object detects all sensors connected on the bus interface. It also detects all the addresses of sensors.

Now we can check if sensors are working properly, by using the following lines of code for every sensor we connect to the One-Wire interface:

```
if(!sensors.getAddress(one, 0)) {  
    Serial.println("Unable to find address: Device 0"); }
```

where *one* is the address of the first sensor.

To set-up analog to digital conversion precision of the specific sensor we used the following line of code:

```
sensors.setResolution(one, TEMPERATURE_PRECISION)
```

If you want to read analog to digital conversion precision of the specific sensor, you can use the following line of code:

```
sensors.getResolution(one)
```

The function returns hexadecimal value, and to convert it to a decimal value we use the following line of code:

```
Serial.print(sensors.getResolution(one), DEC);
```

In order to read the temperature data, we first have to request all data from all sensors, by using the following line of code:

```
sensors.requestTemperatures();
```

# Az-Delivery

Only after that line of code, we can read data of a particular sensor, using the following line of code:


```
float tempC = sensors.getTempC(deviceAddress);
```

where we pass *deviceAddress* argument to the function in order to read temperature data from a specific sensor. This data is temperature value in Celsius, and to convert it into Fahrenheit we used the following line of code:

```
DallasTemperature::toFahrenheit(tempC)
```

## Connecting the sensor with Raspberry Pi

Connect the DS18B20 sensor with the Raspberry Pi as shown on the following connection diagram:

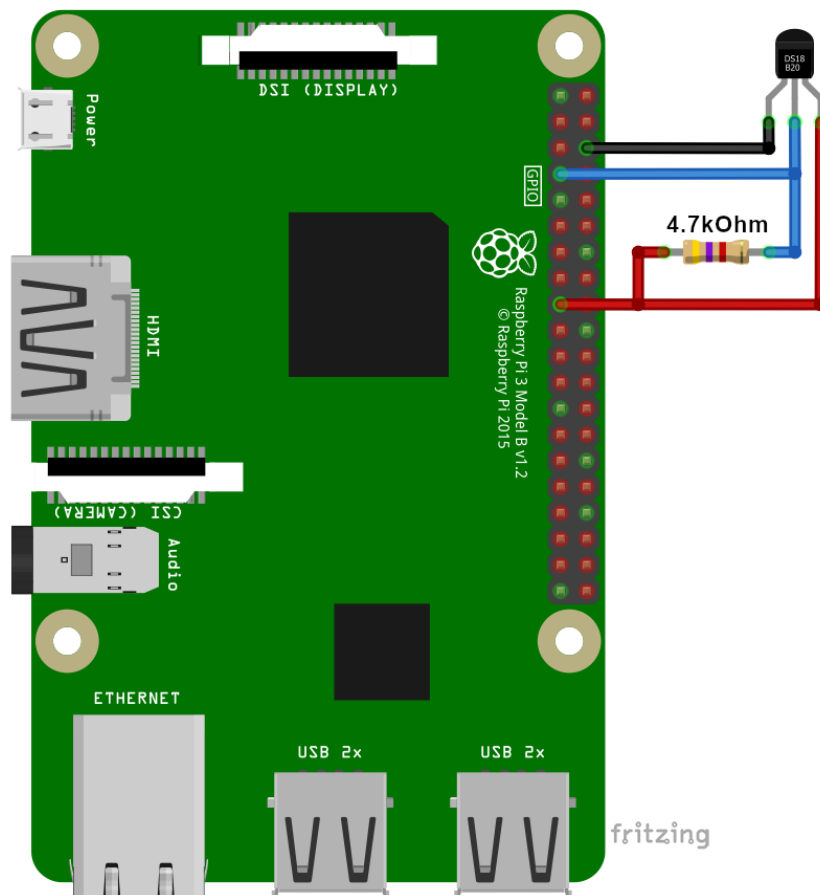

DS18B20 pin	>	Raspberry Pi pin
GND	>	GND [pin 6]
DATA	>	GPIO4 [pin 7]
VCC	>	3V3 [pin 17]

**Black wire**

**Blue wire**

**Red wire**

**NOTE:** Pull up 4.7k $\Omega$  resistor is connected between *OUT* pin and 3V3 pin.




# Az-Delivery

## Enabling the interface

Before we can use the DS18B20 sensor with the Raspberry Pi, first we have to enable the bus interface in Raspbian. By default, the hardware bus interface is on pin GPIO4 (pin 7), but we first have to enable it. In order to enable the bus interface, go to:


*Applications Menu > Preferences > Raspberry Pi Configuration*

as shown on the following image:

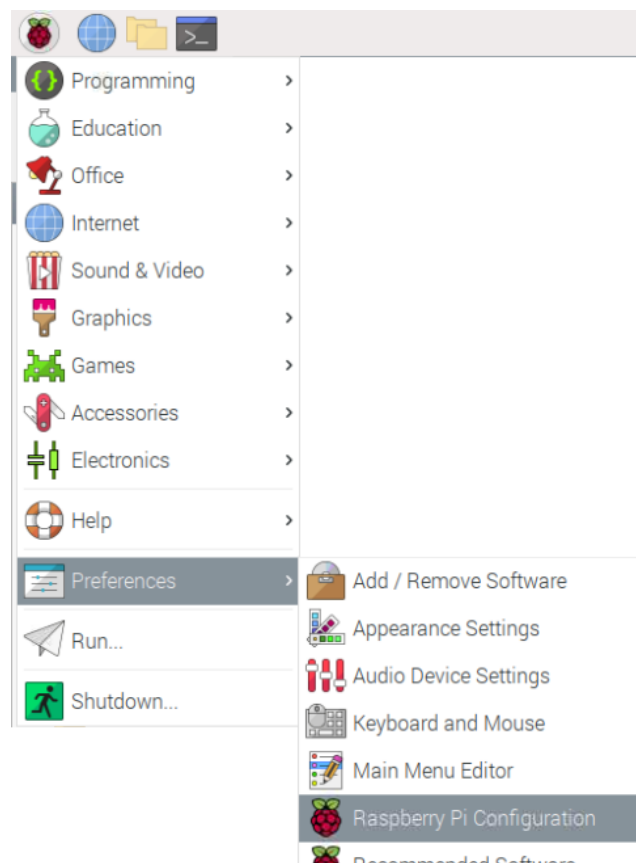


# Az-Delivery

When the new window appears, open *Interfaces* tab and search for radio buttons called *1-Wire*, and select the *Enable* radio button, as shown on the following image:

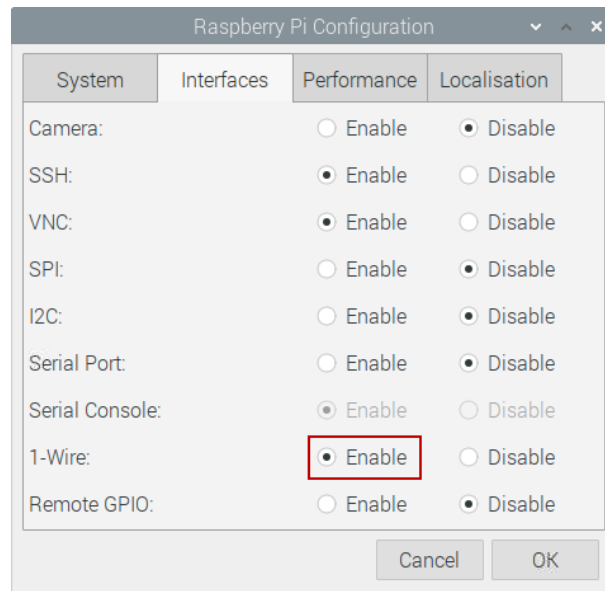

You will be prompted to reboot the system.

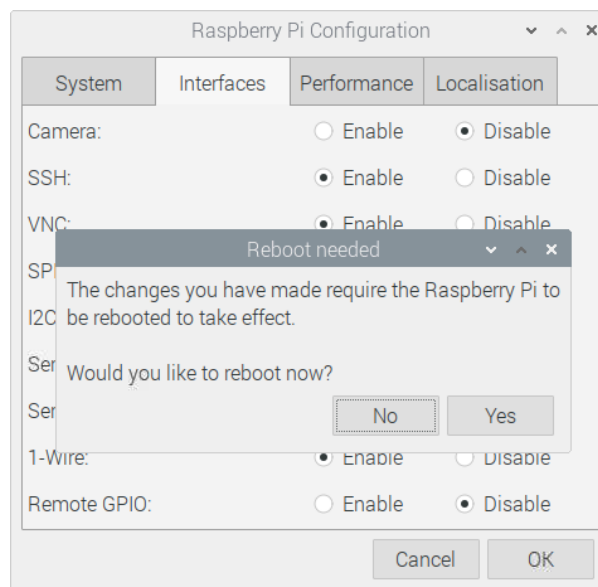

# Az-Delivery

When Raspbian is booted again, open the terminal, and run the following commands, one by one:

```
sudo modprobe w1-gpio
sudo modprobe w1-therm
cd /sys/bus/w1/devices/
```

and when you run the following command:

```
ls
```

the output in the terminal should be as follows:

```
28-7285b3116461 and w1_bus_master1
```

the first number *28-7285b3116461* will be different for you, because this is the serial address of the specific sensor, and each sensor has its own unique serial address. Now, to test if everything works, run these two commands:

```
cd 28-7285b3116461 - a number or serial address from the last page
cat w1_slave
```

The result should look like the output as shown on the following image:



```
pi@raspberrypi: /sys/bus/w1/devices/28-7285b3116461
File Edit Tabs Help
pi@raspberrypi:~ $ sudo modprobe w1-gpio
pi@raspberrypi:~ $ sudo modprobe w1-therm
pi@raspberrypi:~ $ cd /sys/bus/w1/devices/
pi@raspberrypi:/sys/bus/w1/devices $ ls
28-7285b3116461 w1_bus_master1
pi@raspberrypi:/sys/bus/w1/devices $ cd 28-7285b3116461
pi@raspberrypi:/sys/bus/w1/devices/28-7285b3116461 $ cat w1_slave
9e 01 ff ff 7f ff ff ff 89 : crc=89 YES
9e 01 ff ff 7f ff ff ff 89 t=25875
pi@raspberrypi:/sys/bus/w1/devices/28-7285b3116461 $
```

**t=25875** - this is the temperature data in °C (Celsius) = 25.875°C.



## Enabling multiple interfaces

To enable the bus interface, without a graphic user interface (GUI), before rebooting your Raspberry Pi, to the file located on:

*/boot/config.txt*

you need to add the following line:

**dtoverlay=w1-gpio**

or

**dtoverlay=w1-gpio,gpiopin=x**

where *x* is a custom pin, if you would like to use it (default is GPIO4 [pin 7], like we mentioned in the previous chapter).

Newer kernels (4.9.28 and later) allow you to use dynamic overlay loading, including creating multiple One-Wire interfaces to be used at the same time:

**sudo dtoverlay w1-gpio gpiopin=4 pullup=0 # pin 7**

**sudo dtoverlay w1-gpio gpiopin=17 pullup=0 # pin 11**

**sudo dtoverlay w1-gpio gpiopin=27 pullup=0 # pin 13**

Once any of the steps above have been performed, and discovery is complete you can list the devices that the Raspberry Pi has discovered via all One-Wire interfaces by running the following command in the terminal:

**ls /sys/bus/w1/devices/**

**NOTE:** Using **w1-gpio** on the Raspberry Pi typically needs a 4.7k $\Omega$  pull-up resistor connected between the GPIO pin and a 3.3V supply.



## Python script for using multiple DS18B20 sensors

We choose to split the code into two scripts, because of the better readability. The following is a code for the class subscript:

```
import os
import glob
import time
class DS18B20:

    def __init__(self):
        os.system('modprobe w1-gpio')
        os.system('modprobe w1-therm')
        base_dir = '/sys/bus/w1/devices/'
        device_folder = glob.glob(base_dir + '28*')
        self._count_devices = len(device_folder)
        self._devices = list()
        i = 0
        while i < self._count_devices:
            self._devices.append(device_folder[i] + '/w1_slave')
            i += 1

    def device_names(self):
        names = list()
        for i in range(self._count_devices):
            names.append(self._devices[i])
            temp = names[i][20:35]
            names[i] = temp
```

# Az-Delivery

```
return names
```

```
# (one tab)
```

```
def _read_temp(self, index):
    f = open(self._devices[index], 'r')
    lines = f.readlines()
    f.close()
    return lines

def tempC(self, index = 0):
    lines = self._read_temp(index)
    retries = 5
    while (lines[0].strip()[-3:] != 'YES') and (retries > 0):
        time.sleep(0.1)
        lines = self._read_temp(index)
        retries -= 1
    if retries == 0:
        return 998

    equals_pos = lines[1].find('t=')
    if equals_pos != -1:
        temp = lines[1][equals_pos + 2:]
        return float(temp) / 1000
    else:
        return 999 # error

def device_count(self):
    return self._count_devices
```

(The most of code in the script is modified from the script on the adafruit site)

Save the script by the name *DS18B20classfile.py*.

# Az-Delivery

The following is a code for the main script:

```
import time
from DS18B20classFile import DS18B20

degree_sign = u'\xb0' # degree sign
devices = DS18B20()
count = devices.device_count()
names = devices.device_names()

print('[Press CTRL+C to end the script]')
try: # Main program loop
    while True:
        i = 0
        print('\nReading temperature, number of sensors: {}'.format(count))

        while i < count:
            container = devices.tempC(i)
            print('{} Temp: {:.3f}{}C, {:.3f}{}F of the device {}'.format(i+1, container, degree_sign,
                container * 9.0 / 5.0 + 32.0, degree_sign,
                names[i]))

            i = i + 1


        time.sleep(1)

# Scavenging work after the end of the program
except KeyboardInterrupt:
    print('\nScript end!')
```

# Az-Delivery

Save the script by the name *DS18B20multiple.py* in the same directory where you saved the first script.

For example, we connected three DS18B20 sensors on the same One-Wire interface of the Raspberry Pi as shown on the following connection diagram:

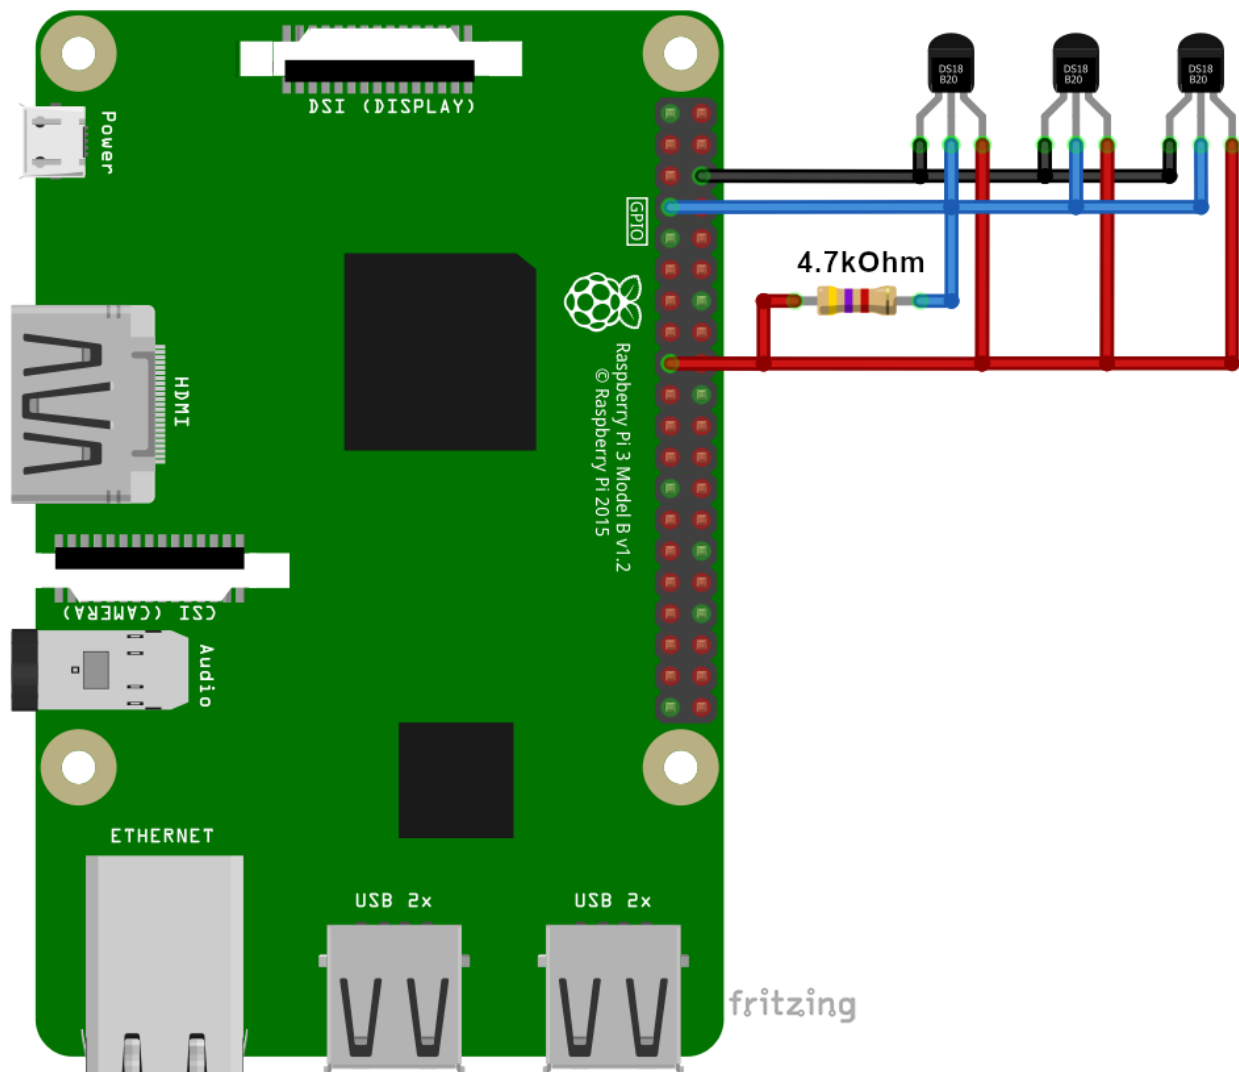




# Az-Delivery

To run the main script, open the terminal in the directory where you saved both scripts, and run the following command:

```
python3 DS18B20multiple.py
```

The result should look like the output as shown on the image below:

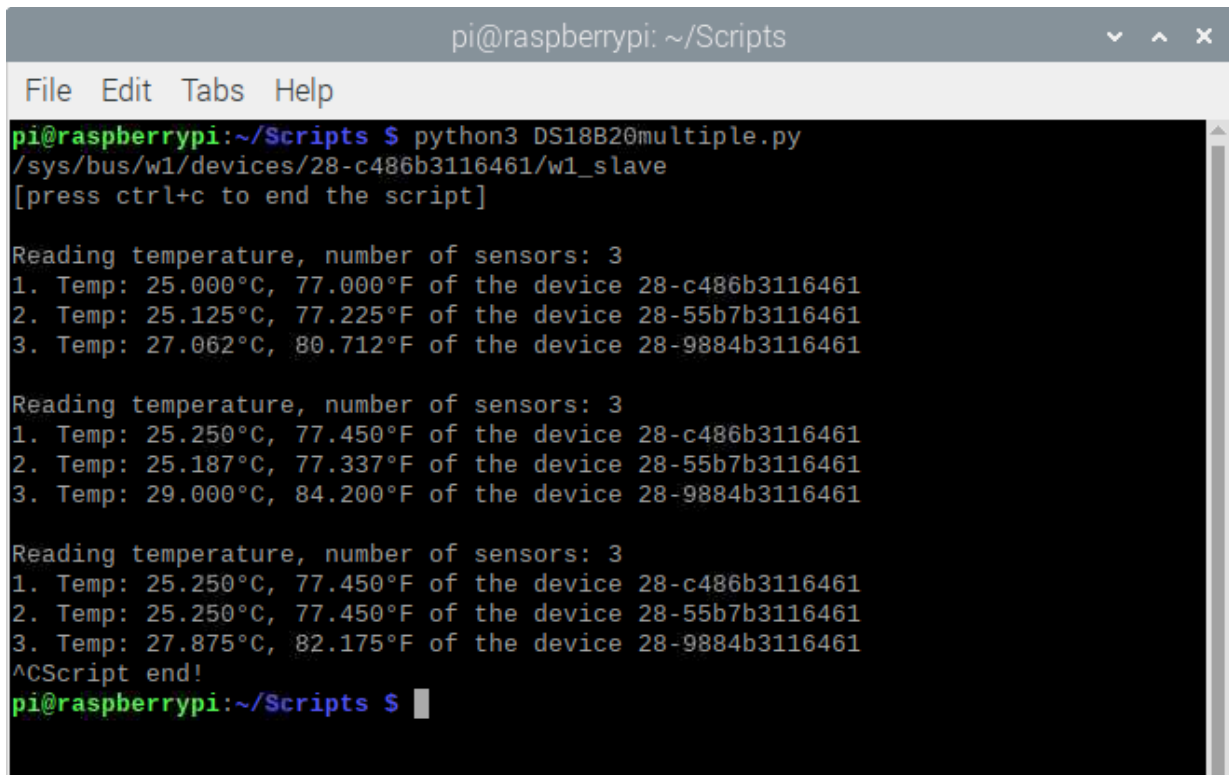

```
pi@raspberrypi: ~/Scripts
File Edit Tabs Help
pi@raspberrypi:~/Scripts $ python3 DS18B20multiple.py
/sys/bus/w1/devices/28-c486b3116461/w1_slave
[press ctrl+c to end the script]

Reading temperature, number of sensors: 3
1. Temp: 25.000°C, 77.000°F of the device 28-c486b3116461
2. Temp: 25.125°C, 77.225°F of the device 28-55b7b3116461
3. Temp: 27.062°C, 80.712°F of the device 28-9884b3116461

Reading temperature, number of sensors: 3
1. Temp: 25.250°C, 77.450°F of the device 28-c486b3116461
2. Temp: 25.187°C, 77.337°F of the device 28-55b7b3116461
3. Temp: 29.000°C, 84.200°F of the device 28-9884b3116461

Reading temperature, number of sensors: 3
1. Temp: 25.250°C, 77.450°F of the device 28-c486b3116461
2. Temp: 25.250°C, 77.450°F of the device 28-55b7b3116461
3. Temp: 27.875°C, 82.175°F of the device 28-9884b3116461
^CScript end!
pi@raspberrypi:~/Scripts $
```

To stop the script press CTRL + C on the keyboard.

You can easily use the script for one or multiple DS18B20 sensors.

**You have done it!**

**Now you can use your module for various projects.**

# Az-Delivery

Now is the time to learn and make the Projects on your own. You can do that with the help of many example scripts and other tutorials, which you can find on the internet.

**If you are looking for the high quality microelectronics and accessories, AZ-Delivery Vertriebs GmbH is the right company to get them from. You will be provided with numerous application examples, full installation guides, eBooks, libraries and assistance from our technical experts.**

<https://az-delivery.de>

Have Fun!

Impressum

<https://az-delivery.de/pages/about-us>