

**ARM® ARM926EJ-S**  
**32-bit Microprocessor**

**NuMaker NuEZCam**  
**User Guide**

*The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.*

*Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.*

*All data and specifications are subject to change without notice.*

For additional information or questions, please contact: Nuvoton Technology Corporation.

[www.nuvoton.com](http://www.nuvoton.com)

**Table of Contents**

1 INTRODUCTION ..... 3

2 BOARD INTERFACE ..... 4

    2.1 Board schematics of N32903 ..... 4

    2.2 Board schematics of NuEdu UNO board..... 6

3 FIRMWARE PROGRAMMING ..... 7

4 SOURCE CODE ..... 10

5 Q&A ..... 11

6 REVISION HISTORY ..... 12

## 1 INTRODUCTION

NuMaker NuEZCam is a solution to capture video and audio streams into one AVI file, and save the AVI file into SD card. It is based on Nuvoton's N32903 video MPU. N32903 provides a powerful JPEG codec for encoding. NuEZCam firmware provides audio and video streams. The format of video stream is Motion-JPEG with VGA/HD(720P) resolution. The format of audio stream is PCM or IMAADPCM. N32903 could capture the video and audio streams into the AVI file, and save the AVI file into SD card. Arduino NuEZCam sample NuMaker\_NuEZCam\_Arduino\_UNO.ino runs NuEdu UNO board to control N32903 board by using UART protocol.

In this document, we will describe chapters as below:

- Board Interface
- Firmware Programming
- Source code

## 2 BOARD INTERFACE

### 2.1 Board schematics of N32903

The N32903 demo board includes PCB NHS-55FA93-1-IN-1M1X and PCB NHS-55FA93-1-IN-1D1X. Figure 2-1 is the front view of N32903 board. Within the front view of PCB NHS-55FA93-1-IN-1D1X, there is one connector including 58 pins. While NuEdu UNO board connects N32903 board by using UART protocol. The pin 53 (GPD1) connects RX of NuEdu UNO, the pin 54 (GPD2) connects TX of NuEdu UNO, the pin 15 (VDD33) connects 3.3V of NuEdu UNO, the pin 16 (VSS) connects GND of NuEdu UNO.

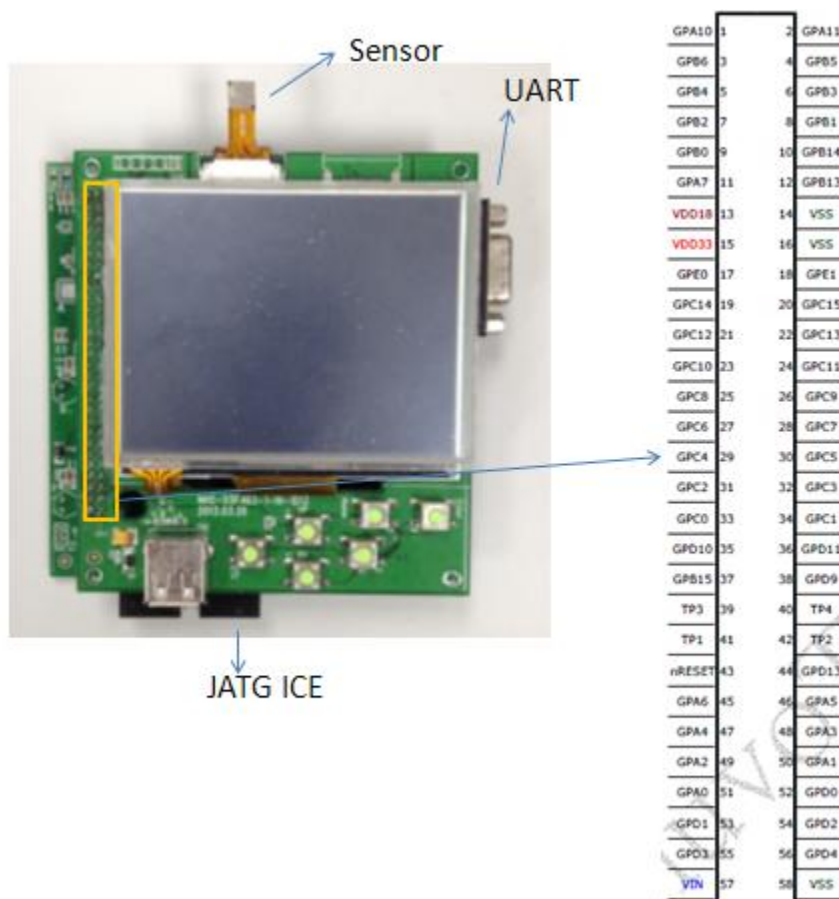


Figure 2-1 Front View of N32903 board.

Figure 2-2 is the back view of PCB NHS-55FA93-1-IN-1M1X, there are 2 jumpers on the left-bottom. The left jumper is ND0 setting and controls the booting mode, recovery mode is for up, normal mode is for down. Before user would like to burn the binary files into the storage (SD/NAND/SPI) of N32903 by using the tool AutoWriter, N32903 board is set the recovery mode to work. If N32903 board is not set the recovery mode, the tools AutoWriter does not work.

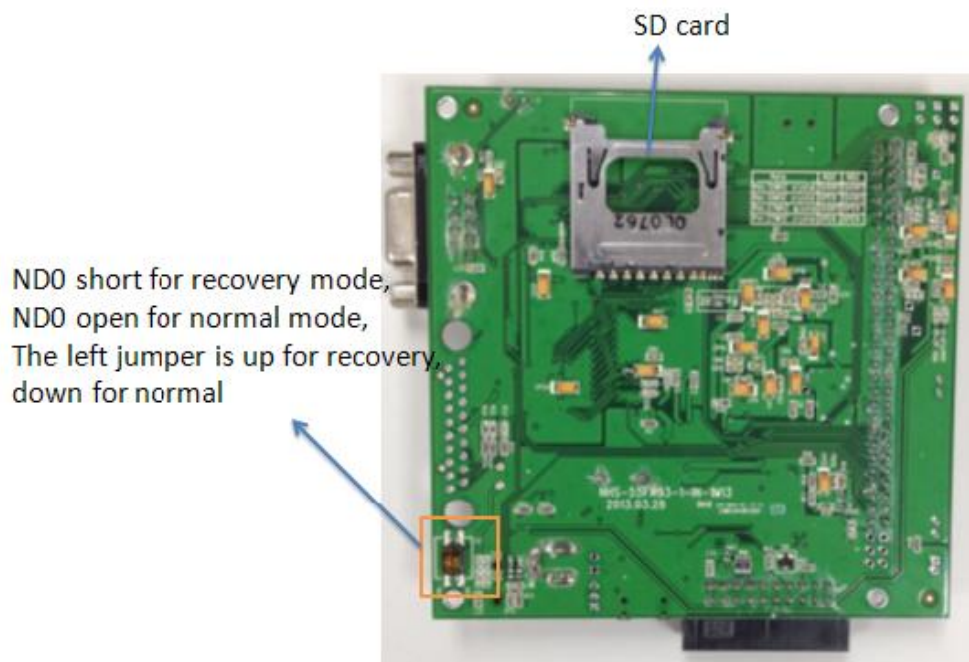


Figure 2-2 Back View of PCB NHS-55FA93-1-IN-1M1X

Figure 2-3 is the Front view of PCB NHS-55FA93-1-IN-1M1X, user could plug the 5V adapter in, and press the power on key to start the N32903 board. Before running the tool AutoWriter, user must connect USB cable between N32903 demo board and Windows.

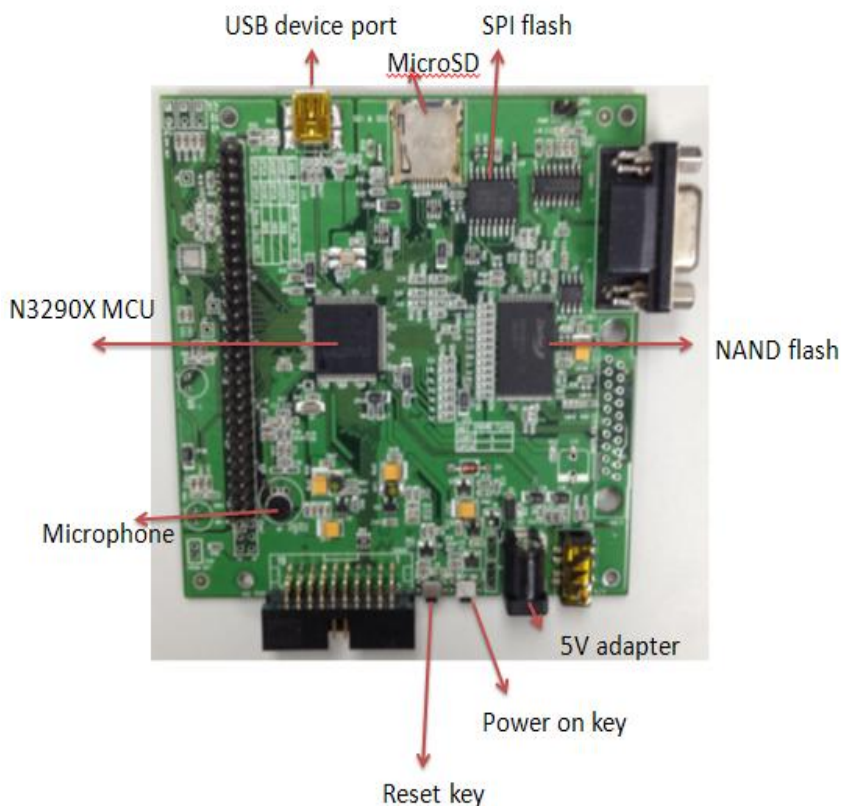


Figure 2-3 Front View of PCB NHS-55FA93-1-IN-1M1X

## 2.2 Board schematics of NuEdu UNO board

In order to do the solution of NuMaker NuEZCam, The setting of NuEdu UNO board should be shown in Figure 2-4. If SW2 is VCOM mode, then the commands of NuEdu UNO board could not communicate with N3290X board.

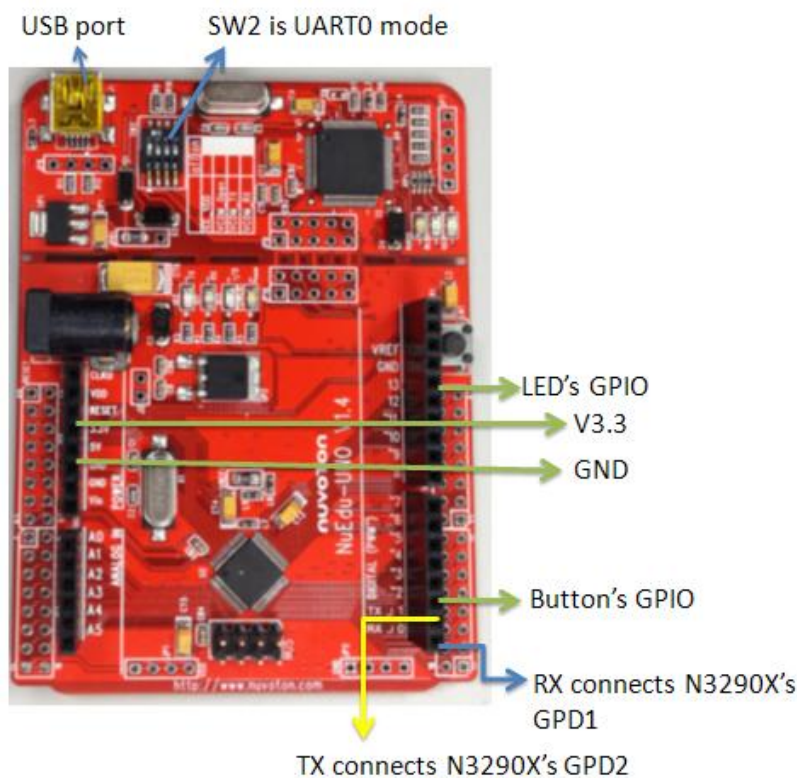


Figure 2-4 The Setting of NuEdu UNO board.

### 3 FIRMWARE PROGRAMMING

In this chapter, we will step by step to guide you program the firmware of AVI encoder for N32903 board using AutoWriter. We released the firmware for N32903 as shown the following figure.

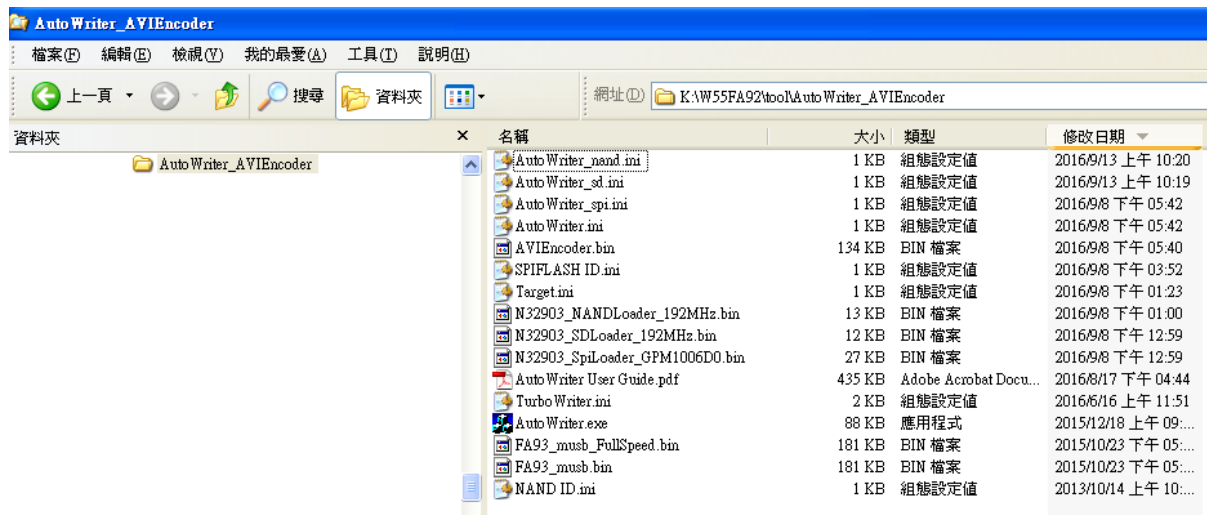


Figure 4-1 Firmware for NuEZCam board

- (1) running AutoWriter.exe execution, the UI of tool is shown as follows. The 'Current Target' is **SPI by default**. Please keep the setting and following below steps:

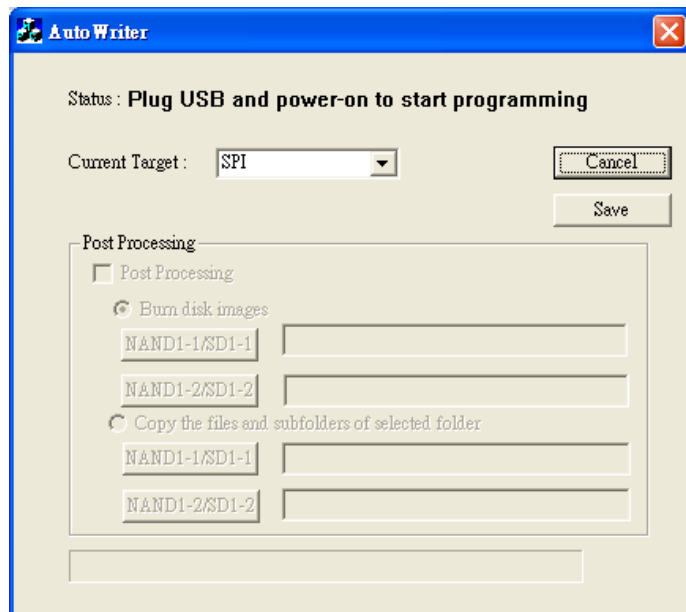


Figure 4-2 Current Target in SPI mode


- (2) sets the N32903 board to be recovery mode as Figures 4-3, and plug USB cable into PC/NB.





Figure 4-3 Booting setting in recovery mode

- (3) Start the N32903 NuEZCam board, the tool AutoWriter will burn the firmware automatically as follows

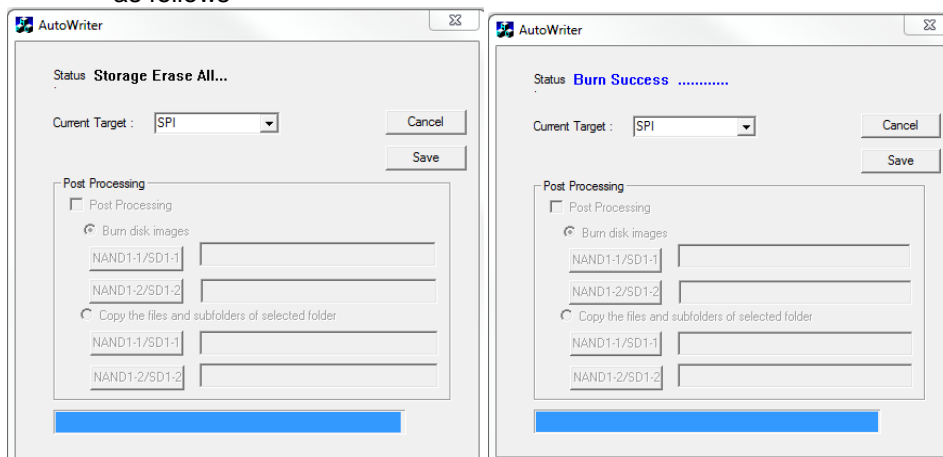

- (4) After finishing firmware programming, the UI will show 'Burn Success .....'.  
 (5) To Un-plug USB Line from PC.  
 (6) To leave 'Recovery Mode' and set 'Normal mode' by setting ND0 of Back View of PCB NHS-55FA93-1-IN-1M1X.  
 (7) Connect NuEdu UNO board and N32903 board by UART protocol. When the program is running, user presses down the button and LED flashes. LED flashes one time and release the button, it means to input 1 to UART log, and later LED flashes 3 times to acknowledge. What times does LED flash and release the button ? it means input the specified times to UART log, and later LED flashes 3 times to acknowledge. If the acknowledgement does not display, the input of UART log must fail. User will see the result from the UART log of N32903 board.

For example, booting the normal mode of the N32903 board, you will see UART log as follows. User runs Arduino code NuMaker\_NuEZCam\_Arduino\_UNO to press down the button. When the LED flashes 2 times, release the button and the input value of UART is 2. The program sets 2 to run the resolution HD. For the camera status, press down the button, user does not release the button until LED flashes 1 times. Then the program sets 1 to run normal photography. After running over 7 seconds, set 1 to stop record. The detailed status of UART log is shown as follows.



```
Init RTC...OK
DDR size: 32MB
SD Port0 Booting Success
Clock Skew
DQS0DS 0x1010
CKDQSDS 0x888800
Code Executes at 0x00900000
W55FA93 SD Boot Loader entry (20131220).
sd init begin !!
sd init end !!
executing address = 0x0
Load file length 0x20188, execute address 0x0
Disable USB Transceiver
Disable ADC and LVR
Disable SPU and ADO
Disable USB phy
The code is for N32903

=====
Please use LCD HANNSTAR_HSD043I9W1
=====
=====
VideoIn library demo code
[1] NT99050 demo - 640X480
[2] NT99141 demo - 1280X720
=====
```


```
Start !
Resolution
[1] QHD (640 x 360)
[2] HD (1280 x 720)
Select [2], HD

Camera status
[1] Normal photography
[2] Time lapse photography
Select [1]
Start Record
Press 1 to stop, 2 to capture one image !
Initial SD NonOS Driver (20160602) for SD port 0
switch into high speed mode !!!
Sensor ID = 8
Device Slave Addr = 0x54
Detectd sensor id0=14 id1=10
encoded file = C:\smpl0001.avi
fsSetFileSize as 86 MB
fsSetFileSize take time ticks: 75
PLL clock = 184,363 KHz
Total divider = 9
DIV_N1, DIV_N0 = 3, 3
T=1.00 (Vid #20 - 20) (Audio #200)
T=2.05 (Vid #41 - 21) (Audio #0)
T=3.10 (Vid #62 - 21) (Audio #200)
T=4.15 (Vid #83 - 21) (Audio #0)
T=5.20 (Vid #104 - 21) (Audio #0)
T=6.25 (Vid #125 - 21) (Audio #0)
T=7.30 (Vid #146 - 21) (Audio #0)
Stop record
AVI record done.
```


## 4 SOURCE CODE

The source code of AVI encoder has versions Keil and ADS. Currently the application runs under N32903 board, support the sensor NT99141 (HD, 1280x720, 20 FPS) and NT99050 (VGA, 30 FPS). N32903 has 8 MB, therefore the solution supports HD and VGA at the same time.

The source code of Non-OS Keil is shown as follows.

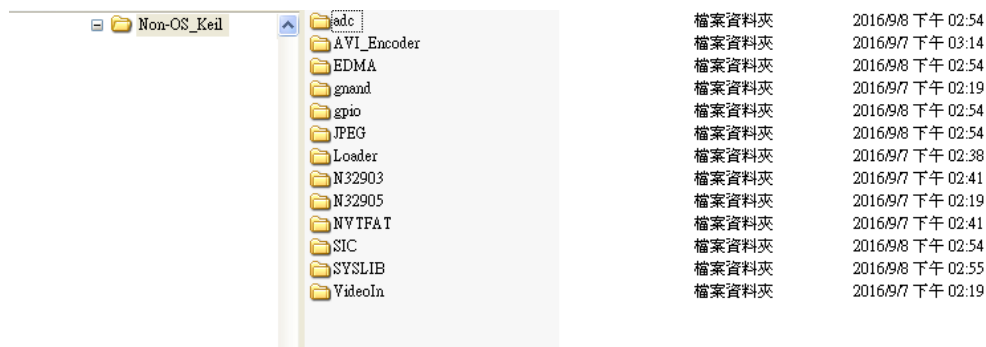

User could open the project AVIEnc\_Demo.uvproj to build and export one binary file AVIEncoder.bin.

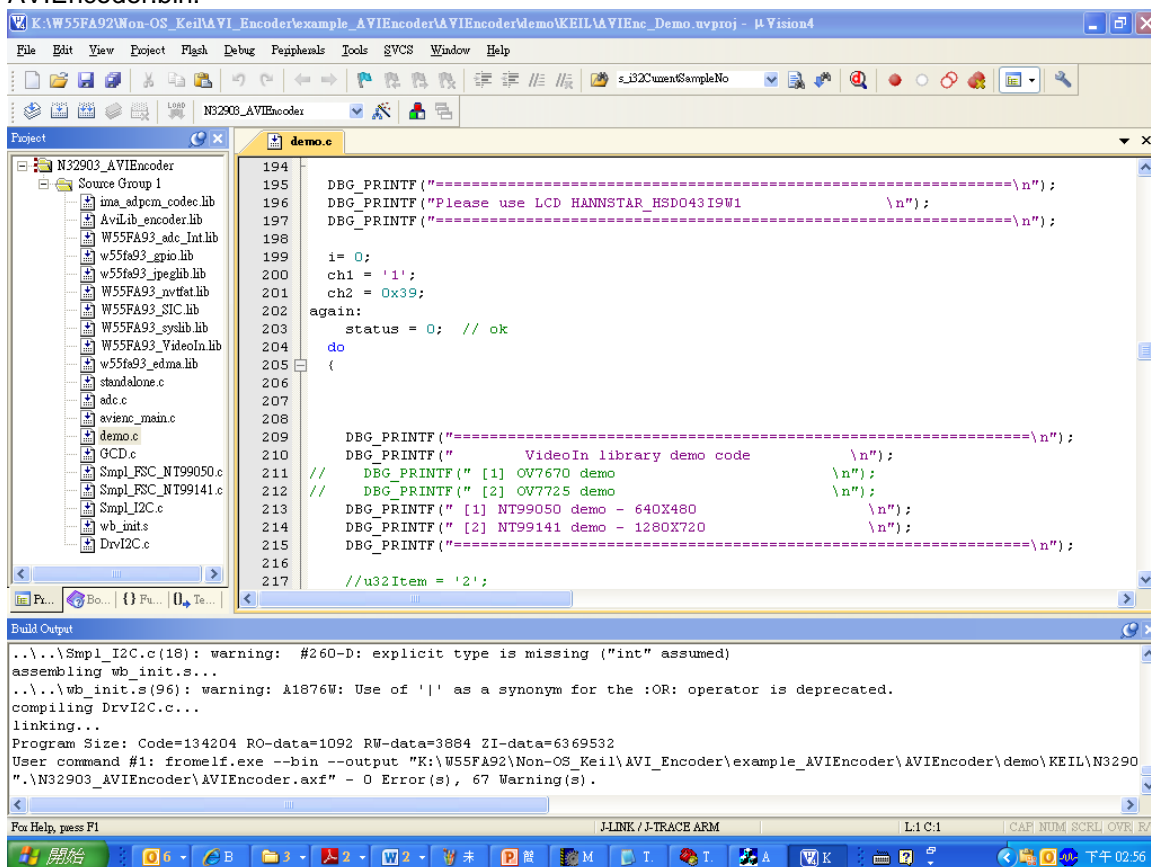

If user would like to change the sensor, you could run the example of the subfolder VideoIn to test the status of sensor, or contact Nuvoton for more information.

## 5 Q&A

Q: How does user build the source code of AVI encoder ?

A: User could unzip the file Non-OS\_KeilBSP.7z, and build the project AVIEnc\_Demo.uvproj within the folder AVI\_Encoder by using Keil 4.54 later. Keil is not a free software.

Q: How does user execute AVI encoder of Non-OS\_Keil alone ?

A: Please comment the definition “// #define ARDUINO 1” within the file demo.h, and rebuild the project to export the file AVIEncoder.bin, copy the file AVIEncoder into the folder AutoWriter\_AViEncoder to replace the old file. Run AutoWriter to burn the file AVIEncoder.bin into the storage of N32903 board for recovery mode. Run the N32903 board for normal mode, user could run UART log of Windows to see the status of UART log.

Q: Could user change the storage of booting instead of SPI flash ?

A: User could change the storage of booting by using SD/NAND instead of SPI. User must modify the script file AutoWriter.ini for AutoWriter. For the booting of NAND, user could copy the file AutoWriter\_nand.ini to replace the script file AutoWriter.ini. For the booting of SD, copy the file AutoWriter\_sd.ini to replace the script file AutoWriter.ini. After burning SD, user must execute Windows explorer to confirm the SD to be formatted. If not yet be formatted, please format the SD card under Windows explorer.

Q: How does user get the data sheet of N32903 board ?

A: Within the subfolder doc, please refer to the document “NHS-55FA93-1-IN-1M14 Demo Board User Manual rev A2.4.pdf” for more details.

## 6 REVISION HISTORY

Date	Revision	Description
2016.09.13	1.00	1. Initially issued.

### Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

---

*Please note that all data and specifications are subject to change without notice.  
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.*