

ARM[®] ARM926EJ-S 32-bit Microprocessor

NuMaker NuEZCam Samples

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1 INTRODUCTION 3

1.1 Sample NuEZCam..... 3

2 NUEDU UNO BOARD 5

2.1 Board schematics..... 5

2.2 Requirement 5

2.2.1 Hardware 6

2.2.2 Software 6

2.3 Purchasing information 6

2.4 Arduino IDE installation 7

2.5 Sample code building 9

3 Q&A 13

4 REVISION HISTORY 14

1 INTRODUCTION

In NuEZCam samples, we use UART protocol to communicate between NuEdu-UNO board and NuEZCam board. AVI encoder could be executed on NuEZCam board, the sample NuMaker_NuEZCam_Arduino_UNO.ino could be executed on the NuEdu-UNO board to control the functions of AVI encoder by using UART protocol. NuEdu-UNO board is compatible with Arduino UNO board. Therefore we could use Arduino sample and library to do it, in order to save the development time of Arduino sample.

In this document, we will describe how to construct the NuEZCam samples. These samples includes NuMaker_NuEZCam_Arduino_UNO.ino for Arduino IDE, and Non-OS Keil BSP for NuEZCam board. The sample NuMaker_NuEZCam_Arduino_UNO.ino has the functions of one LED controlling and one button. These sample can be executed on NuEdu-UNO (or Arduino UNO) board.

1.1 Sample NuEZCam

NuEZCam uses GPIO 2 to be the button, GPIO 13 to be the LED. The following Figure 1-1 is NuEZCam board. The pin TX of NuEdu-UNO board connects the pin RX of NuEZCam board. The pin RX of NuEdu-UNO board connects the pin TX of NuEZCam board. The pin 3.3V of NuEdu-UNO board connects the pin V3.3 of NuEZCam board. The pin GND of NuEdu-UNO board connects the pin GND of NuEZCam board.

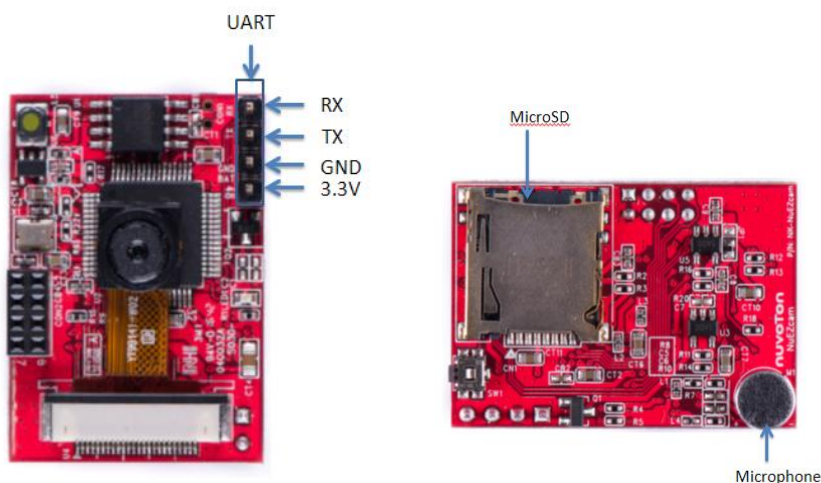


Figure 1-1 NuEZCam board

After connecting between NuEdu-UNO and NuEZCam board, please make sure to set SW2 to be UART0 mode as the following Figure 1-2.

Then RX/TX of NuEdu-UNO could communicate with NuEZCam board by using UART mode, 115200 baud rate, user could create UART log for NuWicam debug board to see the status.

When the program is running, user presses down the button and LED flashes. LED flashes one time and release the button, it means to input 1 to UART log, and later LED flashes 3 times to acknowledge. What times does LED flash and release the button ? it means input the specified times to UART log, and later LED flashes 3 times to acknowledge. If the acknowledgement does not display, the input of UART log must fail. User will see the result from the UART log of NuWicam debug board.

| Switch Pin Number | Function Name | UART0 Mode | VCOM Mode |
|-------------------|---------------|------------|-----------|
| 1 | ICE_VCC | On | On |
| 2 | VCOM_En | Off | On |
| 3 | VCOM_TX | Off | On |
| 4 | VCOM_RX | Off | On |

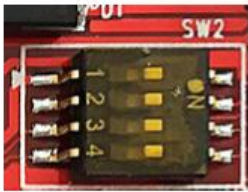


Figure 1-2 UART0 mode of NuEdu-UNO board

2 NUEDU UNO BOARD

2.1 Board schematics

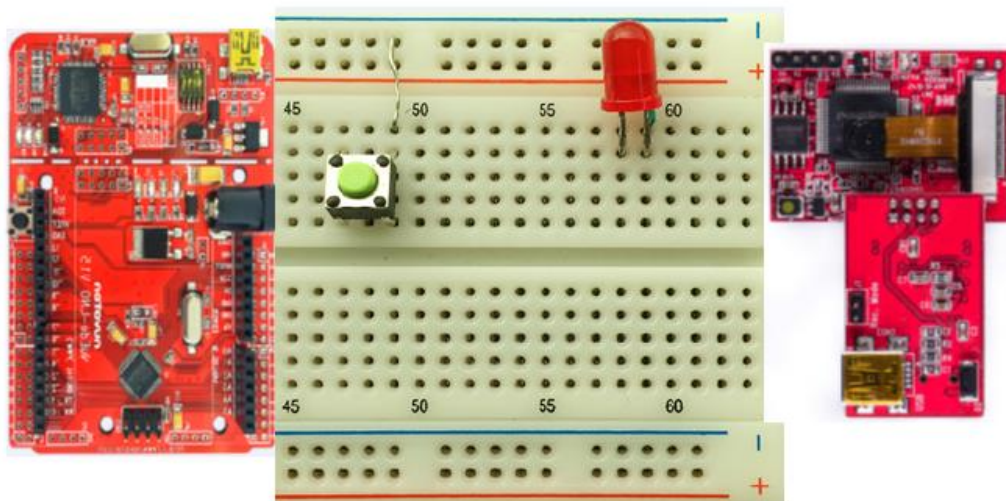


Figure 2-1 NuEZCam board with NuEdu UNO board

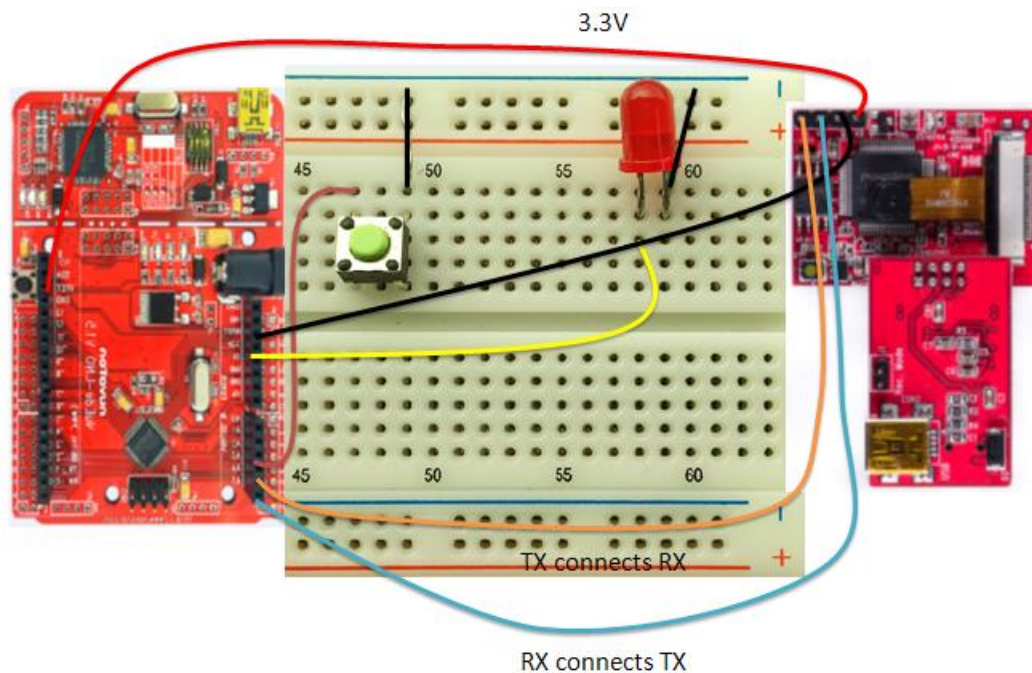


Figure 2-2 NuEZCam board with NuEdu UNO after connecting the components

2.2 Requirement

2.2.1 Hardware

- NuWicam debug board and NuEZCam board with firmware x 1
- Nn-Edu UNO board x 1 or Arduino UNO board x 1
 - **If your board is Nu_Edu UNO, please remember to switch 2, 3 and 4 of SW2 to 'OFF' on the board.**
- Red LEDs x 1.
- One button

2.2.2 Software

- Arduino IDE v1.6.9 (or later)
 - You can refer the page to install arduino IDE for NuEdu-UNO.
<https://www.arduino.cc/en/Main/Software>
- NuMaker_NuEZCam_Arduino_UNO sample code for Arduino UNO/UnEdu UNO board.
 - Please download source on github server.
 - Path: https://github.com/OpenNuvoton/NuMaker_NuEZCam_Samples
- Non-OS_Keil BSP for N32903
 - Please download Non-OS BSP on github server.
 Path: https://github.com/OpenNuvoton/NuMaker_NuEZCam_Samples
- Windows tool AutoWriter
 - Please download AutoWriter tool on github server.
 Path: https://github.com/OpenNuvoton/NuMaker_NuEZCam_Samples

2.3 Purchasing information

- NuEdu UNO board
 URL: <https://world.tmall.com/item/523268526584.htm?spm=a312a.7700824.w4011-6765047385.25.2qjfiz&id=523268526584&rn=93873a1038dd4952f86ee4c2766ccae0&abucket=10>


2.4 Arduino IDE installation

Step 1: Download Arduino 1.6.10 IDE from <https://www.arduino.cc/en/Main/Software>




Step 2: Extract arduino-1.6.10-windows.zip to c:\arduino-1.6.10.

Step 3: Double-click arduino.exe, and then go to File->Preferences.

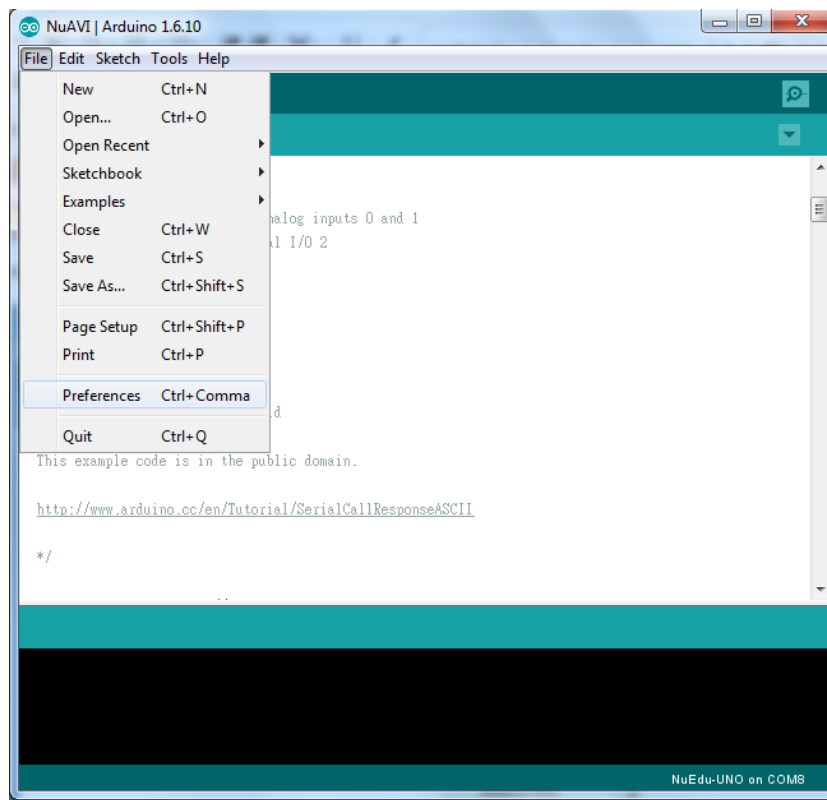


Step 4: Paste following URL to 'Additional Boards Manager URLs' input field:


https://raw.githubusercontent.com/OpenNuvoton/NuEdu-UNO/master/package_nuvoton_index.json

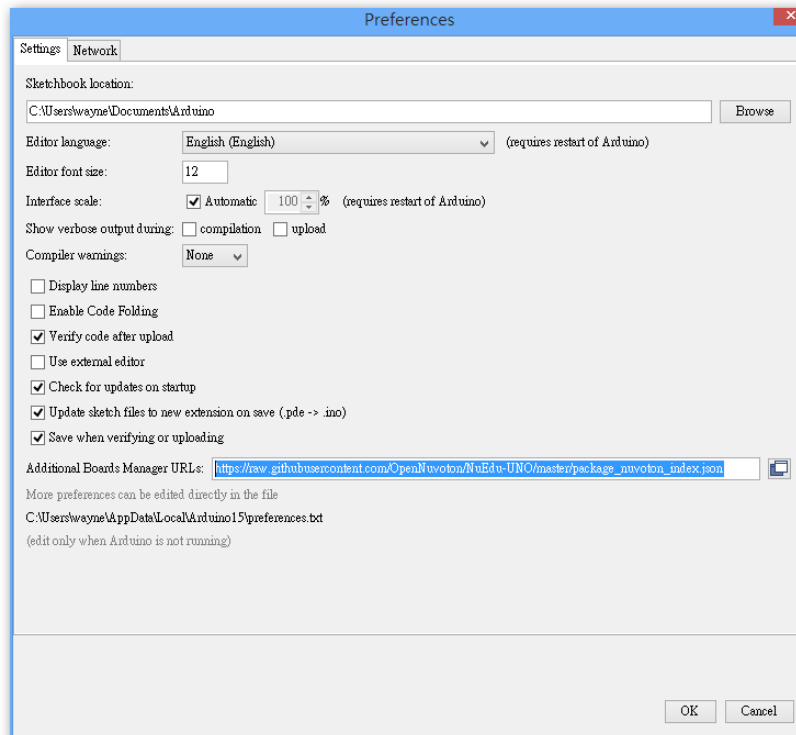

Step 5: Under Tools->Board->Boards Manger, search NuEdu-UNO by Nuvoton, click Install

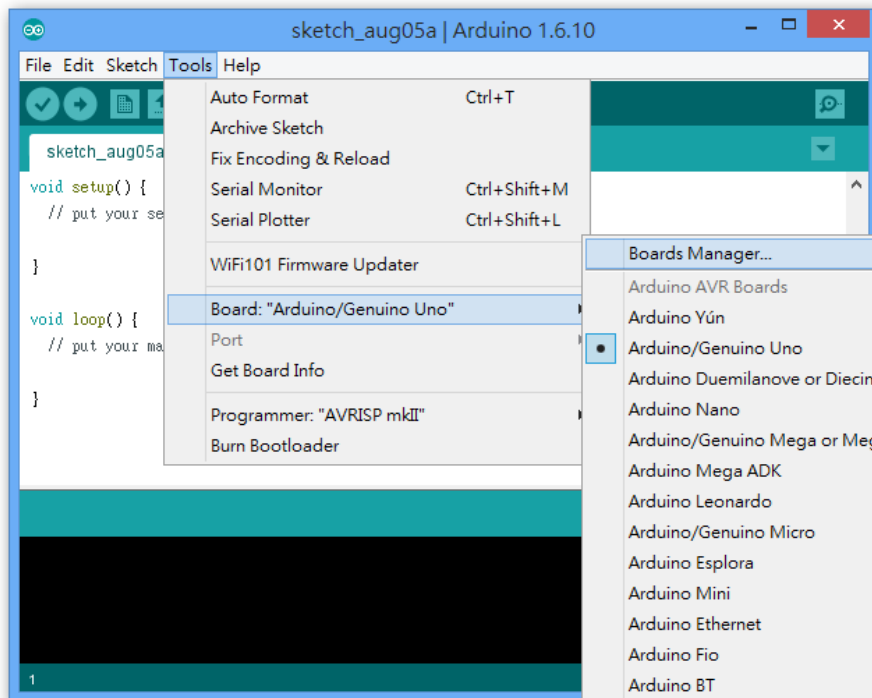

Step 6: You can select NuEdu-UNO in Arduino IDE now.

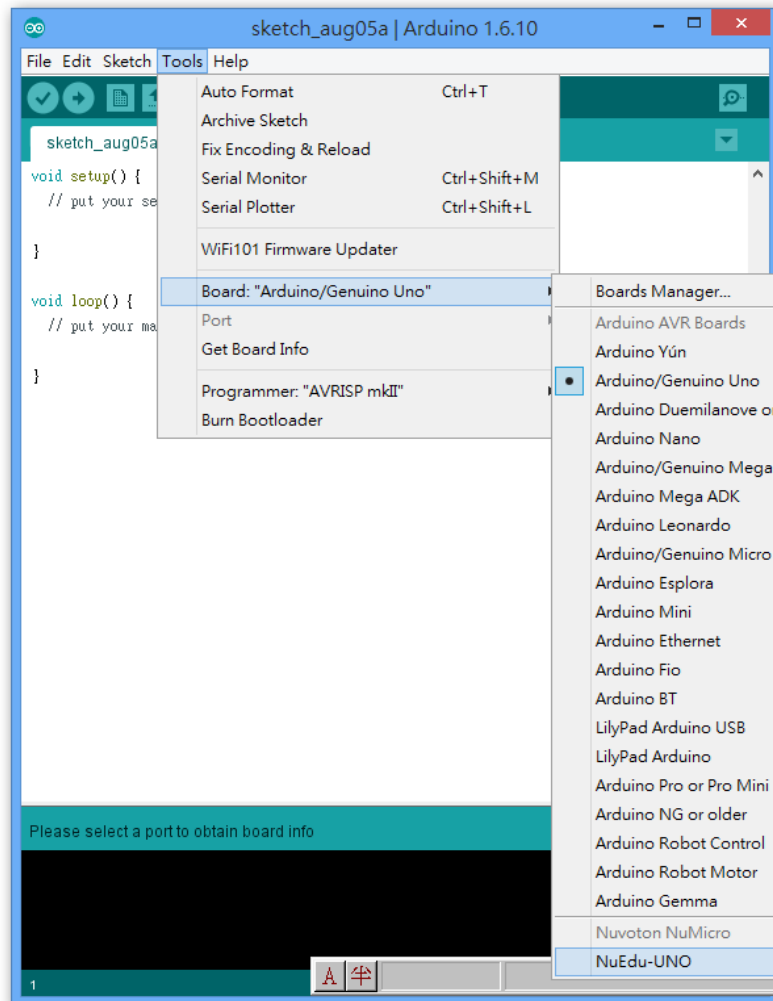

Sometimes the board NuEdu-UNO could be found under the menu item.

2.5 Sample code building


Please follow below steps to build executable binary.

Step 1: Load NuMaker_NuEZCam_Arduino_UNO sample code for Arduino UNO board.




Step 3: Select configuration for Geduino UNO board.

<Tools> → <Board: "NuEdu UNO"> → Select NuEdu UNO.

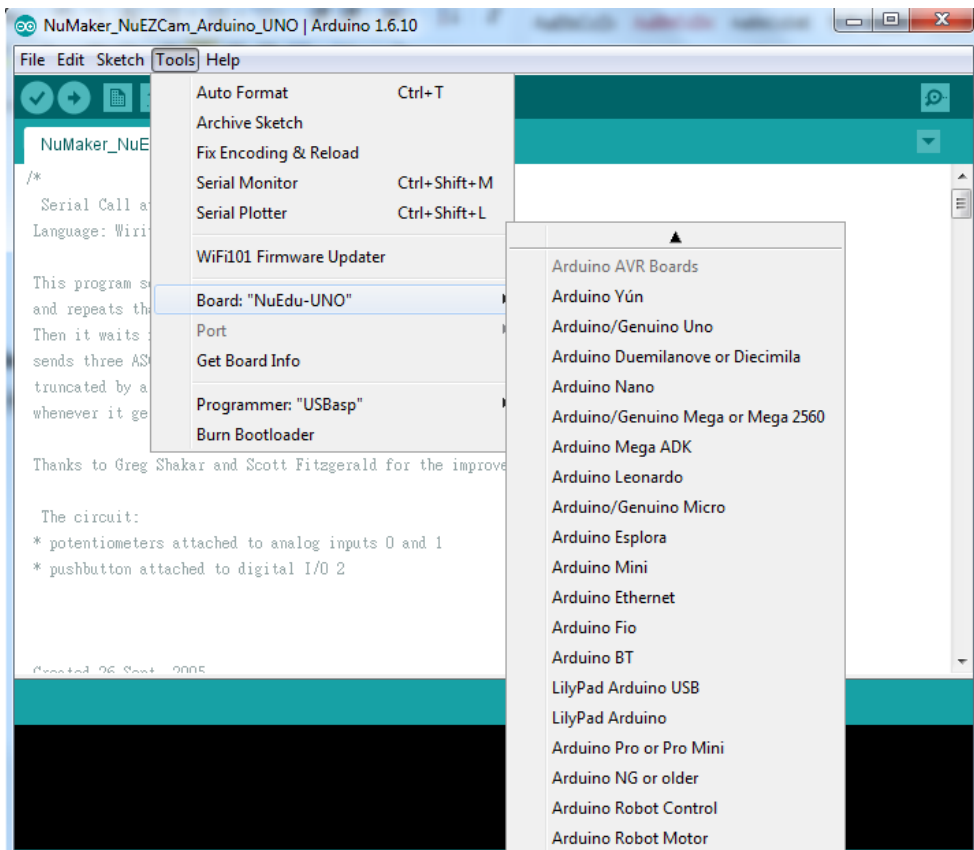


Step 4: Build sample code.

<Sketch> → <Verify/Compile>

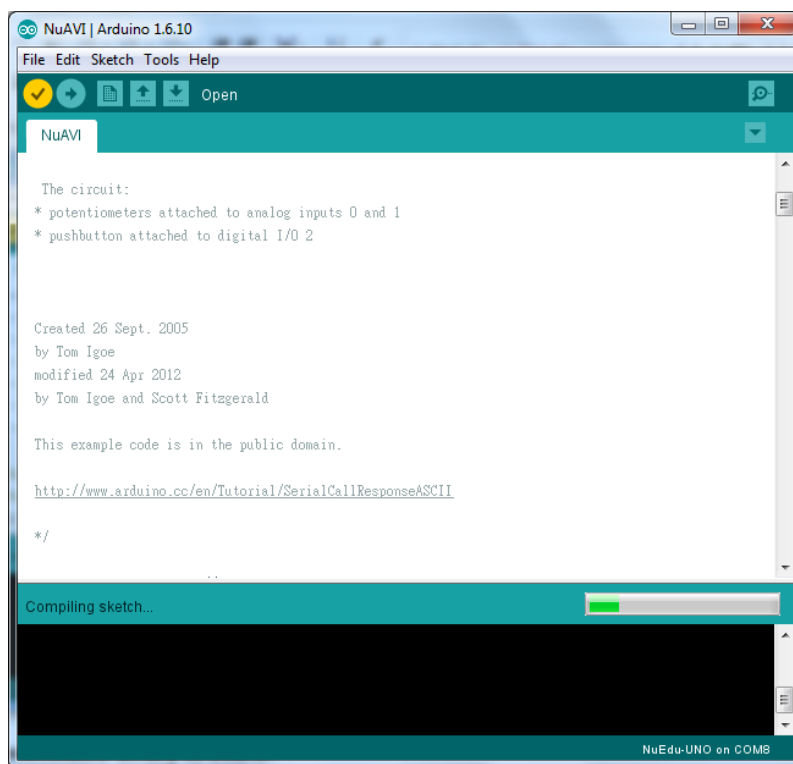

Step 5: Upload executable binary to board.

<Sketch> → <Upload>

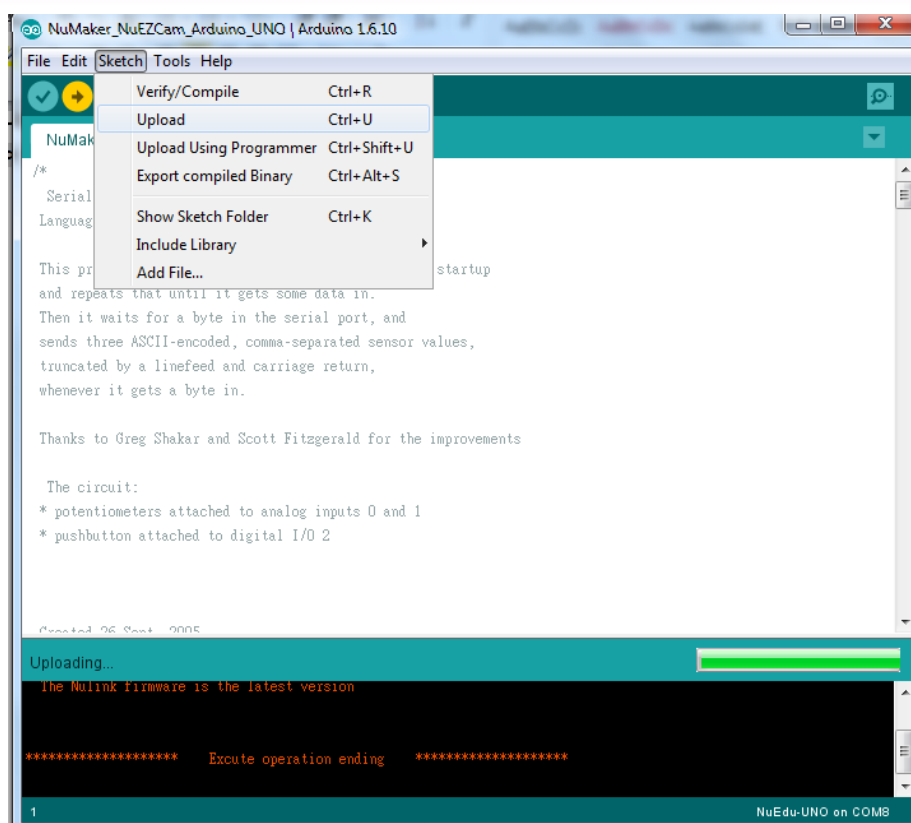

3 Q&A

Q: How do test NuEdu-UNO board alone by the UART log of Windows ?

A: Please go to the path https://github.com/OpenNuvoton/NuMaker_NuEZCam_Samples , to execute the file Nu-Link_USB_Driver 1.2.exe to install the Windows driver of Nuvoton Virtual Com port. SW2 sets VCOM mode for the jumpers VCOM_En, VCOM_TX and VCOM_RX are on. Then the Uart log of Windows could set the commands to NuEdu-NO board. In short NuEdu-UNO has two mode, VCOM mode and UART0 mode. Within VCOM mode, NuEdu-UNO board as slave could connect the UART log of Windows. For UART0 mode, NuEdu-UNO board as master could connect NuEZCam board

Q: Could the UART log of Windows set the commands to the NuWicam debug board of NuMaker NuEZCom ?

A: Currently the function does not work. It means that NuEdu-UNO board has the both functions "UART mode" and "VCOM mode", the NuEdu-UNO board has no such function.

Q: Could Arduino board do the solution of NuMaker NuEZCam ?

A: Currently Arduino UNO board has the functions of TX and RX, the functions connects the UART log of Windows. If Arduino board connects the NuEZCam board, user should find the 2 GPIOs to be TX and RX and uses the TX and RX to connect the RX and TX of NuEZCam board.

Q: How to do ARM mbed IDE

A: Please refer to the code in the path <https://developer.mbed.org/users/shliu1/code/mbed-os-example-NuEZCam/>, and refer to the folder NuMaker_NuEZCam_NuMaker_PFM_NUC472 within the path https://github.com/OpenNuvoton/NuMaker_NuEZCam_Samples.

4 REVISION HISTORY

| Date | Revision | Description |
|------------|----------|--------------------------|
| 2016.11.15 | 1.02 | 1. Support NuEZCam board |
| 2016.09.13 | 1.01 | 1. Initially issued |

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

*Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.*