

**ARM® ARM926EJ-S**  
**32-bit Microprocessor**

**NuMaker NuBlindCam**  
**Samples**

*The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.*

*Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.*

*All data and specifications are subject to change without notice.*

For additional information or questions, please contact: Nuvoton Technology Corporation.

[www.nuvoton.com](http://www.nuvoton.com)

## Table of Contents

1	INTRODUCTION .....	3
1.1	Sample NuBlindCam .....	3
2	NUEDU UNO BOARD .....	6
2.1	Board schematics.....	6
2.2	Requirement .....	6
2.2.1	Hardware .....	6
2.2.2	Software .....	7
2.3	Purchasing information .....	7
2.4	Arduino IDE installation .....	8
2.5	Sample code building .....	10
3	REVISION HISTORY .....	14

## 1 INTRODUCTION

In NuBlindCam samples, we use UART protocol to communicate between NuEdu-UNO board and N32903 board. AVI encoder could be executed on N32903 board, the sample NuBlindCam.ino could be executed on the NuEdu-UNO board to control the functions of AVI encoder by using UART protocol. NuEdu-UNO board is compatible with Arduino UNO board. Therefore we could use Arduino sample and library to do it, in order to save the development time of Arduino sample.

In this document, we will describe how to construct the NuBlindCam samples. These samples includes NuMaker\_NuBlindCam\_Arduino\_UNO.ino for Arduino IDE, and Non-OS Keil BSP for N32903 board. The sample NuMaker\_NuBlindCam\_Arduino\_UNO.ino has the functions of one LED controlling and one button. These sample can be executed on NuEdu-UNO (or Arduino UNO) board.

### 1.1 Sample NuBlindCam

NuBlindCam uses GPIO 2 to be the button, GPIO 13 to be the LED. The following Figure 1-1 is the connector of partial schematics for N32903 board. The pin TX of NuEdu-UNO board connects the pin 54 (GPD2) of N32903 board. The pin RX of NuEdu-UNO board connects the pin 53 (GPD1) of N32903 board. The pin 3.3V of NuEdu-UNO board connects the pin 15 (VDD33) of N32903 board. The pin GND of NuEdu-UNO board connects the pin 16 (VSS) of N32903 board.

CON12 (Top board, 1D12) Header 29x2, 2.54mm Male:

GPA10	1	GPA11	2
GPB6	3	GPB5	4
GPB4	5	GPB3	6
GPB2	7	GPB1	8
GPB0	9	GPB14	10
GPA7	11	GPB13	12
VDD18	13	VSS	14
VDD33	15	VSS	16
GPB0	17	GPB1	18
GPC14	19	GPC15	20
GPC12	21	GPC13	22
GPC10	23	GPC11	24
GPC8	25	GPC9	26
GPC6	27	GPC7	28
GPC4	29	GPC5	30
GPC2	31	GPC3	32
GPC0	33	GPC1	34
GPD10	35	GPD11	36
GPB15	37	GPB9	38
TP3	39	TP4	40
TP1	41	JP2	42
nRESET	43	GPD13	44
GPA6	45	GPA5	46
GPA4	47	GPA3	48
GPA2	49	GPA1	50
GPA0	51	GPD0	52
GPD1	53	GPD2	54
GPD3	55	GPD4	56
VSS	57	VSS	58

Figure 1-1 connector of N32903

After connecting between NuEdu-UNO and N32903 board, please make sure to set SW2 to be UART0 mode as the following Figure 1-2.

Then RX/TX of NuEdu-UNO could communicate with N32903 board by using UART mode, 115200 baud rate, user could create UART log for N32903 to see the status.

When the program is running, user presses down the button and LED flashes. LED flashes one time and release the button, it means to input 1 to UART log, and later LED flashes 3 times to acknowledge. What times does LED flash and release the button ? it means input the specified times to UART log, and later LED flashes 3 times to acknowledge. If the acknowledge does not display, the input of UART log must fail. User will see the result from the UART log of N32903 board.


Switch Pin Number	Function Name	UART0 Mode	VCOM Mode	
1	ICE_VCC	On	On	
2	VCOM_En	Off	On	
3	VCOM_TX	Off	On	
4	VCOM_RX	Off	On	

Figure 1-2 UART0 mode of NuEdu-UNO board



## 2 NUEDU UNO BOARD

### 2.1 Board schematics

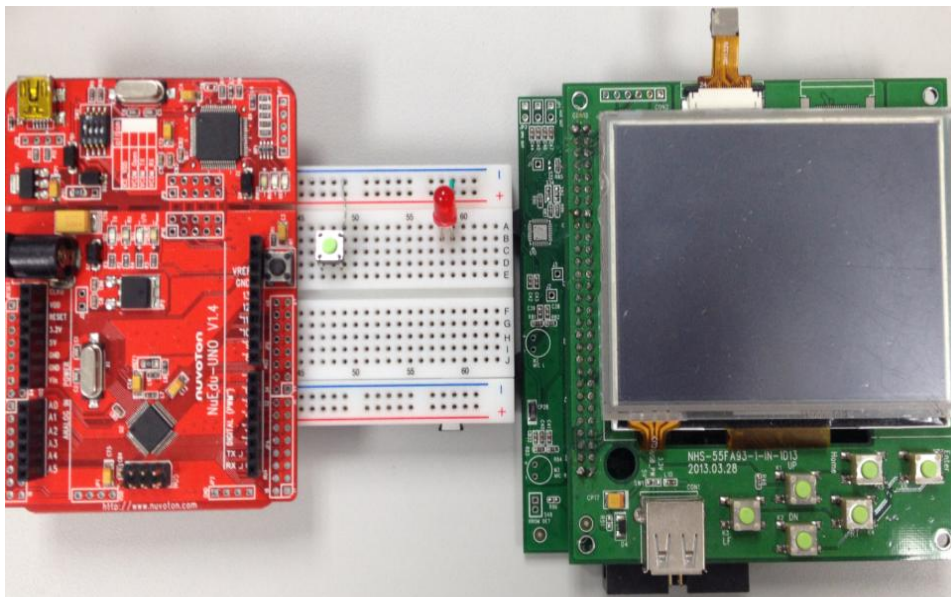


Figure 2-1 N32903 board with NuEdu UNO board

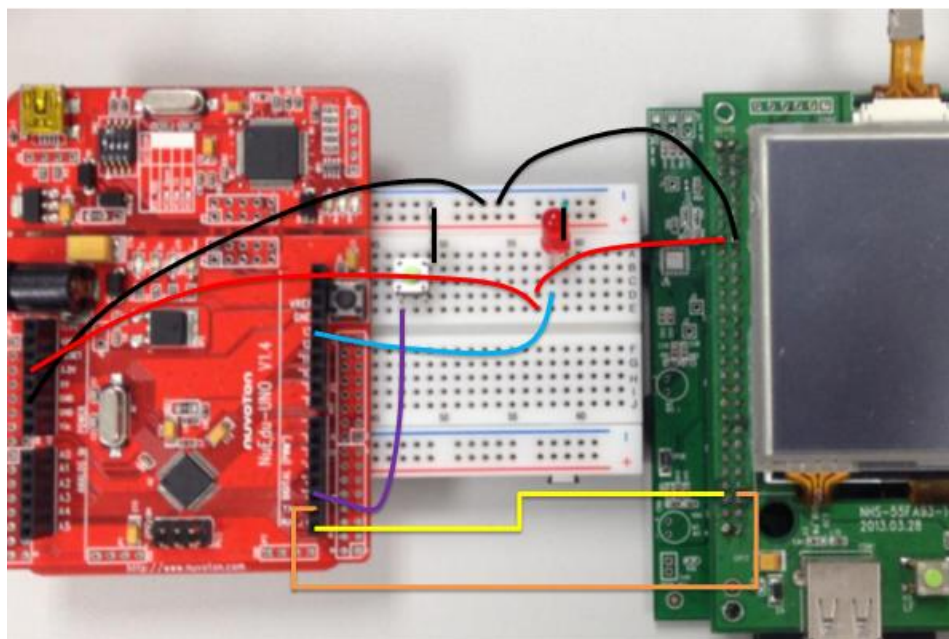


Figure 2-2 N32903 board with NuEdu UNO after connecting the components

### 2.2 Requirement

#### 2.2.1 Hardware

- N32903 board with firmware x 1

- Nn-Edu UNO board x 1 or Arduino UNO board x 1
  - **If your board is Nu\_Edu UNO, please remember to switch 2, 3 and 4 of SW2 to 'OFF' on the board.**
- Red LEDs x 1.
- One button

### 2.2.2 Software

- Arduino IDE v1.6.9 (or later)
  - You can refer the page to install arduino IDE for NuEdu-UNO.  
<https://www.arduino.cc/en/Main/Software>
- NuBlindCam sample code for Arduino UNO/UnEdu UNO board.
  - Please download source on github server.
  - Path:  
[https://github.com/OpenNuvoton/NuMaker\\_NuBlindCam\\_Samples/NuMaker\\_NuBlindCam\\_Arduino\\_UNO](https://github.com/OpenNuvoton/NuMaker_NuBlindCam_Samples/NuMaker_NuBlindCam_Arduino_UNO)
- Non-OS BSP for N32903
  - Please download Non-OS BSP on github server.  
 Path: [https://github.com/OpenNuvoton/NuMaker\\_NuBlindCam\\_Samples/Non-OS](https://github.com/OpenNuvoton/NuMaker_NuBlindCam_Samples/Non-OS)
- Windows tool TurboWriter
  - Please download TurboWriter tool on github server.  
 Path: [https://github.com/OpenNuvoton/NuMaker\\_NuBlindCam\\_Samples/Utility](https://github.com/OpenNuvoton/NuMaker_NuBlindCam_Samples/Utility)

## 2.3 Purchasing information

- **NuEdu UNO board**  
 URL: <https://world.tmall.com/item/523268526584.htm?spm=a312a.7700824.w4011-6765047385.25.2qjfiz&id=523268526584&rn=93873a1038dd4952f86ee4c2766ccae0&abucket=10>


## 2.4 Arduino IDE installation

Step 1: Download Arduino 1.6.10 IDE from <https://www.arduino.cc/en/Main/Software>



Step 2: Extract arduino-1.6.10-windows.zip to c:\arduino-1.6.10.


Step 3: Double-click arduino.exe, and then go to File->Preferences.

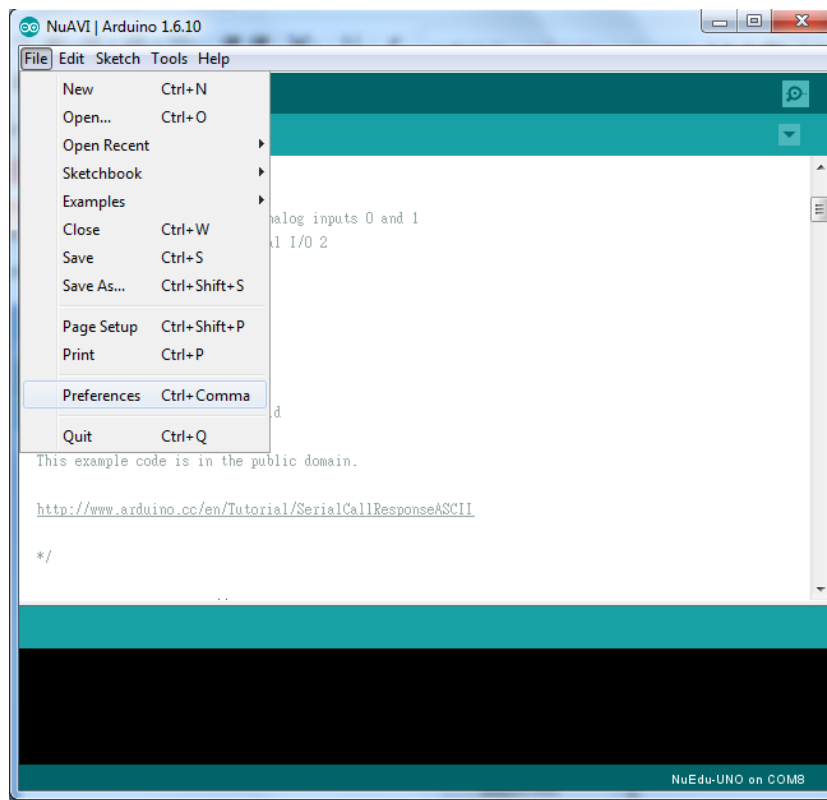




**Step 4: Paste following URL to 'Additional Boards Manager URLs' input field:**


[https://raw.githubusercontent.com/OpenNuvoton/NuEdu-UNO/master/package\\_nuvoton\\_index.json](https://raw.githubusercontent.com/OpenNuvoton/NuEdu-UNO/master/package_nuvoton_index.json)

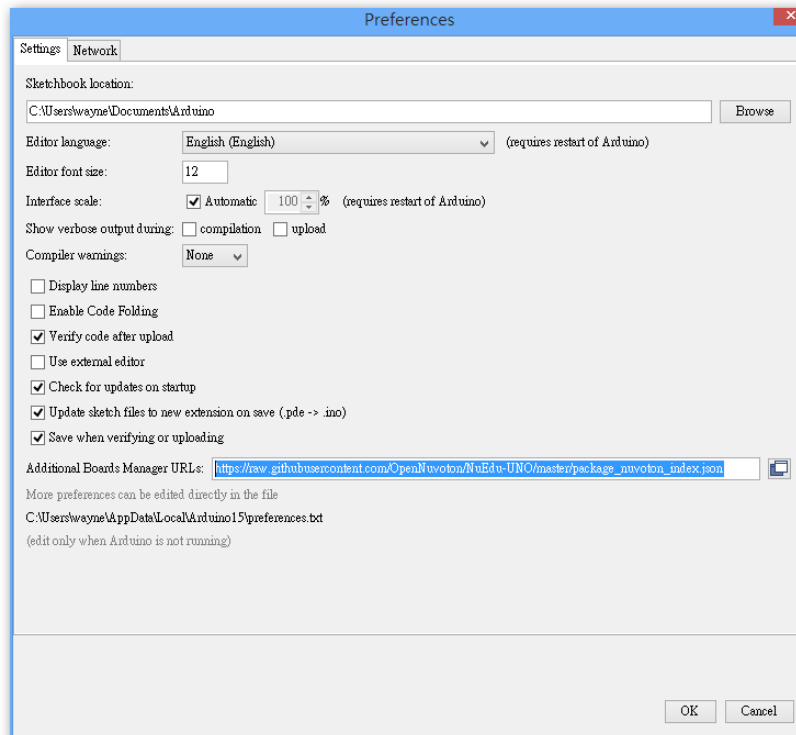

**Step 5: Under Tools->Board->Boards Manger, search NuEdu-UNO by Nuvoton, click Install**

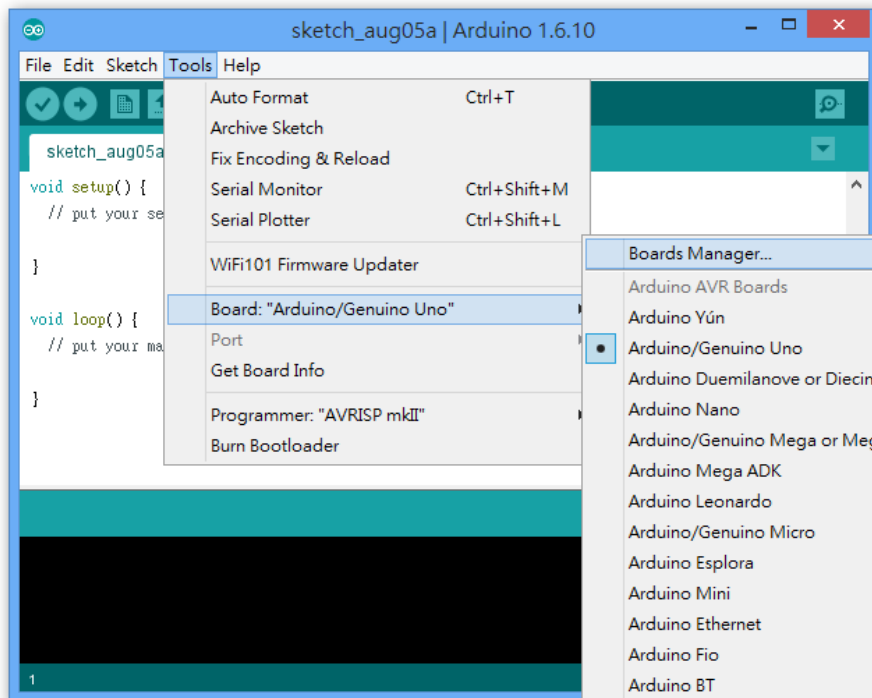

Step 6: You can select NuEdu-UNO in Arduino IDE now.

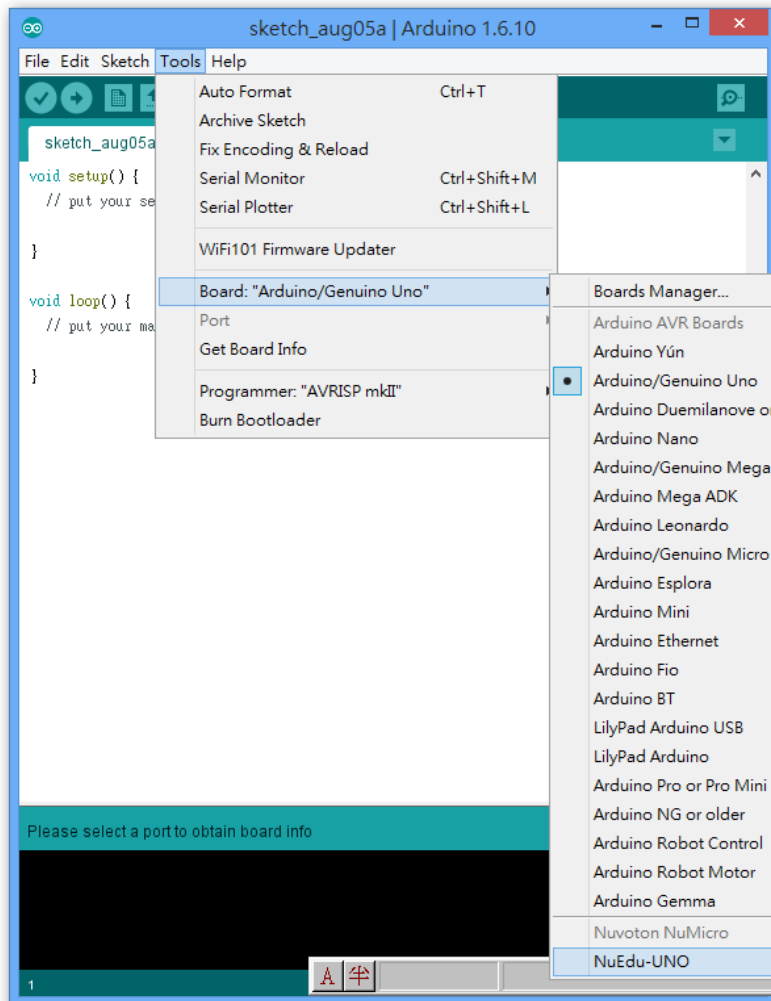


Sometimes the board NuEdu-UNO could be found under the menu item.

## 2.5 Sample code building


Please follow below steps to build executable binary.

**Step 1: Load NuAVI sample code for Arduino UNO board.**

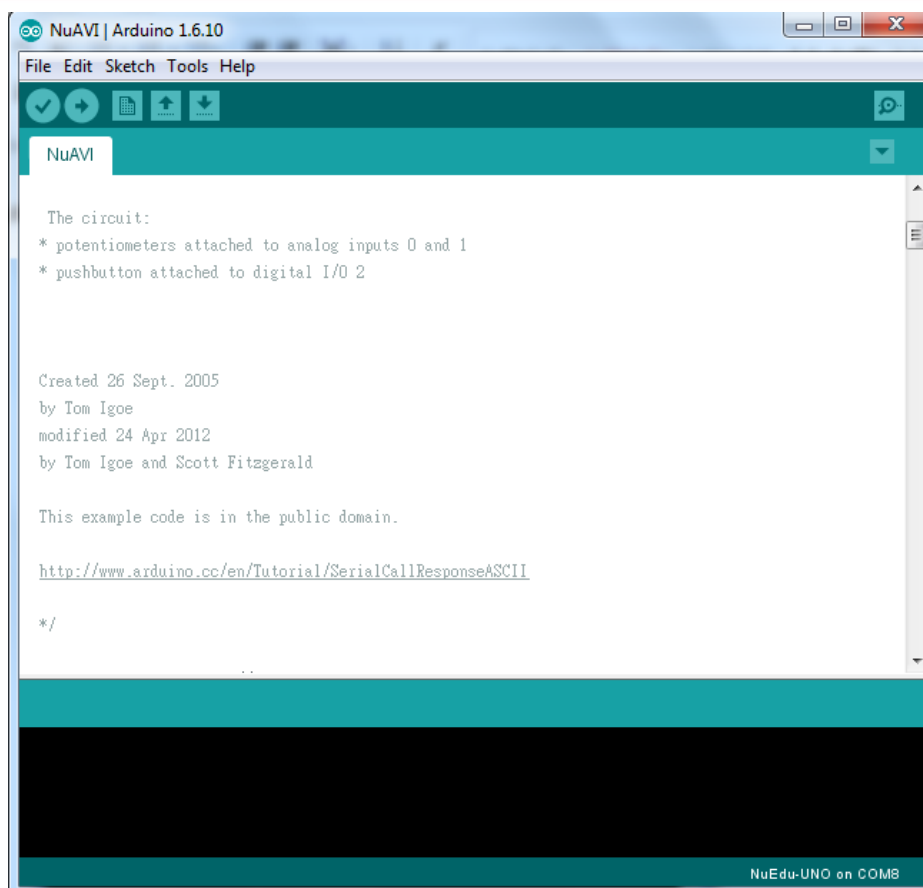


**Step 3: Select configuration for Geduino UNO board.**

**<Tools> → <Board: "NuEdu UNO"> → Select NuEdu UNO.**

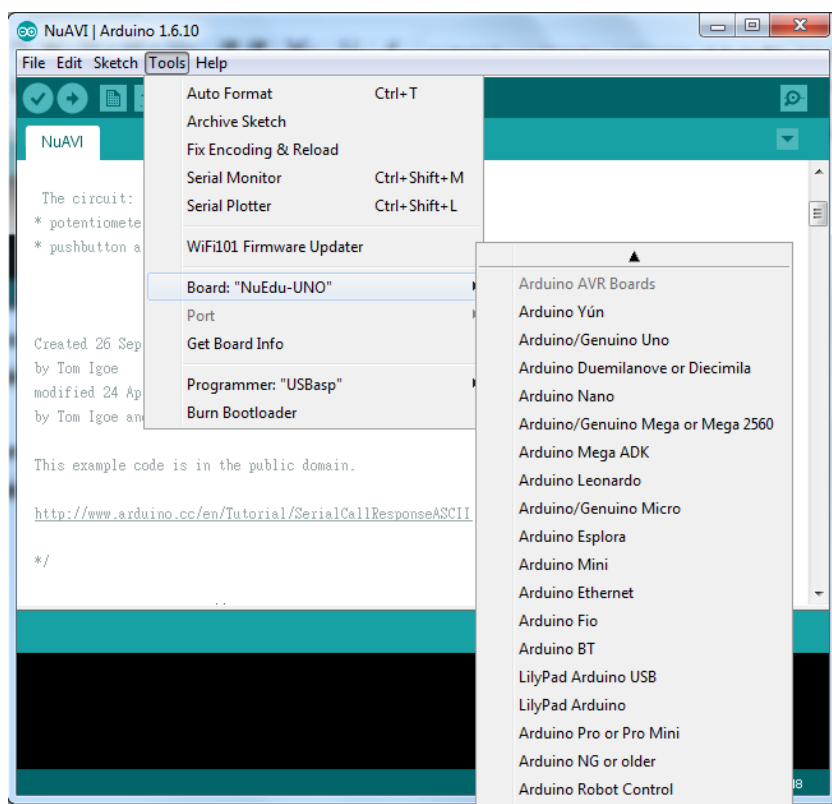


**Step 4: Build sample code.**

**<Sketch> → <Verify/Compile>**

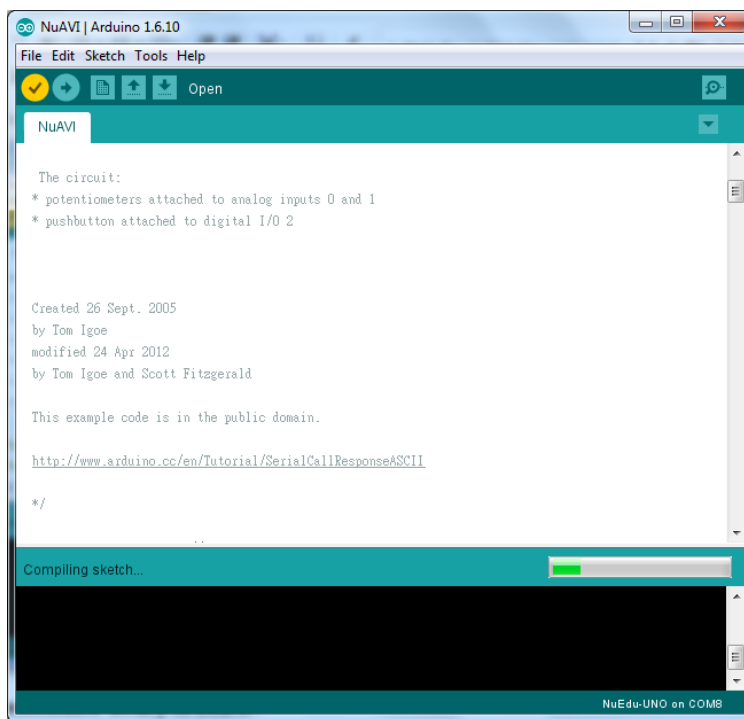

**Step 5: Upload executable binary to board.**

**<Sketch> → <Upload>**

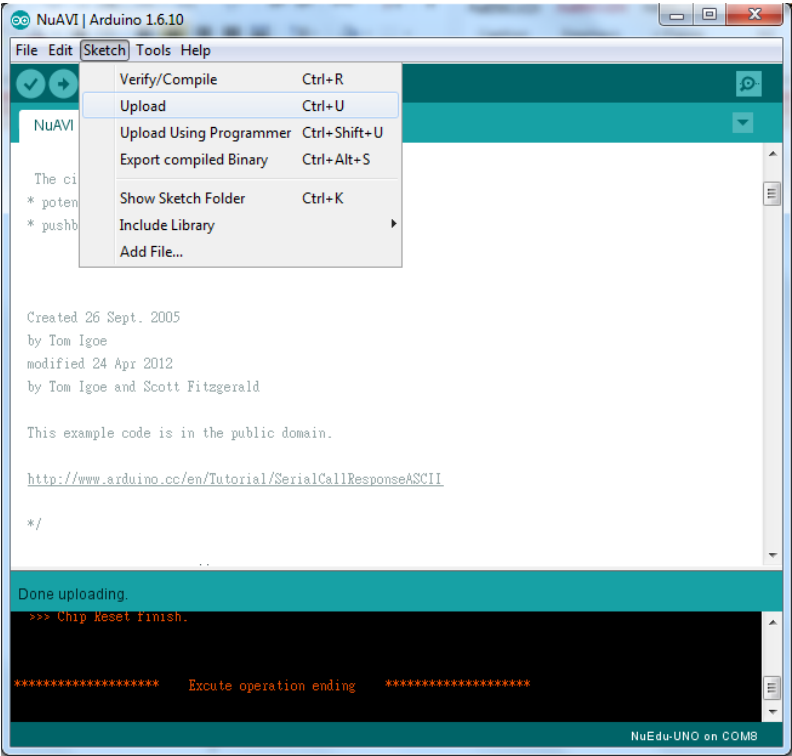

### 3 REVISION HISTORY

Date	Revision	Description
2016.09.09	1.00	1. Initially issued.

### Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

---

*Please note that all data and specifications are subject to change without notice.  
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.*