



ModularNode & IndoorNode




Getting Started Guide

(c) by  **WASN**
Wide Area Sensor Network



Connecting the Indoor/ModularNode or a CubeCell to your computer
Use CubeCell Configurator to upload firmware
Use CubeCell Configurator for configuration
The Things Network decoder
Connecting a sensor
Connecting a battery to the CubeCell Capsule

Connecting the Indoor/ModularNode or CubeCell to your Computer

- connect the USB board to the capsule

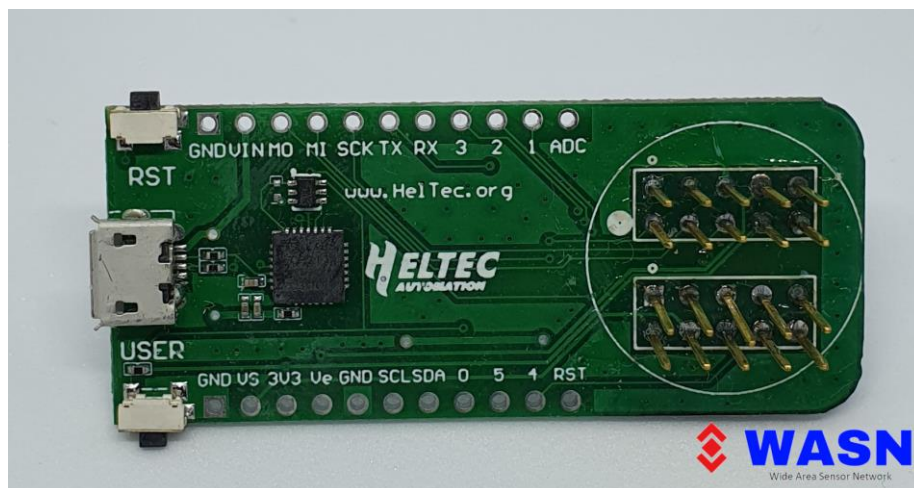

- the white dot on the USB board must align with the white dot on the capsule (beside the Reset button)

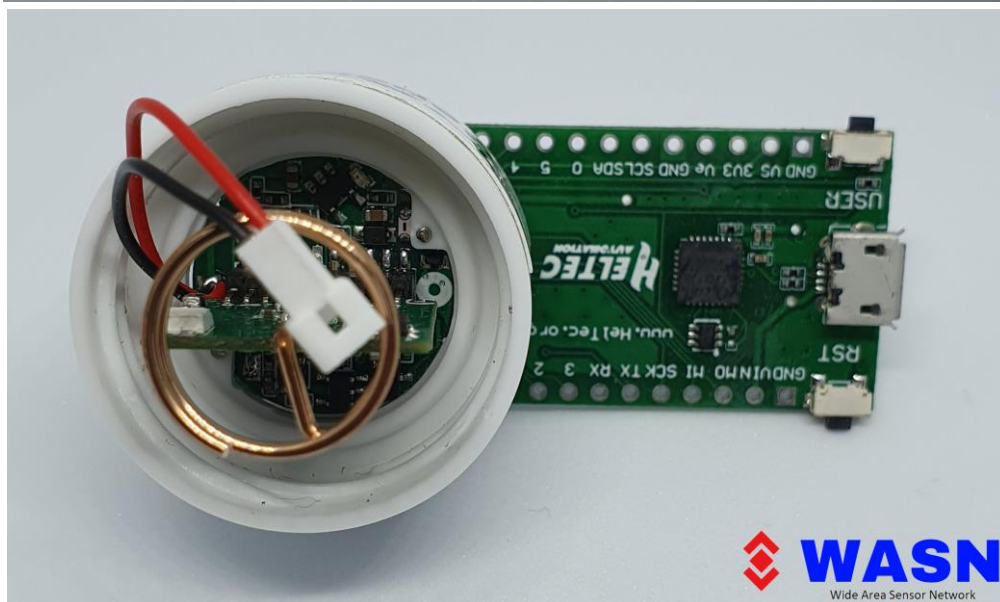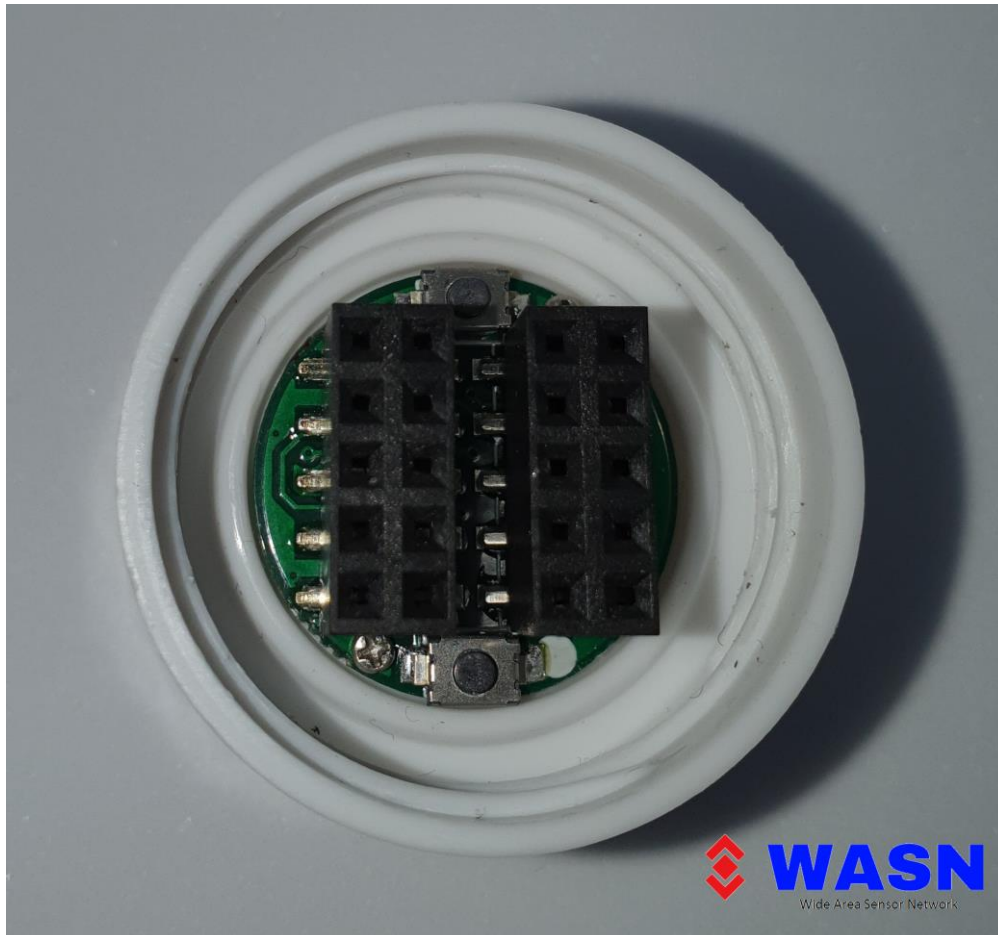


- connect the micro USB of the USB board to your computer

If you have a Indoor/ModularNode or CubeCell board just connect the micro USB to your computer

Use CubeCell Configurator to upload firmware

The easy way to get the Capsule up and running is:

- Download the CubeCell Configurator from here [download](#).
- Open the CubeCell Configurator

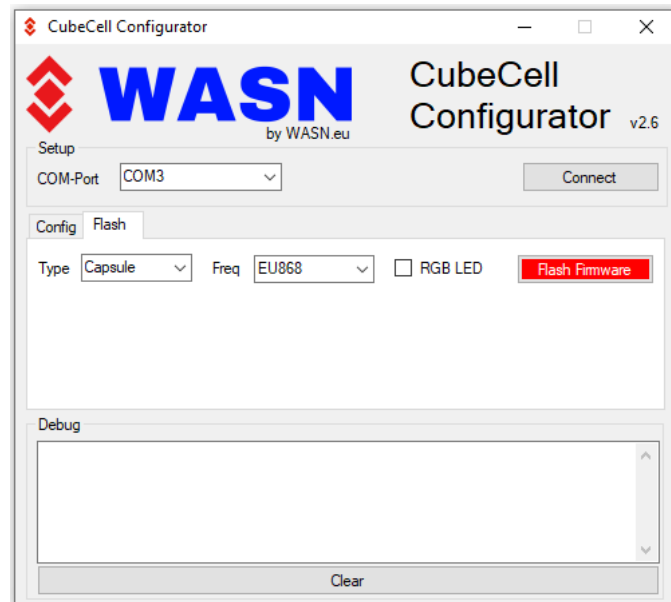

- Select the right COM port (don't click connect)
- Select the Flash Tab
 - Select the Node Type (IndoorNode, ModularNode, Board, Capsule)
 - Select the right frequency band (EU868, US915, AU915)
 - Select RGB LED Status (on, off)
 - click Flash Firmware
 - Firmware is now downloaded from github.
 - The firmware will be written to the capsule
 - The debug text box shows the state of the firmware download and flash.
 - If an error happens this will be in the debug text box too.

```
Downloading Firmware ...  
Downloading Firmware done  
Flashing Firmware ...  
PROCESS PERCENTAGE  
Flashing Firmware done  
CleanUp Starting  
CleanUp done
```

The firmware has the following config:

- REGION: (selectable)
 - EU868
 - US915
 - AU915
- CLASS_A
- OTAA
- ADR: ON
- Net_Reservation: ON
- AT_SUPPORT: ON
- RGB: (selectable)
 - ACTIVE
 - DEACTIVE
- All Keys set to zero

The firmware auto detects the connected I2C sensor.

You can connect more than one sensor to the I2C bus. The only limitation is, that you can connect only 1 sensor of each modell on each sensor socket.


These sensors are supported:

- ADS1015/ADS1115
- BH1750
- BME680
- BME280
- BMP180
- BMP280
- CCS811
- HDC1080
- MPU9250
- SHT2x

OneWire Sensors are supported on the OW connector (internal GPIO1).

Use CubeCell Configurator for configuration

- Login to TTN and create an application if you haven't already.
- Under your application create a device for the CubeCell device you are setting up
- Open the CubeCell Configurator

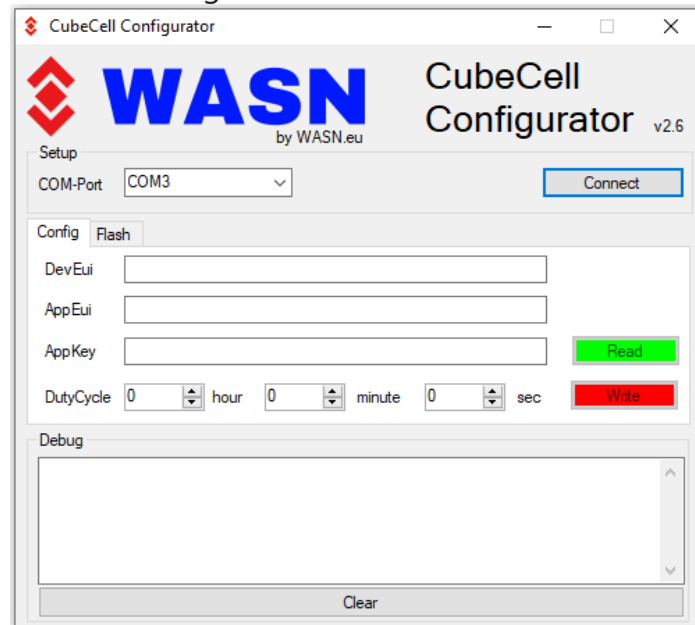

- Select your COM Port and click connect.
- Select the Config Tab
 - Device EUI, Application EUI, App Key and DutyCycle are read from the CubeCell device.
 - copy the keys: Device EUI, Application EUI and App Key
 - Please note that you should copy and paste only one key at a time. On TTN you will notice that there is a Copy icon at the end of each key field. Then back in the Configurator screen just paste each value you copied from the TTN device screen
 - Click on Write.
- The keys will be saved in the CubeCell device and the device will reboot
- In the debug text box you should see the following:

```
AT+DevEui=YOURDEVEUI
AT+AppEui=YOURAPPEUI
AT+AppKey=YOURAPPKEY
AT+DutyCycle=YOURDUTYCYCLEINMS
AT+RESET=1
...
joining...
joined
```
- Now you should see the Join Requests in your TTN Application and short after that data comming in.

The Things Network decoder

- Login to TTN and go to your application you have previously defined the device in.
- Now you can define the decoder for this application.
- The decoder can be downloaded from here [download](#).

Connecting a sensor


If you have bought the IndoorNode ([buy](#)) there is a BME680 sensor fitted in the case.

If you have bought the ModularNode ([buy](#)) you can connect the sensor to one of the 8 sockets or the OneWire Sensors to the OW socket.

If you have bought a sensor from our Website ([buy](#)) or from Heltec then you can just plug it in the capsule./p>



If not here is the pinout for connecting your sensor:

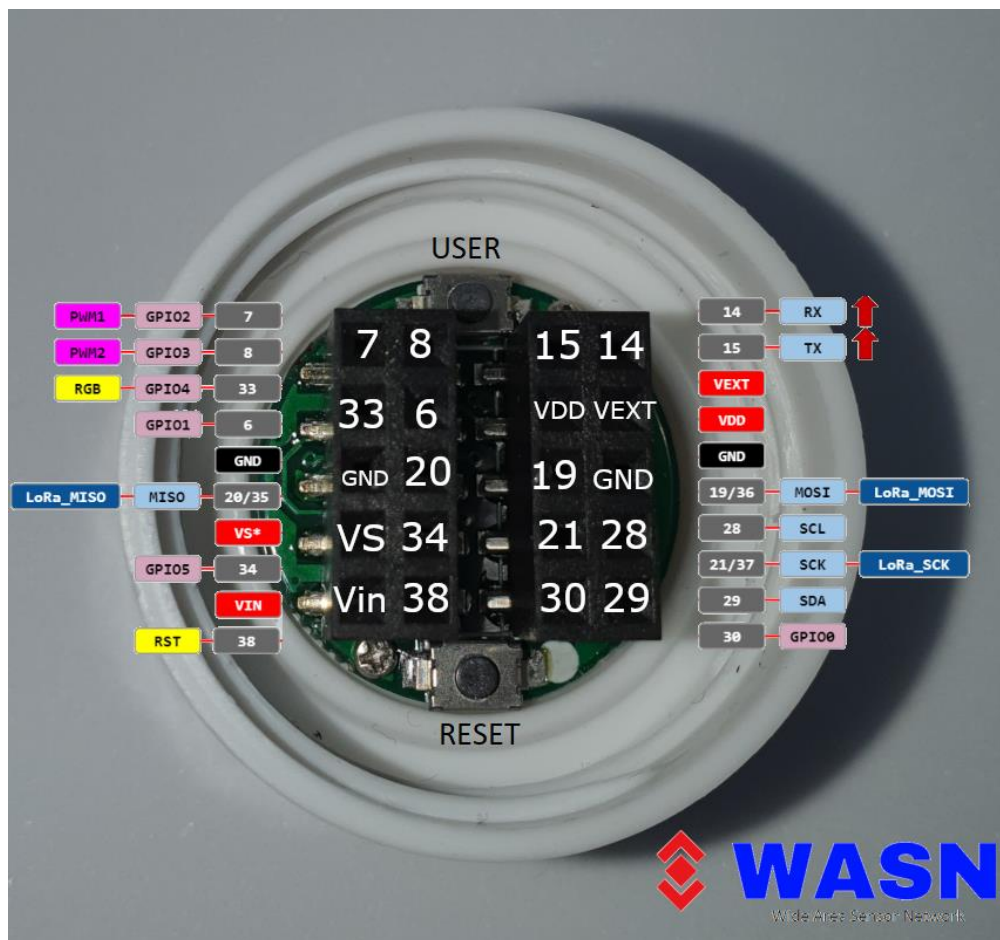

- Vext is used for powering the sensors. This pin only delivers power to the sensor when taking the measurement.
- use VS and GND to connect a solar panel (5.5 - 7V).

You can connect more than one sensor to the I2C bus. The only limitation is, that you can connect only 1 sensor of each modell on each sensor socket.


These sensors are supported:

- ADS1015/ADS1115
- BH1750
- BME680
- BME280
- BMP180
- BMP280
- CCS811
- HDC1080
- SHT2x

OneWire Sensors are supported on the OW connector (internal GPIO1).

You can check which sensor the CubeCell device has found:

- Open the CubeCell Configurator

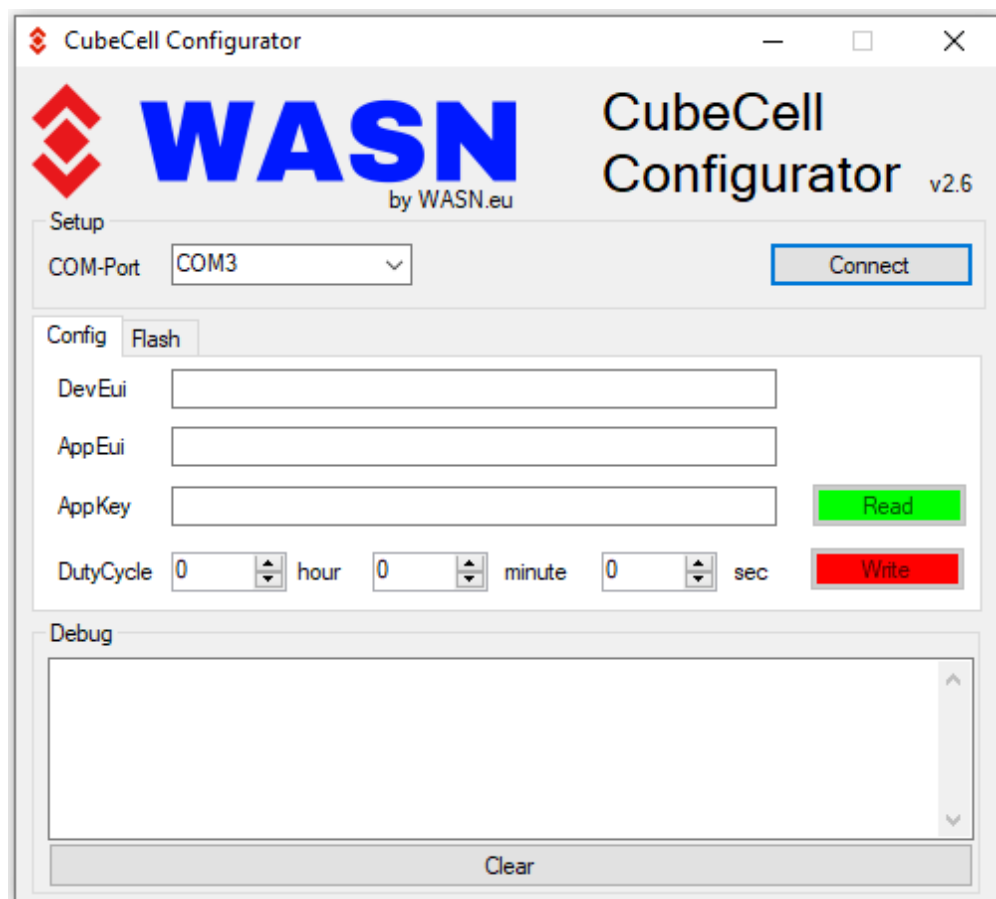

- Select your COM Port and click connect.
- Press the Reset (RST) button on you CubeCell device.
- you should see a message with the address and the name of your sensor

```
Scanning...  
I2C device found at address 0xADDRESS  
SENSORNAME found
```


Connecting a battery to the CubeCell Capsule

This battery fits nicely in the capsule ([buy](#))



If you have bought the Capsule from us ([buy](#)) there is a battery connector installed.

