



# Getting Started Guide


## with LoRaWan MultiSensor Firmware




### Connecting the CubeCell to your Computer

---

- connect the USB board to the capsule

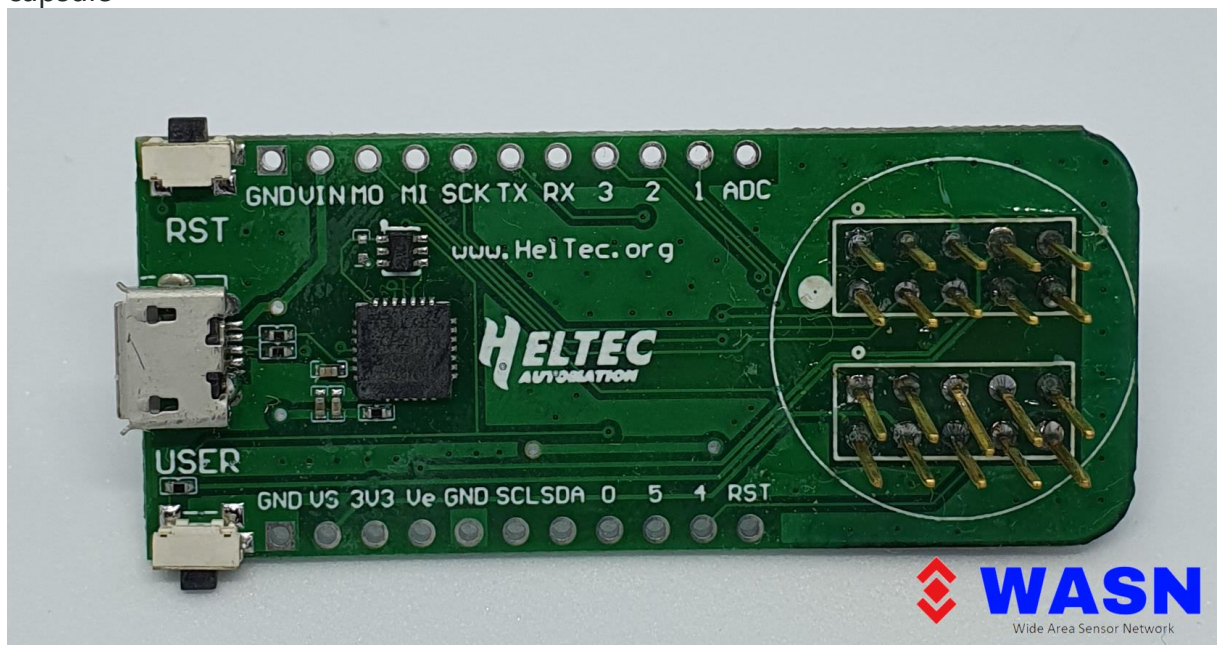

- the white dot on the USB board must align with the white dot on the capsule (beside the Reset button)

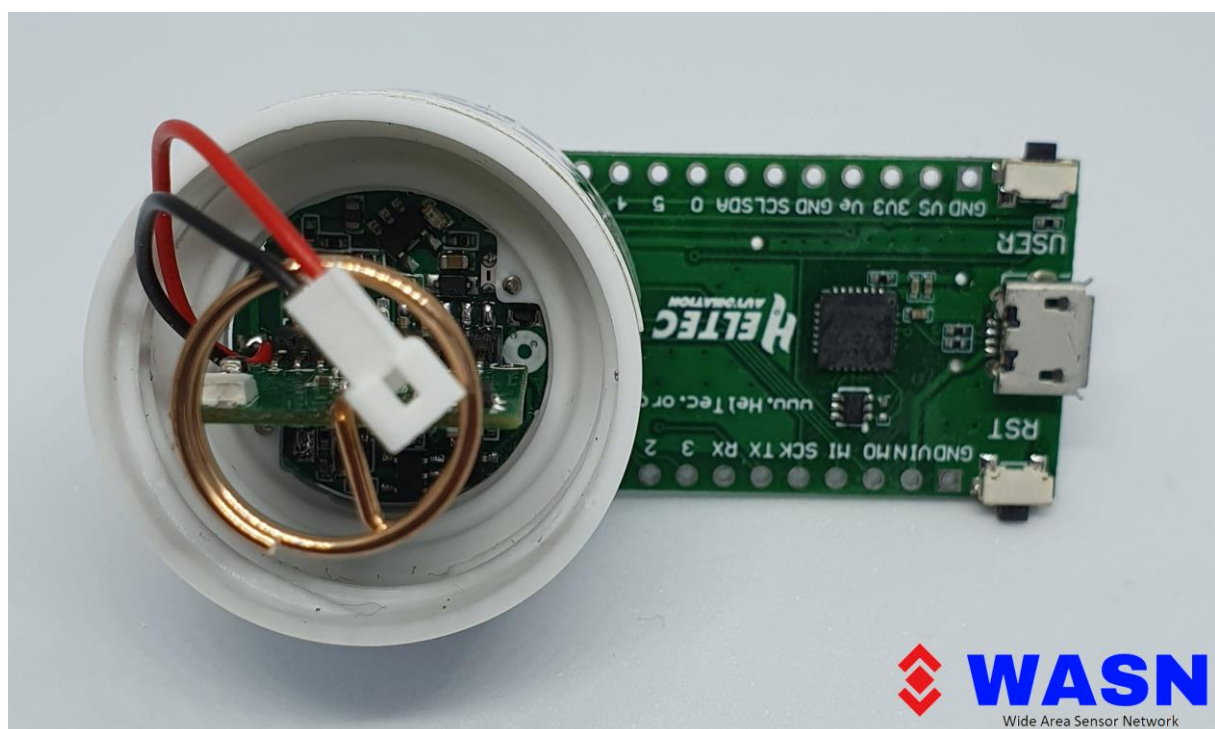

- connect the micro USB of the USB board to your computer

If you have a CubeCell board just connect the micro USB to your computer


## Use CubeCell Configurator to upload firmware

---

The easy way to get the Capsule up and running is:

- Download the CubeCell Configurator from here [download](#).
- Open the CubeCell Configurator
- Select the right COM port
- Select the CubeCell Type
- Select the right frequency band
- Select RGB LED: on/off
- click Flash Firmware
  - Firmware is now downloaded from github.
  - The firmware will be written to the capsule

CubeCell Configurator

 **WASN** CubeCell Configurator v1.9  
by WASN.eu

**Setup**

Port  Baud Rate

**User Data**

DevEui

AppEui

AppKey

DutyCycle  hour  minute  sec

**Firmware**

Type  Freq  ☐ RGB LED

**Debug**

The firmware has the following config:

- REGION\_EU868, US915, AU915, AU915SB2
- CLASS\_A
- OTAA
- ADR: ON
- Net\_Reservation: ON
- AT\_SUPPORT: ON
- RGB: ACTIVE, DEACTIVE
- All Keys set to zero

The firmware auto detect the connected I2C sensor. These sensors are supported:

- ADS1015/ADS1115
- BH1750
- BME680
- BME280
- BMP180
- BMP280
- CCS811
- HDC1080
- SHT2x

OneWire Sensors are supported now on PIN GPIO1

## **Use CubeCell Configurator for CubeCell configuration**

---

- Login to TTN and create a new device. Get your keys from TTN.
- Select your COM Port and click connect.
- Keys and DutyCycle are read from the CubeCell device.
- Type in your Keys and DutyCycle.
- Click on Write

The screenshot shows the 'CubeCell Configurator' window. At the top, it features the WASN logo (a red diamond shape) and the text 'WASN CubeCell Configurator v1.9 by WASN.eu'. The interface is divided into several sections: 'Setup' with 'Port' (COM14) and 'Baud Rate' (115200) fields and a 'Connect' button; 'User Data' with 'DevEui', 'AppEui', and 'AppKey' text boxes, a 'Read' button, and a 'DutyCycle' section with 'hour', 'minute', and 'sec' fields and a 'Write' button; 'Firmware' with 'Type' (Capsule), 'Freq' (EU868), an 'RGB LED' checkbox, and a 'Flash Firmware' button; and 'Debug' with a 'Send' button, a large text area, and a 'Clear' button at the bottom.

Now the keys are set and the CubeCell device will reboot.

## The Things Network decoder

Login to TTN and define the decoder. The decoder can be downloaded from [here](#) [download](#).


## Connecting a sensor



If you have bought a sensor from our Website ([buy](#)) or from Heltec then you can just plug it in the capsule.



If not here is the pinout for connecting your sensor:

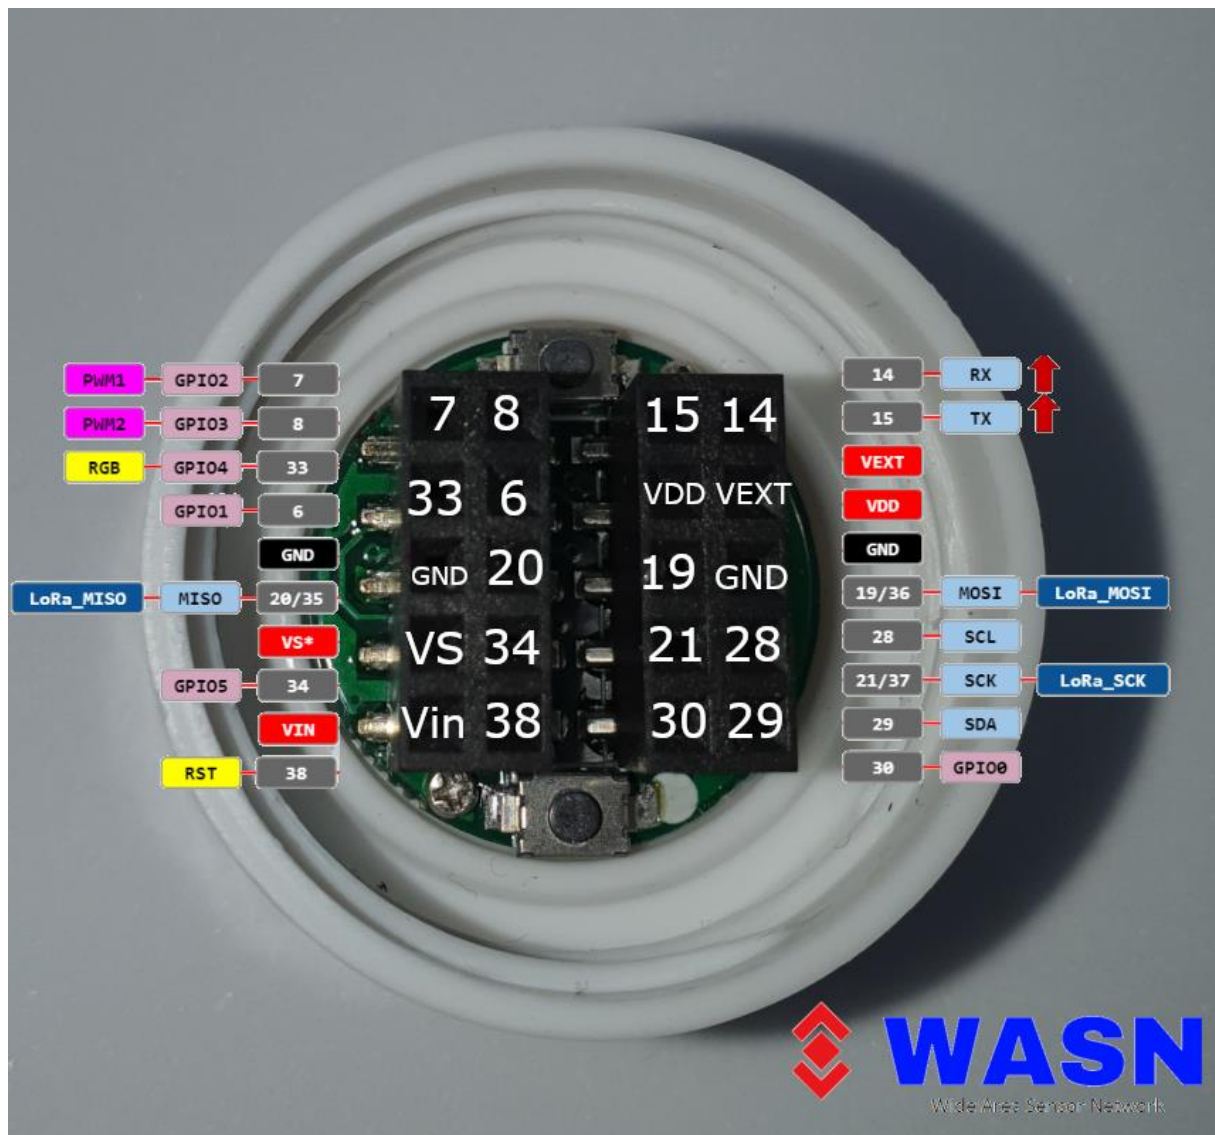

## Connecting a battery to the CubeCell Capsule

This battery fits nicely in the capsule ([buy](#))





If you have bought the Capsule from us ([buy](#)) there is a battery connector installed. If not you have to solder a connector or the battery directly to this two solder pads:

