


BeebOPL

For the BBC Microcomputer System

USER GUIDE

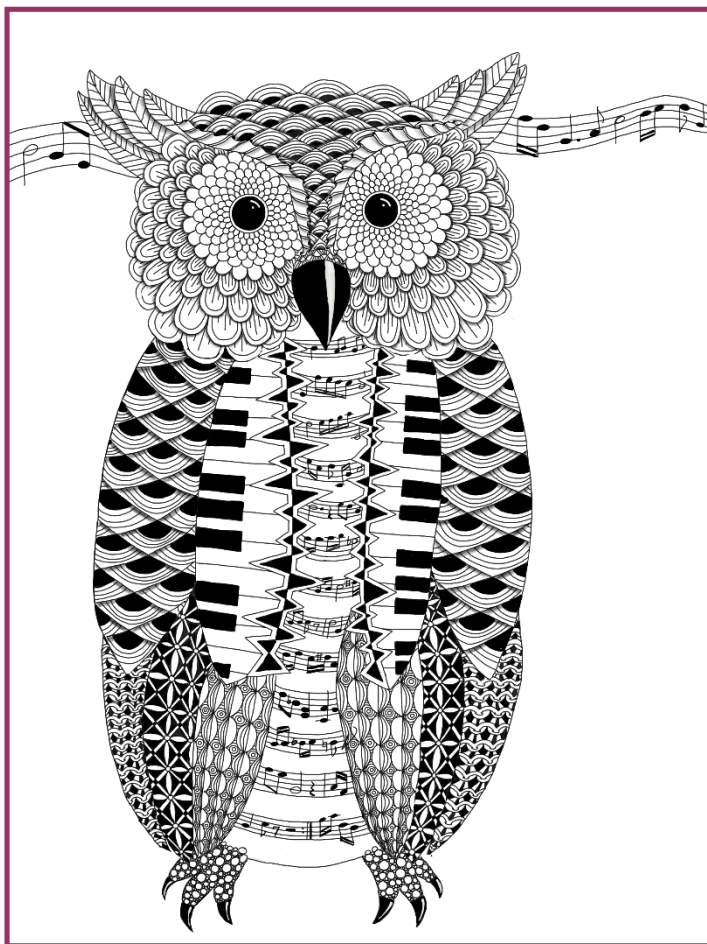

Includes full assembly instructions



For the BBC Microcomputer System

USER GUIDE

Including full assembly instructions

Written by Robert Lazarus

Cover art by Claudia Lazarus

Issue no 1

Date October 2016

Introduction

Before you start using BeebOPL, check that you have all the following items:

- A BeebOPL board (either ready assembled or in full or partial kit form)
- A 34-way ribbon cable with female IDC connectors at either end
- A 5V DC power supply with a connecting cable terminated with a 2.1mm centre-positive barrel plug
- The supplied software disc images: DROPLAY.SSD and JUKEBOX.SSD
- A BBC Model B, B+ or Master Series Microcomputer, fitted with a suitable filing system

About this manual

You will notice that some letters, words and phrases in this manual have been printed differently from the rest of the text. This is to help you to tell the difference between explanatory text, words which appear on the computer screen (including BASIC keywords), and certain keys on the computer keyboard.

- Ordinary text appears like this, or *like this* for emphasis.
- Text typed in at the computer or displayed on the screen or BASIC keywords appear **LIKE THIS**.
- Words like **<RETURN>** mean that you press the key marked RETURN rather than actually type the letters R E T U R N.


Welcome to the world of FM synthesised music

This manual describes the assembly, installation and use of the BeebOPL Music Synthesiser Card. This easy to assemble and install card transforms your computer into a powerful synthesiser which will faithfully reproduce the sound of a single instrument or an entire orchestra.

In fact, it uses the same digital sound technology as the best electronic keyboards, so you hear rich, rumbling base, crystal clear highs, and true up-front mid-range. It also has up to 11 discrete channels for up to 11 different instruments and game sounds playing at once. You can listen to the sound straight from the speaker of your BBC Microcomputer and with the built in pre-amplifier and output jack you can even listen to it on your home stereo.

The capabilities of BeebOPL are well demonstrated with the Juke Box playback program. This program enables you to hear a variety of compositions from classical, through jazz, to rock.

For education, creative self-expression, or just plain fun, BeebOPL affords virtually limitless possibilities for you and your BBC Microcomputer System.

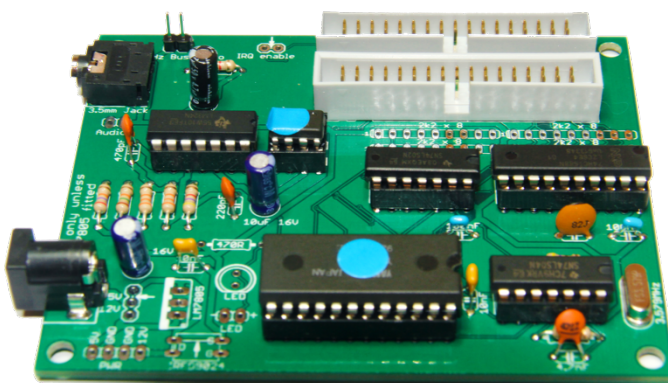

Assembling BeebOPL

Introduction

It is assumed that the reader is familiar with the basic principles of soldering and has the necessary equipment and materials to proceed. A tutorial on soldering is outside the scope of this manual.

Parts required

Please check that you have the following parts before proceeding. All of these parts are included in the complete kit and are required for the basic build of BeebOPL.

PARTS LIST

Capacitors

C1	82pF (82)
C2	4.7nF (472)
C3, C7	10nF (103)
C4, C5	100nF (104)
C6, C8	10μF 16V (electrolytic)
C9	470pF (471)
C10	220pF (221)
C11	4.7μF 35V (electrolytic)

Resistors

R1, R2	470R (yellow, violet, brown, gold)
R4, R5	33k (orange, orange, orange, gold)
R6	15k (brown, green, orange, gold)
R7	27k (red, violet, orange, gold)
R8, R9	4k7 (yellow, violet, red, gold)

Integrated circuits

IC1	74LS02N
IC3	74LS04N
IC4	74HCT688N
IC5	YM3812
IC6	LM324N
IC7	Y3014B

IC sockets

IC1, IC3, IC6	14-way 0.3" DIL socket
IC4	20-way 0.3" DIL socket
IC5	24-way 0.6" DIL socket
IC7	8-way 0.3" DIL socket

Connectors

J1, J2	34-way IDC box header
J3	2.1mm centre-positive power jack socket
J6	3.5mm stereo jack socket*

Crystal

Q1	3.579MHz
----	----------

Selectable link


S3	2-way pin header and miniature jumper link
----	--

*Note: there is no 'standard' form factor for 3.5mm jack sockets. It is essential that you use a part that matches the footprint on the PCB. A suitable choice would be Rapid Electronics order code: 20-0137.

Please check that you have all of these items. If you purchased a full kit and any items are missing or damaged, please make contact through the StarDot forum (handle: **lazarusr**) for replacement.

Each of the two Yamaha chips should be marked with a small coloured sticky dot. This indicates their source and that they have been tested and confirmed functional. Feel free to remove these. But do keep a note of the colour(s) of the dots. This information will be of assistance if any problems develop.


Assembly

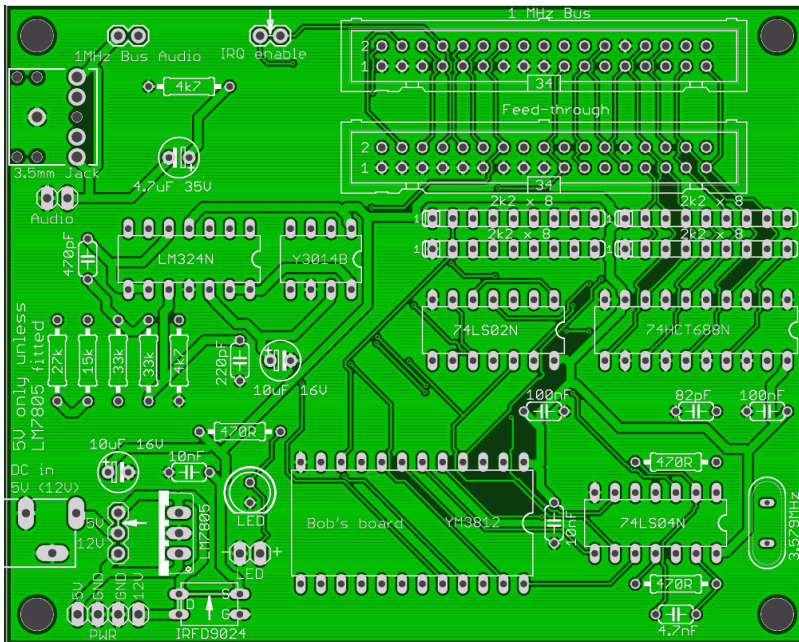

The surface of the PCB has been finished with lead-based HASL. Accordingly, you should use a lead-based solder for this project. In addition, lead-based solder is generally easier to work with. Such solder is readily available from reputable web-based vendors. A popular choice is Multicore 60/40 available in a variety of sizes (see, for example, Rapid Electronics order codes: 85-6215 or 85-6210).

All of the component locations are clearly labelled on the board and placement should be straightforward.

Note that the 470R resistor, immediately to the north of the LED, is the current limiting resistor for that LED. It is only required if the LED is to be added; it is not required as part of the basic build.

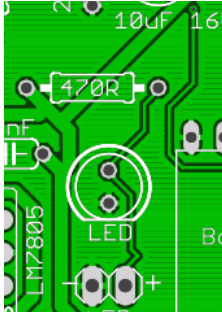


Orientation

Some of the components must be orientated correctly. There are three electrolytic capacitors. The positive terminal is indicated by the longer lead and the negative terminal by a vertical stripe on the body of the capacitor. The correct placement of the positive lead is shown on the PCB by a '+' symbol.



Make sure that the DIL sockets (and in turn the ICs) are orientated so that the 'notch' corresponds with the notch marked on the PCB. All of the ICs face in the same direction, with the notch orientated east.

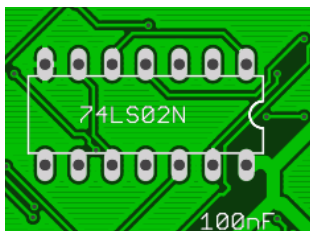

The Y3014B does not have a notch. Instead, pin 1 is indicated by a small dot embossed into the IC package. Pin 1 should be placed so that it is at the same end as the notch marking on the PCB.

Correction orientation of the two 34-way IDC headers is straightforward. The headers have a notch or key in the shrouding. The key should correspond with the small box (marked with a '34') on the PCB. In addition, pin 1 is usually marked on the header with a small triangle or arrow. This should correspond with pin 1 which is clearly marked on the PCB.

Some of the components may be difficult to retain in the board and/or keep in an upright position whilst it is turned over for soldering, most notably the pin header for the 1MHz Bus audio. These can be held in place with a small piece of Blu-Tack. Try to ensure the Blu-Tack only comes into contact with the plastic part of the header. If it is in contact with the metal posts, the transferred heat from the soldering iron can cause the Blu-Tack to melt; making it harder to remove when soldering is complete.

Finally, it should be noted that there is a very minor design flaw in the PCB. The 3.5mm jack socket should have been located about 1mm closer to the edge of the board. As a result of this, the socket may not fit perfectly flush with the surface of the board. This does not, in any way, effect either the ease of assembling the board or its subsequent functionality. The issue is entirely cosmetic.

Optional components

A number of optional parts can be installed in addition to those listed above. None of these are essential and they are not included in the kit.

OPTIONAL PARTS

Power LED

LED1	Standard 5mm LED
R3	470R (yellow, violet, brown, gold)

Bus terminators

RN1 – 4	2k2 2% 9-pin commoned resistor network (may be used with four 9-pin SIL socket strips to facilitate easy insertion and removal)
----------------	--

Input protection

IC2	LM7805
S2	3-way pin header and miniature jumper link
TR1	IRFD9024

$\overline{\text{IRQ}}$ enable

S2	2-way pin header and miniature jumper link
-----------	--


Wire to board connectors

J4	4-way 'floppy' power connector
J5, J7	2-way pin header

LED

The LED illuminates when power is applied to the board. It serves no other purpose.

The LED should be orientated correctly. The anode (+ve) is indicated by a longer lead and the cathode (-ve) by a shorter lead and a slightly flattened edge on the LED body. The cathode should be orientated so that that flattened edge corresponds with the flattened marking on the PCB.

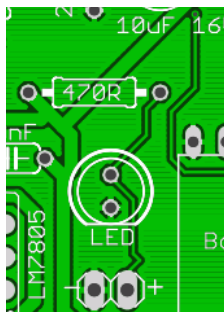

Alternatively, if you intend to place the BeebOPL board in a case, the LED can be panel mounted. There is a provision on the PCB for a pin header to facilitate connection to the LED. The location for connection of leads from the anode and cathode are clearly indicated.


In either event, the LED requires the use of a 470R current limiting resistor as shown on the PCB.

Bus terminators

Acorn Computers Ltd recommend the use of bus termination on the last daisy-chained device connected to the 1MHz Bus. In practice, however, BeebOPL (even together with other 'daisy-chained' devices) may be fully functional without these terminating resistors. Note that only the terminal device connected to the 1MHz Bus should be fitted with these resistors. A number of popular devices (notably the Acorn Teletext Adapter and the RetroClinic DataCentre) are already fitted with terminating resistors and are intended to always be used as the terminal device.

Four 2k2 by 8, 'commoned', resistor networks can be installed just to the south of the 34-way box headers. Each resistor network is configured in a 9 pin SIL package. Pin 1 is normally indicated with a white dot. This should correspond with the pin 1 marking on the PCB. You may wish to install SIL socket strips so that the resistors can be inserted and removed at will. Inserting the resistor

networks the wrong way round is unlikely to cause any damage. However, BeebOPL (and other devices on the 1MHz Bus may not function correctly).

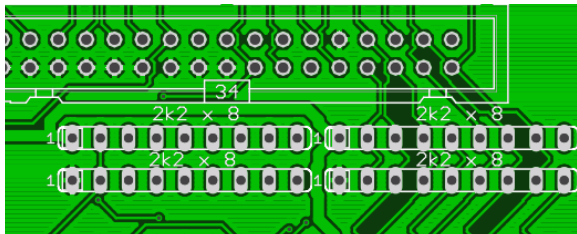


Power protection

Voltage regulator

An LM7805 voltage regulator can effectively be used as protection against over-voltage up to a maximum of 35V. However, a better solution would be to take care not to connect the wrong power supply in the first place. Over-voltage risks damage to the components on the BeebOPL board and possibly to your computer.

Using a voltage regulator in this way has two main disadvantages. First, a higher supply voltage is required. This can be anything above 7V but is nominally referred to as 12V on the PCB and in this manual. Secondly, the LM7805 will consume extra power which it will discharge in the form of heat. This should not be a significant concern, as BeebOPL only draws 30mA when in use.

Make sure that the regulator is oriented so that the metal heatsink faces west on the board (as indicated by the broad marking on the PCB).

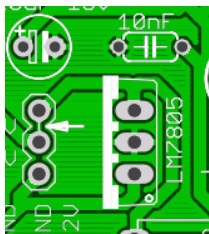

It is then necessary to cut the track between the north and central pads immediately to the west of the regulator. The track is clearly marked with an

arrow. It is essential to check that this track has been fully divided. If 12V is supplied with this track intact, it is likely that BeebOPL will be damaged (and possibly your computer). It is advisable to check the track using a multimeter in its resistance or continuity mode.

A connection should then be made between the central and south pads. This should be done with a short piece of narrow gauge, single core, equipment wire.

Once this configuration is in place, BeebOPL will not function correctly unless supplied with a voltage at the minimum level of the voltage regulator as explained above.


It is possible to add a 3-pin header and use a miniature jumper link to make the connection between the central and south pads. This can then be used to switch between 12V and 5V modes. However, if a 12V supply is connected in the 5V mode, damage will be sustained as described above (thereby frustrating the whole point of using the voltage regulator as a mechanism to protect against over-voltage). You are strongly advised against using a three pin header and to solder a permanent link as described above.

Power MOSFET

A power MOSFET can be installed at TR1 in a reverse configuration (effectively acting as a diode, but with minimal voltage drop). This acts as protection against reverse voltage. However, a better solution would be to take care not to connect a wrongly configured power supply in the first place. Over-voltage risks damage to the components on the BeebOPL board.

Before installing the MOSFET, it is necessary to cut the track that runs between the S and D pins. This is clearly marked by an arrow on the PCB. Please then check the continuity of the track using a multimeter in its resistance or continuity modes. If the track remains intact, the MOSFET will be bypassed and will provide no protection.

When installing the MOSFET note that the two 'D' pins are comprised of a single wide leg. This side of the MOSFET must be orientated to the west of the board, as indicated by the double mark on the PCB silk screen.

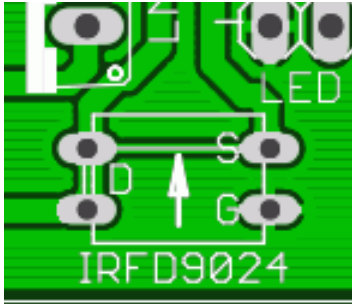


$\overline{\text{IRQ}}$ enable

The $\overline{\text{IRQ}}$ line from the YM3812 is connected directly to the corresponding line on the 1MHz Bus. During initial development of BeebOPL, it was discovered that this could cause the BBC Microcomputer to 'hang'. Accordingly, in the original BeebOPL prototype, the $\overline{\text{IRQ}}$ connection was left open and had to be 'made' with a selectable link.

It has now become apparent that the problem was in fact caused by an incomplete understanding of the correct way to program the YM3812. In fact, connection of the $\overline{\text{IRQ}}$ line is essential to the operation of the supplied software.


Despite this, out of an abundance of caution, an option has been provided to break this link (by cutting the track indicated by the arrow) and installing a pin header with miniature jump. Note that once the track is broken, the supplied software will not function unless the link is made by installing the jumper.

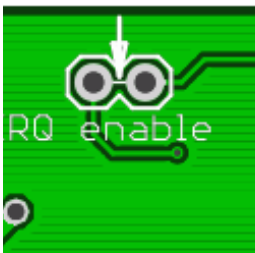


There does remain one small issue with this connection. $\overline{\text{IRQ}}$ has to be held high to avoid asserting an interrupt. Accordingly, booting the computer with BeebOPL connected, but not connected to power, can cause an apparent interrupt that the computer will not know how to handle, causing it to hang. Always ensure that power to the board is on, before switching the computer on.

Optional connectors

A 4-pin ‘floppy’ style power connector may be installed as an alternative to the 2.1mm barrel connector. This may be more convenient if installing BeebOPL in a case or inside the computer. The connector has separate lines for 12V and 5V. However, it is intended that only one of those lines should be ‘live’ (depending on whether the voltage regulator is installed; there being no reason to have both live.) It is unlikely that any harm will arise if both lines are live. However, damage will almost certainly occur if this connector is incorrectly orientated or the corresponding plug is not correctly wired. Do not attempt to use this connector unless you are fully familiar with its proper orientation and configuration.

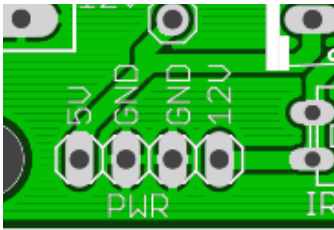

Similarly, there is a two pin header location available for audio out.

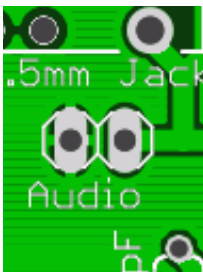

Connecting BeebOPL to your computer

With the computer powered off and BeebOPL disconnected from its power source, connect a 34-way IDC ribbon cable to either one of the box headers on the BeebOPL board. (Suitable cables are available from a number of specialist online vendors such as RetroClinic – <http://www.retroclinic.com> – and eBay vendors.) Connect the other end of the cable to the 1MHz Bus connector underneath the BBC Microcomputer. Warning: make sure that you do not connect the cable to the disc drive connector as damage may result.

Next, connect a suitable regulated 5V power supply to the BeebOPL power connector. An easy option is to use a spare USB phone charger with a suitable adapter cable (such as Rapid Electronics order code: 19-8992). Alternatively, there is a wide range of suitable plug-in units. BeebOPL only draws 30mA of current, such just about any regulated 5V power supply will suffice, provided it has the right connector. (An example would be Rapid Electronics order code: 90-2648). Make sure that power to BeebOPL is switched on *before* turning on the computer.

Testing the card

Using your preferred filing system, place the DROPLAY disc, or DROPLAY.SSD disc image in the default drive and type `*DROPLAY -TEST`. You should see a message as follows:

BeebOPL card found

If DROPLAY fails to identify a card, the following is displayed:

BeebOPL card not found


If you see this message, check that the card is connected to the power supply and that the power is turned on. Check that there is a firm connection between the IDC cable and the box header on the BeebOPL card. Similarly check that there is a good connection between the cable and the 1MHz Bus connector on the computer. Sometimes the pins on this connector can become corroded. Try removing and re-inserting the cable multiple times as this may clear some of the corrosion.

If the message persists, you will need to check the BeebOPL card for faults. Make sure all the ICs are firmly seated in their sockets with the notches oriented as shown on the PCB legend. Make sure the electrolytic capacitors are correctly oriented. Check for missing or incomplete solder joints, dry (i.e. dull looking) solder joints and any solder bridges. Pay particular attention to solder pads at ground connections. Because of the large ground plane on the PCB, these points can be somewhat harder to solder.

Further fault finding is beyond the scope of this manual. For additional help, try posting details of the problem on the StarDot forum.

Connecting to an audio system

BeebOPL has the facility to play audio directly through the built in speaker in your computer. To enable this, simply ensure that a miniature jumper is in place on the 2-way pin header marked 1MHz Bus Audio.

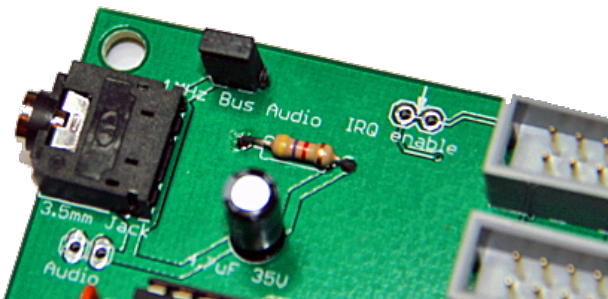

The BBC Master Series has the option to configure the 1MHz Bus so that the 'Audio' line is used for output only or is entirely disabled. In either of these configurations, audio from BeebOPL will not play through the built in speaker. To avoid this, check that the track is intact between the south and centre pads (the 'A' position) at LK1 on your computer's main board. If not, and you want to play BeebOPL audio through the built in speaker you will need to enable this link either with a short piece of narrow gauge, single core, equipment wire or by use of a 3-way pin header and miniature jumper. Sometimes a resistor is placed between pins 2 and 5 of the internal modem connector (PL9 and PL10). This is done to reduce the effect of noise on the 1MHz Bus becoming

audible through the built in speaker. This resistor will need to be removed to enable BeebOPL to play through the built in speaker. Unfortunately, removing this resistor will also result in the return of the noise it was intended to defeat.

Whilst playback through the internal speaker is possible, this greatly diminishes the quality of the output. For the best results, audio should be connected to external powered speakers or a stereo hi-fi system. Many users will be familiar with similar options on the popular BeebSID card. However, the sonic characteristics of BeebOPL are rather different. The difference between internal and external playback for BeebOPL are several orders of magnitude greater than that for BeebSID. Put simply, you will never realise the full potential of BeebOPL if it is only ever connected to the internal speaker.

To connect to a stereo system, use a 3.5mm stereo audio jack cable. Although BeebOPL only produces a monaural output, use of a stereo cable is recommended to ensure that sound is played back through both speakers of a stereo system. To avoid distortion, the cable should be connected to a line-level input (typically labelled as 'line in', 'auxiliary' or 'aux'). Do not connect to an input intended for a microphone.

Using the supplied software

Software applications for use with BeebOPL can be downloaded from: <https://github.com/lazarusr/BeebOPL/bin>.

At the time of going to press, this software is very much in development, contains a number of bugs, and is not feature complete. It would be much appreciated if any issues you experience using the software could be reported at <https://github.com/lazarusr/BeebOPL/issues>.

The software is compiled to run on machines with PAGE at &1900 (i.e. a conventional Model B system with Acorn DFS). If your machine has PAGE at a higher level, there may be problems running the software. If you would like a bespoke version compiled to run at a higher level of PAGE (or, indeed, if you have a machine, such as a Master system, with more available memory that you would like to take advantage of and therefore wish the software to be compiled at a lower memory level) please contact **lazarusr** via the StarDot forum.

All of the application source code is available on the BeebOPL GitHub repo at <https://github.com/lazarusr/BeebOPL/src>. You are free to modify it as you wish. It is hoped that, in due course, talented programmers will develop software that will take much greater advantage of the full power of BeebOPL.

Juke Box

The original Ad Lib Sound Card for IBM PC and PC-compatible computers was supplied with software called 'Juke Box' that played sample tunes. This BeebOPL version of Juke Box contains the exact same sample tunes. Given that BeebOPL is based on the same hardware as the Ad Lib Sound Card, the music should sound virtually indistinguishable. Sadly, at the time of going to press, the user interface is very primitive and bears little comparison to the Ad Lib version. It is hoped that this will be improved over time.

The Juke Box program is specially designed to demonstrate the capabilities of the BeebOPL Music Synthesiser Card. It enables you to play pre-programmed songs of a variety of styles.

Using your preferred filing system, place the JUKEBOX disc, or JUKEBOX.SSD disc image in the default drive and type CHAIN "JUKEBOX". Alternatively, you can auto-start the software by holding down the **<SHIFT>** key whilst pressing the **<BREAK>** key.

You will be presented with a simple menu screen:

```
f1:Play All ESCAPE:Stop f9:Quit
      JUKE BOX
A:Highways
B:Electrock
C:Gargoules
D:Spy's Eye
E:Bach's Aria
F:Vivaldi's Spring
G:Oh! When the Saints!
H:Railroad Story
I:Clockmaker
J:Soft Acid Rain
K:Crystal Eve
L:Softblue
M:Breathing
N:Classy Night
O:Dance Beat
P:Do it !
Q: * Very Busy *

```

If you want to play all the tunes, press **<f1>**. Alternatively, you can select the tune you want by pressing the corresponding letter key. You can stop the current tune from playing by pressing the **<ESCAPE>** key. You will then be able to select another tune. If you want to quit the program, press **<f9>**.

You will notice that there is a timer in the bottom right-corner of the screen. DRO files contain data about the length of the tune. The timer works by loading this data and counting down. It takes its time from the MOS interval timers which is fairly accurate. You may notice that the timer sometimes reaches zero (00:00.00) moments before the tune has finished playing. Very occasionally, the tune finishes playing before the timer reaches zero. This is due to slight timing issues with the underlying player software. It is hoped that this can be corrected in due course.

DROPLAY

The DROPLAY utility is a relatively simple tool. However, as explained below, it is capable of playing just about any OPL2 tune that is capable of being played on a PC.

DROPLAY is intended to be run as a * command. It takes just one parameter, namely details of a file containing DRO version 2.00 data. DROPLAY streams data from disc and is not directly constrained by memory limitations. Provided you can fit the DRO file on to your preferred filing system, DROPLAY should be able to play it.

Unfortunately, there are limitations in the way that Acorn DFS handles loading of data chunks smaller than a whole file. This results in two issues. First, if the file is too large to fit in memory, DROPLAY loads part of the file initially. Contrary to what one might expect, loading part of a file takes considerably longer than loading the whole file. This can take as much as 20 seconds or longer.

Secondly, in some situations, the filing system can't keep up with DROPLAY. In such circumstances, DROPLAY randomly goes back to a section of the music it has already played and starts again. Once in this situation, DROPLAY will not recover and the tune will end at some point in the middle. Fortunately, this occurrence is relatively rare and most tunes play without a problem.

The above is caused by a known problem with DFS (relating to OSGBPB calls). It is unrelated to the limitations of any physical media. DROPLAY will happily play tunes stored on a conventional 5.25" disc with as much ease as modern solid state media. The problem does not appear to be an issue with ADFS.

There are a number of sample DRO files on the DROPLAY disc image. More are to be found on GitHub at <https://github.com/lazarusr/BeebOPL/music>. Do not use the files in the 'fakes' subdirectory. These are intentionally corrupted files intended for use in debugging certain error trapping routines.

Creating your own DRO files

DRO stands for 'DOSBox Raw OPL'. It is possible to convert any tune (which was originally designed to play on a PC with OPL2 hardware) into the DRO format, by use of the DOSBox application. The following instructions relate to the Windows version of DOSBox. However, DOSBox is available for many platforms including Linux, RISC OS and macOS. Visit <http://www.dosbox.com> to download a copy and for further details.

The current version of DOSBox is version 0.74, which was released on 12 May 2010. Notwithstanding the version number, this is a very stable and feature rich release. DROPLAY is capable of playing DRO files created by DOSBox versions 0.73 and higher. Earlier versions produce a DRO format that is not compatible with DROPLAY.

Full instructions on installing and configuring DOSBox are beyond the scope of this manual. The following instructions assume you have successfully installed DOSBox. Many DOS based applications and games are capable of outputting sound and music to a variety of different hardware. It is necessary to configure DOSBox in such a way that it behaves as if the only audio hardware available is OPL2 based. This will force compatible applications to produce audio in OPL2 format.

Once DOSBox is installed, locate the dosbox-0.74.conf file. This is typically located at `%appdata%\Local\DOSBox\`. The file can be opened in any simple text editor such as Notepad. Make sure the file contains the following settings

```
[midi]
mpu401=none
mididevice=none
```

```
[sbblaster]
sbtype=sb1
sbbase=220
irq=7
dma=1
hdma=5
sbmixer=false
oplmode=opl2
oplemu=compat
oplrates=49716
```

```
[gus]
gus=false
```

Most, and probably all, of these settings will already be present in the file. So, just find the relevant sections and change the values where necessary.

You will then need to install the necessary audio applications in the DOSBox virtual environment. Instructions for mounting hard drives and other disc images (together with a host of other information) can be found at the DOSBox website, including on the dedicated wiki (<http://www.dosbox.com/wiki>).

Launch your chosen application within the virtual environment. Then press **<CTRL> <ALT> <F7>** to start the DRO capture routine. OPL data capture will then start once the first note is played. When the tune is complete, press **<CTRL> <ALT> <F7>** again. This will stop data capture. (If you don't stop data capture promptly, your file will be appended with a lengthy period of silence!) Your captured file can then be located in the 'captures' folder. This is usually to be found at `%appdata%\Local\DOSBox\capture\`.

The resulting file can then be played by DROPLAY without any further modification (save for ensuring that the filename complies with the requirements of your chosen filing system).

*DROPLAY <fsp>

Purpose

Plays music files in the DOSBox Raw OPL (DRO) format.

Example

```
*DROPLAY MYTUNE1  
*DROPLAY :1.Z.MYTUNE2
```

Description

Plays a DRO file.

*DROPLAY -TEST

Purpose

Checks to see whether a working BeebOPL card is connected.

Example

***DROPLAY -TEST**

Description

Checks for a working BeebOPL card

BeebOPL card found

is displayed if the test is successful

BeebOPL card not found

is displayed if the test fails

Error messages

17 Escape

The **<ESCAPE>** key was pressed during music playback.

65 Syntax: DROPLAY <<fsp>><-TEST>

You have failed to specify any file details or have not included the **-TEST** switch.

66 BeebOPL card found

The test function successfully completed.

67 BeebOPL card not found

Check that the BeebOPL card is properly connected to the 1MHz Bus and connected to power. If the message persists, this may indicate a fault with the card.

68 Error opening file

Either the DRO file could not be found or there was a fault with the filing system. Check that you have entered the details of the DRO file correctly and that the file is on the disc or other data device.

69 Not a valid DRO file

DROPLAY can only play DRO files. Other OPL file formats are not supported.

70 Unsupported DRO version

DROPLAY can only play version 2.0 DRO files created with DOSBox version 0.73 or later. Earlier versions are not supported.

71 Wrong card version

BeebOPL can only play tunes coded for OPL2. It does not support tunes coded for other hardware variants such as Dual OPL2 or OPL3.

72 Compressed file not supported

BeebOPL does not support compressed DRO files.

214 File not found

The DRO file could not be found. Check that you have entered the details of the DRO file correctly and that the file is on the disc or other data device.