

# **Device Network SDK**

## **Programming User Manual**

**V4.2**

**(For DVR)**

# Index

Index.....	I
1 SDK Overview .....	1
2 SDK Version Update.....	4
3 API Calling Procedure .....	5
3.1 Main calling procedure of SDK .....	5
3.2 Live view procedure .....	7
3.3 Playback and download procedure .....	9
3.4 Parameter configuration procedure.....	10
3.5 Remote device maintenance procedure .....	11
3.6 Voice talk or voice forward procedure .....	12
3.7 Alarm procedure .....	13
3.7.1 Alarm (arming) procedure .....	13
3.7.2 Alarm (listening) procedure .....	14
3.8 Transparent channel setup procedure .....	15
3.9 Hybrid DVR resource configuration.....	16
4 API Calling Example .....	17
4.1 Example code of live view .....	17
4.2 Example code of playback and download .....	21
4.3 Example code of parameter configuration.....	29
4.4 Example code of remote device maintenance .....	30
4.5 Example code of voice talk and voice forward.....	33
4.6 Example code of alarm.....	34
4.7 Example code of transparent channel.....	38
4.8 Example code of hybrid DVR resource configuration.....	40
5 API Description .....	43
5.1 SDK Initialization .....	43
5.1.1 Initialize SDK: NET_DVR_Init .....	43
5.1.2 Release SDK resource: NET_DVR_Cleanup .....	43
5.1.3 Set network connection timeout and connection attempt times: NET_DVR_SetConnectTime.....	43
5.1.4 Set reconnecting time interval: NET_DVR_SetReconnect .....	44
5.1.5 Get the dynamic IP address of the device by IP server or EasyDDNS: NET_DVR_GetDVRIPByResolveSvr_EX .....	44
5.2 Exception Message Callback.....	45
5.2.1 Register window handle or callback function to receive exception, reconnection or other message: NET_DVR_SetExceptionCallBack_V30 .....	45
5.3 SDK Information and Log.....	47
5.3.1 Get SDK version: NET_DVR_GetSDKVersion .....	47
5.3.2 Get SDK version and build information: NET_DVR_GetSDKBuildVersion .....	47
5.3.3 Get SDK current state: NET_DVR_GetSDKState .....	48

5.3.4	Get SDK ability: NET_DVR_GetSDKAbility .....	48
5.3.5	Start writing log to file: NET_DVR_SetLogToFile .....	48
5.4	Get Error Message .....	49
5.4.1	Return the Error Code of last operation: NET_DVR_GetLastError .....	49
5.4.2	Return the error message of last operation: NET_DVR_GetErrorMsg .....	49
5.5	Login the Device .....	49
5.5.1	Join the device: NET_DVR_Login_V30 .....	49
5.5.2	Logout: NET_DVR_Logout .....	50
5.6	Get the capability set of the device .....	50
5.6.1	Get the capability set: NET_DVR_GetDeviceAbility .....	50
5.7	Live View .....	52
5.7.1	Set display mode: NET_DVR_SetShowMode .....	52
5.7.2	Make the main stream create a key frame(I frame): NET_DVR_MakeKeyFrame 53	
5.7.3	Make the sub stream create a key frame(I frame): NET_DVR_MakeKeyFrameSub .....	53
5.7.4	Live view: NET_DVR_RealPlay_V30 .....	53
5.7.5	Stop live view: NET_DVR_StopRealPlay .....	54
5.7.6	Get player handle for decoding and display when live view: NET_DVR_GetRealPlayerIndex .....	55
5.8	Video Parameter Configuration .....	55
5.8.1	Get video parameter: NET_DVR_ClientGetVideoEffect .....	55
5.8.2	Get video parameter: NET_DVR_GetVideoEffect .....	55
5.8.3	Set video parameter: NET_DVR_ClientSetVideoEffect .....	56
5.8.4	Set video parameter: NET_DVR_SetVideoEffect .....	56
5.9	Overlay Characters or Images onto Live View Screen .....	57
5.9.1	Overlay characters or images onto live view screen: NET_DVR_RegisterDrawFun .....	57
5.10	Parameter Control of Decoding Effect When Live View .....	57
5.10.1	Set the number of player's frame buffers: NET_DVR_SetPlayerBufNumber ..	57
5.10.2	Set the number of B frames to be thrown when decoding: NET_DVR_ThrowBFrame .....	58
5.11	Control Sound Playing When Live View .....	58
5.11.1	Set sound playing mode: NET_DVR_SetAudioMode .....	58
5.11.2	Open sound in exclusive mode: NET_DVR_OpenSound .....	59
5.11.3	Close sound in exclusive mode: NET_DVR_CloseSound .....	59
5.11.4	Open sound in shared mode: NET_DVR_OpenSoundShare .....	59
5.11.5	Close sound in shared mode: NET_DVR_CloseSoundShare .....	59
5.11.6	Adjust playing volume: NET_DVR_Volume .....	60
5.12	Stream Data Callback When Live View .....	60
5.12.1	Register callback function to capture real-time stream data: NET_DVR_SetRealDataCallBack .....	60
5.12.2	Register callback function to capture real-time stream data (standard encoded data): NET_DVR_SetStandardDataCallBack .....	61

5.12.3	Capture data and save to assigned file: NET_DVR_SaveRealData .....	62
5.12.4	Stop data callback: NET_DVR_StopSaveRealData .....	62
5.13	Capture Picture .....	62
5.13.1	Set capturing mode: NET_DVR_SetCapturePictureMode.....	62
5.13.2	Capture a frame and save to file: NET_DVR_CapturePicture .....	62
5.13.3	Capture a file and save as JPEG picture: NET_DVR_CaptureJPEGPicture .....	63
5.13.4	Capture a frame and save as JPEG image to the assigned buffer: NET_DVR_CaptureJPEGPicture_NEW .....	63
5.14	Live View and Configuration of Zero Channel .....	64
	Parameter configuration .....	64
5.14.1	Get device parameter: NET_DVR_GetDVRConfig .....	64
5.14.2	Set device parameter: NET_DVR_SetDVRConfig.....	65
	Live view 65	
5.14.3	Start live view of zero channel: NET_DVR_ZeroStartPlay .....	65
5.14.4	Stop live view: NET_DVR_ZeroStopPlay.....	66
	Other function.....	67
5.14.5	Make the zero channel create a key frame: NET_DVR_ZeroMakeKeyFrame..	67
5.14.6	Trun over the live view screen of zero channel: NET_DVR_ZeroTurnOver .....	67
5.15	Operation with Remote Files Recorded in the Device: Playback, Download, Lock or Backup 68	
	Get the video's starting time and stopping time of the channel .....	68
5.15.1	Get the video's starting time and stopping time of the channel: NET_DVR_InquiryRecordTimeSpan.....	68
	Instantly refresh the record index .....	68
5.15.2	Instantly refresh the record index: NET_DVR_UpdateRecordIndex.....	68
	Search record files .....	69
5.15.3	Search files by file type and time: NET_DVR_FindFile_V40 .....	69
5.15.4	Get record file one by one: NET_DVR_FindNextFile_V30 .....	69
5.15.5	Close searching files and release the resource : NET_DVR_FindClose_V30 ...	70
	Search record files by event .....	70
5.15.6	Search files by event: NET_DVR_FindFileByEvent .....	70
5.15.7	Get record file one by one: NET_DVR_FindNextEvent .....	70
5.15.8	Close searching files and release the resource: NET_DVR_FindClose_V30 ....	71
	Regional motion detection smart search .....	71
5.15.9	Start smart searching: NET_DVR_SmartSearch .....	71
5.15.10	Get the motion information in the region: NET_DVR_SearchNextInfo .....	72
5.15.11	Stop smart searching: NET_DVR_StopSearch .....	72
	Playback record files.....	72
5.15.12	Playback by file name: NET_DVR_PlayBackByName .....	72
5.15.13	Reversely playback the video by file name: NET_DVR_PlayBackReverseByName.....	74
5.15.14	Playback by time: NET_DVR_PlayBackByTime_V40 .....	74
5.15.15	Reversely playback video by time: NET_DVR_PlayBackReverseByTime_V40.	75
5.15.16	Control the playback state: NET_DVR_PlayBackControl_V40.....	75

5.15.17	Stop playback: NET_DVR_StopPlayBack .....	78
	Data callback when playback .....	78
5.15.18	Callback the playing data, and save as a file: NET_DVR_PlayBackSaveData...	78
5.15.19	Stop saving data: NET_DVR_StopPlayBackSave.....	79
5.15.20	Register callback function to get record data: NET_DVR_SetPlayDataCallBack .....	79
	Other operation about playback .....	80
5.15.21	Get the display OSD time when playback the record file: NET_DVR_GetPlayBackOsdTime.....	80
5.15.22	Capture picture when playback, and save as a file: NET_DVR_PlayBackCaptureFile .....	80
5.15.23	Refresh to display the playback window: NET_DVR_RefreshPlay.....	81
5.15.24	Get player handle for decoding and display when playback: NET_DVR_GetPlayBackPlayerIndex.....	81
	Download the record files from the remote device .....	82
5.15.25	Download by file name: NET_DVR_GetFileByName.....	82
5.15.26	Download by time: NET_DVR_GetFileByTime.....	82
5.15.27	Control the download state: NET_DVR_PlayBackControl .....	83
5.15.28	Stop downloading: NET_DVR_StopGetFile .....	84
5.15.29	Get the progress of the downloading: NET_DVR_GetDownloadPos .....	84
	Lock and unlock files recorded in the device .....	85
5.15.30	Lock files by file name: NET_DVR_LockFileByName.....	85
5.15.31	Unlock files by file name: NET_DVR_UnlockFileByName .....	85
	Backup files .....	85
5.15.32	Get the disk list in the device: NET_DVR_GetDiskList.....	85
5.15.33	Backup files by file name: NET_DVR_BackupByName.....	86
5.15.34	Backup files by time: NET_DVR_BackupByTime.....	86
5.15.35	Get the progress of backup: NET_DVR_GetBackupProgress .....	86
5.15.36	Stop backup: NET_DVR_StopBackup .....	87
5.16	Record Label.....	88
	Add or delete record label.....	88
5.16.1	Add a record label: NET_DVR_InsertRecordLabel.....	88
5.16.2	Modify the record label: NET_DVR_ModifyRecordLabel.....	88
5.16.3	Delete the record label: NET_DVR_DelRecordLabel .....	88
	Search the record label .....	89
5.16.4	Start searching the record label: NET_DVR_FindRecordLabel.....	89
5.16.5	Get the record label one by one: NET_DVR_FindNextLabel.....	89
5.16.6	Stop record label: NET_DVR_StopFindLabel.....	90
5.17	Operation with Remote Pictures Captured in the Device: Search, Playback, or Backup .....	90
	Search pictures .....	90
5.17.1	Search pictures by type and time: NET_DVR_FindPicture.....	90
5.17.2	Get the picture one by one: NET_DVR_FindNextPicture.....	90
5.17.3	Close searching and release the resource: NET_DVR_CloseFindPicture .....	91

Playback (download) the pictures .....	91
5.17.4 Playback the pictures: NET_DVR_GetPicture_V30 .....	91
Backup the pictures.....	92
5.17.5 Backup the picture: NET_DVR_BackupPicture.....	92
5.17.6 Get the backup progress: NET_DVR_GetBackupProgress.....	92
5.17.7 Stop backup: NET_DVR_StopBackup .....	93
5.18 Manual Recording .....	93
5.18.1 Remotely start manual recording in the device: NET_DVR_StartDVRRecord.....	93
5.18.2 Remotely stop manual recording: NET_DVR_StopDVRRecord .....	94
5.19 Alarm of Arming Mode.....	94
Set the callback function of the alarm message uploaded by the device .....	94
5.19.1 Register the callback function to receive the alarm message: NET_DVR_SetDVRMessageCallBack_V30.....	94
Arm and disarm.....	96
5.19.2 Setup the uploading channel of alarm message: NET_DVR_SetupAlarmChan_V30.....	96
5.19.3 Close the uploading channel of alarm message: NET_DVR_CloseAlarmChan_V30 .....	96
5.20 Alarm of Listening Mode .....	96
Listening 96	
5.20.1 Start listening to receive the alarm message uploaded actively by the device: NET_DVR_StartListen_V30.....	96
5.20.2 Stop listening (support multi-thread): NET_DVR_StopListen_V30 .....	98
5.21 Remote Panel Control .....	98
5.21.1 Remotely control the keys on the panel: NET_DVR_ClickKey.....	98
5.21.2 Disable the local control of the device panel: NET_DVR_LockPanel .....	100
5.21.3 Resume the local control of the device panel: NET_DVR_UnLockPanel.....	100
5.22 PTZ Control.....	100
PTZ control operation.....	100
5.22.1 PTZ control (requires starting live view firstly): NET_DVR_PTZControl.....	100
5.22.2 PTZ control (not require live view before calling it): NET_DVR_PTZControl_Other .....	102
5.22.3 PTZ control with speed (requires starting live view firstly): NET_DVR_PTZControlWithSpeed.....	103
5.22.4 PTZ control with speed (not require live view before calling it): NET_DVR_PTZControlWithSpeed_Other .....	104
PTZ preset operation .....	106
5.22.5 PTZ preset operation (requires starting live view firstly): NET_DVR_PTZPreset 106	
5.22.6 PTZ preset operation: NET_DVR_PTZPreset_Other .....	106
PTZ Patrol operation.....	107
5.22.7 PTZ patrol operation (requires starting live view firstly): NET_DVR_PTZPCruise 107	
5.22.8 PTZ patrol operation: NET_DVR_PTZPCruise_Other.....	108

PTZ pattern operation .....	109
5.22.9 PTZ pattern operation(requires starting live view firstly): NET_DVR_PTZTrack 109	
5.22.10 PTZ pattern operation: NET_DVR_PTZTrack_Other .....	109
Transparent PTZ Control.....	110
5.22.11 Tansparent PTZ control(requires starting live view firstly): NET_DVR_TransPTZ 110	
5.22.12 Tansparent PTZ control: NET_DVR_TransPTZ_Other .....	110
PTZ Region Zoom control .....	111
5.22.13 PTZ control to enlarge or narrow the selected image region (requires starting live view firstly): NET_DVR_PTZSelZoomIn .....	111
5.22.14 PTZ control to enlarge or narrow the selected image region: NET_DVR_PTZSelZoomIn_Ext.....	111
5.23 Voice Talk, Forwarding and Broadcast.....	112
Voice talk 112	
5.23.1 Start voice talk: NET_DVR_StartVoiceCom_V30.....	112
5.23.2 Set the client volume of voice talk: NET_DVR_SetVoiceComClientVolume..	113
5.23.3 Stop voice talk: NET_DVR_StopVoiceCom .....	114
Voice fowarding.....	114
5.23.4 Start voice forwarding, to get the encoded audio data: NET_DVR_StartVoiceCom_MR_V30.....	114
5.23.5 Forward audio data to the device: NET_DVR_VoiceComSendData .....	116
5.23.6 Stop voice forwarding: NET_DVR_StopVoiceCom .....	116
Voice broadcast .....	116
5.23.7 Start to collect audio data in PC-end for voice broadcast: NET_DVR_ClientAudioStart_V30 .....	116
5.23.8 Add one voice channel of the device to the broadcast group: NET_DVR_AddDVR_V30.....	117
5.23.9 Delete the voice channel of the device from the broadcast group: NET_DVR_DeIDVR_V30.....	117
5.23.10 Stop collecting audio data in PC-end for the broadcast: NET_DVR_ClientAudioStop .....	118
Encode or decode the audio data .....	118
Encode or decode the OggVorbis audio.....	118
5.23.11 Initialize the audio encoding resource: NET_DVR_InitG722Encoder.....	118
5.23.12 Encode the PCM audio to G722 format: NET_DVR_EncodeG722Frame .....	118
5.23.13 Release the audio encoding resource: NET_DVR_ReleaseG722Encoder.....	119
5.23.14 Initialize the audio decoding resource: NET_DVR_InitG722Decoder .....	119
5.23.15 Decode G722 audio to PCM: NET_DVR_DecodeG722Frame.....	120
5.23.16 Release the audio decoding resource: NET_DVR_ReleaseG722Decoder .....	120
Encode or decode the G711 audio.....	121
5.23.17 Encode the PCM audio to G711 format: NET_DVR_EncodeG711Frame .....	121
5.23.18 Decode G711 audio to PCM: NET_DVR_DecodeG711Frame .....	121
5.24 Transparent Channel .....	122

5.24.1	Setup the transparent channel: NET_DVR_SerialStart .....	122
5.24.2	Send data to the serial port of the device by transparent channel: NET_DVR_SerialSend .....	122
5.24.3	Close the transparent channel: NET_DVR_SerialStop .....	123
5.25	Send data to the serial port directly.....	123
5.25.1	Send data to the serial port directly, and it doesn't require to setup transparent channel: NET_DVR_SendToSerialPort .....	123
5.25.2	Send data to RS232 directly and it doesn't require to setup transparent channel: NET_DVR_SendTo232Port .....	123
5.26	Hard Disk Management.....	124
5.26.1	Remotely format hard disk of the device: NET_DVR_FormatDisk .....	124
5.26.2	Get the format progress: NET_DVR_GetFormatProgress .....	124
5.26.3	Close the formatting handle, and release the resource: NET_DVR_CloseFormatHandle .....	125
5.27	Device Maintenance Management .....	125
	Get device work state.....	125
5.27.1	Get work state of the device: NET_DVR_GetDVRWorkState_V30 .....	125
	Remote upgrade.....	126
5.27.2	Set the network environment of remote upgrade: NET_DVR_SetNetworkEnvironment .....	126
5.27.3	Remote upgrade: NET_DVR_Upgrade.....	126
5.27.4	Get the progress of the remote upgrade: NET_DVR_GetUpgradeProgress..	127
5.27.5	Get the state of the remote upgrade: NET_DVR_GetUpgradeState .....	127
5.27.6	Get the step information of the remote upgrade: NET_DVR_GetUpgradeStep 127	
5.27.7	Close the upgrade handle, and release the resource: NET_DVR_CloseUpgradeHandle .....	128
	Log Query .....	128
5.27.8	Query the log information of the device (supports to search log with S.M.A.R.T information): NET_DVR_FindDVRLog_V30 .....	128
5.27.9	Get the log one by one: NET_DVR_FindNextLog_V30.....	134
5.27.10	Stop querying the log and release the resource: NET_DVR_FindLogClose_V30 135	
	Remote backup .....	135
5.27.11	Backup record files, pictures, or log information: NET_DVR_Backup .....	135
	Restore device default configuration .....	136
5.27.12	Restore device default configuration: NET_DVR_RestoreConfig .....	136
	Import or export configuration file .....	136
5.27.13	Export the configuration file from the device: NET_DVR_GetConfigFile_V30 136	
5.27.14	Export the configuration file from the device: NET_DVR_GetConfigFile.....	136
5.27.15	Import the configuration file to the device: NET_DVR_SetConfigFile_EX ....	137
5.27.16	Import the configuration file to the device: NET_DVR_SetConfigFile .....	137
	Network flow test.....	137



5.27.17	Start to test network flow: NET_DVR_StartNetworkFlowTest .....	137
5.27.18	Stop network flow test: NET_DVR_StopNetworkFlowTest .....	138
	Get UPNP port mapping state .....	138
5.27.19	Get UPNP port mapping state: NET_DVR_GetUpnpNatState .....	138
5.28	Shutdown and Reboot .....	139
5.28.1	Reboot the device: NET_DVR_RebootDVR .....	139
5.28.2	Shutdown the device: NET_DVR_ShutDownDVR .....	139
5.29	Remote Parameter Configuration .....	139
	General parameter configuration .....	139
5.29.1	Get configuration of the device: NET_DVR_GetDVRConfig .....	139
5.29.2	Set the parameters of the device: NET_DVR_SetDVRConfig .....	143
	Alarm output configuration .....	146
5.29.3	Get the state of the alarm output: NET_DVR_GetAlarmOut_V30 .....	146
5.29.4	Set the alarm output port: NET_DVR_SetAlarmOut .....	147
	RTSP parameter configuration .....	147
5.29.5	Get the RTSP parameter: NET_DVR_GetRtspConfig .....	147
5.29.6	Set the RTSP parameter: NET_DVR_SetRtspConfig .....	147
	Get the PTZ protocols supported by the device .....	148
5.29.7	Get the PTZ protocols supported by the device: NET_DVR_GetPTZProtocol .....	148
	Scale parameters settings of video output .....	148
5.29.8	Get the scale information of the video output: NET_DVR_GetScaleCFG_V30 .....	148
5.29.9	Set the scale parameter of the video output: NET_DVR_SetScaleCFG_V30 .....	149
5.30	Stream encryption .....	149
5.30.1	Set secret key of stream: NET_DVR_InquestStreamEncrypt .....	149
5.30.2	get encryption status: NET_DVR_InquestGetEncryptState .....	149
5.31	Get the IPC protocol list supported by the device .....	150
5.31.1	Get the IPC protocol list supported by the device: NET_DVR_GetIPCProtoList .....	150
5.32	Start scanning to get IPC list remotely .....	150
5.32.1	Start scanning to get IPC list remotely : NET_DVR_GetSadpInfoList .....	150
5.32.2	Modify the IPC information remotely: NET_DVR_UpdateSadpInfo .....	150
5.33	E-mail test .....	151
5.33.1	Test according to the configured EMAIL parameter to see whether it can receive and send e-mail successfully: NET_DVR_StartEmailTest .....	151
5.33.2	Get the progress of the e-mail test: NET_DVR_GetEmailTestProgress .....	151
5.33.3	Stop E-mail test: NET_DVR_StopEmailTest .....	152
6	Macro Definition of Error Code .....	153
6.1	Error code of network communication library .....	153
6.2	Error code of RTSP communication library .....	157
6.3	Error code of software decoding library .....	158

# 1 SDK Overview

The device network SDK is developed based on private network communication protocol, and it is designed for the remote connection and configuration of embedded devices. This document is mainly for embedded DVR, and the main device types are listed as below:

DS-72XXHX-SH, DS-91XX-HF-XT, DS-90XX-HF-XT series

DS-90xxHFI-ST, DS-90xxHFI-S(H) series

DS-91XXHFI-ST, DS-91XXHFI-S(H), DS-91XXHWI-ST, 91xxHFI-RH series

DS-81XX, DS-73xx, DS-72xx, DS-78xx, DS-88xx series

DS-80xxHFI/HEI/HCI/HSI-S series

and so on

## The functions supported by the SDK:

1. Live view, playback, remote file download, PTZ control, arm/disarm, voice talk, log query, decoding card function, etc.
2. Remote upgrade, remotely reboot, remotely shut down, remotely format hard disk, and device configuration (system configuration, channel configuration, serial port configuration, alarm configuration, users configuration), etc.

**This document introduces only the major function supported by DVR, and please get more information about other function and related structures from “Device Network SDK Programming Manual.chm”.**

## The device network SDK has both Windows and Linux version.

1. Windows version (32bit SDK) supports Windows8/7/XP/2000/2003/Vista, and it has the files:

Network Communication Library	HCNetSDK.h	head file
	HCNetSDK.lib	LIB file
	HCNetSDK.dll	DLL file
RTSP Communication Library	StreamTransClient.dll	DLL file
Encapsulation Transformation Library	SystemTransform.dll	DLL file
Voice Talk Library	AudioIntercom.dll	DLL file
	OpenAL32.dll	DLL file
Simulate Capability Set	LocalXml.zip	XML file packet
Qos Library	QosControl.dll	DLL file

Software Decode Library	plaympeg4.h	head file
	PlayCtrl.lib	LIB file
	PlayCtrl.dll	DLL file
Hardware decode Library	DataType.h	head file
	DecodeCardSdk.h	head file
	DsSdk.lib	LIB file
	DsSdk.dll	DLL file

2. Linux version (32bit or 64bit SDK) supports the system that gcc-v is 4.1 or above. The tested system have RedHat AS 5/6, (Fedora)FC10/12, CentOS 5, SUSE 10, openSUSE 11, and Ubuntu 9.04/10.04. The SDK has the files:

Network Communication Library	hcnet sdk.h	head file
	libhcnet sdk.so	SO file
RTSP Communication Library	libStreamTransClient.so	SO file
Encapsulation Transformation Library	libSystemTransform.so	SO file
Qos Library	libQosControl.so	SO file
Software Decode Library	plaympeg4.h	head file
	libMPCtrl.so	SO file
	libPlayCtrl.so	SO file

HCNetSDK is required to be loaded for client development, and the other '.dll' files are optional components.

- The **network communication library** is the main functional part of the device network SDK. It is used for communication between the client and devices, including remote control & configuration, video stream acquiring and handling, etc; and network communication library will dynamically loading RTSP communication library, Software decoding library, Hardware decoding library, etc. Network communication library combines a lot of functions from the Software decoding library and Hardware decoding library to facilitate the programming work. However, it is suggested the users to get video stream from 'HCNetSDK.dll', and call relative APIs in the Software decoding library or Hardware decoding library directly if you want to build a system with more complete functions, or in a more flexible way.
- **RTSP Communication Library** supports to get stream from the device by RTSP protocol. Users must load this component for stream of the devices that use RTSP protocol.
- **Encapsulation transformation library** function can be divided into two pieces: one is converting standard stream data to private encapsulation format stream data. When users need to capture private format stream data from products supporting RTSP protocol(that is setting callback function of NET\_DVR\_RealPlay\_V30 interface for capturing data or call NET\_DVR\_SetRealDataCallBack interface to capture data), must load this component. Another is converting standard stream data to other package format, such as 3GPP,PS and so

on. For example, when users need to capture specific package format real-time stream data from products supporting RTSP protocol(corresponding SDK interface is NET\_DVR\_SaveRealData), must load this component.

- **Voice talk library** is used for voice talk to encode or decode the audio data according to the assigned format. The SDK of V4.2.2.5 or earlier versions, it uses Windows API to realize the related function. For the later version, it supports calling NET\_DVR\_SetSDKLocalConfig to select the mode. OpenAL32.dll is the dependent library of AudioIntercom.dll, and must load it in the mode of using voice talk library. **There is no voice talk function in Linux system.**
- Before calling NET\_DVR\_GetDeviceAbility to get the capability set of devices, we can enable the **simulate capability set** by calling NET\_DVR\_SetSDKLocalConfig, and then "LocalXml.zip" should be loaded (should be loaded in the same path with Network Communication Library).
- The **Qos library** is stream bitrate control library, used for push mode SDK.
- **Software Decoding Library** is used for decoding real-time video stream (remote live view), playback files, etc. It has included standard stream decoding function. If users need to play real-time stream or recording data and display(i.e. the second structure parameter play handle of NET\_DVR\_RealPlay\_V30 interface set to effective), must load this component. However, if users just need to use it for capturing data, then do external operation, needn't load this component, this way is more flexible. **Linux 64bit does not support the software decoding function, and the window handle when calling the API of live view or playback should be set to NULL, just to get stream from the device while not decode and display.**
- **Hardware Decoding Library** can only be used when there is MDI card. For DVR, it is not required.

## 2 SDK Version Update

### Version 4.1.0 (2012-6-28)

- New APIs to reversely playback video: NET\_DVR\_PlayBackReverseByName, NET\_DVR\_PlayBackReverseByTime\_V40
- New APIs to get the record starting time and stopping time of the channel: NET\_DVR\_InquiryRecordTimeSpan
- New API to instantly refresh the record index: NET\_DVR\_UpdateRecordIndex
- New extended API to search the record files: NET\_DVR\_FindFile\_V40
- New API to query UPNP port mapping state: NET\_DVR\_GetUpnpNatState
- New API to backup log information: NET\_DVR\_Backup
- New configuration function: NET\_DVR\_DRAWFRAME\_DISK\_QUOTA\_CFG, NET\_DVR\_UPNP\_CFG, NET\_DVR\_UPNP\_NAT\_STATE, NET\_DVR\_POE\_CFG, NET\_DVR\_CUSTOM\_PROTOCOL, NET\_DVR\_STREAM\_CABAC, NET\_DVR\_POE\_CHANNEL\_ADD\_MODE, NET\_DVR\_DIGITAL\_CHANNEL\_STATE, NET\_DVR\_ESATA\_MINISAS\_USAGE
- The new DVR support encryption configuration: NET\_DVR\_InquestStreamEncrypt, NET\_DVR\_InquestGetEncryptState
- New configuration command: DVR\_GET\_FTPCFG\_SECOND, DVR\_SET\_FTPCFG\_SECOND, NET\_DVR\_GET\_HDCFG\_V40, NET\_DVR\_SET\_HDCFG\_V40
- New minor types of operation log: MINOR\_LOCAL\_TAG\_OPT, MINOR\_LOCAL\_VOUT\_SWITCH, MINOR\_STREAM\_CABAC

### Version 4.1.0 (2012-4-23)


- New extended APIs: NET\_DVR\_PlayBackByTime\_V40, NET\_DVR\_PlayBackControl\_V40, NET\_DVR\_SetupAlarmChan\_V41

### Version 4.0.5 (2011-06-13)

- New function of holiday configuration: NET\_DVR\_HOLIDAY\_PARAM\_CFG, NET\_DVR\_HOLIDAY\_HANDLE, NET\_DVR\_HOLIDAY\_RECORD
- New function of multi-network-card and bonding-network-card configuration: NET\_DVR\_NETCFG\_MULTI, NET\_DVR\_NETWORK\_BONDING
- New APIs to test network flow: NET\_DVR\_StartNetworkFlowTest, NET\_DVR\_StopNetworkFlowTest
- New APIs to operate record label: NET\_DVR\_InsertRecordLabel, NET\_DVR\_DelRecordLabel, NET\_DVR\_FindRecordLabel, NET\_DVR\_FindNextLabel, NET\_DVR\_StopFindLabel
- New function of capturing configuration, and picture playback and backup: NET\_DVR\_JPEG\_CAPTURE\_CFG, NET\_DVR\_SCHED\_CAPTURECFG, NET\_DVR\_FTPCFG, NET\_DVR\_FindPicture, NET\_DVR\_FindNextPicture, NET\_DVR\_CloseFindPicture, NET\_DVR\_GetPicture\_V30, NET\_DVR\_BackupPicture
- New function of disk quota configuration: NET\_DVR\_DISK\_QUOTA\_CFG
- New function of SNMP configuration: NET\_DVR\_SNMPCFG
- New channel-related function: NET\_DVR\_LINK\_STATUS、NET\_DVR\_VIDEO\_INPUT\_EFFECT

## 3 API Calling Procedure

### 3.1 Main calling procedure of SDK

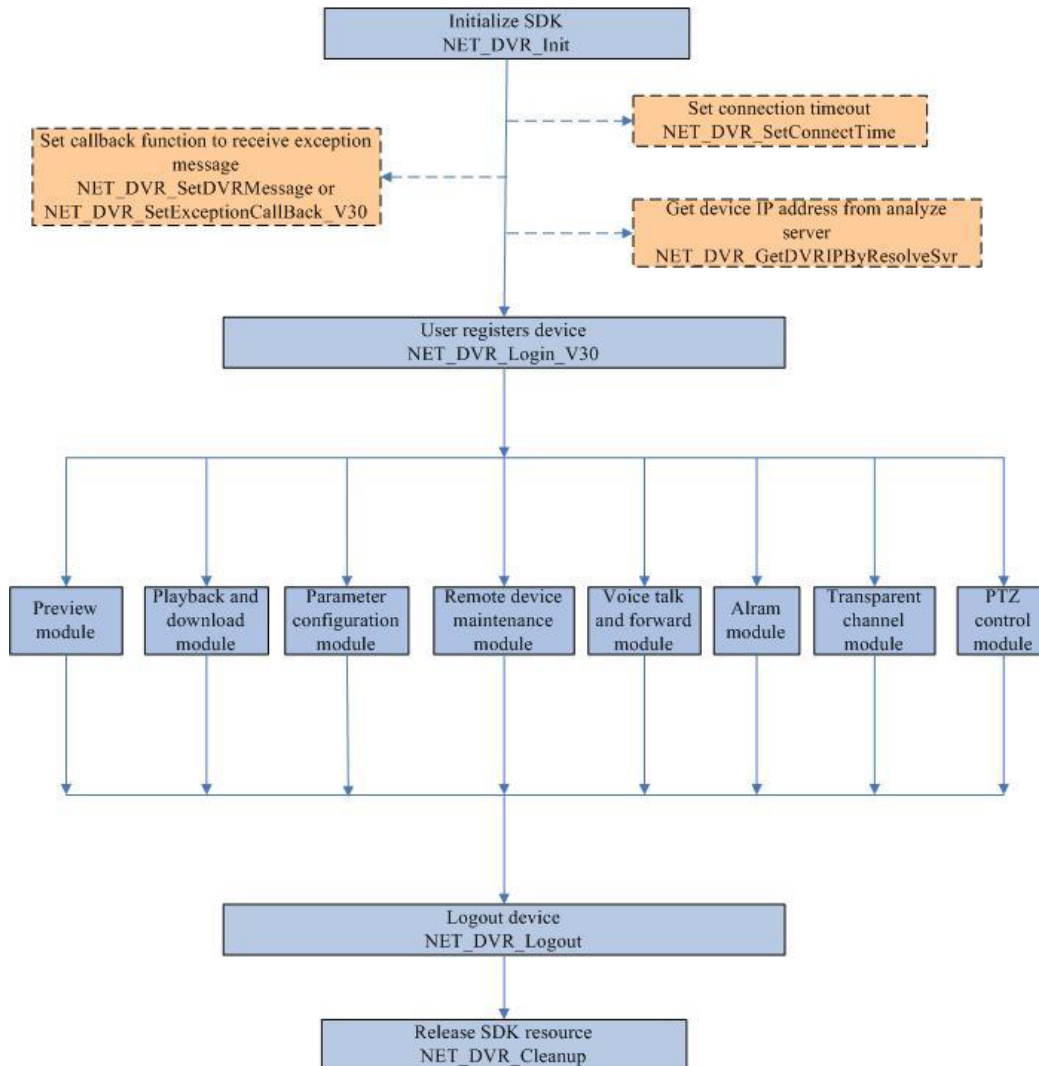

The part in dashed box is optional and will not affect the function and use of other process and modules. It can be divided into ten parts by different realization functions. The following four parts: initialize SDK, user register devices, logout and release SDK resource is essential to each module.

- SDK initial([NET\\_DVR\\_Init](#)): Initialization of the whole network SDK, operations like memory pre-allocation.
- Set connection timeout ([NET\\_DVR\\_SetConnectTime](#)): This part is optional, and used to set


the network connection timeout of SDK. User can set this value to their own needs. You will use the default value when you don't call this interface to set timeout.

- Set reception message callback function([NET\\_DVR\\_SetDVRMessage](#) or [NET\\_DVR\\_SetExceptionCallBack\\_V30](#)): Most module functions of the SDK are achieved by the asynchronous mode, so we provide this interface for receiving reception message of preview, alarm, playback, transparent channel and voice talk process. Clients can set this callback function after initializing SDK, receive process exception message of each module in application layer.
- Obtain the device IP address from IP analyze server([NET\\_DVR\\_GetDVRIPByResolveSvr\\_Ex](#)): This interface provides a way to obtain device IP address information from IP analyze server when just know the device name and serial number. Such as: the current device obtain a dynamic IP address via dial-up access, and PC runs IPServer software can be an analyze server, we could input the analyze server IP address, device name and serial number for searching the IP address of this device. IPServer is a domain name analyze server software provided by us.
- User register to device([NET\\_DVR\\_Login\\_V30](#)): Realize user register function, After registering successfully, The returned user ID as a Unique identifier for other function operations. The max register users is 512. Mention specific devices, there permits 32 register user names and at most 128 user register when using device ver higher than V3.0; there permits 16 register user names and at most 128 user register when using device ver lower than V3.0.
- Preview module: Get real-time stream data from front-end sever, functions like decoding display and play control, and support software and hardware decoding at the same time. See the specific process [Live View Module Procedure](#).
- Playback and download module: Remote playback or download the record files in front-end server by time or file name, then do decoding or storing. Also supports HTTP functionality. See the specific process [Playback and Download Module Procedure](#).
- Parameter configuration module: set and retrieve the parameters of front-end server, including information like device parameters, network parameters, channel compression parameters, serial port parameters, alarm parameters, abnormal parameters, transaction information and user configuration parameters. See [Parameter Configuration Module Procedure](#).
- Remote equipment maintenance module: implementing turn off the device, restart the device, restore the default values, format a remote HDD, remote upgrade and configuration file import/export. See [Remote Device Maintenance Module Procedure](#).
- Voice talk and forward module: implement voice talk with front-end and obtain voice data, audio encoding format can be specified. See [Voice Talk And Forward Module Procedure](#).
- Alarm module: handle all kinds of alarm signals uploaded by front-end. Alarm can be divided into two ways into "arm" and "listen", it doesn't require you to do operations like "user register" when using "listen" module and without the need of obtain user ID. See the specific process [Alarm Module Procedure](#).
- Transparent channel module: transparent channel is a technology that analyzing data packets and sent directly to serial port. Actually an extension of serial device control in distance. You can use IP network to control serial device, such as decoder, matrix, alarm host, access control, instrumentation and other serial devices, user only see point to point

transparent, without concern for network transmission process, so it's called a transparent serial channel. Network SDK provides 485 and 232 serial ports as transparent channels, you must set 232 work mode to transparent channel in 232 configuration information structure NET\_DVR\_RS232CFG at first, so that 232 can be used as transparent channel. See the specific process [Transparent Channel Module Procedure](#).

- PTZ control module: To achieve the basic operations of PTZ, preset, cruise, track and transparent PTZ control. SDK will be divided into two modes: one is the handle returned by the image preview control, the other is no limited preview, do PTZ control through user register ID.

### 3.2 Live view procedure

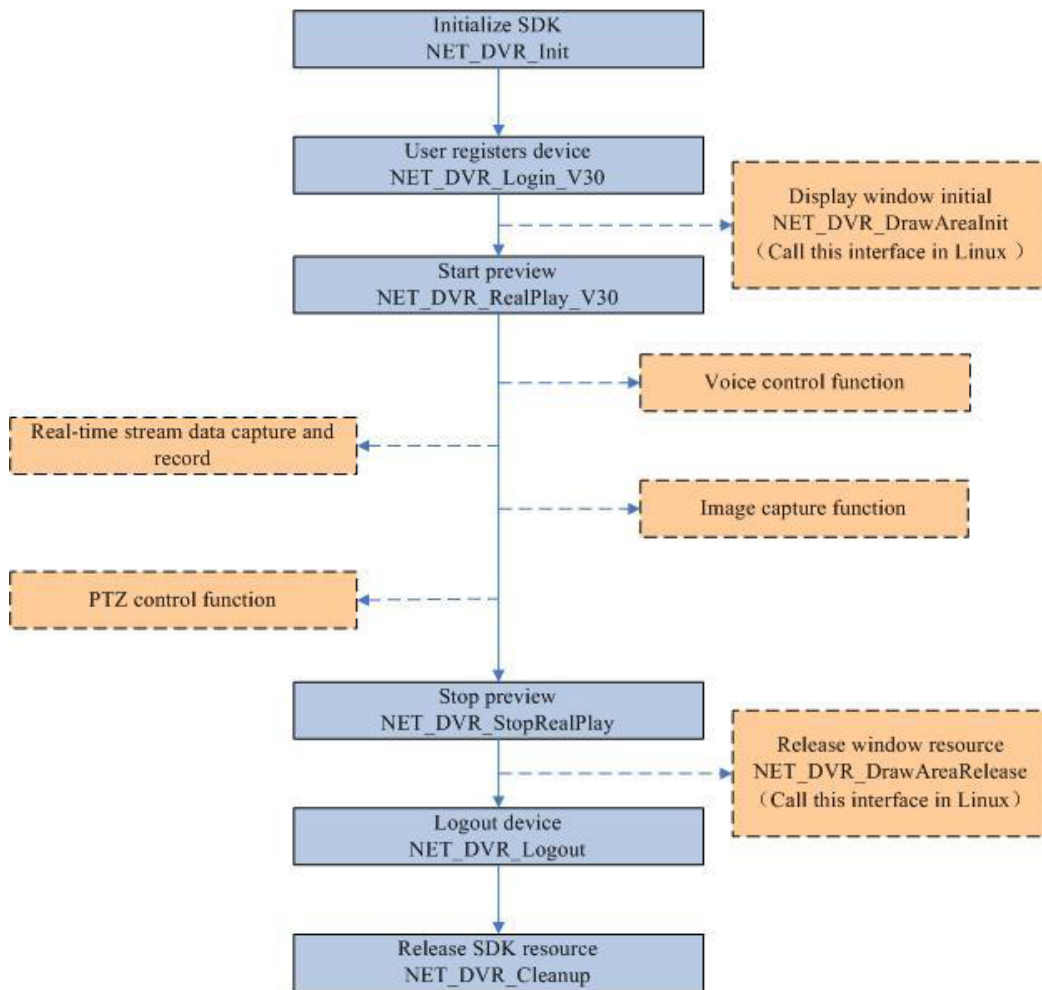

The modules shown by dotted line is related with preview module, and these interfaces can be called only after starting preview. They are parallel and realize their corresponding function independently.

- Sound control function mainly realizes opening or closing the exclusive or share sound, and volume control. Related API: [NET\\_DVR\\_OpenSound](#), [NET\\_DVR\\_CloseSound](#), [NET\\_DVR\\_OpenSoundShare](#), [NET\\_DVR\\_CloseSoundShare](#), [NET\\_DVR\\_Volume](#)




- Module of real-time stream data capture and record mainly realizes data callback and local record. Related API: [NET\\_DVR\\_SetRealDataCallBack](#), [NET\\_DVR\\_SetStandardDataCallBack](#), [NET\\_DVR\\_SaveRealData](#).
- Picture capture module mainly realizes capturing current decoded image and saving as BMP file. Related API: [NET\\_DVR\\_CapturePicture](#).
- PTZ control module mainly realizes operating PTZ control which needs starting preview, including PTZ preset, patrol, pattern and transparent PTZ. Related API: [NET\\_DVR\\_PTZControl](#), [NET\\_DVR\\_PTZControl\\_EX](#), [NET\\_DVR\\_PTZPreset](#), [NET\\_DVR\\_PTZPreset\\_EX](#), [NET\\_DVR\\_PTZCruise](#), [NET\\_DVR\\_PTZCruise\\_EX](#), [NET\\_DVR\\_PTZTrack](#), [NET\\_DVR\\_PTZTrack\\_EX](#), [NET\\_DVR\\_TransPTZ](#), [NET\\_DVR\\_TransPTZ\\_EX](#).

#### **Decoding method of real-time stream:**

- Method 1: If set the handle of play window in preview interface [NET\\_DVR\\_RealPlay\\_V30](#) to be valid handle, the data will be decoded and displayed by SDK: after initializing SDK and logging device, call directly starting or stopping preview interface.
- Method 2: Users can get stream data to handle by setting the handle of play window in preview interface [NET\\_DVR\\_RealPlay\\_V30](#) to be NULL and calling callback interface( set the callback function in [NET\\_DVR\\_RealPlay\\_V30](#), or call [NET\\_DVR\\_SetRealDataCallBack](#) or [NET\\_DVR\\_SetStandardDataCallBack](#)).

**[Example Code](#)**

### 3.3 Playback and download procedure

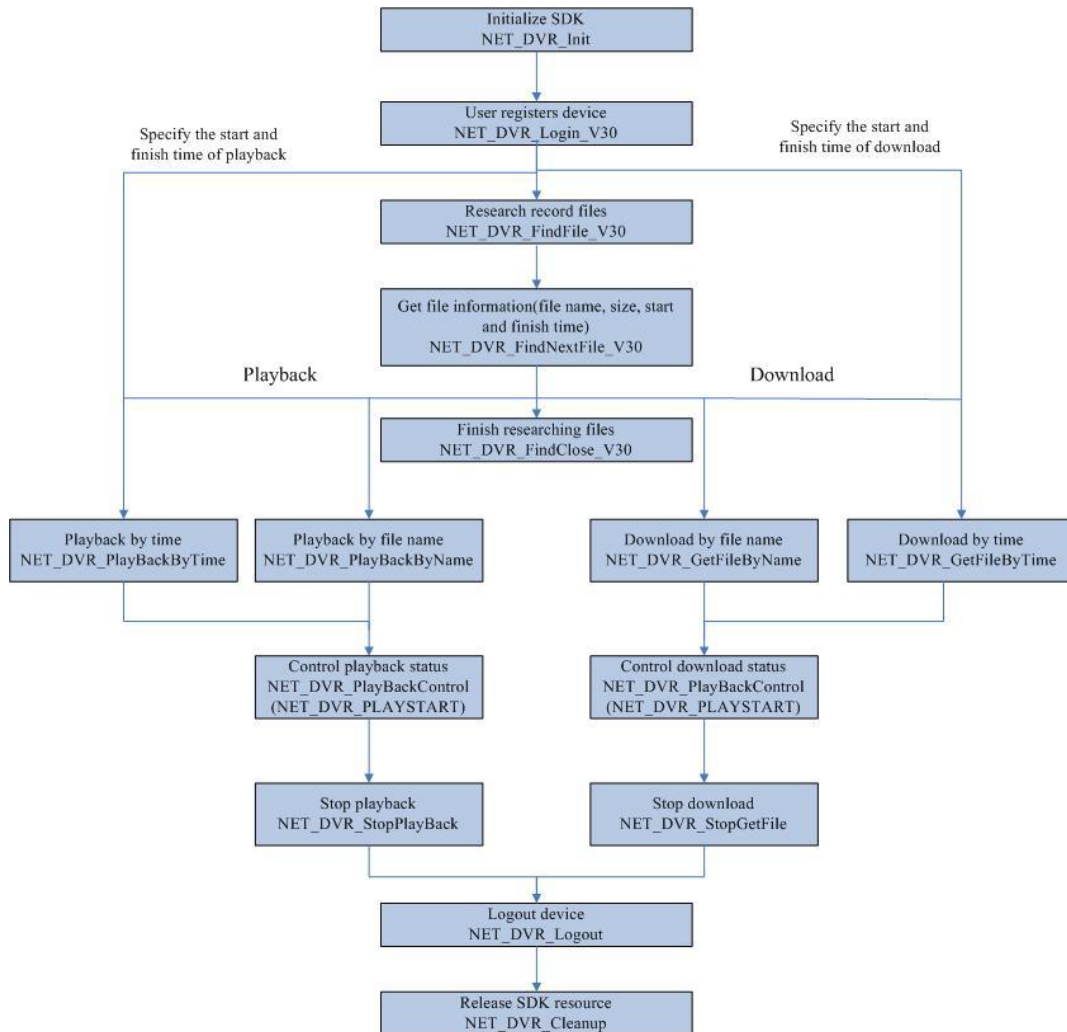


- Playback or download by file need to get file information through researching file function at first(regarding interface [NET\\_DVR\\_FindFile\\_V30](#), [NET\\_DVR\\_FindNextFile\\_V30](#)),then start playback or download refer to obtained file name(regarding interface [NET\\_DVR\\_PlayBackByName](#), [NET\\_DVR\\_GetFileByName](#)),especially note that you must use start play command(NET\_DVR\_PLAYSTART) of control interface ([NET\\_DVR\\_PlayBackControl\\_V40](#))after calling playback or download interfaces.
- Playback or download by time, user couldn't call interfaces regarding researching record files. Just need to fix start and finish time of playback or download interface(regarding interface [NET\\_DVR\\_PlayBackByTime](#), [NET\\_DVR\\_GetFileByTime](#)),Then must call start play command(NET\_DVR\_PLAYSTART)of control interface([NET\\_DVR\\_PlayBackControl\\_V40](#)). At this time, start playback or download within the specified time with record videos in the recent period of time. User can call the relevant interfaces of researching record files, obtain start and finish time of file, and specify the time parameters of playback or download interfaces in this time range.You must use start play command(NET\_DVR\_PLAYSTART) of

control interface ([NET\\_DVR\\_PlayBackControl\\_V40](#)) after calling playback or download interfaces, too.

[Example Code](#)


### 3.4 Parameter configuration procedure

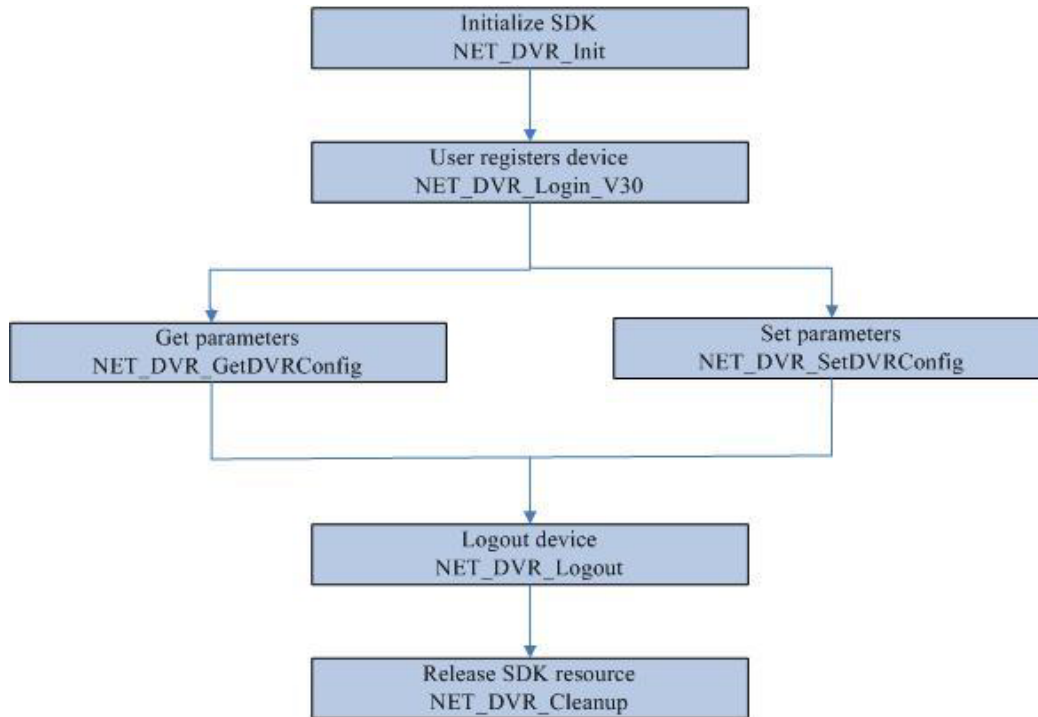

- If you want to do parameters configuration, you must do SDK initialization and user register at first, use the returned ID number as the first parameter of interface configuration. Proposal to call interface([NET\\_DVR\\_GetDVRConfig](#)) to get parameters for complete argument structure before setting each certain parameter, modify the parameters need to change, as input parameters for setting parameter interface. At last call setting parameter interface([NET\\_DVR\\_SetDVRConfig](#)), Setting successfully if return successfully.

[Example Code](#)

### 3.5 Remote device maintenance procedure

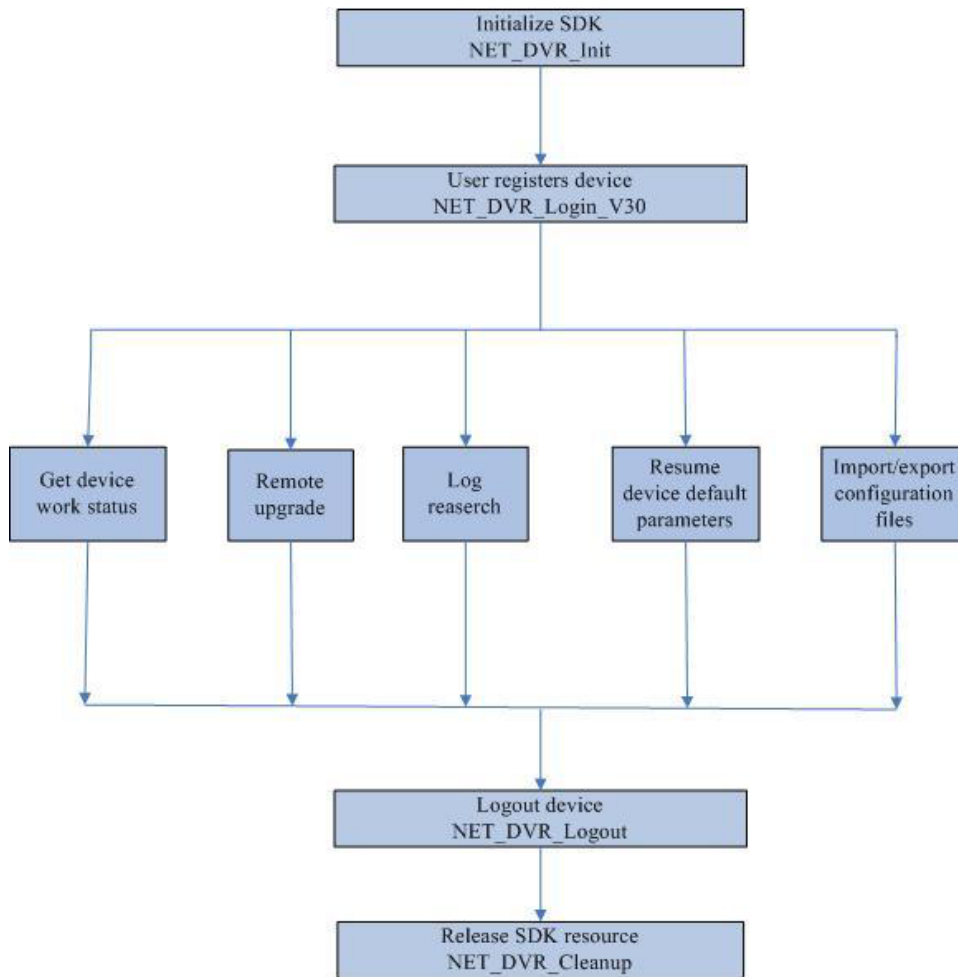


Remote maintenance module for device consists of getting device state, remote upgrade, log query, restoring default settings, and importing & exporting configuration file.

- Get device state: get current state of hard disks, channels, alarm input & output, local display, voice channels, and so on. Related API: [NET\\_DVR\\_GetDVRWorkState\\_V30](#).
- Remote upgrade: upgrade device remotely, and get current progress and state of upgrade. Related API: [NET\\_DVR\\_Upgrade](#), [NET\\_DVR\\_GetUpgradeProgress](#), [NET\\_DVR\\_GetUpgradeState](#).
- Query log: query log message, including alarm, exception, operation, and log with S.M.A.R.T information. Related API: [NET\\_DVR\\_FindDVRLog\\_V30](#), [NET\\_DVR\\_FindNextLog\\_V30](#).
- Restore default configuration for device. Related API: [NET\\_DVR\\_RestoreConfig](#).
- Import or export configuration file: export and save all configuration information, or import configuration to the device. Related API: [NET\\_DVR\\_GetConfigFile\\_V30](#), [NET\\_DVR\\_GetConfigFile](#), [NET\\_DVR\\_SetConfigFile\\_EX](#), [NET\\_DVR\\_SetConfigFile](#).

**[Example Code](#)**

### 3.6 Voice talk or voice forward procedure

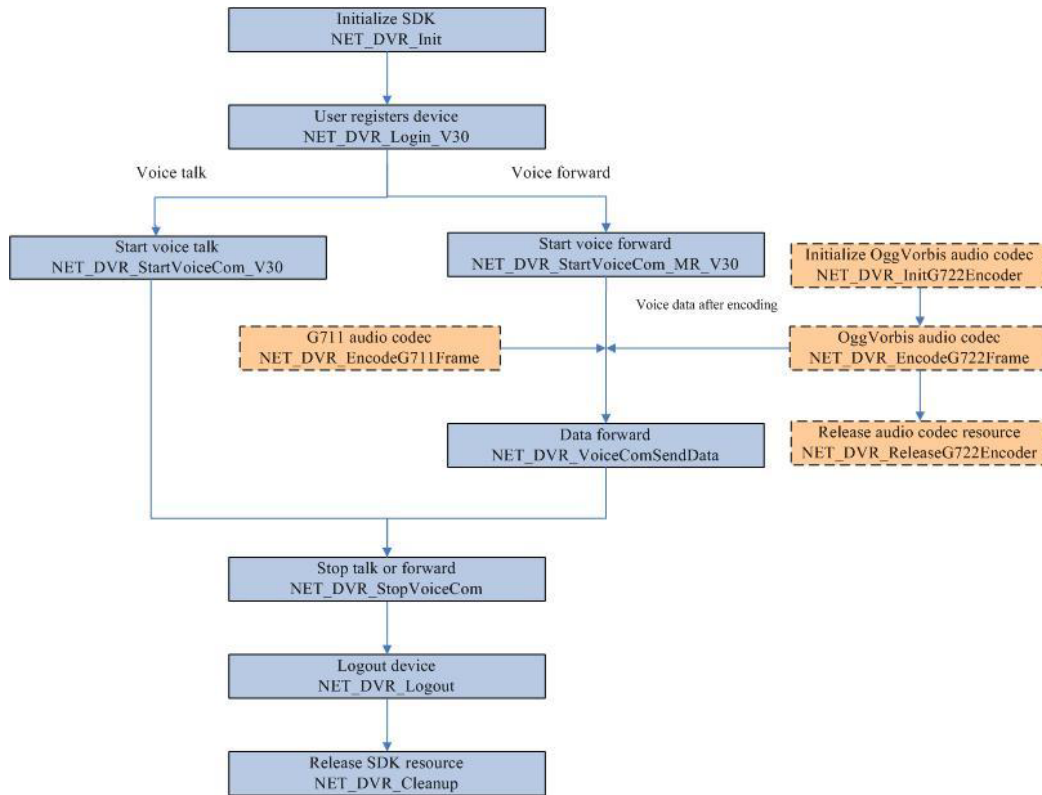

- Voice talk function realizes audio sending and receiving between PC client and device, by calling interface [NET\\_DVR\\_StartVoiceCom\\_V30](#) after device registers successfully. User can set callback function with this interface to get data sent from current device or sample by PC (choose callback encoded or PCM data by requirements).
- Voice forward function realizes forward encoded audio data to device, the steps is as following:
  - Please call [NET\\_DVR\\_StartVoiceCom\\_MR\\_V30](#) to start voice forward with a device(build connection with the device, wait for sending data at this time).
  - Ready for sending data(need to encode at first), corresponds dotted part of the above image, if data has been handled according the audio compression format, this part could be omitted. Data sources can be collected from the PC sound card, or read from files, but need to compressed by private algorithm, SDK provides a set of coding interfaces:
    - If the audio format is G722: 1)initialize audio codec- [NET\\_DVR\\_InitG722Encoder](#);
    - 2)G722 audio codec- [NET\\_DVR\\_EncodeG722Frame](#),parameters of the interface have certain requirments, please see details from the API description; 3)Please call [NET\\_DVR\\_ReleaseG722Encoder](#) to release encoding audio resources after all encoding process finished.
    - If the audio format is G711: please call [NET\\_DVR\\_EncodeG711Frame](#) to encoding the audio data directly.

**If the audio format is G726:** 1) initialize audio codec- NET\_DVR\_InitG726Encoder; 2) G726 audio codec- NET\_DVR\_EncodeG726Frame, parameters of the interface have certain requirements, please see details from the API description; 3) Please call NET\_DVR\_ReleaseG726Encoder to release encoding audio resources after all encoding process finished.


- After the encoding operation, we can get fixed size and encoded data every time, and then call interface [NET\\_DVR\\_VoiceComSendData](#) to send these data to device. After all forward functions completed, call interface [NET\\_DVR\\_StopVoiceCom](#) to finish audio forward connection with device.
- Linux SDK only supports voice forward function currently, doesn't support voice talk.

[Example Code](#)

## 3.7 Alarm procedure

There are two alarm modes: "arm" and "listen". You can receive information like motion detection alarm, video loss alarm, block alarm and signal occlusion alarm uploaded by devices.


### 3.7.1 Alarm (arming) procedure

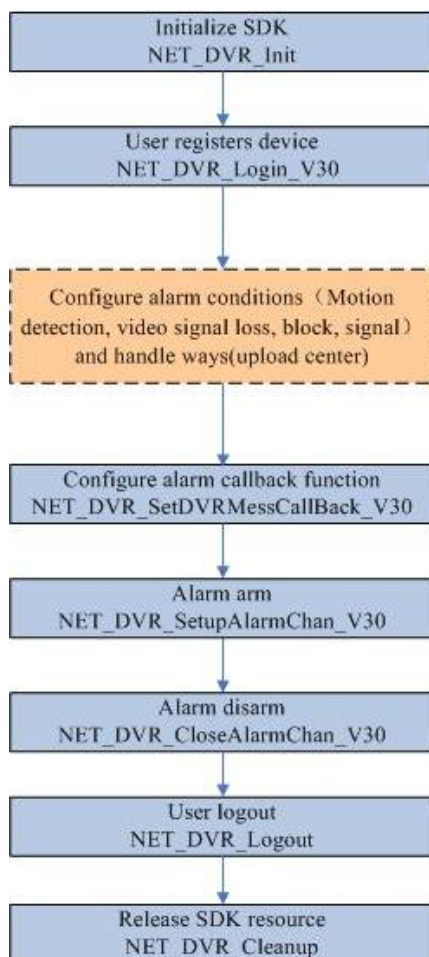

- "Arm" alarm mode: SDK connects to device actively, and send alarm uploading command to the device. And device will send alarm message to SDK immediately when there's an alarm.
- Refer to the above "procedure chart", "arm" needs to register ([NET\\_DVR\\_Login\\_V30](#)) at first. Dotted part is the necessary condition if you want the device uploading the alarm information, and this part mainly completes the configuration of relevant alarm conditions and handling ways, the parameter configuration interface is [NET\\_DVR\\_GetDVRConfig](#) and [NET\\_DVR\\_SetDVRConfig](#). The supported alarm types are motion detection, video signal loss, block and signal alarm, the configuration structure of first three alarm types corresponding alarm conditions and handle ways is [NET\\_DVR\\_PICCFG\\_V30](#), and signal alarm configuration structure is [NET\\_DVR\\_ALARMINCFG\\_V30](#). If these parameters are already configured, dotted part can be omitted. The following is setting alarm callback function ([NET\\_DVR\\_SetDVRMessageCallBack\\_V30](#) and other functions), and also need to arm the device on the client end ([NET\\_DVR\\_SetupAlarmChan\\_V30](#)). It needs to call function [NET\\_DVR\\_CloseAlarmChan\\_V30](#) to disarm interface if you want to finish the whole alarm uploading process.

### Example Code

### 3.7.2 Alarm (listening) procedure

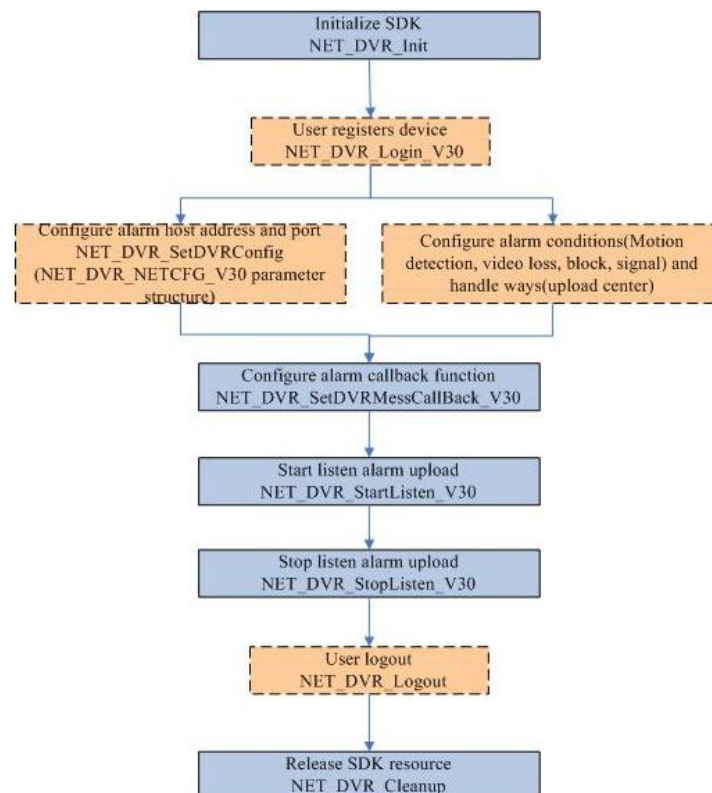


- "Listen" alarm mode: SDK doesn't connect to device actively, just listen to alarm message that uploaded actively by the device at the set listening port.
- This procedure needs to remotely configure device alarm host IP address (PC address) and alarm host port (PC listen port). Alarm host listens and receives the uploaded alarm message

at this port. If alarm host address and alarm host port have been configured, the dotted part of the above chart- "user register" and "configure alarm host address and port" parts, can be omitted. But if no configuration beforehand, must call parameter configuration interface ([NET\\_DVR\\_GetDVRConfig](#) and [NET\\_DVR\\_SetDVRConfig](#)) to configure network parameters by ([NET\\_DVR\\_NETCFG\\_V30](#)). And the dotted part "configure alarm conditions and handle ways" is the same with "arm". After setting all the parameters which need to be configured, please call [NET\\_DVR\\_StartListen\\_V30](#) to open SDK listening port, ready for receiving device uploaded alarm information. This method is applicable, if some device upload alarm to a client, and the client doesn't need to login the device. Also, it doesn't affect alarm uploading if the device reboots. The drawback of this mode is that devices support to configure one alarm host address and one port number only.

[Example Code](#)

### 3.8 Transparent channel setup procedure

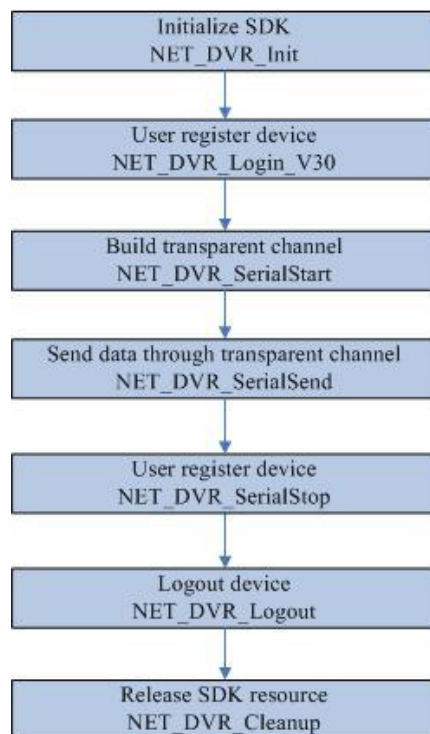

- SDK provides to use 485 and 232 as transparent channels. when using 232 serial port as transparent channel. At first you must set work mode of 232 configuration information to transparent channel mode. The specific way is calling interface [NET\\_DVR\\_GetDVRConfig](#) and [NET\\_DVR\\_SetDVRConfig](#) to get and set parameter dwWorkMode of [NET\\_DVR\\_RS232CFG\\_V30](#) to transparent channel. When using 485 serial port as transparent channel. This step can be omitted. Call [NET\\_DVR\\_SerialStart](#) to build transparent channel and [NET\\_DVR\\_SerialSend](#) to send data. Need to do operations like break transparent channel ([NET\\_DVR\\_SerialStop](#)) after the whole process finished.

[Example Code](#)



### 3.9 Hybrid DVR resource configuration

If you want to make IPC connecting into Hybrid DVR device, it requires calling APIs to configure IP access parameters, including getting channel resources and re-allocating resources.

- The client can get the device information by login device ([NET\\_DVR\\_Login\\_V30](#)): byChanNum- the total number of analog channels, byIPChanNum- the total number of IP channels. The number of analog channel starts from the startingI number byStartChan to MAX\_ANALOG\_CHANNUM, and the number of IP channel starts from MAX\_ANALOG\_CHANNUM + byStartChan to MAX\_CHANNUM\_V30 + byStartChan.
- You can get the detailed IP channel information by calling [NET\\_DVR\\_GetDVRConfig](#) (configuration command: NET\_DVR\_GET\_IPPARACFG\_V40), including whether the analog channel is disabled or not, the starting channel number of IP channel, valid state and on-line state of IP channel, stream mode of IP channel, and so on. An you can call [NET\\_DVR\\_SetDVRConfig](#) (configuration command: NET\_DVR\_SET\_IPPARACFG\_V40) to configure the IP resource.
- The number of analog alarm input channel starts from 0 to MAX\_ANALOG\_ALARMIN-1, and the number of IP alarm input channel starts from MAX\_ANALOG\_ALARMIN to MAX\_ALARMIN\_V30. The alarm output channels are same to the alarm input channels.
- IP alarm input and output channels of hybrid DVR are allocated by device automatically after IP video and audio channel resources allocated. If need to configure IP alarm parameters, at first, please use configuration structure, IP alarm input resources - [NET\\_DVR\\_IPALARMINCFG](#) and IP alarm output resources - [NET\\_DVR\\_IPALARMOUTCFG](#), to obtain resources. Then configure relevant channels parameters by configuration - [NET\\_DVR\\_ALARMINCFG\\_V30](#) and [NET\\_DVR\\_ALARMOUTCFG\\_V30](#).
- The maximum total number of audio and video channel resources is decided by current device's DSP processing power(see the corresponding device's instructions).

#### The common channel configuration example(e.g. DS-9016):

Used as DVR

——16\* analog channels

Used as NVR

——16\* normal IPC channels (<= 4CIF)

——8\* 720P HD IPC channels

——8\* normal IPC channels + 4\* 720P HD IPC channels

Used as HybridDVR

——16\* analog channels + 8\* normal IPC channels

——16\* analog channels + 4\* 720P HD IPC channels

——16\* analog channels + 4\* normal IPC channels + 2\* 720P HD IPC channels

——8\* analog channels + 16\* normal IPC channels

——8\* analog channels + 8\* 720P HD IPC channels

——8\* analog channels + 8\* normal IPC channels + 4\* 720P HD IPC channels

[Example Code](#)

## 4 API Calling Example

### 4.1 Example code of live view

[Related procedure chart](#)

**Mode 1 SDK decodes real-time stream and display directly**

```
#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
#include <time.h>
using namespace std;

void CALLBACK g_ExceptionCallBack(DWORD dwType, LONG IUserID, LONG IHandle, void *pUser)
{
    char tempbuf[256] = {0};
    switch(dwType)
    {
        {
            case EXCEPTION_RECONNECT:    // reconnect when preview
                printf("-----reconnect-----%d\n", time(NULL));
                break;
            default:
                break;
        }
    }
}

void main() {

    //-----
    //Initialize SDK

    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    //Login the device
    LONG IUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
```

```

IUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
if (IUserID < 0)
{
    printf("Login error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Cleanup();
    return;
}

//-----
//Set exception callback function
NET_DVR_SetExceptionCallBack_V30(0, NULL, g_ExceptionCallBack, NULL);
//-----
//Start preview and set to callback stream data
LONG IRealPlayHandle;
HWND hWnd = GetConsoleWindow();    //Get window handle
NET_DVR_CLIENTINFO ClientInfo = {0};
ClientInfo.hPlayWnd = hWnd;
//If need to decode, please set it valid. If want to get stream data only, it can be set to NULL
ClientInfo.IChannel    = 1;        // Preview channel NO.
ClientInfo.ILinkMode    = 0;        /* The high bit (31) 0 means the main stream, while 1 means the sub
stream. Bit 0~bit 30 are used for link mode: 0- TCP mode, 1- UDP mode, 2- Multi-play mode, 3- RTP mode, 4- RTP
over RTSP, 5- RTSP over HTTP */
ClientInfo.sMultiCastIP = NULL;    // Multicast IP. Please set when require to preview in multicast mode.

BOOL bPreviewBlock = false;
//Whether blocked when requiring a stream connection, 0 means unblocked, 1 means blocked
IRealPlayHandle = NET_DVR_RealPlay_V30(IUserID, &ClientInfo, NULL, NULL, 0);
if (IRealPlayHandle < 0)
{
    printf("NET_DVR_RealPlay_V30 error\n");
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}

//-----
// Close preview
NET_DVR_StopRealPlay(IRealPlayHandle);
// Logout
NET_DVR_Logout(IUserID);
// Release SDK resource
NET_DVR_Cleanup();

return;
}

```

**Mode 2** Users themselves deal with stream data which called back by g\_RealDataCallBack\_V30. Here takes software decoding as an example.

```
#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
#include <time.h>
#include "plaympeg4.h"
using namespace std;

LONG m_iPort; //Global Player port NO.

void CALLBACK g_RealDataCallBack_V30(LONG lRealHandle, DWORD dwDataType, BYTE *pBuffer,DWORD
dwBufSize,void* dwUser)
{
    HWND hWnd=GetConsoleWindow();
    switch (dwDataType)
    {
        case NET_DVR_SYSHEAD: //System head
            if (!PlayM4_GetPort(&lPort)) //Get unused port
            {
                break;
            }
            m_iPort = lPort; /*The data called back at the first time is system header. Please
assign this port to global port, and it will be used to play in next callback */
            if (dwBufSize > 0)
            {
                if (!PlayM4_SetStreamOpenMode(lPort, STREAME_REALTIME))
                    //Set real-time stream playing mode
                {
                    break;
                }
                if (!PlayM4_OpenStream(lPort, pBuffer, dwBufSize, 1024*1024))
                    //Open stream
                {
                    break;
                }
                if (!PlayM4_Play(lPort, hWnd)) //Start play
                {
                    break;
                }
            }
        case NET_DVR_STREAMDATA: //Stream data
```

```

        if (dwBufSize > 0 && lPort != -1)
        {
            if (!PlayM4_InputData(lPort, pBuffer, dwBufSize))
            {
                break;
            }
        }
    }
}

void CALLBACK g_ExceptionCallBack(DWORD dwType, LONG lUserID, LONG lHandle, void *pUser)
{
    char tempbuf[256] = {0};
    switch(dwType)
    {
        case EXCEPTION_RECONNECT:    //reconnect when preview
            printf("-----reconnect-----%d\n", time(NULL));
            break;
        default:
            break;
    }
}

void main() {

    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connection time and reconnection time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    // Login
    LONG lUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    lUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (lUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }
}

```

```

//-----
//Set exception callback function
NET_DVR_SetExceptionCallBack_V30(0, NULL,g_ExceptionCallBack, NULL);

//-----
//Start preview and set to callback stream data
LONG IRealPlayHandle;
NET_DVR_CLIENTINFO ClientInfo = {0};
ClientInfo.hPlayWnd = NULL;
//If need to decode, please set it valid. If want to get stream data only, we can set to NULL
ClientInfo.IChannel    = 1;      //Preview channel NO.
ClientInfo.ILinkMode    = 0;      /*If 31st bit is 0, it means connect main stream, is 1 means sub stream.
Bit 0~bit 30 are used for link mode: 0- TCP mode, 1- UDP mode, 2- Multi-play mode, 3- RTP mode, 4- RTP over
RTSP, 5- RTP over HTTP */
ClientInfo.sMultiCastIP = NULL;   //Multicast IP. Please set when require to preview in multicast mode.
BOOL bPreviewBlock = false;
//whether blocked when requiring a stream connection, 0 means unblocked, 1 means blocked
IRealPlayHandle = NET_DVR_RealPlay_V30(IUserID, &ClientInfo, g_RealDataCallBack_V30, NULL, 0);
if (IRealPlayHandle < 0)
{
    printf("NET_DVR_RealPlay_V30 error\n");
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}
//-----
//Close preview
NET_DVR_StopRealPlay(IRealPlayHandle);
//Logout
NET_DVR_Logout_V30(IUserID);
NET_DVR_Cleanup();
return;
}

```

## 4.2 Example code of playback and download

[Related procedure chart](#)

**Example no.1** Search the recording files and download the files

```

#include <stdio.h>
#include <iostream>
#include "Windows.h"

```

```
#include "HCNetSDK.h"
using namespace std;

int saveRecordFile(int userId,char * srcfile,char * destfile)
{
    int bRes = 1;
    int hPlayback = 0;
    if( (hPlayback = NET_DVR_GetFileByName(userId, srcfile, destfile)) < 0 )
    {
        printf( "GetFileByName failed. error[%d]\n", NET_DVR_GetLastError());
        bRes= -1;
        return bRes;
    }

    if(!NET_DVR_PlayBackControl(hPlayback, NET_DVR_PLAYSTART, 0, NULL))
    {
        printf("play back control failed [%d]\n",NET_DVR_GetLastError());
        bRes=-1;
        return bRes;
    }

    int nPos = 0;
    for(nPos = 0; nPos < 100&& nPos>=0; nPos = NET_DVR_GetDownloadPos(hPlayback))
    {
        Sleep(5000); //millisecond
    }
    printf("have got %d\n", nPos);

    if(!NET_DVR_StopGetFile(hPlayback))
    {
        printf("failed to stop get file [%d]\n",NET_DVR_GetLastError());
        bRes = -1;
        return bRes;
    }
    printf("%s\n",srcfile);

    if(nPos<0 || nPos>100)
    {
        printf("download err [%d]\n",NET_DVR_GetLastError());
        bRes=-1;
        return bRes;
    }
    else
    {

```

```

        return 0;
    }
}

void main() {
    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    // Login the device
    LONG IUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    IUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (IUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    NET_DVR_FILECOND struFileCond;
    struFileCond.dwFileType = 0xFF;
    struFileCond.lChannel = 1;
    struFileCond.dwIsLocked = 0xFF;
    struFileCond.dwUseCardNo = 0;
    struFileCond.struStartTime.dwYear    = 2011;
    struFileCond.struStartTime.dwMonth   = 3;
    struFileCond.struStartTime.dwDay     = 1;
    struFileCond.struStartTime.dwHour    = 10;
    struFileCond.struStartTime.dwMinute  = 6;
    struFileCond.struStartTime.dwSecond  = 50;
    struFileCond.struStopTime.dwYear     = 2011;
    struFileCond.struStopTime.dwMonth    = 3;
    struFileCond.struStopTime.dwDay      = 1;
    struFileCond.struStopTime.dwHour     = 11;
    struFileCond.struStopTime.dwMinute   = 7;
    struFileCond.struStopTime.dwSecond   = 0;

    //-----
    //Search recording files
    int IFindHandle = NET_DVR_FindFile_V30(IUserID, &struFileCond);

```



```

if(IFindHandle < 0)
{
    printf("find file fail,last error %d\n",NET_DVR_GetLastError());
    return;
}
NET_DVR_FINDDATA_V30 struFileData;
while(true)
{
    int result = NET_DVR_FindNextFile_V30(IFindHandle, &struFileData);
    if(result == NET_DVR_ISFINDING)
    {
        continue;
    }
    else if(result == NET_DVR_FILE_SUCCESS)
    {
        char strFileName[256] = {0};
        sprintf(strFileName, ".*%s", struFileData.sFileName);
        saveRecordFile(IUserID, struFileData.sFileName, strFileName);
        break;
    }
    else if(result == NET_DVR_FILE_NOFIND || result == NET_DVR_NOMOREFILE)
    {
        break;
    }
    else
    {
        printf("find file fail for illegal get file state");
        break;
    }
}
//Stop searching
if(IFindHandle > 0)
{
    NET_DVR_FindClose_V30(IFindHandle);
}

// Logout
NET_DVR_Logout(IUserID);
// Release SDK resource
NET_DVR_Cleanup();
return;
}

```

### Example no.2 Playback the file by time

```
#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
using namespace std;

void main() {

    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    // Login device
    LONG IUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    IUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (IUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    NET_DVR_TIME struStartTime, struStopTime;
    struStartTime.dwYear    = 2011;
    struStartTime.dwMonth   = 3;
    struStartTime.dwDay     = 1;
    struStartTime.dwHour    = 9;
    struStartTime.dwMinute  = 0;
    struStartTime.dwSecond  = 0;
    struStopTime.dwYear     = 2011;
    struStopTime.dwMonth    = 3;
    struStopTime.dwDay      = 1;
    struStopTime.dwHour     = 10;
    struStopTime.dwMinute   = 7;
    struStopTime.dwSecond   = 0;
    HWND hWnd = GetConsoleWindow();    //Get window handle

    //-----
    //Playback by time
```

```

int hPlayback;
hPlayback = NET_DVR_PlayBackByTime(IUserID, 1, &struStartTime, &struStopTime, hWnd);
if(hPlayback < 0)
{
    printf("NET_DVR_GetFileByTime fail,last error %d\n",NET_DVR_GetLastError());
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}

//-----
//Start playing
if(!NET_DVR_PlayBackControl(hPlayback, NET_DVR_PLAYSTART, 0, NULL))
{
    printf("play back control failed [%d]\n",NET_DVR_GetLastError());
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}

Sleep(15000); //millisecond
if(!NET_DVR_StopPlayBack(hPlayback))
{
    printf("failed to stop file [%d]\n",NET_DVR_GetLastError());
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}

// Logout
NET_DVR_Logout(IUserID);
// Release SDK resource
NET_DVR_Cleanup();
return;
}

```

### Example 3 Download recording files by time

```

#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
using namespace std;

```

```
void main() {

    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    // Login device
    LONG lUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    lUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (lUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    NET_DVR_TIME struStartTime, struStopTime;
    struStartTime.dwYear   = 2011;
    struStartTime.dwMonth  = 3;
    struStartTime.dwDay    = 1;
    struStartTime.dwHour   = 9;
    struStartTime.dwMinute = 0;
    struStartTime.dwSecond = 0;
    struStopTime.dwYear    = 2011;
    struStopTime.dwMonth   = 3;
    struStopTime.dwDay     = 1;
    struStopTime.dwHour    = 10;
    struStopTime.dwMinute  = 7;
    struStopTime.dwSecond  = 0;

    //-----
    //Download by time
    int hPlayback;
    hPlayback = NET_DVR_GetFileByTime(lUserID, 1, &struStartTime, &struStopTime, "./test.mp4");
    if(hPlayback < 0)
    {
        printf("NET_DVR_GetFileByTime fail,last error %d\n",NET_DVR_GetLastError());
        NET_DVR_Logout(lUserID);
        NET_DVR_Cleanup();
    }
}
```

```

        return;
    }

    //-----
    //Start downloading
    if(!NET_DVR_PlayBackControl(hPlayback, NET_DVR_PLAYSTART, 0, NULL))
    {
        printf("play back control failed [%d]\n",NET_DVR_GetLastError());
        NET_DVR_Logout(IUserID);
        NET_DVR_Cleanup();
        return;
    }

    int nPos = 0;
    for(nPos = 0; nPos < 100&& nPos>=0; nPos = NET_DVR_GetDownloadPos(hPlayback))
    {
        Sleep(5000); //millisecond
    }
    if(!NET_DVR_StopGetFile(hPlayback))
    {
        printf("failed to stop get file [%d]\n",NET_DVR_GetLastError());
        NET_DVR_Logout(IUserID);
        NET_DVR_Cleanup();
        return;
    }
    if(nPos<0 || nPos>100)
    {
        printf("download err [%d]\n",NET_DVR_GetLastError());
        NET_DVR_Logout(IUserID);
        NET_DVR_Cleanup();
        return;
    }

    //Logout
    NET_DVR_Logout(IUserID);
    // Release SDK resource
    NET_DVR_Cleanup();
    return;
}

```

## 4.3 Example code of parameter configuration

[Related procedure chart](#)

### Configure the compression parameter (NET\_DVR\_COMPRESSIONCFG\_V30)

```
#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
using namespace std;

void main() {

    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    // Login device
    LONG IUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    IUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (IUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    int iRet;
    //Get compression parameter
    DWORD dwReturnLen;
    NET_DVR_COMPRESSIONCFG_V30 struParams = {0};
    iRet = NET_DVR_GetDVRConfig(IUserID, NET_DVR_GET_COMPRESSCFG_V30, struDeviceInfo.byStartChan, \
        &struParams, sizeof(NET_DVR_COMPRESSIONCFG_V30), &dwReturnLen);
    if (!iRet)
    {
        printf("NET_DVR_GetDVRConfig NET_DVR_GET_COMPRESSCFG_V30 error.\n");
        NET_DVR_Logout_V30(IUserID);
        NET_DVR_Cleanup();
    }
}
```

```

        return;
    }

    // Set compression parameter
    struParams.struNormHighRecordPara.dwVideoBitrate = 22;
    iRet = NET_DVR_SetDVRConfig(IUserID, NET_DVR_SET_COMPRESSCFG_V30, struDeviceInfo.byStartChan, \
        &struParams, sizeof(NET_DVR_COMPRESSIONCFG_V30));
    if (!iRet)
    {
        printf("NET_DVR_GetDVRConfig NET_DVR_SET_COMPRESSCFG_V30 error.\n");
        NET_DVR_Logout_V30(IUserID);
        NET_DVR_Cleanup();
        return;
    }

    // Get compression parameter
    iRet = NET_DVR_GetDVRConfig(IUserID, NET_DVR_GET_COMPRESSCFG_V30, struDeviceInfo.byStartChan, \
        &struParams, sizeof(NET_DVR_COMPRESSIONCFG_V30), &dwReturnLen);
    if (!iRet)
    {
        printf("NET_DVR_GetDVRConfig NET_DVR_GET_COMPRESSCFG_V30 error.\n");
        NET_DVR_Logout_V30(IUserID);
        NET_DVR_Cleanup();
        return;
    }

    printf("Video Bitrate is %d\n", struParams.struNormHighRecordPara.dwVideoBitrate);
    //Logout
    NET_DVR_Logout(IUserID);
    // Release SDK resource
    NET_DVR_Cleanup();
    return;
}

```

## 4.4 Example code of remote device maintenance

[Related procedure chart](#)

### Log query

```

#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"

```

```
using namespace std;

void main() {

    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    // Login device
    LONG lUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    lUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (lUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    NET_DVR_TIME struStartTime, struStopTime;
    struStartTime.dwYear    = 2011;
    struStartTime.dwMonth   = 3;
    struStartTime.dwDay     = 2;
    struStartTime.dwHour    = 9;
    struStartTime.dwMinute  = 0;
    struStartTime.dwSecond  = 0;

    struStopTime.dwYear    = 2011;
    struStopTime.dwMonth   = 3;
    struStopTime.dwDay     = 2;
    struStopTime.dwHour    = 9;
    struStopTime.dwMinute  = 10;
    struStopTime.dwSecond  = 0;

    //-----
    //Query log
    int lFindHandle = NET_DVR_FindDVRLog_V30(lUserID, 0, 0, 0, &struStartTime, &struStopTime, FALSE);
    if(lFindHandle < 0)
    {
        printf("find log fail,last error %d\n",NET_DVR_GetLastError());
    }
}
```



```

        return;
    }
    NET_DVR_LOG_V30 struLog;
    while(true)
    {
        int result = NET_DVR_FindNextLog_V30(IFindHandle, &struLog);
        if(result == NET_DVR_ISFINDING)
        {
            printf("finding\n");
            continue;
        }
        else if(result == NET_DVR_FILE_SUCCESS)
        {
            char strLog[256] = {0};
            printf("log:%04d-%02d-%02d %02d:%02d:%02d\n", struLog.strLogTime.dwYear,
struLog.strLogTime.dwMonth, struLog.strLogTime.dwDay, \
                struLog.strLogTime.dwHour, struLog.strLogTime.dwMinute, struLog.strLogTime.dwSecond);
        }
        else if(result == NET_DVR_FILE_NOFIND || result == NET_DVR_NOMOREFILE)
        {
            printf("find ending\n");
            break;
        }
        else
        {
            printf("find log fail for illegal get file state\n");
            break;
        }
    }

    //Stop log query
    if(IFindHandle > 0)
    {
        NET_DVR_FindLogClose_V30(IFindHandle);
    }

    //Logout
    NET_DVR_Logout(IUserID);
    // Release SDK resource
    NET_DVR_Cleanup();
    return;
}

```

## 4.5 Example code of voice talk and voice forward

[Related procedure chart](#)

### Voice talk

```
#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
using namespace std;

void CALLBACK fVoiceDataCallBack(LONG lVoiceComHandle, char *pRecvDataBuffer, DWORD dwBufSize, BYTE
byAudioFlag, void* pUser)
{
    printf("receive voice data, %d\n", dwBufSize);
}

void main() {

    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);

    //-----
    // Login device
    LONG lUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    lUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (lUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    //Voice talk
    LONG lVoiceHanle;
    lVoiceHanle = NET_DVR_StartVoiceCom_V30(lUserID, 1, 0, fVoiceDataCallBack, NULL);
    if (lVoiceHanle < 0)
    {
```

```

        printf("NET_DVR_StartVoiceCom_V30 error, %d!\n", NET_DVR_GetLastError());
        NET_DVR_Logout(lUserID);
        NET_DVR_Cleanup();
        return;
    }

    Sleep(5000); //millisecond
    //Stop voice talk
    if (!NET_DVR_StopVoiceCom(lVoiceHandle))
    {
        printf("NET_DVR_StopVoiceCom error, %d!\n", NET_DVR_GetLastError());
        NET_DVR_Logout(lUserID);
        NET_DVR_Cleanup();
        return;
    }

    //Logout
    NET_DVR_Logout(lUserID);
    // Release SDK resource
    NET_DVR_Cleanup();
    return;
}

```

## 4.6 Example code of alarm

Example of arming mode:

[Related procedure chart](#)

```

#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
using namespace std;

void CALLBACK MessageCallback(LONG lCommand, NET_DVR_ALARMER *pAlarmer, char *pAlarmInfo, DWORD
dwBufLen, void* pUser)
{
    int i;
    NET_DVR_ALARMINFO struAlarmInfo;
    memcpy(&struAlarmInfo, pAlarmInfo, sizeof(NET_DVR_ALARMINFO));
    switch(lCommand)
    {

```

```

case COMM_ALARM:
{
    switch (struAlarmInfo.dwAlarmType)
    {
        case 3: //motion detection alarm
            for (i=0; i<16; i++)    //define MAX_CHANNUM    16    //The max number of channels
            {
                if (struAlarmInfo.dwChannel[i] == 1)
                {
                    printf("Motion detection channel number: %d\n", i+1);
                }
            }
            break;
        default:
            break;
    }
}
break;
default:
break;
}
}

void main() {
    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);
    //-----
    // Login device
    LONG IUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    IUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
    if (IUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    //Set alarm callback function
    NET_DVR_SetDVRMessageCallBack_V30(MessageCallback, NULL);
}

```

```

//Setup alarm channel (arming)
LONG IHandle;
IHandle = NET_DVR_SetupAlarmChan_V30(IUserID);
if (IHandle < 0)
{
    printf("NET_DVR_SetupAlarmChan_V30 error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}
Sleep(5000);
//Close alarm channel
if (!NET_DVR_CloseAlarmChan_V30(IHandle))
{
    printf("NET_DVR_CloseAlarmChan_V30 error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}
//Logout
NET_DVR_Logout(IUserID);
//Release SDK resource
NET_DVR_Cleanup();
return;
}

```

**Example of listening mode:**

[Related procedure chart](#)

```

#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
using namespace std;

void CALLBACK MessageCallback(LONG ICommand, NET_DVR_ALARMER *pAlarmer, char *pAlarmInfo, DWORD
dwBufLen, void* pUser)
{
    int i;
    NET_DVR_ALARMINFO struAlarmInfo;
    memcpy(&struAlarmInfo, pAlarmInfo, sizeof(NET_DVR_ALARMINFO));
    switch(ICommand)
    {
        case COMM_ALARM:

```

```

    {
        switch (struAlarmInfo.dwAlarmType)
        {
            case 3: // motion detection alarm
                for (i=0; i<16; i++)    // #define MAX_CHANNUM    16    // The max number of channels
                {
                    if (struAlarmInfo.dwChannel[i] == 1)
                    {
                        printf("Motion detection channel number: %d\n", i+1);
                    }
                }
                break;
            default:
                break;
        }
    }
    break;
default:
    break;
}
}

void main() {
    //-----
    //Initialize SDK
    NET_DVR_Init();
    //Set connect time and reconnect time
    NET_DVR_SetConnectTime(2000, 1);
    NET_DVR_SetReconnect(10000, true);
    //-----
    // Login device
    LONG lUserID;
    NET_DVR_DEVICEINFO_V30 struDeviceInfo;
    lUserID = NET_DVR_Login_V30("172.0.0.100", 8000, "admin", "12345", &struDeviceInfo);
    if (lUserID < 0)
    {
        printf("Login error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Cleanup();
        return;
    }

    //Set alarm callback function
    NET_DVR_SetDVRMessageCallBack_V30(MessageCallback, NULL);
}

```

```

//Start listening
LONG IHandle;
IHandle = NET_DVR_StartListen_V30(NULL,7200, MessageCallback, NULL);
if (IHandle < 0)
{
    printf("NET_DVR_SetupAlarmChan_V30 error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}
Sleep(5000);
//Stop listening
if (!NET_DVR_StopListen_V30(IHandle))
{
    printf("NET_DVR_StopListen_V30 error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Logout(IUserID);
    NET_DVR_Cleanup();
    return;
}
//Logout
NET_DVR_Logout(IUserID);
// Release SDK resource
NET_DVR_Cleanup();
return;
}

```

## 4.7 Example code of transparent channel

[Related procedure chart](#)

```

#include <stdio.h>
#include <iostream>
#include "Windows.h"
#include "HCNetSDK.h"
using namespace std;

//External implement of callback transparent function
void CALLBACK g_fSerialDataCallBack(LONG ISerialHandle, char *pRecvDataBuffer, DWORD dwBufSize, DWORD dwUser)
{
    //..... Deal with the transparent data, the data recieved are in pRecvDataBuffer.
}

void main() {
    //-----

```

```

//Init device
NET_DVR_Init();

//Set connect time and reconnect time
NET_DVR_SetConnectTime(2000, 1);
NET_DVR_SetReconnect(10000, true);

//-----

//login device
LONG lUserID;
NET_DVR_DEVICEINFO_V30 struDeviceInfo;
lUserID = NET_DVR_Login_V30("192.0.0.64", 8000, "admin", "12345", &struDeviceInfo);
if (lUserID < 0)
{
    printf("Login error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Cleanup();
    return;
}

/*Set 232 to transparent channel mode(485 is not necessary to call this interface used for 232 transparent
channel)*/
DWORD dwReturned = 0;
NET_DVR_RS232CFG_V30 struRS232Cfg;
memset(&struRS232Cfg, 0, sizeof(NET_DVR_RS232CFG_V30));
if (!NET_DVR_GetDVRConfig(lUserID, NET_DVR_GET_RS232CFG_V30, 0, &struRS232Cfg,
sizeof(NET_DVR_RS232CFG_V30), &dwReturned))
{
    printf("NET_DVR_GET_RS232CFG_V30 error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Logout(lUserID);
    NET_DVR_Cleanup();
    return;
}
struRS232Cfg.struRs232.dwWorkMode = 2;

//set 232 to transparent channel mode: 0- narrow-band transmission, 1- console, 2- transparent channel
if (!NET_DVR_SetDVRConfig(lUserID, NET_DVR_SET_RS232CFG_V30, 0, &(struRS232Cfg),
sizeof(NET_DVR_RS232CFG)))
{
    printf("NET_DVR_SET_RS232CFG_V30 error, %d\n", NET_DVR_GetLastError());
    NET_DVR_Logout(lUserID);
    NET_DVR_Cleanup();
    return;
}

//Set up transparent channel
LONG lTranHandle;
int iSelSerialIndex = 1; //1:RS-232;RS-485
lTranHandle = NET_DVR_SerialStart(lUserID, iSelSerialIndex, g_fSerialDataCallBack, lUserID);

//configure callback function to obtain transparent data

```



```

    if (lTranHandle < 0)
    {
        printf("NET_DVR_SerialStart error, %d\n", NET_DVR_GetLastError());
        NET_DVR_Logout(lUserID);
        NET_DVR_Cleanup();
        return;
    }

    //Send data through transparent channel
    LONG lSerialChan = 0; //valid when using 485, begin with 1; set to 2 when using 232
    char szSendBuf[1016] = {0};
    if (!NET_DVR_SerialSend(lTranHandle, lSerialChan, szSendBuf, sizeof(szSendBuf)))
    //szSendBuf is send data buffer, iBufLen is buffer size
    {
        printf("NET_DVR_SerialSend error, %d\n", NET_DVR_GetLastError());
        NET_DVR_SerialStop(lTranHandle);
        NET_DVR_Logout(lUserID);
        NET_DVR_Cleanup();
        return;
    }
    //Stop transparent channel
    NET_DVR_SerialStop(lTranHandle);
    //Logout device
    NET_DVR_Logout(lUserID);
    //Release sdk resource
    NET_DVR_Cleanup();
    return;
}

```

## 4.8 Example code of hybrid DVR resource configuration

[Related procedure chart](#)

Here takes the configuration of IP alarm input and channel image parameters for example

```

//Initialize SDK
NET_DVR_Init();
//Login device
NET_DVR_DEVICEINFO_V30 struDeviceInfo;
memset(&struDeviceInfo, 0, sizeof(NET_DVR_DEVICEINFO_V30)); //structure for storing device parameters
LONG lUserID = NET_DVR_Login_V30("172.0.0.100", 8000, "admin", "12345", &struDeviceInfo);
if (lUserID < 0)
{
    if (NET_DVR_GetLastError() == NET_DVR_PASSWORD_ERROR) //user name and password error

```

```

    {
        ..... //cope with error information
    }
    else if(NET_DVR_GetLastError() == NET_DVR_OVER_MAXLINK)
        //connections to DVR client achieve max
    {
        ..... //cope with error information
    }
    ..... //cope with other types of error information
}

//Get IP alarm resources
DWORD dwReturned = 0;
NET_DVR_IPALARMINCFG struIPAlarmInCfg;
memset(&struIPAlarmInCfg, 0, sizeof(NET_DVR_IPALARMINCFG));
bIPRet = NET_DVR_GetDVRConfig(IUserID, NET_DVR_GET_IPALARMINCFG, -1, &struIPAlarmInCfg,
sizeof(NET_DVR_IPALARMINCFG), &dwReturned);

//Get, set alarm input information
NET_DVR_ALARMINCFG_V30 m_struAlarmInCfg[MAX_ALARMIN_V30];/*structure that stores alarm input
information, MAX_ALARMIN_V30 is the max analog alarm input number plus max digital alarm input number*/
for (i=0; i < MAX_ALARMIN_V30; i++)
{
    if ((i>=MAX_ANALOG_ALARMIN &&
struIPAlarmInCfg.struIPAlarmInInfo[i-MAX_ANALOG_ALARMIN].byIPID > 0)
        /*Subscript index of IP alarm resources plus MAX_ANALOG_ALARMIN corresponding subscript index
of alarm input configuration structure*/
        if (!NET_DVR_GetDVRConfig(IUserID, NET_DVR_GET_ALARMINCFG_V30, i,\
&m_struAlarmInCfg[i], sizeof(NET_DVR_ALARMINCFG_V30), &dwReturned))
        {
            .....//get alarm input information fails
        }
        else
        {
            /*get alarm input information successfully, when i>=MAX_ANALOG_ALARMIN, it's IP
alarm input message, i corresponds IP digital alarm channel number*/
            m_struAlarmInCfg[i].byAlarmType = 0; //alarm type:0-normal open,1-normal closed
            m_struAlarmInCfg[i].byAlarmInHandle = 1; //whether to cope:0-not cope,1-cope
            ..... //other alarm parameters configuration
            NET_DVR_SetDVRConfig(IUserID, NET_DVR_SET_ALARMINCFG_V30, i, &(m_struAlarmInCfg[i]),\
sizeof(NET_DVR_ALARMINCFG_V30));

            //set alarm input information
        }
    }
}
}

```

```

//IP alarm input configuration process it the same with alarm input

//Get IP channel parameter information
DWORD dwReturned = 0;
NET_DVR_IPPARACFG IPAccessCfg;
memset(&IPAccessCfg, 0, sizeof(NET_DVR_IPPARACFG));
NET_DVR_GetDVRConfig(IUserID, NET_DVR_GET_IPPARACFG, -1, &IPAccessCfg, sizeof(NET_DVR_IPPARACFG),
&dwReturned);

//Set IP channel configuration information
DWORD iIPChanIndex = 1; /*IP resources channel number,from 0 to MAX_IP_CHANNEL -1,and
MAX_ANALOG_CHANNUM corresponds subscript index of channel relevant parameters*/
BYTE dwID = 2; /*IP channel effective state and corresponding IP device resources: 1- MAX_IP_DEVICE indicates
this channel is added, 0 indicates this channel is deleted*/
IPAccessCfg.struIPChanInfo[iIPChanIndex].byEnable = FALSE;
IPAccessCfg.struIPChanInfo[iIPChanIndex].byIPID = (BYTE)dwID;
.....//configure other channels parameters
NET_DVR_SetDVRConfig(IUserID, NET_DVR_SET_IPPARACFG, -1, &IPAccessCfg, sizeof(NET_DVR_IPPARACFG));

//Get IP channel relevant parameters(take getting IP channel image parameters as an example)
DWORD dwReturned = 0;
DWORD dwChanShow = iIPChanIndex + MAX_ANALOG_ALARMIN; /*Subscript index of IP channel plus
MAX_ANALOG_ALARMIN subscript index of corresponding channel relevant parameters*/
NET_DVR_PICCFG_V30 m_struPicCfg; //Structure for storing channel image parameters
memset(&m_struPicCfg, 0, sizeof(NET_DVR_PICCFG_V30));
NET_DVR_GetDVRConfig(IUserID, NET_DVR_GET_PICCFG_V30, dwChanShow, &m_struPicCfg,
sizeof(NET_DVR_PICCFG_V30), &dwReturned);

//Configure image parameters of IP channels
m_struPicCfg.dwVideoFormat = 1; // Video standard:1-NTSC,2-PAL
m_struPicCfg.dwShowChanName = 1; /*Whether to display channel name on preview image:0-not
display,1-display(Region size 704*576)*/
.....//configuration of other image parameters
NET_DVR_SetDVRConfig(IUserID, NET_DVR_SET_PICCFG_V30, dwChanShow,
&m_struPicCfg,sizeof(NET_DVR_PICCFG_V30));

```

## 5 API Description

### 5.1 SDK Initialization

#### 5.1.1 Initialize SDK: **NET\_DVR\_Init**

**API:** BOOL NET\_DVR\_Init()

**Parameters:** None

**Return:** Return TRUE on success, FALSE on failure.

**Remarks:** This API is used to initialize SDK. Please call this API before calling any other API.

[Return to index](#)

#### 5.1.2 Release SDK resource: **NET\_DVR\_Cleanup**

**API:** BOOL NET\_DVR\_Cleanup()

**Parameters:** None

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to release SDK resource. Please calling it before closing the program.

[Return to index](#)

#### 5.1.3 Set network connection timeout and connection attempt times:

##### **NET\_DVR\_SetConnectTime**

**API:** BOOL NET\_DVR\_SetConnectTime(DWORD dwWaitTime, DWORD dwTryTime)

**Parameters:** [in] dwWaitTime Timeout, unit: ms, value range: [300, 75000], the actual max timeout time is different with different system connecting timeout  
[in] dwTryTimes Connecting attempt times (reserved)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Default timeout of SDK to establish a connection is 3 seconds. Interface will not return FALSE when the set timeout value is greater or less than the limit, it will take the nearest upper and lower limit value as the actual timeout.

[Return to index](#)

### 5.1.4 Set reconnecting time interval: **NET\_DVR\_SetReconnect**

**API:** BOOL NET\_DVR\_SetReconnect (DWORD dwInterval, BOOL bEnableRecon)

**Parameters:** [in] dwInterval Reconnecting interval, unit: milliseconds, default value:30 seconds

[in] bEnableRecon Enable or disable reconnect function, 0-disable, 1-enable(default)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API can set the reconnect function for preview, transparent channel and alarm on guard state. If the user does not call this API, the SDK will initial the reconnect function for preview, transparent channel and alarm on guard state by default, and the reconnect interval is 5 seconds.

[Return to index](#)

### 5.1.5 Get the dynamic IP address of the device by IP server or

#### EasyDDNS: **NET\_DVR\_GetDVRIPByResolveSvr\_EX**

**API:** BOOL NET\_DVR\_GetDVRIPByResolveSvr\_EX (char\* sServerIP, WORD wServerPort, BYTE\* sDVRName, WORD wDVRNameLen, BYTE\* sDVRSerialNumber, WORD wDVRSerialLen, char\* sGetIP, DWORD\* dwPort)

**Parameters:** [in] sServerIP IP address of the IP server or EasyDDNS sever

[in] wServerPort The server port of the IP server. Default port of IP server is 7071

[in] sDVRName The name of the device

[in] wDVRNameLen The length of the device's name

[in] sDVRSerialNumber The serial number of the device

[in] wDVRSerialLen The length of the serial number of the device

[out] sGetIP Pointer to save the returned IP

[out] dwPort Pointer to save the returned device port

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The name and the serial no. of the DVR cannot be NULL at the same time. IPServer and EasyDDNS is one private dynamic DNS server.

[Return to index](#)

## 5.2 Exception Message Callback

### 5.2.1 Register window handle or callback function to receive exception, reconnection or other message:

#### NET\_DVR\_SetExceptionCallBack\_V30

**API:** [API in Windows system:](#)

```
BOOL NET_DVR_SetExceptionCallBack_V30 (UINT nMessage,HWND
hWnd,fExceptionCallBack cbExceptionCallBack,void* pUser)
```

[API in Linux system:](#)

```
BOOL NET_DVR_SetExceptionCallBack_V30(UINT nMessage,void*
hWnd,fExceptionCallBack cbExceptionCallBack,void* pUser)
```

**Parameters:**

- [in] nMessage [Message, this parameter is reserved in Linux](#)
- [in] hWnd [Window handle to receive exception message, this parameter is reserved in Linux SDK](#)
- [in] cbExceptionCallBack [Callback function to receive exception message and callback current exception relevant message](#)
- [in] pUser [User data](#)

```
typedef void(CALLBACK* fExceptionCallBack)(DWORD dwType, LONG
IUserID, LONG IHandle, void *pUser)
```

- [out] dwType [Message types of exception or reconnection, see the below \*\*macro definition table of exception message\*\*](#)
- [out] IUserID [Login ID](#)
- [out] IHandle [Handle of relevant exception type](#)
- [out] pUser [User data](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** hWnd and cbExceptionCallBack can't be NULL at the same time in Windows system, and cbExceptionCallBack can't be set to NULL in Linux system, or it will not receive exception message.

#### [Macro definition table of exception message:](#)

Macro Definition	Value	Implication
EXCEPTION_EXCHANGE	0x8000	User interaction exception(timeput when heartbeat to register, the interval of heartbeat is 2 minutes)
EXCEPTION_AUDIOEXCHANGE	0x8001	Exception during voice talk
EXCEPTION_ALARM	0x8002	Exception during alarm uploading
EXCEPTION_PREVIEW	0x8003	Exception during live view

EXCEPTION_SERIAL	0x8004	Exception during transmitting data by transparent channel
EXCEPTION_RECONNECT	0x8005	Reconnect during live view
EXCEPTION_ALARMRECONNECT	0x8006	Reconnect during alarm
EXCEPTION_SERIALRECONNECT	0x8007	Reconnect during transparent channel
SERIAL_RECONNECTSUCCESS	0x8008	Transparent channel reconnected successfully
EXCEPTION_PLAYBACK	0x8010	Exception during playback
EXCEPTION_DISKFORMAT	0x8011	Exception during formatting hard disk
EXCEPTION_PASSIVEDECODE	0x8012	Exception during passive decoding
EXCEPTION_EMAILTEST	0x8013	Exception during e-mail test
EXCEPTION_BACKUP	0x8014	Exception during backup
PREVIEW_RECONNECTSUCCESS	0x8015	Live view reconnected successfully
ALARM_RECONNECTSUCCESS	0x8016	Alarm uploading reconnected successfully
RESUME_EXCHANGE	0x8017	User interaction resume to normal

If this structure feedbacks exception message by callback method, the exception callback function implement in the application is as follows, the parameter dwType of this function indicates exception message type(see the above table), IHandle indicates handle of the current exception relevant types.

#### Example:

```
//Register callback function for receiving exception message
NET_DVR_SetExceptionCallBack_V30(WM_NULL, NULL, g_ExceptionCallBack, NULL);

//External implement of callback function for receiving exception message
void CALLBACK g_ExceptionCallBack(DWORD dwType, LONG IUserID, LONG IHandle, void *pUser)
{
    char tempbuf[256];
    ZeroMemory(tempbuf,256);
    switch(dwType)
    {
        case EXCEPTION_AUDIOEXCHANGE: //Network exception during voice talk
            sprintf(tempbuf,"Network exception during voice talk!!!");
            TRACE("%s",tempbuf);
            //TODO: Close voice talk
            break;
        case EXCEPTION_ALARM: //Network exception during uploading alarm
            sprintf(tempbuf," Network exception during uploading alarm!!!");
            TRACE("%s",tempbuf);
            //TODO: Close alarm uploading
            break;
    }
}
```

```

        case EXCEPTION_PREVIEW:                //Network exception during live view
            sprintf(tempbuf," Network exception during live view!!!");
            TRACE("%s",tempbuf);
            //TODO: Close live view
            break;

        case EXCEPTION_SERIAL:                //Exception during transmitting data by transparent channel
            sprintf(tempbuf," Exception during transmitting data by transparent channel!!!");
            TRACE("%s",tempbuf);
            //TODO: Close transparent channel
            break;

        case EXCEPTION_RECONNECT:                //Reconnect during live view
            break;

        default:
            break;

    }

};

```

[Return to index](#)

## 5.3 SDK Information and Log

### 5.3.1 Get SDK version: **NET\_DVR\_GetSDKVersion**

**API:** DWORD NET\_DVR\_GetSDKVersion()

**Parameters:**

**Return:** SDK version information. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** 2 higher bytes mean the major version, 2 lower bytes mean the minor version, e.g. 0x00030000 means version 3.0.

[Return to index](#)

### 5.3.2 Get SDK version and build information:

#### **NET\_DVR\_GetSDKBuildVersion**

**API:** DWORD NET\_DVR\_GetSDKBuildVersion()

**Parameters:**

**Return:** SDK version and build information. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The API is used to get the SDK version and build number. 2 higher bytes mean the major version: the bits from 25 to 32 mean major version number, and bits from 17 to 24 mean minor version number. 2 lower bytes mean build number, e.g. 0x03000101: the version is 3.0, build number is 0101.



[Return to index](#)

### 5.3.3 Get SDK current state: **NET\_DVR\_GetSDKState**

**API:** BOOL NET\_DVR\_GetSDKState( LPNET\_DVR\_SDKSTATE pSDKState);

**Parameters:** [out] pSDKState [State information](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to get SDK state.

[Return to index](#)

### 5.3.4 Get SDK ability: **NET\_DVR\_GetSDKAbility**

**API:** BOOL NET\_DVR\_GetSDKAbility( LPNET\_DVR\_SDKABL pSDKAbI)

**Parameters:** [out] pSDKAbI [Ability information](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to get ability of current SDK.

[Return to index](#)

### 5.3.5 Start writing log to file: **NET\_DVR\_SetLogToFile**

**API:** BOOL NET\_DVR\_SetLogToFile(DWORD bLogEnable,char\* strLogDir,BOOL bAutoDel)

**Parameters:** [in] bLogEnable [Log level:](#)  
0- close log(default),  
1- output ERROR log only,  
2- output ERROR and DEBUG log,  
3- output all log, including ERROR, DEBUG and INFO log

[in] strLogDir [Log file saving path, if set to NULL, the default path for Windows is "C:\\SdkLog\\", and the default path for Linux is "/home/sdklog/"](#)

[in] bAutoDel [Whether to delete the files which exceed the number limit. Default: TRUE](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The log file path must be absolute path, and should be finished with "\\ ", e.g."C:\\SdkLog\\". It is suggested to manually create file firstly. If no assigned file path, it will use the default path: "C:\\SdkLog\\". It supports to call the API multi times to create new log files and supports max 10 files at the

same time. If set bAutoDel to TRUE, it will automatically delete the files which exceed the limit. If the path is changed, it will use the new path when writing next file.

[Return to index](#)

## 5.4 Get Error Message

### 5.4.1 Return the Error Code of last operation: **NET\_DVR\_GetLastError**

**API:** DWORD NET\_DVR\_GetLastError()

**Parameters:**

**Return:** The error code of last operation.

**Remarks:** Return the error code. Generally, there are 3 different types of error information: error of network communication library, error of RTSP library, and error of software/hardware decoding library, see detail to [macro definition of error code](#).

[Return to index](#)

### 5.4.2 Return the error message of last operation:

#### **NET\_DVR\_GetErrorMsg**

**API:** char\* NET\_DVR\_GetErrorMsg(LONG \*pErrorNo)

**Parameters:** [out] pErrorNo [The pointer of the error code number](#)

**Return:** The pointer that saves the error message. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Generally, there are 3 different types of error information: error of network communication library, error of RTSP library, and error of software/hardware decoding library, see detail to [macro definition of error code](#).

[Return to index](#)

## 5.5 Login the Device

### 5.5.1 Login the device: **NET\_DVR\_Login\_V30**

**API:** LONG NET\_DVR\_Login\_V30( char \*sDVRIP, WORD wDVRPort, char \*sUserName, char \*sPassword, LPNET\_DVR\_DEVICEINFO\_V30 lpDeviceInfo)

**Parameters:**

[in] SdvrIp	<a href="#">IP address of the device</a>
[in] wDVRPort	<a href="#">Port number of the device</a>
[in] sUserName	<a href="#">User name</a>
[in] sPassword	<a href="#">Password</a>

[out] IpDeviceInfo [Device information](#)

**Return:** Return -1 if it is failed, and other value is the value of returned user ID. The user ID is unique, and next operations should be realized through this ID. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It supports 32 different user names for DS7116, DS81xx, DS90xx and DS91xx series devices, and 128 users login at the same time. Other devices support 16 different user names and 128 users login at the same time. SDK supports 512 \* login. UserID is incremented one by one, from 0 to 511 and then return to 0. Logout and NET\_DVR\_Cleanup will not initialize the UserID to 0. If client offline abnormally, the device will keep the UserID 5 minutes, and the UserID will invalid after the valid time.

[Return to index](#)

## 5.5.2 Logout: **NET\_DVR\_Logout**

**API:** BOOL NET\_DVR\_Logout(LONG IUserID)

**Parameters:** [in] IUserID [User ID, the return value of NET\\_DVR\\_Login\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It is suggested to call this API to logout.

[Return to index](#)

## 5.6 Get the capability set of the device

### 5.6.1 Get the capability set: **NET\_DVR\_GetDeviceAbility**

**API:** BOOL NET\_DVR\_GetDeviceAbility(LONG IUserID, DWORD dwAbilityType, char\* pInBuf, DWORD dwInLength, char\* pOutBuf, DWORD dwOutLength)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)

[in] dwAbilityType [Capability type, details listed below](#)

[in] pInBuf [Pointer of the input buffer \(according to description mode of ability parameter, defined by device, it supports XML text or structure format\)](#)

[in] dwInLength [Length of input buffer](#)

[out] pOutBuf [Pointer of the output buffer \(according to description mode of ability set, defined by device, it supports XML text or structure format\)](#)

[in] dwOutLength [Length of output buffer](#)

Macro Definition	Value	Implication
DEVICE_SOFTWARE_ABILITY	0x001	Software/hardware capability

DEVICE_NETWORK_ABILITY	0x002	Network capability
DEVICE_ENCODE_ALL_ABILITY	0x003	All encoding capability
DEVICE_ENCODE_CURRENT	0x004	Current encoding capability
IPC_FRONT_PARAMETER	0x005	Front-end parameter capability
DEVICE_RAID_ABILITY	0x007	Capability set of RAID
COMPRESSIONCFG_ABILITY	0x400	Capability of getting encoding parameter
COMPRESSION_LIMIT	0x401	Compression capability limit of main and sub stream
PIC_CAPTURE_ABILITY	0x402	Capability of picture capturing resolution

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The definitions of pInBuf are different according to different devices, described by structure or XML text format. Similarly, pOutBuf can be described in structure or XML format according to different devices, too. The first 6 types of abilities are described in XML files. The details are available in each device's ability definition. The input and output parameter format when getting other types of abilities are defined as below:

Macro Definition	Type of Ability	pInBuf	pOutBuf
DEVICE_SOFTHARDWARE_ABILITY	Get software and hardware ability of current device	None	Device software and hardware ability described by XML
DEVICE_NETWORK_ABILITY	Get network ability of current device	None	Device network ability described by XML
DEVICE_ENCODE_ALL_ABILITY	Get all encoding ability of current device	None	Device all encoding ability described by XML
DEVICE_ENCODE_CURRENT	Get current encoding ability of current device	Device current encoding ability described by XML	Device current encoding ability described by XML
IPC_FRONT_PARAMETER	Get front-end parameter of current device	None	Device front-end camera parameter described by XML
DEVICE_RAID_ABILITY	Get capability of RAID	None	RAID capability described by XML
COMPRESSIONCFG_ABILITY	Get ability of getting encoding parameter	Channel number(4 bytes)	<a href="#">NET_DVR_COMPRESSIONCFG_ABILITY</a>
COMPRESSION_LIMIT	Get compression ability limit of main and sub stream	<a href="#">NET_DVR_COMPRESSION_LIMIT</a>	<a href="#">NET_DVR_COMPRESSIONCFG_ABILITY</a>

PIC_CAPTURE_ABILITY	Get picture ability	Channel number(4 bytes)	<a href="#">NET_DVR_COMPRESSIONCFG_ABILITY</a>
---------------------	---------------------	-------------------------	--

[Return to index](#)

## 5.7 Live View

### 5.7.1 Set display mpde: **NET\_DVR\_SetShowMode**

**API:** BOOL NET\_DVR\_SetShowMode (DWORD dwShowType, COLORREF colorKey)

**Parameters:** [in] dwShowType [Display mode](#)

```
enum{  
    NORMALMODE = 0,  
    OVERLAYMODE  
}
```

[in] colorKey

The transparent color set by user, which should be set when in OVERLAY mode. The transparent color just like a transparent film, the display picture only can go through this color, while other colors will prevent the display picture. User should put the color in the display window to show the display picture. Usually only one color are chosen as the transparent color. colorKey is the value of 32 bit 0x00bbggrr, the highest byte is 0, the last three byte is correspondingly refer to the value of b, g, r

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** There are two play modes: the common mode and OVERLAY mode. The advantage of OVERLAY mode is: most of the graphic adapter support OVERLAY, using OVERLAY mode in some graphic adapter which do not support BLT hardware shrink and enlarge and the switch of th color like SIS series graphic adapters, it will greatly reduce the CPU resources and improve the picture quality (which is correspondingly to using software to realize the shrink and enlarge, switch of color). And the disadvantage is it can only play one channel picture at a time, cannot realize large scale centralization surveillance. There can only be one OVERLAY surface in the active state at one graphic adapter and at the sametime. If at that time there is a program using OVERLAY in the system, the player cannot establish an OVERLAY surface any more, it will change into the common mode automatically, while not return to FALSE. Some common player possibly use OVERLAY surface, thus the other program cannot use OVERLAY surface any more.

[Return to index](#)

### 5.7.2 Make the main stream create a key frame(I frame):

#### NET\_DVR\_MakeKeyFrame

**API:** BOOL NET\_DVR\_MakeKeyFrame( LONG IUserID, DWORD IChannel)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
                   [in] IChannel                      [Channel number](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The interface is used to reset I frame, please call NET\_DVR\_MakeKeyFrame or [NET\\_DVR\\_MakeKeyFrameSub](#) to reset I frame for the main stream or sub stream according to the set preview parameter [NET\\_DVR\\_CLIENTINFO](#).

[Return to index](#)

### 5.7.3 Make the sub stream create a key frame(I frame):

#### NET\_DVR\_MakeKeyFrameSub

**API:** BOOL NET\_DVR\_MakeKeyFrameSub( LONG IUserID, DWORD IChannel)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
                   [in] IChannel                      [Channel number](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The interface is used to reset I frame, please call [NET\\_DVR\\_MakeKeyFrame](#) or NET\_DVR\_MakeKeyFrameSub to reset I frame for the main stream or sub stream according to the set preview parameter [NET\\_DVR\\_CLIENTINFO](#).

[Return to index](#)

### 5.7.4 Live view: NET\_DVR\_RealPlay\_V30

**API:** LONG NET\_DVR\_RealPlay\_V30(LONG IUserID, LPNET\_DVR\_CLIENTINFO lpClientInfo, fRealDataCallBack\_V30 cbRealDataCallBack, void\* pUser, BOOL bBlocked)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
                   [in] lpClientInfo                      [Live view parameter](#)  
                   [in] fRealDataCallBack\_V30                      [Real-time stream data callback function](#)  
                   [in] pUser                      [User data](#)  
                   [in] bBlocked                      [Whether to set data stream requesting process blocked or not: 0-no, 1-yes](#)

```
typedef void(CALLBACK *fRealDataCallBack_V30)(LONG IRealHandle,DWORD
```

dwDataType, BYTE \*pBuffer, DWORD dwBufSize, void \*pUser)  
 [out] IRealHandle                      Curent live view handle  
 [out] dwDataType                      Data type, details refer to [data type list table](#) below.  
 [out] pBuffer                          Buffer pointer for saving data  
 [out] dwBufSize                      Buffer size  
 [out] pUser                          User data

Macro Definition	Value	Implication
NET_DVR_SYSHEAD	1	System head data
NET_DVR_STREAMDATA	2	Stream data (include video and audio stream, or only the video data of stream that video and audio is separate)
NET_DVR_AUDIOSTREAMDATA	3	Audio data

**Return:** -1 means failed, and other values could be used as handle of interface like NET\_DVR\_StopRealPlay. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to realize live view. It supports to set current operation to be blocked or not (by the parameter: bBlocked). If set to be unblocked, it means it will think the connection is successful when start to connect with the device. If failed to receive stream and play, it will notify the upper layer by preview exception mode. And it can reduce dwell time of loop play, the same to NET\_DVR\_RealPlay. If set to be blocked, it means it will return whether successful or not after playing operation.  
 The callback function of this API can be set to NULL, and it will not callback the stream data to user. And then user can call [NET\\_DVR\\_SetRealDataCallBack](#) or [NET\\_DVR\\_SetStandardDataCallBack](#) to register callback function to capture stream data.

[Return to index](#)

### 5.7.5 Stop live view: **NET\_DVR\_StopRealPlay**

**API:** LONG NET\_DVR\_StopRealPlay (LONG IRealHandle)

**Parameters:** [in] IRealHandle                      Live view handle, the return value of NET\_DVR\_RealPlay\_V30

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to stop live view.

[Return to index](#)

## 5.7.6 Get player handle for decoding and display when live view:

### NET\_DVR\_GetRealPlayerIndex

**API:** int NET\_DVR\_GetRealPlayerIndex(LONG IRealHandle)

**Parameters:** [in] IRealHandle [Live view handle, the return value of NET\\_DVR\\_RealPlay\\_V30](#)

**Return:** Return -1 if it is failed, and other returned values could be used as the play handle. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** User can realize other functions supported by player SDK by returned handle.  
For example:  
When using PlayM4\_GetBMP(LONG nPort,.....),  
PlayM4\_GetJPEG(LONG nPort,.....),  
You can do like following:  
PlayM4\_GetBMP(NET\_DVR\_GetPlayBackPlayerIndex(),.....)  
PlayM4\_GetJPEG(NET\_DVR\_GetPlayBackPlayerIndex(),.....)  
We can capture picture and save the data to memory.  
Please refer <Player SDK Programmer Manual> for details.

[Return to index](#)

## 5.8 Video Parameter Configuration

### 5.8.1 Get video parameter: NET\_DVR\_ClientGetVideoEffect

**API:** BOOL NET\_DVR\_ClientGetVideoEffect(LONG IRealHandle,DWORD \*pBrightValue, DWORD \*pContrastValue,DWORD \*pSaturationValue,DWORD \*pHueValue)

**Parameters:** [in] IRealHandle [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[out] pBrightValue [Pointer of brightness, range: 1-10](#)  
[out] pContrastValue [Pointer of contrast, range: 1-10](#)  
[out] pSaturationValue [Pointer of saturation, range: 1-10](#)  
[out] pHueValue [Pointer of hue, range: 1-10](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Please call this API after starting live view.

[Return to index](#)

### 5.8.2 Get video parameter: NET\_DVR\_GetVideoEffect

**API:** BOOL NET\_DVR\_GetVideoEffect(LONG IUserID, LONG IChannel,DWORD \*pBrightValue, DWORD \*pContrastValue,DWORD \*pSaturationValue,DWORD



\*pHueValue)

**Parameters:** [in] IRealHandle      The return value of NET\_DVR\_Login\_V30  
[in] IChannel      Channel number  
[out] pBrightValue      Pointer of brightness, range: 1-10  
[out] pContrastValue      Pointer of contrast, range: 1-10  
[out] pSaturationValue      Pointer of saturation, range: 1-10  
[out] pHueValue      Pointer of hue, range: 1-10

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It supports get video parameter after login the device.

[Return to index](#)

### 5.8.3 Set video parameter: **NET\_DVR\_ClientSetVideoEffect**

**API:** BOOL NET\_DVR\_ClientSetVideoEffect(LONG IRealHandle,DWORD pBrightValue, DWORD pContrastValue,DWORD pSaturationValue,DWORD pHueValue)

**Parameters:** [in] IRealHandle      The return value of NET\_DVR\_RealPlay\_V30  
[in] dwBrightValue      Brightness value, range: 1-10  
[in] dwContrastValue      Contrast value, range: 1-10  
[in] dwSaturationValue      Saturation value, range: 1-10  
[in] dwHueValue      Hue value, range: 1-10

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Please call this API after starting live view.

[Return to index](#)

### 5.8.4 Set video parameter: **NET\_DVR\_SetVideoEffect**

**API:** BOOL NET\_DVR\_SetVideoEffect(LONG IUserID, LONG IChannel,DWORD \*pBrightValue, DWORD \*pContrastValue,DWORD \*pSaturationValue,DWORD \*pHueValue)

**Parameters:** [in] IRealHandle      The return value of NET\_DVR\_Login\_V30  
[in] IChannel      Channel number  
[in] dwBrightValue      Brightness value, range: 1-10  
[in] dwContrastValue      Contrast value, range: 1-10  
[in] dwSaturationValue      Saturation value, range: 1-10  
[in] dwHueValue      Hue value, range: 1-10

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It supports set video parameter after login the device.

[Return to index](#)

## 5.9 Overlay Characters or Images onto Live View Screen

### 5.9.1 Overlay characters or images onto live view screen:

#### NET\_DVR\_RigisterDrawFun

**API:** BOOL NET\_DVR\_RigisterDrawFun(LONG IRealHandle, fDrawFun cbDrawFun, DWORD dwUser)

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] fDrawFun      [Draw callback function](#)  
[in] dwUser      [User data](#)

```
typedef void(CALLBACK *fDrawFun)(LONG IRealHandle, HDC hDc, DWORD dwUser)
```

[out] IRealHandle      [Current live view handle](#)  
[out] hDc      [Draw DC](#)  
[out] dwUser      [User data](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** No such interface on Linux system. This API is mainly used to register callback function, and get device context of the current surface. User could draw or write on the DC, like drawing on the window client DC. But this DC is not DC of window client area, it is DC on the Off-Screen surface of Player  
DirectDraw.bBlocked should be set to 1(TRUE) when call  
NET\_DVR\_RealPlay\_V30, or this API will return FALSE, and the error code will be 12 (calling order error) .

[Return to index](#)

## 5.10 Parameter Control of Decoding Effect When Live View

### 5.10.1 Set the number of player's frame buffers:

#### NET\_DVR\_SetPlayerBufNumber

**API:** BOOL NET\_DVR\_SetPlayerBufNumber(LONG IRealHandle, DWORD dwBufNum)

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] dwBufNum      [The max number of video frames set for single video playing, value range: \[1,50\],and the default number is 15](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Network delay and playing fluency can be adjusted through this interface. dwBufNum value is larger, the playing fluency is better and delay is larger; dwBufNum value is larger, the playing delay is smaller, but when network is not smooth, there will be frame loss phenomenon, affecting playing fluency. If current is mixed flow, in order to ensure effective proposal to set audio and video synchronization, frame buffer is advised to be greater than or equal to 6 frames. This function must be used immediately after NET\_DVR\_RealPlay, and the settings will not take effect if set after the video has been played.

[Return to index](#)

## 5.10.2 Set the number of B frames to be thrown when decoding:

### NET\_DVR\_ThrowBFrame

**API:** BOOL NET\_DVR\_ThrowBFrame(LONG IRealHandle,DWORD dwNum)

**Parameters:** [in] IRealHandle      The return value of NET\_DVR\_RealPlay\_V30  
                          [in] dwNum      The number of B frames to be thrown: 0- no throw, 1- throw 1 B frame, 2- throw 2 B frames

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Throw B frame can reduce CPU utilization when doing multi-channel playing. When play more than one channel, throw B frame can reduce the CPU resources, while if play one channel only, it'd better not to throw the B frame.

[Return to index](#)

## 5.11 Control Sound Playing When Live View

### 5.11.1 Set sound playing mode: NET\_DVR\_SetAudioMode

**API:** BOOL NET\_DVR\_SetAudioMode(DWORD dwMode)

**Parameters:** [in] dwMode      Sound playing mod: 1- exclusive mode, single channel audio mode; 2- shared mode, multi-channel audio mode

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** If you don't call this interface to set sounding play mode, the default mode is exclusive.

[Return to index](#)

### 5.11.2 Open sound in exclusive mode: **NET\_DVR\_OpenSound**

**API:** BOOL NET\_DVR\_OpenSound(LONG IRealHandle)  
**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:** If currently it is in shared mode, this API will return false. It supports only opening one channel to play sound in the exclusive mode, that is, it only opens the sound of the last channel when more one channels are opened one by one.

[Return to index](#)

### 5.11.3 Close sound in exclusive mode: **NET\_DVR\_CloseSound**

**API:** BOOL NET\_DVR\_CloseSound()  
**Parameters:** None  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:** This API is used to close sound on exclusive sound card mode.

[Return to index](#)

### 5.11.4 Open sound in shared mode: **NET\_DVR\_OpenSoundShare**

**API:** BOOL NET\_DVR\_OpenSoundShare(LONG IRealHandle)  
**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:** This API is used to open sound in shared sound card mode.

[Return to index](#)

### 5.11.5 Close sound in shared mode: **NET\_DVR\_CloseSoundShare**

**API:** BOOL NET\_DVR\_CloseSoundShare (LONG IRealHandle)  
**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:** This API is used to close sound in share sound card mode.

[Return to index](#)

### 5.11.6 Adjust playing volume: **NET\_DVR\_Volume**

**API:** BOOL NET\_DVR\_Volume(LONG IRealHandle,WORD wVolume)

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] wVolume      [Volume, value arrange:\[0,0xffff\]](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to adjust playing volume.

[Return to index](#)

## 5.12 Stream Data Callback When Live View

### 5.12.1 Register callback function to capture real-time stream data:

#### **NET\_DVR\_SetRealDataCallback**

**API:** BOOL NET\_DVR\_SetRealDataCallBack(LONG IRealHandle, fRealDataCallBack cbRealDataCallBack,DWORD dwUser)

**Parameters:** [in] IRealHandle      [Live view handle, the return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] fRealDataCallBack      [Stream data callback function](#)  
[in] dwUser      [User data](#)

typedef void(CALLBACK \*fRealDataCallBack)(LONG IRealHandle,DWORD dwDataType, BYTE \*pBuffer, DWORD dwBufSize,DWORD dwUser)

[out] IRealHandle      [Current live view handle](#)  
[out] dwDataType      [Data type, details refer to \*\*data type list table\*\*](#)  
[out] pBuffer      [Buffer pointer to save data](#)  
[out] dwBufSize      [Buffer size](#)  
[out] dwUser      [User data](#)

Macro Definition	Value	Implication
NET_DVR_SYSHEAD	1	System head data
NET_DVR_STREAMDATA	2	Stream data (include video and audio stream, or only the video data of stream that video and audio is separate)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This function includes starting and stopping the user to handle the data captured by SDK. When fRealDataCallBack is not NULL, it means SDK will callback the stream data and user can handle the data. When fRealDataCallBack is NULL, it means stop calling back the data and handling the data. The first package called back by the function is a system head of 40 bytes,

and it is used to decode the stream data. The afterward data called back is the compressed data stream. The max size of the data called back one time is 256K bytes. [The example, please refer to Example code of live view.](#)

[Return to index](#)

## 5.12.2 Register callback function to capture real-time stream data

(standard encoded data): **NET\_DVR\_SetStandardDataCallBack**

**API:** BOOL NET\_DVR\_SetStandardDataCallBack(LONG IRealHandle, fStdDataCallBack cbStdDataCallBack,DWORD dwUser)

**Parameters:** [in] IRealHandle                      [Live view handle, the return value of NET\\_DVR\\_RealPlay\\_V30](#)

[in] fStdDataCallBack                      [Standard data callback function](#)

[in] dwUser                                  [User data](#)

```
typedef void(CALLBACK *fStdDataCallBack)(LONG IRealHandle,DWORD dwDataType, BYTE *pBuffer,DWORD dwBufSize,DWORD dwUser)
```

[out] IRealHandle                          [Current live view handle](#)

[out] dwDataType                          [Data type, details refer to \*\*data type list table\*\*](#)

[out] pBuffer                              [Buffer pointer to save data](#)

[out] dwBufSize                          [Buffer size](#)

[out] dwUser                              [User data](#)

Macro Definition	Value	Implication
NET_DVR_SYSHEAD	1	System header
NET_DVR_STD_VIDEODATA	4	Standard video stream data
NET_DVR_STD_AUDIODATA	5	Standard audio stream data
NET_DVR_PRIVATE_DATA	2 or 112	Private data

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This function includes starting and stopping the user to handle the data captured by SDK. When fRealDataCallBack is not NULL, it means SDK will callback the stream data and user can handle the data. When fRealDataCallBack is NULL, it means stop calling back the data and handling the data. The first package called back by the function is a system head of 40 bytes, and it is used to decode the stream data. The afterward data called back is the compressed data stream(include RTP header of 12bytes). This function currently supports to callback standard stream data from devices that support RTSP protocol only.

[Return to index](#)

### 5.12.3 Capture data and save to assigned file: **NET\_DVR\_SaveRealData**

**API:** BOOL NET\_DVR\_SaveRealData(LONG IRealHandle, char \*sFileName)

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] sFileName      [Pointer of file path](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.12.4 Stop data callback: **NET\_DVR\_StopSaveRealData**

**API:** BOOL NET\_DVR\_StopSaveRealData(LONG IRealHandle )

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.13 Capture Picture

### 5.13.1 Set capturing mode: **NET\_DVR\_SetCapturePictureMode**

**API:** BOOL NET\_DVR\_SetCapturePictureMode(DWORD dwCaptureMode)

**Parameters:** [in] dwCaptureMode      [Capturing mode](#)

```
enum tagPDC_PARAM_KEY{
    BMP_MODE    = 0,    // BMP mode
    JPEG_MODE    = 1    // JPEG mode
}CAPTURE_MODE
```

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** After calling this API to set capturing mode, please call NET\_DVR\_CapturePicture to get the corresponding picture.

[Return to index](#)

### 5.13.2 Capture a frame and save to file: **NET\_DVR\_CapturePicture**

**API:** BOOL NET\_DVR\_CapturePicture(LONG IRealHandle, char \*sPicFileName)

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] sPicFileName      [URL to save picture, path length is less than or](#)

equal to 256 bytes(includes file name)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It supports to call NET\_DVR\_SetCapturePictureMode to set capture mode, before calling this API to get picture. The default mode is BMP mode. If set capturing mode to BMP mode, the captured file is a BMP file, and the suffix of file path should be “.bmp”; If set to JPEG mode, it captures a JPEG file, and the suffix of file path should be “.jpg”.  
If the current resolution of device is 2CIF, the resolution of captured bmp picture is 4CIF.

[Return to index](#)

### 5.13.3 Capture a file and save as JPEG picture:

#### NET\_DVR\_CaptureJPEGPicture

**API:** BOOL NET\_DVR\_CaptureJPEGPicture(LONG IUserID, LONG IChannel, LPNET\_DVR\_JPEGPARA lpJpegPara, char \*sPicFileName)

**Parameters:** [in] IUserID                      The return value of NET\_DVR\_Login\_V30  
[in] IChannel                              Channel number  
[in] lpJpegPara                          JPEG image parameter  
[in] sPicFileName                        File path to save JPEG picture

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The API is used to capture a frame and save as JPEG file.  
For IPC, it supports to capture JPEG image of current resolution.

[Return to index](#)

### 5.13.4 Capture a frame and save as JPEG image to the assigned buffer:

#### NET\_DVR\_CaptureJPEGPicture\_NEW

**API:** BOOL NET\_DVR\_CaptureJPEGPicture\_NEW(LONG IUserID, LONG IChannel, LPNET\_DVR\_JPEGPARA lpJpegPara, char \*sJpegPicBuffer, DWORD dwPicSize, LPDWORD lpSizeReturned)

**Parameters:** [in] IUserID                      The return value of NET\_DVR\_Login\_V30  
[in] IChannel                              Channel number  
[in] lpJpegPara                          JPEG image parameter  
[in] sJpegPicBuffer                      The buffer to save JPEG data  
[in] dwPicSize                            The buffer size  
[out] lpSizeReturned                    The returned size of the picture



**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The API is used to capture a frame and save as JPEG picture to the assigned buffer. For IPC, it supports to capture JPEG image of current resolution.

[Return to index](#)

## 5.14 Live View and Configuration of Zero Channel

### Parameter configuration

#### 5.14.1 Get device parameter: **NET\_DVR\_GetDVRConfig**

**API:** BOOL NET\_DVR\_GetDVRConfig(LONG UserID, DWORD dwCommand, LONG IChannel, LPVOID lpOutBuffer, DWORD dwOutBufferSize, LPDWORD lpBytesReturned)

**Parameters:**

[in] UserID	The return value of NET_DVR_Login_V30
[in] dwCommand	Configuration command, please kindly refer to the <b>DwCommand Type Definition</b> below
[in] IChannel	Channel number, if the channel parameter is not required, IChannel is invalid, and set it as 0xFFFFFFFF
[out] lpOutBuffer	The buffer to save the output parameters
[in] dwOutBufferSize	The size of the buffer (unit: byte ), it can't be 0
[out] lpBytesReturned	The size of the returned buffer, it can't be NULL

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The structures and command numbers are different according to the various getting functions, and they are listed as below:

Macro Definition of dwCommand	Description	IChannel	lpOutBuffer	Value
NET_DVR_GET_ZEROCHANCFG	Get compression parameters of zero channel	valid	NET_DVR_ZEROCHANCFG	1102
NET_DVR_GET_ZERO_PREVIEWCFG_V30	Get local preview parameters of zero channel	valid	NET_DVR_PREVIEWCFG_V30	1104
NET_DVR_GET_ZERO_ZOOM	Get zoom parameters of zero channel	valid	NET_DVR_ZERO_ZOOMCFG	1107

[Return to index](#)

### 5.14.2 Set device parameter: **NET\_DVR\_SetDVRConfig**

**API:** BOOL NET\_DVR\_SetDVRConfig(LONG IUserID, DWORD dwCommand, LONG IChannel, LPVOID lpInBuffer, DWORD dwInBufferSize)

**Parameters:**

- [in] IUserID                      The return value of NET\_DVR\_Login\_V30
- [in] dwCommand                  Device configuration commands, refer to configuration commands
- [in] IChannel                    Channel number, if command needn't channel number, this parameter is invalid, set to 0xFFFFFFFF
- [in] lpInBuffer                  Input data buffer pointer
- [in] dwInBufferSize            Input data buffer length (unit: byte)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

Macro Definition of dwCommand	Description	IChannel	lpInBuffer	Value
NET_DVR_SET_ZEROCHANCFG	Set compression parameters of zero channel	valid	NET_DVR_ZEROCHANCFG	1103
NET_DVR_SET_ZERO_PREVIEWCFG_V30	Set local preview parameters of zero channel	valid	NET_DVR_PREVIEWCFG_V30 0	1105
NET_DVR_SET_ZERO_ZOOM	Set zoom parameters of zero channel	valid	NET_DVR_ZERO_ZOOMCFG	1106

**Remarks:** The structures and command numbers are different according to the various getting functions, and they are listed as below:

[Return to index](#)

## Live view

### 5.14.3 Start live view of zero channel: **NET\_DVR\_ZeroStartPlay**

**API:** LONG NET\_DVR\_ZeroStartPlay(LONG IUserID, LPNET\_DVR\_CLIENTINFO lpClientInfo, fRealDataCallBack\_V30 cbRealDataCallBack, void\* pUser, BOOL bBlocked)

**Parameters:**

- [in] IRealHandle                  The return value of NET\_DVR\_RealPlay\_V30
- [in] lpClientInfo                  Live view parameter
- [in] fRealDataCallBack\_V30      Stream data callback function
- [in] pUser                          User data
- [in] bBlocked                      Whether to set data stream requesting process blocked or not: 0-no, 1-yes

```
typedef void(CALLBACK *fRealDataCallBack_V30)(LONG IRealHandle, DWORD
dwDataType, BYTE *pBuffer,DWORD dwBufSize, void *pUser)
```

[out] IRealHandle, [Current live view handle](#)  
[out] dwDataType, [Data type, refer to \*\*data type list table\*\*](#)  
B[out] pBuffer, [Buffer pointer for saving data](#)  
[out] dwBufSize, [Buffer size](#)  
[out] pUser [User data](#)

Macro Definition	Value	Implication
NET_DVR_SYSHEAD	1	System head data
NET_DVR_STREAMDATA	2	Stream data (include video and audio stream, or only video data of stream that video and audio is separate)
NET_DVR_AUDIOSTREAMDATA	3	Audio data

**Return:** -1 means false, other values are as handle parameters of functions like NET\_DVR\_ZeroStopPlay. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to realize live view. It supports to set current operation to be blocked or not(by the parameter: bBlocked). If set to be unblocked, it means it will think the connection is successful when start to connect with the device. If failed to receive stream and play, it will notify the upper layer by preview exception mode. And it can reduce dwell time of loop play, the same to NET\_DVR\_RealPlay. If set to be blocked, it means it will return whether successful or not after playing operation.  
The callback function of this API can be set to NULL, and it will not callback the stream data to user. And then user can call [NET\\_DVR\\_SetRealDataCallBack](#) or [NET\\_DVR\\_SetStandardDataCallBack](#) to register callback function to capture stream data.

[Return to index](#)

#### 5.14.4 Stop live view: **NET\_DVR\_ZeroStopPlay**

**API:** BOOL NET\_DVR\_ZeroStopPlay(LONG IPlayHandle)

**Parameters:** [in] IRealHandle [The return value of NET\\_DVR\\_RealPlay\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to stop live view of zero channel.

[Return to index](#)

## Other function

### 5.14.5 Make the zero channel create a key frame:

#### NET\_DVR\_ZeroMakeKeyFrame

**API:** BOOL NET\_DVR\_ZeroMakeKeyFrame(LONG lUserID, LONG lZeroChan)

**Parameters:** [in] lUserID                      The return value of NET\_DVR\_Login\_V30  
[in] lZeroChan                      Zero channel number, adds the starting channel number, that is, starts from 1

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to make zero channel create a key frame of zero channel.

[Return to index](#)

### 5.14.6 Trun over the live view screen of zero channel:

#### NET\_DVR\_ZeroTurnOver

**API:** BOOL NET\_DVR\_ZeroTurnOver(LONG lUserID, LONG lChannel, BOOL bNextPreview)

**Parameters:** [in] lUserID                      The return value of NET\_DVR\_Login\_V30  
[in] lChannel                      Zero channel number, adds the starting channel number, that is, starts from 1  
[in] bNextPreview                      Page up or down: TRUE- next page; FALSE- previous page

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.15 Operation with Remote Files Recorded in the Device:

### Playback, Download, Lock or Backup

Get the video's starting time and stopping time of the channel

#### 5.15.1 Get the video's starting time and stopping time of the channel:

##### NET\_DVR\_InquiryRecordTimeSpan

**API:** BOOL NET\_DVR\_InquiryRecordTimeSpan(LONG IUserID, DWORD dwChannel, LPNET\_DVR\_RECORD\_TIME\_SPAN\_INQUIRY lpInquiry, LPNET\_DVR\_RECORD\_TIME\_SPAN lpResult)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
                   [in] dwChannel                [Channel number](#)  
                   [in] lpInquiry                [Query condition](#)  
                   [in] lpResult                 [Query result](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

Instantly refresh the record index

#### 5.15.2 Instantly refresh the record index:

##### NET\_DVR\_UpdateRecordIndex

**API:** BOOL NET\_DVR\_UpdateRecordIndex(LONG IUserID, DWORD dwChannel)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
                   [in] dwChannel                [Channel number](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It is related with channel, and requires the support by the device. Defaultly it refresh the record index every two minutes.

[Return to index](#)

## Search record files

### 5.15.3 Search files by file type and time: **NET\_DVR\_FindFile\_V40**

**API:** LONG NET\_DVR\_FindFile\_V40(LONG IUserID, LPNET\_DVR\_FILECOND\_V40 pFindCond)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] pFindCond                      [The structure of file information to be found](#)

**Return:** Return -1 if it is failed, and other values could be used as a parameter of NET\_DVR\_FindClose and other APIs. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The interface has assigned the file type and time-range to search. After calling it successfully, please call [NET\\_DVR\\_FindNextFile\\_V30](#) to get file information.

[Return to index](#)

### 5.15.4 Get record file one by one: **NET\_DVR\_FindNextFile\_V30**

**API:** LONG NET\_DVR\_FindNextFile\_V30(LONG IFindHandle, LPNET\_DVR\_FINDDATA\_V30 lpFindData)

**Parameters:** [in] IFindHandle                      [Handle of file searching, return value of NET\\_DVR\\_FindFile\\_V30](#)  
[in] lpFindData                      [Pointer for saving file information](#)

**Return:** Return -1 if it is failed, and the other values stand for current state or other information, details listed below:

Macro Definition	Value	Implication
NET_DVR_FILE_SUCCESS	1000	Get the file information successfully
NET_DVR_FILE_NOFOUND	1001	No file found
NET_DVR_ISFINDING	1002	Searching, please wait
NET_DVR_NOMOREFILE	1003	No more file found, search is finished
NET_DVR_FILE_EXCEPTION	1004	Exception when search file

Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this function, please call NET\_DVR\_FindFile\_V30 to get current handle firstly. The interface only supports to get one file. We should call the interface repetitively to get all files. We can get other information, like card number and whether the file is locked, by calling this API as well.

*The max number of files searched once is 4000.*

[Return to index](#)

### 5.15.5 Close searching files and release the resource :

#### NET\_DVR\_FindClose\_V30

**API:** BOOL NET\_DVR\_FindClose\_V30(LONG IFindHandle)

**Parameters:** [in] IFindHandle      [The handle of file search, the return value of NET\\_DVR\\_FindFile\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### Search record files by event

### 5.15.6 Search files by event: NET\_DVR\_FindFileByEvent

**API:** LONG NET\_DVR\_FindFileByEvent(LONG IUserID, LPNET\_DVR\_SEARCH\_EVENT\_PARAM lpSearchEventParam)

**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] lpSearchEventParam      [The structure of file information to be found](#)

**Return:** Return -1 if it is failed, and other values could be used as a parameter of NET\_DVR\_FindNextEvent. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The interface has assigned the searching condition to search (event type). After calling it successfully, we can call NET\_DVR\_FindNextEvent to get file information. The searched record files by event are given by start time and end time, so it supports only playback by time by calling [NET\\_DVR\\_PlayBackByTime](#).  
*This function requires the support of device, and if the device doesn't support it, the API will return -1, and error code will be 23.*

[Return to index](#)

### 5.15.7 Get record file one by one: NET\_DVR\_FindNextEvent

**API:** LONG NET\_DVR\_FindNextEvent(LONG ISearchHandle, LPNET\_DVR\_SEARCH\_EVENT\_RET lpSearchEventRet)

**Parameters:** [in] ISearchHandle      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[out] lpSearchEventRet      [Pointer for saving file information](#)

**Return:** Return -1 if it is failed, and the other values stand for current state or other information, details listed below:

Macro Definition	Value	Implication
NET_DVR_FILE_SUCCESS	1000	Get the file information successfully
NET_DVR_FILE_NOFIND	1001	No file found
NET_DVR_ISFINDING	1002	Searching, please wait
NET_DVR_NOMOREFILE	1003	No more file found, search is finished
NET_DVR_FILE_EXCEPTION	1004	Exception when search file

Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this function, please call [NET\\_DVR\\_FindFileByEvent](#) to get the handle first. The record file by event is given by start time and end time, so it supports only playback by time by calling [NET\\_DVR\\_PlayBackByTime](#).

[Return to index](#)

### 5.15.8 Close searching files and release the resource:

#### NET\_DVR\_FindClose\_V30

**API:** BOOL NET\_DVR\_FindClose\_V30(LONG IFindHandle)

**Parameters:** [in] IFindHandle      [The handle of file search, the return value of NET\\_DVR\\_FindFileByEvent](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### Regional motion detection smart search

#### 5.15.9 Start smart searching: NET\_DVR\_SmartSearch

**API:** LONG NET\_DVR\_SmartSearch(LONG IUserID, LPNET\_DVR\_SMART\_SEARCH\_PARAM lpSmartSearchParam)

**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] lpSmartSearchParam      [Smart searching parameter](#)

**Return:** Return -1 if it is failed, and the other return value will be used as the input parameter of NET\_DVR\_SearchNextInfo, or NET\_DVR\_StopSearch. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Please call [NET\\_DVR\\_SearchNextInfo](#) afterwards to get the search result. It only supports playback by time mode ([NET\\_DVR\\_PlayBackByTime](#)).  
*This function requires the support of device, and if the device doesn't support it, the API will return -1, and error code will be 23.*



[Return to index](#)**5.15.10 Get the motion information in the region:****NET\_DVR\_SearchNextInfo**

**API:** LONG NET\_DVR\_SearchNextInfo(LONG ISearchHandle,  
LPNET\_DVR\_SMART\_SEARCH\_RET lpSmartSearchRet)

**Parameters:** [in] ISearchHandle [The return value of NET\\_DVR\\_Login\\_V30](#)  
[out] lpSmartSearchRet [Pointer to save searched results](#)

**Return:** Return -1 if it is failed, and the other values stand for current state or other information, details listed below:

Macro Definition	Value	Implication
NET_DVR_FILE_SUCCESS	1000	Get the file information successfully
NET_DVR_FILE_NOFIND	1001	No file found
NET_DVR_ISFINDING	1002	Searching, please wait
NET_DVR_NOMOREFILE	1003	No more file found, search is finished
NET_DVR_FILE_EXCEPTION	1004	Exception when search file

Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this interface, please call [NET\\_DVR\\_SmartSearch](#) first to get the search handle. Please set start time and finish time by specific video files. This API only supports playback by time [NET\\_DVR\\_PlayBackByTime](#).

[Return to index](#)**5.15.11 Stop smart searching: NET\_DVR\_StopSearch**

**API:** BOOL NET\_DVR\_StopSearch(LONG ISearchHandle)

**Parameters:** [in] ISearchHandle [The return value of NET\\_DVR\\_Login\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

[Return to index](#)**Playback record files****5.15.12 Playback by file name: NET\_DVR\_PlayBackByName**

**API:** LONG NET\_DVR\_PlayBackByName(LONG IUserID, char \*sPlayBackFileName,  
HWND hWnd)

**Parameters:**

[in] lUserID	The return value of NET_DVR_Login_V30
[in] sPlayBackFileName	File name to playback, the length can not exceed 100 bytes
[in] hWnd	Handle of playback window. If set to NULL, SDK still can receive stream data, but not decode and display

**Return:** Return -1 if it is failed, and other values could be used as parameter of NET\_DVR\_StopPlayBack. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API assigns the record file to play currently. After calling the API successfully, it requires to call the NET\_DVR\_PlayBackControl with the command **NET\_DVR\_PLAYSTART** to start playback. After calling the API successfully, you can register callback function by calling NET\_DVR\_SetPlayDataCallBack to capture the stream data and handle by yourself.

#### In Linux system

For v4.1 SDK or above version,HWND means the handle of playing window, defined as below:

```
typedef unsigned int HWND;
```

If you use the Qt interface development, here take an example:

```
NET_DVR_CLIENTINFO tmpclientinfo;
```

```
tmpclientinfo.hPlayWnd = (HWND)m_framePlayWnd->GetPlayWndId();
```

For the SDK under v4.1, HWND is defined as below:

```
typedef struct __PLAYRECT
```

```
{
```

```
    int x;        //X axis coordinate of the display region's upper left corner
```

```
    int y;        //Y axis coordinate of the display region's upper left corner
```

```
    int uWidth;   //Width of the display region
```

```
    int uHeight;  //Height of the display region
```

```
}PLAYRECT;
```

```
typedef PLAYRECT HWND;
```

For the structure NET\_DVR\_CLIENTINFO, if hPlayWnd = {0}, SDK can still get stream but not decode and display, so it is able to record on the client end. It is not able to set hPlayWnd = 0(that is, NULL), or it will result to crumble when calling hPlayWnd.x.

In Linux system, HWND definition as follows:

```
typedef struct __PLAYRECT
```

```
{
```

```
    int x;        //X axis coordinate of the display region's upper left corner
```

```
    int y;        //Y axis coordinate of the display region's upper left corner
```

```
    int uWidth;   //Width of the display region
```

```
    int uHeight;  //Height of the display region
```

```
}PLAYRECT;
```

[Return to index](#)

### 5.15.13 Reversely playback the video by file name:

#### **NET\_DVR\_PlayBackReverseByName**

**API:** LONG NET\_DVR\_PlayBackReverseByName(LONG IUserID,char \*sPlayBackFileName, HWND hWnd)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] sPlayBackFileName              [File name to playback, the length can not exceed 100 bytes](#)  
[in] hWnd                              [Handle of playback window. If set to NULL, SDK still can receive stream data, but not decode and display](#)

**Return:** Return -1 if it is failed, and other values could be used as parameter of NET\_DVR\_StopPlayBack. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API assigns the record file to play currently. After calling the API successfully, it requires to call the NET\_DVR\_PlayBackControl with the command **NET\_DVR\_PLAYSTART** to start playback.  
After calling the API successfully, you can register callback function by calling NET\_DVR\_SetPlayDataCallBack to capture the stream data and handle by yourself.

[Return to index](#)

### 5.15.14 Playback by time: **NET\_DVR\_PlayBackByTime\_V40**

**API:** LONG NET\_DVR\_PlayBackByTime\_V40(LONG IUserID, LPNET\_DVR\_VOD\_PARA pVodPara)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] pVodPara                              [Playback parameter](#)

**Return:** Return -1 if it is failed, and other values could be used as parameter of NET\_DVR\_StopPlayBack. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This interface assigns the record file to play currently. After calling the API successfully, it requires to call the [NET\\_DVR\\_PlayBackControl\\_V40](#) with the command NET\_DVR\_PLAYSTART to start playback.  
When the record files to playback are searched by event, for each file has pre-record and delay part, please extend the end time and ahead the starting time to playback. The recommended value: bup to 10 minutes, at least 5 seconds.  
After calling the API successfully, you can register callback function by calling

[NET\\_DVR\\_SetPlayDataCallBack](#), capture the stream data and handle by yourself.

In Linux system, HWND definition as follows:

```
typedef struct __PLAYRECT
{
    int x;        //X axis coordinate of the display region's upper left corner
    int y;        //Y axis coordinate of the display region's upper left corner
    int uWidth;   //Width of the display region
    int uHeight;  //Height of the display region
}PLAYRECT;
```

[Return to index](#)

### 5.15.15 Reversely playback video by time:

#### NET\_DVR\_PlayBackReverseByTime\_V40

**API:** LONG NET\_DVR\_PlayBackReverseByTime\_V40( LONG IUserID, HWND hWnd, LPNET\_DVR\_PLAYCOND pPlayCond)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
                  [in] HWND                      [Playback window handle](#)  
                  [in] pPlayCond                  [Playback condition](#)

**Return:** Return -1 if it is failed, and other values could be used as parameter of NET\_DVR\_StopPlayBack. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This interface assigns the record file to play currently. After calling the API successfully, it requires to call the [NET\\_DVR\\_PlayBackControl\\_V40](#) with the command NET\_DVR\_PLAYSTART to start playback.  
 When the record files to playback are searched by event, for each file has pre-record and delay part, please extend the end time and ahead the starting time to playback. The recommended value: bup to 10 minutes, at least 5 seconds.  
 After calling the API successfully, you can register callback function by calling [NET\\_DVR\\_SetPlayDataCallBack](#), capture the stream data and handle by yourself.

[Return to index](#)

### 5.15.16 Control the playback state: NET\_DVR\_PlayBackControl\_V40

**API:** BOOL NET\_DVR\_PlayBackControl\_V40(LONG IPlayHandle,DWORD dwControlCode, LPVOID lpInBuffer = NULL, DWORD dwInLen = 0, LPVOID lpOutBuffer = NULL, DWORD \*lpOutLen = NULL)

**Parameters:** [in] IPlayHandle                      [Playback handle, the return value of NET\\_DVR\\_PlayBackByName or](#)

[in] dwControlCode	NET_DVR_PlayBackByTime. Command to control video playback, details see to <b>the list table</b> below.
[in] lpInBuffer	Pointer to input parameter.
[in] dwInLen	Length of input parameter.
[out] lpOutBuffer	Pointer to output parameter.
[out] lpOutLen	Length of output parameter.

Macro Definition	Value	Implication
NET_DVR_PLAYSTART	1	Start playing
NET_DVR_PLAYPAUSE	3	Pause
NET_DVR_PLAYRESTART	4	Resume
NET_DVR_PLAYFAST	5	Fast
NET_DVR_PLAYSLOW	6	Slow
NET_DVR_PLAYNORMAL	7	Normal speed
NET_DVR_PLAYFRAME	8	Play frame one by one (using the command NET_DVR_PLAYNORMAL to resume normal playback)
NET_DVR_PLAYSTARTAUDIO	9	Open sound
NET_DVR_PLAYSTOPAUDIO	10	Close sound
NET_DVR_PLAYAUDIOVOLUME	11	Adjust the volume
NET_DVR_PLAYSETPOS	12	Change the progress of the file playback
NET_DVR_PLAYGETPOS	13	Get the progress of the file playback
NET_DVR_PLAYGETTIME	14	Get currently played time(valid when playing back by file)
NET_DVR_PLAYGETFRAME	15	Get currently played frames(valid when playing back by file)
NET_DVR_GETTOTALFRAMES	16	Get currently total frames(valid when playing back by file)
NET_DVR_GETTOTALTIME	17	Get currently total time(valid when playing back by file)
NET_DVR_THROWBFRAME	20	Throw B frame
NET_DVR_SETSPEED	24	Set speed of stream
NET_DVR_KEEPAIVE	25	Keep heartbeat with device (If the callback blocked, suggest setting 2s to send one time)
NET_DVR_PLAYSETTIME	26	Positioning by absolute time
NET_DVR_PLAYGETTOTALLEN	27	Get total length of all files in corresponding time period of playback by time
NET_DVR_PLAY_FORWARD	29	Switch rewind to forward playback

NET_DVR_PLAY_REVERSE	30	Switch forward playback to rewind
----------------------	----	-----------------------------------

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Whether the third parameter of this interface requires to input value is related with the control command, details refer to the following table ([The relationship of dwControlCode, lpInBuffer and lpOutBuffer](#)). Specially, when control command is starting to play(NET\_DVR\_PLAYSTART), the third parameter value means offset value of current played file, if this value is 0, it means play from the file's starting position; if this value isn't 0, it means offset value (Byte).

The fifth parameter of this API means corresponding parameter got by current control command. The control commands, NET\_DVR\_PLAYGETPOS, NET\_DVR\_PLAYGETTIME, NET\_DVR\_PLAYGETFRAME, NET\_DVR\_GETTOTALFRAMES, NET\_DVR\_GETTOTALTIME, NET\_DVR\_PLAYSETTIME and NET\_DVR\_PLAYGETTOTALLEN, can get the corresponding values by this parameter; details refer to the following table. When command value is NET\_DVR\_PLAYGETPOS, to get file playback or download progress, 0-100 means normal progress value, value larger than 100 means playback or download is abnormal.

*When getting the progress of playback or download by time, DS-91xxHF-ST/DS-90xxHF-ST/DS-96xxHF-ST/DS-81xxHF-ST supports to get the progress of 0~100 and 200(exception), and other devices can get the progress of 0, 100(finished), and 200(exception).*

#### The relationship of dwControlCode, lpInBuffer and lpOutBuffer:

Command Macro Definition	Command Description	lpInBuf	lpOutBuf
NET_DVR_PLAYSTART	Start playing	A 4-byte integer offset	None
NET_DVR_PLAYSETPOS	Change playback progress	A 4-byte integer progress(0-100)	None
NET_DVR_PLAYGETPOS	Get playback progress	None	A 4-byte integer progress (0-100)
NET_DVR_PLAYGETTIME	Get currently played time (valid when playing back by file)	None	A 4-byte integer time value
NET_DVR_PLAYGETFRAME	Get currently played frames (valid when playing back by file)	None	A 4-byte integer frame number
NET_DVR_GETTOTALFRAMES	Get total frames current playing file (valid when playing back by file)	None	A 4-byte integer frame number
NET_DVR_GETTOTALTIME	Get total time of current playing file (valid when	None	A 4-byte integer time value

	playing back by file)		
<b>NET_DVR_THROWBFRAME</b>	Throw B frame	4-byte integer, total number of B frames	None
<b>NET_DVR_SETSPEED</b>	Set speed of stream	A 4-byte integer speed value	None
<b>NET_DVR_PLAYSETTIME</b>	Locate playback by absolute time	NET_DVR_TIME	None
<b>NET_DVR_PLAYGETTOTALLEN</b>	Get total length of all files in corresponding time period of playback by time	None	A 8-byte integer length value
<b>NET_DVR_PLAY_FORWARD</b>	Switch rewind to forward playback	If decoded by user at the application layer, lpInBuffer should input NET_DVR_TIME and it means the current playing time; If decoded by the SDK directly, lpInBuffer could be set as NULL	None
<b>NET_DVR_PLAY_REVERSE</b>	Switch forward playback to rewind		None

[Return to index](#)

### 5.15.17 Stop playback: **NET\_DVR\_StopPlayBack**

**API:** BOOL NET\_DVR\_StopPlayBack(LONG IPlayHandle)

**Parameters:** [in] IPlayHandle      Playback handle, the return value of NET\_DVR\_PlayBackByName or NET\_DVR\_PlayBackByTime.

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## Data callback when playback

### 5.15.18 Callback the playing data, and save as a file:

#### **NET\_DVR\_PlayBackSaveData**

**API:** BOOL NET\_DVR\_PlayBackSaveData(LONG IPlayHandle, char \*sFileName)

**Parameters:** [in] IPlayHandle      Playback handle, the return value of

**API:** NET\_DVR\_PlayBackByName or  
NET\_DVR\_PlayBackByTime.  
[in] sFileName                      Pointer of file path

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.15.19 Stop saving data: NET\_DVR\_StopPlayBackSave

**API:** BOOL NET\_DVR\_StopPlayBackSave(LONG IPlayHandle)

**Parameters:** [in] IPlayHandle                      Playback handle, the return value of  
NET\_DVR\_PlayBackByName or  
NET\_DVR\_PlayBackByTime.

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.15.20 Register callback function to get record data:

#### NET\_DVR\_SetPlayDataCallBack

**API:** BOOL NET\_DVR\_SetPlayDataCallBack(LONG IPlayHandle, fPlayDataCallBack  
cbPlayDataCallBack,DWORD dwUser)

**Parameters:** [in] IPlayHandle                      Playback handle, the return value of  
NET\_DVR\_PlayBackByName or  
NET\_DVR\_PlayBackByTime.

[in] fPlayDataCallBack                      Callback function of record data

[in] dwUser                      User data

```
typedef void(CALLBACK *fPlayDataCallBack)(LONG IPlayHandle,DWORD  
dwDataType,BYTE *pBuffer,DWORD dwBufSize,DWORD dwUser)
```

[out] IPlayHandle                      Current playback handle

[out] dwDataType                      Data type, see to **the list table** below

[out] pBuffer                      Buffer of saving the captured data

[out] dwBufSize                      Buffer size

[out] dwUser                      User data

Macro Definition	Value	Implication
NET_DVR_SYSHEAD	1	System head data
NET_DVR_STREAMDATA	2	Stream data(compound stream or





- Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.
- Remarks:** This function includes starting and stopping user to handle the data captured by SDK. When the callback function cbPlayDataCallback is set to not NULL value, it indicates to callback and process the data; when set to NULL, it indicates to stop callback and handle the data. The first callback package is a system head of 40 bytes, used for following decoding. Then, after the system head, the callback data is compressed stream data.

[Return to index](#)

## Other operation about playback

### 5.15.21 Get the display OSD time when playback the record file:

#### NET\_DVR\_GetPlayBackOsdTime

- API:** BOOL NET\_DVR\_GetPlayBackOsdTime(LONG IPlayHandle, LPNET\_DVR\_TIME lpOsdTime)
- Parameters:** [in] IPlayHandle      Playback handle, the return value of NET\_DVR\_PlayBackByName or NET\_DVR\_PlayBackByTime.  
[out] lpOsdTime      The OSD time
- Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.
- Remarks:**

[Return to index](#)

### 5.15.22 Capture picture when playback, and save as a file:

#### NET\_DVR\_PlayBackCaptureFile

- API:** BOOL NET\_DVR\_PlayBackCaptureFile(LONG IPlayHandle, char \*sFileName)
- Parameters:** [in] IPlayHandle      Playback handle, the return value of NET\_DVR\_PlayBackByName or NET\_DVR\_PlayBackByTime.  
[in] sFileName      The file path to save picture
- Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.
- Remarks:** Generally, the time of captured picture will delay after the time of starting

capturing. That is because the OSD time on playing screen is the display time after decoding, while there should be about 1M data in decoding buffer that have not been decoded, and the picture data to be captured is got from the network buffer. Currently, the decoding library hasn't the interface to get data from the decoding buffer.

[Return to index](#)

### 5.15.23 Refresh to display the playback window:

#### NET\_DVR\_RefreshPlay

**API:** BOOL NET\_DVR\_RefreshPlay(LONG IPlayHandle)

**Parameters:** [in] IPlayHandle      [Playback handle, the return value of NET\\_DVR\\_PlayBackByName or NET\\_DVR\\_PlayBackByTime.](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** When pausing the playback or playing back frame one by one, if refresh the window, the image will disappear. Please call this interface to display the last frame again. This interface is valid only for pausing the playback or playing back frame one by one.

[Return to index](#)

### 5.15.24 Get player handle for decoding and display when playback:

#### NET\_DVR\_GetPlayBackPlayerIndex

**API:** int NET\_DVR\_GetPlayBackPlayerIndex(LONG IPlayHandle)

**Parameters:** [in] IPlayHandle      [Playback handle, the return value of NET\\_DVR\\_PlayBackByName or NET\\_DVR\\_PlayBackByTime.](#)

**Return:** Return -1 if it is failed, and other returned values could be used as the play handle. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** User can realize other functions supported by player SDK by returned handle. For example:  
 When using PlayM4\_GetBMP(LONG nPort,.....),  
 PlayM4\_GetJPEG(LONG nPort,.....),  
 You can do like following:  
 PlayM4\_GetBMP(NET\_DVR\_GetPlayBackPlayerIndex(),.....)  
 PlayM4\_GetJPEG(NET\_DVR\_GetPlayBackPlayerIndex(),.....)  
 We can capture picture and save the data to memory.

Please refer <Player SDK Programmer Manual> for details.

[Return to index](#)

## Download the record files from the remote device

### 5.15.25 Download by file name: **NET\_DVR\_GetFileByName**

**API:** LONG NET\_DVR\_GetFileByName(LONG IUserID, char \*sDVRFileName, char \*sSavedFileName)

**Parameters:**

[in] IUserID	The return value of <a href="#">NET_DVR_Login_V30</a>
[in] sDVRFileName	The file name to be downloaded, the size of file name should be less than 100 bytes
[in] sSavedFileName	The files name saved in the computer after downloaded, it should be absolute path

**Return:** Return -1 if it is failed, and other values could be used as the parameter of functions NET\_DVR\_StopGetFile. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this interface to download file, we can call the interface of searching record file ([NET\\_DVR\\_FindFile\\_V30](#)) to get file name. The interface have assigned the file to be downloaded currently. After calling it successfully, it needs to call starting play control command **NET\_DVR\_PLAYSTART** of [NET\\_DVR\\_PlayBackControl](#) to download file.

[Return to index](#)

### 5.15.26 Download by time: **NET\_DVR\_GetFileByTime**

**API:** LONG NET\_DVR\_GetFileByTime(LONG IUserID, LONG IChannel, LPNET\_DVR\_TIME lpStartTime, LPNET\_DVR\_TIME lpStopTime, char \*sSavedFileName)

**Parameters**

[in] IUserID	The return value of <a href="#">NET_DVR_Login_V30</a>
[in] IChannel	Channel number
[in] lpStartTime	Starting time
[in] lpStopTime	Ending time
[in] sSavedFileName	The files name saved in the computer after downloaded, it should be absolute path

**Return:** Return -1 if it is failed, and other values could be used as the parameter of functions NET\_DVR\_StopGetFile. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The API has assigned the file to be downloaded currently. After calling it successfully, it needs to call starting play control command

NET\_DVR\_PLAYSTART of [NET\\_DVR\\_PlayBackControl](#) to download the file.

[Return to index](#)

### 5.15.27 Control the download state: **NET\_DVR\_PlayBackControl**

**API:** BOOL NET\_DVR\_PlayBackControl(LONG IPlayHandle,DWORD dwControlCode,DWORD dwInValue,DWORD \*LPOutValue)

**Parameters:**

- [in] IPlayHandle      Playing handle, the return value of [NET\\_DVR\\_GetFileByName](#) or [NET\\_DVR\\_GetFileByTime](#)
- [in] dwControlCode    Command to control video playback, details see to **the list table** below.
- [in] dwInValue        Configured parameter. if set file downloading progress([NET\\_DVR\\_PLAYSETPOS](#)), it means progress value; if start to download ([NET\\_DVR\\_PLAYSTART](#)), it means offset (Byte).
- [out] LPOutValue      Obtained parameters, such as to get total time of current file downloading (command value: [NET\\_DVR\\_GETTOTALTIME](#)), this parameter is the obtained total time.

Macro Definition	Value	Implication
<a href="#">NET_DVR_PLAYSTART</a>	1	Start downloading
<a href="#">NET_DVR_PLAYPAUSE</a>	3	Pause
<a href="#">NET_DVR_PLAYRESTART</a>	4	Resume
<a href="#">NET_DVR_PLAYSETPOS</a>	12	Change the progress of the file download (valid when downloading by file)
<a href="#">NET_DVR_PLAYGETPOS</a>	13	Get the progress of the file download (valid when downloading by file)
<a href="#">NET_DVR_GETTOTALFRAMES</a>	16	Get the file current total downloaded frames(valid when downloading by file)
<a href="#">NET_DVR_GETTOTALTIME</a>	17	Get the file current total downloaded time(valid when downloading by file)
<a href="#">NET_DVR_SET_DOWNLOAD_SPEED</a>	28	Set download speed, stream control range: 0~32Mbps

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Whether the third parameter of this API requires to input value is related with the control command. It means download progress in [NET\\_DVR\\_PLAYSETPOS](#) command; when control command is starting to download ([NET\\_DVR\\_PLAYSTART](#)), value of the third parameter means offset of current

file downloading. If the parameter's value is 0, it means downloading from file starting position; if this value isn't 0, it means offset value (Bytes). *Currently, DS-90xx and DS-81xx series DVR support resuming to download after interrupted.*

The fifth parameter of this API means corresponding parameter got by current control command. The control commands, NET\_DVR\_PLAYGETPOS, NET\_DVR\_GETTOTALFRAMES, and NET\_DVR\_GETTOTALTIME, can get the corresponding values by this parameter; details refer to the following table. When command value is NET\_DVR\_PLAYGETPOS, to get file playback or download progress, 0-100 means normal progress value, value larger than 100 means playback or download is abnormal.

*When getting the progress of download by time, DS-91xxHF-ST/DS-90xxHF-ST/DS-96xxHF-ST/DS-81xxHF-ST supports to get the progress of 0~100 and 200(exception), and other devices can get the progress of 0, 100(finished), and 200(exception).*

[Return to index](#)

### 5.15.28 Stop downloading: **NET\_DVR\_StopGetFile**

**API:** BOOL NET\_DVR\_StopGetFile(LONG IFileHandle)

**Parameters:** [in] IFileHandle      Playing handle, the return value of NET\_DVR\_GetFileByName or NET\_DVR\_GetFileByTime

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.15.29 Get the progress of the downloading:

#### **NET\_DVR\_GetDownloadPos**

**API:** int NET\_DVR\_GetDownloadPos(LONG IFileHandle)

**Parameters:** [in] IFileHandle      Playing handle, the return value of NET\_DVR\_GetFileByName or NET\_DVR\_GetFileByTime

**Return:** -1 means it is failed; 0-100: the progress of the download; 100 means download finished; 200 means the network problem is abnormal. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The interface is used to get current progress when downloading by file name.

[Return to index](#)

## Lock and unlock files recorded in the device

### 5.15.30 Lock files by file name: **NET\_DVR\_LockFileByName**

**API:** BOOL NET\_DVR\_LockFileByName(LONG IUserID, char \*sLockFileName)

**Parameters:** [in] IUserID                      The return value of NET\_DVR\_Login\_V30  
[in] sLockFileName                      File name of which to be locked, the length should be less than 100 bytes

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling the API to lock file, we can call [NET\\_DVR\\_FindFile\\_V30](#) to get file name. When the file is locked, it will not be overlaid.

[Return to index](#)

### 5.15.31 Unlock files by file name: **NET\_DVR\_UnlockFileByName**

**API:** BOOL NET\_DVR\_UnlockFileByName(LONG IUserID, char \*sUnlockFileName)

**Parameters:** [in] IUserID                      The return value of NET\_DVR\_Login\_V30  
[in] sUnlockFileName                      File name of which to be unlocked

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling the API to lock file, we can call [NET\\_DVR\\_FindFile\\_V30](#) to get file name.

[Return to index](#)

## Backup files

### 5.15.32 Get the disk list in the device: **NET\_DVR\_GetDiskList**

**API:** BOOL NET\_DVR\_GetDiskList(LONG IUserID, LPNET\_DVR\_DISKABILITY\_LIST lpDiskList)

**Parameters:** [in] IUserID                      The return value of NET\_DVR\_Login\_V30  
[out] lpDiskList                      The information of usable hard disk for backup

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The API is used to get usable hard disk resource information, and is required for the input parameter of the backup API.

[Return to index](#)

### 5.15.33 Backup files by file name: **NET\_DVR\_BackupByName**

**API:** LONG NET\_DVR\_BackupByName(LONG IUserID,  
LPNET\_DVR\_BACKUP\_NAME\_PARAM lpBackupByName)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] lpBackupByName                      [Backup parameter](#)

**Return:** Return -1 if it is failed, and other values could be used as a parameter of  
NET\_DVR\_GetBackupProgress and NET\_DVR\_StopBackup. Please call  
[NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this interface to start backup, please call NET\_DVR\_GetDiskList  
to get a usable hard disk list of current device and use the returned disk  
description section to assign the backup disk description section in the  
parameter lpBackupByName.

[Return to index](#)

### 5.15.34 Backup files by time: **NET\_DVR\_BackupByTime**

**API:** LONG NET\_DVR\_BackupByTime(LONG IUserID,  
LPNET\_DVR\_BACKUP\_TIME\_PARAM lpBackupBytime)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] lpBackupByTime                      [Backup parameter](#)

**Return:** Return -1 if it is failed, and other values could be used as a parameter of  
NET\_DVR\_GetBackupProgress and NET\_DVR\_StopBackup. Please call  
[NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this interface to start backup, please call NET\_DVR\_GetDiskList  
to get a usable hard disk list of current device and use the returned disk  
description section to assign the backup disk description section in the  
parameter lpBackupByTime.

[Return to index](#)

### 5.15.35 Get the progress of backup: **NET\_DVR\_GetBackupProgress**

**API:** BOOL NET\_DVR\_GetBackupProgress(LONG IHandle, DWORD\* pState)

**Parameters:** [in] IHandle                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[out] pState                      [Backup progress, value range: \(0,100\). For the  
other pState value, please refer to the diagram  
below.](#)

Macro Definition	Value	Implication
------------------	-------	-------------

<b>BACKUP_SUCCESS</b>	100	Backup finished
<b>BACKUP_CHANGE_DEVICE</b>	101	Backup device is full, please change new one to continue to backup
<b>BACKUP_SEARCH_DEVICE</b>	300	Be searching backup device
<b>BACKUP_SEARCH_FILE</b>	301	Be searching recording files
<b>BACKUP_EXCEPTION</b>	400	Backup exception
<b>BACKUP_FAIL</b>	500	Backup failed
<b>BACKUP_TIME_SEG_NO_FILE</b>	501	No file in the period
<b>BACKUP_NO_RESOURCE</b>	502	Can't get resource
<b>BACKUP_DEVICE_LOW_SPACE</b>	503	Disk space on the backup device not enough
<b>BACKUP_DISK_FINALIZED</b>	504	Backup disk finalized
<b>BACKUP_DISK_EXCEPTION</b>	505	Backup device exception
<b>BACKUP_DEVICE_NOT_EXIST</b>	506	Backup device not exist
<b>BACKUP_OTNER_BACKUP_WORK</b>	507	Other backup process is running
<b>BACKUP_USER_NO_RIGHT</b>	508	User has no right
<b>BACKUP_OPERATE_FAIL</b>	509	Operation failed

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** If the progress is 100 or there is a backup exception, please call [NET\\_DVR\\_StopBackup](#) to stop backup.

[Return to index](#)

### 5.15.36 Stop backup: **NET\_DVR\_StopBackup**

**API:** BOOL NET\_DVR\_StopBackup(LONG IHandle)

**Parameters:** [in] IHandle      The return value of [NET\\_DVR\\_BackupByName](#), [NET\\_DVR\\_BackupByTime](#) or [NET\\_DVR\\_BackupPicture](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

[Return to index](#)



## 5.16 Record Label

### Add or delete record label

#### 5.16.1 Add a record label: **NET\_DVR\_InsertRecordLabel**

**API:** BOOL NET\_DVR\_InsertRecordLabel(LONG IPlayHandle,  
NET\_DVR\_RECORD\_LABEL\* IpRecordLabel, NET\_DVR\_LABEL\_IDENTIFY  
\*IpLabelIdentify)

**Parameters:** [in] IPlayHandle      The return value of NET\_DVR\_PlayBackByName  
or NET\_DVR\_PlayBackByTime  
[in] IpRecordLabel      Record label  
[out] IpLabelIdentify      Identify after inserting the label

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)  
to get the error code.

**Remarks:** Record label can help the user to note the personnel or live information of  
some time point, and then can search or locate the record file by the label.

[Return to index](#)

#### 5.16.2 Modify the record label: **NET\_DVR\_ModifyRecordLabel**

**API:** BOOL NET\_DVR\_ModifyRecordLabel(LONG IUserID,  
NET\_DVR\_MOD\_LABEL\_PARAM \* IpModLabelParam)

**Parameters:** [in] IUserID      The return value of NET\_DVR\_PlayBackByName  
or NET\_DVR\_PlayBackByTime  
[in] IpModLabelParam      Label modification parameter

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)  
to get the error code.

**Remarks:**

[Return to index](#)

#### 5.16.3 Delete the record label: **NET\_DVR\_DelRecordLabel**

**API:** BOOL NET\_DVR\_DelRecordLabel(LONG IUserID,  
NET\_DVR\_DEL\_LABEL\_PARAM\* IpDelLabelParam)

**Parameters:** [in] IUserID      The return value of NET\_DVR\_PlayBackByName  
or NET\_DVR\_PlayBackByTime  
[in] IpDelLabelParam      The label to be deleted

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## Search the record label

### 5.16.4 Start searching the record label: **NET\_DVR\_FindRecordLabel**

**API:** LONG NET\_DVR\_FindRecordLabel(LONG IUserID, LPNET\_DVR\_FIND\_LABEL lpFindLabel)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_PlayBackByName or NET\\_DVR\\_PlayBackByTime](#)  
                   [in] lpFindLabel                [The structure of label information to be found](#)

**Return:** Return -1 if it is failed, and the other values could be used as a parameter of NET\_DVR\_FindNextLabel. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It supports getting max 4000 labels every time.

[Return to index](#)

### 5.16.5 Get the record label one by one: **NET\_DVR\_FindNextLabel**

**API:** LONG NET\_DVR\_FindNextLabel(LONG IFindHandle, LPNET\_DVR\_FINDLABEL\_DATA lpFindData)

**Parameters:** [in] IFindHandle                [The return value of NET\\_DVR\\_FindRecordLabel](#)  
                   [in] lpFindData                [Label information](#)

**Return:** Return -1 if it is failed, and the other values stand for current state or other information, details listed below:

Macro Definition	Value	Implication
NET_DVR_FILE_SUCCESS	1000	Get the file information successfully
NET_DVR_FILE_NOFIND	1001	No file found
NET_DVR_ISFINDING	1002	Searching, please wait
NET_DVR_NOMOREFILE	1003	No more file found, search is finished
NET_DVR_FILE_EXCEPTION	1004	Exception when search file

Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this function, please call NET\_DVR\_FindRecordLabel to get current handle firstly. The interface only supports to get one label. We should call the interface repetitively to get all labels.

[Return to index](#)

### 5.16.6 Stop record label: **NET\_DVR\_StopFindLabel**

**API:** BOOL NET\_DVR\_StopFindLabel(LONG IFindHandle)

**Parameters:** [in] IFindHandle [The return value of NET\\_DVR\\_FindRecordLabel](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.17 Operation with Remote Pictures Captured in the Device: Search, Playback, or Backup

### Search pictures

#### 5.17.1 Search pictures by type and time: **NET\_DVR\_FindPicture**

**API:** LONG NET\_DVR\_FindPicture(LONG IUserID, NET\_DVR\_FIND\_PICTURE\_PARAM\* pFindParam)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] pFindParam [The information structure of the picture to be found](#)

**Return:** Return -1 if it is failed, and the other values could be used as a parameter of NET\_DVR\_CloseFindPicture. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The API has assigned the picture type and time-range to search. After calling it successfully, we can call NET\_DVR\_FindNextPicture to get the picture information. This API is used to search the pictures captured and saved in the device, and it supports to set capturing schedule (NET\_DVR\_SCHED\_CAPTURECFG) by the API NET\_DVR\_SetDVRConfig.

[Return to index](#)

#### 5.17.2 Get the picture one by one: **NET\_DVR\_FindNextPicture**

**API:** LONG NET\_DVR\_FindNextPicture(LONG IFindHandle, LPNET\_DVR\_FIND\_PICTURE lpFindData)

**Parameters:** [in] IFindHandle [Handle of file searching, the return value of](#)

[out] IpFindData [NET\\_DVR\\_FindPicture](#)  
[Pointer for saving the searched picture information](#)

**Return:** Return -1 if it is failed, and the other values stand for current state or other information, details listed below:

Macro Definition	Value	Implication
NET_DVR_FILE_SUCCESS	1000	Get the file information successfully
NET_DVR_FILE_NOFIND	1001	No file found
NET_DVR_ISFINDING	1002	Searching, please wait
NET_DVR_NOMOREFILE	1003	No more file found, search is finished
NET_DVR_FILE_EXCEPTION	1004	Exception when search file

Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling this API, please call NET\_DVR\_FindPicture to get current handle firstly. The API only supports to get one picture. We should call the API repetitively to get all pictures.

[Return to index](#)

### 5.17.3 Close searching and release the resource:

#### NET\_DVR\_CloseFindPicture

**API:** BOOL NET\_DVR\_CloseFindPicture(LONG IFindHandle)

**Parameters:** [in] IFindHandle [Handle of file searching, the return value of NET\\_DVR\\_FindPicture](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

[Return to index](#)

### Playback (download) the pictures

#### 5.17.4 Playback the pictures: NET\_DVR\_GetPicture\_V30

**API:** BOOL NET\_DVR\_GetPicture\_V30(LONG IUserID, char \*sDVRFileName, char \*sSavedFileBuf, DWORD dwBufLen, DWORD \*lpdwRetLen)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] sDVRFileName [File name of the picture to be downloaded](#)  
[in] sSavedFileName [The buffer to save the picture data](#)  
[in] dwBufLen [The buffer size](#)

[out] lpdwRetLen      [The size of the returned data, it can't be NULL](#)

**Return:**      Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**      Please call [NET\\_DVR\\_FindPicture](#) to search the pictures and get the file name by [NET\\_DVR\\_FindNextPicture](#).

[Return to index](#)

## Backup the pictures

### 5.17.5 Backup the picture: **NET\_DVR\_BackupPicture**

**API:**      LONG NET\_DVR\_BackupPicture(LONG IUserID,  
NET\_DVR\_BACKUP\_PICTURE\_PARAM \*lpBackupPicture)

**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] lpBackupPicture      [Parameter structure of picture backup](#)

**Return:**      Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**      This API is used to remotely start the picture backup in the device.

[Return to index](#)

### 5.17.6 Get the backup progress: **NET\_DVR\_GetBackupProgress**

**API:**      BOOL NET\_DVR\_GetBackupProgress(LONG IHandle, DWORD\* pState)

**Parameters:** [in] IHandle      [The return value of NET\\_DVR\\_BackupByName or NET\\_DVR\\_BackupByTime.](#)  
[out] pState      [Current backup progress, value range: \(0,100\). For the other pState value, please refer to the list table below.](#)

Macro Definition	Value	Implication
BACKUP_SUCCESS	100	Backup finished
BACKUP_CHANGE_DEVICE	101	Backup device is full, please change new one to continue to backup
BACKUP_SEARCH_DEVICE	300	Be searching backup device
BACKUP_SEARCH_FILE	301	Be searching recording files
BACKUP_EXCEPTION	400	Backup exception
BACKUP_FAIL	500	Backup failed
BACKUP_TIME_SEG_NO_FILE	501	No file in the period

<b>BACKUP_NO_RESOURCE</b>	502	Can't get resource
<b>BACKUP_DEVICE_LOW_SPACE</b>	503	Disk space on the backup device not enough
<b>BACKUP_DISK_FINALIZED</b>	504	Backup disk finalized
<b>BACKUP_DISK_EXCEPTION</b>	505	Backup device exception
<b>BACKUP_DEVICE_NOT_EXIST</b>	506	Backup device not exist
<b>BACKUP_OTNER_BACKUP_WORK</b>	507	Other backup process is running
<b>BACKUP_USER_NO_RIGHT</b>	508	User has no right
<b>BACKUP_OPERATE_FAIL</b>	509	Operation failed

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** If the progress is 100 or there is a backup exception, please call [NET\\_DVR\\_StopBackup](#) to stop backup.

[Return to index](#)

### 5.17.7 Stop backup: **NET\_DVR\_StopBackup**

**API:** BOOL NET\_DVR\_StopBackup(LONG IHandle)

**Parameters:** [in] IHandle [The return value of NET\\_DVR\\_BackupPicture](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.18 Manual Recording

### 5.18.1 Remotely start manual recording in the device:

#### **NET\_DVR\_StartDVRRecord**

**API:** BOOL NET\_DVR\_StartDVRRecord(LONG IUserID, LONG IChannel, LONG IRecordType)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] IChannel [Channel number:](#)  
*0x00ff means all analog channels,*  
*0xff00 means all digital channels,*  
*0xffff means all analog and digital channels*  
[in] IRecordType [Recording type: 0- manual, 1- alarm, 2- postback,](#)

3- signal, 4- motion detection, 5- tampering

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Not all devices support to set IRecordType. If the device doesn't support it, the type will default to manual recording.

If the channel has opened the schedule recording, and then call this API to start manual recording, the operation will be invalid, and the device will keep the schedule recording. At the moment, if call [NET\\_DVR\\_GetDVRWorkState\\_V30](#) to get the recording state, the value of byRecordStatic (parameter of the structre NET\_DVR\_CHANNELSTATE\_V30) will be still 1 (being recording). Then if call [NET\\_DVR\\_StopDVRRecord](#) to stop manual recording, it will stop the schedule recording. Afterward, if call [NET\\_DVR\\_StartDVRRecord](#) again, the device will start manual recording. Then, if call [NET\\_DVR\\_StopDVRRecord](#) to stop the manual recording, and reboot the device, the device will resume the schedule recording.

[Return to index](#)

### 5.18.2 Remotely stop manual recording: **NET\_DVR\_StopDVRRecord**

**API:** BOOL NET\_DVR\_StopDVRRecord(LONG IUserID, LONG IChannel)

**Parameters:** [in] IUserID The return value of [NET\\_DVR\\_Login\\_V30](#)

[in] IChannel Channel number:  
*0x00ff means all analog channels,*  
*0xff00 means all digital channels,*  
*0xffff means all analog and digital channels*

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.19 Alarm of Arming Mode

Set the callback function of the alarm message uploaded by the device

### 5.19.1 Register the callback function to receive the alarm message:

#### **NET\_DVR\_SetDVRMessageCallBack\_V30**

**API:** BOOL NET\_DVR\_SetDVRMessageCallBack\_V30(MSGCallBack

fMessageCallBack, void\* pUser)

**Parameters:** [in] fMessageCallBack      [Callback function](#)

[in] pUser      [User data](#)

```
typedef void(CALLBACK *MSGCallBack)(LONG ICommand,NET_DVR_ALARMER
*pAlarmer, char *pAlarmInfo,DWORD dwBufLen,void *pUser)
```

[out] ICommand      [Message type, see to the list table below.](#)

[out] pAlarmer      [The device that uploads the message](#)

[out] pAlarmInfo      [The buffer to save uploaded alarm message](#)

[out] dwBufLen      [The buffer size](#)

[out] pUser      [User data](#)

Macro Definition	Value	Implication
COMM_ALARM	0x1100	Alarm message uploading of the devices supported by the SDK version lower than V3.0
COMM_ALARM_V30	0x4000	Alarm message uploading of the devices supported by the SDK version upper than V3.0
COMM_IPCCFG	0x4001	Alarm message uploading of the hybrid DVR when the IPC access configuration changes
COMM_IPCCFG_V31	0x4002	Alarm message uploading of the hybrid DVR when the IPC access configuration changes(extended)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The first parameter(ICommand)and the third parameter (pAlarmInfo)is closely related, as follows:

ICommand	Uploaded Content	pAlarmInfo
COMM_ALARM	Alarm message of the devices supported by the SDK version lower than V3.0	<a href="#">NET_DVR_ALARMINFO</a>
COMM_ALARM_V30	Alarm message of the devices supported by the SDK version lower than V3.0	<a href="#">NET_DVR_ALARMINFO_V30</a>
COMM_IPCCFG	Alarm message of the hybrid DVR when the IPC access configuration changes	<a href="#">NET_DVR_IPALARMINFO</a>
COMM_IPCCFG_V31	Alarm message of the hybrid DVR when the IPC access configuration changes(extended)	<a href="#">NET_DVR_IPALARMINFO_V31</a>

[Return to index](#)



## Arm and disarm

### 5.19.2 Setup the uploading channel of alarm message:

#### NET\_DVR\_SetupAlarmChan\_V30

**API:** LONG NET\_DVR\_SetupAlarmChan\_V30(LONG IUserID)  
**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
**Return:** -1 means false, other values are as handle parameters of function  
NET\_DVR\_CloseAlarmChan. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:** Before calling this API to start arming, it requires to call  
[NET\\_DVR\\_SetDVRMessageCallBack\\_V30](#) to get the uploaded alarm message.

[Return to index](#)

### 5.19.3 Close the uploading channel of alarm message:

#### NET\_DVR\_CloseAlarmChan\_V30

**API:** BOOL NET\_DVR\_CloseAlarmChan\_V30(LONG IAlarmHandle)  
**Parameters:** [in] IAlarmHandle      [The return value of](#)  
[NET\\_DVR\\_SetupAlarmChan\\_V30](#)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to  
get the error code.  
**Remarks:**

[Return to index](#)

## 5.20 Alarm of Listening Mode

### Listening

#### 5.20.1 Start listening to receive the alarm message uploaded actively

##### by the device: NET\_DVR\_StartListen\_V30

**API:** LONG NET\_DVR\_StartListen\_V30(char \*sLocalIP, WORD wLocalPort,  
MSGCallBack DataCallback, void\* pUserData)  
**Parameters:** [in] sLocalIP      [Local IP, can set to NULL](#)

[in] wLocalPort

Local listening port number of PC, configured by user, should be consistent with that set in device

[in] DataCallback

Callback function, can't be NULL

[in] pUserData

User data

typedef void(CALLBACK \*MSGCallBack)(LONG ICommand,NET\_DVR\_ALARMER \*pAlarmer,char \*pAlarmInfo,DWORD dwBufLen,void \*pUser)

[out] ICommand

Message type, see to the list table below.

[out] pAlarmer

The device that uploads the message

[out] pAlarmInfo

The buffer to save uploaded alarm message

[out] dwBufLen

The buffer size

[out] pUser

User data

Macro Definition	Value	Implication
COMM_ALARM	0x1100	Alarm message uploading of the devices supported by the SDK version lower than V3.0
COMM_ALARM_V30	0x4000	Alarm message uploading of the devices supported by the SDK version upper than V3.0
COMM_IPCCFG	0x4001	Alarm message uploading of the hybrid DVR when the IPC access configuration changes
COMM_IPCCFG_V31	0x4002	Alarm message uploading of the hybrid DVR when the IPC access configuration changes(extended)

**Return:** Return -1 if it is failed, other values are as handle parameters of function NET\_DVR\_StopListen\_V30. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The total number of listening supported by the SDK is 512.

In order to make PC able to receive alarm message uploaded actively by device, it requires to set "remote management host IP address" or "remote alarm host IP address" in network configuration of device to same with the IP address of PC (the parameter *sLocalIP* in the API) , and set "remote management host port" or "remote alarm host port" to same with the listening port of the PC (the parameter *wLocalPort* in the API)

**The callback in the API is higher priority than other callback function. That is, if the callback function set here, other callback function will not able to receive the alarm information.**

The first parameter(ICommand) and third parameter(pAlarmInfo) of this interface callback function is related:

ICommand	Uploaded Content	pAlarmInfo
COMM_ALARM	Alarm message of the devices supported by the SDK version lower than V3.0	<a href="#">NET_DVR_ALARMINFO</a>
COMM_ALARM_V30	Alarm message of the devices supported by the SDK version lower than V3.0	<a href="#">NET_DVR_ALARMINFO_V30</a>

COMM_IPCCFG	Alarm message of the hybrid DVR when the IPC access configuration changes	<a href="#">NET_DVR_IPALARMINFO</a>
COMM_IPCCFG_V31	Alarm message of the hybrid DVR when the IPC access configuration changes(extended)	<a href="#">NET_DVR_IPALARMINFO_V31</a>

[Return to index](#)

## 5.20.2 Stop listening (support multi-thread): **NET\_DVR\_StopListen\_V30**

**API:** BOOL NET\_DVR\_StopListen\_V30(LONG IListenHandle)

**Parameters:** [in] IListenHandle [Listening handle, the return value of NET\\_DVR\\_StartListen\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.21 Remote Panel Control

### 5.21.1 Remotely control the keys on the panel: **NET\_DVR\_ClickKey**

**API:** BOOL NET\_DVR\_ClickKey(LONG IUserID, LONG IKeyIndex)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] IKeyIndex [The index of keys on the panel](#)

Macro Definition	Value	Implication
KEY_CODE_1	1	Button1
KEY_CODE_2	2	Button2
KEY_CODE_3	3	Button3
KEY_CODE_4	4	Button4
KEY_CODE_5	5	Button5
KEY_CODE_6	6	Button6
KEY_CODE_7	7	Button7
KEY_CODE_8	8	Button8
KEY_CODE_9	9	Button9
KEY_CODE_0	10	Button0
KEY_CODE_POWER	11	POWER
KEY_CODE_MENU	12	MENU

KEY_CODE_ENTER	13	ENTER
KEY_CODE_CANCEL	14	ESCS
KEY_CODE_UP/KEY_PTZ_UP_START	15	"UP" or "Tilt UP Start"
KEY_CODE_DOWN/KEY_PTZ_DOWN_START	16	"Down" or "Tilt Down Start"
KEY_CODE_LEFT/KEY_PTZ_LEFT_START	17	"Left" or "Pan Left Start"
KEY_CODE_RIGHT/KEY_PTZ_RIGHT_START	18	"Right" or "Pan Right Start"
KEY_CODE_EDIT/KEY_PTZ_AP1_START	19	"EDIT" or "Iris + Start"
KEY_CODE_ADD	20	Add
KEY_CODE_MINUS	21	Minus
KEY_CODE_PLAY	22	"PLAY"
KEY_CODE_REC	23	"REC"
KEY_CODE_PAN/KEY_PTZ_AP2_START	24	"PAN" or "Iris - Start"
KEY_CODE_M/KEY_PTZ_FOCUS2_START	25	"Multi preview" or "Focus - Start"
KEY_CODE_A/KEY_PTZ_FOCUS1_START	26	"Input mode(A)" or "Focus + Start"
KEY_CODE_F1	27	"Voice Talk"
KEY_CODE_F2	28	"System information"
KEY_PTZ_UP_STOP	32	"Tilt UP End"
KEY_PTZ_DOWN_STOP	33	"Tilt Down End"
KEY_PTZ_LEFT_STOP	34	"Pan Left End"
KEY_PTZ_RIGHT_STOP	35	"Pan Right End"
KEY_PTZ_AP1_STOP	36	"Iris + End"
KEY_PTZ_AP2_STOP	37	"Iris - End"
KEY_PTZ_FOCUS1_STOP	38	"Focus + End"
KEY_PTZ_FOCUS2_STOP	39	"Focus - End"
KEY_PTZ_B1_START	40	"Zoom + Start"
KEY_PTZ_B1_STOP	41	"Zoom + End"
KEY_PTZ_B2_START	42	"Zoom - Start"
KEY_PTZ_B2_STOP	43	"Zoom - End"
KEY_CODE_11	44	Button11
KEY_CODE_12	45	Button12
KEY_CODE_13	46	Button13
KEY_CODE_14	47	Button14
KEY_CODE_15	48	Button15

KEY_CODE_16	49	Button16
-------------	----	----------

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.21.2 Disable the local control of the device panel:

#### NET\_DVR\_LockPanel

**API:** BOOL NET\_DVR\_LockPanel(LONG IUserID)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.21.3 Resume the local control of the device panel:

#### NET\_DVR\_UnLockPanel

**API:** BOOL NET\_DVR\_UnLockPanel(LONG IUserID)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.22 PTZ Control

### PTZ control operation

#### 5.22.1 PTZ control (requires starting live view firstly):

#### NET\_DVR\_PTZControl

**API:** BOOL NET\_DVR\_PTZControl(LONG IRealHandle,DWORD

dwPTZCommand,DWORD dwStop)

**Parameters:** [in] IRealHandle      The return value of NET\_DVR\_RealPlay\_V30  
 [in] dwPTZCommand      PTZ control command, see to the list table  
 [in] dwStop      PTZ stop or start operation: 0-start, 1-stop

Macro Definition	Value	Implication
LIGHT_PWRON	2	Connect lighting power
WIPER_PWRON	3	Turn on wiper switch
FAN_PWRON	4	Turn on fan switch
HEATER_PWRON	5	Turn on heater switch
AUX_PWRON1	6	Turn on auxiliary device switch
AUX_PWRON2	7	Turn on auxiliary device switch
ZOOM_IN	11	Focal distance enlarge(Magnification enlarge)
ZOOM_OUT	12	Focal distance decrease(Magnification decrease)
FOCUS_NEAR	13	Focus front
FOCUS_FAR	14	Focus back
IRIS_OPEN	15	Aperture enlarge
IRIS_CLOSE	16	Aperture narrow
TILT_UP	21	Tilt up
TILT_DOWN	22	Tilt down
PAN_LEFT	23	Pan left
PAN_RIGHT	24	Pan right
UP_LEFT	25	Tilt up and pan left
UP_RIGHT	26	Tilt up and pan right
DOWN_LEFT	27	Tilt down and pan left
DOWN_RIGHT	28	Tilt down and pan right
PAN_AUTO	29	PTZ scans left and right automatically

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every movement of operating PTZ needs to call the interface twice: start and stop control, decided by the last parameter(dwStop) in the interface.

It needs to start preview before calling this interface. Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.

If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it is not able to control PTZ.

Default: PTZ turns around at the maximum speed.

[Return to index](#)**5.22.2 PTZ control (not require live view before calling it):****NET\_DVR\_PTZControl\_Other**

**API:** BOOL NET\_DVR\_PTZControl\_Other(LONG IUserID, LONG IChannel, DWORD dwPTZCommand, DWORD dwStop)

**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] IChannel      [Channel number](#)  
[in] dwPTZCommand      [PTZ control command, see to the list table](#)  
[in] dwStop      [PTZ stop or start operation: 0-start, 1-stop](#)

Macro Definition	Value	Implication
LIGHT_PWRON	2	Connect lighting power
WIPER_PWRON	3	Turn on wiper switch
FAN_PWRON	4	Turn on fan switch
HEATER_PWRON	5	Turn on heater switch
AUX_PWRON1	6	Turn on auxiliary device switch
AUX_PWRON2	7	Turn on auxiliary device switch
ZOOM_IN	11	Focal distance enlarge(Magnification enlarge)
ZOOM_OUT	12	Focal distance decrease(Magnification decrease)
FOCUS_NEAR	13	Focus front
FOCUS_FAR	14	Focus back
IRIS_OPEN	15	Aperture enlarge
IRIS_CLOSE	16	Aperture narrow
TILT_UP	21	Tilt up
TILT_DOWN	22	Tilt down
PAN_LEFT	23	Pan left
PAN_RIGHT	24	Pan right
UP_LEFT	25	Tilt up and pan left
UP_RIGHT	26	Tilt up and pan right
DOWN_LEFT	27	Tilt down and pan left
DOWN_RIGHT	28	Tilt down and pan right
PAN_AUTO	29	PTZ scans left and right automatically

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every movement of operating PTZ needs to call the interface twice: start and stop control, decided by the last parameter(dwStop) in the interface.

It needs to start preview before calling this interface. Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.

If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it is not able to control PTZ.

Default: PTZ turns around at the maximum speed.

If call NET\_DVR\_PTZControl to control PTZ, after the device receive the command and PTZ runs according to the command, it will return success to client when PTZ runs normally, and return false when PTZ failed to run. While, if call NET\_DVR\_PTZControl\_Other, it will return success immediately after the device receive the command.

[Return to index](#)

### 5.22.3 PTZ control with speed (requires starting live view firstly):

#### NET\_DVR\_PTZControlWithSpeed

**API:** BOOL NET\_DVR\_PTZControlWithSpeed(LONG lRealHandle, DWORD dwPTZCommand, DWORD dwStop, DWORD dwSpeed)

**Parameters:**

- [in] lRealHandle The return value of NET\_DVR\_RealPlay\_V30.
- [in] dwPTZCommand PTZ control command, see to the list table.
- [in] dwStop PTZ stop or start operation: 0-start, 1-stop.
- [in] dwSpeed PTZ control speed, please set it according to different speed control value of PTZ decoder. Value range: [1,7].

Macro Definition	Value	Implication
LIGHT_PWRON	2	Connect lighting power
WIPER_PWRON	3	Turn on wiper switch
FAN_PWRON	4	Turn on fan switch
HEATER_PWRON	5	Turn on heater switch
AUX_PWRON1	6	Turn on auxiliary device switch
AUX_PWRON2	7	Turn on auxiliary device switch
ZOOM_IN	11	Focal distance enlarge(Magnification enlarge)
ZOOM_OUT	12	Focal distance decrease(Magnification decrease)
FOCUS_NEAR	13	Focus front
FOCUS_FAR	14	Focus back
IRIS_OPEN	15	Aperture enlarge



IRIS_CLOSE	16	Aperture narrow
TILT_UP	21	Tilt up
TILT_DOWN	22	Tilt down
PAN_LEFT	23	Pan left
PAN_RIGHT	24	Pan right
UP_LEFT	25	Tilt up and pan left
UP_RIGHT	26	Tilt up and pan right
DOWN_LEFT	27	Tilt down and pan left
DOWN_RIGHT	28	Tilt down and pan right
PAN_AUTO	29	PTZ scans left and right automatically

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every movement of operating PTZ needs to call the API twice: start and stop control, decided by the last parameter(dwStop) in the API.  
It needs to start live view before calling this API. Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.  
If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it will not able to control PTZ.

[Return to index](#)

## 5.22.4 PTZ control with speed (not require live view before calling it):

### NET\_DVR\_PTZControlWithSpeed\_Other

**API:** BOOL NET\_DVR\_PTZControlWithSpeed(LONG IUserID, LONG IChannel, DWORD dwPTZCommand, DWORD dwStop, DWORD dwSpeed)

**Parameters:**

- [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30.](#)
- [in] IChannel      [Channel number.](#)
- [in] dwPTZCommand      [PTZ control command, see to the list table.](#)
- [in] dwStop      [PTZ stop or start operation: 0-start, 1-stop.](#)
- [in] dwSpeed      [PTZ control speed, please set it according to different speed control value of PTZ decoder. Value range: \[1,7\].](#)

Macro Definition	Value	Implication
LIGHT_PWRON	2	Connect lighting power
WIPER_PWRON	3	Turn on wiper switch

FAN_PWRON	4	Turn on fan switch
HEATER_PWRON	5	Turn on heater switch
AUX_PWRON1	6	Turn on auxiliary device switch
AUX_PWRON2	7	Turn on auxiliary device switch
ZOOM_IN	11	Focal distance enlarge(Magnification enlarge)
ZOOM_OUT	12	Focal distance decrease(Magnification decrease)
FOCUS_NEAR	13	Focus front
FOCUS_FAR	14	Focus back
IRIS_OPEN	15	Aperture enlarge
IRIS_CLOSE	16	Aperture narrow
TILT_UP	21	Tilt up
TILT_DOWN	22	Tilt down
PAN_LEFT	23	Pan left
PAN_RIGHT	24	Pan right
UP_LEFT	25	Tilt up and pan left
UP_RIGHT	26	Tilt up and pan right
DOWN_LEFT	27	Tilt down and pan left
DOWN_RIGHT	28	Tilt down and pan right
PAN_AUTO	29	PTZ scans left and right automatically

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every movement of operating PTZ needs to call the API twice: start and stop control, decided by the last parameter(dwStop) in the API.  
It doesn't need to start live view before calling this API. Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.  
If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it will not able to control PTZ.

[Return to index](#)

## PTZ preset operation

### 5.22.5 PTZ preset operation (requires starting live view firstly):

#### NET\_DVR\_PTZPreset

**API:** BOOL NET\_DVR\_PTZPreset(LONG IRealHandle,DWORD dwPTZPresetCmd,DWORD dwPresetIndex)

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] dwPTZPresetCmd      [The command to operate preset, see to the list table below.](#)  
[in] dwPresetIndex      [The number of preset, it supports max 255 presets, the number starts from 1](#)

Macro Definition	Value	Implication
SET_PRESET	8	Set preset point
CLE_PRESET	9	Clear preset point
GOTO_PRESET	39	Goto preset point

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.  
If PTZ decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter.  
If the PTZ doesn't support the parameter, it will not able to control PTZ.

[Return to index](#)

### 5.22.6 PTZ preset operation: NET\_DVR\_PTZPreset\_Other

**API:** BOOL NET\_DVR\_PTZPreset\_Other(LONG IUserID, LONG IChannel, DWORD dwPTZPresetCmd, DWORD dwPresetIndex)

**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] IChannel      [Channel number](#)  
[in] dwPTZPresetCmd      [The command to operate preset, see to the list table below.](#)  
[in] dwPresetIndex      [The number of preset, it supports max 255 presets, the number starts from 1](#)

Macro Definition	Value	Implication
SET_PRESET	8	Set preset point

<b>CLE_PRESET</b>	9	Clear preset point
<b>GOTO_PRESET</b>	39	Goto preset point

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.

If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it will not able to control PTZ.

If call NET\_DVR\_PTZPreset to control PTZ, after the device receive the command and PTZ runs according to the command, it will return success to client when PTZ runs normally, and return false when PTZ failed to run. While, if call NET\_DVR\_PTZPreset\_Other, it will return success immediately after the device receive the command.

[Return to index](#)

## PTZ Patrol operation

### 5.22.7 PTZ patrol operation (requires starting live view firstly):

#### NET\_DVR\_PTZPCruise

**API:** BOOL NET\_DVR\_PTZCruise(LONG IRealHandle,DWORD dwPTZCruiseCmd,BYTE byCruiseRoute, BYTE byCruisePoint, WORD wInput)

**Parameters:**

- [in] IRealHandle      The return value of NET\_DVR\_RealPlay\_V30
- [in] dwPTZCruiseCmd      The commands to control PTZ patrol, see to the list table.
- [in] byCruiseRoute      The number of patrol route, it supports maximum 32 routes, the number starts from 1
- [in] byCruisePoint      The number of preset, it supports maximum 32 presets, the number starts from 1
- [in] wInput      The value is different for different commands, preset(maximum is 128), dwell time (maximum is 255), Speed (maximum is 40)

Macro Definition	Value	Implication
<b>FILL_PRE_SEQ</b>	30	Add preset to the patrol sequence
<b>SET_SEQ_DWELL</b>	31	Set dwell time of the patrol point
<b>SET_SEQ_SPEED</b>	32	Set patrol speed
<b>CLE_PRE_SEQ</b>	33	Delete preset point from the patrol sequence

<b>RUN_SEQ</b>	37	Start running the patrol
<b>STOP_SEQ</b>	38	Stop running the patrol

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.  
If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it will not able to control PTZ.

[Return to index](#)

### 5.22.8 PTZ patrol operation: **NET\_DVR\_PTZCruise\_Other**

**API:** BOOL NET\_DVR\_PTZCruise\_Other(LONG IUserID, LONG IChannel, DWORD dwPTZCruiseCmd, BYTE byCruiseRoute, BYTE byCruisePoint, WORD wInput)

**Parameters:**

- [in] IUserID                      The return value of [NET\\_DVR\\_Login\\_V30](#)
- [in] IChannel                    Channel number
- [in] dwPTZCruiseCmd           The commands to control PTZ patrol, see to the list table.
- [in] byCruiseRoute            The number of patrol route, it supports maximum 32 routes, the number starts from 1
- [in] byCruisePoint            The number of preset, it supports maximum 32 presets, the number starts from 1
- [in] wInput                      The value is different for different commands, preset(maximum is 128), dwell time (maximum is 255), Speed (maximum is 40)

Macro Definition	Value	Implication
<b>FILL_PRE_SEQ</b>	30	Add preset into patrol sequence
<b>SET_SEQ_DWELL</b>	31	Set dwell time of the patrol point
<b>SET_SEQ_SPEED</b>	32	Set patrol speed
<b>CLE_PRE_SEQ</b>	33	Delete preset from the patrol sequence
<b>RUN_SEQ</b>	37	Start running the patrol
<b>STOP_SEQ</b>	38	Stop running the patrol

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.  
If decoder configuration of the current device doesn't match the PTZ device, it

needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it will not be able to control PTZ.

[Return to index](#)

## PTZ pattern operation

### 5.22.9 PTZ pattern operation(requires starting live view firstly):

#### NET\_DVR\_PTZTrack

**API:** BOOL NET\_DVR\_PTZTrack(LONG IRealHandle, DWORD dwPTZTrackCmd)

**Parameters:** [in] IRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30.](#)  
                   [in] dwPTZTrackCmd      [The command to control PTZ pattern, see to the list table below.](#)

Macro Definition	Value	Implication
STA_MEM_CRUISE	34	Start recording pattern
STO_MEM_CRUISE	35	Stop recording pattern
RUN_CRUISE	36	Start running according to the pattern

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.  
 If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it will not be able to control PTZ.

[Return to index](#)

### 5.22.10 PTZ pattern operation: NET\_DVR\_PTZTrack\_Other

**API:** BOOL NET\_DVR\_PTZTrack\_Other(LONG IUserID, LONG IChannel, DWORD dwPTZTrackCmd)

**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30.](#)  
                   [in] IChannel      [Channel number](#)  
                   [in] dwPTZTrackCmd      [The command to control PTZ pattern, see to the list table below.](#)

Macro Definition	Value	Implication
STA_MEM_CRUISE	34	Start recording pattern

STO_MEM_CRUISE	35	Stop recording pattern
RUN_CRUISE	36	Start running according to the pattern

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Every operation command corresponds to the control code between the device and the PTZ, and the device will send control code to PTZ based on the current decoder type and address.

If decoder configuration of the current device doesn't match the PTZ device, it needs to re-configure the decoder parameter. If the PTZ doesn't support the parameter, it will not able to control PTZ.

If call NET\_DVR\_PTZTrack to control PTZ, after the device receive the command and PTZ runs according to the command, it will return success to client when PTZ runs normally, and return false when PTZ failed to run. While, if call NET\_DVR\_PTZTrack\_Other, it will return success immediately after the device receive the command.

[Return to index](#)

## Transparent PTZ Control

### 5.22.11 Transparent PTZ control(requires starting live view firstly):

#### NET\_DVR\_TransPTZ

**API:** BOOL NET\_DVR\_TransPTZ(LONG lRealHandle, char \*pPTZCodeBuf, DWORD dwBufSize)

**Parameters:** [in] lRealHandle      [The return value of NET\\_DVR\\_RealPlay\\_V30](#)  
[in] pPTZCodeBuf      [Pointer of the buffer to save PTZ control code](#)  
[in] dwBufSize      [Length of PTZ control code](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It supports sending the control command code directly to the PTZ decoder through the device by calling this API, and it's not necessary to configure the decoder parameter in the device.

[Return to index](#)

### 5.22.12 Transparent PTZ control: NET\_DVR\_TransPTZ\_Other

**API:** BOOL NET\_DVR\_TransPTZ(LONG lUserID, LONG lChannel, char \*pPTZCodeBuf, DWORD dwBufSize)

**Parameters:** [in] lUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)

[in] IChannel                      Channel number  
 [in] pPTZCodeBuf                Pointer of the buffer to save PTZ control code  
 [in] dwBufSize                   Length of PTZ control code

**Return:**                      Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**                It supports sending the control command code directly to the PTZ decoder through the device by calling this API, and it's not necessary to configure the decoder parameter in the device.

[Return to index](#)

## PTZ Region Zoom control

### 5.22.13 PTZ control to enlarge or narrow the selected image region

(requires starting live view firstly): **NET\_DVR\_PTZSelZoomIn**

**API:**                      BOOL    NET\_DVR\_PTZSelZoomIn(LONG IRealHandle,  
                                  LPNET\_DVR\_POINT\_FRAME pStruPointFrame);

**Parameters:**    [in] IRealHandle                      The return value of NET\_DVR\_RealPlay\_V30  
                          [in] pStruPointFrame                      Image region position

**Return:**                      Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**                This API is used to realize 3D intelligent positioning function, and it will take effect just when the front-end device supports it.

If suppose the frame of current live view image is 352 \* 288, the origin point is the upper left corner of the display box. The calculation method of coordinate value in parameter pStruPointFrame (here take X-axis as an example):  
 $xTop = (\text{upper left point of the region currently selected by mouse}) * 255/352$ .  
 The zoom-in condition:  $xBottom - xTop > 2$ .  
 The zoom-out condition:  $xBottom - xTop > 0$  and  $yBottom - yTop > 0$ .

[Return to index](#)

### 5.22.14 PTZ control to enlarge or narrow the selected image region:

**NET\_DVR\_PTZSelZoomIn\_Ex**

**API:**                      BOOL    NET\_DVR\_PTZSelZoomIn\_EX(LONG IUserID, LONG IChannel,  
                                  LPNET\_DVR\_POINT\_FRAME pStruPointFrame)

**Parameters:**    [in] IUserID                              The return value of NET\_DVR\_Login\_V30  
                          [in] IChannel                              Channel number



[in] pStruPointFrame [Image region position](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to realize 3D intelligent positioning function, and it will take effect just when the front-end device supports it.

If suppose the frame of current live view image is 352 \* 288, the origin point is the upper left corner of the display box. The calculation method of coordinate value in parameter pStruPointFrame (here take X-axis as an example):

$xTop = (\text{upper left point of the region currently selected by mouse}) * 255/352.$

The zoom-in condition:  $xBottom - xTop > 2.$

The zoom-out condition:  $xBottom - xTop > 0$  and  $yBottom - yTop > 0.$

[Return to index](#)

## 5.23 Voice Talk, Forwarding and Broadcast

### Voice talk

#### 5.23.1 Start voice talk: **NET\_DVR\_StartVoiceCom\_V30**

**API:** LONG NET\_DVR\_StartVoiceCom\_V30(LONG IUserID, DWORD dwVoiceChan, BOOL bNeedCBNoEncData, fVoiceDataCallBack cbVoiceDataCallBack, void\* pUser)

**Parameters:**

[in] IUserID	<a href="#">The return value of NET_DVR_Login_V30</a>
[in] dwVoiceChan	<a href="#">Audio channel number, starts from 1</a>
[in] bNeedCBNoEncData	<a href="#">The audio type that you want to callback:</a> <a href="#">0- decoded audio data,</a> <a href="#">1- PCM original data before encoded</a>
[in] fVoiceDataCallBack	<a href="#">Audio data callback function</a>
[in] pUser	<a href="#">User data</a>

```
typedef void(CALLBACK *fVoiceDataCallBack)(LONG IVoiceComHandle, char *pRecvDataBuffer, DWORD dwBufSize, BYTE byAudioFlag, void *pUser)
```

[out] IVoiceComHandle	<a href="#">The return value of</a> <a href="#">NET_DVR_StartVoiceCom_V30</a>
[out] pRecvDataBuffer	<a href="#">Pointer of the buffer to save the audio data</a>
[out] dwBufSize	<a href="#">The size of audio data</a>
[out] byAudioFlag	<a href="#">Audio data type:</a> <a href="#">0- collected by local PC, 1- sent from the device</a>
[out] pUser	<a href="#">User data</a>

**Return:** Return -1 if it is failed, and other values are as handle parameters of functions like NET\_DVR\_StopVoiceCom. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Under Windows 7 system, if no external audio devices ,this interface will return false.  
 Before calling this API, it supports to get the audio encoding format (NET\_DVR\_COMPRESSION\_AUDIO) of the device, by calling NET\_DVR\_GetDVRConfig.  
 If current encoding format is OggVorbis, audio data sampling frequency is 16000, 16 bytes sampling and monophonic. Audio playing format should be defined as following:

```
const int SAMPLES_PER_SECOND = 16000;
const int CHANNEL = 1;
const int BITS_PER_SAMPLE = 16;
WAVEFORMATEX m_wavFormatEx;
m_wavFormatEx.cbSize = sizeof(m_wavFormatEx);
m_wavFormatEx.nBlockAlign = CHANNEL * BITS_PER_SAMPLE / 8;
m_wavFormatEx.nChannels = CHANNEL;
m_wavFormatEx.nSamplesPerSec = SAMPLES_PER_SECOND;
m_wavFormatEx.wBitsPerSample = BITS_PER_SAMPLE;
m_wavFormatEx.nAvgBytesPerSec =
SAMPLES_PER_SECOND*m_wavFormatEx.nBlockAlign
```

If current encoding format is G711, the audio data sampling frequency is 8000, 16 bytes sampling and monophonic. Audio playing format should be defined as following:

```
const int SAMPLES_PER_SECOND_G711_MU = 8000;
const int CHANNEL = 1;
const int BITS_PER_SAMPLE = 16;
WAVEFORMATEX m_wavFormatEx;
m_wavFormatEx.cbSize = sizeof(m_wavFormatEx);
m_wavFormatEx.nBlockAlign = CHANNEL * BITS_PER_SAMPLE / 8;
m_wavFormatEx.nChannels = CHANNEL;
m_wavFormatEx.nSamplesPerSec = SAMPLES_PER_SECOND_G711_MU;
m_wavFormatEx.wBitsPerSample = BITS_PER_SAMPLE;
m_wavFormatEx.nAvgBytesPerSec = SAMPLES_PER_SECOND_G711_MU*
m_wavFormatEx.nBlockAlign;
```

[Return to index](#)

### 5.23.2 Set the client volume of voice talk:

#### NET\_DVR\_SetVoiceComClientVolume

**API:** BOOL NET\_DVR\_SetVoiceComClientVolume(LONG lVoiceComHandle, WORD wVolume)

**Parameters:** [in] lVoiceComHandle      The return value of

**NET\_DVR\_StartVoiceCom\_V30**  
 [in] wVolume      The volume value to set, value range: [0,0xffff]  
**Return:**      Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

### 5.23.3 Stop voice talk: **NET\_DVR\_StopVoiceCom**

**API:**      BOOL    NET\_DVR\_StopVoiceCom(LONG IVoiceComHandle)  
**Parameters:**    [in] IVoiceComHandle      The return value of [NET\\_DVR\\_StartVoiceCom\\_V30](#)  
**Return:**      Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

## Voice forwarding

### 5.23.4 Start voice forwarding, to get the encoded audio data:

#### **NET\_DVR\_StartVoiceCom\_MR\_V30**

**API:**      LONG    NET\_DVR\_StartVoiceCom\_MR\_V30(LONG IUserID, DWORD dwVoiceChan, fVoiceDataCallBack    cbVoiceDataCallBack, void\* pUser)  
**Parameters:**    [in] IUserID      The return value of [NET\\_DVR\\_Login\\_V30](#)  
                      [in] dwVoiceChan      Audio channel number, starts from 1  
                      [in] fVoiceDataCallBack      Callback function of audio data, the obtained data is encoded, and requires to call the audio decoding APIs (refer to [Audio Encoding & Decoding chapter](#)) to get PCM data  
                      [in] pUser      User data  
                      typedef void(CALLBACK \*fVoiceDataCallBack)(LONG IVoiceComHandle, char \*pRecvDataBuffer, DWORD dwBufSize, BYTE byAudioFlag, void\* pUser)  
                      [out] IVoiceComHandle      The return value of [NET\\_DVR\\_StartVoiceCom\\_MR\\_V30](#)  
                      [out] pRecvDataBuffer      Pointer of the buffer to save the audio data  
                      [out] dwBufSize      The size of audio data  
                      [out] byAudioFlag      Audio data type: 1- audio data sent from the device

[out] pUser [User data](#)

**Return:** Return -1 if it is failed, and other values are as handle parameters of functions like NET\_DVR\_StopVoiceCom. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Under Windows 7 system, if no external audio devices ,this interface will return false.

Before calling this API, it supports to get the audio encoding format (NET\_DVR\_COMPRESSION\_AUDIO) of the device, by calling NET\_DVR\_GetDVRConfig.

[If current encoding format is OggVorbis, audio data sampling frequency is 16000, 16 bytes sampling and monophonic. Audio playing format should be defined as following:](#)

```
const int SAMPLES_PER_SECOND = 16000;
const int CHANNEL = 1;
const int BITS_PER_SAMPLE = 16;
WAVEFORMATEX m_wavFormatEx;
m_wavFormatEx.cbSize = sizeof(m_wavFormatEx);
m_wavFormatEx.nBlockAlign = CHANNEL * BITS_PER_SAMPLE / 8;
m_wavFormatEx.nChannels = CHANNEL;
m_wavFormatEx.nSamplesPerSec = SAMPLES_PER_SECOND;
m_wavFormatEx.wBitsPerSample = BITS_PER_SAMPLE;
m_wavFormatEx.nAvgBytesPerSec =
SAMPLES_PER_SECOND*m_wavFormatEx.nBlockAlign
```

[If current encoding format is G711, the audio data sampling frequency is 8000, 16 bytes sampling and monophonic. Audio playing format should be defined as following:](#)

```
const int SAMPLES_PER_SECOND_G711_MU = 8000;
const int CHANNEL = 1;
const int BITS_PER_SAMPLE = 16;
WAVEFORMATEX m_wavFormatEx;
m_wavFormatEx.cbSize = sizeof(m_wavFormatEx);
m_wavFormatEx.nBlockAlign = CHANNEL * BITS_PER_SAMPLE / 8;
m_wavFormatEx.nChannels = CHANNEL;
m_wavFormatEx.nSamplesPerSec = SAMPLES_PER_SECOND_G711_MU;
m_wavFormatEx.wBitsPerSample = BITS_PER_SAMPLE;
m_wavFormatEx.nAvgBytesPerSec = SAMPLES_PER_SECOND_G711_MU*
m_wavFormatEx.nBlockAlign;
```

[Return to index](#)

### 5.23.5 Forward audio data to the device:

#### NET\_DVR\_VoiceComSendData

**API:** BOOL NET\_DVR\_VoiceComSendData(LONG IVoiceComHandle, char \*pSendBuf, DWORD dwBufSize)

**Parameters:** [in] IVoiceComHandle      [The return value of NET\\_DVR\\_StartVoiceCom\\_MR\\_V30](#)  
                  [in] pSendBuf              [Pointer of voice data buffer](#)  
                  [in] dwBufSize              [Size of voice data, which is 80 bytes if the audio format is OggVorbis, or 160 bytes if the audio format is G711.](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to send encoded audio data to the device. If the audio data is original PCM format, please call [NET\\_DVR\\_EncodeG722Frame](#) (for OggVorbis) or [NET\\_DVR\\_EncodeG711Frame](#) (for G711) to encode the data and then send to the device.

[Return to index](#)

### 5.23.6 Stop voice forwarding: NET\_DVR\_StopVoiceCom

**API:** BOOL NET\_DVR\_StopVoiceCom (LONG IVoiceComHandle)

**Parameters:** [in] IVoiceComHandle      [The return value of NET\\_DVR\\_StartVoiceCom\\_MR\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure.

**Remarks:**

[Return to index](#)

## Voice broadcast

### 5.23.7 Start to collect audio data in PC-end for voice broadcast:

#### NET\_DVR\_ClientAudioStart\_V30

**API:** BOOL NET\_DVR\_ClientAudioStart\_V30(fVoiceDataCallBack cbVoiceDataCallBack, void \*pUser)

**Parameters:** [in] fVoiceDataCallBack      [Callback function of audio data](#)  
                  [in] pUser                      [User data](#)

```
typedef void(CALLBACK *fVoiceDataCallBack)(char *pRecvDataBuffer,DWORD
dwBufSize, void *pUser)
```

[out] pRecvDataBuffer                      [Pointer of the buffer to save the audio data collected from local PC.](#)

[out] dwBufSize                              [The size of audio data](#)

[out] pUser                                   [User data](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** On Windows 7 OS, the API will return FALSE if there is no peripheral audio device in the PC. To achieve audio broadcast, should call firstly NET\_DVR\_ClientAudioStart\_V30 to collect audio data form local PC, and call NET\_DVR\_AddDVR\_V30 to add device one by one, and then it will transfer the collected data to the addres devices.

[Return to index](#)

### 5.23.8 Add one voice channel of the device to the broadcast group:

#### NET\_DVR\_AddDVR\_V30

**API:** LONG NET\_DVR\_AddDVR\_V30(LONG IUserID, DWORD dwVoiceChan)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] dwVoiceChan                              [The voice channel number, starts from 1](#)

**Return:** Return -1 if it is failed, and other values could be used as a parameter of NET\_DVR\_DeIDVR\_V30. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** To achieve voice broadcast, please call [NET\\_DVR\\_ClientAudioStart\\_V30](#) firstly to start collecting audio data of local PC, and then call NET\_DVR\_AddDVR\_V30 to add device one by one, and transfer the collected audio data to the added devices in the meantime.

*[It supports to add max 512 devices to the broadcast group by the SDK.](#)*

[Return to index](#)

### 5.23.9 Delete the voice channel of the device from the broadcast group:

#### NET\_DVR\_DeIDVR\_V30

**API:** LONG NET\_DVR\_DeIDVR\_V30(LONG IUserID)

**Parameters:** [in] IUserID                      [The return value of NET\\_DVR\\_Login\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.23.10 Stop collecting audio data in PC-end for the broadcast:

#### NET\_DVR\_ClientAudioStop

**API:** BOOL NET\_DVR\_ClientAudioStop()  
**Parameters:** None  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

### Encode or decode the audio data

### Encode or decode the OggVorbis audio

### 5.23.11 Initialize the audio encoding resource:

#### NET\_DVR\_InitG722Encoder

**API:** void\* NET\_DVR\_InitG722Encoder()  
**Parameters:** None  
**Return:** Return -1 if it is failed, and the other is used as the handle of audio encoding. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

### 5.23.12 Encode the PCM audio to G722 format:

#### NET\_DVR\_EncodeG722Frame

**API:** BOOL NET\_DVR\_EncodeG722Frame(void \*pEncodeHandle,unsigned char\* pInBuffer, unsigned char\* pOutBuffer)  
**Parameters:** [in] pEncodeHandle Audio encoding handle, the return value of NET\_DVR\_InitG722Encoder  
[in] InBuffer Input buffer, PCM data is 16000 sample rate, 16 bit, Mono, and the size of input data should be 1280 bytes

[out] pOutBuffer      [Output buffer, the size of output encoded data is 80 bytes](#)

**Return:**      Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**      It is used mainly for voice talking and voice forwarding.  
When you want to transfer the original audio data from client to the device, please call this API to encode the data and then transfer the encoded data to the device. When the client get the encoded voice stream from device, you can call [NET\\_DVR\\_DecodeG722Frame](#) to decode the data. Before calling the encoding and decoding functions, it requires initial operation ([NET\\_DVR\\_InitG722Encoder](#) or [NET\\_DVR\\_InitG722Decoder](#)), and after calling them, please release the resource by calling [NET\\_DVR\\_ReleaseG722Encoder](#) or [NET\\_DVR\\_ReleaseG722Decoder](#).

[Return to index](#)

### 5.23.13 Release the audio encoding resource:

#### **NET\_DVR\_ReleaseG722Encoder**

**API:**      void NET\_DVR\_ReleaseG722Encoder(void \*pEncodeHandle)

**Parameters:**      [in] pEncodeHandle      [Audio encoding handle, the return value of NET\\_DVR\\_InitG722Encoder](#)

**Return:**      None. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.23.14 Initialize the audio decoding resource:

#### **NET\_DVR\_InitG722Decoder**

**API:**      void\* NET\_DVR\_InitG722Decoder(int nBitrate = 16000)

**Parameters:**      [in] nBitrate      [The sample rate, it should be 16000](#)

**Return:**      Return -1 if it is failed, and other return values could be used as handle of audio decoding. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)



### 5.23.15 Decode G722 audio to PCM: **NET\_DVR\_DecodeG722Frame**

**API:** BOOL NET\_DVR\_DecodeG722Frame(void \*pDecHandle, unsigned char\* pInBuffer, unsigned char\* pOutBuffer)

**Parameters:**

[in] pDecHandle	Audio decoding handle, the return value of NET_DVR_InitG722Decoder
[in] pInBuffer	Input buffer which size is 80 bytes
[out] pOutBuffer	Output buffer, the sample rate of PCM data is 16000, 16 bit, Mono, and the size of output data is 1280 bytes.

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It is used mainly for voice talking and voice forwarding. When you want to transfer the original audio data from client to the device, please call NET\_DVR\_EncodeG722Frame to encode the data and then transfer the encoded data to the device. When the client get the encoded voice stream from device, you can call this API to decode the data. Before calling the encoding and decoding functions, it requires initial operation ([NET\\_DVR\\_InitG722Encoder](#) or [NET\\_DVR\\_InitG722Decoder](#)), and after calling them, please release the resource by calling [NET\\_DVR\\_ReleaseG722Encoder](#) or [NET\\_DVR\\_ReleaseG722Decoder](#).

[Return to index](#)

### 5.23.16 Release the audio decoding resource:

#### **NET\_DVR\_ReleaseG722Decoder**

**API:** void NET\_DVR\_ReleaseG722Decoder(void \*pDecHandle)

**Parameters:**

[in] pDecHandle	Audio decoding handle, the return value of NET_DVR_InitG722Decoder
-----------------	--

**Return:** None. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## Encode or decode the G711 audio

### 5.23.17 Encode the PCM audio to G711 format:

#### **NET\_DVR\_EncodeG711Frame**

**API:** BOOL NET\_DVR\_EncodeG711Frame(unsigned int iType, unsigned char \*pInBuffer, unsigned char \*pOutBuffer)

**Parameters:**

[in] iType	Encoding type: 0- Mu law, none 0- A law
[in] pInBuffer	Input buffer, PCM data is 8000 sample rate, 16 bit, Mono, and the size of input data should be 320 bytes
[out] pOutBuffer	Output buffer, the size of output encoded data is 160 bytes

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It is used mainly for voice talking and voice forwarding.  
When you want to transfer the original audio data from client to the device, please call this API to encode the data and then transfer the encoded data to the device. When the client get the encoded voice stream from device, you can call [NET\\_DVR\\_DecodeG711Frame](#) to decode the data. Before calling the encoding and decoding functions, it doesn't require initial operation.

[Return to index](#)

### 5.23.18 Decode G711 audio to PCM: **NET\_DVR\_DecodeG711Frame**

**API:** BOOL NET\_DVR\_DecodeG711Frame(unsigned int iType, unsigned char \*pInBuffer, unsigned char \*pOutBuffer)

**Parameters:**

[in] iType	Encoding type: 0- Mu law, none 0- A law
[in] pInBuffer	Input buffer which size should be 160 bytes
[out] pOutBuffer	Output buffer. PCM data is 8000 sample rate, 16 bit, Mono, and the size of output data is 320 bytes.

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** It is used mainly for voice talking and voice forwarding.  
When you want to transfer the original audio data from client to the device, please call [NET\\_DVR\\_EncodeG711Frame](#) to encode the data and then transfer the encoded data to the device. When the client get the encoded voice stream from device, you can call this API to decode the data. Before calling the encoding and decoding functions, it doesn't require initial operation.

[Return to index](#)

## 5.24 Transparent Channel

### 5.24.1 Setup the transparent channel: **NET\_DVR\_SerialStart**

**API:** LONG NET\_DVR\_SerialStart(LONG IUserID, LONG ISerialPort, fSerialDataCallBack cbSerialDataCallBack, DWORD dwUser)

**Parameters:**

[in] IUserID	The return value of NET_DVR_Login_V30
[in] ISerialPort	Serial port number: 1- 232 port, 2- 485 port
[in] fSerialDataCallBack	Callback function, used to receive the data form the device's serial port.
[in] dwUser	User data
typedef void(CALLBACK *fSerialDataCallBack)(LONG ISerialHandle, char *pRecvDataBuffer, DWORD dwBufSize, DWORD dwUser)	
[out] ISerialHandle	The serial handle, the return value of NET_DVR_SerialStart
[out] pRecvDataBuffer	Pointer of the buffer to save data
[out] dwBufSize	The size of data buffer
[out] dwUser	User data

**Return:** Return -1 if it is failed, and other values are as handle parameter of APIs like NET\_DVR\_SerialSend. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The decoder that connects with the serial port should support data postback, otherwise the callback will not get the data.

[Return to index](#)

### 5.24.2 Send data to the serial port of the device by transparent

#### channel: **NET\_DVR\_SerialSend**

**API:** BOOL NET\_DVR\_SerialSend(LONG ISerialHandle, LONG IChannel, char \*pSendBuf, DWORD dwBufSize)

**Parameters:**

[in] ISerialHandle	The serial handle, the return value of NET_DVR_SerialStart.
[in] IChannel	Valid when using 485 serial port, begin with 1, set value to 0 when using RS232.
[in] pSendBuf	Buffer pointer of the data to be sent.
[in] dwBufSize	The size of data buffer, max 1016 bytes.

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.24.3 Close the transparent channel: **NET\_DVR\_SerialStop**

**API:** BOOL NET\_DVR\_SerialStop (LONG ISerialHandle)  
**Parameters:** [in] ISerialHandle      [The return value of NET\\_DVR\\_SerialStart](#)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

## 5.25 Send data to the serial port directly

### 5.25.1 Send data to the serial port directly, and it doesn't require to setup transparent channel: **NET\_DVR\_SendToSerialPort**

**API:** BOOL NET\_DVR\_SendToSerialPort(LONG IUserID, DWORD dwSerialPort, DWORD dwSerialIndex, char \*pSendBuf, DWORD dwBufSize)  
**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] dwSerialPort      [Serial port type: 1- 232, 2- 485](#)  
[in] dwSerialIndex      [Means the number of 232 or 485, starting from 1](#)  
[in] pSendBuf      [Pointer of the buffer to save the data](#)  
[in] dwBufSize      [Buffer size, max 1016 bytes](#)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

### 5.25.2 Send data to RS232 directly and it doesn't require to setup transparent channel: **NET\_DVR\_SendTo232Port**

**API:** BOOL NET\_DVR\_SendTo232Port(LONG IUserID, char \*pSendBuf, DWORD dwBufSize)  
**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[in] pSendBuf      [Pointer of the buffer to save the data](#)  
[in] dwBufSize      [Buffer size, max 1016 bytes](#)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)

to get the error code.

**Remarks:**

[Return to index](#)

## 5.26 Hard Disk Management

### 5.26.1 Remotely format hard disk of the device: **NET\_DVR\_FormatDisk**

**API:** LONG NET\_DVR\_FormatDisk(LONG IUserID, LONG IDiskNumber)

**Parameters:** [in] IUserID The return value of NET\_DVR\_Login\_V30  
 [in] IDiskNumber Hard disk number, begins from 0, and 0xff means all disk(don't include read-only disk)

**Return:** Return -1 if it is failed, and other values could be used as a parameter of NET\_DVR\_CloseFormatHandle. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** If network breaks down during formatting, the device will continue to format, but the client can't receive the state.

[Return to index](#)

### 5.26.2 Get the format progress: **NET\_DVR\_GetFormatProgress**

**API:** BOOL NET\_DVR\_GetFormatProgress(LONG IFormatHandle, LONG \*pCurrentFormatDisk, LONG \*pCurrentDiskPos, LONG \*pFormatStatic)

**Parameters:** [in] IFormatHandle Handle of formatting, the return value of NET\_DVR\_FormatDisk  
 [out] pCurrentFormatDisk The pointer of the hard disk number which is formatted currently, the hard disk number starts from 0, and -1 is the initial state  
 [out] pCurrentDiskPos The pointer of formatting progress of current hard disk, and the progress value range: 0~100  
 [out] pFormatStatic The pointer of hard disk formatting state:  
 0- it is being formatted  
 1- the formatting of hard disk has finished  
 2- there is exception when formatting, and the progress is stopped. It will appear in both local and network disk  
 3- exception in network that leads to the loss of network disk, and it will not able to start formatting

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)

to get the error code.

Remarks:

[Return to index](#)

### 5.26.3 Close the formatting handle, and release the resource:

#### **NET\_DVR\_CloseFormatHandle**

API: BOOL NET\_DVR\_CloseFormatHandle(LONG IFormatHandle)

Parameters: [in] IFormatHandle      [The formatting handle, the return value of NET\\_DVR\\_FormatDisk](#)

Return: Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

Remarks:

[Return to index](#)

## 5.27 Device Maintenance Management

### Get device work state

#### 5.27.1 Get work state of the device: **NET\_DVR\_GetDVRWorkState\_V30**

API: BOOL NET\_DVR\_GetDVRWorkState\_V30(LONG IUserID, LPNET\_DVR\_WORKSTATE\_V30 lpWorkState)

Parameters: [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
[out] lpWorkState      [Pointer to the structure of work state](#)

Return: Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

Remarks: This API is used to get device state, including the state of channel, alarm input, alarm output, voice channel, etc.

[Return to index](#)

## Remote upgrade

### 5.27.2 Set the network environment of remote upgrade:

#### NET\_DVR\_SetNetworkEnvironment

**API:** BOOL NET\_DVR\_SetNetworkEnvironment(DWORD dwEnvironmentLevel)

**Parameters:** [in] dwEnvironmentLevel      [Network environment level:](#)

```
enum{
    LOCAL_AREA_NETWORK = 0, //LAN
    WIDE_AREA_NETWORK   //WAN
}
```

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** There're two network environment levels:

[LOCAL\\_AREA\\_NETWORK](#) means local area network environment (fine network, and smooth communication),

[WIDE\\_AREA\\_NETWORK](#) means wide area network environment (poor network, and communication easy to be blocked).

Before calling NET\_DVR\_Upgrade to upgrade the device, please call this API to adjust the different upgrading environment.

[Return to index](#)

### 5.27.3 Remote upgrade: NET\_DVR\_Upgrade

**API:** LONG NET\_DVR\_Upgrade(LONG IUserID, char \*sFileName)

**Parameters:** [in] IUserID      [The return value of NET\\_DVR\\_Login\\_V30](#)  
                  [in] sFileName      [Upgrade file path \(including the file name\). The path length is related to the OS, and SDK has no limit for it. For Windows system, the default length is less than or equal to 256 bytes\(including the file name\).](#)

**Return:** Return -1 if it is failed, and the other value is used to be parameter of NET\_DVR\_GetUpgradeState. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** This API is used to upgrade the device remotely

[Return to index](#)

### 5.27.4 Get the progress of the remote upgrade:

#### NET\_DVR\_GetUpgradeProgress

**API:** Int NET\_DVR\_GetUpgradeProgress(LONG IUpgradeHandle)  
**Parameters:** [in] IUpgradeHandle      [The return value of NET\\_DVR\\_Upgrade](#)  
**Return:** Return -1 if it is failed. 0 ~100 means the progress of upgrade. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

### 5.27.5 Get the state of the remote upgrade:

#### NET\_DVR\_GetUpgradeState

**API:** Int NET\_DVR\_GetUpgradeState(LONG IUpgradeHandle)  
**Parameters:** [in] IUpgradeHandle      [The return value of NET\\_DVR\\_Upgrade](#)  
**Return:** -1- the calling of the API is failed  
           1 - the upgrade has been successful  
           2 - it is being upgrading  
           3 - the upgrade is failed  
           4 - network has disconnected, and the state is unknown  
           5 - language version not match  
 Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.27.6 Get the step information of the remote upgrade:

#### NET\_DVR\_GetUpgradeStep

**API:** LONG NET\_DVR\_GetUpgradeStep(LONG IUpgradeHandle, LONG \*pSubProgress)  
**Parameters:** [in] IUpgradeHandle      [The return value of NET\\_DVR\\_Upgrade](#)  
                  [in] pSubProgress      [Step sub progress of the upgrade](#)



**Return:** Return -1 if it is failed. Other value is defined as below:

Macro Definition	Value	Implication
STEP_RECV_DATA	1	Receive the upgrade package data
STEP_UPGRADE	2	Upgrade the device system
STEP_BACKUP	3	Backup the device system
STEP_SEARCH	255	The devcie is being searching upgrade file

Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.27.7 Close the upgrade handle, and release the resource:

#### **NET\_DVR\_CloseUpgradeHandle**

**API:** BOOL NET\_DVR\_CloseUpgradeHandle(LONG IUpgradeHandle)

**Parameters:** [in] IUpgradeHandle [The return value of NET\\_DVR\\_Upgrade](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## Log Query

### 5.27.8 Query the log information of the device (supports to search log

#### **with S.M.A.R.T information): NET\_DVR\_FindDVRLog\_V30**

**API:** LONG NET\_DVR\_FindDVRLog\_V30(LONG IUserID, LONG ISelectMode, DWORD dwMajorType, DWORD dwMinorType, LPNET\_DVR\_TIME lpStartTime, LPNET\_DVR\_TIME lpStopTime, BOOL bOnlySmart = FALSE)

**Parameters:**

- [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)
- [in] ISelectMode [Query mode: 0- all, 1- by type, 2- by time, 3- by time and type](#)
- [in] dwMajorType [Major type \(it is invalid when search in S.M.A.R.T\), 0 means all types, and the other types are listed below: \[dwMajorType List\]\(#\).](#)
- [in] dwMinorType [Minor type \(it is invalid when search in S.M.A.R.T\), 0 means all types, and the other](#)

types based on major types are listed below:

[dwMinorType List](#)

[in] lpStartTime

Starting time

[in] lpStopTime

End time

[in] bOnlySmart

Whether to search log with S.M.A.R.T  
information only

[dwMajorType List:](#)

Macro Definition	Value	Implication
MAJOR_ALARM	0x1	Alarm
MAJOR_EXCEPTION	0x2	Exception
MAJOR_OPERATION	0x3	Operation
MAJOR_INFORMATION	0x4	Additional information of log

[dwMinorType List:](#)

Macro Definition of Major Type	Value	Implication
MAJOR_ALARM	0x1	Alarm
Macro Definition of Minor Type	Value	Implication
MINOR_ALARM_IN	0x1	Input of alarm
MINOR_ALARM_OUT	0x2	Output of alarm
MINOR_MOTDET_START	0x3	Start motion detection alarm
MINOR_MOTDET_STOP	0x4	Stop motion detection alarm
MINOR_HIDE_ALARM_START	0x5	Start tampering alarm
MINOR_HIDE_ALARM_STOP	0x6	Stop tampering alarm
MINOR_VCA_ALARM_START	0x7	Start intelligent alarm
MINOR_VCA_ALARM_STOP	0x8	Stop intelligent alarm
MINOR_ITS_ALARM_START	0x9	Start intelligent traffic alarm
MINOR_ITS_ALARM_STOP	0xa	Stop intelligent traffic alarm
MINOR_NETALARM_START	0xb	Start network alarm resume
MINOR_NETALARM_STOP	0xc	Stop network alarm resume
MINOR_NETALARM_RESUME	0xd	Network alarm resume

Macro Definition of Major Type	Value	Implication
MAJOR_EXCEPTION	0x2	Exception
Macro Definition of Minor Type	Value	Implication
MINOR_RAID_ERROR	0x20	RAID exception
MINOR_VI_LOST	0x21	Lose video signal
MINOR_ILLEGAL_ACCESS	0x22	Illegal access

MINOR_HD_FULL	0x23	Hard disk full
MINOR_HD_ERROR	0x24	Hard disk error
MINOR_DCD_LOST	0x25	MODEM off-line(reserved)
MINOR_IP_CONFLICT	0x26	IP conflict
MINOR_NET_BROKEN	0x27	Network not connected
MINOR_REC_ERROR	0x28	Recoding error
MINOR_IPC_NO_LINK	0x29	IPC connection failed
MINOR_VI_EXCEPTION	0x2a	Exception of video input (only for analog channels)
MINOR_IPC_IP_CONFLICT	0x2b	IP conflict of IPC
MINOR_SENCE_EXCEPTION	0x2c	Sence exception
MINOR_PIC_REC_ERROR	0x2d	Failed to get picture file, capture error
MINOR_VI_MISMATCH	0x2e	Video format mismatch
MINOR_RESOLUTION_MISMATCH	0x2f	Encoding resolution is not matching with the front-end resolution
MINOR_SCREEN_SUBSYSTEM_ABNORM MALREBOOT	0x3c	Sub-board abnormal startup
MINOR_SCREEN_SUBSYSTEM_ABNORM MALINSERT	0x3d	Sub-board inserted
MINOR_SCREEN_SUBSYSTEM_ABNORM MALPULLOUT	0x3e	Sub-board pulled out
MINOR_SCREEN_ABNORMTEMPERATURE	0x3f	Temperature abnormal

Macro Definition of Major Type	Value	Implication
MAJOR_OPERATION	0x3	Operation
Macro Definition of Minor Type	Value	Implication
MINOR_START_DVR	0x41	Start DVR
MINOR_STOP_DVR	0x42	Close DVR
MINOR_STOP_ABNORMAL	0x43	Stop abnormal
MINOR_REBOOT_DVR	0x44	reboot DVR (local)
MINOR_LOCAL_LOGIN	0x50	Login (local)
MINOR_LOCAL_LOGOUT	0x51	Logout (local)
MINOR_LOCAL_CFG_PARM	0x52	Local configuration
MINOR_LOCAL_PLAYBYFILE	0x53	Playback or download (local)
MINOR_LOCAL_PLAYBYTIME	0x54	Playback or download by time (local)

MINOR_LOCAL_START_REC	0x55	start recoding (local)
MINOR_LOCAL_STOP_REC	0x56	Stop recoding (local)
MINOR_LOCAL_PTZCTRL	0x57	Local PTZ control
MINOR_LOCAL_PREVIEW	0x58	Local preview(reserved)
MINOR_LOCAL_MODIFY_TIME	0x59	Modify time (local, reserved)
MINOR_LOCAL_UPGRADE	0x5a	Upgrade (local)
MINOR_LOCAL_RECFILE_OUTPUT	0x5b	Backup (local)
MINOR_LOCAL_FORMAT_HDD	0x5c	HD format (local)
MINOR_LOCAL_CFGFILE_OUTPUT	0x5d	Export configuration (local)
MINOR_LOCAL_CFGFILE_INPUT	0x5e	Import configuration (local)
MINOR_LOCAL_COPYFILE	0x5f	Backup file (local)
MINOR_LOCAL_LOCKFILE	0x60	Lockup file (local)
MINOR_LOCAL_UNLOCKFILE	0x61	Unlock file (local)
MINOR_LOCAL_DVR_ALARM	0x62	Clear/Trigger alarm (local)
MINOR_IPC_ADD	0x63	Add IPC (local)
MINOR_IPC_DEL	0x64	Delete IPC (local)
MINOR_IPC_SET	0x65	Set IPC (local)
MINOR_LOCAL_START_BACKUP	0x66	Start local backup
MINOR_LOCAL_STOP_BACKUP	0x67	Stop local backup
MINOR_LOCAL_COPYFILE_START_TIME	0x68	Start time of local backup
MINOR_LOCAL_COPYFILE_END_TIME	0x69	End time of local backup
MINOR_LOCAL_ADD_NAS	0x6a	Add network disk locally
MINOR_LOCAL_DEL_NAS	0x6b	Delete network disk locally
MINOR_LOCAL_SET_NAS	0x6c	Set NAS locally
MINOR_REMOTE_LOGIN	0x70	Login (remote)
MINOR_REMOTE_LOGOUT	0x71	Logout (remote)
MINOR_REMOTE_START_REC	0x72	Start record (remote)
MINOR_REMOTE_STOP_REC	0x73	Stop record (remote)
MINOR_START_TRANS_CHAN	0x74	Start transparent channel
MINOR_STOP_TRANS_CHAN	0x75	Stop transparent channel
MINOR_REMOTE_GET_PARM	0x76	Get parameter remotely
MINOR_REMOTE_CFG_PARM	0x77	Remote configuration
MINOR_REMOTE_GET_STATUS	0x78	Get status remotely
MINOR_REMOTE_ARM	0x79	On guard (remote)
MINOR_REMOTE_DISARM	0x7a	Disarm remotely

MINOR_REMOTE_REBOOT	0x7b	Reboot remotely
MINOR_START_VT	0x7c	Start voice talk
MINOR_STOP_VT	0x7d	Stop voice talk
MINOR_REMOTE_UPGRADE	0x7e	Upgrade remotely
MINOR_REMOTE_PLAYBYFILE	0x7f	Playback by file name remotely
MINOR_REMOTE_PLAYBYTIME	0x80	Playback by time remotely
MINOR_REMOTE_PTZCTRL	0x81	Remote PTZ control
MINOR_REMOTE_FORMAT_HDD	0x82	Format hard disk remotely
MINOR_REMOTE_STOP	0x83	Shut down remotely
MINOR_REMOTE_LOCKFILE	0x84	Lockup file remotely
MINOR_REMOTE_UNLOCKFILE	0x85	Unlock file remotely
MINOR_REMOTE_CFGFILE_OUTPUT	0x86	Export configuration remotely
MINOR_REMOTE_CFGFILE_INTPUT	0x87	Import configuration remotely
MINOR_REMOTE_RECFILE_OUTPUT	0x88	Backup recording files remotely
MINOR_REMOTE_DVR_ALARM	0x89	Trigger/clear alarm remotely
MINOR_REMOTE_IPC_ADD	0x8a	Add IPC remotely
MINOR_REMOTE_IPC_DEL	0x8b	Delete IPC remotely
MINOR_REMOTE_IPC_SET	0x8c	Set IPC remotely
MINOR_REBOOT_VCA_LIB	0x8d	Restart VCA library
MINOR_REMOTE_ADD_NAS	0x8e	Add NAS remotely
MINOR_REMOTE_DEL_NAS	0x8f	Delete NAS remotely
MINOR_REMOTE_SET_NAS	0x90	Set NAS remotely
MINOR_LOCAL_CONF_REB_RAID	0x101	Rebuild local configuraion automatically
MINOR_LOCAL_CONF_SPARE	0x102	Local configuration spare
MINOR_LOCAL_ADD_RAID	0x103	Create RAID locally
MINOR_LOCAL_DEL_RAID	0x104	Delete RAID locally
MINOR_LOCAL_MIG_RAID	0x105	Migrate RAID locally
MINOR_LOCAL_REB_RAID	0x106	Rebuild RAID manually and locally
MINOR_LOCAL_QUICK_CONF_RAID	0x107	Local one-key configuration
MINOR_LOCAL_ADD_VD	0x108	Create virtual disk locally
MINOR_LOCAL_DEL_VD	0x109	Delete virtual disk locally
MINOR_LOCAL_RP_VD	0x10a	Repair virtual disk locally
MINOR_LOCAL_FORMAT_EXPANDVD	0x10b	Expand virtual disk locally
MINOR_LOCAL_RAID_UPGRADE	0x10c	Local RAID card upgrade

MINOR_LOCAL_STOP_RAID	0x10d	Stop RAID operation(pull out disk safely) locally
MINOR_REMOTE_CONF_REB_RAID	0x111	Remotely configure auto rebuilding
MINOR_REMOTE_CONF_SPARE	0x112	Remotely configure spare
MINOR_REMOTE_ADD_RAID	0x113	Create RAID remotely
MINOR_REMOTE_DEL_RAID	0x114	Delete RAID remotely
MINOR_REMOTE_MIG_RAID	0x115	Migrate RAID remotely
MINOR_REMOTE_REB_RAID	0x116	Rebuild RAID manually and remotely
MINOR_REMOTE_QUICK_CONF_RAID	0x117	remote one-key configuration
MINOR_REMOTE_ADD_VD	0x118	Create virtual disk remotely
MINOR_REMOTE_DEL_VD	0x119	Delete virtual disk remotely
MINOR_REMOTE_RP_VD	0x11a	Repair virtual disk remotely
MINOR_REMOTE_FORMAT_EXPANDVD	0x11b	Expand virtual disk remotely
MINOR_REMOTE_RAID_UPGRADE	0x11c	Remote RAID card upgrade
MINOR_REMOTE_STOP_RAID	0x11d	Stop RAID operation(pull out disk safely) remotely
MINOR_LOCAL_START_PIC_REC	0x121	Start capturing picture locally
MINOR_LOCAL_STOP_PIC_REC	0x122	Stop capturing picture locally
MINOR_LOCAL_SET_SNMP	0x125	Configure SNMP locally
MINOR_LOCAL_TAG_OPT	0x126	Local label operation
MINOR_REMOTE_START_PIC_REC	0x131	Start capturing picture remotely
MINOR_REMOTE_STOP_PIC_REC	0x132	Stop capturing picture remotely
MINOR_REMOTE_SET_SNMP	0x135	Remote SNMP configuration
MINOR_REMOTE_TAG_OPT	0x136	Remote label operation

Macro Definition of Major Type	Value	Implication
MAJOR_INFORMATION	0x4	Additional information
Macro Definition of Minor Type	Value	Implication
MINOR_HDD_INFO	0xa1	HD information
MINOR_SMART_INFO	0xa2	S.M.A.R.T information
MINOR_REC_START	0xa3	Start recording
MINOR_REC_STOP	0xa4	Stop recording
MINOR_REC_OVERDUE	0xa5	Record overdue
MINOR_LINK_START	0xa6	Connect to front-end device
MINOR_LINK_STOP	0xa7	Disconnect front-end device
MINOR_NET_DISK_INFO	0xa8	Network disk information

MINOR_RAID_INFO	0xa9	RAID information
MINOR_LINK_START	0xb3	Start capturing picture
MINOR_PIC_REC_STOP	0xb4	Stop capturing picture
MINOR_PIC_REC_OVERDUE	0xb5	Delete expired picture

**Return:** Return -1 if it is failed, and the other values could be used as a parameter of NET\_DVR\_FindNextLog\_V30. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** For general devices, such as DS-81xx and DS-80xx series, it supports to query up to 2000 normal logs; for DS-90xx series(v2.0 or higher), supports up to 4000 logs; For DS-81xxHF-ST, it supports up to 1000 logs. If to query S.M.A.R.T logs, it supports max 500 logs at one time.  
If S.M.A.R.T information is not needed, we can search all logs by setting bOnlySmart to FALSE.  
S.M.A.R.T information: HD working record.

[Return to index](#)

### 5.27.9 Get the log one by one: **NET\_DVR\_FindNextLog\_V30**

**API:** LONG NET\_DVR\_FindNextLog\_V30(LONG lLogHandle, LPNET\_DVR\_LOG\_V30 lpLogData)

**Parameters:** [in] lLogHandle [Handle of file searching, return value of NET\\_DVR\\_FindDVRLog\\_V30](#)  
[out] lpLogData [Pointer for saving the log information](#)

**Return:** Return -1 if it is failed, and other values stand for current status or other information, details listed below. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

Macro Definition	Value	Implication
NET_DVR_FILE_SUCCESS	1000	Get the log information successfully
NET_DVR_FILE_NOFOUND	1001	No log found
NET_DVR_ISFINDING	1002	Being searching, please wait
NET_DVR_NOMOREFILE	1003	No more log found, search is finished
NET_DVR_FILE_EXCEPTION	1004	Exception when search log

**Remarks:** Before calling this API, please call [NET\\_DVR\\_FindDVRLog\\_V30](#) to get current searching handle firstly.

[Return to index](#)

### 5.27.10 Stop querying the log and release the resource:

#### NET\_DVR\_FindLogClose\_V30

**API:** BOOL NET\_DVR\_FindLogClose\_V30(LONG lLogHandle)

**Parameters:** [in] lLogHandle [Handle of log query, the return value of NET\\_DVR\\_FindDVRLog\\_V30](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## Remote backup

### 5.27.11 Backup record files, pictures, or log information:

#### NET\_DVR\_Backup

**API:** DWORD NET\_DVR\_Backup(long lUserID, DWORD dwBackupType, void\* lpBackupBuff, DWORD dwBackupBuffSize)

**Parameters:** [in] lUserID [User ID, the return value of NET\\_DVR\\_Login\\_V30](#)  
[in] dwBackupType [Backup type:](#)

- 1- backup record files by file name,
- 2- backup record files by time,
- 3- backup pictures,
- 4- backup the event that resume inquest,
- 5- backup log information

[in] lpBackupBuff [The backup paramter, related with dwBackupType, see to the list below](#)

[in] dwBackupBuffSize [The size of backup paramter](#)

**Return:** The size of backup paramter. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The relation between dwBackupType and lpBackupBuff is listed below:

dwBackupType	Implication	lpBackupBuff
1	Backup record files by file name	<a href="#">NET_DVR_BACKUP_NAME_PARAM</a>
2	Backup record files by time	<a href="#">NET_DVR_BACKUP_TIME_PARAM</a>
3	Backup pictures	<a href="#">NET_DVR_BACKUP_PICTURE_PARAM</a>
5	Backup log information	<a href="#">NET_DVR_BACKUP_LOG_PARAM</a>

[Return to index](#)



## Restore device default configuration

### 5.27.12 Restore device default configuration: **NET\_DVR\_RestoreConfig**

**API:** BOOL NET\_DVR\_RestoreConfig(LONG IUserID)  
**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

## Import or export configuration file

### 5.27.13 Export the configuration file from the device:

#### **NET\_DVR\_GetConfigFile\_V30**

**API:** BOOL NET\_DVR\_GetConfigFile\_V30(LONG IUserID, char \*sOutBuffer, DWORD dwOutSize, DWORD \*pReturnSize)  
**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
[out] sOutBuffer The buffer to save configuration parameters  
[in] dwOutSize The buffer size  
[out] pReturnSize The size of the returned buffer  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:** When sOutBuffer = NULL, dwOutSize = 0 and pReturnSize != NULL, it is used to get the required size of the buffer to save the configuration file.  
When sOutBuffer != NULL and dwOutSize != 0, it is used to get the buffer content which is the configuration file.

[Return to index](#)

### 5.27.14 Export the configuration file from the device:

#### **NET\_DVR\_GetConfigFile**

**API:** BOOL NET\_DVR\_GetConfigFile(LONG IUserID, char \*sFileName)  
**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
[in] sFileName The file path to save the configuration file (binary file)  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)

to get the error code.

Remarks:

[Return to index](#)

### 5.27.15 Import the configuration file to the device:

#### NET\_DVR\_SetConfigFile\_EX

**API:** BOOL NET\_DVR\_SetConfigFile\_EX(LONG IUserID, char \*sInBuffer, DWORD dwInSize)

**Parameters:** [in] IUserID                      User ID, the return value of NET\_DVR\_Login\_V30  
                   [in] sInBuffer                The buffer that saves the configuration parameters  
                   [in] dwInSize                The buffer size

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

Remarks:

[Return to index](#)

### 5.27.16 Import the configuration file to the device:

#### NET\_DVR\_SetConfigFile

**API:** BOOL NET\_DVR\_SetConfigFile(LONG IUserID, char \*sFileName)

**Parameters:** [in] IUserID                      User ID, the return value of NET\_DVR\_Login\_V30  
                   [in] sFileName                The file path that saves the configuration file (binary file)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

Remarks:

[Return to index](#)

## Network flow test

### 5.27.17 Start to test network flow: NET\_DVR\_StartNetworkFlowTest

**API:** LONG NET\_DVR\_StartNetworkFlowTest(LONG IUserID, NET\_DVR\_FLOW\_TEST\_PARAM\* pFlowTest, FLOWTESTCALLBACK fFlowTestCallback, void \*pUser)

**Parameters:**

[in] IUserID	User ID, the return value of NET_DVR_Login_V30
[in] pFlowTest	Network flow parameter
[in] fFlowTestCallback	Callback function of network flow test
[in] pUser	User data

```
typedef void(CALLBACK *fFlowTestCallback)(LONG IFlowHandle,
LPNET_DVR_FLOW_INFO pFlowInfo, void *pUser)
```

[out] IFlowHandle	Handle of flow test
[out] pFlowInfo	The result of network flow test
[out] pUser	User data

**Return:** -1 means false, and other values could be used as the handle of functions like NET\_DVR\_StopNetworkFlowTest. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.27.18 Stop network flow test: **NET\_DVR\_StopNetworkFlowTest**

**API:** BOOL NET\_DVR\_StopNetworkFlowTest(LONG IHandle)

**Parameters:** [in] IHandle      [The return value of NET\\_DVR\\_StartNetworkFlowTest](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## Get UPNP port mapping state

### 5.27.19 Get UPNP port mapping state: **NET\_DVR\_GetUpnpNatState**

**API:** BOOL NET\_DVR\_GetUpnpNatState(LONG IUserID, LPNET\_DVR\_UPNP\_NAT\_STATE lpState)

**Parameters:** [in] IUserID      [User ID, the return value of NET\\_DVR\\_Login\\_V30](#)  
[in] lpState      [UPNP port mapping state](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.28 Shutdown and Reboot

### 5.28.1 Reboot the device: **NET\_DVR\_RebootDVR**

**API:** BOOL NET\_DVR\_RebootDVR(LONG IUserID)  
**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

### 5.28.2 Shutdown the device: **NET\_DVR\_ShutDownDVR**

**API:** BOOL NET\_DVR\_ShutDownDVR(LONG IUserID)  
**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.  
**Remarks:**

[Return to index](#)

## 5.29 Remote Parameter Configuration

### General parameter configuration

#### 5.29.1 Get configuration of the device: **NET\_DVR\_GetDVRConfig**

**API:** BOOL NET\_DVR\_GetDVRConfig(LONG IUserID, DWORD dwCommand, LONG IChannel, LPVOID lpOutBuffer, DWORD dwOutBufferSize, LPDWORD lpBytesReturned)  
**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
[in] dwCommand Configuration command, please kindly refer to [the DwCommand type definition](#) below  
[in] IChannel Channel number, if the channel parameter is not required, IChannel is invalid, and set it as 0xFFFFFFFF  
[out] lpOutBuffer The buffer to save the received data  
[in] dwOutBufferSize The size of the buffer (unit: byte), it can't be 0  
[out] lpBytesReturned The size of the returned buffer, it can't be NULL  
**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The structures and command numbers are different according to the various getting functions, and they are listed as below:

#### The relationship between dwCommand and IpOutBuffer

Macro Definition of dwCommand	Description	lChannel	IpOutBuffer	Value
NET_DVR_GET_TIMECFG	Get time parameters	invalid	NET_DVR_TIME	118
NET_DVR_GET_ZONEANDDST	Get time zone & DST parameters	invalid	NET_DVR_ZONEANDDST	128
NET_DVR_GET_FTPCFG	Get FTP configuration to upload picture	invalid	NET_DVR_FTPCFG	134
NET_DVR_GET_AUXOUTCFG	Get aux output configuration triggered by alarm	invalid	NET_DVR_AUXOUTCFG	140
NET_DVR_GET_NETAPPCFG	Get network application parameters(NTP/DDNS)	invalid	NET_DVR_NETAPPCFG	222
NET_DVR_GET_NTPCFG	Get network application parameters(NTP)	invalid	NET_DVR_NTPPARA	224
NET_DVR_GET_NFSCFG	Get NFS (Network File System) configuration	invalid	NET_DVR_NFSCFG	230
NET_DVR_GET_NETCFG_V30	Get network parameters	invalid	NET_DVR_NETCFG_V30	1000
NET_DVR_GET_PICCFG_V30	Get image parameters	valid	NET_DVR_PICCFG_V30	1002
NET_DVR_GET_RECORDCFG_V30	Get record parameters	valid	NET_DVR_RECORD_V30	1004
NET_DVR_GET_USERCFG_V30	Get user parameters	invalid	NET_DVR_USER_V30	1006
NET_DVR_GET_DDNSCFG_V30	Get network application parameters(DDNS)	invalid	NET_DVR_DDNSPARA_V30	1010
NET_DVR_GET_EMAILCFG_V30	Get network application parameters(EMAIL)	invalid	NET_DVR_EMAILCFG_V30	1012
NET_DVR_GET_ALARMINCFG_V30	Get alarm input parameters	valid	NET_DVR_ALARMINCFG_V30	1024
NET_DVR_GET_ALARMOUTCFG_V30	Get alarm output parameters	valid	NET_DVR_ALARMOUTCFG_V30	1026
NET_DVR_GET_VIDEOOUTCFG_V30	Get video out parameters	invalid	NET_DVR_VIDEOOUT_V30	1028
NET_DVR_GET_SHOWSTRING_V30	Get OSD parameters	valid	NET_DVR_SHOWSTRING_V30	1030
NET_DVR_GET_EXCEPTIONCFG_V30	Get exception parameters	invalid	NET_DVR_EXCEPTION_V30	1034
NET_DVR_GET_RS232CFG_V30	Get 232 parameters	invalid	NET_DVR_RS232CFG_V30	1036

NET_DVR_GET_NET_DISKCFG	Get network disk configuration	invalid	<a href="#">NET_DVR_NET_DISKCFG</a>	1038
NET_DVR_GET_COMPRESSCFG_V30	Get compression parameters	valid	<a href="#">NET_DVR_COMPRESSIONCFG_V30</a>	1040
NET_DVR_GET_DECODERCFG_V30	Get (PTZ) decoder parameters	valid	<a href="#">NET_DVR_DECODERCFG_V30</a>	1042
NET_DVR_GET_PREVIEWCFG_V30	Get local preview parameters	invalid	<a href="#">NET_DVR_PREVIEWCFG_V30</a>	1044
NET_DVR_GET_PREVIEWCFG_AUX_V30	Get AUX preview parameters	invalid	<a href="#">NET_DVR_PREVIEWCFG_V30</a>	1046
NET_DVR_GET_IPALARMINCFG	Get IP alarm input configuration	invalid	<a href="#">NET_DVR_IPALARMINCFG</a>	1050
NET_DVR_GET_IPALARMOUTCFG	Get IP alarm output configuration	invalid	<a href="#">NET_DVR_IPALARMOUTCFG</a>	1052
NET_DVR_GET_HDCFG	Get hard disk management parameters	invalid	<a href="#">NET_DVR_HDCFG</a>	1054
NET_DVR_GET_HDGROUP_CFG	Get hard disk group management parameters	invalid	<a href="#">NET_DVR_HDGROUP_CFG</a>	1056
NET_DVR_GET_COMPRESSCFG_AUDIO	Get audio parameters of voice talk	invalid	<a href="#">NET_DVR_COMPRESSION_AUDIO</a>	1058
NET_DVR_GET_IPPARACFG_V40	Get IP channel configuration(extended)	invalid	<a href="#">NET_DVR_IPPARACFG_V40</a>	1062
NET_DVR_GET_DEVICECFG_V40	Get device parameters (extended)	invalid	<a href="#">NET_DVR_DEVICECFG_V40</a>	1100
NET_DVR_GET_ZEROCHANCFG	Get compression parameters of zero channel	valid	<a href="#">NET_DVR_ZEROCHANCFG</a>	1102
NET_DVR_GET_ZERO_PREVIEWCFG_V30	Get local preview parameters of zero channel	valid	<a href="#">NET_DVR_PREVIEWCFG_V30</a>	1104
NET_DVR_GET_ZERO_ZOOM	Get zoom parameters of zero channel	valid	<a href="#">NET_DVR_ZERO_ZOOMCFG</a>	1107
NET_DVR_GET_SNMPCFG	Get SNMP parameter	invalid	<a href="#">NET_DVR_SNMPCFG</a>	1112
NET_DVR_GET_NETCFG_MULTI	Get multi network card parameter	invalid	<a href="#">NET_DVR_NETCFG_MULTI</a>	1161
NET_DVR_GET_HOLIDAY_PARAM_CFG	Get holiday parameter	invalid	<a href="#">NET_DVR_HOLIDAY_PARAM_CFG</a>	1240
NET_DVR_GET_MOTION_HOLIDAY_HANDLE	Get holiday alarm handling mode of motion detection	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1242
NET_DVR_GET_VIOLOST_HOLIDAY_HANDLE	Get holiday alarm handling mode of video signal lost	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1244

NET_DVR_GET_HIDE_HOLIDAY_HANDLE	Get holiday alarm handling mode of video tampering	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1246
NET_DVR_GET_ALARMIN_HOLIDAY_HANDLE	Get holiday alarm handling mode of alarm input	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1248
NET_DVR_GET_ALARMOUT_HOLIDAY_HANDLE	Get holiday alarm handling mode of alarm output	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1250
NET_DVR_GET_HOLIDAY_RECORD	Get holiday recording parameter	valid	<a href="#">NET_DVR_HOLIDAY_RECORD</a>	1252
NET_DVR_GET_NETWORK_BONDING	Get BONDING network card parameter	invalid	<a href="#">NET_DVR_NETWORK_BONDING</a>	1254
NET_DVR_GET_LINK_STATUS	Get link status of channel	valid	<a href="#">NET_DVR_LINK_STATUS</a>	1256
NET_DVR_GET_DISK_QUOTA_CFG	Get disk quota configuration	invalid	<a href="#">NET_DVR_DISK_QUOTA_CFG</a>	1278
NET_DVR_GET_JPEG_CAPTURE_CFG	Get capture configuration	valid	<a href="#">NET_DVR_JPEG_CAPTURE_CFG</a>	1280
NET_DVR_GET_SCHED_CAPTURE_CFG	Get capturing schedule	valid	<a href="#">NET_DVR_SCHED_CAPTURE_CFG</a>	1282
NET_DVR_GET_VIDEO_INPUT_EFFECT	Get the video effect	valid	<a href="#">NET_DVR_VIDEO_INPUT_EFFECT</a>	1286
NET_DVR_GET_DVR_SYNCHRONOUS_IPC	Get the information of whether to synchronize front-end IPC parameter	valid	<a href="#">NET_DVR_SYNCHRONOUS_IPC</a>	6005
NET_DVR_GET_DEVICE_NETWORK_USAGE_INFO	Get device current network resource usage	invalid	<a href="#">NET_DVR_DEVICE_NETWORK_USAGE_INFO</a>	6009
NET_DVR_GET_RECORD_CHANNEL_INFO	Get recording status of the channel	valid	<a href="#">NET_DVR_CHAN_GROUP_RECORD_STATUS</a>	6013
NET_DVR_GET_FTPCFG_SECOND	It takes effect if the default first FTP don't work	invalid	<a href="#">NET_DVR_FTPCFG</a>	6103
NET_DVR_GET_DRAWFRAME_DISK_QUOTA_CFG	Get disk quota configuration of the draw-frame channel	valid	<a href="#">NET_DVR_DRAWFRAME_DISK_QUOTA_CFG</a>	6109
NET_DVR_GET_UPNP_CFG	Get the UPNP parameter	invalid	<a href="#">NET_DVR_UPNP_CFG</a>	6111
NET_DVR_GET_AES_KEY	Get the AES encryption key	invalid	<a href="#">NET_DVR_AES_KEY_INFO</a>	6113
NET_DVR_GET_POE_CFG	Get POE parameter	invalid	<a href="#">NET_DVR_POE_CFG</a>	6114
NET_DVR_GET_CUSTOM_PROTOCOL	Get the custom protocol parameter	invalid	<a href="#">NET_DVR_CUSTOM_PROTOCOL</a>	6116
NET_DVR_GET_STREAM_CABAC	Get stream compression performance option	invalid	<a href="#">NET_DVR_STREAM_CABAC</a>	6118
NET_DVR_GET_ESATA_MINISAS_USAGE	Get the usage of eSATA and	invalid	<a href="#">NET_DVR_ESATA_MINISAS_USAGE</a>	6120

USAGE_CFG	miniSAS		SAGE	
NET_DVR_GET_HDCFG_V40	Get hard disk management parameter(extended)	valid	NET_DVR_HDCFG	6122
NET_DVR_GET_POE_CHANNEL_ADD_MODE	Get the adding mode of POE channel	invalid	NET_DVR_POE_CHANNEL_ADD_MODE	6124
NET_DVR_GET_DIGITAL_CHANNEL_STATE	Get the status of the digital channel	invalid	NET_DVR_DIGITAL_CHANNEL_STATE	6126
NET_DVR_GET_ACCESS_CAMERA_INFO	Get the camera information of the channel	valid	NET_DVR_ACCESS_CAMERA_INFO	6201

[Return to index](#)

## 5.29.2 Set the parameters of the device: **NET\_DVR\_SetDVRConfig**

**API:** BOOL NET\_DVR\_SetDVRConfig(LONG UserID, DWORD dwCommand, LONG IChannel, LPVOID lpInBuffer, DWORD dwInBufferSize)

**Parameters:**

- [in] UserID User ID, the return value of NET\_DVR\_Login\_V30
- [in] dwCommand Parameter type. Please kindly refer to the [DwCommand Type Definition](#) below.
- [in] IChannel Channel number, if it is not the channel parameter, do not use IChannel, and set it as 0xFFFFFFFF
- [in] lpInBuffer Buffer that saves the output parameters
- [in] dwInBufferSize The buffer size (unit: byte)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The structures and command numbers are different according to the various setting functions, and they are listed as below:

### The relationship between dwCommand and lpInBuffer

Macro Definition of dwCommand	Description	IChannel	lpInBuffer	Value
NET_DVR_SET_TIMECFG	Set time parameters	invalid	NET_DVR_TIME	119
NET_DVR_SET_ZONEANDDST	Set time zone and DST parameters	invalid	NET_DVR_ZONEANDDST	129
NET_DVR_SET_FTPCFG	Set FTP configuration to upload picture	invalid	NET_DVR_FTPCFG	135
NET_DVR_SET_AUXOUTCFG	Set parameters of aux output triggered by alarm	invalid	NET_DVR_AUXOUTCFG	141
NET_DVR_SET_NETAPPCFG	Set network application parameters(NTP/DDNS)	invalid	NET_DVR_NETAPPCFG	223



NET_DVR_SET_NTPTCFG	Set network application parameters(NTP)	invalid	<a href="#">NET_DVR_NTPTPARA</a>	225
NET_DVR_SET_NFSCFG	Set NFS (Network File System) parameters	invalid	<a href="#">NET_DVR_NFSCFG</a>	231
NET_DVR_SET_NETCFG_V30	Set network parameters	invalid	<a href="#">NET_DVR_NETCFG_V30</a>	1001
NET_DVR_SET_PICCFG_V30	Set image parameters	valid	<a href="#">NET_DVR_PICCFG_V30</a>	1003
NET_DVR_SET_RECORDCFG_V30	Set record parameters	valid	<a href="#">NET_DVR_RECORD_V30</a>	1005
NET_DVR_SET_USERCFG_V30	Set user parameters	invalid	<a href="#">NET_DVR_USER_V30</a>	1007
NET_DVR_SET_DDNSCFG_V30	Set network application parameters(DDNS)	invalid	<a href="#">NET_DVR_DDNSPARA_V30</a>	1011
NET_DVR_SET_EMAILCFG_V30	Set network application parameters(EMAIL)	invalid	<a href="#">NET_DVR_EMAILCFG_V30</a>	1013
NET_DVR_SET_ALARMINCFG_V30	Set alarm input parameters	valid	<a href="#">NET_DVR_ALARMINCFG_V30</a>	1025
NET_DVR_SET_ALARMOUTCFG_V30	Set alarm output parameters	valid	<a href="#">NET_DVR_ALARMOUTCFG_V30</a>	1027
NET_DVR_SET_VIDEOOUTCFG_V30	Set video out parameters	invalid	<a href="#">NET_DVR_VIDEOOUT_V30</a>	1029
NET_DVR_SET_SHOWSTRING_V30	Set OSD parameters	valid	<a href="#">NET_DVR_SHOWSTRING_V30</a>	1031
NET_DVR_SET_EXCEPTIONCFG_V30	Set exception parameters	invalid	<a href="#">NET_DVR_EXCEPTION_V30</a>	1035
NET_DVR_SET_RS232CFG_V30	Set 232 serial port parameters	invalid	<a href="#">NET_DVR_RS232CFG_V30</a>	1037
NET_DVR_SET_NET_DISKCFG	Set network disk access parameters	invalid	<a href="#">NET_DVR_NET_DISKCFG</a>	1039
NET_DVR_SET_COMPRESSCFG_V30	Set compression parameters	valid	<a href="#">NET_DVR_COMPRESSIONCFG_V30</a>	1041
NET_DVR_SET_DECODERCFG_V30	Set PTZ decoder parameters	valid	<a href="#">NET_DVR_DECODERCFG_V30</a>	1043
NET_DVR_SET_PREVIEWCFG_V30	Set local preview parameters	invalid	<a href="#">NET_DVR_PREVIEWCFG_V30</a>	1045
NET_DVR_SET_PREVIEWCFG_AUX_V30	Set auxiliary preview parameters	invalid	<a href="#">NET_DVR_PREVIEWCFG_V30</a>	1047
NET_DVR_SET_HDCFG	Set hard disk management parameters	invalid	<a href="#">NET_DVR_HDCFG</a>	1055
NET_DVR_SET_HDGROUP_CFG	Set hard disk group management parameters	invalid	<a href="#">NET_DVR_HDGROUP_CFG</a>	1057
NET_DVR_SET_COMPRESSCFG_AUD	Set audio parameters of voice talk	invalid	<a href="#">NET_DVR_COMPRESSION_AUDIO</a>	1059

NET_DVR_SET_IPPARACFG_V40	Set IP channel access parameters(extended)	invalid	<a href="#">NET_DVR_IPPARACFG_V40</a>	1063
NET_DVR_SET_DEVICECFG_V40	Set device parameters (extended)	invalid	<a href="#">NET_DVR_DEVICECFG_V40</a>	1101
NET_DVR_SET_ZEROCHANCFG	Set compression parameters of zero channel	valid	<a href="#">NET_DVR_ZEROCHANCFG</a>	1103
NET_DVR_SET_ZERO_PREVIEWCFG_V30	Set local preview parameters of zero channel	valid	<a href="#">NET_DVR_PREVIEWCFG_V30</a>	1105
NET_DVR_SET_ZERO_ZOOM	Set zoom parameters of zero channel	valid	<a href="#">NET_DVR_ZERO_ZOOMCFG</a>	1106
NET_DVR_SET_SNMPCFG	Set SNMP parameters	invalid	<a href="#">NET_DVR_SNMPCFG</a>	1113
NET_DVR_SET_NETCFG_MULTI	Set multi network card parameters	invalid	<a href="#">NET_DVR_NETCFG_MULTI</a>	1162
NET_DVR_SET_HOLIDAY_PARAM_CFG	Set holiday parameters	invalid	<a href="#">NET_DVR_HOLIDAY_PARAM_CFG</a>	1241
NET_DVR_SET_MOTION_HOLIDAY_HANDLE	Set holiday alarm handling mode of motion detection	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1243
NET_DVR_SET_VIOLST_HOLIDAY_HANDLE	Set holiday alarm handling mode of video signal lost	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1245
NET_DVR_SET_HIDE_HOLIDAY_HANDLE	Set holiday alarm handling mode of video tampering	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1247
NET_DVR_SET_ALARMIN_HOLIDAY_HANDLE	Set holiday alarm handling mode of alarm input	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1249
NET_DVR_SET_ALARMOUT_HOLIDAY_HANDLE	Set holiday alarm handling mode of alarm output	valid	<a href="#">NET_DVR_HOLIDAY_HANDLE</a>	1251
NET_DVR_SET_HOLIDAY_RECORD	Set holiday recording paramter	valid	<a href="#">NET_DVR_HOLIDAY_RECORD</a>	1253
NET_DVR_SET_NETWORK_BONDING	Set BONDING network card parameters	invalid	<a href="#">NET_DVR_NETWORK_BONDING</a>	1255
NET_DVR_SET_DISK_QUOTA_CFG	Set disk quota configuration	invalid	<a href="#">NET_DVR_DISK_QUOTA_CFG</a>	1279
NET_DVR_SET_JPEG_CAPTURE_CFG	Set capture configuration	valid	<a href="#">NET_DVR_JPEG_CAPTURE_CFG</a>	1281
NET_DVR_SET_SCHED_CAPTURECFG	Set capturing schedule	valid	<a href="#">NET_DVR_SCHED_CAPTURECFG</a>	1283
NET_DVR_SET_VIDEO_INPUT_EFFECT	Set the video effect	valid	<a href="#">NET_DVR_VIDEO_INPUT_EFFECT</a>	1287
NET_DVR_SET_DISK_RAID_INFO	Set RAID information of hard disk	invalid	<a href="#">NET_DVR_DISK_RAID_INFO</a>	6002

NET_DVR_SET_DVR_SYNCHRONOUS_IPC	Set whether to synchronize front-end IPC parameter	valid	<a href="#">NET_DVR_SYNCHRONOUS_IPC</a>	6006
NET_DVR_SET_DVR_IPC_PASSWD	Set IPC user name and password	valid	<a href="#">NET_DVR_IPC_PASSWD</a>	6008
NET_DVR_SET_VIDEO_INPUT_EFFECT	Set IPC network parameter	valid	<a href="#">NET_DVR_IPC_NETCFG</a>	6012
NET_DVR_SET_RECORD_CHANNEL_INFO	Set recording status of the channel	valid	<a href="#">NET_DVR_CHAN_GROUP_RECORD_STATUS</a>	6014
NET_DVR_SET_FTPCFG_SECOND	It takes effect if the default first FTP don't work	invalid	<a href="#">NET_DVR_FTPCFG</a>	6104
NET_DVR_SET_DRAWFRAME_DISK_QUOTA_CFG	Set disk quota configuration of the draw-frame channel	valid	<a href="#">NET_DVR_DRAWFRAME_DISK_QUOTA_CFG</a>	6110
NET_DVR_SET_UPNP_CFG	Set the UPNP parameter	invalid	<a href="#">NET_DVR_UPNP_CFG</a>	6112
NET_DVR_SET_POE_CFG	Set the POE parameter	invalid	<a href="#">NET_DVR_POE_CFG</a>	6115
NET_DVR_SET_CUSTOM_PROTOCOL	Set the custom protocol parameter	invalid	<a href="#">NET_DVR_CUSTOM_PROTOCOL</a>	6117
NET_DVR_SET_STREAM_CABAC	Set stream compression performance option	invalid	<a href="#">NET_DVR_STREAM_CABAC</a>	6119
NET_DVR_SET_ESATA_MINISAS_USAGE_CFG	Set the usage of eSATA and miniSAS	invalid	<a href="#">NET_DVR_ESATA_MINISAS_USAGE</a>	6121
NET_DVR_SET_HDCFG_V40	Set hard disk management parameter(extended)	valid	<a href="#">NET_DVR_HDCFG</a>	6123
NET_DVR_SET_POE_CHANNEL_ADD_MODE	Set the adding mode of POE channel	invalid	<a href="#">NET_DVR_POE_CHANNEL_ADD_MODE</a>	6125
NET_DVR_SET_ACCESS_CAMERA_INFO	Set the camera information of the channel	valid	<a href="#">NET_DVR_ACCESS_CAMERA_INFO</a>	6202

[Return to index](#)

## Alarm output configuration

### 5.29.3 Get the state of the alarm output: **NET\_DVR\_GetAlarmOut\_V30**

**API:** BOOL NET\_DVR\_GetAlarmOut\_V30(LONG UserID,  
LPNET\_DVR\_ALARMOUTSTATUS\_V30 lpAlarmOutState)

**Parameters:** [in] UserID [User ID, the return value of NET\\_DVR\\_Login\\_V30](#)  
[out] lpAlarmOutState [The state of the alarm output](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)

to get the error code.

Remarks:

[Return to index](#)

#### 5.29.4 Set the alarm output port: **NET\_DVR\_SetAlarmOut**

**API:** BOOL NET\_DVR\_SetAlarmOut(LONG IUserID, LONG IAlarmOutPort, LONG IAlarmOutStatic)

**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
 [in] IAlarmOutPort Alarm output port:  
 The output port number begins with 0,  
 0x00ff means all analog output,  
 0xff00 means all IP output.  
 DS-90xx devices support both analog and IP  
 alarm output, and 32-95 are IP alarm ports.  
 [in] IAlarmOutStatic The state of alarm output port: 0- stop output, 1  
 output

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)  
 to get the error code.

Remarks:

[Return to index](#)

### RTSP parameter configuration

#### 5.29.5 Get the RTSP parameter: **NET\_DVR\_GetRtspConfig**

**API:** BOOL NET\_DVR\_GetRtspConfig(LONG IUserID, DWORD dwCommand, LPNET\_DVR\_RTSPCFG lpOutBuffer, DWORD dwOutBufferSize)

**Parameters:** [in] IUserID User ID, the return value of NET\_DVR\_Login\_V30  
 [in] dwCommand Reserved, please set to 0  
 [out] lpOutBuffer Output buffer  
 [in] dwOutBufferSize The size of output buffer

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)  
 to get the error code.

Remarks:

[Return to index](#)

#### 5.29.6 Set the RTSP parameter: **NET\_DVR\_SetRtspConfig**

**API:** BOOL NET\_DVR\_SetRtspConfig(LONG IUserID, DWORD dwCommand, LPNET\_DVR\_RTSPCFG lpInBuffer, DWORD dwInBufferSize)

**Parameters:** [in] IUserID                      User ID, the return value of NET\_DVR\_Login\_V30  
                   [in] dwCommand                Reserved, please set to 0  
                   [in] lpInBuffer                The buffer that saves the input parameters  
                   [in] dwOutBufferSize           The size of the buffer, the value is the size of the structure NET\_DVR\_RTSPCFG

**Return:**        Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## Get the PTZ protocols supported by the device

### 5.29.7 Get the PTZ protocols supported by the device:

#### NET\_DVR\_GetPTZProtocol

**API:**            BOOL   NET\_DVR\_GetPTZProtocol(LONG IUserID, NET\_DVR\_PTZCFG \*pPtzcfg)

**Parameters:** [in] IUserID                      User ID, the return value of NET\_DVR\_Login\_V30  
                   [out] pPtzcfg                    The structure of PTZ protocol

**Return:**        Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**    Some rarely used PTZ protocols which supported by old type device such as 8000 series, have been removed from the devices such as DS-90xx, DS-91xx, DS-81xx. Please call this API to get the supported PTZ protocol list.

[Return to index](#)

## Scale parameters settings of video output

### 5.29.8 Get the scale information of the video output:

#### NET\_DVR\_GetScaleCFG\_V30

**API:**            BOOL   NET\_DVR\_GetScaleCFG(LONG IUserID, LPNET\_DVR\_SCALECFG pScalecfg)

**Parameters:** [in] IUserID                      User ID, the return value of NET\_DVR\_Login\_V30  
                   [out] pScalecfg                   Scale parameter

**Return:**        Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.29.9 Set the scale parameter of the video output:

#### NET\_DVR\_SetScaleCFG\_V30

**API:** BOOL NET\_DVR\_SetScaleCFG\_V30(LONG IUserID, LPNET\_DVR\_SCALECFG pScalecfg)

**Parameters:** [in] IUserID                      User ID, the return value of NET\_DVR\_Login\_V30  
                   [in] pScalecfg                Scale parameter

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.30 Stream encryption

### 5.30.1 Set secret key of stream: NET\_DVR\_InquestStreamEncrypt

**API:** BOOL NET\_DVR\_InquestStreamEncrypt(LONG IUserID, LONG IChannel, BOOL bEncrypt)

**Parameters:** [in] IUserID                      The return value of NET\_DVR\_Login\_V30  
                   [in] IChannel                   Channel number  
                   [in] bEncrypt                   Flag of encryption: TRUE-encrypted, FALSE-not encrypted

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

### 5.30.2 get encryption status: NET\_DVR\_InquestGetEncryptState

**API:** BOOL NET\_DVR\_InquestGetEncryptState(LONG IUserID, LONG IChannel, BOOL \*bEncrypt)

**Parameters:** [in] IUserID                      The return value of NET\_DVR\_Login\_V30  
                   [in] IChannel                   Channel number  
                   [out] IpProtoList                Flag of encryption: TRUE-encrypted, FALSE-not encrypted

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**

[Return to index](#)

## 5.31 Get the IPC protocol list supported by the device

### 5.31.1 Get the IPC protocol list supported by the device:

#### NET\_DVR\_GetIPCProtoList

**API:** BOOL NET\_DVR\_GetIPCProtoList(LONG IUserID, LPNET\_DVR\_IPC\_PROTO\_LIST IpProtoList)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)  
 [out] IpProtoList [IPC protocol list](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** The interface is used to get protocols of the IPC supported by current device.  
[Return to index](#)

## 5.32 Start scanning to get IPC list remotely

### 5.32.1 Start scanning to get IPC list remotely :

#### NET\_DVR\_GetSadpInfoList

**API:** BOOL NET\_DVR\_GetSadpInfoList(LONG IUserID, LPNET\_DVR\_SADPINFO\_LIST IpSadpInfoList)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)  
 [out] IpSadpInfoList [IPC list](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:**  
[Return to index](#)

### 5.32.2 Modify the IPC information remotely:

#### NET\_DVR\_UpdateSadpInfo

**API:** BOOL NET\_DVR\_UpdateSadpInfo(LONG IUserID, LPNET\_DVR\_SADP\_VERIFY IpSadpVerify, LPNET\_DVR\_SADPINFO IpSadpInfo)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)  
 [in] IpSadpVerify [Verify information](#)  
 [in] IpSadpInfo [IPC list to be modified](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#)

to get the error code.

Remarks:

[Return to index](#)

## 5.33 E-mail test

### 5.33.1 Test according to the configured EMAIL parameter to see

whether it can receive and send e-mail successfully:

#### NET\_DVR\_StartEmailTest

**API:** LONG NET\_DVR\_StartEmailTest(LONG IUserID)

**Parameters:** [in] IUserID [The return value of NET\\_DVR\\_Login\\_V30](#)

**Return:** -1 means false, other values are as parameters of NET\_DVR\_GetEmailTestProcess and NET\_DVR\_StopEmailTest. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

**Remarks:** Before calling to this API to test, please configure the EMAIL parameter firstly, refer to [NET\\_DVR\\_GetDVRConfig](#) and [NET\\_DVR\\_SetDVRConfig](#) (command: [NET\\_DVR\\_GET\\_EMAILCFG\\_V30](#) and [NET\\_DVR\\_SET\\_EMAILCFG\\_V30](#)).

[Return to index](#)

### 5.33.2 Get the progress of the e-mail test:

#### NET\_DVR\_GetEmailTestProgress

**API:** BOOL NET\_DVR\_GetEmailTestProgress(LONG IEmailTestHandle, DWORD\* pState)

**Parameters:** [in] IEmailTestHandle [The return value of NET\\_DVR\\_StartEmailTest](#)  
[out] pState [E-mail test progress, range: \(0,100\), the other values out of this range is defined as below](#)

Macro Definition	Value	Implication
PROCESSING	0	Being processing
PROCESS_SUCCESS	100	Test finished
PROCESS_EXCEPTION	400	Test abnormal
PROCESS_FAILED	500	Test failed

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

[Return to index](#)



### 5.33.3 Stop E-mail test: **NET\_DVR\_StopEmailTest**

**API:** BOOL NET\_DVR\_StopEmailTest(LONG IEmailTestHandle)

**Parameters:** [in] IEmailTestHandle      [The return value of NET\\_DVR\\_StartEmailTest](#)

**Return:** Return TRUE on success, FALSE on failure. Please call [NET\\_DVR\\_GetLastError](#) to get the error code.

[Return to index](#)

## 6 Macro Definition of Error Code

### 6.1 Error code of network communication library

Error	Value	Message
NET_DVR_NOERROR	0	No error.
NET_DVR_PASSWORD_ERROR	1	User name or password error.
NET_DVR_NOENOUGHPRI	2	Not authorized to do this operation.
NET_DVR_NOINIT	3	SDK is not initialized.
NET_DVR_CHANNEL_ERROR	4	Channel number error. There is no corresponding channel number on the device.
NET_DVR_OVER_MAXLINK	5	The number of clients connected to the device has exceeded the max limit.
NET_DVR_VERSIONNOMATCH	6	Version mismatch. SDK version is not matching with the device.
NET_DVR_NETWORK_FAIL_CONNECT	7	Failed to connect to the device. The device is off-line, or connection timeout caused by network.
NET_DVR_NETWORK_SEND_ERROR	8	Failed to send data to the device.
NET_DVR_NETWORK_RECV_ERROR	9	Failed to receive data from the device.
NET_DVR_NETWORK_RECV_TIMEOUT	10	Timeout when receiving the data from the device.
NET_DVR_NETWORK_ERRORDATA	11	The data sent to the device is illegal, or the data received from the device error. E.g. The input data is not supported by the device for remote configuration.
NET_DVR_ORDER_ERROR	12	API calling order error.
NET_DVR_OPERNOPERMIT	13	Not authorized for this operation.
NET_DVR_COMMANDTIMEOUT	14	Executing command on the device is timeout.
NET_DVR_ERRORSERIALPORT	15	Serial port number error. The assigned serial port does not exist on the device.
NET_DVR_ERRORALARMPORT	16	Alarm port number error.
NET_DVR_PARAMETER_ERROR	17	Parameter error. Input or output parameter in the SDK API is NULL.
NET_DVR_CHAN_EXCEPTION	18	Device channel is in exception status.
NET_DVR_NODISK	19	No hard disk on the device, and the operation of recording and hard disk configuration will fail.
NET_DVR_ERRORDISKNUM	20	Hard disk number error. The assigned hard disk number does not exist during hard disk management.
NET_DVR_DISK_FULL	21	Device hard disk is full.
NET_DVR_DISK_ERROR	22	Device hard disk error.
NET_DVR_NOSUPPORT	23	Device does not support this function.
NET_DVR_BUSY	24	Device is busy.
NET_DVR_MODIFY_FAIL	25	Failed to modify device parameters.

<b>NET_DVR_PASSWORD_FORMAT_ERROR</b>	26	The inputting password format is not correct.
<b>NET_DVR_DISK_FORMATING</b>	27	Hard disk is formatting, and the operation cannot be done.
<b>NET_DVR_DVRNORESOURCE</b>	28	Not enough resource on the device.
<b>NET_DVR_DVROPRATEFAILED</b>	29	Device operation failed.
<b>NET_DVR_OPENHOSTSOUND_FAIL</b>	30	Failed to collect local audio data or to open audio output during voice talk / broadcasting.
<b>NET_DVR_DVRVOICEOPENED</b>	31	Voice talk channel on the device has been occupied.
<b>NET_DVR_TIMEINPUTERROR</b>	32	Time input is not correct.
<b>NET_DVR_NOSPECFILE</b>	33	There is no selected file for playback.
<b>NET_DVR_CREATEFILE_ERROR</b>	34	Failed to create a file, during local recording, saving picture, getting configuration file or downloading record file.
<b>NET_DVR_FILEOPENFAIL</b>	35	Failed to open a file, when importing configuration file, upgrading device or uploading inquest file.
<b>NET_DVR_OPERNOTFINISH</b>	36	The last operation has not been completed.
<b>NET_DVR_GETPLAYTIMEFAIL</b>	37	Failed to get the current played time.
<b>NET_DVR_PLAYFAIL</b>	38	Failed to start playback.
<b>NET_DVR_FILEFORMAT_ERROR</b>	39	The file format is not correct.
<b>NET_DVR_DIR_ERROR</b>	40	File directory error.
<b>NET_DVR_ALLOC_RESOURCE_ERROR</b>	41	Resource allocation error.
<b>NET_DVR_AUDIO_MODE_ERROR</b>	42	Sound adapter mode error. Currently opened sound playing mode does not match with the set mode.
<b>NET_DVR_NOENOUGH_BUF</b>	43	Buffer is not enough.
<b>NET_DVR_CREATESOCKET_ERROR</b>	44	Create SOCKET error.
<b>NET_DVR_SETSOCKET_ERROR</b>	45	Set SOCKET error.
<b>NET_DVR_MAX_NUM</b>	46	The number of login or preview connections has exceeded the SDK limitation.
<b>NET_DVR_USERNOTEXIST</b>	47	User does not exist. The user ID has been logged out or unavailable.
<b>NET_DVR_WRITEFLASHERROR</b>	48	Writing FLASH error. Failed to write FLASH during device upgrade.
<b>NET_DVR_UPGRADEFAIL</b>	49	Failed to upgrade device. It is caused by network problem or the language mismatch between the device and the upgrade file.
<b>NET_DVR_CARDHAVEINIT</b>	50	The decode card has already been initialed.
<b>NET_DVR_PLAYERFAILED</b>	51	Failed to call API of player SDK.
<b>NET_DVR_MAX_USERNUM</b>	52	The number of login user has reached the maximum limit.
<b>NET_DVR_GETLOCALIPANDMACFAIL</b>	53	Failed to get the IP address or physical address of local PC.
<b>NET_DVR_NOENCODEING</b>	54	This channel hasn't started encoding.
<b>NET_DVR_IPMISMATCH</b>	55	IP address not match.
<b>NET_DVR_MACMISMATCH</b>	56	MAC address not match.
<b>NET_DVR_UPGRADELANGMISMATCH</b>	57	The language of upgrading file does not match the language of the device.

<b>NET_DVR_MAX_PLAYERPORT</b>	58	The number of player ports has reached the maximum limit.
<b>NET_DVR_NOSPACEBACKUP</b>	59	No enough space to backup file in backup device.
<b>NET_DVR_NODEVICEBACKUP</b>	60	No backup device.
<b>NET_DVR_PICTURE_BITS_ERROR</b>	61	The color quality setting of the picture does not match the requirement, and it should be limited to 24.
<b>NET_DVR_PICTURE_DIMENSION_ERROR</b>	62	The dimension is over 128x256.
<b>NET_DVR_PICTURE_SIZ_ERROR</b>	63	The size of picture is over 100K.
<b>NET_DVR_LOADPLAYERSDKFAILED</b>	64	Failed to load the player SDK.
<b>NET_DVR_LOADPLAYERSDKPROC_ERROR</b>	65	Can not find the function in player SDK.
<b>NET_DVR_LOADDSSDKFAILED</b>	66	Failed to load the library file-"DsSdk".
<b>NET_DVR_LOADDSSDKPROC_ERROR</b>	67	Can not find the API in "DsSdk".
<b>NET_DVR_DSSDK_ERROR</b>	68	Failed to call the API in "DsSdk".
<b>NET_DVR_VOICEMONOPOLIZE</b>	69	Sound adapter has been monopolized.
<b>NET_DVR_JOINMULTICASTFAILED</b>	70	Failed to join to multicast group.
<b>NET_DVR_CREATEDIR_ERROR</b>	71	Failed to create log file directory.
<b>NET_DVR_BINDSOCKET_ERROR</b>	72	Failed to bind socket.
<b>NET_DVR_SOCKETCLOSE_ERROR</b>	73	Socket disconnected. It is caused by network disconnection or destination unreachable.
<b>NET_DVR_USERID_ISUSING</b>	74	The user ID is operating when logout.
<b>NET_DVR_SOCKETLISTEN_ERROR</b>	75	Failed to listen.
<b>NET_DVR_PROGRAM_EXCEPTION</b>	76	SDK program exception.
<b>NET_DVR_WRITEFILE_FAILED</b>	77	Failed to write file, during local recording, saving picture or downloading record file.
<b>NET_DVR_FORMAT_READONLY</b>	78	Failed to format read-only HD.
<b>NET_DVR_WITHSAMEUSERNAME</b>	79	This user name already exists in the user configuration structure.
<b>NET_DVR_DEVICETYPE_ERROR</b>	80	Device type does not match when import configuration.
<b>NET_DVR_LANGUAGE_ERROR</b>	81	Language does not match when import configuration.
<b>NET_DVR_PARAVERSION_ERROR</b>	82	Software version does not match when import configuration.
<b>NET_DVR_IPCHAN_NOTALIVE</b>	83	IP channel is not on-line when previewing.
<b>NET_DVR_RTSP_SDK_ERROR</b>	84	Load StreamTransClient.dll failed.
<b>NET_DVR_CONVERT_SDK_ERROR</b>	85	Load SystemTransform.dll failed.
<b>NET_DVR_IPC_COUNT_OVERFLOW</b>	86	Exceeds maximum number of connected IP channels.
<b>NET_DVR_MAX_ADD_NUM</b>	87	Exceeds maximum number of supported record labels or other operations.
<b>NET_DVR_PARAMMODE_ERROR</b>	88	Image intensifier, parameter mode error. This error may occur when client sets software or hardware parameters.
<b>NET_DVR_CODESPITTER_OFFLINE</b>	89	Code splitter is offline.
<b>NET_DVR_BACKUP_COPYING</b>	90	Device is backing up.
<b>NET_DVR_CHAN_NOTSUPPORT</b>	91	Channel not support.
<b>NET_DVR_CALLINEINVALID</b>	92	The height line location is too concentrated, or the length line is not inclined enough.

NET_DVR_CALCANCELCONFLICT	93	Cancel calibration conflict, if the rule and overall actual size filter have been set.
NET_DVR_CALPOINTOUTRANGE	94	Calibration point exceeds the range.
NET_DVR_FILTERRECTINVALID	95	The size filter does not meet the requirement.
NET_DVR_DDNS_DEVOFFLINE	96	Device has not registered to DDNS.
NET_DVR_DDNS_INTER_ERROR	97	DDNS inner error.
NET_DVR_ALIAS_DUPLICATE	150	Alias is duplicate (for EasyDDNS)
NET_DVR_DEV_NET_OVERFLOW	800	Network traffic is over device ability limit.
NET_DVR_STATUS_RECORDFILE_WRITING _NOT_LOCK	801	The video file is recording and can't be locked.
NET_DVR_STATUS_CANT_FORMAT_LITTLE _DISK	802	The hard disk capacity is too small and can not be formatted.
<b>Error code of RAID</b>		
NET_DVR_NAME_NOT_ONLY	200	This user name already exists.
NET_DVR_OVER_MAX_ARRAY	201	The array exceeds the limitation.
NET_DVR_OVER_MAX_VD	202	The virtual disk exceeds the limitation.
NET_DVR_VD_SLOT_EXCEED	203	The virtual disk slots are full.
NET_DVR_PD_STATUS_INVALID	204	Physical disk used to rebuild RAID is in error state.
NET_DVR_PD_BE_DEDICATE_SPARE	205	Physical disk used to rebuild RAID is assigned as spare disk.
NET_DVR_PD_NOT_FREE	206	Physical disk used to rebuild RAID is not free.
NET_DVR_CANNOT_MIG2NEWMODE	207	Can not migrate from current RAID type to the new type.
NET_DVR_MIG_PAUSE	208	Migration has been paused.
NET_DVR_MIG_ABORTED	209	Migration has been aborted.
NET_DVR_EXIST_VD	210	There is virtual disk in the array, and the array can not be deleted.
NET_DVR_TARGET_IN_LD_FUNCTIONAL	211	Target physical disk is part of the virtual disk and is functional.
NET_DVR_HD_IS_ASSIGNED_ALREADY	212	Specified physical disk is assigned as a virtual disk.
NET_DVR_INVALID_HD_COUNT	213	Number of physical disks doesn't fit the specified RAID level.
NET_DVR_LD_IS_FUNCTIONAL	214	Specified virtual disk is functional and it can not be rebuilt.
NET_DVR_BGA_RUNNING	215	BGA is running.
NET_DVR_LD_NO_ATAPI	216	Can not create virtual disk with ATAPI drive.
NET_DVR_MIGRATION_NOT_NEED	217	Migration is not necessary.
NET_DVR_HD_TYPE_MISMATCH	218	Physical disks are not of the same type.
NET_DVR_NO_LD_IN_DG	219	No virtual disk exists on the specified array.
NET_DVR_NO_ROOM_FOR_SPARE	220	Disk space is too small to be assigned as spare drive.
NET_DVR_SPARE_IS_IN_MULTI_DG	221	Disk is already assigned as a spare drive for an array.
NET_DVR_DG_HAS_MISSING_PD	222	Disk is missing from an array.

Error code of intelligent device		
NET_DVR_ID_ERROR	300	Configuration ID is illegal.
NET_DVR_POLYGON_ERROR	301	Polygon does not match requirement.
NET_DVR_RULE_PARAM_ERROR	302	Rule parameter is illegal.
NET_DVR_RULE_CFG_CONFLICT	303	Configuration conflict.
NET_DVR_CALIBRATE_NOT_READY	304	Calibration not ready.
NET_DVR_CAMERA_DATA_ERROR	305	Camera parameter is illegal.
NET_DVR_CALIBRATE_DATA_UNFIT	306	Not inclined enough, not fit to calibrate.
NET_DVR_CALIBRATE_DATA_CONFLICT	307	Calibration error.
NET_DVR_CALIBRATE_CALC_FAIL	308	Failed to calculate camera calibration parameter.
NET_DVR_CALIBRATE_LINE_OUT_RECT	309	The input calibrating line exceeds the external rectangle sample.
NET_DVR_ENTER_RULE_NOT_READY	310	Enter rule not ready.
NET_DVR_AID_RULE_NO_INCLUDE_LANE	311	It does not include lane in the traffic event rule (especial for traffic jam or driving against the traffic).
NET_DVR_LANE_NOT_READY	312	Lane not ready.
NET_DVR_RULE_INCLUDE_TWO_WAY	313	There are two different directions in event rule.
NET_DVR_LANE_TPS_RULE_CONFLICT	314	The lane conflicts with the data rule.
NET_DVR_NOT_SUPPORT_EVENT_TYPE	315	The event type is not supported by the device.
NET_DVR_LANE_NO_WAY	316	The lane has no direction.
NET_DVR_SIZE_FILTER_ERROR	317	The size of filter is illegal.
NET_DVR_LIB_FFL_NO_FACE	318	There is no face when feature point positioning.
NET_DVR_LIB_FFL_IMG_TOO_SMALL	319	The input image is too small when feature point positioning.
NET_DVR_LIB_FD_IMG_NO_FACE	320	The input image has no face when detecting face in single image.
NET_DVR_LIB_FACE_TOO_SMALL	321	Face is too small when building model.
NET_DVR_LIB_FACE_QUALITY_TOO_BAD	322	Face image is of poor quality when building model.
NET_DVR_KEY_PARAM_ERR	323	Advanced parameter setting error.
NET_DVR_CALIBRATE_DATA_ERR	324	Calibration sample size error, or data value error, or sample points beyond the horizon
NET_DVR_CALIBRATE_DISABLE_FAIL	325	The configured rules do not allow to cancel calibration.

## 6.2 Error code of RTSP communication library

Error	Value	Message
NET_DVR_RTSP_GETPORTFAILED	407	RTSP port getting error.
NET_DVR_RTSP_DESCRIBESENDTIMEOUT	411	Sending "RTSP DESCRIBE" is timeout.
NET_DVR_RTSP_DESCRIBESENDERROR	412	Failed to send "RTSP DESCRIBE".
NET_DVR_RTSP_DESCRIBERCVTIMEOUT	413	Receiving "RTSP DESCRIBE" is timeout.
NET_DVR_RTSP_DESCRIBERCVDATALOST	414	Receiving data of "RTSP DESCRIBE" error.
NET_DVR_RTSP_DESCRIBERCVERROR	415	Failed to receive "RTSP DESCRIBE".

NET_DVR_RTSP_DESCRIPTESERVERERR	416	"RTSP DESCRIBE" device returns the error that values 401 or 501.
NET_DVR_RTSP_SETUPSENDTIMEOUT	421	Sending "RTSP SETUP" is timeout.
NET_DVR_RTSP_SETUPSENDERERROR	422	Sending "RTSP SETUP" error.
NET_DVR_RTSP_SETUPRECVTIMEOUT	423	Receiving "RTSP SETUP" is timeout.
NET_DVR_RTSP_SETUPRECVDATALOST	424	Receiving data of "RTSP SETUP" error.
NET_DVR_RTSP_SETUPRECVERROR	425	Failed to receive "RTSP SETUP".
NET_DVR_RTSP_OVER_MAX_CHAN	426	"RTSP SETUP" device returns the error that values 401 or 501. It exceeds the max connection number.
NET_DVR_RTSP_PLAYSENDTIMEOUT	431	Sending "RTSP PLAY" is timeout.
NET_DVR_RTSP_PLAYSENDERERROR	432	Sending "RTSP PLAY" error.
NET_DVR_RTSP_PLAYRECVTIMEOUT	433	Receiving "RTSP PLAY" is timeout.
NET_DVR_RTSP_PLAYRECVDATALOST	434	Receiving data of "RTSP PLAY" error.
NET_DVR_RTSP_PLAYRECVERROR	435	Failed to receive "RTSP PLAY".
NET_DVR_RTSP_PLAYSERVERERR	436	"RTSP PLAY" device returns the error that values 401 or 501.
NET_DVR_RTSP_TEARDOWNSENDTIMEOUT	441	Sending "RTSP TEARDOWN" is timeout.
NET_DVR_RTSP_TEARDOWNSENDERERROR	442	Sending "RTSP TEARDOWN" error.
NET_DVR_RTSP_TEARDOWNRECVTIMEOUT	443	Receiving "RTSP TEARDOWN" is timeout.
NET_DVR_RTSP_TEARDOWNRECVDATALOST	444	Receiving data of "RTSP TEARDOWN" error.
NET_DVR_RTSP_TEARDOWNRECVERROR	445	Failed to receive "RTSP TEARDOWN".
NET_DVR_RTSP_TEARDOWNSENDERERR	446	"RTSP TEARDOWN" device returns the error that values 401 or 501.

### 6.3 Error code of software decoding library

Error	Value	Message
NET_PLAYM4_NOERROR	500	No error.
NET_PLAYM4_PARA_OVER	501	Input parameter is invalid.
NET_PLAYM4_ORDER_ERROR	502	API calling order error.
NET_PLAYM4_TIMER_ERROR	503	Failed to create multimedia clock.
NET_PLAYM4_DEC_VIDEO_ERROR	504	Failed to decode video data.
NET_PLAYM4_DEC_AUDIO_ERROR	505	Failed to decode audio data.
NET_PLAYM4_ALLOC_MEMORY_ERROR	506	Failed to allocate memory.
NET_PLAYM4_OPEN_FILE_ERROR	507	Failed to open the file.
NET_PLAYM4_CREATE_OBJ_ERROR	508	Failed to create thread event.
NET_PLAYM4_CREATE_DDRAW_ERROR	509	Failed to create DirectDraw object.
NET_PLAYM4_CREATE_OFFSCREEN_ERROR	510	Failed to create backstage cache for OFFSCREEN

		mode.
<b>NET_PLAYM4_BUF_OVER</b>	511	Buffer overflow, failed to input stream.
<b>NET_PLAYM4_CREATE_SOUND_ERROR</b>	512	Failed to create audio equipment.
<b>NET_PLAYM4_SET_VOLUME_ERROR</b>	513	Failed to set the volume.
<b>NET_PLAYM4_SUPPORT_FILE_ONLY</b>	514	This API can be called only for file playback mode.
<b>NET_PLAYM4_SUPPORT_STREAM_ONLY</b>	515	This API can be called only when playing stream.
<b>NET_PLAYM4_SYS_NOT_SUPPORT</b>	516	Not support by the system. Decoder can only work on the system above Pentium 3.
<b>NET_PLAYM4_FILEHEADER_UNKNOWN</b>	517	There is no file header.
<b>NET_PLAYM4_VERSION_INCORRECT</b>	518	The version mismatch between decoder and encoder.
<b>NET_PLAYM4_INIT_DECODER_ERROR</b>	519	Failed to initialize the decoder.
<b>NET_PLAYM4_CHECK_FILE_ERROR</b>	520	The file is too short, or the stream data is unknown.
<b>NET_PLAYM4_INIT_TIMER_ERROR</b>	521	Failed to initialize multimedia clock.
<b>NET_PLAYM4_BLT_ERROR</b>	522	BLT failure.
<b>NET_PLAYM4_UPDATE_ERROR</b>	523	Failed to update overlay surface
<b>NET_PLAYM4_OPEN_FILE_ERROR_MULTI</b>	524	Failed to open video & audio stream file.
<b>NET_PLAYM4_OPEN_FILE_ERROR_VIDEO</b>	525	Failed to open video stream file.
<b>NET_PLAYM4_JPEG_COMPRESS_ERROR</b>	526	JPEG compression error.
<b>NET_PLAYM4_EXTRACT_NOT_SUPPORT</b>	527	Don't support the version of this file.
<b>NET_PLAYM4_EXTRACT_DATA_ERROR</b>	528	Extract video data failed.