

SPRNT User’s Manual

Frank Liu
IBM Research Austin

Version 1.2.2

April 16, 2014

1 Overview

SPRNT (Simulation Program for River Networks) is a dynamic river network simulation software tool. In a nutshell, it solves a network of river channels modeled by Saint Venant Equations. Unlike some other river modeling software, SPRNT is designed as an “engine”, and does not provide a fully-featured user interface. Instead, the channel networks, forcing terms and boundary conditions are specified as a “netlist”, which is text-based and human-readable. The simulation results are also saved in a text file, therefore it’s easily readable by modelers and can be plotted by any scientific visualization software.

After reading the SPRNT “netlist”, SPRNT performs the following functions:

1. A topological checking on the connectivity of the river network, as well as the proper specification of forcing terms and boundary conditions;
2. The steady solve of the system of Saint Venant equations to computer the correct initial condition;
3. The unsteady solve with time-varying forcing terms and boundary conditions.

Because it is structured as an “engine”, SPRNT can also be invoked through a set of API (Application Programming Interface) calls. Through the API, another model can construct the river networks, specify forcing terms and boundary conditions, as well as perform various steady and unsteady solves. Since the data exchange is accomplished through the internal function calls, the existing data will remain valid within the computer memory as far as the SPRNT object is not deleted from the memory. Therefore, the SPRNT simulation can be performed as go-stop-go-stop pattern. By utilizing this feature, SPRNT can be integrated in other models, such as a hydrological or run-off model.

1.1 Physical model

SPRNT solves the non-conservative form of the Saint Venant Equations:

$$\frac{\partial A}{\partial t} + \frac{\partial}{\partial x} Q = q_l \quad (1)$$

and

$$\frac{\partial Q}{\partial t} + \frac{\partial}{\partial x} \left(\beta \frac{Q^2}{A} \right) + gA \frac{\partial y}{\partial x} = gA(S_0 - S_f) \quad (2)$$

in which A is the “wetted area”, y is the depth, Q is the flow rate, S_R is slope of the “reference slope line”, and S_f is the “friction slope”, which describes how “resistive” the river channel is. In SPRNT, the friction slope is modeled by the classic Chezy-Manning equation:

$$S_f = n^2 \frac{Q^2}{A^2 R^{4/3}} \quad (3)$$

where n is the “Manning’s n ” and R is the “hydraulic radius”, which is defined as $R = \frac{A}{P}$, where P is the perimeter of the wetted area A .

Numerically SPRNT uses a modified Preissman discretization scheme. Innovative algorithms are implemented to achieve fast runtime performance and big capacity to handle large networks. More technical details of SPRNT can be found in Liu and Hodges, “Applying microprocessor analysis methods to river network modeling”, Elsevier Environmental Modeling and Software (doi: 10.1016/j.envsoft.2013.09.013)

2 Data Specifications

In SPRNT, a river network is partitioned into multiple branches, each of which is called a “reach”. A network of “reaches” forms the complete river network. Each reach is represented by multiple computational nodes. An illustrative example in Fig. 1 shows how to approximate a river network into a computational model.

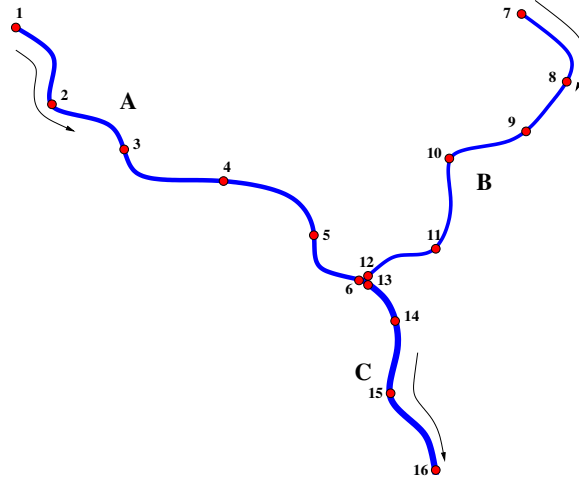


Figure 1: An illustrative river network with three branches and the collection of computational nodes modeling it

2.1 Computational Node

In SPRNT, a computational node reflects a position along a river channel where the river physics behavior is computed. At each node, two variables (A and Q) are computed by solving the related Saint Venant Equations (Eqn. (1) and (2)). For example, in Fig. 1, six nodes are used to model segment A , while 6 nodes are used to model segment B . For each node, besides a unique node id, the user should also specify at least three other input parameters: *slope of the reference slope line* (S_r), *Manning’s n* and a *cross section description*. Optionally the user can also provide the elevation of the reference slope line, the offset of the river bathymetry bottom and the slope reference line if the reporting of the surface elevation is needed. In addition, users can also provide each node an X-Y coordinate (usually the GPS coordinate). The coordinates will not be used in the computation, but merely as references.

The modeling of the bathymetry data in SPRNT is handled by introducing a “slope line”. Refer to the river profile shown in Fig. 2. We introduce a smooth “slope line” even though the true river bottom profile is jagged. It is expected that the “slope line” has gradually varying slopes which are specified in the netlist as the S_R . At each bathymetry data point, the elevation of the “slope line” is the elevation Z_R (use the datum as the reference). The distance between the true river bottom and the “slope line” is the offset h_R . Note that in most cases Z_R is positive. However h_R can be positive or negative. If the “slope line” is below the river bathymetry bottom, then h_R is positive. If the slope line is above the river bathymetry bottom, then h_R is negative. In either case, the relationship $Z_R = Z_B + h_R$ always holds. Fig. 2 provides a visual illustration. Fig. 3 provide a side view of the river channel, in which at lactation 1, h_R is positive since the

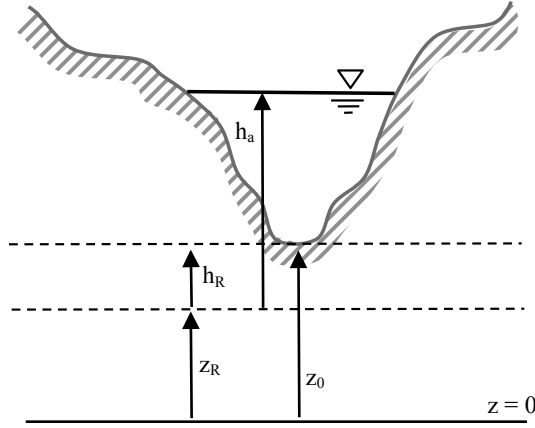


Figure 2: Relationship between bottom elevation, water depth and the surface elevation

slope line is below the bathymetry bottom. While at location 2, h_R is negative since the slope line is above the bathymetry river bottom.

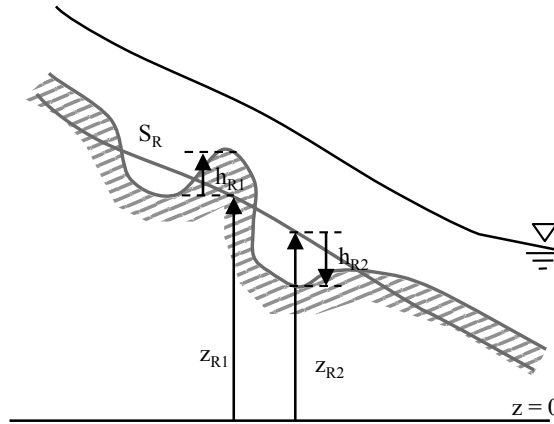


Figure 3: Positive h_R and negative h_R

2.2 Reference Slope

The slope of the reference line (S_R line in Fig. 3) should be consistent with the river segment length. See Subsection. 2.5 for further discussions. A typical value would be between 10^{-2} and 10^{-4} .

2.3 Manning's n

Manning's n is an empirical coefficient to describe the “resistance” of the river segment. A typical value of n would be 0.01.

2.4 Cross Section

Three types of cross sections are supported in SPRNT: rectangular, trapezoidal, and tabulated xy.

For trapezoidal cross section, it is assumed that two side walls are symmetric. Only two coefficients are required to specify a trapezoidal cross section: the bottom width (b_0) and the side wall slope (S , which is

defined as the cotangent of the side wall angle with respect to the horizon). An illustration is shown in Fig. 4. In this case the slope should be specified as $\text{ctan}(\theta) = \frac{0.5}{1.0} = 0.5$. For rectangular cross-section, only the bottom width is needed.

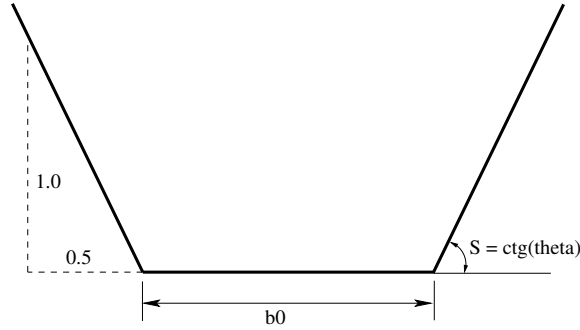


Figure 4: Two coefficients are required to specify a trapezoidal cross section.

A tabulated xy cross section is specified by a table of the Y-Z value across a cut-line perpendicular to the flow direction. Note that at least three pairs are required to define a channel. An illustrative example of a tabulated xy cross section is shown in Fig. 5. In the figure, the red dots are specified in the table. The river bank cross section is defined by connecting the red dots, as indicated in the black line.

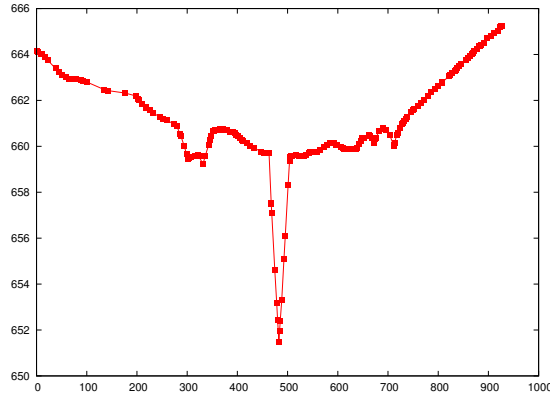


Figure 5: An illustrative example of a cross-section described by tabulated XY values.

2.5 Distance between the Nodes

When the nodes are connected along the river channel, the only set of parameters required is the distance between two adjacent nodes. Either the meandering distance or the Euclidean distance can be used. However, the reference slope should be consistent with the distance.

2.6 Junction Point

The combination of two upstream tributaries into the downstream branch is described by a junction point. Physically there is only one point in the natural river for each junction. In SPRNT, the physical junction point is split into three computational nodes (nodes 6, 12 and 13 in Fig. 1). Each node is connected to individual branches, each of which is described by a set of Saint Venant Equations. Mass conservation is applied to the three nodes (For example, water flow rate into node 13 equals the water flowing out of nodes 6 and 12). Another coefficient is required to describe the flow contributions between the two upstream nodes.

For example, if two branches have equal amount of water flow contribution, then the ratios should be 0.5 and 0.5. However, if branch *A* contributes 70% of flow into branch *C*, then the ratio should be 0.7 and 0.3.

2.7 Forcing Terms

The forcing terms are the water flows specified at the upstream pour-in points in the river networks. For the illustrative examples shown in Fig. 1, forcing terms at node 1 and 7 are required. Each forcing term is specified as a time series and should be provided from upstream hydrographs. When there is no water flow inside the channel, St Venant Equations become singular. Therefore, certain level of small flow is needed, which is often referred as the “base flow”. In other words, the forcing terms should never be smaller than the base flow. Normally a base flow between $0.02m^3/s$ to $0.1m^3/s$ are good choices.

2.8 Lateral Inflow

A lateral inflow can be specified each each node. For example, there is an inflow between nodes 4 and 5 in Fig. 6. The lateral flow is applied to the whole segment between two adjacent nodes. For the node at which there is no lateral inflow defined, it is assumed that the lateral inflow is zero.

2.9 Downstream Boundary Condition

A boundary condition specifying the downstream depth is required. In the illustrative example in Fig. 6, a downstream depth y (or equivalently, the wetted area A) should be specified at node 16. It should be specified as a time series.

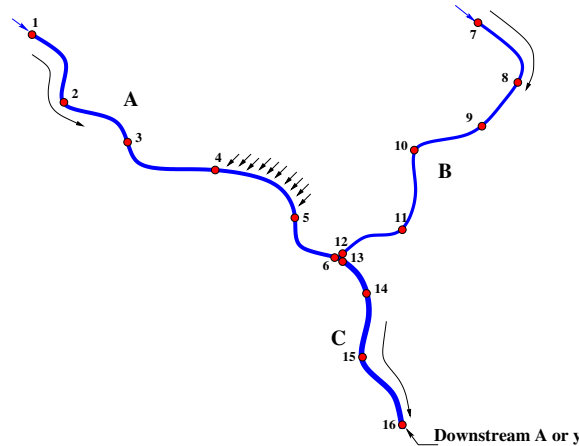


Figure 6: The forcing terms, lateral inflow and downstream depth needed to model the flow.

3 Format of Input Data in Netlist

In SPRNT, the description of the river network is specified in a “netlist”. Each netlist consists of the specifications of nodes, segments, branches, forcing terms, lateral flows, downstream boundary conditions, as well as options which are directives on how the simulation should be performed. The following is a sample netlist, followed by more detailed explanations.

```
1 ## automatically generated by a translation script on Jul 12 2013 15:46:33 CDT
2 ##
3 ## one segment river bed, test the mixture of xy and trap x-section
4 ## start from base flow 1 and spin down
5
6 def options metric=1 end
7 def options epoch=2013-12-02T02:30:00Z end
```

```

8 def options TimeStep=60 TimeStepUnit=second end
9 def options PrtInterval=2 PrtIntervalUnit=minute end
10 def options PrtQ=1 PrtA=1 PrtDepth=1 PrtSurfElev=1 PrtCoord = 1 end
11
12 def node id=node_1 sr=0.0083 n=0.04 zr=707.23 hr=0.0 xcoord=123.45 ycoord=567.89
13   def xy
14     x=0.0 y=6.0
15     x=2.5 y=1.0
16     x=3.5 y=1.0
17     x=6.0 y=6
18   end
19 end
20
21 def node id=2 sr=0.0083 n=0.04 zr=707.23 hr=0.0
22   def trapezoidal
23     BottomWidth=1 slope=0.5
24   end
25 end
26
27 def node id=3 sr=0.0083 n=0.04 zr=707.23 hr=0.0
28   def xy
29     x=0.0 y=6.0
30     x=2.5 y=1.0
31     x=3.5 y=1.0
32     x=6.0 y=6
33   end
34 end
35
36 def node id=4 sr=0.0083 n=0.04 zr=707.23 hr=0.0
37   def trapezoidal
38     BottomWidth=1 slope=0.5
39   end
40 end
41
42 def node id=5 sr=0.0083 n=0.04 zr=707.23 hr=0.0
43   def xy
44     x=0.0 y=6.0
45     x=2.5 y=1.0
46     x=3.5 y=1.0
47     x=6.0 y=6
48   end
49 end
50
51 def node id=6 sr=0.0083 n=0.04 zr=707.23 hr=0.0
52   def xy
53     x=0.0 y=6.0
54     x=2.5 y=1.0
55     x=3.5 y=1.0
56     x=6.0 y=6
57   end
58 end
59
60
61 def segment up=node_1 down=2 Length=40 end
62 def segment up=2 down=3 Length=40 end
63 def segment up=3 down=4 length=40 end
64 def segment up=4 down=5 length=40 end
65 def segment up=5 down=6 length=40 end
66
67 def qsource
68   location=node_1
69   def TimeSeries
70     TimeUnit=minute
71     t=0 v=1.0
72     t=1 v=1.0
73     t=2 v=0.5
74     t=4 v=0.1
75     t=6 v=0.5

```

```

76      t=80 v=0.1
77      t=100 v=0.1
78      t=1000 v=0.1
79      t=1200 v=0.5
80      t=1400 v=1.0
81      t=2500 v=1.0
82      t=5000 v=1.0
83  end
84 end
85
86
87 def BoundaryCondition
88     location=6 type=area
89     def timeseries
90         TimeUnit=minute
91         t=0 v=1
92         t=2800 v=1
93     end
94 end
95
96 def options
97     StopTime=8 StopTimeUnit=minute
98 end
99
100 ## end

```

3.1 General Syntax

A SPRNT netlist consists of many blocks, each block is defined by two keywords: **def** and **end**. Within each **def** and **end** block, the values are specified by **keyword = value** pairs. Multiple **keyword = value** pairs are allowed, depending on the requirement of the specific block. Also **def** and **end** block can be nested, again depends on the nature of the block. Note that the two keywords are case insensitive. Therefore, it is perfectly legal to use **Def-End** or **DEF-END** to define the blocks. Or **dEf-EnD**.

3.2 Top-Level Functional Blocks

The functional keyword immediately following the **def** keyword defines the nature of the top-level block. In the current version there are seven top-level keywords to define the blocks **node**, **segment**, **junction**, **qsource**, **lateralsource**, **boundarycondition** and **options**. Note that the functional keywords are also case insensitive. For better readability, it is perfectly fine to use **BoundaryCondition** instead of **boundarycondition**.

3.3 Secondary Level Functional Blocks

Within each top-level block, it may be necessary to include secondary functional blocks by nesting **def-end** blocks. The following secondary functional blocks are needed when specifying nodes: **trapezoidal**, **rectangular**, **xy**. A **timeseries** subblock is needed when defining **qsource**, **lateralsource** and **boundarycondition**. Again the secondary functional keywords are also case insensitive.

3.4 Single Line Format

It is preferred to have the keywords **def** and **end** the first word in a new line. However, it is allowed to have empty space ahead of the keywords to enhance readability, which could be useful for nested blocks. In the case of short blocks, it is allowed to have one-line **def-end** blocks, such as in the **options** and **segment** blocks. Examples can be found in the example above.

3.5 Keyword-Value Pairs

Within each block, the values are specified as **keyword = value** pairs. Usually more than one pairs are needed to completely define the specification. The sequence of those pairs has no effect. For example, the

pair `def options metric=1 prtq=1 end` has the exactly same effect as `def options prtq=1 metric=1 end`. Both of them indicate that the flow rate Q will be printed, and the netlist is specified using metric units. More details are provided later in this section.

3.6 Comments and Empty Lines

Empty lines will be ignored. Any lines starting with an number sign (`#`) will be treated as comments and ignored. The asterisk (`*`) and percentage sign (`%`) can also be used to indicate comments. Be careful that the comment sign should be the very first character in the comment line. To make the netlist readable, it is always a good habit to leave some comments in the netlist for future reference.

3.7 Node

To define a node, the block should be defined as `def node, end`. Each block defines a unique node on the river channel. The following keywords are available within a `node` block:

3.7.1 Id

Required. Defines the id of the node. As with other keywords, it is case insensitive. Therefore the exact keyword could be `id`, `Id` or other combination. It should be followed by the name of the node as `id=node_name`. The node name should:

- Be numeric or alphabetic
- Be less than 60 characters long
- NOT contain equal sign (`=`), colon (`:`), semi-colon (`;`), comma (`,`), space, or tab.

A convenient approach is to use underscore (`_`) to replace space. Also note that that unlike the keyword (“id”), the node names are case sensitive. Therefore a node with the name of `crossing_@_first_&_51st_street` will be considered a different node compared to `crossing_@_first_&_51ST_Street`.

3.7.2 SR

Required. Specifies the slope of the “slope line” at the node. It should be followed by a real number. Scientific notation is allowed. Hence it can be `s0=0.00012` or `s0 = 1.2e-4`.

3.7.3 N

Required. This is the Manning’s n at the node. It should be followed by a real number.

3.7.4 ZR

Required. This is the elevation of the “slope line” relative to the datum for the s_R line. It should be followed by a real number. Normally a positive number is used since the datum is always the lowest point. But in reality any real values can be used.

3.7.5 HR

Required. This is the relative elevation of the s_R line with respect to the true river bed bottom. It should be followed by a real number. Depends on the relative position of the river bottom, it could be either positive or negative.

3.7.6 Xcoord

Optional. This is the x-coordinate of the node when looked from above. It should be followed by a real number. The value of the x-coordinate is not used in the simulation. It is only useful when printing the solutions. The default value is -1.

3.7.7 Ycoord

Optional. Y-coordinate of the node. Same as the x-coordinate.

3.8 Cross section block

Each node should have at least one of the three cross section specifications: **rectangular**, **trapezoidal** or **xy**. Note that two **end** keywords are needed at end of the specification.

3.8.1 Rectangular

Specifies a rectangular cross section. Currently the only keyword is **bottomwidth**. Again the keyword is case insensitive. Therefore it is more readable to use **BottomWidth**. It should be followed by a positive real number.

3.8.2 Trapezoidal

Specifies a trapezoidal cross section. Two keywords are required **bottomwidth** and **slope**. The slope is the ratio between the offsets and is dimensionless.

3.8.3 XY

Specifies a XY cross section. It is specified by a table of the relative distance on the cut-line on the river (X) with the relative elevation of each point (Y). The length of each XY block can be arbitrary, but should have at least 3 entries. (Two points only define a straight line and does not define a channel).

3.9 Segment

The **segment** block defines a segment, which connects two adjacent nodes along the channel. The keywords are:

3.9.1 Up

Required. Specifies the upstream node. If the upstream node is not defined by a **node** block, an error will occur. The matching is performed by comparing the node names.

3.9.2 Down

Required. Specifies the downstream node.

3.9.3 Length

Required. Specify the length of the segment. The unit is determined by the Metric option.

3.10 Junction

Specifies how two branches should be merged. The current implementation uses a linear mixing scheme. The keywords are:

3.10.1 Up1

Required. The name of the first upstream node.

3.10.2 Up2

Required. The name of the second upstream node.

3.10.3 Down

Required. The name of the downstream node.

3.10.4 Coeff1

Required. The mixing coefficient associated with the first upstream node. The required value should be a positive real number.

3.10.5 Coeff2

Required. The mixing coefficient associated with the second upstream node.

Here is an example of the `junction`:

```
def junction down=n100 up1=n80 up2=n20 coeff1=0.45 coeff2=0.55 end
```

The above statement means that the reach ended with node `n80` merges with the reach ended with node `n20` and pours into the reach started with node `n100`. The mixing coefficients are 0.45 and 0.55 respectively.

3.11 Qsource

A `qsource` block defines a Q source at the upstream pour-in points of the network. It is defined by a location as well as a time-series.

3.11.1 Location

Required. It should be followed by the node name where it is applied. This particular node should be the first node in the reach.

3.11.2 TimeSeries

Required. The length of the block can be arbitrary, but it should be at least of length of two. Two keywords are required, time `t` and value `v`. It also requires a field to specify the unit of the time by using the keyword `TimeUnit`. The possible options are `second`, `minute` or `hour`. The unit of the values (flow rate Q) is determined by the Metric in option.

3.12 LateralSource

A `LateralSource` block defines a lateral Q source. It has exactly same syntax as the `Qsource`. The difference is that the lateral inflow will be applied to the segment connecting two adjacent nodes.

3.13 BoundaryCondition

A `BoundaryCondition` block defines the boundary condition at the downstream node. It requires three keywords:

3.13.1 Location

Required. Should a node name.

3.13.2 Type

Required. SPRNT supports two type of boundary conditions, either wetted area (use `area`) , or the equivalent depth (use `depth`).

3.13.3 TimeSeries

Required. It defines a time-series to specify time-varying boundary condition. A constant boundary condition can be specified by a time series with only two entries, with identical `v` values. The unit of provided value is determined by the Metric option.

3.14 Options

The option block is applied to control the behavior of the simulation. An option block is defined by keyword `options`. Note that multiple `options` blocks can be specified. The net effects are additive. If conflicting options are specified, the last one will be effective.

3.14.1 Stoptime

Required. This is the only required field among the options. It specifies for how long the dynamic simulation should be performed. It should be specified by a real number.

3.14.2 StoptimeUnit

Optional. The unit of the stop time specified above. The possible options are `second`, `minute` and `hour`. The default value is `second`.

3.14.3 Timestep

Optional. Default value is 0. The time step used in unsteady simulation. If zero is specified, SPRNT will automatically determine the optimal time step to be used. If a nonzero value is specified, SPRNT will honor the specified time step by not taking any time steps larger. However, SPRNT may take smaller time steps when the river physics behavior requires so. In other words, the provide time step is just the upper bound of real time steps. Caution: excessively small time step could make the simulation very slow. For example, simulating a 7-day event at time step of 1 second will require 604,800 time points, which could take a long time to finish.

3.14.4 TimestepUnit

Optional. The unit of the time step specified. Default value is `second`.

3.14.5 PrtInterval

Optional. Specifies how often the solutions should be printed. Note that the printing interval is different from the simulation time step. The printing interval at a fixed value. Caution: excessively small print interval can generate very large disk files and can slow down the overall simulation time. When zero value is specified, the results will be printed based on raw simulation time steps. Default value is zero.

3.14.6 PrtIntervalUnit

Optional. Default value is `second`. The unit used to specify the print interval above.

3.14.7 PrtStart

Optional. Default value is 0. The value specifies the starting time when the dynamic simulation is required to store. The dynamic simulation always start at time point 0. However, in certain circumstances it is desirable to ignore some of the earlier results. This value is used to specify the starting time for print.

3.14.8 PrtStartUnit

Optional. Default value is `second`. The unit of the above specification.

3.14.9 **PrtQ**

Optional. Default value is 0. The value should be specified either 0 or 1. When the flag is specified, the flow rate Q at each node will be printed in the result file. Note that the printing behavior is further controlled by **PrtInterval** and **PrtStart**.

3.14.10 **PrtA**

Optional. Default value is 0. The value should be specified either 0 or 1. When the flag is specified, the wetted area at each node will be printed in the result file.

3.14.11 **PrtDepth**

Optional. Default value is 0. The value should be specified either 0 or 1. When the flag is specified, the depth at each node will be printed in the result file.

3.14.12 **PrtSurfElev**

Optional. Default value is 0. The value should be specified either 0 or 1. When the flag is specified, the surface elevation at each node will be printed in the result file. Note that at least one of the above four flags have to be selected in order to enable the Generation of the result file.

3.14.13 **PrtCoord**

Optional. Default value is 0. The value should be specified either 0 or 1. When the flag is specified, the x- and y-coordinate of each node will be printed along with the other specified quantities.

3.14.14 **CheckOnly**

Optional. Default value is 0. The value should be specified either as 0 or 1. When the flag is turned on, SPRNT will only perform a topological check and will not perform the simulation at all. This could be useful for quick debug of the netlist.

3.14.15 **SSFile**

Optional. Default value is empty. It should be followed by a file-name. If such a file-name is specified, SPRNT will try to locate file which contains the steady-state solutions of the given river network. If it is found, the content of the file will be loaded into SPRNT as the suggestions for steady-state solutions. If the file is specified, the computed steady-state solutions will be stored in the file for later use. The content of the SSFile should not be tempered with in any way.

3.14.16 **Metric**

Optional. Default value is 0. The value should be either 0 or 1. When the flag is specified as 1, the netlist is in metric units. In particular, the flow rate will be in m^3/s , the length and depth will be in m , and the wetted area will be in m^2 . When the flag is not specified (0), the flow rate will be in ft^3/s , the length and depth will be in ft and the wetted area will be in ft^2 . This option will also affect how the results are stored.

3.14.17 **Verbose**

Optional. Default value is 0. If the value is set to 1, more status reports will be printed on the screen during the steady and unsteady solution steps.

3.14.18 Epoch

Optional. Default value is 1970-01-01T00:00:00Z. SPRNT always starts simulation from time point 0. The epoch time indicates the real-world time this time point 0 refers to. The value will not be used within SPRNT. Instead it will be simply printed in the output file for reference. The value is treated as a string, therefore the format is arbitrary. However, it should not contain any space (' '), equal sign (=), comma (,), or period (.). The default value is the epoch time on Unix systems, which corresponds to 00 hour UTC on January 1st, 1970.

4 SPRNT Output of the Sample Netlist

The output of the previous netlist is as follows:

```
1 *** SPRNt Results. Netlist: "test.spt" Epoch: "2013-12-02T02:30:00Z" Requested Tstop: 8 min
2 *** id time(min) flow(m3/s) wet_a(m2) depth(m) surf_elev(m) xy-coordinates
3 node_1 0 1.000000e+00 8.767511e-01 6.593638e-01 7.078893e+02 123.4500 567.8900
4 2 0 1.000000e+00 8.767403e-01 6.593615e-01 7.078893e+02 -1.0000 -1.0000
5 3 0 1.000000e+00 8.767709e-01 6.593758e-01 7.078894e+02 -1.0000 -1.0000
6 4 0 1.000000e+00 8.764441e-01 6.591830e-01 7.078892e+02 -1.0000 -1.0000
7 5 0 1.000000e+00 8.815245e-01 6.622367e-01 7.078922e+02 -1.0000 -1.0000
8 6 0 1.000000e+00 1.000000e+00 7.320598e-01 7.079620e+02 -1.0000 -1.0000
9 *** id time(min) flow(m3/s) wet_a(m2) depth(m) surf_elev(m) xy-coordinates
10 node_1 2 5.000000e-01 5.799957e-01 4.696818e-01 7.076997e+02 123.4500 567.8900
11 2 2 6.633108e-01 6.835633e-01 5.385469e-01 7.077685e+02 -1.0000 -1.0000
12 3 2 7.707245e-01 7.477068e-01 5.796802e-01 7.078097e+02 -1.0000 -1.0000
13 4 2 8.428390e-01 7.891648e-01 6.057178e-01 7.078357e+02 -1.0000 -1.0000
14 5 2 8.920259e-01 8.212431e-01 6.255824e-01 7.078556e+02 -1.0000 -1.0000
15 6 2 9.121197e-01 1.000000e+00 7.320598e-01 7.079620e+02 -1.0000 -1.0000
16 *** id time(min) flow(m3/s) wet_a(m2) depth(m) surf_elev(m) xy-coordinates
17 node_1 4 1.000000e-01 2.016738e-01 1.846242e-01 7.074146e+02 123.4500 567.8900
18 2 4 2.246723e-01 3.282551e-01 2.870549e-01 7.075170e+02 -1.0000 -1.0000
19 3 4 3.348487e-01 4.297309e-01 3.636133e-01 7.075936e+02 -1.0000 -1.0000
20 4 4 4.381515e-01 4.984963e-01 4.131499e-01 7.076431e+02 -1.0000 -1.0000
21 5 4 5.218083e-01 6.238072e-01 4.992042e-01 7.077292e+02 -1.0000 -1.0000
22 6 4 5.545738e-01 1.000000e+00 7.320598e-01 7.079620e+02 -1.0000 -1.0000
23 *** id time(min) flow(m3/s) wet_a(m2) depth(m) surf_elev(m) xy-coordinates
24 node_1 6 5.000000e-01 5.033456e-01 4.165868e-01 7.076466e+02 123.4500 567.8900
25 2 6 4.114452e-01 4.408587e-01 3.717570e-01 7.076017e+02 -1.0000 -1.0000
26 3 6 3.558093e-01 4.161239e-01 3.536064e-01 7.075836e+02 -1.0000 -1.0000
27 4 6 3.407731e-01 3.876073e-01 3.323718e-01 7.075624e+02 -1.0000 -1.0000
28 5 6 3.462465e-01 5.531844e-01 4.513355e-01 7.076813e+02 -1.0000 -1.0000
29 6 6 3.494974e-01 1.000000e+00 7.320598e-01 7.079620e+02 -1.0000 -1.0000
30 *** id time(min) flow(m3/s) wet_a(m2) depth(m) surf_elev(m) xy-coordinates
31 node_1 8 4.891892e-01 5.184549e-01 4.272165e-01 7.076572e+02 123.4500 567.8900
32 2 8 4.836288e-01 5.101433e-01 4.213679e-01 7.076513e+02 -1.0000 -1.0000
33 3 8 4.688917e-01 5.020420e-01 4.156659e-01 7.076456e+02 -1.0000 -1.0000
34 4 8 4.469708e-01 4.679022e-01 3.913319e-01 7.076213e+02 -1.0000 -1.0000
35 5 8 4.276960e-01 5.926982e-01 4.782997e-01 7.077083e+02 -1.0000 -1.0000
36 6 8 4.208896e-01 1.000000e+00 7.320598e-01 7.079620e+02 -1.0000 -1.0000
```

The comments in lines 1, 8, 15, 22 and 29 explain the meaning of each field and their units. Note only the first node “node_1” has x- and y-coordinates. The x- and y-coordinates are not specified. Therefore the default value of -1 is printed.