

EasyFlash Application Support

Thomas 'skoe' Giesel (skoe@directbox.com)
ALeX Kazik

May 25, 2012

Contents

Contents	1
1 Easy File System (EasyFS)	2
1.1 Introduction	2
1.2 Cartridge Layout	2
1.3 Directory Entry	3
2 Supported cartridge types	7
2.1 Native EasyFlash Cartridges	7
2.2 Normal 8 KiB Cartridges	7
2.3 Normal 16 KiB Cartridges	8
2.4 Ultimax Cartridges	8
2.5 Ocean Cartridges	8
3 EasyFlash xbank Cartridges	10

Chapter 1

Easy File System (EasyFS)

If you want to store files onto an EasyFlash cartridge, you have to implement a kind of file system. Easy File System (EasyFS) is a file system which is used e.g. by the well known EasyLoader.

1.1 Introduction

The original EasyFS specification (EasyFS1) did only store information on how to launch an entry but doesn't have sufficient information for determining the exact layout of the cartridge data. The EasyFS2 specification described in this document addresses this problem and provides some other improvements, such as more flexibility for PRG file layout. The differences to the EasyFS1 format are noted for historical purposes. The name "EasyFS" is used whenever the information is common to both versions. Newly created tools should use EasyFS2.

This file system is not bound to the EasyFlash hardware or vice versa. It is a proposal programmers may find useful because there are some tools already which support it. If you are not familiar with the EasyFlash architecture you should read EasyFlash-ProgRef.pdf first.

1.2 Cartridge Layout

An example memory layout of an cartridge using EasyFS is shown in 1.1.

Cartridges using EasyFS always use the 16 KiB cartridge mode, which is configured by the start-up code by setting /GAME and /EXROM active (low). All explanations in this chapter refer to this configuration.

If your cartridge makes use of the EasyFS, it contains a directory structure. This structure resides at 00:1:0000. This means it is visible at \$A000 in 16 KiB mode when bank 0 is selected.

A directory shall not contain more than 255 entries (excluding end mark). We will see that each entry has a size of 24 Bytes, so the whole directory can have a size of up to \$1800 Bytes. Behind the directory there is space of \$0800 bytes for EasyAPI and the start-up code and data.

Remember that ROMH is banked in in Ultimix mode at \$E000 after a reset. Therefore the start-up code contains the reset vector.

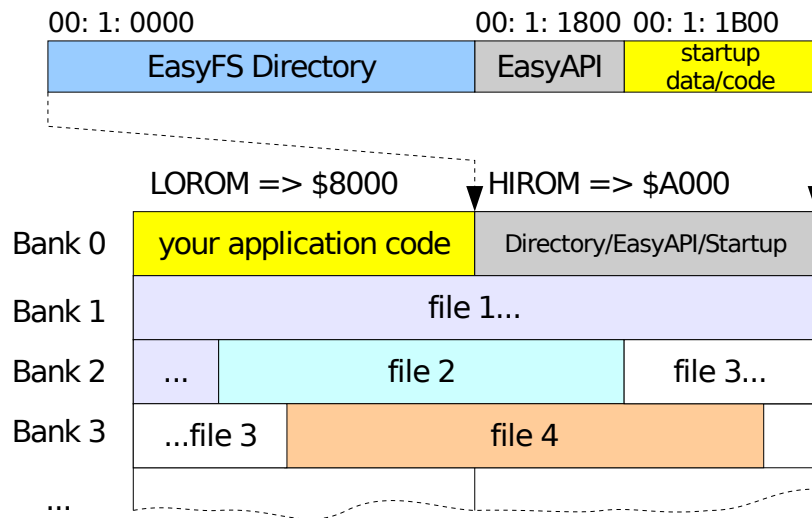


Figure 1.1: EasyFS cartridge layout

1.3 Directory Entry

The directory consists of up to 255 of the following entries (excluding end mark). Table 1.1 shows the format of EasyFS directory entries.

Field	Size	Comment
Name	16 bytes	File name, 16 characters PETSCII, 0-padded
Flags	1 byte	File type and some flags
Bank	1 byte	Bank where the file starts, 0..63
Bank High	1 byte	Reserved, always 0
Offset/CrtUsage ¹	2 bytes	For files: start offset in this bank 0..\$3FFF, little endian; For anything else: see CrtUsage table 1.4
Size	3 bytes	File size, little endian

Table 1.1: EasyFS file entry

Flags

Table 1.2 contains the meaning of the flags field. The bit H means hidden. If this is 1, this file is not intended to be seen by a user, a file browser should not show it. Reserved bits marked with R must ² be set to 1.

Table 1.3 shows possible values of the Type field.

¹Has a different meaning in EasyFS1

²Unfortunately many tools have ignored this rule. Encountering a cartridge image that uses 0 for the R bits is likely.

³This type is new to EasyFS2

Bit	7	6	5	4	3	2	1	0
Meaning	H	R	R	Type				

Table 1.2: Flags in EasyFS file entries

Field	Type
\$00	Files with this type are marked as invalid, they must be skipped. Note that the flags of this file may be not 0.
\$01	Normal PRG file with 2 bytes start address
\$02	Normal PRG file with 2 bytes start address, only ROML used ³
\$03	Normal PRG file with 2 bytes start address, only ROMH used ³
...	Reserved
\$10	Normal 8 KiB cartridge (\$8000..\$9FFF)
\$11	Normal 16 KiB cartridge (\$8000..\$9FFF, \$A000..\$BFFF)
\$12	Normal Ultimac cartridge (\$8000..\$9FFF, \$E000..\$FFFF)
\$13	Normal Ultimac cartridge, ROML not used (\$E000..\$FFFF)
\$14	Ocean Type 1, 512 KiB ³
\$15	Ocean Type 1, 16 KiB to 256 KiB (alternating banks) ³
...	Reserved
\$1C	xbank, start in 8 KiB mode, any size ³
\$1D	xbank, start in 16 KiB mode, any size ³
\$1E	xbank, start in Ultimac mode, any size ³
\$1F	End of directory. This entry is only a terminator.

Table 1.3: EasyFS file types

Note that in erased flash memory all bits are 1. This means that an entry located in erased flash has the type \$1F naturally. Furthermore, when flash is written, bits can only turn from 1 to 0. It is not possible to change a bit from 0 to 1 when writing to flash memory. That's why the file type \$00 marks a deleted or invalid file. \$00 can be written regardless from the old file type by only changing ones to zeros.

When starting a CRT (type \$10..\$1E) the two lowest bits describe the mode to start in. The whole information is useful in extracting entries from an assembled cartridge.

Bank

The EasyFS1 defined the two Bank bytes as 1 byte for Bank and 1 reserved byte, which has to be 0. With the EasyFS2 it is a 2 byte wide, so all EasyFS1 entries are full compatible.

CrtUsage

Table 1.4 shows the meaning of the CrtUsage field. Note that this field is EasyFS2 specific. EasyFS1 has this field set to either \$0000 or \$2000 for all cartridge entries (the offset, \$2000 for 8 KiB ultimax cartridges, \$0000 for all others). This field is only used for entries of type cartridge (Type \$10..\$1E).

Bit	Meaning
15	Must be 1
14	1 if the cartridge should be seen as a subdirectory (only valid for EasyFlash and xbank)
13	1 if the cartridge must be placed on a 64 KiB boundary (only valid for xbank)
12..8	Number of banks free at the beginning of the opposite ROM (0..31)
7..0	Number of banks in the opposite ROM (0..255)

Table 1.4: EasyFS2 CrtUsage field

In order to safely extract an entry from an assembled cartridge it's necessary to know exactly which space it occupies. For files that's easy: it starts on a specified bank and offset and when it hits the end of a bank it just continues to the next. For a cartridge it can be more complex.

Table 1.5 shows the usage of the Shadow of the Beast cartridge. In order to specify which banks are used the use of only Offset and Size is not sufficient.

Bank	ROML	ROMH
31	-	Used
...	-	Used
16	-	Used
15	Used	-
...	Used	-
0	Used	-

Table 1.5: Example Bank Usage (256 KiB Ocean Type 1)

The "opposite ROM" is the ROM (LO or HI) which does not contain the startup code. For normal cartridges the startup code is in the ROML, thus the opposite is ROMH. Ultimax cartridges on the other hand do have the startup code in ROMH (making ROML the opposite).

In case of the Shadow of the Beast cartridge there are 16 banks in the opposite ROM and also 16 banks free at the beginning of the opposite ROM. Now it's easy to calculate how much of the "non opposite" ROM is filled: number of total banks (256 KiB / 8 KiB = 32) minus the banks used in the opposite ROM (16) results in 16 banks.

The opposite ROM is defined as follows:

- ROMH when Type & 3 is 0 or 1
- ROML when Type & 3 is 2 or 3

When bit 15 of CrtUsage (for cartridges) is 0 then this is an old EasyFS1 entry and it's not known which banks this cartridge occupies. It's unsafe to extract this entry.

Chapter 2

Supported cartridge types

Different types of cartridge images can be written to and started from an EasyFlash cartridge. Let's have find out how these work.

2.1 Native EasyFlash Cartridges

Native EasyFlash Cartridges can use the full flash memory of 1 MiB. They can use any kind of banking which is supported by the EasyFlash hardware in any way they want. This is most probably the cartridge format you want to develop for.

EasySDK comes with some tools and code snippets to create, write and read EasyFlash cartridges. As already mentioned, EasyFlash cartridges always start in Ultimax mode. Therefore there is a small boot code required at the end of the ROMH flash chip on bank 0 (00:1:1xxx). This start-up code is executed directly after a CPU reset. The start-up code has to:

- Provide the reset vector
- Initialize the CPU registers \$01 and \$00 (in this order)
- Initialize all I/O you need (SID, VIC-II etc.)
- Scan the keyboard
- Set up \$DE02 and start the stuff

A reference implementation for the start-up code can be found in `examples/banking-test`.

If a native EasyFlash CRT wants to write to the flash memory, it may contain a piece of code called EasyAPI. This is described in `EasySDK.pdf`.

The memory area from 00:01:1800 to 00:01:1BFF is reserved for EasyAPI. So the startup code and data can occupy e.g. the area 00:01:1C00 to 00:01:1FFF. A part of this area may be used to embed a cartridge name, refer to `EasySDK.pdf` for more information.

2.2 Normal 8 KiB Cartridges

Normal 8 KiB cartridges consist of up to 8 KiB of ROM visible at \$8000 (ROML). This type of cartridges pulls down /EXROM and leaves /GAME high.

EasyFlash cartridges always start in Ultimex mode. Therefore EasyProg adds start-up code automatically when flashing 8 KiB cartridges.

[illegible]

Example 2: A 256 KiB Ocean cartridge looks like this:

```
BANK 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1
      0 1 2 3 4 5 6 7 8 9 A B C D E F 0 1 2 3 4 5 6 7 8 9 A B C D E F

ROML P P P P P P P P P P P P P P P P / / / / / / / / / / / / / /
ROMH / / / / / / / / / / / / / / / P P P P P P P P P P P P P P P P
```

There is a completely different type of Ocean cartridge, the 512 KiB type (Terminator II):

This type also uses \$DE00 for banking. It uses 64 banks of 8 KiB each. All banks are read from 8 KiB of ROM visible at \$8000 (ROML). This type of cartridges pulls down /EXROM and leaves /GAME high.

Example 3: A 512 KiB Ocean cartridge looks like this:

```
BANK 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 2 ... 3 3
      0 1 2 3 4 5 6 7 8 9 A B C D E F 0 1 2 3 4 5 6 7 8 9 A B C D E 0 ... E F

ROML P P P P P P P P P P P P P P P P P P P P P P P P P P P P P P ... P P
```

Ocean cartridge have the advantage to be also compatible to older emulators. On the other hand the format is not very intuitive.

EasyFlash cartridges always start in Ultimex mode. Therefore EasyProg adds start-up code automatically when flashing Ocean cartridges.

Chapter 3

EasyFlash xbank Cartridges

The EasyFlash xbank cartridge format is a multi-bank cartridge format which can be placed at any bank in the flash, though all the banks must be continuous. This makes it possible to combine several xbank cartridges into one cartridge.

Unlike other cartridge types wrapped into *.CRT files this one does not represent a physical cartridge. Nevertheless the CRT container format is used for it. The format is similar to the EasyFlash cartridge format. The main difference is that it can be placed on any bank, unlike EasyFlash or e.g. Ocean Type 1 cartridges. This makes it possible to have more than one multibank cartridge on a single EasyFlash.

The GAME and EXROM configuration in the CRT header will be used to determine which mode should be set at start-up. This is done by the start-up code. This code will also write the right start bank to \$DE00 and start the cartridge using the CPU Reset Vector.

The start bank will also be stored in \$DF00 and the program has to care itself for the addition of the relative bank and the offset before writing it into the banking register.

EasyProg adds start-up code automatically when flashing an xbank cartridge directly. Currently EasyProg does not automatically replace/patch EasyAPI for xbank cartridges.

The magic cartridge id is 33 (\$21).