

ENGINE ECU (European Spec.) INSPECTION


ED026-02

HINT:

The ECD circuit can be checked by measuring the resistance and voltage at the wiring connectors of the engine ECU.

1. **REMOVE ENGINE ECU FROM VEHICLE BODY**
2. **INSPECT VOLTAGE OF ENGINE ECU**
(See page DI-18)
3. **INSPECT RESISTANCE OF ECD CIRCUITRY**

Terminals	Condition	STD resistance (Ω)
LU+A \leftrightarrow +B	–	15 – 30
LU-A \leftrightarrow +B	–	15 – 30
LU+B \leftrightarrow +B	–	15 – 30
LU-B \leftrightarrow +B	–	15 – 30
THA \leftrightarrow E2	Intake air temp. 20 °C (68 °F)	2.0 – 3.0k
THF \leftrightarrow E2	Fuel temp. 20 °C (68 °F)	2.0 – 3.0k
THW \leftrightarrow E2	Coolant temp. 80 °C (176 °F)	0.2 – 0.4k
TDC+ \leftrightarrow TDC–	Cold (–10 °C (14 °F) to 50 °C (122 °F))	19 – 32
TDC+ \leftrightarrow TDC–	Hot (50 °C (122 °F) to 100 °C (212 °F))	24 – 37
NE+ \leftrightarrow NE–	–	205 – 255
TCV \leftrightarrow +B	–	10 – 16
EGR \leftrightarrow +B	–	11 – 18
EGRC \leftrightarrow +B	25 °C (77 °F)	30 – 40
PA \leftrightarrow +B	25 °C (77 °F)	30 – 40
SVR \leftrightarrow +B	–	60 – 80
IREL \leftrightarrow E01	–	4 – 8
MREL \leftrightarrow E01	–	60 – 80
SCV \leftrightarrow +B	–	30 – 40

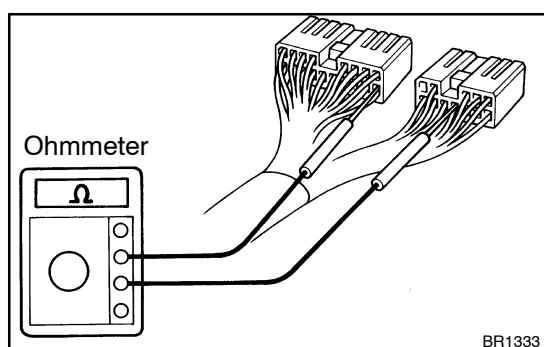

- (a) Turn the ignition switch OFF.
- (b) Disconnect the 4 connectors from the engine ECU.
- (c) Measure the resistance between each terminal of the wiring connectors.

NOTICE:

- **Do not touch the engine ECU terminals.**
- **The tester probe should be inserted in the wiring connector from the wiring side**