



Vimba

# Vimba 1394 TL Features Manual

1.6.0

# Legal Notice

## Trademarks

Unless stated otherwise, all trademarks appearing in this document are brands protected by law.

## Warranty

The information provided by Allied Vision is supplied without any guarantees or warranty whatsoever, be it specific or implicit. Also excluded are all implicit warranties concerning the negotiability, the suitability for specific applications or the non-breaking of laws and patents. Even if we assume that the information supplied to us is accurate, errors and inaccuracy may still occur.

## Copyright

All texts, pictures and graphics are protected by copyright and other laws protecting intellectual property.

All rights reserved.

Headquarters:  
Allied Vision Technologies GmbH  
Taschenweg 2a  
D-07646 Stadtroda, Germany  
Tel.: +49 (0)36428 6770  
Fax: +49 (0)36428 677-28  
e-mail: [info@alliedvision.com](mailto:info@alliedvision.com)

# Contents

<b>1</b>	<b>Contacting Allied Vision</b>	<b>12</b>
<b>2</b>	<b>Document history and conventions</b>	<b>13</b>
2.1	Document history . . . . .	14
2.2	Conventions used in this manual . . . . .	14
2.2.1	Styles . . . . .	14
2.2.2	Symbols . . . . .	15
<b>3</b>	<b>Vimba1394TL - Overview</b>	<b>16</b>
<b>4</b>	<b>Vimba1394TL System Features</b>	<b>17</b>
4.1	SystemInformation . . . . .	18
4.1.1	TLVendorName . . . . .	18
4.1.2	TLModelName . . . . .	18
4.1.3	TLID . . . . .	19
4.1.4	TLDisplayName . . . . .	19
4.1.5	TLVersion . . . . .	19
4.1.6	TLPath . . . . .	20
4.1.7	TLType . . . . .	20
4.1.8	GenTLVersionMajor . . . . .	20
4.1.9	GenTLVersionMinor . . . . .	21
4.1.10	GenTLSFNCVersionMajor . . . . .	21
4.1.11	GenTLSFNCVersionMinor . . . . .	21
4.1.12	GenTLSFNCVersionSubMinor . . . . .	22
4.2	InterfaceEnumeration . . . . .	22
4.2.1	InterfaceUpdateList . . . . .	22
4.2.2	InterfaceCount [Allied Vision] . . . . .	22
4.2.3	InterfaceSelector . . . . .	23
4.2.4	InterfaceID . . . . .	23
4.2.5	InterfaceDisplayName [Allied Vision] . . . . .	23
<b>5</b>	<b>Vimba1394TL Interface Features</b>	<b>24</b>
5.1	InterfaceInformation . . . . .	25
5.1.1	InterfaceID . . . . .	25
5.1.2	InterfaceType . . . . .	25
5.1.3	InterfaceDisplayName . . . . .	26
5.2	DeviceEnumeration . . . . .	26
5.2.1	DeviceUpdateList . . . . .	26
5.2.2	DeviceCount [Allied Vision] . . . . .	26
5.2.3	DeviceSelector . . . . .	27

5.2.4	DeviceID . . . . .	27
5.2.5	DeviceDisplayName [Allied Vision] . . . . .	27
5.2.6	DeviceVendorName . . . . .	28
5.2.7	DeviceModelName . . . . .	28
5.2.8	DeviceType [Allied Vision] . . . . .	28
5.2.9	DeviceAccessStatus . . . . .	29
<b>6</b>	<b>Vimba1394TL Device Features</b>	<b>30</b>
6.1	DeviceInformation . . . . .	31
6.1.1	DeviceID . . . . .	31
6.1.2	DeviceVendorName . . . . .	31
6.1.3	DeviceModelName . . . . .	32
6.1.4	DeviceType . . . . .	32
6.1.5	DeviceDisplayName . . . . .	32
6.2	StreamEnumeration . . . . .	33
6.2.1	StreamCount [Allied Vision] . . . . .	33
6.2.2	StreamSelector . . . . .	33
6.2.3	StreamID . . . . .	33
<b>7</b>	<b>Vimba1394TL DataStream Features</b>	<b>35</b>
7.1	StreamInformation . . . . .	36
7.1.1	StreamID . . . . .	36
7.1.2	StreamType . . . . .	36
7.1.3	StreamIsGrabbing [Allied Vision] . . . . .	37
7.2	BufferHandlingControl . . . . .	37
7.2.1	StreamAnnouncedBufferCount . . . . .	37
7.2.2	StreamBufferHandlingMode . . . . .	37
7.2.3	StreamAnnounceBufferMinimum . . . . .	38
7.2.4	DriverBuffersCount [Allied Vision] . . . . .	38
<b>8</b>	<b>Vimba1394TL Camera Features</b>	<b>39</b>
8.1	1394 registers, FireGrab parameters and the Vimba1394TL features . . . . .	40
8.2	DeviceControl . . . . .	42
8.2.1	DeviceVendorName . . . . .	42
8.2.2	DeviceModelName . . . . .	42
8.2.3	DeviceFirmwareVersion . . . . .	43
8.2.4	FirmwareVerMajor [Allied Vision] . . . . .	43
8.2.5	FirmwareVerMinor [Allied Vision] . . . . .	43
8.2.6	FirmwareVerBuild [Allied Vision] . . . . .	44
8.2.7	DeviceMicrocontrollerVersion [Allied Vision] . . . . .	44
8.2.8	DeviceSFNCVersionMajor . . . . .	44
8.2.9	DeviceSFNCVersionMinor . . . . .	45

8.2.10	DeviceSFNCVersionSubMinor	45
8.2.11	DeviceID	45
8.2.12	DeviceSerialNumber [Allied Vision]	46
8.2.13	DeviceScanType	46
8.2.14	DeviceStatusLightEnable [Allied Vision]	46
8.2.15	DeviceAccessRegisterAddress [Allied Vision]	47
8.2.16	DeviceAccessRegisterValue [Allied Vision]	47
8.3	ImageFormatControl	47
8.3.1	SensorWidth	48
8.3.2	SensorHeight	48
8.3.3	SensorTaps	48
8.3.4	SensorDigitizationTaps	49
8.3.5	SensorBits [Allied Vision]	49
8.3.6	Width	49
8.3.7	Height	50
8.3.8	WidthMax	50
8.3.9	HeightMax	50
8.3.10	OffsetX	51
8.3.11	OffsetY	51
8.3.12	BinningHorizontal	51
8.3.13	BinningVertical	52
8.3.14	DecimationHorizontal	52
8.3.15	DecimationVertical	52
8.3.16	ReverseX	53
8.3.17	ReverseY	53
8.3.18	PixelFormat	54
8.3.19	PixelColorFilter	54
8.3.20	PixelColorFilterAuto [Allied Vision]	54
8.3.21	ImageSize [Allied Vision]	55
8.3.22	TestImageSelector	55
8.3.23	IIDCActivateFormat7 [Allied Vision]	56
8.3.24	IIDCMode [Allied Vision]	56
8.3.25	IIDCModeDescription [Allied Vision]	57
8.4	AcquisitionControl	58
8.4.1	AcquisitionMode	59
8.4.2	AcquisitionStart	59
8.4.3	AcquisitionStop	59
8.4.4	AcquisitionAbort	60
8.4.5	AcquisitionFrameCount	60
8.4.6	AcquisitionFrameRate	60
8.4.7	AcquisitionFrameRateLimit [Allied Vision]	61

8.4.8	DeferredTransportDisable [Allied Vision]	61
8.4.9	HighSNRImages [Allied Vision]	61
8.4.10	TriggerSelector	62
8.4.11	TriggerMode	62
8.4.12	TriggerSoftware	62
8.4.13	TriggerSource	63
8.4.14	TriggerActivation	63
8.4.15	TriggerDelay	64
8.4.16	ExposureMode	64
8.4.17	ExposureTime	64
8.4.18	ExposureOffset [Allied Vision]	65
8.4.19	ExposureTimeRaw	65
8.4.20	ExposureAuto	65
8.5	ExposureAutoControl [Allied Vision]	66
8.5.1	ExposureAutoTimebase [Allied Vision]	66
8.5.2	ExposureAutoMin [Allied Vision]	67
8.5.3	ExposureAutoMax [Allied Vision]	67
8.5.4	ExposureAutoTarget [Allied Vision]	67
8.5.5	ExposureAutoAlg [Allied Vision]	68
8.6	DigitalIOControl	68
8.6.1	LineSelector	69
8.6.2	LineMode	69
8.6.3	LineInverter	69
8.6.4	LineStatus	70
8.6.5	LineSource	70
8.6.6	LineRouting [Allied Vision]	71
8.6.7	LineFormat	71
8.6.8	LineDebounceTime [Allied Vision]	71
8.6.9	LineModulationPulseWidth [Allied Vision]	72
8.6.10	LineModulationPeriod [Allied Vision]	72
8.6.11	IntEnaDelayTime [Allied Vision]	73
8.6.12	IntEnaDelayEnable [Allied Vision]	73
8.7	SerialPortControl [Allied Vision]	73
8.7.1	SerialPortSelector [Allied Vision]	74
8.7.2	SerialPortModeSelector [Allied Vision]	74
8.7.3	SerialPortBaudRate [Allied Vision]	74
8.7.4	SerialPortCharLength [Allied Vision]	75
8.7.5	SerialPortParity [Allied Vision]	75
8.7.6	SerialPortStopBits [Allied Vision]	75
8.7.7	SerialPortTransmitReady [Allied Vision]	76
8.7.8	SerialPortReceiveReady [Allied Vision]	76

8.7.9	SerialPortReceiveOverrunError [Allied Vision]	76
8.7.10	SerialPortReceiveFramingError [Allied Vision]	77
8.7.11	SerialPortReceiveParityError [Allied Vision]	77
8.7.12	SerialPortBuffer [Allied Vision]	77
8.7.13	SerialPortValidReceiveSize [Allied Vision]	78
8.7.14	SerialPortRemainingReceiveSize [Allied Vision]	78
8.7.15	SerialPortTransmitSize [Allied Vision]	78
8.8	AnalogControl	78
8.8.1	GainSelector	79
8.8.2	Gain	79
8.8.3	GainRaw	80
8.8.4	GainAuto	80
8.8.5	GainAutoTarget [Allied Vision]	80
8.8.6	BlackLevelSelector	81
8.8.7	BlackLevel	81
8.8.8	Gamma	81
8.8.9	GammaRaw [Allied Vision]	82
8.8.10	BalanceRatioSelector	82
8.8.11	BalanceRatioRaw [Allied Vision]	83
8.8.12	BalanceWhiteAuto	83
8.9	LUTControl	83
8.9.1	LUTSelector	84
8.9.2	LUTEnable	84
8.9.3	LUTCount [Allied Vision]	85
8.9.4	LUTSizeBytes [Allied Vision]	85
8.9.5	LUTBitDepthIn [Allied Vision]	85
8.9.6	LUTBitDepthOut [Allied Vision]	86
8.10	TransportLayerControl	86
8.10.1	PayloadSize	87
8.10.2	IIDCPHyspeed [Allied Vision]	87
8.10.3	IIDCFreeBandwidth [Allied Vision]	88
8.10.4	IIDCPacketSizeMaximum [Allied Vision]	88
8.10.5	IIDCUseStandardPacketSizeMaximum [Allied Vision]	88
8.10.6	IIDCPacketSizeAuto [Allied Vision]	89
8.10.7	IIDCPacketSize [Allied Vision]	89
8.10.8	IIDCPacketCount [Allied Vision]	89
8.10.9	IIDCCameraAcceptDelay [Allied Vision]	90
8.10.10	IIDCIsoChannelAuto [Allied Vision]	90
8.10.11	IIDCIsoChannel [Allied Vision]	90
8.10.12	IIDCBusNumber [Allied Vision]	91
8.11	UserSetControl	91

8.11.1	UserSetSelector . . . . .	91
8.11.2	UserSetLoad . . . . .	92
8.11.3	UserSetSave . . . . .	92
8.11.4	UserSetMakeDefault [Allied Vision] . . . . .	92
8.11.5	UserSetOperationStatus [Allied Vision] . . . . .	93
8.11.6	UserSetOperationResult [Allied Vision] . . . . .	93
8.12	FileAccessControl . . . . .	93
8.12.1	FileSelector . . . . .	94
8.12.2	FileStatus [Allied Vision] . . . . .	95
8.12.3	FileOperationSelector . . . . .	95
8.12.4	FileOperationExecute . . . . .	95
8.12.5	FileOpenMode . . . . .	96
8.12.6	FileAccessBuffer . . . . .	96
8.12.7	FileAccessOffset . . . . .	96
8.12.8	FileAccessLength . . . . .	97
8.12.9	FileOperationStatus . . . . .	97
8.12.10	FileOperationResult . . . . .	97
8.12.11	FileSize . . . . .	98
8.13	ColorTransformationControl . . . . .	98
8.13.1	ColorTransformationSelector . . . . .	98
8.13.2	ColorTransformationEnable . . . . .	99
8.13.3	ColorTransformationReset [Allied Vision] . . . . .	99
8.13.4	ColorTransformationValueSelector . . . . .	99
8.13.5	ColorTransformationValue . . . . .	100
8.13.6	Hue [Allied Vision] . . . . .	100
8.13.7	HueRaw [Allied Vision] . . . . .	100
8.13.8	HueEnable [Allied Vision] . . . . .	101
8.13.9	Saturation [Allied Vision] . . . . .	101
8.13.10	SaturationRaw [Allied Vision] . . . . .	101
8.13.11	SaturationEnable [Allied Vision] . . . . .	102
8.14	AutofunctionControl [Allied Vision] . . . . .	102
8.14.1	AutofunctionTargetIntensity [Allied Vision] . . . . .	102
8.14.2	AutofunctionAOIEnable [Allied Vision] . . . . .	103
8.14.3	AutofunctionAOIShowArea [Allied Vision] . . . . .	103
8.14.4	AutofunctionAOIWidth [Allied Vision] . . . . .	103
8.14.5	AutofunctionAOIHeight [Allied Vision] . . . . .	104
8.14.6	AutofunctionAOIOffsetX [Allied Vision] . . . . .	104
8.14.7	AutofunctionAOIOffsetY [Allied Vision] . . . . .	104
8.15	ImageQualityControl [Allied Vision] . . . . .	105
8.15.1	ShadingCorrectionEnable [Allied Vision] . . . . .	105
8.15.2	ShadingCorrectionShowData [Allied Vision] . . . . .	105



8.15.3	ShadingDataBuildImages [Allied Vision]	105
8.15.4	ShadingDataBuild [Allied Vision]	106
8.15.5	ShadingDataLoadFromFlash [Allied Vision]	106
8.15.6	ShadingDataSaveToFlash [Allied Vision]	106
8.15.7	ShadingDataClearFlash [Allied Vision]	107
8.15.8	ShadingDataMaxSize [Allied Vision]	107
8.15.9	SmearReductionEnable [Allied Vision]	107
<b>9</b>	<b>Vimba functional extensions to GenTL</b>	<b>108</b>
9.1	Custom Transport Layer events	109
9.1.1	Additions to EVENT_TYPE_LIST	109
9.1.2	Additions to EVENT_DATA_INFO_CMD_LIST	109
9.1.3	Additional enumeration IFCHANGE_WHAT_LIST	109
9.2	Additional URL information	110
9.2.1	Additions to URL_INFO_CMD_LIST	110

# List of Tables

1	Translation of feature values known from IIDC/FireGrab . . . . .	41
---	--	----

# Listings

1	Event types . . . . .	109
2	Change Events . . . . .	109
3	Change Event options . . . . .	110
4	URL information . . . . .	110

# 1 Contacting Allied Vision

## **Contact information on our website**

<https://www.alliedvision.com/en/meta-header/contact-us>

## **Find an Allied Vision office or distributor**

<https://www.alliedvision.com/en/about-us/where-we-are>

## **Email**

[info@alliedvision.com](mailto:info@alliedvision.com)  
[support@alliedvision.com](mailto:support@alliedvision.com)

## **Sales Offices**

EMEA: +49 36428-677-230  
North and South America: +1 978 225 2030  
California: +1 408 721 1965  
Asia-Pacific: +65 6634-9027  
China: +86 (21) 64861133

## **Headquarters**

Allied Vision Technologies GmbH  
Taschenweg 2a  
07646 Stadtroda  
Germany

Tel: +49 (0)36428 677-0  
Fax: +49 (0)36428 677-28  
Managing Directors (Geschäftsführer): Andreas Gerke, Peter Tix

## 2 Document history and conventions



This chapter includes:

2.1	Document history . . . . .	14
2.2	Conventions used in this manual . . . . .	14
2.2.1	Styles . . . . .	14
2.2.2	Symbols . . . . .	15

## 2.1 Document history

Version	Date	Changes
1.0	2013-01-15	Initial version
1.1	2013-03-07	Added more detailed category information, changed the layout
1.2	2013-06-05	Refined many descriptions, changed the document layout as well as the table layout for the features
1.3	2014-07-10	Changes due to GenTL 1.3 compliance, added chapter for finding camera features
1.4.1	2015-11-09	Renamed several Vimba components and documents ("AVT" no longer in use), links to new Allied Vision website
1.4.2	2016-02-27	New document layout
1.5.0	June 2019	Bug fixes
1.6.0	October 2019	GenTL 1.5 support

## 2.2 Conventions used in this manual

To give this manual an easily understood layout and to emphasize important information, the following typographical styles and symbols are used:

### 2.2.1 Styles

Style	Function	Example
Emphasis	Programs, or highlighting important things	<b>Emphasis</b>
Publication title	Publication titles	<i>Title</i>
Web reference	Links to web pages	<a href="#">Link</a>
Document reference	Links to other documents	<a href="#">Document</a>
Output	Outputs from software GUI	<b>Output</b>
Input	Input commands, modes	<i>Input</i>
Feature	Feature names	<b>Feature</b>

## 2.2.2 Symbols



**Practical Tip**



**Safety-related instructions to avoid malfunctions**  
Instructions to avoid malfunctions



**Further information available online**

## 3 Vimba1394TL - Overview

The Vimba1394TL (Vimba 1394 Transport Layer) transports the data from the FireWire interface card to an application. It complies with GenICam and thus can serve as a GenTL (GenICam transport layer) producer for applications providing a GenTL consumer interface. The Vimba1394TL can be included during the Vimba installation on Windows and supports both 1394a and 1394b cameras from Allied Vision.



The mandatory 1394 device driver and the required hardware drivers must be installed separately. See Vimba Manual, chapter Vimba Driver Installer.

The Vimba1394TL consists of several parts: the functional interface, the feature maps, and a configuration file.

The **functional interface** is needed for dynamically controlling 1394 cameras. It covers the complete functionality described in [GenTL specification 1.5](#). There is extra functionality, which is described in chapter Vimba functional extensions to GenTL.


The **features** exposed by XML files are GenAPI-conforming features described in the following chapters and documents:

- Features of the GenTL **System module** in chapter Vimba1394TL System Features. The System is a module for handling multiple GenTL Interfaces in one transport layer. The Vimba1394TL only provides one Interface.
- Features of the GenTL **Interface module** in chapter Vimba1394TL Interface Features. The Interface is a module for handling multiple GenTL Devices. In this case, all the devices are attached to the same Interface.
- Features of the GenTL **Device module** in chapter Vimba1394TL Device Features. The Device module is a host-side representation of the Camera also known as **Remote Device**.
- Features of the GenTL **Data Stream module** in chapter Vimba1394TL DataStream Features. The Data Stream module allows handling all streaming-related operations.
- Camera (**Remote Device**) features in chapter Vimba1394TL Camera Features. The features listed in this chapter are the ones that are available if the camera in use supports them. Additional feature documentation for the Remote Device can be found in the [GenICam Standard Features Naming Convention, version 1.5.1](#).

The **configuration file**, which is named Vimba1394TL.xml (according to the name of the Vimba1394TL.cti), must be in the same directory as the Transport Layer file. The configuration options are described in the comments of the file itself.



## 4 Vimba1394TL System Features

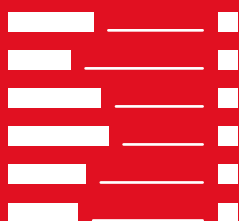

This chapter includes:

4.1	SystemInformation	18
4.1.1	TLVendorName	18
4.1.2	TLModelName	18
4.1.3	TLID	19
4.1.4	TLDisplayName	19
4.1.5	TLVersion	19
4.1.6	TLPath	20
4.1.7	TLType	20
4.1.8	GenTLVersionMajor	20
4.1.9	GenTLVersionMinor	21
4.1.10	GenTLFNCVersionMajor	21
4.1.11	GenTLFNCVersionMinor	21
4.1.12	GenTLFNCVersionSubMinor	22
4.2	InterfaceEnumeration	22
4.2.1	InterfaceUpdateList	22
4.2.2	InterfaceCount [Allied Vision]	22
4.2.3	InterfaceSelector	23
4.2.4	InterfaceID	23
4.2.5	InterfaceDisplayName [Allied Vision]	23

This chapter lists features that are potentially available in this module. Some features are only available under certain circumstances.

The following categories can be found below the Root category:

- SystemInformation
- InterfaceEnumeration

## 4.1 SystemInformation

Category that contains all System Information features of the System module.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.1 TLVendorName

Name	TL Vendor Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Name of the GenTL Producer vendor.

Corresponds to the TL\_INFO\_VENDOR command of TLGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.2 TLModelName

Name	TL Model Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Name of the GenTL Producer to distinguish different kinds of GenTL Producer implementations from one vendor.

Corresponds to the TL\_INFO\_MODEL command of TLGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.3 TLID

Name	TL ID
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Expert

Unique identifier of the GenTL Producer like a GUID.  
Corresponds to the TL\_INFO\_ID command of TLGetInfo function.  
See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.4 TLDisplayName

Name	TL Display Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Expert

User readable name of the GenTL Producer.  
Corresponds to the TL\_INFO\_DISPLAYNAME command of TLGetInfo function.  
See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.5 TLVersion

Name	TL Version
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Vendor specific version string.  
Corresponds to the TL\_INFO\_VERSION command of TLGetInfo function.  
See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.6 TLPath

Name	TL Path
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Expert

Full path to the GenTL Producer driver including name and extension.  
Corresponds to the TL\_INFO\_PATHNAME command of TLGetInfo function.  
See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.7 TLType

Name	TL Type
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	IIDC

Transport layer type of the GenTL Producer implementation.  
Corresponds to the TL\_INFO\_TLTYPE command of TLGetInfo function.  
See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.8 GenTLVersionMajor

Name	GenTL Version Major
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Expert

Major version number of the GenTL specification the GenTL Producer implementation complies with.  
See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.9 GenTLVersionMinor

Name	GenTL Version Minor
Interface	Integer
Access	Read
Visibility	Expert

Minor version number of the GenTL specification the GenTL Producer implementation complies with. See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.10 GenTL SFNC Version Major

Name	GenTL SFNC Version Major
Interface	Integer
Access	Read
Visibility	Expert

Major version number of the GenTL Standard Features Naming Convention that was used to create the GenTL Producer's XML.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.11 GenTL SFNC Version Minor

Name	GenTL SFNC Version Minor
Interface	Integer
Access	Read
Visibility	Expert

Minor version number of the GenTL Standard Features Naming Convention that was used to create the GenTL Producer's XML.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.1.12 GenTL SFNCVersionSubMinor

Name	GenTL SFNC Version Sub Minor
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Expert

Sub minor version number of the GenTL Standard Features Naming Convention that was used to create the GenTL Producer's XML.

See [GenTL specification 1.5 chapter 7](#) for more details.

## 4.2 InterfaceEnumeration

Category that contains all Interface Enumeration features of the System module.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.2.1 InterfaceUpdateList

Name	Interface Update List
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Update the interface list on this GenTL Producer.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.2.2 InterfaceCount [Allied Vision]

Name	Interface Count
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Expert

Number of interfaces on this GenTL Producer.

### 4.2.3 InterfaceSelector

Name	Interface Selector
Interface	Integer
Access	Read/Write
Visibility	Expert
Values	0..

Selector for the different GenTL Producer interfaces.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.2.4 InterfaceID

Name	Interface ID
Interface	String
Access	Read
Visibility	Expert

GenTL Producer wide unique identifier of the selected interface.


See [GenTL specification 1.5 chapter 7](#) for more details.

### 4.2.5 InterfaceDisplayName [Allied Vision]

Name	Interface Display Name
Interface	String
Access	Read
Visibility	Expert

User readable name of the selected interface.

## 5 Vimba1394TL Interface Features

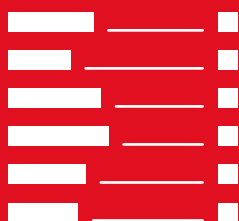

This chapter includes:

5.1	InterfaceInformation . . . . .	25
5.1.1	InterfaceID . . . . .	25
5.1.2	InterfaceType . . . . .	25
5.1.3	InterfaceDisplayName . . . . .	26
5.2	DeviceEnumeration . . . . .	26
5.2.1	DeviceUpdateList . . . . .	26
5.2.2	DeviceCount [Allied Vision] . . . . .	26
5.2.3	DeviceSelector . . . . .	27
5.2.4	DeviceID . . . . .	27
5.2.5	DeviceDisplayName [Allied Vision] . . . . .	27
5.2.6	DeviceVendorName . . . . .	28
5.2.7	DeviceModelName . . . . .	28
5.2.8	DeviceType [Allied Vision] . . . . .	28
5.2.9	DeviceAccessStatus . . . . .	29



This chapter lists features that are potentially available in this module. Some features are only available under certain circumstances.

The following categories can be found below the Root category:

- InterfaceInformation
- DeviceEnumeration

## 5.1 InterfaceInformation

Category that contains all Interface Information features of the Interface module.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 5.1.1 InterfaceID

Name	Interface ID
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Expert

GenTL Producer wide unique identifier of the selected interface.

Corresponds to the INTERFACE\_INFO\_ID command of IFGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 5.1.2 InterfaceType

Name	Interface Type
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	IIDC

Transport layer type of the interface.

Corresponds to the INTERFACE\_INFO\_TLTYPE command of IFGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 5.1.3 InterfaceDisplayName

Name	Interface Display Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Expert

User readable name of the selected interface.

Corresponds to the INTERFACE\_INFO\_DISPLAYNAME command of IFGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

## 5.2 DeviceEnumeration

Category that contains all Device Enumeration features of the Interface module.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 5.2.1 DeviceUpdateList

Name	Device Update List
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Updates the internal device list.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 5.2.2 DeviceCount [Allied Vision]

Name	Device Count
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Expert

Number of found devices.

### 5.2.3 DeviceSelector

Name	Device Selector
Interface	Integer
Access	Read/Write
Visibility	Expert
Values	0..

Selector for the different devices on this interface.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 5.2.4 DeviceID

Name	Device ID
Interface	String
Access	Read
Visibility	Expert

Interface wide unique identifier of the selected device.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 5.2.5 DeviceDisplayName [Allied Vision]

Name	Device Display Name
Interface	String
Access	Read
Visibility	Expert

User readable name of the selected device.

## 5.2.6 DeviceVendorName

Name	Device Vendor Name
Interface	IString
Access	Read
Visibility	Expert

Name of the device vendor.

Corresponds to the "DeviceVendorName" feature of the remote device.

See [GenTL specification 1.5 chapter 7](#) for more details.

## 5.2.7 DeviceModelName

Name	Device Model Name
Interface	IString
Access	Read
Visibility	Expert

Name of the device model.

Corresponds to the "DeviceModelName" feature of the remote device.

See [GenTL specification 1.5 chapter 7](#) for more details.

## 5.2.8 DeviceType [Allied Vision]

Name	Device Type
Interface	IEnumeration
Access	Read
Visibility	Expert
Values	IIDC

Identifies the transport layer technology of the device.

Possible values:

- IIDC: IIDC 1394


## 5.2.9 DeviceAccessStatus

Name	Device Access Status
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	ReadWrite, ReadOnly, NoAccess

Gives the device's access status at the moment of the last execution of “DeviceUpdateList”.

See [GenTL specification 1.5 chapter 7](#) for more details.

## 6 Vimba1394TL Device Features

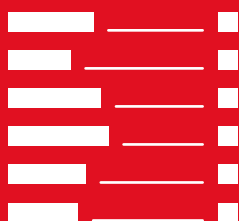

This chapter includes:

6.1	DeviceInformation . . . . .	31
6.1.1	DeviceID . . . . .	31
6.1.2	DeviceVendorName . . . . .	31
6.1.3	DeviceModelName . . . . .	32
6.1.4	DeviceType . . . . .	32
6.1.5	DeviceDisplayName . . . . .	32
6.2	StreamEnumeration . . . . .	33
6.2.1	StreamCount [Allied Vision] . . . . .	33
6.2.2	StreamSelector . . . . .	33
6.2.3	StreamID . . . . .	33

This chapter lists features that are potentially available in this module. Some features are only available under certain circumstances.

The following categories can be found below the Root category:

- DeviceInformation
- StreamEnumeration

## 6.1 DeviceInformation

Category that contains all Device Information features of the Device module.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 6.1.1 DeviceID

Name	Device ID
Interface	IString
Access	Read
Visibility	Expert

Interface-wide unique identifier of this device.

Corresponds to the DEVICE\_INFO\_ID command of DevGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 6.1.2 DeviceVendorName

Name	Device Vendor Name
Interface	IString
Access	Read
Visibility	Beginner

Name of the device vendor.

Corresponds to the DEVICE\_INFO\_VENDOR command of DevGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 6.1.3 DeviceModelName

Name	Device Model Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Name of the device model.

Corresponds to the `DEVICE_INFO_MODEL` command of `DevGetInfo` function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 6.1.4 DeviceType

Name	Device Type
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	IIDC

Transport layer type of the device.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 6.1.5 DeviceDisplayName

Name	Device Display Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Expert

User readable name of the device.

Corresponds to the `DEVICE_INFO_DISPLAYNAME` command of `DevGetInfo` function.

See [GenTL specification 1.5 chapter 7](#) for more details.



## 6.2 StreamEnumeration

Category that contains all Stream Enumeration features of the Device module.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 6.2.1 StreamCount [Allied Vision]

Name	Stream Count
Interface	Integer
Access	Read
Visibility	Beginner

Number of available streams.

### 6.2.2 StreamSelector

Name	Stream Selector
Interface	Integer
Access	Read/Write
Visibility	Beginner
Values	0..

Selector for the different stream channels.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 6.2.3 StreamID

Name	Stream ID
Interface	IString
Access	Read
Visibility	Beginner

Device unique ID for the stream, for instance a GUID.  
See [GenTL specification 1.5 chapter 7](#) for more details.

## 7 Vimba1394TL DataStream Features



This chapter includes:

7.1	StreamInformation . . . . .	36
7.1.1	StreamID . . . . .	36
7.1.2	StreamType . . . . .	36
7.1.3	StreamIsGrabbing [Allied Vision] . . . . .	37
7.2	BufferHandlingControl . . . . .	37
7.2.1	StreamAnnouncedBufferCount . . . . .	37
7.2.2	StreamBufferHandlingMode . . . . .	37
7.2.3	StreamAnnounceBufferMinimum . . . . .	38
7.2.4	DriverBuffersCount [Allied Vision] . . . . .	38

This chapter lists features that are potentially available in this module. Some features are only available under certain circumstances.

The following categories can be found below the Root category:

- StreamInformation
- BufferHandlingControl

## 7.1 StreamInformation

Category that contains all Stream Information features of the Data Stream module.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 7.1.1 StreamID

Name	Stream ID
Interface	IString
Access	Read
Visibility	Expert

Device unique ID for the data stream, for instance a GUID.

Corresponds to the STREAM\_INFO\_ID command of DSGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 7.1.2 StreamType

Name	Stream Type
Interface	IEnumeration
Access	Read
Visibility	Expert
Values	IIDC

Transport layer type of the Data Stream.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 7.1.3 StreamIsGrabbing [Allied Vision]

Name	Stream Is Grabbing
Interface	IBoolean
Access	Read/Write
Visibility	Beginner

Flag indicating whether the acquisition engine is started or not.

## 7.2 BufferHandlingControl

Contains all features of the Data Stream module that control the used buffers.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 7.2.1 StreamAnnouncedBufferCount

Name	Stream Announced Buffer Count
Interface	Integer
Access	Read
Visibility	Expert

Number of announced (known) buffers on this stream.

Corresponds to the STREAM\_INFO\_NUM\_ANNOUNCED command of DSGetInfo function.

See [GenTL specification 1.5 chapter 7](#) for more details.

### 7.2.2 StreamBufferHandlingMode

Name	Stream Buffer Handling Mode
Interface	Enumeration
Access	Read
Visibility	Beginner
Values	Default

Available acquisition modes of this stream.

See [GenTL specification 1.5 chapter 7](#) for more details.

## 7.2.3 StreamAnnounceBufferMinimum

Name	Stream Announce Buffer Minimum
Interface	Integer
Access	Read
Visibility	Expert

Minimal number of buffers to announce to enable selected buffer handling mode.

Corresponds to the STREAM\_INFO\_BUF\_ANNOUNCE\_MIN command of DSGetInfo function.


See [GenTL specification 1.5 chapter 7](#) for more details.

## 7.2.4 DriverBuffersCount [Allied Vision]

Name	Driver Buffers Count
Interface	Integer
Access	Read/Write
Visibility	Guru
Values	3..1024

Number of driver buffers used by the acquisition engine.

## 8 Vimba1394TL Camera Features

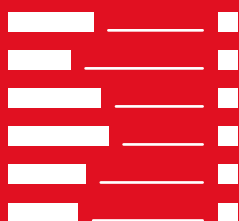

This chapter includes:

8.1	1394 registers, FireGrab parameters and the Vimba1394TL features . . . . .	40
8.2	DeviceControl . . . . .	42
8.3	ImageFormatControl . . . . .	47
8.4	AcquisitionControl . . . . .	58
8.5	ExposureAutoControl [Allied Vision] . . . . .	66
8.6	DigitalIOControl . . . . .	68
8.7	SerialPortControl [Allied Vision] . . . . .	73
8.8	AnalogControl . . . . .	78
8.9	LUTControl . . . . .	83
8.10	TransportLayerControl . . . . .	86
8.11	UserSetControl . . . . .	91
8.12	FileAccessControl . . . . .	93
8.13	ColorTransformationControl . . . . .	98
8.14	AutofunctionControl [Allied Vision] . . . . .	102
8.15	ImageQualityControl [Allied Vision] . . . . .	105

This chapter lists features that are potentially available for Allied Vision cameras. Not all cameras have all the listed features, and some features are only available under certain circumstances.

The following categories can be found below the Root category:

- DeviceControl : see chapter DeviceControl
- ImageFormatControl : see chapter ImageFormatControl
- AcquisitionControl : see chapter AcquisitionControl
  - ExposureAutoControl : see chapter ExposureAutoControl [Allied Vision]
- DigitalIOControl : see chapter DigitalIOControl
  - SerialPortControl : see chapter SerialPortControl [Allied Vision]
- AnalogControl : see chapter AnalogControl
- LUTControl : see chapter LUTControl
- TransportLayerControl : see chapter TransportLayerControl
- UserSetControl : see chapter UserSetControl
- FileAccessControl : see chapter FileAccessControl
- ColorTransformationControl : see chapter ColorTransformationControl
- AutofunctionControl : see chapter AutofunctionControl [Allied Vision]
- ImageQualityControl : see chapter ImageQualityControl [Allied Vision]

## 8.1 1394 registers, FireGrab parameters and the Vimba1394TL features

The Vimba1394TL is GenICam-compliant. Therefore, some feature names differ from the IIDC standard and the FireGrab namings.

In order to ease the change, the table below lists:

- The IIDC names (known from the camera manuals)
- The FireGrab name
- The Vimba1394TL feature name
- An explanation, if applicable



The Vimba1394TL always works in Format\_7 respectively FGP\_SCALABLE, and FGP\_DMAMODE is always set to DMA\_CONTINUOUS



IIDC Name	FireGrab	GenICam feature	Conversion
IMAGE_SIZE.Width	FGP_XSIZE	<i>Width</i>	-
IMAGE_SIZE.Height	FGP_YSIZE	<i>Height</i>	-
IMAGE_POSITION.Left	FGP_XPOSITION	<i>OffsetX</i>	-
IMAGE_POSITION.Top	FGP_YPOSITION	<i>OffsetY</i>	-
SHUTTER	FGP_SHUTTER	<i>ExposureTime</i>	$ExposureTime = SHUTTER * TIMEBASE + EXPOSUREOFFSET$
EXTD_SHUTTER	-	<i>ExposureTime</i>	$ExposureTime = EXTD\_SHUTTER + EXPOSUREOFFSET$
AUTO_EXPOSURE	FGP_AUTOEXPOSURE	<i>ExposureAutoTarget</i>	-
BRIGHTNESS	FGP_BRIGHTNESS	<i>Blacklevel</i>	-
GAIN	FGP_GAIN	<i>Gain</i>	$Gain = GAIN * GAINBASE$
GAMMA	FGP_GAMMA	<i>Gamma</i>	GAMMA=0 => 1.0, else camera-dependent
WHITE_BALANCE.B	FGP_WHITEBALCB	<i>BalanceRatioRaw</i>	$BalanceRatioSelector = Green\_Blue; BalanceRatioRaw = WHITE\_BALANCE.B\_Value$
WHITE_BALANCE.R	FGP_WHITEBALCR	<i>BalanceRatioRaw</i>	$BalanceRatioSelector = Green\_Red; BalanceRatioRaw = WHITE\_BALANCE.B\_Value$
ISO_Speed_x	FGP_PHYSPEED	<i>IIDCPhyspeed</i>	(Enumeration)
-	FGP_FRAMEBUFFERCOUNT	<i>DriverBuffersCount</i>	-
BYTE_PER_PACKET	FGP_PACKETSIZE	<i>IIDCPacketSize</i>	see description of category Acquisition-Control
COLOR_CODING_ID	(FGP_IMAGEFORMAT)	<i>PixelFormat</i>	(Enumeration)
ISO_EN=1	StartDevice()	<i>AcquisitionStart</i>	(Command)
ISO_EN=0	StopDevice()	<i>AcquisitionStop</i>	(Command)
TRIGGER_MODE	FGP_TRIGGER	<i>multiple</i>	see description of category Acquisition-Control
SHUTTER	FGP_SHUTTER	<i>ExposureAuto</i>	values:
.A_M_Mode	.PVAL_AUTO		Continuous/Off
.One_Push	.PVAL_ONESHOT		Once
GAIN	FGP_GAIN	<i>GainAuto</i>	values:
.A_M_Mode	.PVAL_AUTO		Continuous/Off
.One_Push	.PVAL_ONESHOT		Once
WHITE_BALANCE	FGP_WHITEBALCB	<i>BalanceWhiteAuto</i>	values:
.A_M_Mode	.PVAL_AUTO		Continuous/Off
.One_Push	.PVAL_ONESHOT		Once

Table 1: Translation of feature values known from IIDC/FireGrab

## 8.2 DeviceControl

In addition to the SFNC, this category provides the following features: *DeviceMicrocontrollerVersion*, *FirmwareVerMajor*, *FirmwareVerMajor* and *FirmwareVerBuild* let you inspect the firmware version of your camera in more detail and *DeviceSerialNumber* states details about the serial number.

*DeviceStatusLightEnable* allows to switch off the LED on the back side of your camera if needed in the physical camera setup.

To inspect or modify the register space of your 1394 camera, use *DeviceAccessRegisterAddress* and *DeviceAccessRegisterValue*.



Do not modify registers that are mapped in this XML file. The whole feature map may become inconsistent with your camera.

For more general information, see the [GenICam Standard Features Naming Convention](#).

### 8.2.1 DeviceVendorName

Name	Device Vendor Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Name of the manufacturer of the device.

See [SFNC](#) for more details.

### 8.2.2 DeviceModelName

Name	Device Model Name
<b>Interface</b>	IString
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Model of the device.

See [SFNC](#) for more details.

### 8.2.3 DeviceFirmwareVersion

Name	Device Firmware Version
Interface	QString
Access	Read
Visibility	Beginner

Version of the firmware in the device.

See [SFNC](#) for more details.

### 8.2.4 FirmwareVerMajor [Allied Vision]

Name	Firmware Version Major
Interface	Integer
Access	Read
Visibility	Beginner

Major firmware version of this Allied Vision 1394 camera.

### 8.2.5 FirmwareVerMinor [Allied Vision]

Name	Firmware Version Minor
Interface	Integer
Access	Read
Visibility	Beginner

Minor firmware version of this Allied Vision 1394 camera.

## 8.2.6 FirmwareVerBuild [Allied Vision]

Name	Firmware Version Build
Interface	Integer
Access	Read
Visibility	Beginner

Build firmware version of this Allied Vision 1394 camera.

## 8.2.7 DeviceMicrocontrollerVersion [Allied Vision]

Name	Device Microcontroller Firmware Version
Interface	String
Access	Read
Visibility	Beginner

Version of the microcontroller firmware in the device.

## 8.2.8 DeviceSFNCVersionMajor

Name	Device SFNCVersion Major
Interface	Integer
Access	Read
Visibility	Beginner

Major Version of the Standard Feature Naming Convention that was used to create the device's XML.

See [SFNC](#) for more details.

## 8.2.9 DeviceSFNCVersionMinor

Name	Device SFNCVersion Minor
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Minor Version of the Standard Feature Naming Convention that was used to create the device's XML.  
See [SFNC](#) for more details.

## 8.2.10 DeviceSFNCVersionSubMinor

Name	Device SFNCVersion Sub Minor
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Sub Minor Version of Standard Feature Naming Convention that was used to create the device's XML.  
See [SFNC](#) for more details.

## 8.2.11 DeviceID

Name	Device ID
<b>Interface</b>	String
<b>Access</b>	Read
<b>Visibility</b>	Expert

Device Identifier (serial number).  
See [SFNC](#) for more details.

### 8.2.12 DeviceSerialNumber [Allied Vision]

Name	Device Serial Number
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Beginner

Serial number of the device as written on the camera label.

### 8.2.13 DeviceScanType

Name	Device Scan Type
<b>Interface</b>	Enumeration
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	Areascan

Scan type of the sensor of the device.

See [SFNC](#) for more details.

### 8.2.14 DeviceStatusLightEnable [Allied Vision]

Name	Device Status Light Enable
<b>Interface</b>	Boolean
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Controls the LED status lights at the back side of the camera.

### 8.2.15 DeviceAccessRegisterAddress [Allied Vision]

Name	Device Access Register Address
Interface	Integer
Access	Read/Write
Visibility	Guru
Values	4026532864..8589934588

The register address to access on the device.  
Writing might render the feature node map invalid.

### 8.2.16 DeviceAccessRegisterValue [Allied Vision]

Name	Device Access Register Value
Interface	Integer
Access	Read/Write
Visibility	Guru

Value of a register on the device.

## 8.3 ImageFormatControl

By default, the Vimba1394TL sets the 1394 camera to IIDC Format 7 on startup. If this automatic behavior was disabled and the camera is in an IIDC Fixed Format, the command *IIDCActivateFormat7* may be invoked to return to normal operation.

Camera-specific modes are adjusted with the *IIDCMode* feature (see the camera manual, chapter Video formats, modes and bandwidth). For certain cameras, there is an accompanying feature *IIDCModeDescription*.

Since changes of the *IIDCMode* feature often influence binning or decimation of the image, the features *BinningHorizontal*, *BinningVertical*, *DecimationHorizontal*, or *DecimationVertical* also change. Nevertheless, they are only readable.

If the *PixelColorFilter* is incorrect, set *PixelColorFilterAuto* to *Manual* and adjust *PixelColorFilter* manually.

If *ReverseX* or *ReverseY* are invoked, the available *PixelFormat* values (and the current *PixelFormat*) automatically change.

*SensorBits* gives you the bit depth of the used ADC (see camera manual for details).  
For more general information, see the [GenICam Standard Features Naming Convention](#).

### 8.3.1 SensorWidth

Name	Sensor Width
Interface	Integer
Access	Read
Visibility	Expert

Effective width of the sensor in pixels.  
See [SFNC](#) for more details.

### 8.3.2 SensorHeight

Name	Sensor Height
Interface	Integer
Access	Read
Visibility	Expert

Effective height of the sensor in pixels.  
See [SFNC](#) for more details.

### 8.3.3 SensorTaps

Name	Sensor Taps
Interface	Enumeration
Access	Read
Visibility	Expert
Values	One, Two

Number of usable taps of the camera sensor.  
See [SFNC](#) for more details.



### 8.3.4 SensorDigitizationTaps

Name	Sensor Digitization Taps
Interface	IEnumeration
Access	Read
Visibility	Expert
Values	One, Two

Number of digitized samples outputted simultaneously by the camera A/D conversion stage.  
See [SFNC](#) for more details.

### 8.3.5 SensorBits [Allied Vision]

Name	Sensor Bits
Interface	Integer
Access	Read
Visibility	Expert

Maximum bit depth of sensor.

### 8.3.6 Width

Name	Width
Interface	Integer
Access	Read/Write
Visibility	Beginner

Width of the Image provided by the device (in pixels).  
See [SFNC](#) for more details.

### 8.3.7 Height

Name	Height
Interface	Integer
Access	Read/Write
Visibility	Beginner

Height of the image provided by the device (in pixels).

See [SFNC](#) for more details.

### 8.3.8 WidthMax

Name	Maximum Width
Interface	Integer
Access	Read
Visibility	Expert

Maximum Width of the Image provided by the device (in pixels).

See [SFNC](#) for more details.

### 8.3.9 HeightMax

Name	Maximum Height
Interface	Integer
Access	Read
Visibility	Expert

Maximum Height of the image provided by the device (in pixels).

See [SFNC](#) for more details.

### 8.3.10 OffsetX

Name	Offset X
<b>Interface</b>	Integer
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	0..

Horizontal offset from the origin to the area of interest (in pixels).

See [SFNC](#) for more details.

### 8.3.11 OffsetY

Name	Offset Y
<b>Interface</b>	Integer
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	0..

Vertical offset from the origin to the area of interest (in pixels).

See [SFNC](#) for more details.

### 8.3.12 BinningHorizontal

Name	Binning Horizontal
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	1..8

Number of horizontal photo-sensitive cells to combine together.

This increases the intensity (or signal-to-noise ratio) of the pixels and reduces the horizontal resolution (width) of the image. Only values 1, 2, 4 and 8 are supported.

See [SFNC](#) for more details.

### 8.3.13 BinningVertical

Name	Binning Vertical
Interface	Integer
Access	Read
Visibility	Expert
Values	1..8

Number of vertical photo-sensitive cells to combine together.

This increases the intensity (or signal to noise ratio) of the pixels and reduces the vertical resolution (height) of the image. Only values 1, 2, 4 and 8 are supported.

See [SFNC](#) for more details.

### 8.3.14 DecimationHorizontal

Name	Decimation Horizontal
Interface	Integer
Access	Read
Visibility	Expert
Values	1..8

Horizontal sub-sampling of the image.

This reduces the horizontal resolution (width) of the image by the specified horizontal decimation factor. Only values 1, 2, 4 and 8 are supported.

See [SFNC](#) for more details.

### 8.3.15 DecimationVertical

Name	Decimation Vertical
Interface	Integer
Access	Read
Visibility	Expert
Values	1..8

Vertical sub-sampling of the image.

This reduces the vertical resolution (height) of the image by the specified vertical decimation factor.

Only values 1, 2, 4 and 8 are supported.

See [SFNC](#) for more details.

## 8.3.16 ReverseX

Name	Reverse X
Interface	IBoolean
Access	Read/Write
Visibility	Expert

Flip horizontally the image sent by the device.

The ROI is applied after the flipping.

See [SFNC](#) for more details.

## 8.3.17 ReverseY

Name	Reverse Y
Interface	IBoolean
Access	Read/Write
Visibility	Expert

Flip vertically the image sent by the device.

The ROI is applied after the flipping.

See [SFNC](#) for more details.

### 8.3.18 PixelFormat

Name	Pixel Format
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	Mono8, YUV411Packed, YUV422Packed, YUV444Packed, RGB8Packed, Mono16, RGB16Packed, BayerGR8, BayerRG8, BayerGB8, BayerBG8, BayerGR16, BayerRG16, BayerGB16, BayerBG16, Mono12Packed, BayerGR12Packed, BayerRG12Packed, BayerGB12Packed, BayerBG12Packed

Format of the pixel provided by the device.

See [SFNC](#) for more details.

### 8.3.19 PixelColorFilter

Name	Pixel Color Filter
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	None, BayerRG, BayerGB, BayerGR, BayerBG

Type of color filter that is applied to the image.

See [SFNC](#) for more details.

### 8.3.20 PixelColorFilterAuto [Allied Vision]

Name	Pixel Color Filter Auto
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	Manual, Auto

Controls if the PixelColorFilter is determined automatically by the TL or if it can be manipulated.

Possible values:

- Manual: This enumeration value indicates that the PixelColorFilter may be manipulated.
- Auto: This enumeration value indicates that the PixelColorFilter is set automatically by the TL.

### 8.3.21 ImageSize [Allied Vision]

Name	Image Size
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Invisible

Size of images, in bytes, for the current format and size.

Equivalent to PayloadSize for Allied Vision 1394 cameras.

### 8.3.22 TestImageSelector

Name	Test Image Selector
<b>Interface</b>	Enumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	Off, Img1("Image 1") [Allied Vision], Img2("Image 2") [Allied Vision], Img3("Image 3") [Allied Vision], Img4("Image 4") [Allied Vision]

Selects the type of test image that is sent by the camera.

Selecting is only possible by index; no camera-specific mapping to certain test patterns is modeled.

Possible values:

- Off: No test image. Pure camera output.
- Img1: Test image 1. (Device-specific) [Allied Vision]
- Img2: Test image 2. (Device-specific) [Allied Vision]
- Img3: Test image 3. (Device-specific) [Allied Vision]
- Img4: Test image 4. (Device-specific) [Allied Vision]

See [SFNC](#) for more details.

### 8.3.23 IIDCActivateFormat7 [Allied Vision]

<b>Name</b>	<b>IIDC Activate Format 7</b>
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Use free modes (IIDC Format 7) of this camera.

Call this command for full functionality of this camera.

### 8.3.24 IIDCMode [Allied Vision]

<b>Name</b>	<b>IIDC Mode</b>
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	Mode0, Mode1, Mode2, Mode3, Mode4, Mode5, Mode6, Mode7

The IIDC Format 7 Mode of this camera.

Select to implicitly change image format capabilities or sensor exposure modes. (See the camera manual.)

Possible values:

- Mode0: Select IIDC Mode 0 of this camera. (See the camera manual.)
- Mode1: Select IIDC Mode 1 of this camera. (See the camera manual.)
- Mode2: Select IIDC Mode 2 of this camera. (See the camera manual.)
- Mode3: Select IIDC Mode 3 of this camera. (See the camera manual.)
- Mode4: Select IIDC Mode 4 of this camera. (See the camera manual.)
- Mode5: Select IIDC Mode 5 of this camera. (See the camera manual.)
- Mode6: Select IIDC Mode 6 of this camera. (See the camera manual.)
- Mode7: Select IIDC Mode 7 of this camera. (See the camera manual.)



### 8.3.25 IIDCModeDescription [Allied Vision]

Name	IIDC Mode Description
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	BFullResolution("Full Resolution"), Binning_2H1V, Binning_4H1V, Binning_8H1V, Binning_1H2V, Binning_2H2V, Binning_4H2V, Binning_8H2V, Binning_1H4V, Binning_2H4V, Binning_4H4V, Binning_8H4V, Binning_1H8V, Binning_2H8V, Binning_4H8V, Binning_8H8V, DFullResolution("Full Resolution"), Decimation_2H1V, Decimation_4H1V, Decimation_8H1V, Decimation_1H2V, Decimation_2H2V, Decimation_4H2V, Decimation_8H2V, Decimation_1H4V, Decimation_2H4V, Decimation_4H4V, Decimation_8H4V, Decimation_1H8V, Decimation_2H8V, Decimation_4H8V, Decimation_8H8V

The description of the format 7 mode of this IIDC camera.

Possible values:

- BFullResolution: The full resolution of the sensor is used.
- Binning\_2H1V: Binning: 2x horizontal
- Binning\_4H1V: Binning: 4x horizontal
- Binning\_8H1V: Binning: 8x horizontal
- Binning\_1H2V: Binning: 2x vertical
- Binning\_2H2V: Binning: 2x horizontal, 2x vertical
- Binning\_4H2V: Binning: 4x horizontal, 2x vertical
- Binning\_8H2V: Binning: 8x horizontal, 2x vertical
- Binning\_1H4V: Binning: 4x vertical
- Binning\_2H4V: Binning: 2x horizontal, 4x vertical
- Binning\_4H4V: Binning: 4x horizontal, 4x vertical
- Binning\_8H4V: Binning: 8x horizontal, 4x vertical
- Binning\_1H8V: Binning: 8x vertical
- Binning\_2H8V: Binning: 2x horizontal, 8x vertical
- Binning\_4H8V: Binning: 4x horizontal, 8x vertical
- Binning\_8H8V: Binning: 8x horizontal, 8x vertical
- DFullResolution: The full resolution of the sensor is used.
- Decimation\_2H1V: Sub-sampling: 2x horizontal
- Decimation\_4H1V: Sub-sampling: 4x horizontal
- Decimation\_8H1V: Sub-sampling: 8x horizontal
- Decimation\_1H2V: Sub-sampling: 2x vertical
- Decimation\_2H2V: Sub-sampling: 2x horizontal, 2x vertical
- Decimation\_4H2V: Sub-sampling: 4x horizontal, 2x vertical

- Decimation\_8H2V: Sub-sampling: 8x horizontal, 2x vertical
- Decimation\_1H4V: Sub-sampling: 4x vertical
- Decimation\_2H4V: Sub-sampling: 2x horizontal, 4x vertical
- Decimation\_4H4V: Sub-sampling: 4x horizontal, 4x vertical
- Decimation\_8H4V: Sub-sampling: 8x horizontal, 4x vertical
- Decimation\_1H8V: Sub-sampling: 8x vertical
- Decimation\_2H8V: Sub-sampling: 2x horizontal, 8x vertical
- Decimation\_4H8V: Sub-sampling: 4x horizontal, 8x vertical
- Decimation\_8H8V: Sub-sampling: 8x horizontal, 8x vertical

## 8.4 AcquisitionControl

One precondition for the Vimba1394TL is that Deferred Transport must not be invoked. In the case that it should be invoked (and hence acquisition doesn't seem to work correctly), it may be disabled with the *DeferredTransportDisable* command.

In the default case, the *AcquisitionFrameRate* may be controlled directly. This feature is closely connected to the *IIDCPacketSize* feature, and both of them may only be controlled if acquisition is not started. If *HighSNRIImages* are set to a value greater than one, *AcquisitionFrameRate* will become unavailable because the frame rate then depends on the number of images that are added up plus a camera-specific delay and hence cannot be predicted.

The available values for the *TriggerSelector* depend on the *ExposureMode*. If *ExposureMode* is set to *TriggerWidth* (IIDC Trigger Mode 1), only *ExposureActive* can be selected in the *TriggerSelector*, while in *Timed* mode, *ExposureTime* may be controlled and *ExposureStart* and *AcquisitionStart* triggers are available. Due to the Allied Vision-specific routing of input lines as *TriggerSource*, the trigger source can only be determined in the *LineRouting* feature (if the *TriggerSource* is set to *InputLines*). Otherwise, *TriggerSource* may also have a value of *Software*, in which case the command *TriggerSoftware* becomes available. For hardware triggers (from Input lines), *TriggerActivation* and *TriggerDelay* may also be controlled.

In *Timed ExposureMode*, *ExposureTime* may be controlled directly. This time is the absolute time the sensor is exposed to light and already contains the minimum time the sensor is exposed (*ExposureOffset*) - as far as the camera reports this value.

For more general information, see the [GenICam Standard Features Naming Convention](#).

## 8.4.1 AcquisitionMode

Name	Acquisition Mode
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	SingleFrame, MultiFrame, Continuous

Sets the acquisition mode of the device.

It defines mainly the number of frames to capture during an acquisition and the way the acquisition stops.

See [SFNC](#) for more details.

## 8.4.2 AcquisitionStart

Name	Acquisition Start
<b>Interface</b>	ICommand
<b>Access</b>	Write
<b>Visibility</b>	Beginner

Starts the Acquisition of the device.

The number of frames captured is specified by AcquisitionMode.

See [SFNC](#) for more details.

## 8.4.3 AcquisitionStop

Name	Acquisition Stop
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Stops the Acquisition of the device at the end of the current Frame.

It is mainly used when AcquisitionMode is Continuous but can be used in any acquisition mode.

See [SFNC](#) for more details.

## 8.4.4 AcquisitionAbort

Name	Acquisition Abort
Interface	ICommand
Access	Read/Write
Visibility	Invisible

Stops the Acquisition of the device at the end of the current Frame.

It is mainly used when AcquisitionMode is Continuous but can be used in any acquisition mode. Only implemented as a synonym to AcquisitionStop to be compatible with GigE cameras.

See [SFNC](#) for more details.

## 8.4.5 AcquisitionFrameCount

Name	Acquisition Frame Count
Interface	Integer
Access	Read/Write
Visibility	Beginner
Values	1..65535

Number of frames to acquire in MultiFrame Acquisition mode.

See [SFNC](#) for more details.

## 8.4.6 AcquisitionFrameRate

Name	Acquisition Frame Rate
Interface	IFloat
Access	Read/Write
textbfUnit	FPS
Visibility	Beginner

Controls the maximum acquisition rate (in Hertz) at which the frames are captured.

Not usable if HighSNRImages>0, external triggering or IIDCPacketSizeAuto are active.

See [SFNC](#) for more details.

## 8.4.7 AcquisitionFrameRateLimit [Allied Vision]

Name	Acquisition Frame Rate Limit
Interface	IFloat
Access	Read
textbfUnit	FPS
Visibility	Beginner

This is the maximum frame rate possible for the current exposure duration and image format.

## 8.4.8 DeferredTransportDisable [Allied Vision]

Name	Deferred Transport Disable
Interface	ICommand
Access	Read/Write
Visibility	Beginner

Disable Deferred Transport (see camera manual).

## 8.4.9 HighSNRImages [Allied Vision]

Name	HighSNR Images
Interface	Integer
Access	Read/Write
Visibility	Beginner
Values	0..256

Number of images used for the HighSNR mode.

May influence the effective bit depth of the image. 0 disables HighSNR mode. Only values 2, 4, 8, 16, 32, 64, 128 and 256 are accepted, other values are changed to a valid value that's lower than the one that was set. If !=0, AcquisitionFrameRate is locked.

## 8.4.10 TriggerSelector

Name	Trigger Selector
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	ExposureStart, ExposureActive, AcquisitionStart

Selects the type of trigger to configure.

See [SFNC](#) for more details.

## 8.4.11 TriggerMode

Name	Trigger Mode
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	Off, On

Controls if the selected trigger is active.

See [SFNC](#) for more details.

## 8.4.12 TriggerSoftware

Name	Trigger Software
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Generates an internal trigger.

TriggerSource must be set to Software.

See [SFNC](#) for more details.

## 8.4.13 TriggerSource

Name	Trigger Source
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	InputLines [Allied Vision], Software

Specifies the internal signal or physical input Line to use as the trigger source.

The selected trigger must have its TriggerMode set to On.

Possible values:

- InputLines: Specifies that physical lines (or pins) and associated I/O control blocks should be used as external source for the trigger signal. See the DigitalIOControl features. [Allied Vision]
- Software: Specifies that the trigger source will be generated by software using the TriggerSoftware command.

See [SFNC](#) for more details.

## 8.4.14 TriggerActivation

Name	Trigger Activation
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	FallingEdge, RisingEdge, LevelLow, LevelHigh

Specifies the activation mode of the trigger.

See [SFNC](#) for more details.

## 8.4.15 TriggerDelay

Name	Trigger Delay
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
textbfUnit	us
<b>Visibility</b>	Expert
<b>Values</b>	0.0..2097151.0

Specifies the delay in microseconds (us) to apply after the trigger reception before activating it.  
See [SFNC](#) for more details.

## 8.4.16 ExposureMode

Name	Exposure Mode
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	Timed, TriggerWidth

Sets the operation mode of the Exposure.  
See [SFNC](#) for more details.

## 8.4.17 ExposureTime

Name	Exposure Time
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
textbfUnit	us
<b>Visibility</b>	Beginner

Sets the Exposure time (in microseconds) when ExposureMode is Timed.



This controls the duration where the photosensitive cells are exposed to light.  
See [SFNC](#) for more details.

### 8.4.18 ExposureOffset [Allied Vision]

Name	Exposure Offset
Interface	IFloat
Access	Read
textbfUnit	us
Visibility	Guru

Exposure offset of this camera (in microseconds).  
This is the minimum time that the sensor must be exposed to light.

### 8.4.19 ExposureTimeRaw

Name	Exposure Time Raw
Interface	Integer
Access	Read/Write
Visibility	Beginner

Sets the Exposure time (IIDC Shutter) when ExposureMode is Timed.  
This controls the duration where the photosensitive cells are exposed to light.  
See [SFNC](#) for more details.

### 8.4.20 ExposureAuto

Name	Exposure Auto
Interface	IEnumeration
Access	Read/Write
Visibility	Beginner
Values	Off, Once, Continuous

Sets the automatic exposure mode when ExposureMode is Timed.  
For control of this feature see categories ExposureAutoControl and AutofunctionControl.  
See [SFNC](#) for more details.

## 8.5 ExposureAutoControl [Allied Vision]

If *ExposureAuto* is enabled, only the standard IIDC shutter register is used internally, which means that the range for *ExposureTime* is limited (aka *ExposureAutoMin* and *ExposureAutoMax*). To influence this range, adjust the *ExposureAutoTimebase*. The default value is 20  $\mu$ s, resulting in a range of 20 to 81920  $\mu$ s plus *ExposureOffset* by default.

The algorithm by which the *ExposureAuto* feature works can be read out with feature *ExposureAutoAlg* (as in Allied Vision GigE cameras). For the *Mean* algorithm, the target value is *AutofunctionTargetIntensity*, which can be found in category AutofunctionControl [Allied Vision]. (For programs, feature *ExposureAutoTarget* is available as a synonym for *AutofunctionTargetIntensity*, as for GigE cameras).

### 8.5.1 ExposureAutoTimebase [Allied Vision]

Name	Exposure Auto Timebase
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	tb1us, tb2us, tb5us, tb10us, tb20us, tb50us, tb100us, tb200us, tb500us, tb1000us

Timebase used for the ExposureAuto feature.  
Influences the minimum and the maximum of the ExposureTime, which can be seen in the min. of ExposureAutoMin and in the max. of ExposureAutoMax.  
Possible values:

- tb1us: Use 1 microsecond as base for ExposureAuto.
- tb2us: Use 2 microseconds as base for ExposureAuto.
- tb5us: Use 5 microseconds as base for ExposureAuto.
- tb10us: Use 10 microseconds as base for ExposureAuto.
- tb20us: Use 20 microseconds as base for ExposureAuto.
- tb50us: Use 50 microseconds as base for ExposureAuto.
- tb100us: Use 100 microseconds as base for ExposureAuto.

- tb200us: Use 200 microseconds as base for ExposureAuto.
- tb500us: Use 500 microseconds as base for ExposureAuto.
- tb1000us: Use 1000 microseconds as base for ExposureAuto.

## 8.5.2 ExposureAutoMin [Allied Vision]

Name	Exposure Auto Min
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
textbfUnit	us
<b>Visibility</b>	Beginner

Minimum exposure time in case that ExposureAuto is active, in microseconds.  
To extend or limit the range, change ExposureAutoTimebase.

## 8.5.3 ExposureAutoMax [Allied Vision]

Name	Exposure Auto Max
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
textbfUnit	us
<b>Visibility</b>	Beginner

Maximum exposure time in case that ExposureAuto is active, in microseconds.  
To extend or limit the range, change ExposureAutoTimebase.

## 8.5.4 ExposureAutoTarget [Allied Vision]

Name	Exposure Auto Target
<b>Interface</b>	Integer
<b>Access</b>	Read/Write
<b>Visibility</b>	Invisible

The target image intensity for ExposureAuto in values from 0 to 255.  
Higher values result in brighter images. Equivalent to AutofunctionTargetIntensity.

## 8.5.5 ExposureAutoAlg [Allied Vision]

Name	Exposure Auto Algorithm
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Beginner
<b>Values</b>	Mean

Algorithm used for ExposureAuto.

Possible values:

- Mean: Target a particular mean value of all measured pixels in the image (see ExposureAutoTarget).

## 8.6 DigitalIOControl

Allied Vision 1394 cameras are equipped with a number of input and output lines (called pins). Usually, there are more output lines than input lines. Line configuration can be done by first selecting a line with the *LineSelector* and then performing the necessary configuration that is appropriate for the type of line (*LineMode*, which can be *Input* or *Output*).

For each line, the *LineFormat* as well as the *LineStatus* may be determined, and the default polarity may be inverted with the *LineInverter* feature.

Each **input line** can be routed for use as a hardware trigger or not at all (with the feature *LineRouting*). Additionally, the *LineDebounceTime* may be adjusted if the camera supports this feature.

Each **output line** can be assigned a multitude of internal source signals (see *LineSource* enumeration): e.g. the *FrameActive* signal, the *Busy* signal or the corresponding input line. If applicable for your camera, a pulse width modulated signal may be selected as *LineSource*, which may be controlled with the features *LineModulationPulseWidth* and *LineModulationPeriod*.

Closely connected to the output signals, the internal *IntEna* signal may be controlled with the features *IntEnaDelayEnable* and *IntEnaDelayTime*.

For more general information, see the [GenICam Standard Features Naming Convention](#).

### 8.6.1 LineSelector

Name	Line Selector
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	Line0("Input 1"), Line1("Input 2"), Line2("Input 3"), Line3("Input 4"), Line4("Output 1"), Line5("Output 2"), Line6("Output 3"), Line7("Output 4")

Selects the physical line (or pin) of the external device connector to configure.  
Line 0 to Line 3 correspond to input lines/pins and Line 4 to Line 7 correspond to output lines/pins.  
See [SFNC](#) for more details.

### 8.6.2 LineMode

Name	Line Mode
Interface	IEnumeration
Access	Read
Visibility	Expert
Values	Input, Output

Shows if the physical Line is used to input or output a signal.  
See [SFNC](#) for more details.

### 8.6.3 LineInverter

Name	Line Inverter
Interface	IBoolean
Access	Read/Write
Visibility	Expert

Controls the inversion of the signal of the selected input or output Line.  
See [SFNC](#) for more details.

## 8.6.4 LineStatus

Name	Line Status
<b>Interface</b>	IBoolean
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

The status of the selected input or output Line.

See [SFNC](#) for more details.

## 8.6.5 LineSource

Name	Line Source
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	Off, Direct [Allied Vision], ExposureActive, FrameValid [Allied Vision], Busy [Allied Vision], FollowInput [Allied Vision], PWM("PulseWidthModulation") [Allied Vision], FrameTriggerWait

Selects which internal acquisition or I/O source signal to output on the selected Line.

LineMode must be Output. Refer to the camera manual to learn which Line Sources ("Output modes") are supported.

Possible values:

- Off: Line output is disabled.
- Direct: Line output follows LineStatus value. [Allied Vision]
- ExposureActive: Device is exposing a frame. Corresponds to the output mode IntegrationEnable explained in the camera manuals.
- FrameValid: Device is currently performing a readout from the sensor. [Allied Vision]
- Busy: Device is currently busy. [Allied Vision]
- FollowInput: Line output follows the state of the corresponding input line. [Allied Vision]
- PWM: Device is currently in Pulse Width Modulation mode. [Allied Vision]
- FrameTriggerWait: Device is currently waiting for a Frame trigger. Check the camera manual if your camera supports this Line Source (Output mode).

See [SFNC](#) for more details.

## 8.6.6 LineRouting [Allied Vision]

Name	Line Routing
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	Off, Trigger

Selects the routing of the selected input line ("Input mode").

LineMode must be Input.

Possible values:

- Off: Line input is disabled.
- Trigger: Line input is used for triggering. If you set more than one input to function as a trigger input, all trigger inputs are ANDed.

## 8.6.7 LineFormat

Name	Line Format
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Expert
<b>Values</b>	TTL, OptoCoupled("Optocoupled")

Controls the current electrical format of the selected physical input or output Line.

See [SFNC](#) for more details.

## 8.6.8 LineDebounceTime [Allied Vision]

Name	Line Debounce Time
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
textbfUnit	us
<b>Visibility</b>	Expert

Debounce time for the current input line (in microseconds).  
May be set in steps of 0.5.

### 8.6.9 LineModulationPulseWidth [Allied Vision]

Name	Line Modulation Pulse Width
Interface	Integer
Access	Read/Write
Visibility	Expert
Values	1..16383

PWM pulse width.  
LineMode must be Output.

### 8.6.10 LineModulationPeriod [Allied Vision]

Name	Line Modulation Period
Interface	Integer
Access	Read/Write
Visibility	Expert
Values	..16383

PWM period.  
LineMode must be Output.



### 8.6.11 IntEnaDelayTime [Allied Vision]

Name	IntEna Delay Time
Interface	IFloat
Access	Read/Write
textbfUnit	us
Visibility	Expert
Values	0..1048576

Delay time of the internal IntEna signal before being signaled at an output line, in microseconds.

### 8.6.12 IntEnaDelayEnable [Allied Vision]

Name	IntEna Delay Enable
Interface	IBoolean
Access	Read/Write
Visibility	Expert

Enables the delay of the internal IntEna signal.

## 8.7 SerialPortControl [Allied Vision]

This category lists the IIDC serial port control features. Since the standard FileAccessControl mechanism does not fit, these features were added. For a description of the IIDC serial port controls, see the IIDC specification, version 1.31.

### 8.7.1 SerialPortSelector [Allied Vision]

Name	Serial Port Selector
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	IIDC

Selects which serial port to use.

Possible values:

- IIDC: The IIDC 1.3.1 serial port feature is used.

### 8.7.2 SerialPortModeSelector [Allied Vision]

Name	Serial Port Mode Selector
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	Off, Transmit, Receive, Both

Selects which serial mode to use.

### 8.7.3 SerialPortBaudRate [Allied Vision]

Name	Serial Port Baud Rate
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	Baud300, Baud600, Baud1200, Baud2400, Baud4800, Baud9600, Baud19200, Baud38400, Baud57600, Baud115200, Baud230400

This feature controls the baud rate used by the serial port.

## 8.7.4 SerialPortCharLength [Allied Vision]

Name	Serial Port Char Length
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	Length7Bits("7 bits"), Length8Bits("8 Bits")

Selects which character length to use for serial I/O.

Possible values:

- Length7Bits: A length of 7 bits is used for serial I/O.
- Length8Bits: A length of 8 bits is used for serial I/O.

## 8.7.5 SerialPortParity [Allied Vision]

Name	Serial Port Parity
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	None, Odd("Odd Parity"), Even("Even Parity")

Selects which parity to use for serial I/O.

## 8.7.6 SerialPortStopBits [Allied Vision]

Name	Serial Port Stop Bits
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	StopBits1("1 Stop Bit"), StopBits1_5("1.5 Stop Bits"), StopBits2("2 Stop Bits")

Selects how many stop bits to use for serial I/O.

### 8.7.7 SerialPortTransmitReady [Allied Vision]

<b>Name</b>	<b>Serial Port Transmit Ready</b>
<b>Interface</b>	IBoolean
<b>Access</b>	Read
<b>Visibility</b>	Expert

Flag for indicating the status of the serial transmit operation.

### 8.7.8 SerialPortReceiveReady [Allied Vision]

<b>Name</b>	<b>Serial Port Receive Ready</b>
<b>Interface</b>	IBoolean
<b>Access</b>	Read
<b>Visibility</b>	Expert

Flag for indicating the status of the serial receive operation.

### 8.7.9 SerialPortReceiveOverrunError [Allied Vision]

<b>Name</b>	<b>Serial Port Receive Overrun Error</b>
<b>Interface</b>	IBoolean
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Flag for indicating an overrun error as the result of the serial receive operation.  
Set to Off to clear the error flag.

### 8.7.10 SerialPortReceiveFramingError [Allied Vision]

<b>Name</b>	<b>Serial Port Receive Framing Error</b>
<b>Interface</b>	IBoolean
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Flag for indicating a framing error as the result of the serial receive operation.  
Set to Off to clear the error flag.

### 8.7.11 SerialPortReceiveParityError [Allied Vision]

<b>Name</b>	<b>Serial Port Receive Parity Error</b>
<b>Interface</b>	IBoolean
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Flag for indicating a parity error as the result of the serial receive operation.  
Set to Off to clear the error flag.

### 8.7.12 SerialPortBuffer [Allied Vision]

<b>Name</b>	<b>Serial Port Buffer</b>
<b>Interface</b>	IRegister
<b>Access</b>	Read/Write
<b>Visibility</b>	Guru

Serial port transfer buffer.  
The same buffer is used for receive and transmit.

### 8.7.13 SerialPortValidReceiveSize [Allied Vision]

Name	Serial Port Valid Receive Size
Interface	Integer
Access	Read/Write
Visibility	Expert

Size of valid serial port receive data.

### 8.7.14 SerialPortRemainingReceiveSize [Allied Vision]

Name	Serial Port Remaining Receive Size
Interface	Integer
Access	Read/Write
Visibility	Expert

Size of remaining serial port receive data.

### 8.7.15 SerialPortTransmitSize [Allied Vision]

Name	Serial Port Transmit Size
Interface	Integer
Access	Read/Write
Visibility	Expert

Size of the serial port transmit buffer.

## 8.8 AnalogControl

Allied Vision features in this category: *GainAutoTarget* as a synonym for *AutofunctionTargetIntensity*, *GammaRaw* as a feature to control the IIDC Gamma feature directly (usually not available), and *BalanceRatioRaw* to control the IIDC "WhiteBalance" register directly.

The *...Raw* features in this category correspond directly to the register values of the corresponding IIDC registers and may not be accessible if there is a better control available via a non-*...Raw* feature. IIDC users should know that *BlackLevel* corresponds to the IIDC "Brightness" register and that the Auto mode of IIDC "WhiteBalance" is controllable via the *BalanceWhiteAuto* feature.



Note that *Gamma* and *LUT* features influence each other.

For more general information, see the [GenICam Standard Features Naming Convention](#).

## 8.8.1 GainSelector

Name	Gain Selector
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	All

Selects which Gain is controlled by the various Gain features.

See [SFNC](#) for more details.

## 8.8.2 Gain

Name	Gain
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
textbfUnit	dB
<b>Visibility</b>	Beginner

Controls the selected gain as an absolute physical value (in dB).

This is an amplification factor applied to the video signal.

See [SFNC](#) for more details.

### 8.8.3 GainRaw

Name	Gain Raw
Interface	Integer
Access	Read/Write
Visibility	Beginner

Raw value of the gain feature.

See [SFNC](#) for more details.

### 8.8.4 GainAuto

Name	Gain Auto
Interface	Enumeration
Access	Read/Write
Visibility	Beginner
Values	Off, Once, Continuous

Sets the automatic gain control (AGC) mode.

For control of this feature see category AutofunctionControl.

See [SFNC](#) for more details.

### 8.8.5 GainAutoTarget [Allied Vision]

Name	Gain Auto Target
Interface	Integer
Access	Read/Write
Visibility	Invisible

The target image intensity for GainAuto in values from 0 to 255.

Higher values result in brighter images. Equivalent to AutofunctionTargetIntensity.



## 8.8.6 BlackLevelSelector

Name	Black Level Selector
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	All

Selects which Black Level is controlled by the various Black Level features.

See [SFNC](#) for more details.

## 8.8.7 BlackLevel

Name	Black Level
Interface	IFloat
Access	Read/Write
Visibility	Expert

Controls the analog black level as an absolute physical value.

This represents a DC offset applied to the video signal.

See [SFNC](#) for more details.

## 8.8.8 Gamma

Name	Gamma
Interface	IFloat
Access	Read/Write
Visibility	Beginner
Values	..1.0

Controls the gamma correction of pixel intensity.

This is typically used to compensate for non-linearity of the display system (such as CRT).

See [SFNC](#) for more details.

## 8.8.9 GammaRaw [Allied Vision]

<b>Name</b>	<b>Gamma Raw</b>
<b>Interface</b>	Integer
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Controls the steps of the gamma correction of pixel intensity.

This is typically used to compensate for non-linearity of the display system (such as CRT).

## 8.8.10 BalanceRatioSelector

<b>Name</b>	<b>Balance Ratio Selector</b>
<b>Interface</b>	Enumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	Green_Red("Green / Red") [Allied Vision], Green_Blue("Green / Blue") [Allied Vision], IID-CVR [Allied Vision], IIDCUB [Allied Vision]

Selects which Balance ratio to control.

Possible values:

- Green\_Red: Balance Ratio will be applied to the green (low values) or red (high values) channel. [Allied Vision]
- Green\_Blue: Balance Ratio will be applied to the green (low values) or blue (high values) channel. [Allied Vision]
- IIDCVR: Balance Ratio will be applied to the V or R channel. [Allied Vision]
- IIDCUB: Balance Ratio will be applied to the U or B channel. [Allied Vision]

See [SFNC](#) for more details.

### 8.8.11 BalanceRatioRaw [Allied Vision]

Name	Balance Ratio Raw
Interface	Integer
Access	Read/Write
Visibility	Expert

Raw value of the BalanceRatio.

### 8.8.12 BalanceWhiteAuto

Name	Balance White Auto
Interface	Enumeration
Access	Read/Write
Visibility	Expert
Values	Off, Once, Continuous

Controls the mode for automatic white balancing between the color channels.  
The white balancing ratios are automatically adjusted. For control of this feature see category `AutofunctionControl`.

See [SFNC](#) for more details.

## 8.9 LUTControl

LUT control via SFNC features works by two mechanisms: Selecting a (pre-defined) LUT is done via *LUTSelector*, while enabling it can be done via the *LUTEnable* feature. Since in Allied Vision 1394 cameras, only one LUT is usable, this means that to enable a different LUT, you have to disable the active LUT first (by having the *LUTSelector* set to the active LUT and setting *LUTEnable* to *Off*). Additionally, using the *Gamma* feature influences LUT usage in Allied Vision 1394 cameras, so keep in mind that usage of one of them influences the state of the other one.

Supplementary information for uploading LUT data is available with the following features:

- *LUTCount*, the number of available LUTs
- *LUTSizeBytes*, the number of bytes a complete LUT needs
- *LUTBitDepthIn*, the number of used data bits before the LUT transformation

- *LUTBitDepthOut*, the number of used data bits after the LUT transformation

For more general information, see the [GenICam Standard Features Naming Convention](#).

## 8.9.1 LUTSelector

Name	LUT Selector
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	Luminance("Luminance 1"), Luminance2 [Allied Vision], Luminance3 [Allied Vision], Luminance4 [Allied Vision], Luminance5 [Allied Vision], Luminance6 [Allied Vision], Luminance7 [Allied Vision], Luminance8 [Allied Vision], Luminance9 [Allied Vision], Luminance10 [Allied Vision], Luminance11 [Allied Vision], Luminance12 [Allied Vision], Luminance13 [Allied Vision], Luminance14 [Allied Vision], Luminance15 [Allied Vision], Luminance16 [Allied Vision]

Selects which LUT to control.

See [SFNC](#) for more details.

## 8.9.2 LUTEnable

Name	LUT Enable
<b>Interface</b>	IBoolean
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert

Activates the selected LUT.

See [SFNC](#) for more details.

### 8.9.3 LUTCount [Allied Vision]

Name	LUT Count
Interface	Integer
Access	Read
Visibility	Expert

The number of user look-up tables.

### 8.9.4 LUTSizeBytes [Allied Vision]

Name	LUT Size
Interface	Integer
Access	Read
Visibility	Expert

The size for a complete LUT in bytes.

### 8.9.5 LUTBitDepthIn [Allied Vision]

Name	LUT Bit Depth In
Interface	Integer
Access	Read
Visibility	Expert
Values	..16

The used bit depth of pixel data before applying the LUT conversion.  
This value determines the number of LUT entries.

## 8.9.6 LUTBitDepthOut [Allied Vision]

Name	LUT Bit Depth Out
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Expert

The bit depth of pixel data after the LUT conversion was applied.  
This value corresponds to the bit depth of each LUT value.

## 8.10 TransportLayerControl

Beside the standard feature *PayloadSize*, there are many IIDC-related features in this category and some FireGrab-specific.

- *IIDCPhyspeed* controls the speed of the asynchronous and the isochronous transfer on the bus the camera is connected to.
- By comparing the *IIDCBusNumber* for two cameras, you may determine if the cameras are connected to the same IIDC bus, which may be important if you have to share the bandwidth between them.
- *IIDCFreeBandwidth* gives you the available bandwidth on the bus the camera is connected to.
- Normally, the ISO channel is determined automatically. You can change this by switching *IIDCIsoChannelAuto* to *Off* and then setting the *IsoChannel* feature to the desired value.
- After some write operations on camera registers, the system waits and lets the camera device process data for *IIDCCameraAcceptDelay* milliseconds. By default, this time is set to 3 milliseconds.
- The *IIDCPacketCount* is a result of the selected packet size per cycle.
- The *IIDCPacketSize* may determined directly if the *IIDCPacketSizeAuto* feature is set to *Off*. In this case, both features, *IIDCPacketSize* and *AcquisitionFrameRate* both influence the used packet size. If *IIDCPacketSizeAuto* feature is set to *Maximize*, always the largest possible packet size is chosen to achieve a maximum frame rate.
- At this time, *IIDCPacketSizeMaximum* is a read-only feature which is only available if the corresponding camera feature *MaxIsoPacketSize* was activated at the start of the transport layer. In this case, you may switch to the standard packet size with the command *IIDCUseStandardPacketSizeMaximum*.

## 8.10.1 PayloadSize

Name	Payload Size
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Expert

Provides the number of bytes transferred for each image or chunk on the stream channel. This includes any end-of-line, end-of-frame statistics or other stamp data. This is the total size of data payload for a data block.

See [SFNC](#) for more details.

## 8.10.2 IIDCPhyspeed [Allied Vision]

Name	IIDC Physical Speed
<b>Interface</b>	Enumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	S100, S200, S400, S800

Specifies the physical speed on the bus for this camera.

Possible values:

- S100: Specifies that the speed used on the bus will be 100 Mb/s.
- S200: Specifies that the speed used on the bus will be 200 Mb/s.
- S400: Specifies that the speed used on the bus will be 400 Mb/s.
- S800: Specifies that the speed used on the bus will be 800 Mb/s.

### 8.10.3 IIDCFreeBandwidth [Allied Vision]

Name	IIDC Free Bandwidth
Interface	Integer
Access	Read
Visibility	Expert
Values	0..

Bandwidth per 1394 bus cycle that is currently available for allocation on the bus <IIDCBusNumber>.

### 8.10.4 IIDCPacketSizeMaximum [Allied Vision]

Name	IIDC Packet Size Maximum
Interface	Integer
Access	Read
Visibility	Expert

Maximum of the Packet Size per 1394 bus cycle.

Only available if the MaxIsoSize feature of this camera is enabled.

### 8.10.5 IIDCUseStandardPacketSizeMaximum [Allied Vision]

Name	IIDC Use Standard Packet Size Maximum
Interface	ICommand
Access	Read/Write
Visibility	Beginner

Deactivate the MaxIsoSize feature of this camera (see camera manual).

Resets the maximum packet size limit to the IIDC limits. Only available if the MaxIsoSize feature of this camera is enabled. If you experience problems with AcquisitionStart, please run this command.



## 8.10.6 IIDCPacketSizeAuto [Allied Vision]

Name	IIDC Packet Size Auto
Interface	IEnumeration
Access	Read/Write
Visibility	Beginner
Values	Off, Maximize

Automatically set the IIDCPacketSize.

If this feature is activated, neither IIDCPacketSize nor AcquisitionFrameRate may be set.

Possible values:

- Off: Packet Size may be controlled directly.
- Maximize: If activated, IIDCPacketSize is set to the maximum possible after changes to IIDCPhyspeed, Width, Height and PixelFormat.

## 8.10.7 IIDCPacketSize [Allied Vision]

Name	IIDC Packet Size
Interface	Integer
Access	Read/Write
Visibility	Expert

Packet Size per 1394 bus cycle.

## 8.10.8 IIDCPacketCount [Allied Vision]

Name	IIDC Packet Count
Interface	Integer
Access	Read
Visibility	Guru

The number of packets used for the current transfer.

### 8.10.9 IIDCCameraAcceptDelay [Allied Vision]

Name	IIDC Camera Accept Delay
Interface	Integer
Access	Read/Write
Visibility	Guru
Values	..20000

After some writes on camera registers the system waits and lets the camera device process data, in milliseconds.

This time by default is set to 3 milliseconds.

### 8.10.10 IIDCIsoChannelAuto [Allied Vision]

Name	IIDC Iso Channel Auto
Interface	IEnumeration
Access	Read/Write
Visibility	Guru
Values	Off, On

Controls the mode for selecting the isochronous channel for the transfer.

Possible values:

- Off: Manual selection of isochronous channel.
- On: Internal resource manager handles channel assignment.

### 8.10.11 IIDCIsoChannel [Allied Vision]

Name	IIDC Iso Channel
Interface	Integer
Access	Read/Write
Visibility	Guru
Values	0..

Selects the isochronous channel for the transfer.

### 8.10.12 IIDC Bus Number [Allied Vision]

Name	IIDC Bus Number
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Guru

The number of the firewire bus that this device is attached to.

## 8.11 UserSetControl

As an extension to the standard features in this category, *UserSetOperationStatus* and *UserSetOperationResult* may be queried after the *UserSetLoad* and *UserSetSave* commands. Since the default user set may only be determined under certain circumstances, only a command *UserSetMakeDefault* is available.

For more general information, see the [GenICam Standard Features Naming Convention](#).

### 8.11.1 UserSetSelector

Name	User Set Selector
<b>Interface</b>	Enumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner
<b>Values</b>	Default, UserSet1, UserSet2, UserSet3

Selects the feature User Set to load, save or configure.

See [SFNC](#) for more details.

## 8.11.2 UserSetLoad

Name	User Set Load
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Loads the User Set specified by UserSetSelector to the device and makes it active.

See [SFNC](#) for more details.

## 8.11.3 UserSetSave

Name	User Set Save
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Save the User Set specified by UserSetSelector to the non-volatile memory of the device.

See [SFNC](#) for more details.

## 8.11.4 UserSetMakeDefault [Allied Vision]

Name	User Set Make Default
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Makes the current User Set the default User Set used when the device is reset.

### 8.11.5 UserSetOperationStatus [Allied Vision]

Name	User Set Operation Status
Interface	IEnumeration
Access	Read
Visibility	Guru
Values	Success, Failure

Represents the User Set operation execution status.

Possible values:

- Success: The recent user set operation was successful.
- Failure: The recent User Set operation failed.

### 8.11.6 UserSetOperationResult [Allied Vision]

Name	User Set Operation Result
Interface	Integer
Access	Read
Visibility	Guru

Represents the user set operation result.

## 8.12 FileAccessControl

Category that contains the File Access control features.

See [SFNC](#) for more details.

## 8.12.1 FileSelector

Name	File Selector
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Guru
<b>Values</b>	ShadingData [Allied Vision], LUTLuminance("LUT Luminance 1"), LUTLuminance2 [Allied Vision], LUTLuminance3 [Allied Vision], LUTLuminance4 [Allied Vision], LUTLuminance5 [Allied Vision], LUTLuminance6 [Allied Vision], LUTLuminance7 [Allied Vision], LUTLuminance8 [Allied Vision], LUTLuminance9 [Allied Vision], LUTLuminance10 [Allied Vision], LUTLuminance11 [Allied Vision], LUTLuminance12 [Allied Vision], LUTLuminance13 [Allied Vision], LUTLuminance14 [Allied Vision], LUTLuminance15 [Allied Vision], LUTLuminance16 [Allied Vision]

Selects the target file in the device.

Possible values:

- ShadingData: Shading data for the camera. [Allied Vision]
- LUTLuminance: The Luminance 1 LUT of the camera.
- LUTLuminance2: The Luminance 2 LUT of the camera. [Allied Vision]
- LUTLuminance3: The Luminance 3 LUT of the camera. [Allied Vision]
- LUTLuminance4: The Luminance 4 LUT of the camera. [Allied Vision]
- LUTLuminance5: The Luminance 5 LUT of the camera. [Allied Vision]
- LUTLuminance6: The Luminance 6 LUT of the camera. [Allied Vision]
- LUTLuminance7: The Luminance 7 LUT of the camera. [Allied Vision]
- LUTLuminance8: The Luminance 8 LUT of the camera. [Allied Vision]
- LUTLuminance9: The Luminance 9 LUT of the camera. [Allied Vision]
- LUTLuminance10: The Luminance 10 LUT of the camera. [Allied Vision]
- LUTLuminance11: The Luminance 11 LUT of the camera. [Allied Vision]
- LUTLuminance12: The Luminance 12 LUT of the camera. [Allied Vision]
- LUTLuminance13: The Luminance 13 LUT of the camera. [Allied Vision]
- LUTLuminance14: The Luminance 14 LUT of the camera. [Allied Vision]
- LUTLuminance15: The Luminance 15 LUT of the camera. [Allied Vision]
- LUTLuminance16: The Luminance 16 LUT of the camera. [Allied Vision]

See [SFNC](#) for more details.

## 8.12.2 FileStatus [Allied Vision]

Name	File Status
<b>Interface</b>	IEnumeration
<b>Access</b>	Read
<b>Visibility</b>	Guru
<b>Values</b>	Closed, Open

Represents the status of the selected file.

Possible values:

- Closed: File is closed.
- Open: File is open.

## 8.12.3 FileOperationSelector

Name	File Operation Selector
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Guru
<b>Values</b>	Open, Close, Read, Write

Selects the target operation for the selected file in the device.

This Operation is executed when the FileOperationExecute feature is called.

See [SFNC](#) for more details.

## 8.12.4 FileOperationExecute

Name	File Operation Execute
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Guru

Executes the operation selected by FileOperationSelector on the selected file.

See [SFNC](#) for more details.

## 8.12.5 FileOpenMode

Name	File Open Mode
<b>Interface</b>	IEnumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Guru
<b>Values</b>	Read, Write, ReadWrite

Selects the access mode in which a file is opened in the device.

See [SFNC](#) for more details.

## 8.12.6 FileAccessBuffer

Name	File Access Buffer
<b>Interface</b>	IRegister
<b>Access</b>	Read/Write
<b>Visibility</b>	Guru

Defines the intermediate access buffer that allows the exchange of data between the device file storage and the application.

See [SFNC](#) for more details.

## 8.12.7 FileAccessOffset

Name	File Access Offset
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Guru

Controls the Offset of the mapping between the device file storage and the FileAccessBuffer.

See [SFNC](#) for more details.



## 8.12.8 FileAccessLength

Name	File Access Length
Interface	Integer
Access	Read/Write
Visibility	Guru
Values	0..

Controls the Length of the mapping between the device file storage and the FileAccessBuffer.  
See [SFNC](#) for more details.

## 8.12.9 FileOperationStatus

Name	File Operation Status
Interface	IEnumeration
Access	Read
Visibility	Guru
Values	Success, Failure

Represents the file operation execution status.  
See [SFNC](#) for more details.

## 8.12.10 FileOperationResult

Name	File Operation Result
Interface	Integer
Access	Read
Visibility	Guru

Represents the file operation result.  
For Read or Write operations, the number of successfully read/written bytes is returned.  
See [SFNC](#) for more details.

### 8.12.11 FileSize

Name	File Size
<b>Interface</b>	Integer
<b>Access</b>	Read
<b>Visibility</b>	Guru

Represents the size of the selected file in bytes.

See [SFNC](#) for more details.

## 8.13 ColorTransformationControl

The standard color transformation control features are extended by a *ColorTransformationReset* command, which resets the values in the camera to the default values, which were normally determined with a light source of 5500K.

Additionally, controls for *Hue* and *Saturation* can also be found in this category.

For more general information, see the [GenICam Standard Features Naming Convention](#).

### 8.13.1 ColorTransformationSelector

Name	Color Transformation Selector
<b>Interface</b>	Enumeration
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	RGBtoRGB

Selects which Color Transformation module is controlled by the various Color Transformation features.

See [SFNC](#) for more details.

### 8.13.2 ColorTransformationEnable

Name	Color Transformation Enable
Interface	IBoolean
Access	Read/Write
Visibility	Expert

Activates the selected Color Transformation module.

See [SFNC](#) for more details.

### 8.13.3 ColorTransformationReset [Allied Vision]

Name	Color Transformation Reset
Interface	ICommand
Access	Read/Write
Visibility	Expert

Resets the color transformation matrix to the factory values.  
(Usually resulting in a 5500K setup.)

### 8.13.4 ColorTransformationValueSelector

Name	Color Transformation Value Selector
Interface	IEnumeration
Access	Read/Write
Visibility	Expert
Values	Gain00, Gain01, Gain02, Gain10, Gain11, Gain12, Gain20, Gain21, Gain22

Selects the Gain factor of the Transformation matrix to access in the selected Color Transformation module.

See [SFNC](#) for more details.

### 8.13.5 ColorTransformationValue

Name	Color Transformation Value
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
<b>Visibility</b>	Expert
<b>Values</b>	-1.000001..2.000001

Represents the value of the selected Gain factor inside the Transformation matrix.

See [SFNC](#) for more details.

### 8.13.6 Hue [Allied Vision]

Name	Hue
<b>Interface</b>	IFloat
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Float value of the Hue feature (in degrees).

Only has a visible effect in YUV and RGB modes.

### 8.13.7 HueRaw [Allied Vision]

Name	Hue Raw
<b>Interface</b>	Integer
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Raw value of the Hue feature.

Only has a visible effect in YUV and RGB modes.

### 8.13.8 HueEnable [Allied Vision]

Name	Hue Enable
Interface	IBoolean
Access	Read/Write
Visibility	Expert

Enables control of the Hue feature.  
Only has a visible effect in YUV and RGB modes.

### 8.13.9 Saturation [Allied Vision]

Name	Saturation
Interface	IFloat
Access	Read/Write
Visibility	Beginner
Values	0.0..2.0

Float value of the Saturation feature.  
Only has a visible effect in YUV and RGB modes.

### 8.13.10 SaturationRaw [Allied Vision]

Name	Saturation Raw
Interface	Integer
Access	Read/Write
Visibility	Beginner

Raw value of the Saturation feature.  
Only has a visible effect in YUV and RGB modes.

### 8.13.11 SaturationEnable [Allied Vision]

Name	Saturation Enable
Interface	IBoolean
Access	Read/Write
Visibility	Expert

Enables control of the Saturation feature.  
Only has a visible effect in YUV and RGB modes.

## 8.14 AutofunctionControl [Allied Vision]

This category contains features for controlling algorithms for some "Auto" features (*ExposureAuto*, *GainAuto*, *BalanceWhiteAuto*).

The target intensity for *ExposureAuto* and *GainAuto* is determined by *AutoFunctionTargetIntensity*, and *BalanceWhiteAuto* always aims at equilibrating the three color components. All algorithms may be locally restricted to an area in the current image by setting *AutofunctionAOIWidth*, *AutofunctionAOIHeight* etc. and then setting *AutofunctionAOIEnable* to *True*. As a visual feedback, set *AutofunctionAOIShowArea* to *True*.

### 8.14.1 AutofunctionTargetIntensity [Allied Vision]

Name	Autofunction Target Intensity
Interface	Integer
Access	Read/Write
Visibility	Beginner

The target image intensity for *ExposureAuto* and *GainAuto* in values from 0 to 255.  
Higher values result in brighter images.

### 8.14.2 AutofunctionAOIEnable [Allied Vision]

Name	Autofunction AOI Enable
Interface	IBoolean
Access	Read/Write
Visibility	Beginner

Use Autofunction AOI.

ExposureTime, Gain and BalanceRatio may be influenced by this feature (if the corresponding Auto features are enabled).

### 8.14.3 AutofunctionAOIShowArea [Allied Vision]

Name	Autofunction AOI Show Area
Interface	IBoolean
Access	Read/Write
Visibility	Beginner

Show the AOI used for Auto functions (ExposureAuto, GainAuto and BalanceWhiteAuto).

This feature will only have a visible effect if AutofunctionAOIEnable in On.

### 8.14.4 AutofunctionAOIWidth [Allied Vision]

Name	Autofunction AOI Width
Interface	Integer
Access	Read/Write
Visibility	Beginner

Width of the Autofunction AOI.

### 8.14.5 AutofunctionAOIHeight [Allied Vision]

Name	Autofunction AOI Height
Interface	Integer
Access	Read/Write
Visibility	Beginner

Height of the Autofunction AOI.

### 8.14.6 AutofunctionAOIOffsetX [Allied Vision]

Name	Autofunction AOI Offset X
Interface	Integer
Access	Read/Write
Visibility	Beginner
Values	0..

Autofunction AOI left position.

### 8.14.7 AutofunctionAOIOffsetY [Allied Vision]

Name	Autofunction AOI Offset Y
Interface	Integer
Access	Read/Write
Visibility	Beginner
Values	0..

Autofunction AOI top position.



## 8.15 ImageQualityControl [Allied Vision]

To compensate for intensity irregularities of lenses or illumination, the "Shading..." features in this category may be used.

With feature *SmearReductionEnable*, you may reduce the amount of smearing in some camera types. For a more detailed description of the features in this category, see the camera manual.

### 8.15.1 ShadingCorrectionEnable [Allied Vision]

Name	Shading Correction Enable
Interface	IBoolean
Access	Read/Write
Visibility	Beginner

Enable usage of shading correction data.

### 8.15.2 ShadingCorrectionShowData [Allied Vision]

Name	Shading Correction Show Data
Interface	IBoolean
Access	Read/Write
Visibility	Beginner

Show shading correction data instead of normal camera output.

### 8.15.3 ShadingDataBuildImages [Allied Vision]

Name	Shading Data Build Images
Interface	Integer
Access	Read/Write
Visibility	Beginner

Number of images to use for a ShadingDataBuild command.

## 8.15.4 ShadingDataBuild [Allied Vision]

Name	Shading Data Build
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Build shading data.

The number of images used is determined by ShadingDataBuildImages.

## 8.15.5 ShadingDataLoadFromFlash [Allied Vision]

Name	Shading Data Load From Flash
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Loads the shading data from the flash memory.

## 8.15.6 ShadingDataSaveToFlash [Allied Vision]

Name	Shading Data Save To Flash
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Saves the shading data to the flash memory.

### 8.15.7 ShadingDataClearFlash [Allied Vision]

<b>Name</b>	<b>Shading Data Clear Flash</b>
<b>Interface</b>	ICommand
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Clears the shading data in the flash memory.

### 8.15.8 ShadingDataMaxSize [Allied Vision]

<b>Name</b>	<b>Shading Data Max Size</b>
<b>Interface</b>	IInteger
<b>Access</b>	Read
<b>Visibility</b>	Beginner


Maximum size of shading data.

### 8.15.9 SmearReductionEnable [Allied Vision]

<b>Name</b>	<b>Smear Reduction Enable</b>
<b>Interface</b>	IBoolean
<b>Access</b>	Read/Write
<b>Visibility</b>	Beginner

Enable smear reduction.

## 9 Vimba functional extensions to GenTL

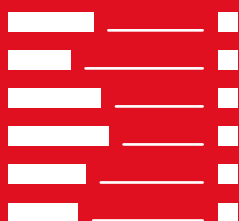

This chapter includes:

- 9.1 Custom Transport Layer events . . . . . 109
  - 9.1.1 Additions to EVENT\_TYPE\_LIST . . . . . 109
  - 9.1.2 Additions to EVENT\_DATA\_INFO\_CMD\_LIST . . . 109
  - 9.1.3 Additional enumeration IFCHANGE\_WHAT\_LIST . 109
- 9.2 Additional URL information . . . . . 110
  - 9.2.1 Additions to URL\_INFO\_CMD\_LIST . . . . . 110

Vimba transport layers provide additional functionality to the general GenTL interface. The provided extensions to Transport Layer Events allow monitoring system changes. Other extensions allow comfortable access to additional URL information.

## 9.1 Custom Transport Layer events

Custom additions to the following Enumerations are available:

- EVENT\_TYPE\_LIST (used in GCRegisterEvent and GCUnregisterEvent)
- EVENT\_DATA\_INFO\_CMD\_LIST (used in EventGetDataInfo)

Additionally, an enumeration for determining the type of a change is provided: IFCHANGE\_WHAT\_LIST

These extensions allow the users of Vimba transport layers to get informed about changes to either the interface list or the camera list.

### 9.1.1 Additions to EVENT\_TYPE\_LIST

Listing 1: Event types

```
enum EVENT_TYPE_LIST_VIMBA
{
    EVENT_SYSTEM_CHANGE          = 1000, // System detected some change
    EVENT_INTERFACE_CHANGE       = 1001  // Interface detected some change
}
```

### 9.1.2 Additions to EVENT\_DATA\_INFO\_CMD\_LIST

Listing 2: Change Events

```
enum EVENT_DATA_INFO_CMD_LIST_VIMBA
{
    // for event type EVENT_SYSTEM_CHANGE
    EVENT_DATA_SYSTEM_IFCOUNT = 1000, // UINT32    Number of detected interfaces

    // for event type EVENT_INTERFACE_CHANGE
    EVENT_DATA_IFCHANGE_DUID    = 1001, // STRING    Device UID
    EVENT_DATA_IFCHANGE_WHAT    = 1002, // UINT32    Bitfield of what has changed
                                     // (IFCHANGE_WHAT_LIST)
    EVENT_DATA_IFCHANGE_DATA    = 1003  // UINT32    Bitfield of current state of
                                     // the device (IFCHANGE_WHAT_LIST)
};
```

### 9.1.3 Additional enumeration IFCHANGE\_WHAT\_LIST

Listing 3: Change Event options

```
enum IFCHANGE_WHAT_LIST
{
    IFCHANGE_WHAT_VISIBILITY    = 1,    // Device visibility has changed
    IFCHANGE_WHAT_REACHABILITY  = 2    // Device reachability has changed
};
```

## 9.2 Additional URL information

For the following Enumeration, extensions are available:

- URL\_INFO\_CMD\_LIST (used in GCGetPortURLInfo)

The extensions allow the user of the Vimba transport layers to access URL information without having to parse the URL string.

### 9.2.1 Additions to URL\_INFO\_CMD\_LIST

Listing 4: URL information

```
enum URL_INFO_CMD_LIST_VIMBA
{
    URL_INFO_FILENAME          = 1000,  // STRING    Filename of the port XML file
    URL_INFO_ADDRESS           = 1001,  // UINT64    Start address of the XML file
    URL_INFO_LENGTH            = 1002,  // SIZET     XML file length (in bytes)
    URL_INFO_ZIPPED            = 1003   // BOOL8     Is the XML file zipped
};
```