



MTK Wi-Fi SoftAP Software Programming Guide

Version: 3.0
Release date: 2013-08-29

© 2008 - 2013 MediaTek Inc.

This document contains information that is proprietary to MediaTek Inc.

Unauthorized reproduction or disclosure of this information in whole or in part is strictly prohibited.

Specifications are subject to change without notice.

Document Revision History

Revision	Date	Author	Description
1.0	2012/11/08	Pan Liu	Initial Version
1.1	2012/11/13	Pan Liu	Update iwpriv command
1.2	2012/12/11	Pan Liu	Add NoForwardingMBCast
1.3	2013/01/04	Pan Liu	Add VHT_BW and VhtBW
1.4	2013/1/14	Pan Liu	Update Apclient WPS command sample
1.5	2013/1/22	Pan Liu	Add FAQ- FixTxMode iwpriv command sample
1.6	2013/1/23	Pan Liu	Add new DAT item VHT_DisallowNonVHT and SingleSKU.dat sample.
1.7	2013/3/6	Pan Liu	Add MAC Repeater section
1.8	2013/3/8	Pan Liu	Add command and profile, DFS debug example
1.9	2013/3/13	Pan Liu	Add Singlesku.dat 5G and 2.4G sample profile and DFS example update
2.0	2013/3/15	Pan Liu	Add IgmpAdd1, WPS command and NEW BSSID Mode MAC address limitation. Update BGProtection
2.1	2013/3/27	Pan Liu	Add EfuseUploadToHost
2.2	2013/3/28	Pan Liu	Add FAQ for TX/RX unbalance issue.
2.3	2013/4/23	Pan Liu	Add iNIC system address configuration for WLAN profile support
2.4	2013/4/23	Pan Liu	Add iwpriv command AP2040Rescan, WLAN profile updates
2.5	2013/5/27	Pan Liu	Add WLAN profile and iwpriv parameters for VHT support.
2.6	2013/6/20	Pan Liu	Update WirelessMode=15, correct NoForwardingMBCast, Add AutoChannelSkipList
2.7	2013/7/4	Pan Liu	Add WLAN profile "EtherTrafficBand"
2.8	2013/7/26	Pan Liu	Add iNIC only profile and iwpriv command
2.9	2013/8/23	Pan Liu	Add iNIC only profile IsolateCard, EnhanceMultiClient, and BGMultiClient.
3.0	2013/8/29	Pan Liu	Add iwpriv command fpga_on, dataphy, databw, databasize, datagi, dataldpc for vht mode data rate setting.

Table of Contents

Document Revision History	2
Table of Contents	3
1 Introduction	14
2 Wi-Fi SoftAP driver Profile Default Setting	15
2.1 WLAN Profile Description	17
2.1.1 CountryRegion	17
2.1.2 CountryRegionForABand	18
2.1.3 CountryCode	18
2.1.4 ChannelGeography	18
2.1.5 BssidNum	19
2.1.6 SSID	19
2.1.7 SSID1	19
2.1.8 SSID2	19
2.1.9 SSID3	20
2.1.10 SSID4	20
2.1.11 WirelessMode	20
2.1.12 Channel	20
2.1.13 BasicRate	21
2.1.14 BeaconPeriod	21
2.1.15 DtimPeriod	21
2.1.16 TxPower	22
2.1.17 DisableOLBC	22
2.1.18 BGProtection	22
2.1.19 MaxStaNum	22
2.1.20 TxAntenna	22
2.1.21 RxAntenna	23
2.1.22 TxPreamble	23
2.1.23 RTSThreshold	23
2.1.24 FragThreshold	23
2.1.25 TxBurst	23
2.1.26 PktAggregate	24
2.1.27 WmmCapable	24
2.1.28 APSDCapable	24
2.1.29 DLSCapable	24
2.1.30 APAifsn	24
2.1.31 APCwmin	25
2.1.32 APCwmax	25
2.1.33 APTxop	25
2.1.34 APACM	25
2.1.35 BSSAifsn	26
2.1.36 BSSCwmin	26

2.1.37	BSSCwmax.....	26
2.1.38	BSSTxop.....	26
2.1.39	BSSACM.....	27
2.1.40	AckPolicy	27
2.1.41	NoForwarding	27
2.1.42	NoForwardingBTNBSSID	27
2.1.43	NoForwardingMBCast	28
2.1.44	HideSSID	28
2.1.45	StationKeepAlive	28
2.1.46	ShortSlot	28
2.1.47	AutoChannelSelect	28
2.1.48	IEEE8021X	29
2.1.49	IEEE80211H	29
2.1.50	CSPeriod.....	29
2.1.51	WirelessEvent.....	29
2.1.52	IdsEnable	29
2.1.53	AuthFloodThreshold	30
2.1.54	ReassocReqFloodThreshold	30
2.1.55	ProbeReqFloodThreshold=32	30
2.1.56	DisassocFloodThreshold	30
2.1.57	DeauthFloodThreshold	31
2.1.58	EapReqFloodThreshold.....	31
2.1.59	PreAuth	31
2.1.60	AuthMode.....	31
2.1.61	EncryptType	31
2.1.62	RekeyInterval	32
2.1.63	RekeyMethod.....	32
2.1.64	PMKCachePeriod	32
2.1.65	WPAPSK.....	32
2.1.66	DefaultKeyID.....	33
2.1.67	Key1Type.....	33
2.1.68	Key1Str	33
2.1.69	Key2Type.....	33
2.1.70	Key2Str	33
2.1.71	Key3Type.....	33
2.1.72	Key3Str	34
2.1.73	Key4Type.....	34
2.1.74	Key4Str	34
2.1.75	AccessPolicy0.....	34
2.1.76	AccessControlList0	35
2.1.77	AccessPolicy1	35
2.1.78	AccessControlList1	35
2.1.79	AccessPolicy2.....	35
2.1.80	AccessControlList2	36
2.1.81	AccessPolicy3.....	36

2.1.82	AccessControlList3	36
2.1.83	WdsEnable.....	36
2.1.84	WdsEncrypType	37
2.1.85	WdsList	37
2.1.86	WdsKey.....	37
2.1.87	RADIUS_Server.....	38
2.1.88	RADIUS_Port.....	38
2.1.89	RADIUS_Key	38
2.1.90	own_ip_addr	38
2.1.91	EAPifname	38
2.1.92	PreAuthifname	39
2.1.93	HT_HTC.....	39
2.1.94	HT_RDG	39
2.1.95	HT_EXTCHA.....	39
2.1.96	HT_LinkAdapt	39
2.1.97	HT_OpMode	40
2.1.98	HT_MpduDensity	40
2.1.99	HT_BW	40
2.1.100	VHT_BW	40
2.1.101	VHT_STBC	41
2.1.102	VHT_BW_SIGNAL.....	41
2.1.103	VHT_LDPC	41
2.1.104	VHT_DisallowNonVHT	41
2.1.105	HT_BADecline	42
2.1.106	HT_AutoBA	42
2.1.107	HT_AMSDU	42
2.1.108	HT_BAWinSize	42
2.1.109	HT_GI	42
2.1.110	HT_MCS	43
2.1.111	HT_MIMOPSMODE	43
2.1.112	HT_DisallowTKIP	43
2.1.113	HT_STBC.....	43
2.1.114	WscManufacturer.....	43
2.1.115	WscModelName	44
2.1.116	WscDeviceName	44
2.1.117	WscModelNumber	44
2.1.118	WscSerialNumber	44
2.1.119	Wsc4digitPinCode	44
2.1.120	MACRepeaterEn.....	45
2.1.121	PMFMFPC	45
2.1.122	PMFMFPR	45
2.1.123	PMFSHA256.....	45
2.1.124	VLANID	45
2.1.125	VLANPriority	46
2.1.126	Ext_LNA.....	46

2.1.127	Ext_PA	46
2.1.128	ExtEEPROM	46
2.1.129	Mem	46
2.1.130	IgmpAdd1	47
2.1.131	E2pAccessMode	47
2.1.132	AutoChannelSkipList	47
2.1.133	EtherTrafficBand	48
2.1.134	DetectPhy	48
2.1.135	Thermal	48
2.1.136	%s_DfsSwAddCheck%d	48
2.1.137	IsolateCard	49
2.1.138	EnhanceMultiClient	49
2.1.139	BGMultiClient	49
3	Wi-Fi SoftAP driver iwpriv command	51
3.1.1	Debug	51
3.1.2	DriverVersion	51
3.1.3	CountryRegion	51
3.1.4	CountryRegionABand	52
3.1.5	CountryCode	52
3.1.6	AccessPolicy	52
3.1.7	ResetCounter	53
3.1.8	RadioOn	53
3.1.9	SiteSurvey	53
3.1.10	CountryString	53
3.1.11	SSID	55
3.1.12	WirelessMode	55
3.1.13	FixedTxMode	56
3.1.14	OFDMBasicRate	56
3.1.15	Channel	56
3.1.16	BeaconPeriod	57
3.1.17	DtimPeriod	57
3.1.18	TxPower	57
3.1.19	BGProtection	57
3.1.20	DisableOLBC	58
3.1.21	TxPreamble	58
3.1.22	RTSThreshold	58
3.1.23	FragThreshold	58
3.1.24	TxBurst	58
3.1.25	PktAggregate	59
3.1.26	NoForwarding	59
3.1.27	NoForwardingBTNBSSID	59
3.1.28	NoForwardingMBCast	59
3.1.29	HideSSID	59
3.1.30	ShortSlot	60
3.1.31	DisConnectSta	60

3.1.32	DisConnectAllSta	60
3.1.33	McastPhyMode	60
3.1.34	McastMcs	60
3.1.35	WscVendorPinCode	61
3.1.36	ACLAddEntry	61
3.1.37	ACLClearAll	61
3.1.38	FixedTxMode	61
3.1.39	WpaMixPairCipher	61
3.1.40	MaxStaNum	62
3.1.41	AutoFallBack	62
3.1.42	ApCliTxMode	62
3.1.43	ApCliTxMcs	62
3.1.44	GreenAP	63
3.1.45	AutoChannelSel	63
3.1.46	MBSSWirelessMode	63
3.1.47	HwAntDiv	64
3.1.48	HtBw	64
3.1.49	VhtBw	64
3.1.50	VhtStbc	64
3.1.51	VhtBwSignal	65
3.1.52	VhtDisallowNonVHT	65
3.1.53	HtMcs	65
3.1.54	HtGi	66
3.1.55	HtOpMode	66
3.1.56	HtStbc	66
3.1.57	HtExtcha	66
3.1.58	HtMpduDensity	67
3.1.59	HtBaWinSize	67
3.1.60	HtRdg	67
3.1.61	HtAmsdu	67
3.1.62	HtAutoBa	68
3.1.63	HtBaDecline	68
3.1.64	HtProtect	68
3.1.65	HtMimoPs	68
3.1.66	HtDisallowTKIP	68
3.1.67	AP2040Rescan	69
3.1.68	HtBssCoex	69
3.1.69	PktAggregate	69
3.1.70	WmmCapable	69
3.1.71	IEEE80211H	69
3.1.72	AuthMode	70
3.1.73	EncrypType	70
3.1.74	DefaultKeyID	70
3.1.75	Key1	70
3.1.76	Key2	71

3.1.77	Key3.....	71
3.1.78	Key4.....	71
3.1.79	WPAPSK.....	71
3.1.80	ResetCounter.....	71
3.1.81	MACRepeaterEn.....	72
3.1.82	PMFMFPC.....	72
3.1.83	PMFMFPR.....	72
3.1.84	SHA256.....	72
3.1.85	WDSVLANID.....	72
3.1.86	WDSVLANPriority.....	73
3.1.87	ApCliVLANID.....	73
3.1.88	ApCliVLANPriority.....	73
3.1.89	QAEEnable.....	73
3.1.90	Console.....	73
3.1.91	EfuseUploadToHost.....	74
3.1.92	tpc.....	74
3.1.93	DfsSwAddCheck.....	74
3.1.94	DfsSwDelCheck.....	74
3.1.95	fpga_on.....	75
3.1.96	dataphy.....	75
3.1.97	databw.....	75
3.1.98	datamcs.....	75
3.1.99	databasize.....	76
3.1.100	databgi.....	76
3.1.101	dataIdpc.....	76
4	iwpriv ra0 usage.....	77
4.1	get_site_survey.....	77
4.2	get_mac_table.....	77
4.3	get_wsc_profile.....	77
4.4	get_ba_table.....	77
4.5	stat.....	77
4.6	bbp (Debug only).....	78
4.7	mac (Debug only).....	78
4.8	rf (Debug only).....	78
4.9	e2p (Debug only).....	78
5	iwpriv ra0 show command.....	80
6	WPS Wi-Fi PROTECTED SETUP.....	81
6.1	WPS Profile settings.....	81
6.1.1	WscConfMode.....	81
6.1.2	WscConfStatus.....	82
6.1.3	WscConfMethods.....	82
6.1.4	WscKeyASCII.....	82
6.1.5	WscSecurityMode.....	82
6.1.6	WscDefaultSSID0.....	83

6.1.7	WscV2Support	83
6.2	WPS iwpriv command	83
6.2.1	WscConfMode	83
6.2.2	WscConfStatus	83
6.2.3	WscMode	84
6.2.4	WscStatus	84
6.2.5	WscPinCode	85
6.2.6	WscOOB	85
6.2.7	WscGetConf	85
6.2.8	WscGenPinCode	85
6.2.9	WscVendorPinCode	86
6.2.10	WscSecurityMode	86
6.2.11	WscMultiByteCheck	86
6.2.12	WscVersion	86
6.2.13	WscVersion2	86
6.2.14	WscV2Support	87
6.2.15	WscFragment	87
6.2.16	WscFragmentSize	87
6.2.17	WscSetupLock	87
6.2.18	WscSetupLockTime	87
6.2.19	WscMaxPinAttack	88
6.2.20	WscExtraTlvTag	88
6.2.21	WscExtraTlvType	88
6.2.22	WscExtraTlvData	88
6.2.23	WPS iwpriv command example	88
6.3	WPS AP Setup Procedure	89
6.3.1	Running the WPS command-line application	90
6.3.2	Initial AP setup with Registrar Configuring AP (EAP/UPnP)	91
6.3.3	Adding an Enrollee to AP+Registrar (EAP)	91
6.3.4	Adding an Enrollee with Eternal Registrar (UPnP/EAP)	92
6.3.5	WPS Config status	93
6.4	Basic operation of Ralink WPS AP	93
6.4.1	Configure APUT using PIN method through a WLAN external Registrar	93
6.4.2	Configure APUT using PIN method through a wired external registrar	94
6.4.3	Add devices using external Registrars	98
6.4.4	How to know WPS AP services as Internal Registrar, Enrollee or Proxy	98
6.4.5	How to know WPS AP PinCode	99
6.4.6	Notes for WPS	99
6.4.7	Compile flag for WPS AP	99
6.4.8	WPS related Document	99
6.5	UPNP Daemon HOWTO	99
6.5.1	Build WPS UPnP Daemon	99
6.6	WPS Command & OID Example	100
6.6.1	Iwpriv command without argument	100
7	WMM PARAMETERS	102

7.1	Setting Parameters	102
7.2	How to Run WMM test	102
7.3	WMM "The Ack"	103
7.4	Access Precedence and Outgoing Frame Classification	104
8	IEEE802.11h+d	106
8.1	IEEE802.11d	106
8.2	IEEE802.11h	106
9	SECURITY POLICY	108
9.1	All possible combinations of security policy	108
9.2	WP2 Setting	108
9.3	Examples	108
9.3.1	OPEN/NONE	108
9.3.2	SHARED/WEP	109
9.3.3	WPAPSK/TKIP	109
9.3.4	WPAPSK/AES	109
10	Authenticator.....	110
10.1	IEEE 802.1X features in rt2860apd	110
10.2	How to start rt2860apd.....	110
10.3	rt2860apd configuration for IEEE 802.1X	110
10.4	Support Multiple RADIUS Servers	111
10.5	Enhance dynamic wep keying	111
10.6	Examples for Radius server configuration	112
10.6.1	Example I	112
10.6.2	Example II	112
10.6.3	Example III	113
10.6.4	Example V.....	113
11	AP CLIENT	114
11.1	Setup AP Client.....	115
11.2	Support Parameters in RT2860AP.dat	115
11.2.1	ApCliEnable	115
11.2.2	ApCliSsid	115
11.2.3	ApCliBssid.....	115
11.2.4	ApCliWPAPSK.....	116
11.2.5	ApCliAuthMode.....	116
11.2.6	ApCliEncrypType	116
11.2.7	ApCliDefaultKeyID	116
11.2.8	ApCliKey1Type	117
11.2.9	ApCliKey1Str	117
11.2.10	ApCliKey1Type	117
11.2.11	ApCliKey2Str	117
11.2.12	ApCliKey2Type	117
11.2.13	ApCliKey3Str	118
11.2.14	ApCliKey4Type	118
11.2.15	ApCliKey4Str	118

11.2.16	ApCliTxMode	118
11.2.17	ApCliTxMcs.....	118
11.2.18	ApCliWscSsid	119
11.3	AP Client iwpriv command	119
11.3.1	ApCliEnable	119
11.3.2	ApCliSsid	119
11.3.3	ApCliBssid.....	119
11.3.4	ApCliWPAPSK	119
11.3.5	ApCliAuthMode	120
11.3.6	ApCliEncrypType	120
11.3.7	ApCliWscSsid	120
11.3.8	ApCliDefaultKeyID	120
11.3.9	ApCliKey1Type	121
11.3.10	ApCliKey1Str	121
11.3.11	ApCliKey1Type	121
11.3.12	ApCliKey2Str	121
11.3.13	ApCliKey2Type	121
11.3.14	ApCliKey3Str	122
11.3.15	ApCliKey4Type	122
11.3.16	ApCliKey4Str	122
11.4	AP Client Examples	122
11.4.1	Enable AP Client with OPEN/NONE data security	122
11.4.2	Enable AP Client with OPEN/WEP security	122
11.4.3	Enable AP Client with SHARED/WEP security	123
11.4.4	Enable AP Client with WPAPSK/TKIP security	123
11.4.5	Enable AP Client with WPAPSK/AES security	123
11.4.6	AP Client WPS sample command	123
12	WDS.....	124
12.1	HOW to Steup WDS.....	124
12.2	WDS Individual Encryption	124
12.3	Supported Paramters in RT2860AP.dat	125
12.3.1	WdsEnable.....	125
12.3.2	WdsList	125
12.3.3	WdsEncrypType	125
12.3.4	WdsKey.....	126
12.3.5	Wds0Key.....	126
12.3.6	Wds1Key.....	126
12.3.7	Wds2Key.....	127
12.3.8	Wds3Key.....	127
12.3.9	WdsDefaultKeyID	127
12.3.10	WdsPhyMode	127
13	IGMP SNOOPING	129
13.1	IMGP Table Learning	129
13.2	Multicast Packet Process	129

13.3	IGMP SNOOPING in RT2860.dat support.....	130
13.3.1	IgmpSnEnable	130
13.4	Iwpriv command for IGMP SNOOPING	130
13.4.1	IgmpSnEnable	130
13.4.2	IgmpAdd.....	130
13.4.3	IgmpDel.....	131
14	MAC Repeater	132
14.1	MAC Repeater Management Flow.....	133
14.2	MAC Repeater Data Flow	134
14.2.1	Unicast Data Flow.....	134
14.2.2	Multicast / Broadcast Data Flow	134
14.3	MAC Repeater Limitation	135
14.4	MAC Repeater Example command	135
14.4.1	MAC Repeater by Wi-Fi Profile:.....	135
14.4.2	MAC Repeater by Wi-Fi command:.....	135
15	Multiple BSSID Setup	136
16	Concurrent A+G Settings.....	138
17	SNMP MIBs Support List.....	139
17.1	RT2860AP Supported v.s. IEEE802dot11-MIB	139
17.2	RALINK OID for SNMP MIB.....	145
18	IOCTL I/O Control Interface	147
18.1	Parameters for iwconfig's IOCTL	147
18.2	Parameters for iwpriv's IOCTL.....	148
18.2.1	Iwpriv Set DATA	148
18.2.2	Iwpriv Get DATA	148
18.2.3	Iwpriv Set Data: BBP, MAC and EEPROM	150
18.2.4	Iwpriv Get Data: BBP, MAC and EEPROM	150
18.2.5	Iwpriv Set Raw Data	151
18.2.6	Set Raw Data with Flags	152
18.2.7	Get Raw Data with Flags	152
18.3	Sample user space Applications	154
19	SingleSKU Example file (New feature for MT76XX).....	166
19.1	2.4GHz example SingleSKU.dat.....	166
19.2	5GHz example SingleSKU.dat.....	166
20	Q&A	168
20.1	Why WPAPSK can not work?	168
20.2	How to switch driver to operate in A band?	168
20.3	When I set channel as 1, but it will appear in channel 3. Why?	168
20.4	How can I know the version of the WLAN Driver?	168
20.5	Can SoftAP support Antenna diversity?	168
20.6	Can you tell me what is 11n Bit Rate Derivation?.....	168
20.7	FixTxMode iwpriv command samples.....	170
20.8	DFS Test example	171

20.9 New BSSID Mode MAC Address Limitation (for RT55XX/RT53XX series).....	172
20.10 TX & RX performance is always unbalance	173

1 Introduction

This document is the Software programming guide for Mediatek Wi-Fi SoftAP driver. The Software Programming guide covers profile setting, command list, and OID examples to demonstrate how to programming the WLAN driver.

2 Wi-Fi SoftAP driver Profile Default Setting

#The word of "Default" must not be removed

Default

CountryRegion=5

CountryRegionABand=7

CountryCode=TW

BssidNum=1

SSID=RT2860AP

WirelessMode=9

TxRate=0

Channel=11

BasicRate=15

BeaconPeriod=100

DtimPeriod=1

TxPower=100

DisableOLBC=0

BGProtection=0

TxAntenna=

RxAntenna=

TxPreamble=0

RTSThreshold=2347

FragThreshold=2346

TxBurst=1

PktAggregate=0

TurboRate=0

WmmCapable=0

APSDCapable=0

DLSCapable=0

APAIfsn=3;7;1;1

APCwmin=4;4;3;2

APCwmax=6;10;4;3

APTxop=0;0;94;47

APACM=0;0;0;0

BSSAifsn=3;7;2;2

BSSCwmin=4;4;3;2

BSSCwmax=10;10;4;3

BSSTxop=0;0;94;47

BSSACM=0;0;0;0

AckPolicy=0;0;0;0

NoForwarding=0

NoForwardingBTNBSSID=0

HideSSID=0

StationKeepAlive=0

ShortSlot=1

AutoChannelSelect=0

IEEE8021X=0

IEEE80211H=0

CSPeriod=10

WirelessEvent=0

IdsEnable=0

AuthFloodThreshold=32
AssocReqFloodThreshold=32
ReassocReqFloodThreshold=32
ProbeReqFloodThreshold=32
DisassocFloodThreshold=32
DeauthFloodThreshold=32
EapReqFloodThreshold=32
PreAuth=0
AuthMode=OPEN
EncrypType=NONE
RekeyInterval=0
RekeyMethod=DISABLE
PMKCachePeriod=10
WPAPSK=
DefaultKeyID=1
Key1Type=0
Key1Str=
Key2Type=0
Key2Str=
Key3Type=0
Key3Str=
Key4Type=0
Key4Str=
AccessPolicy0=0
AccessControlList0=
AccessPolicy1=0
AccessControlList1=
AccessPolicy2=0
AccessControlList2=
AccessPolicy3=0
AccessControlList3=
WdsEnable=0
WdsEncrypType=NONE
WdsList=
WdsKey=
RADIUS_Server=192.168.2.3
RADIUS_Port=1812
RADIUS_Key=ralink
own_ip_addr=192.168.5.234
EAPifname=br0
PreAuthifname=br0
HT_HTC=0
HT_RDG=0
HT_EXTCHA=0
HT_LinkAdapt=0
HT_OpMode=0
HT_MpduDensity=5
HT_BW=1
VHT_BW=1
VHT_SGI=1
VHT_STBC=0
VHT_BW_SIGNAL=0
VHT_DisallowNonVHT=0

VHT_LDPC=
HT_AutoBA=1
HT_AMSDU=0
HT_BAWinSize=64
HT_GI=1
HT_MCS=33
WscManufacturer=
WscModelName=
WscDeviceName=
WscModelNumber=
WscSerialNumber=
RadioOn=1

2.1 WLAN Profile Description

Syntax is 'Param'='Value' and describes below.

SectionNumber	Param Value
	...
	...
	...

The WLAN driver needs to be restart, after WLAN profile has been modified. Otherwise settings will not take any effect.

**A interface down/ up could do that.
EX:**

```
ifconfig ra0 down
ifconfig ra0 up
```

2.1.1 CountryRegion

Description: Country region for WLAN radio 2.4G HZ regulation.
Value:

CountryRegion=5

Region	Channels
0	1-11
1	1-13
2	10-11
3	10-13
4	14
5	1-14
6	3-9
7	5-13
31	1-14
32	1-11 active scan, 12 and 13 passive scan

33	1-14 all active scan, 14 b mode only
----	--------------------------------------

2.1.2 CountryRegionForABand

Description: Country region for WLAN radio 5G HZ regulation.

Value:

CountryRegionABand=7

Region	Channels
0	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165
1	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140
2	36, 40, 44, 48, 52, 56, 60, 64
3	52, 56, 60, 64, 149, 153, 157, 161
4	149, 153, 157, 161, 165
5	149, 153, 157, 161
6	36, 40, 44, 48
7	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165
8	52, 56, 60, 64
9	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140, 149, 153, 157, 161, 165
10	36, 40, 44, 48, 149, 153, 157, 161, 165
11	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 149, 153, 157, 161

2.1.3 CountryCode

Description: County Code for WLAN radio regulation.

Value: (Default is empty)

CountryCode=

2 characters, like TW for Taiwan.

Please refer to ISO3166 code list for other countries and can be found at

http://www.iso.org/iso/prods-services/iso3166ma/02iso-3166-code-lists/country_names_and_code_elements

Note:

1. This parameter can be set from EEP RM or EFUSE.
2. EEPROM/EFUSE has higher priority than the WLAN Profile.

2.1.4 ChannelGeography

Description: For Channel list builder

Value:

ChannelGeography=1

0: Outdoor

- 1: Indoor
- 2: Both

2.1.5 BssidNum

Description: multiple BSSID number

Value:

BssidNum=1

1/2/4/8/16

Note:

1. MAC Address alignment on MBSSID.
 - 1.1. Main BSSID have to insure MAC address is multiple of 2s on 2-BSSIDs' application.
 - 1.2. Main BSSID have to insure MAC address is multiple of 4s on 4-BSSIDs' application.
 - 1.3. Main BSSID have to insure MAC address is multiple of 8s on 8-BSSIDs' application.
2. Example 4 BSSIDs:

Align	1 st	2nd	3 rd	4th
0x00	AA-BB-CC-DD-EE-F0	AA-BB-CC-DD-EE-F1	AA-BB-CC-DD-EE-F2	AA-BB-CC-DD-EE-F3
0x04	AA-BB-CC-DD-EE-F4	AA-BB-CC-DD-EE-F5	AA-BB-CC-DD-EE-F6	AA-BB-CC-DD-EE-F7
0x08	AA-BB-CC-DD-EE-F8	AA-BB-CC-DD-EE-F9	AA-BB-CC-DD-EE-FA	AA-BB-CC-DD-EE-FB
0x0C	AA-BB-CC-DD-EE-FC	AA-BB-CC-DD-EE-FD	AA-BB-CC-DD-EE-FE	AA-BB-CC-DD-EE-FF

3. 16 BSSID support only on RT55XX serie chipset and after.

2.1.6 SSID

Description: The target BSSID string name

Value:

SSID=11n-AP

0~z, 1~32 ASCII characters.

2.1.7 SSID1

Description: The target BSSID string name

Value:

SSID1=11n-AP1

0~z, 1~32 ASCII characters.

2.1.8 SSID2

Description: The target BSSID string name

Value:

SSID2=11n-AP2

0~z, 1~32 ASCII characters.

2.1.9 SSID3

Description: The target BSSID string name

Value:

SSID3=11n-AP3

0~z, 1~32 ASCII characters.

2.1.10 SSID4

Description: The target BSSID string name

Value:

SSID4=11n-AP4

0~z, 1~32 ASCII characters.

2.1.11 WirelessMode

Description: Wireless Mode

Value:

WirelessMode=9

- 0: legacy 11b/g mixed
- 1: legacy 11B only
- 2: legacy 11A only
- 3: legacy 11a/b/g mixed
- 4: legacy 11G only
- 5: 11ABGN mixed
- 6: 11N only
- 7: 11GN mixed
- 8: 11AN mixed
- 9: 11BGN mixed
- 10: 11AGN mixed
- 11: 11N only in 5G band only
- 14: 11A/AN/AC mixed 5G band only (Only 11AC chipset support)
- 15: 11 AN/AC mixed 5G band only (Only 11AC chipset support)

2.1.12 Channel

Description: WLAN Radio channel (2.4G Band or 5G band)

Value:

Channel=0

Depends on CountryRegion or CountryRegionForABand.
Default value = 0, the driver scan BSSID's channel automatically.

2.1.13 BasicRate

Description: Basic rate support

Value:

BasicRate=15

0~4095

Note:

A bitmap represent basic support rate (A mode not support)

- 1: Basic rate-1Mbps
- 2: Basic rate-2Mbps
- 3: Basic rate-1Mbps, 2Mbps
- 4: Basic rate-5.5Mbps
- 15: Basic rate-1Mbps, 2Mbps, 5.5Mbps, 11Mbps

Examples:

Basic Rate Bit Map (max. 12-bit, represent max. 12 basic rates)												
Bit	11	10	9	8	7	6	5	4	3	2	1	0
Rate	54	48	36	24	18	12	9	6	11	5.5	2	1
Set	0	1	0	1	0	1	0	1	1	1	1	1
Hex	5				5				F			
Decimal	1375											

Note:

Set correct basic rates set before changing wireless mode.

11B/G Mixed, 11B/G/N Mixed, and 11N Only:

iwpriv ra0 set BasicRate=15 → (0x0F: 1, 2, 5.5, 11 Mbps)

11B:

iwpriv ra0 set BasicRate=3 → (0x03: 1, 2 Mbps)

11G-Only and 11G/N Mixed:

iwpriv ra0 set BasicRate=351 → (0x15F: 1, 2, 5.5, 11, 6, 12, 24 Mbps)

2.1.14 BeaconPeriod

Description: Beacon period setting (It is SoftAP only)

Value:

BeaconPeriod=100

2.1.15 DtimPeriod

Description: DTIM period

Value:

DtimPeriod=1

1~255

2.1.16 TxPower

Description: WLAN Radio Transmit Power setting in percentage

Value:

TxPower=100

0~100

2.1.17 DisableOLBC

Description: Enable or disable OLBC (Overlapping Legacy BSS Condition)

Value:

DisableOLBC=0

0: disable

1: enable

2.1.18 BGProtection

Description: Enable/disable WLAN 11B or 11G protection

Value:

BGProtection=0

0: AUTO

1: On

2: Off

2.1.19 MaxStaNum

Description: Configure Maximun numbder of station that could connect with this SoftAP

Value:

MaxStaNum=0

0: disable

1~32

2.1.20 TxAntenna

Description: Configure Tx antenna number

Value:

TxAntenna=1

- 1: 1Tx1R
- 2: 2Tx2R
- 3: 3Tx3R

2.1.21 RxAntenna

Description: Configure Rx antenna number

Value:

RxAntenna=1

- 1: 1Tx1R
- 2: 2Tx2R
- 3: 3Tx3R

2.1.22 TxPreamble

Description: Enable or disable Tx preamble

Value:

TxPreamble=0

- 0: disable
- 1: enable

2.1.23 RTSThreshold

Description: Set RTS Threshold

Value:

RTSThreshold=2347

1~2347

2.1.24 FragThreshold

Description: Set Fragment threshold

Value:

FragThreshold=2346

256~2346

2.1.25 TxBurst

Description: Enable or disable Tx burst

Value:

TxBurst=1

0: disable

1: enable

2.1.26 PktAggregate

Description: Enable or disable Tx Aggregate

Value:

PktAggregate=0

0: disable

1: enable

2.1.27 WmmCapable

Description: Enable or disable WMM QOS function

Value:

WmmCapable=1

0: disable

1: enable

2.1.28 APSDCapable

Description: Enable or disable WMM APSD function

Value:

APSDCapable=0

0: disable

1: enable

2.1.29 DLSCapable

Description: Enable or disable DLS function (Ralink proprietary function, Ralink 11n STA support only)

Value:

DLSCapable=0

0: disable

1: enable

2.1.30 APAifsn

Description: WMM parameter for AP

Value:

APAifsn=3;7;1;1

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.31 APCwmin

Description: WMM parameter for AP

Value:

APCwmin=4;4;3;2

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.32 APCwmax

Description: WMM parameter for AP

Value:

APCwmax=6;10;4;3

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.33 APTxop

Description: WMM parameter for AP

Value:

APTxop=0;0;94;47

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.34 APACM

Description: WMM parameter for AP

Value:

APACM=0;0;0;0

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable',

please store all parameter to RT2800AP.dat, and restart driver.

2.1.35 BSSAifsn

Description: WMM parameter for station

Value:

BSSAifsn=3;7;2;2

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.36 BSSCwmin

Description: WMM parameter for station

Value:

BSSCwmin=4;4;3;2

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.37 BSSCwmax

Description: WMM parameter for station

Value:

BSSCwmax=10;10;4;3

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.38 BSSTxop

Description: WMM parameter for station

Value:

BSSTxop=0;0;94;47

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.39 BSSACM

Description: WMM parameter for station

Value:

BSSACM=0;0;0;0

AC_BE;AC_BK;AC_VI;AC_VO

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.40 AckPolicy

Description: Ack policy supports normal Ack or no Ack (AC_BK, AC_BE, AC_VI, AC_VO)

Value:

AckPolicy=0;0;0;0

0: No ack

1: normal Ack

Note: All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.

2.1.41 NoForwarding

Description: enable or disable No forwarding STA packet within the same BSSID

Value:

NoForwarding=0

0: disable

1: enable

2.1.42 NoForwardingBTNBSSID

Description: enable or disable No Forwarding between each BSSID interface.

Value:

NoForwardingBTNBSSID=0

0: disable

1: enable

2.1.43 NoForwardingMBCast

Description: enable or disable No Forwarding multicast/broadcast packets between the same BSSID interface.

Value:

NoForwardingMBCast=0

0: disable

1: enable

2.1.44 HideSSID

Description: enable or disable Hidden SSID support

Value:

HideSSID=0

0: disable

1: enable

2.1.45 StationKeepAlive

Description: enable or disable Auto-detect the alive status of the station periodically

Value:

StationKeepAlive=0

0: disable

1~65535 seconds

2.1.46 ShortSlot

Description: enable or disable short slot time

Value:

ShortSlot=1

0: disable

1: enable

2.1.47 AutoChannelSelect

Description: enable or disable Auto Channel Select support

Value:

AutoChannelSelect=0

0: disable

- 1: Old Channel Selection Algorithm
- 2: New Channel Selection Algorithm

2.1.48 IEEE8021X

Description: enable or disable 8021X-WEP mode on, this field is enabled only when Radius-WEP or Radius-NONE mode on, otherwise must disable.

Value:

IEEE8021X=0

0: disable

1: enable

2.1.49 IEEE80211H

Description: enable or disable IEEE 802.11H support (DFS)

Value:

IEEE80211H=0

0: disable

1: enable

2.1.50 CSPeriod

Description: Set how many beacons with Channel Switch Announcement Element will be sent before changing a new channel.

Value:

CSPeriod=10

0 ~ 255. The default is 10.

Note: Channel switch period (Beacon count), unit is based on Beacon interval.

2.1.51 WirelessEvent

Description: enable or disable sending wireless event to the system log (Linux only)

Value:

WirelessEvent=0

0: disable

1: enable

2.1.52 IdsEnable

Description: enable or disable intrusion detection system

Value:

IdsEnable=0

0: disable

1: enable

2.1.53 AuthFloodThreshold

Description: enable or disable Authentication frame flood threshold

Value:

AuthFloodThreshold=32

0: disable

1~65535. (default=32)

2.1.54 ReassocReqFloodThreshold

Description: enable or disable Reassociation request frame flood threshold

Value:

ReassocReqFloodThreshold=32

0: disable

1~65535. (default=32)

2.1.55 ProbeReqFloodThreshold=32

Description: enable or disable Probe request frame flood threshold

Value:

ProbeReqFloodThreshold=32

0: disable

1~65535. (default=32)

2.1.56 DisassocFloodThreshold

Description: enable or disable disassociation frame flood threshold

Value:

DisassocFloodThreshold=32

0: disable

1~65535. (default=32)

2.1.57 DeauthFloodThreshold

Description: enable or disable deauthentication frame flood threshold

Value:

DeauthFloodThreshold=32

0: disable

1~65535. (default=32)

2.1.58 EapReqFooldThreshold

Description: enable or disable EAP request frame flood threshold

Value:

EapReqFooldThreshold=32

0: disable

1~65535. (default=32)

2.1.59 PreAuth

Description: enable or disable WPA2 pre-authentication mode

Value:

PreAuth=0

0: disable

1: enable

2.1.60 AuthMode

Description: WLAN security Authentication mode

Value:

AuthMode=OPEN

OPEN	For open system
SHARED	For shared key system
WPAUTO	Auto switch between OPEN and SHARED
WPAPSK	For WPA pre-shared key (Infra)
WPA2PSK	For WPA2 pre-shared key (Infra)
WPANONE	For WPA pre-shared key (Adhoc)
WPA	For enterprise mode (Need wpa_suppllicant)
WPA2	For enterprise mode (Need wpa_suppllicant)

2.1.61 EncrypType

Description: WLAN security Encryption type

Value:

EncrypType=NONE

NONE	For AuthMode=OPEN
WEP	For AuthMode=OPEN or AuthMode=SHARED
TKIP	For AuthMode=WPA2PSK or WPA2PSK
AES	For AuthMode=WPA2PSK or WPA2PSK

2.1.62 RekeyInterval

Description: Set group rekey interval. 0 to disable rekey. Unit:1seconds/1000packets dependent on Rekeytype.

Value:

RekeyInterval=0

0~0xFFFFFFFF

2.1.63 RekeyMethod

Description: Set group rekey interval-unit's type for WPA2.

Value:

RekeyMethod=DISABLE

TIME: Time rekey

PKT: Packet rekey

DISABLE: Disable rekey

2.1.64 PMKCachePeriod

Description: Set the alive time of PMKID in PMK-Cache table for WPA2.

Value:

PMKCachePeriod=10

0~65535 (unit minutes)

2.1.65 WPAPSK

Description: WLAN Security string for (TKIP/AES)

Value:

WPAPSK=

8~63 ASCII

Or

64 HEX characters

2.1.66 DefaultKeyID

Description: Default key ID

Value:

DefaultKeyID=1

1~4

2.1.67 Key1Type

Description: Key 1 type

Value:

Key1Type=0

0: Hexadecimal type

1: ASCII type

2.1.68 Key1Str

Description: Key 1 string

Value:

Key1Str=

10 or 26 characters (key type=0)

5 or 13 characters (key type=1)

2.1.69 Key2Type

Description: Key 2 type

Value:

Key2Type=0

0: Hexadecimal type

1: ASCII type

2.1.70 Key2Str

Description: Key 2 string

Value:

Key2Str=

10 or 26 characters (key type=0)

5 or 13 characters (key type=1)

2.1.71 Key3Type

Description: Key 3 type

Value:

Key3Type=0

0: Hexadecimal type
1: ASCII type

2.1.72 Key3Str

Description: Key 3 string

Value:

Key3Str=
10 or 26 characters (key type=0)
5 or 13 characters (key type=1)

2.1.73 Key4Type

Description: Key 4 type

Value:

Key4Type=0

0: Hexadecimal type
1: ASCII type

2.1.74 Key4Str

Description: Key 4 string

Value:

Key4Str=
10 or 26 characters (key type=0)
5 or 13 characters (key type=1)

2.1.75 AccessPolicy0

Description: Set the access policy of ACL table 0.

Value:

AccessPolicy0=0

0: Disable this function
1: Allow all entries of ACL table to associate AP
2: Reject all entries of ACL table to associate AP

2.1.76 AccessControlList0

Description: Set the entry's MAC address into ACL table 0.

Value:

AccessControlList0=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: ACL for Bssid0, max=64

2.1.77 AccessPolicy1

Description: Set the access policy of ACL table 1.

Value:

AccessPolicy1=0

0: Disable this function

1: Allow all entries of ACL table to associate AP

2: Reject all entries of ACL table to associate AP

2.1.78 AccessControlList1

Description: Set the entry's MAC address into ACL table 1.

Value:

AccessControlList1=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: ACL for Bssid0, max=64

2.1.79 AccessPolicy2

Description: Set the access policy of ACL table 2.

Value:

AccessPolicy2=0

0: Disable this function

1: Allow all entries of ACL table to associate AP

2: Reject all entries of ACL table to associate AP

2.1.80 AccessControlList2

Description: Set the entry's MAC address into ACL table2.

Value:

AccessControlList2=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: ACL for Bssid0, max=64

2.1.81 AccessPolicy3

Description: Set the access policy of ACL table 3.

Value:

AccessPolicy3=0

0: Disable this function

1: Allow all entries of ACL table to associate AP

2: Reject all entries of ACL table to associate AP

2.1.82 AccessControlList3

Description: Set the entry's MAC address into ACL table 3.

Value:

AccessControlList3=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: ACL for Bssid0, max=64

2.1.83 WdsEnable

Description: config WDS mode

Value:

WdsEnable=0

0: Disable - Disable all WDS function.

1: Restrict mode - Same as Repeater mode.

2: Bridge mode - Turn on WDS function, the peer WDS APs are according to the mac address listed in "WdsList" field below. In this mode, AP will not send beacon out and will not deal with probe request packets, therefore STA will not possible to connect with it.

3: Repeater mode - Turn on WDS function, the peer WDS APs are according to the mac address listed in "WdsList" field below.

4: Lazy mode - Turn on WDS function, and auto learning from WDS packet which with addr4 field.

2.1.84 WdsEncryptType

Description:

Value:

WdsEncryptType=NONE

NONE
WEP
TKIP
AES

For example:

WdsEncryptType=OPEN;TKIP;WEP;AES

The encryption of wds0 is OPEN

The encryption of wds1 is TKIP

The encryption of wds2 is WEP

The encryption of wds3 is AES

2.1.85 WdsList

Description: WDS list

Value:

WdsList=

[Mac Address];[Mac Address];...

Note: maximum WDS-link is 4.

2.1.86 WdsKey

Description: The key for WDS link

Value:

WdsKey=

10 or 26 hexadecimal characters (ex: 1234567890) for WEP

5 or 13 ASCII characters (ex: 12345) for WEP

8 ~ 63 ASCII characters for TKIP or AES

64 hexadecimal characters for TKIP or AES

2.1.87 RADIUS_Server

Description: Configure radius server IP address

Value:

RADIUS_Server=

IP address.

Example: RADIUS_Server=192.168.2.3

2.1.88 RADIUS_Port

Description: Configure radius server port number

Value:

RADIUS_Port=1812

Default: 1812

2.1.89 RADIUS_Key

Description: Configure radius key string

Value:

RADIUS_Key=

Example:

RADIUS_Key=ralink

2.1.90 own_ip_addr

Description: Configure SoftAP itself IP Address

Value:

own_ip_addr=

Example:

own_ip_addr=192.168.1.1

2.1.91 EAPifname

Description: EAPifname is assigned as the binding interface for EAP negotiation

Value:

EAPifname=

Example:

EAPifname=br0

2.1.92 PreAuthifname

Description: PreAuthifname is assigned as the binding interface for WPA2 Pre-authentication

Value:

PreAuthifname=

Example:

PreAuthifname=br0

2.1.93 HT_HTC

Description: enable or disable Support the HT control field

Value:

HT_HTC=0

0: disable

1: enable

Note: HTC Control field(4-octet) is following QOS field. An MPDU that contains the HT control field is referred to as a +HTC frame.

2.1.94 HT_RDG

Description: Enable or disable HT Reverse Direction Grant

Value:

HT_RDG=1

0: disable

1: enable

2.1.95 HT_EXTCHA

Description: To locate the 40MHz channel in combination with the control

Value:

HT_EXTCHA=0

0: Below

1: Above

2.1.96 HT_LinkAdapt

Description: enable or disable HT Link Adaptation Control

Value:

HT_LinkAdapt=0

0: disable
1: enable

2.1.97 HT_OpMode

Description: HT operation mode

Value:

HT_OpMode=0

0: HT mixed mode
1: HT Greenfield mode

2.1.98 HT_MpduDensity

Description: Minimum separation of MPDUs in an A-MPDU

Value:

HT_MpduDensity=4

0~7

0: no restriction
1: 1/4 μ s
2: 1/2 μ s
3: 1 μ s
4: 2 μ s
5: 4 μ s
6: 8 μ s
7: 16 μ s

2.1.99 HT_BW

Description: HT channel Bandwidth

Value:

HT_BW=1

0: 20 MHz
1: 40 MHz

2.1.100 VHT_BW

Description: Enable/disable 11AC 80MHz Bandwidth Support

Value:

VHT_BW=1

0: disable

1: enable

Note: 11AC chipset only.

2.1.101 VHT_STBC

Description: Enable/disable 11AC STBC Support

Value:

VHT_STBC=1

0: disable

1: enable

Note: 11AC chipset only

2.1.102 VHT_BW_SIGNAL

Description: Enable/disable 11 AC BandWidth signaling

Value:

VHT_BW_SIGNAL=1

0: disable

1: enable

Note: 11AC chipset only.

2.1.103 VHT_LDPC

Description: Enable/disable to indicate support receiving 11AC LDPC coded packets

Value:

VHT_LDPC=1

0: disable

1: enable

Note: 11AC chipset only.

2.1.104 VHT_DisallowNonVHT

Description: Enable/disable to reject non-VHT STA to connect

Value:

VHT_DisallowNonVHT=1

0: disable

1: enable to reject non-VHT STA

Note: 11AC chipset only.

2.1.105 HT_BADecline

Description: Enable or disable decline Block Ack to peer

Value:

HT_BADecline=0

0: disable

1: enable

2.1.106 HT_AutoBA

Description: Enable or disable auto build Block Ack section with peer

Value:

HT_AutoBA=1

0: disable

1: enable

2.1.107 HT_AMSDU

Description: Enable or disable AMSDU section

Value:

HT_AMSDU=0

0: disable

1: enable

2.1.108 HT_BAWinSize

Description: Block Ack window size

Value:

HT_BAWinSize=64

1~64

2.1.109 HT_GI

Description: HT Guard interval support

Value:

HT_GI=1

0: Long guard interval

1: short guard interval

2.1.110 HT_MCS

Description: WLAN Modulation and Coding Scheme (MCS)

Value:

HT_MCS=33

0 ~15, 32: Fix MCS rate for HT rate.
33: Auto Rate Adaption, recommended

2.1.111 HT_MIMOPSMODE

Description: 802.11n SM power save mode

Value:

HT_MIMOPSMODE=3

0: Static SM Power Save Mode
2: Reserved
1: Dynamic SM Power Save Mode
3: SM enabled
(not fully support yet)

2.1.112 HT_DisallowTKIP

Description: Enable or disable 11N rate with 11N AP when cipher is TKIP or WEP

Value:

HT_DisallowTKIP=1

0: disable
1: enable

2.1.113 HT_STBC

Description: Enable or disable HT STBC support

Value:

HT_STBC=0

0: disable
1: enable

2.1.114 WscManufacturer

Description: WPS manufacturer string

Value:

WscManufacturer=

Less than 64 characters

2.1.115 WscModelName

Description: WPS Mode name string

Value:

WscModelName=

Less than 32 characters

2.1.116 WscDeviceName

Description: WPS Device name string

Value:

WscDeviceName=

Less than 32 characters

2.1.117 WscModelNumber

Description: WPS Device model number string

Value:

WscModelNumber=

Less than 32 characters

2.1.118 WscSerialNumber

Description: WPS serial number string

Value:

WscSerialNumber=

Less than 32 characters

2.1.119 Wsc4digitPinCode

Description: WPS 4 digit pin code string

Value:

Wsc4digitPinCode=0

4 digit

2.1.120 MACRepeaterEn

Description: Enable or disable new MAC Repeater function.

Value:

MACRepeaterEn=0

0: Disable

1: Enable

2.1.121 PMFMFPC

Description: Disable or enable Protection Management Frame Capable

Value:

PMFMFPC=0

0: Disable

1: Enable

2.1.122 PMFMFPR

Description: Disable or enable Protection Management Frame Required

Value:

PMFMFPR=0

0: Disable

1: Enable

2.1.123 PMFSHA256

Description: Disable or enable use SHA256 for Encryption

Value:

PMFSHA256=0

0: Disable

1: Enable

2.1.124 VLANID

Description: set VLAN ID

Value:

VLANID=0

0: Disable

2.1.125 VLANPriority

Description: set VLAN Priority

Value:

VLANPriority=0

0: Disable

2.1.126 Ext_LNA

Description: support External or internal LNA

Value:

Ext_LNA

0: Internal LNA

1: External LNA

Note: MT7620 iNIC driver only profile

2.1.127 Ext_PA

Description: support External or internal PA

Value:

Ext_PA

0: Internal PA

1: External PA

Note: MT7620 iNIC driver only profile

2.1.128 ExtEEPROM

Description: Support driver to read EEPROM from an external file

Value:

ExtEEPROM=1

0: read EERPM data from EEPROM chip

1: read EEPROM data from an external file

Note: The external EEPROM file must be exactly the same format as EEPROM format.
iNIC driver only profile.

2.1.129 Mem

Description: Support WLAN profile can configure iNIC system address value

Value:

Mem=addr1,value1;addr2,value2;

Example:

Mem=b0110014,ff7f5555;b011008c,2404040;

iNIC firmware will Set

1. memory address (0xb0110014) value (0xff7f5555);
2. memory address (0xb011008c) value (0x2404040);

Note: This parameter is only for iNIC driver.

2.1.130 IgmpAdd1

Description: Add white list to passthrough IGMPsnooping

Value:

IgmpAdd1=MAC address-MAC address-MAC address

Example:

IgmpAdd1=01:00:5e:7f:ff:fa-01:00:5e:00:00:fb

Note: update to 32 set of MAC address.

2.1.131 E2pAccessMode

Description: Select the EEPROM access mode from interface start-up

Value:

E2pAccessMode=2

0: NONE

1: EFUSE mode

2: FLASH mode

3: EEPROM mode

4: BIN FILE mode

2.1.132 AutoChannelSkipList

Description: Skip channel list for Auto Channel selection Algorithm

Value:

AutoChannelSkipList=Channel_list

Example:

Channel_list=2;3;4;5;7;8;10;

2.1.1322.1.133 EtherTrafficBand

Description: To bind ethernet packets with specific RF band

Value:

EtherTrafficBand=2G

2G: Bind ethernet packets with 2.4GHz RF Band

5G: Bind ethernet packets with 5GHz RF Band

Note: only available after SoftAP driver v3.0.1.2. or after version

2.1.1332.1.134 DetectPhy

Description: Disable/Enable iNIC Phy link detection. if Phy link down will reset iNIC to load firmware.

Value:

DetectPhy=0

0: disable

1: enable

Note: only available on iNIC MT76XX FW v2.7.0.8 and after.

2.1.1342.1.135 Thermal

Description: Disable/Enable iNIC thermal function

Value:

Thermal=0

0: disable

1: enable

Note:

Thermal function will be according to criteria with current temperature to configure Ant.

Criteria Value: 1~1000

default:80

Example:

iwpriv ra0 set tpc =80

Only available on iNIC MT76XX FW v2.7.0.8 and after.

2.1.1352.1.136 %s_DfsSwAddCheck%d

Description: WLAN profile parameter to check DFS false alarm.

The first string is RDRRegion. RDRRegion string can be "CE", "FCC", "JAP", "JAP_W53", "JAP_W56". The second integer is channel index. Channel index can be from 0 to 4.

Value:

There are four parameter (Period low, Period High, Width low, Width high) in one rule. Multiple rules can be used. At least one rule must be used. Each parameter is separated by semicolon. T_Low;T_High;W_Low;W_High

For example:

CE_DfsSwAddCheck0=100;200;50;500

FCC_DfsSwAddCheck0=100;200;50;500;70;700;30;300

Note: only available on iNIC MT76XX FW v2.7.0.8 and after.

2.1.1362.1.137 **IsolateCard**

Description: Disable/Enable for iNIC isolate concurrent card traffic.

Value:

IsolateCard=0

0: disable

1: enable (iNIC concurrent card traffic can't forward to each other)

Note: only available on iNIC MT76XX FW v2.7.0.9 and after.

2.1.1372.1.138 **EnhanceMultiClient**

Description: Disable/Enable multiple N client related configuration.

Value:

EnhanceMultiClient=0

0: disable

1: enable

Note: only available on iNIC MT76XX FW v2.7.0.9 and after.

2.1.1382.1.139 **BGMultiClient**

Description: Disable/Enable multiple legacy client related configuration.

Value:

BGMultiClient=0

0: disable

1: enable

Note: only available on iNIC MT76XX FW v2.7.0.9 and after.

3 Wi-Fi SoftAP driver iwpriv command

Syntax is iwpriv ra0 set [parameters]=[Value]

Note: Execute one iwpriv/set command at a time.

3.1.1 Debug

Description: config WLAN driver Debug level.

Value:

iwpriv ra0 set Debug=3

0~5

0: Debug Off

1: Debug Error

2: Debug Warning

3: Debug Trace

4: Debug Info

5: Debug Loud

3.1.2 DriverVersion

Description: Check driver version by iwpriv command. (Need to enable debug mode)

Value:

iwpriv ra0 set DriverVersion=0

Any value

3.1.3 CountryRegion

Description: Set Country Region

Value:

iwpriv ra0 set CountryRegion=1

Region	Channels
0	1-11
1	1-13
2	10-11
3	10-13
4	14
5	1-14

6	3-9
7	5-13
31	1-14
32	1-11 active scan, 12 and 13 passive scan
33	1-14 all active scan, 14 b mode only

3.1.4 CountryRegionABand

Description: Set Country Region for 5G Hz WLAN regulation

Value:

iwpriv ra0 set CountryRegionABand=7

Region	Channels
0	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165
1	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140
2	36, 40, 44, 48, 52, 56, 60, 64
3	52, 56, 60, 64, 149, 153, 157, 161
4	149, 153, 157, 161, 165
5	149, 153, 157, 161
6	36, 40, 44, 48
7	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165
8	52, 56, 60, 64
9	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140, 149, 153, 157, 161, 165
10	36, 40, 44, 48, 149, 153, 157, 161, 165
11	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 149, 153, 157, 161

3.1.5 CountryCode

Description: configure country code

Value:

iwpriv ra0 set CountryCode=TW

2 characters, like TW for Taiwan.

Note: Please refer to ISO3166 code list for other countries and can be found at <http://www.iso.org/iso/en/prods-services/iso3166ma/02iso-3166-code-lists/list-en1.html#sz>

3.1.6 AccessPolicy

Description: Configure access policy of ACL table

Value:

iwpriv ra0 set AccessPolicy=0

- 0: Disable this function
- 1: Allow all entries of ACL table to associate AP
- 2: Reject all entries of ACL table to associate AP

3.1.7 ResetCounter

Description: Reset all statistic counter

Value:

iwpriv ra0 set ResetCounter=1

3.1.8 RadioOn

Description: enable or disable RF

Value:

iwpriv ra0 set RadioOn=1

0: off

1: on

3.1.9 SiteSurvey

Description: In SoftAP mode to issue a site survey to the driver.

Value:

iwpriv ra0 set SiteSurvey=1

1

3.1.10 CountryString

Description: configure country string

Value:

iwpriv ra0 set CountryString=TAIWAN

32 characters, ex: Taiwan, case insensitive

Note: Please refer to ISO3166 code list for other countries and can be found at
<http://www.iso.org/iso/en/prods-services/iso3166ma/02iso-3166-code-lists/list-en1.html#sz>

Item	Country Number	ISO Name	Country Name (CountryString)	Support 802.11A	802.11A Country Region	Support 802.11G	802.11G Country Region
	0	DB	Debug	Yes	A_BAND_REGION_7	Yes	G_BAND_REGION_5
	8	AL	ALBANIA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
	12	DZ	ALGERIA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
	32	AR	ARGENTINA	Yes	A_BAND_REGION_3	Yes	G_BAND_REGION_1
	51	AM	ARMENIA	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
	36	AU	AUSTRALIA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
	40	AT	AUSTRIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
	31	AZ	AZERBAIJAN	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
	48	BH	BAHRAIN	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1

112	BY	BELARUS	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
56	BE	BELGIUM	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
84	BZ	BELIZE	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
68	BO	BOLIVIA	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
76	BR	BRAZIL	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
96	BN	BRUNEI DARUSSALAM	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
100	BG	BULGARIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
124	CA	CANADA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
152	CL	CHILE	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
156	CN	CHINA	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
170	CO	COLOMBIA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
188	CR	COSTA RICA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
191	HR	CROATIA	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
196	CY	CYPRUS	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
203	CZ	CZECH REPUBLIC	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
208	DK	DENMARK	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
214	DO	DOMINICAN REPUBLIC	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
218	EC	ECUADOR	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
818	EG	EGYPT	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
222	SV	EL SALVADOR	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
233	EE	ESTONIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
246	FI	FINLAND	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
250	FR	FRANCE	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
268	GE	GEORGIA	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
276	DE	GERMANY	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
300	GR	GREECE	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
320	GT	GUATEMALA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
340	HN	HONDURAS	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
344	HK	HONG KONG	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
348	HU	HUNGARY	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
352	IS	ICELAND	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
356	IN	INDIA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
360	ID	INDONESIA	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
364	IR	IRAN	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
372	IE	IRELAND	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
376	IL	ISRAEL	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
380	IT	ITALY	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
392	JP	JAPAN	Yes	A_BAND_REGION_9	Yes	G_BAND_REGION_1
400	JO	JORDAN	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
398	KZ	KAZAKHSTAN	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
408	KP	KOREA DEMOCRATIC	Yes	A_BAND_REGION_5	Yes	G_BAND_REGION_1
410	KR	KOREA REPUBLIC OF	Yes	A_BAND_REGION_5	Yes	G_BAND_REGION_1
414	KW	KUWAIT	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
428	LV	LATVIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
422	LB	LEBANON	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
438	LI	LIECHTENSTEIN	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
440	LT	LITHUANIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
442	LU	LUXEMBOURG	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
446	MO	MACAU	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
807	MK	MACEDONIA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
458	MY	MALAYSIA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
484	MX	MEXICO	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
492	MC	MONACO	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
504	MA	MOROCCO	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
528	NL	NETHERLANDS	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1

554	NZ	NEW ZEALAND	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
578	NO	NORWAY	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
512	OM	OMAN	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
586	PK	PAKISTAN	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
591	PA	PANAMA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
604	PE	PERU	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
608	PH	PHILIPPINES	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
616	PL	POLAND	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
620	PT	PORTUGAL	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
630	PR	PUERTO RICO	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
634	QA	QATAR	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
642	RO	ROMANIA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
643	RU	RUSSIA FEDERATION	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
682	SA	SAUDI ARABIA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
702	SG	SINGAPORE	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
703	SK	SLOVAKIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
705	SI	SLOVENIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
710	ZA	SOUTH AFRICA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
724	ES	SPAIN	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
752	SE	SWEDEN	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
756	CH	SWITZERLAND	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
760	SY	SYRIAN ARAB REPUBLIC	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
158	TW	TAIWAN	Yes	A_BAND_REGION_3	Yes	G_BAND_REGION_0
764	TH	THAILAND	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
780	TT	TRINIDAD AND TOBAGO	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
788	TN	TUNISIA	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
792	TR	TURKEY	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
804	UA	UKRAINE	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
784	AE	UNITED ARAB EMIRATES	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
826	GB	UNITED KINGDOM	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
840	US	UNITED STATES	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
858	UY	URUGUAY	Yes	A_BAND_REGION_5	Yes	G_BAND_REGION_1
860	UZ	UZBEKISTAN	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_0
862	VE	VENEZUELA	Yes	A_BAND_REGION_5	Yes	G_BAND_REGION_1
704	VN	VIET NAM	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
887	YE	YEMEN	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
716	ZW	ZIMBABWE	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1

3.1.11 SSID

Description: Set AP SSID

Value:

iwpriv ra0 set SSID=11n-AP

0~z, 1~32 ASCII characters

3.1.12 WirelessMode

Description: Set WLAN mode

Value:

iwpriv ra0 set WirelessMode=5

- 0: legacy 11b/g mixed
- 1: legacy 11B only
- 2: legacy 11A only
- 3: legacy 11a/b/g mixed
- 4: legacy 11G only
- 5: 11ABGN mixed
- 6: 11N only
- 7: 11GN mixed
- 8: 11AN mixed
- 9: 11BGN mixed
- 10: 11AGN mixed
- 11: 11N only in 5G band only
- 14: 11A/AN/AC mixed 5G band only (Only 11AC chipset support)
- 15: 11 AN/AC mixed 5G band only (Only 11AC chipset support)

3.1.13 FixedTxMode

Description: Fix Tx mode to CCK or OFDM for MCS rate selection

Value:

iwpriv ra0 set FixedTxMode=CCK

CCK

OFDM

3.1.14 OFDMBasicRate

Description: configure OFDM basic rate

Value:

iwpriv ra0 set OFDMBasicRate=

0~4095

Basic Rate Bit Map (max. 12-bit, represent max. 12 basic rates)												
Bit	11	10	9	8	7	6	5	4	3	2	1	0
Rate	54	48	36	24	18	12	9	6	11	5.5	2	1
Set	0	1	0	1	0	1	0	1	1	1	1	1
Hex	5				5				F			
Decimal	1375											

Note: Be careful to set this value, if you don't know what this is, please don't set this field.

3.1.15 Channel

Description: Configure Wi-Fi Channel

Value:

MediaTek Confidential

© 2013 MediaTek Inc.

Page 56 of 173

iwpriv ra0 set Channel=6

802.11b/g: 1 ~ 14 (it must agree with the CountryRegion setting)

802.11a: 36~165 (it must agree with the CountryRegionABand setting)

3.1.16 BeaconPeriod

Description: configure Beacon period

Value:

iwpriv ra0 set BeaconPeriod=100

20 ~ 1024 (unit is in milli-seconds)

3.1.17 DtimPeriod

Description: Configure DTIM period

Value:

iwpriv ra0 set DtimPeriod=1

1~5

3.1.18 TxPower

Description: Set Transmit Power by percentage

Value:

iwpriv ra0 set TxPower=100

0~100

Note:

91 ~ 100% & AUTO, treat as 100% in terms of mW

61 ~ 90%, treat as 75% in terms of mW -1dBm

31 ~ 60%, treat as 50% in terms of mW -3dBm

16 ~ 30%, treat as 25% in terms of mW -6dBm

10 ~ 15%, treat as 12.5% in terms of mW -9dBm

0 ~ 9 %, treat as MIN(~3%) in terms of mW -12dBm

3.1.19 BGProtection

Description: Enable or disable 11B, 11G protection

Value:

iwpriv ra0 set BGProtection=0

0: disable

1: Always on

2:Always off

3.1.20 DisableOLBC

Description: enable or disable OLBC

Value:

iwpriv ra0 set DisableOLBC=0

0: disable

1: enable

3.1.21 TxPreamble

Description: enable or disable Tx preamble

Value:

iwpriv ra0 set TxPreamble=1

0: disable

1: enable

3.1.22 RTSThreshold

Description: Set RTS Threshold

Value:

iwpriv ra0 set RTSThreshold=2347

1~2347

3.1.23 FragThreshold

Description: Set Fragment threshold

Value:

iwpriv ra0 set FragThreshold=2346

256~2346

3.1.24 TxBurst

Description: enable or disable Tx burst mode

Value:

iwpriv ra0 set TxBurst=0

0: disable

1: enable

3.1.25 PktAggregate

Description: enable or disable packet aggregation (Ralink to Ralink only)

Value:

iwpriv ra0 set PktAggregate=1

0: disable

1: enable

3.1.26 NoForwarding

Description: enable or disable no forwarding packet between STAs in the same BSSID

Value:

iwpriv ra0 set NoForwarding=0

0: disable

1: enable

3.1.27 NoForwardingBTNBSSID

Description: enable or disable No Forwarding between each BSSID interface.

Value:

iwpriv ra0 set NoForwardingBTNBSSID=1

0: disable

1: enable

3.1.28 NoForwardingMBCast

Description: enable or disable No Forwarding multicast/broadcast packets between each BSSID interface.

Value:

iwpriv ra0 set NoForwardingMBCast=1

0: disable

1: enable

3.1.29 HideSSID

Description: enable or disable hidden SSID

Value:

iwpriv ra0 set HideSSID=1

0: disable
1: enable

3.1.30 ShortSlot

Description: enable or disable short slot time

Value:

iwpriv ra0 set ShortSlot=0

0: disable
1: enable

3.1.31 DisconnectSta

Description: Disconnect one specific STA which connected with this SoftAP manually

Value:

iwpriv ra0 set DisconnectSta=00:11:22:33:44:55

[MAC address]

3.1.32 DisconnectAllSta

Description: Disconnect all STAs which connected with this SoftAP manually.

Value:

iwpriv ra0 set DisconnectAllSta=1
1

3.1.33 McastPhyMode

Description: Configure multicast physical mode

Value:

iwpriv ra0 set McastPhyMode=0

0: Disable
1: CCK
2: OFDM
3: HTMIX

3.1.34 McastMcs

Description: Specify the MCS of multicast packets.

Value:

iwpriv ra0 set McastMcs=0

0~15

3.1.35 WscVendorPinCode

Description: Set vendor pin code as pin code of WPS AP's enrollee

Value:

```
iwpriv ra0 WscVendorPinCode=xxxxxxx
```

xxxxxxx //Valid PIN code

3.1.36 ACLAddEntry

Description: To insert one or several MAC addresses into Access control MAC table list, up to 64 MAC address at one time.

Value:

```
iwpriv ra0 set ACLAddEntry="xx:xx:xx:xx:xx:xx"
```

[MAC address];[MAC address];...;[MAC address]"

Example:

```
iwpriv ra0 set ACLAddEntry="00:0c:43:28:aa:12;00:0c:43:28:aa:11;00:0c:43:28:aa:10" set
```

3.1.37 ACLClearAll

Description: To clear all the MAC address entries in an Access control MAC table list.

Value:

```
iwpriv ra0 set ACLClearAll=1
```

1: indicate to clear the table

Other value is invalid.

3.1.38 FixedTxMode

Description: To limit the transmission mode only for CCK and OFDM

Value:

```
iwpriv ra0 set FixedTxMode=CCK
```

CCK
OFDM

3.1.39 WpaMixPairCipher

Description: It provides a more flexible cipher combination.

Value:

iwpriv ra0 set WpaMixPairCipher=WPA_AES_WPA2_TKIPAES

WPA_AES_WPA2_TKIPAES
WPA_AES_WPA2_TKIP
WPA_TKIP_WPA2_AES
WPA_TKIP_WPA2_TKIPAES
WPA_TKIPAES_WPA2_AES
WPA_TKIPAES_WPA2_TKIPAES
WPA_TKIPAES_WPA2_TKIP

3.1.40 MaxStaNum

Description: To limit the maximum number of associated clients per BSS.

Value:

iwpriv ra0 set MaxStaNum=0

0: disable this function

1~32 (default:32)

3.1.41 AutoFallBack

Description: enable or disable auto fall back rate control function

Value:

iwpriv ra0 set AutoFallBack=1

0: disable

1: enable

3.1.42 ApCliTxMode

Description: Configure APclient Tx traffic mode

Value:

iwpriv apcli0 set ApCliTxMode=HT

CCK

OFDM

HT

3.1.43 ApCliTxMcs

Description: Set transmission MCS for AP-Client traffic.

Value:

iwpriv apcli0 set ApCliTxMcs=33

0~15, 32: Fixed MCS
33: Auto MCS

3.1.44 GreenAP

Description: enable or disable Green AP function

Value:

iwpriv ra0 set GreenAP=0

0: disable

1: enable

3.1.45 AutoChannelSel

Description: auto channel select when driver is loaded

Value:

iwpriv ra0 set AutoChannelSel=2

0: Disable

1: Old Channel Selection Algorithm

2: New Channel Selection Algorithm

3.1.46 MBSSWirelessMode

Description: Set MBSS Wireless phy Mode. Only support in v2.5.0.0 and after version.

Value:

- 0: 802.11 B/G mixed
- 1: 802.11 B only
- 2: 802.11 A only
- 4: 802.11 G only
- 6: 802.11 N only
- 7: 802.11 G/N mixed
- 8: 802.11 A/N mixed
- 9: 802.11 B/G/N mixed
- 10: 802.11 A/G/N mixed
- 11: 802.11 N in 5G band only

Example:

ra0: B/G/N fixed

ra1: B only

ra2: B/G mixed

ra3: G only

Must set main BSS (ra0) first then set other MBSS WirelessMode. Can't have A & B mode fixed in MBSS.

iwpriv ra0 set WirelessMode=9

iwpriv ra1 set MBSSWirelessMode=1

iwpriv ra2 set MBSSWirelessMode=0
iwpriv ra3 set MBSSWirelessMode=4

3.1.47 HwAntDiv

Description: enable or disable Hardware antenna diversity

Value:

iwpriv ra0 set HwAntDiv=0

0: disable

1: enable

Note: Only support in RT5350.

3.1.48 HtBw

Description: Set HT WLAN Bandwidth

Value:

iwpriv ra0 set HtBw=1

0: 20 MHz

1: 40MHz

3.1.49 VhtBw

Description: Enable or disable 11AC 80MHz Bandwidth support

Value:

iwpriv ra0 set VhtBw=1

0: disable

1: enable

Note: 11AC chipset only

3.1.50 VhtStbc

Description: Enable/disable 11AC STBC Support

Value:

iwpriv ra0 set VhtStbc=1

0: disable

1: enable

Note: 11AC chipset only

3.1.51 VhtBwSignal

Description: Enable/disable 11 AC BandWidth signaling

Value:

iwpriv ra0 set VhtBwSignal=1

0: disable

1: enable

Note: 11AC chipset only.

3.1.52 VhtDisallowNonVHT

Description: Enable/disable to reject non-VHT STA to connect

Value:

iwpriv ra0 set VhtDisallowNonVHT=1

0: disable

1: enable to reject non-VHT STA

Note: 11AC chipset only.

3.1.53 HtMcs

Description: Set WLAN Modulation and Coding Scheme (MCS)

Value:

iwpriv ra0 set HtMcs=33

0 ~15, 32: Fix MCS rate for HT rate.

33: Auto Rate Adaption, recommended

HT Mixed Mode, Refer to IEEE P802.11n Figure n67	
HT Greenfield, Refer to IEEE P802.11n Figure n68	
MCS = 0 (1S)	(BW=0, SGI=0) 6.5Mbps
MCS = 1	(BW=0, SGI=0) 13Mbps
MCS = 2	(BW=0, SGI=0) 19.5Mbps
MCS = 3	(BW=0, SGI=0) 26Mbps
MCS = 4	(BW=0, SGI=0) 39Mbps
MCS = 5	(BW=0, SGI=0) 52Mbps
MCS = 6	(BW=0, SGI=0) 58.5Mbps
MCS = 7	(BW=0, SGI=0) 65Mbps
MCS = 8 (2S)	(BW=0, SGI=0) 13Mbps
MCS = 9	(BW=0, SGI=0) 26Mbps
MCS = 10	(BW=0, SGI=0) 39Mbps
MCS = 11	(BW=0, SGI=0) 52Mbps
MCS = 12	(BW=0, SGI=0) 78Mbps
MCS = 13	(BW=0, SGI=0) 104Mbps
MCS = 14	(BW=0, SGI=0) 117Mbps
MCS = 15	(BW=0, SGI=0) 130Mbps

MCS = 32	(BW=1, SGI=0) HT duplicate 6Mbps
Notes: When BW=1, PHY_RATE = PHY_RATE * 2 When SGI=1, PHY_RATE = PHY_RATE * 10/9 The effects of BW and SGI are accumulative. When MCS=0~7(1S, One Tx Stream), SGI option is supported. BW option is supported. When MCS=8~15(2S, Two Tx Stream), SGI option is supported. BW option is supported. When MCS=32, only SGI option is supported. BW option is not supported. (BW =1) Other MCS code in HT mode are reserved.	

3.1.54 HtGi

Description: Set WLAN Guard interval support

Value:

iwpriv ra0 set HtGi=1

- 0: long guard interval
- 1: short guard interval

3.1.55 HtOpMode

Description: HT operation Mode

Value:

iwpriv ra0 set HtOpMode=0

- 0: HT mixed mode
- 1: HT Greenfield mode

3.1.56 HtStbc

Description: Enable or disable HT STBC

Value:

iwpriv ra0 set HtStbc=1

- 0: disable
- 1: enable

3.1.57 HtExtcha

Description: To locate the 40MHz channel in combination with the control

Value:

iwpriv ra0 set HtExtcha=0

- 0: below

1: Above

3.1.58 HtMpduDensity

Description: Minimum separation of MPDUs in an A-MPDU

Value:

iwpriv ra0 set HtMpduDensity=4

0~7

0: no restriction

1: 1/4 μ s

2: 1/2 μ s

3: 1 μ s

4: 2 μ s

5: 4 μ s

6: 8 μ s

7: 16 μ s

3.1.59 HtBaWinSize

Description: Block Ack window size

Value:

iwpriv ra0 set HtBaWinSize=64

1~64

3.1.60 HtRdg

Description: Enable or disable HT Reverse Direction Grant

Value:

iwpriv ra0 set HtRdg=1

0: disable

1: enable

3.1.61 HtAmsdu

Description: Enable or disable AMSDU section

Value:

iwpriv ra0 set HtAmsdu=0

0: disable

1: enable

3.1.62 HtAutoBa

Description: Enable or disable auto build Block Ack section with peer

Value:

iwpriv ra0 set HtAutoBa=1

0: disable

1: enable

3.1.63 HtBaDecline

Description: Enable or disable decline Block Ack to peer

Value:

iwpriv ra0 set HtBaDecline=0

0: disable

1: enable

3.1.64 HtProtect

Description: Enable or disable HT protect

Value:

iwpriv ra0 set HtProtect=0

0: disable

1: enable

3.1.65 HtMimoPs

Description: Enable or disable HT MIMO Power saving mode

Value:

iwpriv ra0 set HtMimoPs=0

0: disable

1: enable

3.1.66 HtDisallowTKIP

Description: Enable or disable 11N rate with 11N AP when cipher is TKIP or WEP

Value:

iwpriv ra0 set HtDisallowTKIP=0

0: disable

1: enable

3.1.67 AP2040Rescan

Description: Trigger HT20/40 coexistence to rescan

Value:

iwpriv ra0 set AP2040Rescan=1

1: trigger to rescan

3.1.68 HtBssCoex

Description: Enable or disable HT BSS coexistence

Value:

iwpriv ra0 set HtBssCoex=0

0: disable

1: enable

3.1.69 PktAggregate

Description: Enable or disable 11B/G packet aggregation

Value:

iwpriv ra0 set PktAggregate=1

0: disable

1: enable

3.1.70 WmmCapable

Description: Enable or disable WMM support

Value:

iwpriv ra0 set WmmCapable=1

0: disable

1: enable

3.1.71 IEEE80211H

Description: Enable or disable IEEE 802.11h function. Spectrum management.

This field can only be enabled in A band.

Value:

iwpriv ra0 set IEEE80211H=0

0: disable
1: enable

3.1.72 AuthMode

Description: WLAN security Authentication mode

Value:

iwpriv ra0 set AuthMode=OPEN

OPEN	For open system
SHARED	For shared key system
WPAUTO	Auto switch between OPEN and SHARED
WPAPSK	For WPA pre-shared key (Infra)
WPA2PSK	For WPA2 pre-shared key (Infra)
WPANONE	For WPA pre-shared key (Adhoc)
WPA	For enterprise mode (Need wpa_supplicant)
WPA2	For enterprise mode (Need wpa_supplicant)

3.1.73 EncryptType

Description: WLAN security Encryption type

Value:

iwpriv ra0 set EncryptType=NONE

NONE	For AuthMode=OPEN
WEP	For AuthMode=OPEN or AuthMode=SHARED
TKIP	For AuthMode=WPAPSK or WPA2PSK
AES	For AuthMode=WPAPSK or WPA2PSK

3.1.74 DefaultKeyID

Description: Default key ID

Value:

iwpriv ra0 set DefaultKeyID=1

1~4

3.1.75 Key1

Description: Key 1 string

Value:

iwpriv ra0 set Key1=aaaaa

10 or 26 characters
5 or 13 characters

3.1.76 Key2

Description: Key 2 string

Value:

iwpriv ra0 set Key2=aaaaa

10 or 26 characters
5 or 13 characters**3.1.77 Key3**

Description: Key 3 string

Value:

iwpriv ra0 set Key3=aaaaa

10 or 26 characters
5 or 13 characters**3.1.78 Key4**

Description: Key 4 string

Value:

iwpriv ra0 set Key4=aaaaa

10 or 26 characters
5 or 13 characters**3.1.79 WPAPSK**

Description: WLAN Security string for (TKIP/AES)

Value:

iwpriv ra0 set WPAPSK=12345678

8~63 ASCII
Or
64 HEX characters**3.1.80 ResetCounter**

Description: reset WLAN statistic counter

Value:

iwpriv ra0 set ResetCounter=1

1

3.1.81 MACRepeaterEn

Description: Enable or disable MAC Repeater function

Value:

iwpriv ra0 set MACRepeaterEn=1

0: disable

1: enable

3.1.82 PMFMFPC

Description: Enable or disable Protection Management Frame Capable

Value:

iwpriv ra0 set PMFMFPC=1

0: disable

1: enable

3.1.83 PMFMFPR

Description: Enable or disable Protection Management Frame Required

Value:

iwpriv ra0 set PMFMFPR=1

0: disable

1: enable

3.1.84 SHA256

Description: Enable or disable use SHA256 for Encryption

Value:

iwpriv ra0 set SHA256=1

0: disable

1: enable

3.1.85 WDSVLANID

Description: set WDS VLAN ID

Value:

iwpriv ra0 set WDSVLANID=1

1~16

Note: iNIC driver only

3.1.86 WDSVLANPriority

Description: set WDS VLAN priority

Value:

```
iwpriv ra0 set WDSVLANPriority=1
```

1~16

Note: iNIC driver only

3.1.87 ApCliVLANID

Description: set APclient VLAN ID

Value:

```
iwpriv ra0 set ApCliVLANID=1
```

1~16

Note: iNIC driver only

3.1.88 ApCliVLANPriority

Description: set APclient VLAN priority

Value:

```
iwpriv ra0 set ApCliVLANPriority=1
```

1~16

Note: iNIC driver only

3.1.89 QAEnable

Description: enable or disable QA test tool function.

```
iwpriv ra0 set QAEnable=1
```

0: disable

1: enable

Note: iNIC driver only.

3.1.90 Console

Description: redirect console information to host.

```
iwpriv ra0 set Console=1
```

0: disable

1: enable

Note: iNIC driver only.

3.1.91 EfuseUploadToHost

Description: This command is specific to iNIC solution.

The content of efuse will be uploaded to the iNIC host in iNIC_e2p.bin or iNIC_e2p1.bin .

iwpriv ra0 set EfuseUploadToHost=1

0: disable

1: enable

Note: iNIC driver only

3.1.92 tpc

Description: Thermal function will be according to criteria with current temperature to configure Ant.

Criteria Value:1~1000

default: 80

lwpriv ra0 set tpc=80

Note: iNIC driver only

3.1.93 DfsSwAddCheck

Description: This command is used to add an entry to prevent false detection in specific range.

“ch” is the bbp dfs detection engine ID

“T_Low” is the Radar Period low boundary to filter out.

“T_High” is the Radar Period high boundary to filter out.

“W_Low” is the Radar Width low boundary to filter out.

“W_High” is the Radar Width high boundary to filter out.

iwpriv ra0 set DfsSwAddCheck=ch:T_Low:T_High:W_Low:W_high

Example:

iwpriv ra0 set DfsSwAddCheck=0:100:200:50:500

Note: iNIC driver only

3.1.94 DfsSwDelCheck

Description: This command is used to delete an entry which was added to filter out radar in specific range.

iwpriv ra0 set DfsSwDelCheck=ch:T_Low:T_High:W_Low:W_high

Example:

iwpriv ra0 set DfsSwDelCheck=0:100:200:50:500

Note: iNIC driver only

3.1.95 fpga_on

Description: Turn on or off vht fixed mode.

iwpriv ra0 set fpga_on=6

Note: for vht mode fix data rate setting

3.1.96 dataphy

Description: For Phy mode setting.

iwpriv ra0 set dataphy=value

Value:

0 = CCK,

1 = OFDM,

2 = MODE_HTMIX,

3 = HT-GF,

4 = VHT

Note: for vht mode fix data rate setting

3.1.97 databw

Description: For Bandwidth setting.

iwpriv ra0 set databw=value

Value:

0 = 20M,

1 = 40M,

2 = 80M,

Note: for vht mode fix data rate setting

3.1.98 datamcs

Description: MCS setting.

iwpriv ra0 set datamcs=value

bit[3:0] stands for Modulation Coding Scheme (MCS)
bit[6:4] stands for Number of Spatial Stream (NSS).

Example: iwpriv ra0 set datamcs=24 → 2SS MCS8

Note: for vht mode fix data rate setting

3.1.99 databasize

Description: For BASize setting.

iwpriv ra0 set databasize=value

Value:
1~64

Note: for vht mode fix data rate setting

3.1.100 databgi

Description: For GI setting.

iwpriv ra0 set datagi=value

Value:
0 = short GI,
1 = long GI

Note: for vht mode fix data rate setting

3.1.101 dataldpc

Description: For LDPC setting.

iwpriv ra0 set dataldpc=value

Value:
0 = disable,
1 = enable

Note: for vht mode fix data rate setting

4 iwpriv ra0 usage

This section describes parameters set using iwpriv. Please refer to the Readme section for more general data.
A detailed explanation of each parameter for iwpriv is shown subsequently. Refer to the Readme before using this section.

iwpriv ra0 [parameters]

4.1 get_site_survey

Description: Show site survey result

Value:

iwpriv ra0 get_site_survey

Note: Works only after iwpriv ra0 set SiteSurvey=1

4.2 get_mac_table

Description: Show STA's MAC address which associated with AP

Value:

iwpriv ra0 get_mac_table

4.3 get_wsc_profile

Description: Display WPS profile information in detailed

Value:

iwpriv ra0 get_wsc_profile

4.4 get_ba_table

Description: Show Block ACK Table raw data information

Value:

iwpriv ra0 get_ba_table

4.5 stat

Description: Display WLAN static counter

Value:

iwpriv ra0 stat

4.6 **bbp** (Debug only)

Description: Display/Write bbp content

Value:

//Display

iwpriv ra0 bbp offset

//Write bbp

iwpriv ra0 bbp offset=value

offset = hex address

value= hex value

4.7 **mac** (Debug only)

Description: Display/Write mac content

Value:

//Display

iwpriv ra0 mac offset

//Write mac

iwpriv ra0 mac offset=value

offset = hex address

value= hex value

4.8 **rf** (Debug only)

Description: Display/Write rf content

Value:

//Display

iwpriv ra0 rf offset

//Write

iwpriv ra0 rf offset=value

offset = hex address

value= hex value

4.9 **e2p** (Debug only)

Description: Read/Write EEPROM content

Value:

//Read

iwpriv ra0 e2p offset

//Write EEPROM
iwpriv ra0 e2p offset=value

offset = hex address
value= hex value

5 iwpriv ra0 show command

This section describes parameters set using iwpriv. Please refer to the Readme section for more general data.

Display parameter which has been currently configured in the WLAN driver.

iwpriv ra0 show [parameters]

[Parameters list]

1. stainfo - Show associated STA's MAC address
2. descinfo - Show Descriptor information.
3. driverinfo - Show driver version.
4. wdsinfo - Show WDS list information.
5. bainfo - Show Block ACK Table. (String message)
6. stat - Show statistics counter.
7. stat_reset - Show, then reset statistics counter.
8. igmpinfo - Show all entries in IGMP table.
9. mcastrate - Show multicast phy mode and MCS rate.
10. stacountinfo – show associated STA's Tx, Rx byte counts.
11. stasecinfo – show associated STA's BSS and security information.
12. mbss – show MBSS phy mode information.

Example: show stainfo

```
iwpriv ra0 show stainfo
```


6 WPS Wi-Fi PROTECTED SETUP


Simple Config Architectural Overview

This section presents a high-level description of the Simple Config architecture. Much of the material is taken directly from the Simple Config specification. Figure 1 depicts the major components and their interfaces as defined by Wi-Fi Simple Config Spec. There are three logical components involved: the Registrar, the access point (AP), and the Enrollee.

The **Enrollee** is a device seeking to join a WLAN domain. Once an Enrollee obtains a valid credential, it becomes a member.

A **Registrar** is an entity with the authority to issue and revoke domain credentials. A registrar can be integrated into an AP.

The **AP** can be either a WLAN AP or a wireless router.

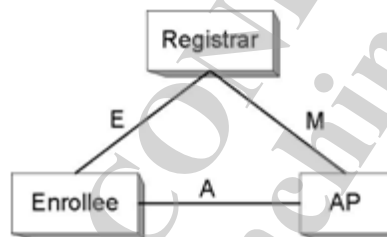

Registration initiation is ordinarily accomplished by a user action such as powering up the Enrollee and, optionally, running a setup wizard on the Registrar (PC).

Note: The WLAN driver needs to set HAS_WSC=y in order to enable WPS functions.

6.1 WPS Profile settings

Configure WPS setting in RT2860AP.dat or RT2860AP.dat.

Syntax:

[Parameter]=[Value]

6.1.1 WscConfMode

Description: Set WPS function, bitwise.

Value:

WscConfMode=0x2

0x0: Disable

0x1: Enrollee

0x2: Proxy

0x4: Registrar

6.1.2 WscConfStatus

Description: Set WPS AP SC (Simple Config) State

Value:

WscConfStatus=1

- 1: AP is un-configured
- 2: AP is configured

6.1.3 WscConfMethods

Description: The Config Methods Data component lists the configuration methods the Enrollee or Registrar supports. The list is a bitwise OR of values from the table below. If you don't know what this is, please don't set this field.

Value:

WscConfMethods=16

- 1 - USBA (Flash Drive)
- 2 - Ethernet
- 4 - Label
- 8 - Display
- 16 - External NFC Token
- 32 - Integrated NFC Token
- 64 - NFC Interface
- 128 - PushButton
- 256 - Keypad

6.1.4 WscKeyASCII

Description: Define WPS WPAPSK format and key length for un-configured internal WPS Registrar AP.

Value:

WscKeyASCII=0

- 0: Hex (64-bytes). Default is 0.
- 1: ASCII(random length)
- 8 ~ 63: ASCII length

6.1.5 WscSecurityMode

Description: Define WPS registrar's unconfiguraed -> configuraed security mode.

Value:

WscSecurityMode=0

- 0 : WPA2PSK AES
- 1 : WPA2PSK TKIP
- 2 : WPAPSK AES
- 3 : WPAPSK TKIP

6.1.6 WscDefaultSSID0

Description: Default WPS SSID for AP. After WPS process completes with Enrollee when AP acts as un-configured Registrar, AP will use this SSID as new SSID.

Value:

WscDefaultSSID0=SSID

1~32 characters

6.1.7 WscV2Support

Description: enable or disable WPS v2.0 support

Value:

WscV2Support=1

0: disable

1: enable

6.2 WPS iwpriv command

This section describes parameters set using iwpriv. Please refer to the Readme section for more general data.

iwpriv ra0 set [parameter]=[Value]

Note: Wireless extension private handlers.

6.2.1 WscConfMode

Description: set WPS conf mode

Value:

iwpriv ra0 set WscConfMode=1

0x0: Disable

0x1: Enrollee

0x2: Proxy

0x4: Registrar

6.2.2 WscConfStatus

Description: Set WPS SC (simple config) state

Value:

iwpriv ra0 set WscConfStatus=1

1: AP is un-configured

2: AP is configured

6.2.3 WscMode

Description: WPS mode, PBC or PIN

Value:

iwpriv ra0 set WscMode=1

1: PIN (Personal Identification Number) Mode

2: PBC (Push Button Communication) Mode

6.2.4 WscStatus

Description: Get WPS Configured Methods.

Value:

iwpriv ra0 set WscStatus=0

- 0: Not Used
- 1: Idle
- 2: WSC Process Fail
- 3: Start WSC Process
- 4: Received EAPOL-Start
- 5: Sending EAP-Req(ID)
- 6: Receive EAP-Rsp(ID)
- 7: Receive EAP-Req with wrong WSC SMI Vendor Id
- 8: Receive EAPReq with wrong WSC Vendor Type
- 9: Sending EAP-Req(WSC_START)
- 10: Send M1
- 11: Received M1
- 12: Send M2
- 13: Received M2
- 14: Received M2D
- 15: Send M3
- 16: Received M3
- 17: Send M4
- 18: Received M4
- 19: Send M5
- 20: Received M5
- 21: Send M6
- 22: Received M6
- 23: Send M7
- 24: Received M7

- 25: Send M8
- 26: Received M8
- 27: Processing EAP Response (ACK)
- 28: Processing EAP Request (Done)
- 29: Processing EAP Response (Done)
- 30: Sending EAP-Fail
- 31: WSC_ERROR_HASH_FAIL
- 32: WSC_ERROR_HMAC_FAIL
- 33: WSC_ERROR_DEV_PWD_AUTH_FAIL
- 34: Configured

6.2.5 WscPinCode

Description: Input Enrollee's Pin Code to AP-Registrar.
Value:

```
iwpriv ra0 WscPinCode xxxxxxxx
```

xxxxxxx = {00000000 ~ 99999999}

6.2.6 WscOOB

Description: Reset WPS AP to the OOB (out-of-box) configuration.
Value:

```
iwpriv ra0 set WscOOB=1
```

0: disable

1: enable

6.2.7 WscGetConf

Description: Trigger WPS AP to do simple config with WPS Client.
Value:

```
iwpriv ra0 set WscGetConf=1
```

0: disable

1: enable

6.2.8 WscGenPinCode

Description: Randomly generate enrollee PIN code
Value:

```
iwpriv ra0 set WscGenPinCode=1
```

6.2.9 WscVendorPinCode

Description: Input vendor's Pin Code to AP-Registrar.

Value:

```
iwpriv ra0 set WscVendorPinCode=xxxxxxxx
```

xxxxxxxx: 8 digit pin code

6.2.10 WscSecurityMode

Description: Set WPS registrar's unconfiguraed -> configuraed security mode.

Value:

```
iwpriv ra0 set WscSecurityMode=0
```

- 0 : WPA2PSK AES
- 1 : WPA2PSK TKIP
- 2 : WPAPSK AES
- 3 : WPAPSK TKIP

6.2.11 WscMultiByteCheck

Description: Set multi byte check is enabled or disabled.

Value:

```
iwpriv ra0 set WscMultiByteCheck=1
```

- 0: disable
- 1: enable

6.2.12 WscVersion

Description: Set WPS support version

Value:

```
iwpriv ra0 set WscVersion=10
```

xx: Hex value

6.2.13 WscVersion2

Description: Set WPS version of V2 support

Value:

```
iwpriv ra0 set WscVersion2=10
```

xx: Hex Value

6.2.14 WscV2Support

Description: enable or disable WPS V2.0 support

Value:

iwpriv ra0 WscV2Support=1

0: disable

1: enable

6.2.15 WscFragment

Description: enable or disable WPS fragment

Value:

iwpriv ra0 WscFragment=0

0: disable

1: enable

6.2.16 WscFragmentSize

Description: Set the size of WPS fragmentation.

Value:

iwpriv ra0 set WscFragmentSize=128

128~300

6.2.17 WscSetupLock

Description: enable or disable WPS setup lock

Value:

iwpriv ra0 set WscSetupLock=1

0: disable

1: enable

6.2.18 WscSetupLockTime

Description: Configure WPS setup lock time

Value:

iwpriv ra0 set WscSetupLockTime=0

0: lock forever

Unit: minute

6.2.19 WscMaxPinAttack

Description: Configure WPS pin attack Max time.

Value:

`iwpriv ra0 set WscMaxPinAttack`

0:Disable

1-10

6.2.20 WscExtraTlvTag

Description: Add extra TLV tag to Beacon, probe response and WSC EAP messages

Value:

`iwpriv ra0 set WscExtraTlvTag=1088`

Hex value: 0000 ~ FFFF

Example: 1088

6.2.21 WscExtraTlvType

Description: Define data format of extra TLV value

Value:

`iwpriv ra0 set WscExtraTlvType=1`

0: ASCII string

1: Hex string

6.2.22 WscExtraTlvData

Description: Add extra TLV data to Beacon, probe response and WSC EAP messages

Value:

`iwpriv ra0 set WscExtraTlvData=`

ASCII string or Hex string

6.2.23 WPS iwpriv command example

6.2.23.1 Disable WPS support

`iwpriv ra0 set WscConfMode=0`

6.2.23.2 Enable WPS Function

`iwpriv ra0 set WscConfMode =7 (Binary: 111)`

(AP could be Registrar(0x4), Proxy(0x2) or Enrollee(0x1))

6.2.23.3 WPS AP SC (Simple Config) State

iwpriv ra0 set WscConfStatus=1 (AP is un-configured)
iwpriv ra0 set WscConfStatus=2 (AP is configured)

6.2.23.4 WPS Configured Methods

iwpriv ra0 set WscMode =1 (use PIN code)
iwpriv ra0 set WscMode =2 (use PBC)

6.2.23.5 Input Enrollee's Pin Code to AP-Registrar

iwpriv ra0 set WscPinCode=xxxxxxx

6.2.23.6 Reset WPS AP to the OOB configuration

iwpriv ra0 set WscOOB=1
(Security: WPAPSK/TKIP, psk: "RalinkInitialAPxx1234" ; SC state: 0x1)
(SSID: RalinkInitialAPxxxxxx, last three characters of AP MAC address)

6.2.23.7 Trigger WPS AP to do simple config with WPS Client

iwpriv ra0 set WscGetConf=1

6.2.23.8 AP services as Enrollee by using PIN code

iwpriv ra0 set WscMode=1
iwpriv ra0 set WscGetConf=1

6.2.23.9 AP services as Enrollee by using PBC

iwpriv ra0 set WscMode=2
iwpriv ra0 set WscGetConf=1

6.2.23.10 AP services as Internal Registrar using PIN code

iwpriv ra0 set WscMode=1
iwpriv ra0 set WscPinCode=xxxxxxx (PIN code from Enrollee, len=8)
iwpriv ra0 set WscGetConf=1

6.2.23.11 AP services as Internal Registrar using PBC

iwpriv ra0 set WscMode=2
iwpriv ra0 set WscGetConf=1

6.2.23.12 Get WPS Profile from external registrar

iwpriv ra0 get_wsc_profile

6.3 WPS AP Setup Procedure

To run the Access Point (as Enrollee or with Registrar capabilities).
The following scenarios are currently supported:

1. Initial Access Point (AP) setup, with the Registrar configuring the Access Point
 - 1.1. One WiFi-enabled laptop is setup as the AP acting as an Enrollee
 - 1.2. Another WiFi-enabled laptop is setup as a station acting as the Registrar
 - 1.3. Two sub cases are 1a) using EAP transport and 1b) using UPnP transport
2. Configuration of a WiFi client, using an AP with a built-in registrar
 - 2.1. One WiFi-enabled laptop is setup as the AP with registrar functionality Another WiFi-enabled laptop is setup as a station acting as an Enrollee
3. Configuration of a WiFi client using an external registrar. AP acts as a proxy and communicates with the client over EAP and with the Registrar over UPnP.
 - 3.1. One WiFi-enabled laptop is setup as a station acting as an Enrollee
 - 3.2. Second WiFi-enabled laptop is setup as the AP with proxy functionality
 - 3.3. Third laptop is setup as the registrar. The registrar and the AP are connected over Ethernet.

6.3.1 Running the WPS command-line application

Run the protocol from the console.

First, run UPNP daemon like below:

`wscd -w /etc/xml -m 1 -d 3 & (if your xml file in /etc/xml)`

use iwpriv command trigger wps, like below:

```
iwpriv ra0 set WscConfMode=7
iwpriv ra0 set WscConfStatus=1
iwpriv ra0 set WscMode=1
iwpriv ra0 set WscPinCode=31668576
iwpriv ra0 set WscGetConf=1
iwpriv ra0 set WscStatus=0
```

1. AP services as Enrollee:
 - 1.1. If AP-Enrollee SC state is 0x1, AP will restart with new configurations.
 - 1.2. If AP-Enrollee SC state is 0x2, AP sends own configurations to external-registrar and ignores configurations from external-registrar.
2. AP services as Registrar:
 - 2.1. If AP-Registrar SC state is 0x1, the security mode will be WPAPSK/TKIP and generate random 64bytes psk; after process, AP will restart with new security.
3. WPS AP only services one WPS client at a time.
 - 3.1. WPS AP only can work in ra0.
 - 3.2. After WPS configuration finishes, Ralink AP driver writes new configuration to Cfg structure and DAT file.
4. Write items to MBSSID Cfg structure are as below:
 - 4.1. *Ssid*
 - 4.2. *AuthMode*
 - 4.3. *WepStatus*
 - 4.4. *PMK*
 - 4.5. *DefaultKeyId*.

5. Write items to SharedKey table are as below:

- 5.1. Key
- 5.2. CipherAlg

6. Write items to DAT file are as below:

- 6.1. SSID
- 6.2. AuthMode
- 6.3. EncryptType
- 6.4. WPAPSK
- 6.5. WscConfStatus
- 6.6. DefaultKeyID

Note: wscd daemon must be ported to the target platform first.

6.3.2 Initial AP setup with Registrar Configuring AP (EAP/UPnP)

To run command-line console in this mode do:

[Unconfigured AP] ← EAP/UPnP → [Registrar]

Note:

Please make sure upnp daemon is running. After the success of WPS registration, Configured AP will act as a proxy forward EAP and Upnp.)

1. PIN

(1) on AP side

- ◆ iwpriv ra0 set WscConfMode=7
- ◆ iwpriv ra0 set WscConfStatus=1
- ◆ iwpriv ra0 set WscMode=1
- ◆ iwpriv ra0 set WscGetConf=1

(2) on Registrar side

- ◆ When prompted for the enrollee's PIN, Enter the AP's PIN. Enter the new SSID and new Security for the AP when prompted.
- ◆ The registration process will start, and the application will display the result of the process on completion.

2. PBC

(1) on AP side

- ◆ iwpriv ra0 set WscConfMode=7
- ◆ iwpriv ra0 set WscConfStatus=1
- ◆ iwpriv ra0 set WscMode=2
- ◆ iwpriv ra0 set WscGetConf=1

(2) on Registrar side

- ◆ Select push-button".
- ◆ The registration process will start, and the application will display the result of the process on completion.

The security config will be written out to the AP and registrar config files.

6.3.3 Adding an Enrollee to AP+Registrar (EAP)

To run command-line console in this mode do:

[AP+Registrar] ← EAP → [Client]

Note:

Please make sure WPS AP configure status is configured, if AP is un-configure, when WPS AP configure client, it will change configure status to configured and auth mode are WPA-PSK)

1. **PIN**
 - (1) **on AP side**
 - ◆ iwpriv ra0 set WscConfMode=7
 - ◆ iwpriv ra0 set PinCode=31668576 (enter the enrollee's PIN, the PIN from WPS client)
 - ◆ iwpriv ra0 set WscMode=1
 - ◆ iwpriv ra0 set WscGetConf=1.
 - ◆ The registration process will begin, and the console will display the result of the process on completion.
 - (2) **on Client (Enrollee) side**
 - ◆ Select PIN process.
 - ◆ The process will start, and the application will display the result of the process on completion
2. **PBC**
 - (1) **on AP side**
 - ◆ iwpriv ra0 set WscConfMode=7
 - ◆ iwpriv ra0 set WscMode=2
 - ◆ iwpriv ra0 set WscGetConf=1.
 - ◆ The registration process will start, and the application will display the result of the process on completion.
 - (2) **on Client (Enrollee) side**
 - ◆ Select PBC process.
 - ◆ The process will start, and the application will display the result of the process on completion

If the registration is successful, on the client will be re-configured with the new parameters, and will connect to the AP with these new parameters.

6.3.4 Adding an Enrollee with Eternal Registrar (UPnP/EAP)

To run command-line console in this mode do:

[Registrar] ← PnP → [AP] ← EAP → [Client]

1. **PIN**
 - (1) **on Registrar side**
 - ◆ When prompted for the enrollee's PIN, Enter the enrollee's PIN.
 - ◆ AP Nothing to be selected..
 - ◆ The registration process will begin, and the application will display the result of the process on completion.
 - (2) **on Client (Enrollee) side**
 - ◆ Select PIN process
 - ◆ The process will start, and the application will display the result of the process on completion
2. **PBC**
 - (1) **on Registrar side**
 - ◆ Select "push-button".
 - ◆ AP Nothing to be selected.
 - ◆ The registration process will begin, and the application will display the result of the process on completion.

(2) on Client (Enrollee) side

- ◆ Select PBC process
- ◆ The registration process will start, and the application will display the result of the process on completion.

6.3.5 WPS Config status

6.3.5.1 Over View

The 'Simple Config State' of WPS attribute in WPS IEs contained in beacon and probe response indicates if a device is configured. If an AP is shipped from the factory in the Not-Configured state (Simple Config State set to 0x01), then the AP must transition to the Configured state (Simple Config State set to 0x02) if any of the following occur:

1. Configuration by an external registrar.

The AP sends the WSC_Done message in the External Registrar configuration process.

2. Automatic configuration by internal registrar.

The AP receives the WSC_Done response in the Enrollee Registration Process from the first Enrollee.
Note:

The internal registrar waits until successful completion of the protocol before applying the automatically generated credentials to avoid an accidental transition from unconfigured to configured in the case that a neighbouring device tries to run WSC before the real enrollee, but fails. A failed attempt does not change the configuration of the AP, nor the Simple Config State.

3. Manual configuration by user.

A user manually configures the AP using whatever interface(s) it provides to modify any one of the following:

- the SSID
- the encryption algorithm
- the authentication algorithm
- any key or pass phrase

If the AP is shipped from the factory in the Not Configured state (Simple Config State set to 0x01), then a factory reset must revert the Simple Config State to Not Configured.

If the AP is shipped from the factory pre-configured with WPA2-Personal mixed mode and a randomly generated key, the Simple Config State may be set to 'Configured' (0x2) to prevent an external registrar from overwriting the factory settings. A factory reset must restore the unit to the same configuration as when it was shipped.

6.4 Basic operation of Ralink WPS AP

6.4.1 Configure APUT using PIN method through a WLAN external Registrar

1. [Ralink AP] - Turn on the Ralink AP
2. [Ralink AP] - To change AP ability "iwpriv ra0 set WscConfMode=7"



3. [Ralink AP] - To change from configured to un-configured state: "iwpriv ra0 set WscConfStatus=1 "
4. [Ralink AP] - To change config method to PIN "iwpriv ra0 set WscMode=1"
5. [Ralink AP] - Trigger Ralink AP start process WPS protocol "iwpriv ra0 set WscGetConf=1"
6. [Intel WPS STA] - The Registrar on Intel STA will be configured with the new parameters (SSID = "scaptest4.1.2ssid" and WPA(2)-PSK="scaptest4.1.2psk") which should be entered when prompted
7. [Intel WPS STA] - Read AP's PIN from console and enter the PIN at Intel STA.
8. [Intel WPS STA] - Verify that Intel STA successes to ping to Ralink AP
9. [Ralink STA] - Manually configure Ralink STA with the new parameters (SSID = "scaptest4.1.2ssid" and WPA (2)-PSK = "scaptest4.1.2psk").
10. [Intel WPS STA] - Verify that Intel STA successes to ping to Ralink STA



6.4.2 Configure APUT using PIN method through a wired external registrar


1. [Ralink AP] - Turn on the Ralink AP
2. [Ralink AP] - Connect the Ethernet cable between AP and extern registrar(Windows Vista) and make sure you can pin our device from extern registrar first!
3. [Ralink AP] - To change AP ability "iwpriv ra0 set WscConfMode=7"
4. [Ralink AP] - To change from configured to un-configured state: "iwpriv ra0 set WscConfStatus=1 "
5. [Ralink AP] - To change config method to PIN "iwpriv ra0 set WscMode=1"
6. [Ralink AP] - Trigger Ralink AP start process WPS protocol "iwpriv ra0 set WscGetConf=1"
7. [Microsoft STA] - The Registrar on Microsoft STA will be configured with the new wireless configuration settings (SSID = "scaptest4.1.3ssid" and WPA (2)-PSK="scaptest4.1.3psk"), which should be entered when prompted.

Please refer to below figures [7-1] to [7-6].



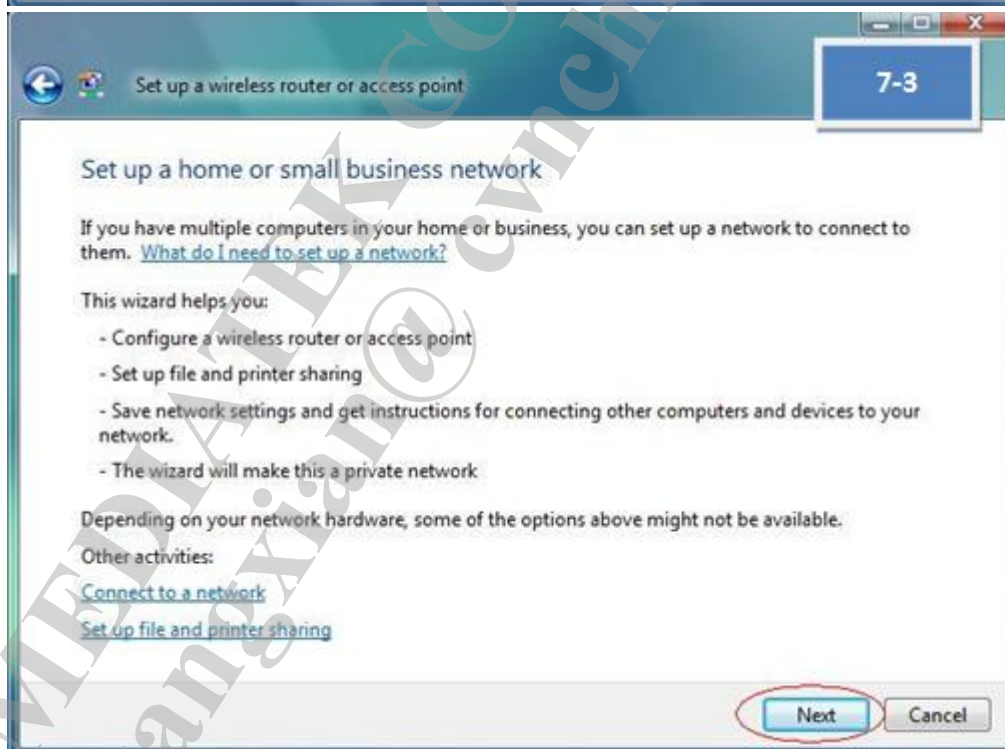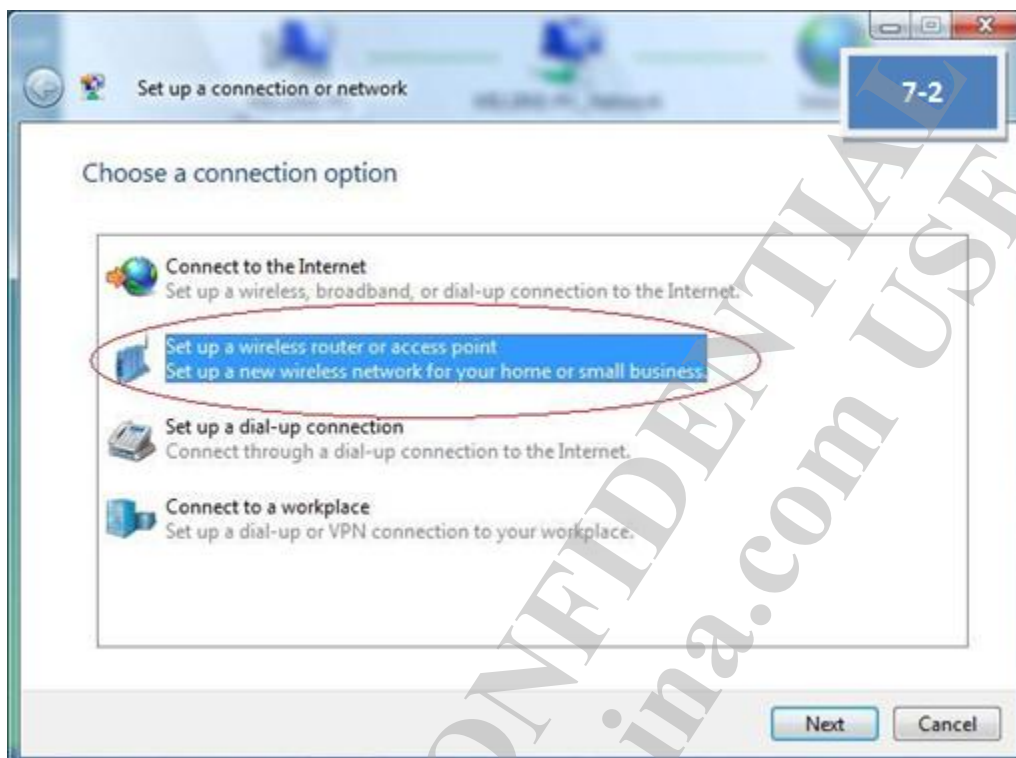


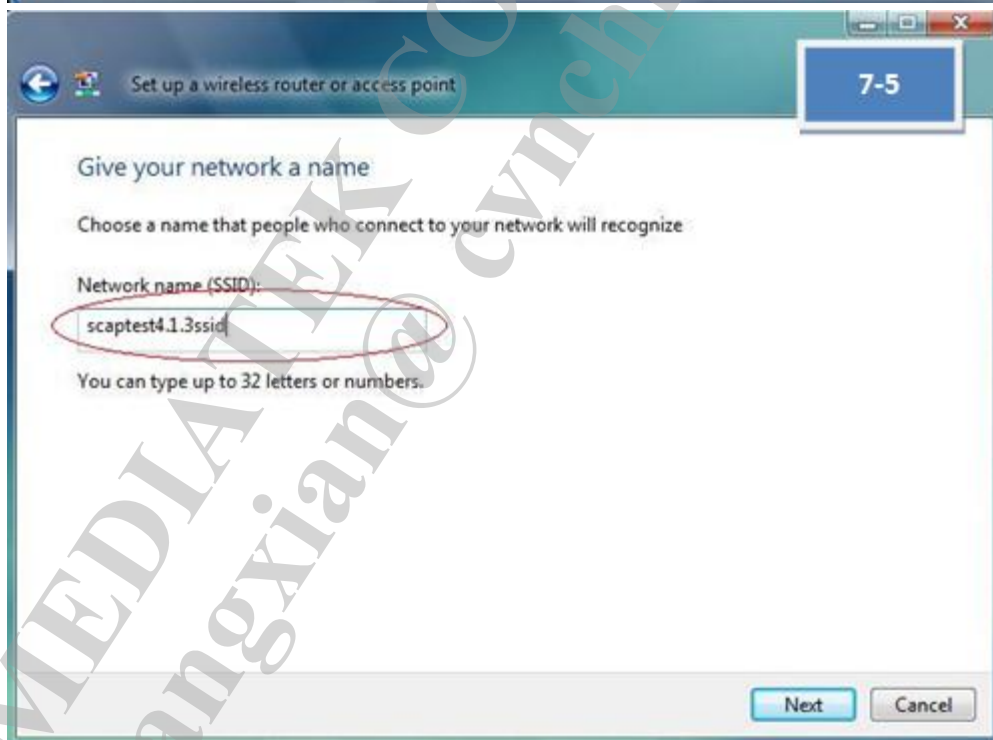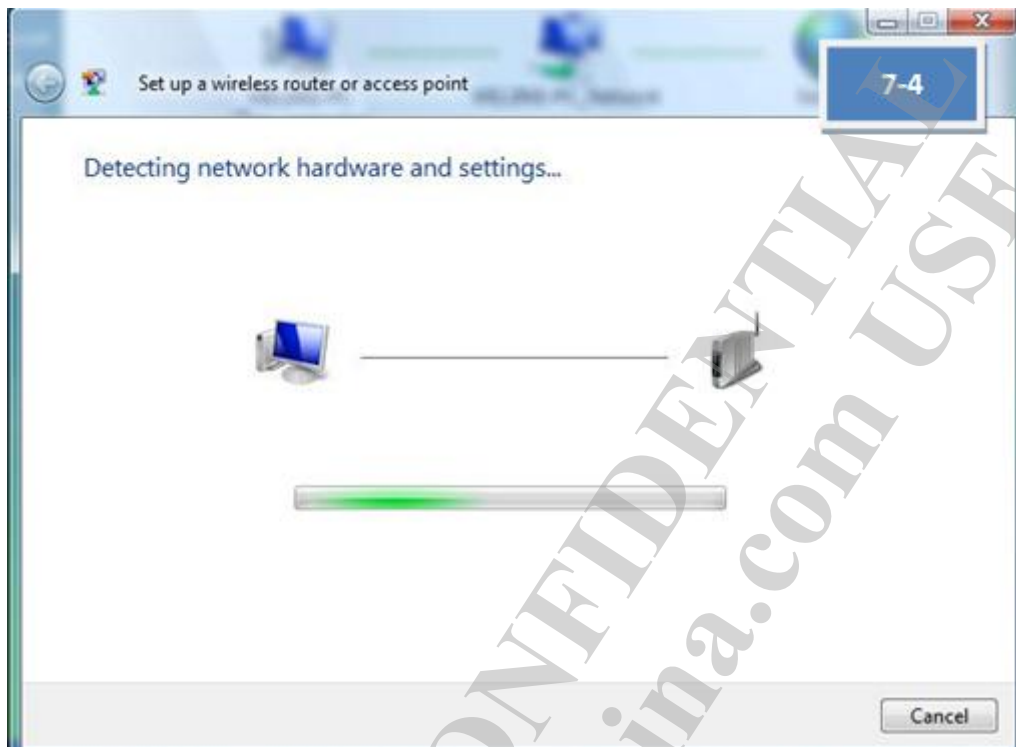


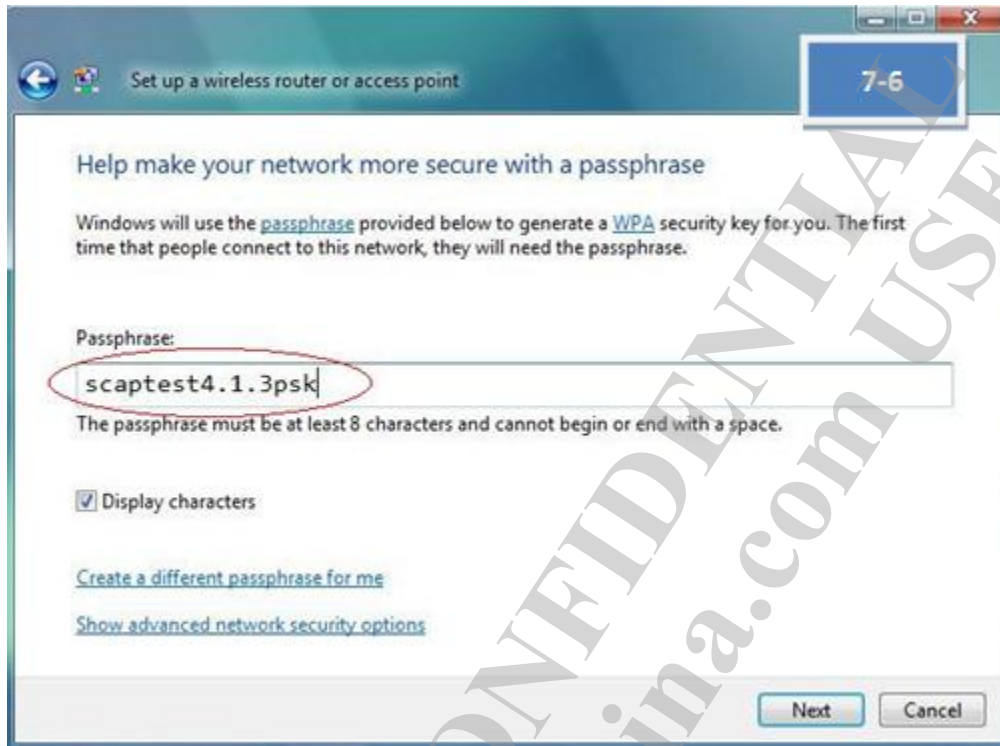

1. [Microsoft STA] - Read AP's PIN from console and enter the PIN at Microsoft STA.

Please refer to below figures [8-1] to [8-2].

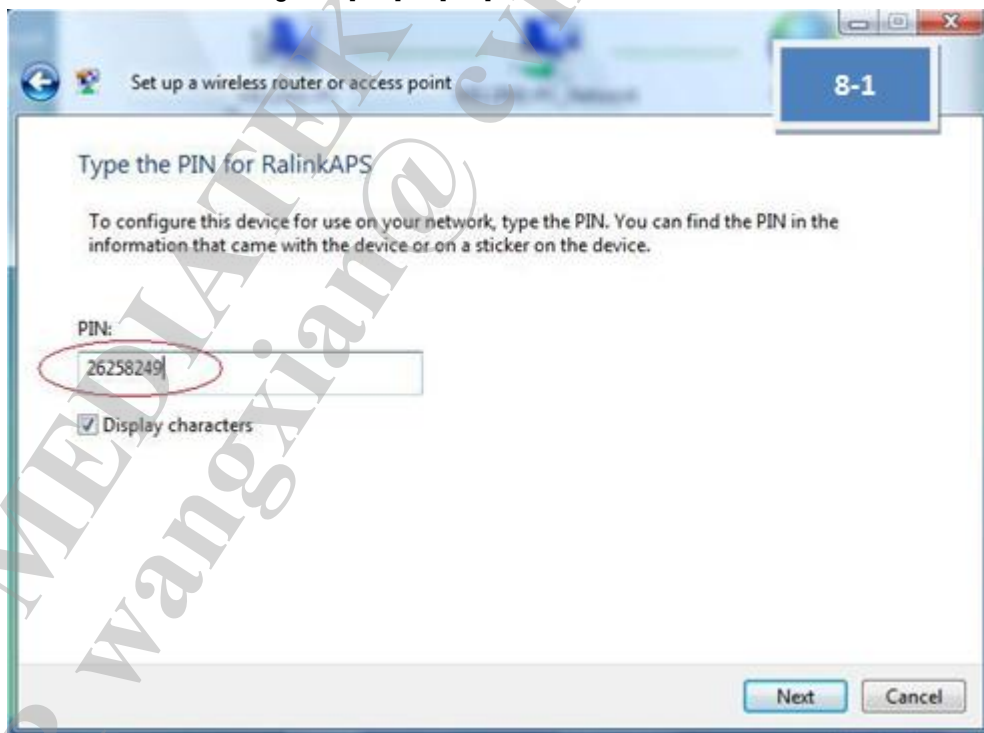

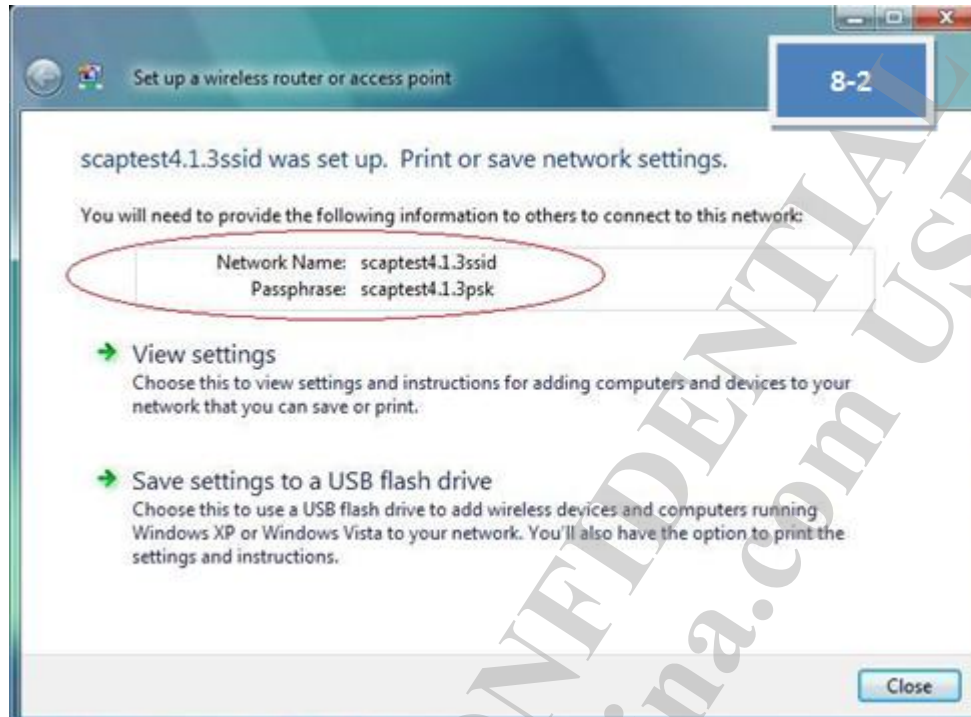

1. [Ralink STA] - Manually configure Ralink STA with the new parameters (SSID = "scaptest4.1.3ssid" and WPA (2)-PSK passphrase= "scaptest4.1.3psk").
2. [Ralink STA] - Verify that Ralink STA successes to ping to Microsoft STA.

6.4.3 Add devices using external Registrars

1. [Ralink AP] - Turn on the APUT.
2. [Ralink STA] - Turn on the Ralink STA.
3. [Ralink STA] - Push PIN button.
4. [Microsoft STA] - Search will be configure enrollee (you can in control->network and internet->network and sharing center->add a device to the network). Enter the enrollee's PIN(Ralink STA) at Microsoft STA when prompted.
5. [Ralink AP] - Do not thing.
6. [Ralink STA] - Verify that Ralink STA successes to ping Ralink A.

6.4.4 How to know WPS AP services as Internal Registrar, Enrollee or Proxy

It depends on the content of EAP-Response/Identity from WPS Client.

- ⇒ When identity is "WFA-SimpleConfig-Registrar-1-0":
WPS AP would service as Enrollee. (After set trigger command)
- ⇒ When identity is "WFA-SimpleConfig-Enrollee-1-0":
WPS AP would service as Internal Registrar and Proxy.
Without trigger command, WPS AP services as proxy only.

6.4.5 How to know WPS AP PinCode

Use ioctl query **RT_OID_WSC_PIN_CODE** OID to get AP PinCode.

6.4.6 Notes for WPS

1. AP services as Enrollee:
 - 1.1. If AP-Enrollee SC state is 0x1, AP's configuration is changeable and will restart with new configurations.
 - 1.2. If AP-Enrollee SC state is 0x2, AP's configuration is un-changeable. AP sends own configurations to external-registrar and ignores configurations from external-registrar.
2. AP services as Registrar:
 - 2.1. If AP-Registrar SC state is 0x1, the security mode will be WPAPSK/TKIP and generate random 64bytes psk; after process, AP will restart with new security.
3. AP services as Proxy:
 - 3.1. The value of SC state has no effect in proxy mode.
 - 3.2. WPS AP only services one WPS client at a time.
 - 3.3. WPS AP only can work in ra0.

6.4.7 Compile flag for WPS AP

WFLAGS += -DWSC_SUPPORT

6.4.8 WPS related Document

1. [Wi-Fi Protected Setup Specification v1.0](#) (member only)
2. [Wi-Fi Protected Setup White Paper](#)
3. [Introducing Wi-Fi Protected Setup](#)
4. [WSC Linux* Reference Implementation](#)
5. [How to Use Windows Connect Now Configuration to Enable Simple Setup for Consumer Wi-Fi Networks \[WinHEC 2006; 5.83 MB\]](#)
6. [Network Infrastructure Device Implementer's Guide](#)

6.5 UPNP Daemon HOWTO

6.5.1 Build WPS UPnP Daemon

Requirements:

1. Linux platform
2. Ralink wireless driver version which support WPS
3. Libupnp
 - ⇒ You can download the libupnp source code from the following URL:
<http://upnp.sourceforge.net/>
 - ⇒ libupnp-1.3.1 is preferred version. For other versions, you may need to patch our modification to the library yourself.
4. POSIX thread library
 - ⇒ Both libupnp and our WPS UPnP daemon need the POSIX thread library, following are recommended pthread library version.
 - For uCLibc, need the version >= 0.9.27

- For GLIBC, need the version >= 2.3.2
- ⇒ If your pthread library is older than upper list, you may need to upgrade it.

Build and Run:

1. Modify the “\$(work_directory)/wsc_upnp/Makefile” and change the compile flags depends on your target platform.
 - ⇒ Ex. For arm-Linux target platform, you may need to set the following fags:
 - CROSS_COMPILE = arm-Linux-
 - TARGET_HOST = arm-Linux
 - **WIRELESS_H_INCLUDE_PATH = /usr/src/kernels/2.6.11-1.1369_FC4-smp-i686/include/**
2. Modify the “\$(work_directory)/wsc_upnp/libupnp-1.3.1/Makefile.src” and change the configure parameters.
 - ⇒ Ex. For big-endian system, you may need to add CFAGS as following:
 - ./configure --host=\$(TARGET_HOST) CFLAGS="-mbig-endian"
3. Compile it
 - ⇒ Run “make” in “\$(work_directory)/wsc_upnp”, after successful compilation, you will get an execution file named “wscd”.
4. Install
 - ⇒ Create a sub-directory named “xml” in the “/etc” of your target platform
 - ⇒ Copy all files inside in “\$(work_directory)/wsc_upnp/xml” to “/etc/xml”
 - Copy the “wscd” to the target platform.
5. Run it
 - ⇒ Before run it, be sure the target platform already **has set the default route or has a route entry for subnet 239.0.0.0 (For UuPnP Multicast)**. Or the WPS daemon will failed when do initialization.
 - ⇒ Now you can run it by following command:
 - /bin/wscd -m 1 -d 3

Related Document:

1. WPS Specification (Simple_Config_v1.0g.pdf)
2. UPnP Device Architecture 1.0
3. Windows Connect Now-NET Version 1.0
4. WFAWLANConfig:1 Service Template Version 1.01
5. WFA Device:1 Device Template Version 1.01

6.6 WPS Command & OID Example

6.6.1 Iwpriv command without argument

iwpriv command:

```
iwpriv ra0 wsc_start
iwpriv ra0 wsc_stop
iwpriv ra0 wsc_gen_pincode
```

OID:

Example:

```
memset(&lwreq, 0, sizeof(lwreq));
```

```
sprintf(lwreq.ifr_name, "ra0", 3);  
iwreq.u.mode = WSC_STOP;  
/* Perform the private ioctl */  
if(ioctl(skfd, RTPRIV_IOCTL_SET_WSC_PROFILE_U32_ITEM, &lwreq) < 0)  
{  
    fprintf(stderr, "Interface doesn't accept private ioctl...\n");  
}
```

7 WMM PARAMETERS

7.1 Setting Parameters

1. Set 'WmmCapable' as 1 to turn on WMM QoS support
2. Parameters of 'APAIfsn', 'APCwmin', 'APCwmax', 'APTxop', 'APACM' are WMM parameter for AP
3. Parameters of 'BSSAifsn', 'BSSCwmin', 'BSSCwmax', 'BSSTxop', 'BSSACM' are WMM parameter for station
4. Parameter of AckPolicy is for Ack policy which support normal Ack or no Ack
5. Default WMM parameters for STA and AP

Table 4 Default WMM Parameters for the STA

AC	CW _{min}	CW _{max}	AIFSN	TXOP Limit (802.11b)	TXOP Limit (802.11a/g)
AC_BK	15	1023	7	0	0
AC_BE	15	1023	3	0	0
AC_VI	7	15	2	188 6.016ms	94 3.008ms
AC_VO	3	7	2	102 3.264ms	47 1.504ms

Table 5 Default WMM Parameters for the AP

AC	CW _{min}	CW _{max}	AIFSN	TXOP Limit (802.11b)	TXOP Limit (802.11a/g)
AC_BK	15	1023	7	0	0
AC_BE	15	63	3	0	0
AC_VI	7	15	1	188 6.016ms	94 3.008ms
AC_VO	3	7	1	102 3.264ms	47 1.504ms

1. All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2800AP.dat, and restart driver.
2. The format for WMM parameter is as followed,
APAIfsn=3;7;1;1 //AC_BE, AC_BK, AC_VI, AC_VO

7.2 How to Run WMM test

1. **WmmCapable=1**
For each BSSID:
0: Disable WMM,
1: Enable WMM

(If the parameter sets to 1, the relative BSSID will turn on WMM)

2. TxBurst=0

3. Parameters for AP (for each AC (access category))

APAifsn=3;7;1;1 // AC_BE;AC_BK;AC_VI;AC_VO
APCwmin=4;4;3;2 // AC_BE;AC_BK;AC_VI;AC_VO
APCwmax=6;10;4;3 // AC_BE;AC_BK;AC_VI;AC_VO
APTxop=0;0;94;47 // AC_BE;AC_BK;AC_VI;AC_VO
APACM=0;0;0;0 // AC_BE;AC_BK;AC_VI;AC_VO

4. Parameters for all STAs (for each AC (access category))

BSSAifsn=3;7;2;2 // AC_BE;AC_BK;AC_VI;AC_VO
BSSCwmin=4;4;3;2 // AC_BE;AC_BK;AC_VI;AC_VO
BSSCwmax=10;10;4;3 // AC_BE;AC_BK;AC_VI;AC_VO
BSSTxop=0;0;94;47 // AC_BE;AC_BK;AC_VI;AC_VO
BSSACM=0;0;0;0 // AC_BE;AC_BK;AC_VI;AC_VO

5. Ack policy

AckPolicy=0;0;0;0 // AC_BE;AC_BK;AC_VI;AC_VO;
// 0: Normal ACK, 1: No ACK

All default values comply with Wi-Fi spec.

7.3 WMM “The Ack”

1. Current driver of RT2800AP only support NORMAL_ACK and NO_ACK.

Section 11.1, item 4

Parameter of AckPolicy is for an Ack policy which supports **normal Ack or no Ack.**

The other two ack types have to be supported by the hardware.

2. The difference of ACKs

- NORMAL_ACK is used to ACK data packet.
- NO_ACK is used never ACK any data packet.
- NO_EXPLICIT_ACK have two ways to implement,
 - By received packet count threshold to ACK.
 - By timeing period threshold to ACK.
- BLOCK_ACK is used to ACK data packet per ACK request packet received.
 - If peer didn't request to ACK then never ACK.
 - This type of ACK is depends on what AIR quality is.
 - 1.) AIR quality is bad, then the ACK should be mostly required.
 - 2.) AIR quality is good, then the ACK period maybe longer or even needn't ACK.

3. Reference:

Below table is pasted from IEEE802.11e-D13.0 for your reference.(Page 27 and 28)

Table 3.2—Ack policy field in QoS control field of QoS data frames		
Bits in QoS Control field		Meaning
Bit 5	Bit 6	
0	0	Normal acknowledgement. The addressed recipient returns an ACK or

		QoS +CF-Ack frame after a SIFS period, according to the procedures defined in 9.2.8, 9.3.3 and 9.9.2.3. The Ack Policy field is set to this value in all directed frames in which the sender requires acknowledgement. For QoS Null (no data) frames, this is the only permissible value for the Ack Policy field.
1	0	No Acknowledgement. The addressed recipient takes no action upon receipt of the frame. More details are provided in 9.11. The Ack Policy is set to this value in all directed frames in which the sender does not require acknowledgement. This combination is also used for broadcast and multicast frames that use the QoS frame format.
0	1	No Explicit Acknowledgement. There may be a response frame to the frame that is received, but it is neither the ACK nor any Data frame of subtype +CF-Ack. For Data frames of subtype QoS CF-Poll and subtype QoS CF-Ack+CF-Poll, this is the only permissible value for the Ack Policy field.
1	1	Block Acknowledgement. The addressed recipient takes no action upon the receipt of the frame except for recording the state. The recipient can expect a BlockAckReq frame in the future to which it responds using the procedure described in 9.10.

7.4 Access Precedence and Outgoing Frame Classification

1. 802.1e-D13

1.1. Section 7.3.2.16 Traffic Classification (TCLAS) Element

Table 20.7—Frame classifier type	
Classifier Type	Classifier Parameters
0	Ethernet parameters
1	TCP/UDP IP parameters
2	IEEE 802.1D/Q Parameters
3-255	Reserved

1.2. Section 9.1.3.1 HCF contention-based channel access (EDCA)


Table 20.23—User priority to Access Category mappings				
Priority	User priority (UP - Same as 802.1D User Priority)	802.1D Designation	Access Category (AC)	Designation (Informative)
lowest	1	BK	AC_BK	Background
	2	-	AC_BK	Background
	0	BE	AC_BE	Best Effort
	3	EE	AC_BE	Best Effort
	4	CL	AC_VI	Video
	5	VI	AC_VI	Video
highest	6	VO	AC_VO	Voice
	7	NC	AC_VO	Voice

2. 802.1Q-2003

2.1. Section 8.9 VLAN classification

3. 802.1q-rev-d4.0-2005-05-19

3.1. Section 6.8 Protocol VLAN classification

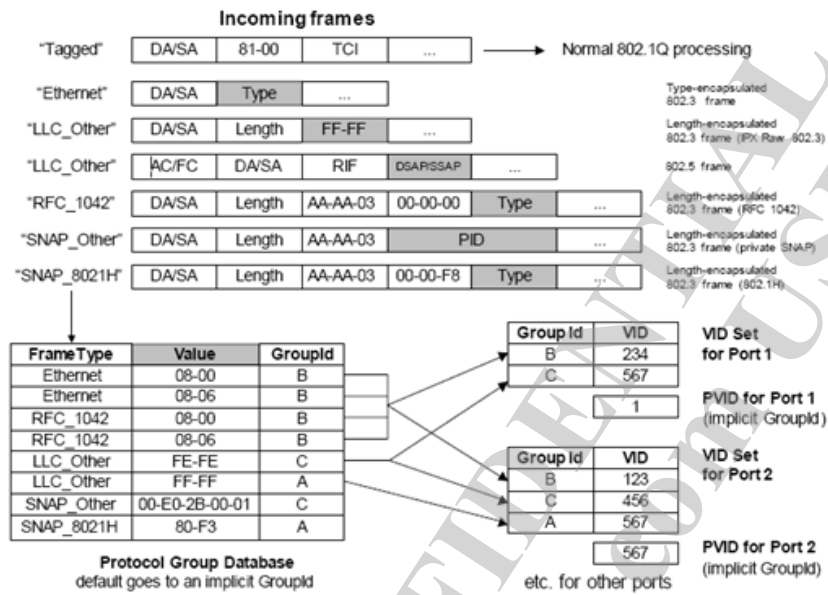

NOTE—The PID shown in this figure is a Protocol Identifier, as defined in 5.3 of IEEE Std 802. It is a 5-octet value consisting of a 3-octet OUI value followed by a 2-octet locally administered identifier.

Figure 6-2—Example of operation of port-and-protocol based classification

3.2. Section 9. Tagged frame format

Table 9-1—802.1Q Ethernet Type allocations		
Tag Type	Name	Value
VLAN TAG	802.1Q Tag Protocol Type (802.1QTagType)	81-00

4. RFC 2474

Definition of the Differentiated Services Field (DS Field) in the IPv4 and IPv6 Headers (802.11e - Differentiated Services Code Point (DSCP))

5. RFC 791

Internet Protocol

6. RFC 795

6.1. Service mappings – TOS of IP Header

The IP Type of Service has the following fields:

Bit 0-2	Precedence.
Bit 3	0 = Normal Delay, 1 = Low Delay.
Bit 4	0 = Normal Throughput, 1 = High Throughput.
Bit 5	0 = Normal Reliability, 1 = High Reliability.
Bit 6-7	Reserved for Future Use.

0	1	2	3	4	5	6	7
PRECEDENCE			D	T	R	00	
111 - Network Control							
110 - Internetwork Control							
101 - CRITIC/ECF							
100 - Flash Override							
011 - Flash							
010 - Immediate							
001 - Priority							
000 - Routine							

8 IEEE802.11h+d

DFS - Dynamic Frequency Selection

8.1 IEEE802.11d

Regulatory Domains

1. To turn on IEEE802.11d, just fill up the parameter of 'CountryCode', according to ISO3166 code list. This parameter can work in A/B/G band.
2. The parameter of "CountryCode" needs to match with 'CountryRegion' or 'CountryRegionABand' depends on A or B/G band
3. Wi-Fi test requirement for IEEE802.11d
 - Country code IE(0x07) includes in beacon frame and probe response
 - Power constraint IE(32) includes in beacon frame and probe response

8.2 IEEE802.11h

Spectrum and Transmit Power Management

1. To turn on IEEE802.11h, just fill up the parameters of 'IEEE80211H', 'AutoChannelSelect' as 1, WirelessMode set as 3 to support A band. This parameter can work in only A band.
2. Use 'CSPeriod' to determine how many beacons before channel switch
3. Driver will turn off BBP tuning temporarily in radar detection mode
4. If turn on IEEE802.11h, AP will have 60sec to do channel available check, and will not send beacon and can not be connect.
5. Wi-Fi test requirement for IEEE802.11h
 - Force AP switch channel, AP will stop beacon transmit between 15 sec
 - At least five beacon includes channel switch announcement IE (37)in beacon frame
6. ETSI test requirement, please refer to ETSI EN 301 893 for V1.2.3 detail

Table D.1: DFS requirement values

Parameter	Value
Channel Availability Check Time	60 s
Channel Move Time	10 s
Channel Closing Transmission Time	260 ms

Table D.2: Interference Threshold values, Master

Maximum Transmit Power	Value (see note)
≥ 200 mW	-64 dBm
< 200 mW	-62 dBm
NOTE: This is the level at the input of the receiver assuming a 0 dBi receive antenna.	

Table D.3: Interference Threshold values, Slave

Maximum Transmit Power	Value (see note)
≥ 200 mW	-64 dBm
< 200 mW	N/A
NOTE: This is the level at the input of the receiver assuming a 0 dBi receive antenna.	

9 SECURITY POLICY

9.1 All possible combinations of security policy

Type I. No Radius

(Must set parameter of IEEE8021X as FALSE)

	OPEN	SHARED	WEPAUTO
NONE	V	X	X
WEP	V	V	V
802.1x daemon	Off	Off	Off

Type II. With Radius (Non WiFi standard)

(Must set parameter of IEEE8021X as TRUE)

	OPEN
NONE	V
WEP	V
802.1x daemon	On

Type III. With WPA

(Must set parameter of IEEE8021X as FALSE)

	WPAPSK	WPA2PSK	WPAPSK WPA2PSK	WPA	WPA2	WPA WPA2
TKIP	V	V	V	V	V	V
AES	V	V	V	V	V	V
BOTH	V	V	V	V	V	V
802.1x daemon	Off	Off	Off	On	On	On

The "off" of 802.1x daemon means may be off, it also can be "on"

However "on" of 802.1x daemon means must be "on"

There are no relationship between the parameter of IEEE8021X and 802.1x daemon (RT2860apd).

9.2 WP2 Setting

All settings are same as WPA, but modify attributes --- AuthMode, EncrypType, PreAuth, PMKCachePeriod.

9.3 Examples

9.3.1 OPEN/NONE

On Step-by-Step setting of how to set SoftAP using OPEN security mechanism.

1. load WLAN SoftAP driver
2. iwpriv ra0 set AuthMode=OPEN
3. iwpriv ra0 set EncrypType=NONE
4. iwpriv ra0 set IEEE8021X=0
5. iwpriv ra0 set SSID=myownssid

9.3.2 SHARED/WEP

On Step-by-Step setting of how to set SoftAP using WEP security mechanism. Assume RT2800 SoftAP uses user-defined key.

1. load WLAN SoftAP driver
2. iwpriv ra0 set AuthMode=SHARED
3. iwpriv ra0 set EncrypType=WEP
4. iwpriv ra0 set IEEE8021X=0
5. iwpriv ra0 set Key1=0123456789
6. iwpriv ra0 set DefaultKeyID=1
7. iwpriv ra0 set SSID=myownssid

9.3.3 WPAPSK/TKIP

On Step-by-Step setting of how to set SoftAP using WPAPSK security mechanism with encryption method TKIP. Assume RT2800 SoftAP set PreShared Key as "myownpresharedkey". Please ensure to set SSID, before/after set WPAPSK.

1. load WLAN SoftAP driver
2. iwpriv ra0 set AuthMode=WPAPSK
3. iwpriv ra0 set EncrypType=TKIP
4. iwpriv ra0 set IEEE8021X=0
5. iwpriv ra0 set SSID=myownssid
6. iwpriv ra0 set WPAPSK=myownpresharedkey
7. iwpriv ra0 set DefaultKeyID=2
8. iwpriv ra0 set SSID=myownssid

9.3.4 WPAPSK/AES

Change setting to WPAPSK with AES.

1. iwpriv ra0 set AuthMode=WPAPSK
2. iwpriv ra0 set EncrypType=AES
3. iwpriv ra0 set IEEE8021X=0
4. iwpriv ra0 set SSID=MySsid
5. iwpriv ra0 set WPAPSK=MyPassword
6. iwpriv ra0 set DefaultKeyID=2
7. iwpriv ra0 set SSID=MySsid

Note:

Step 3 is a must for calculating WPAPSK Key, which requires both SSID and WPAPSK.

Step 5 will make driver to reload all settings. step5 must be the same with step3.

10 Authenticator

rt2860apd - user space IEEE 802.1X Authenticator

rt2860apd is an optional user space component for RT2800 SoftAP driver.
It adds 802.1x Authenticator feature using external RADIUS Authentication Server (AS).

10.1 IEEE 802.1X features in rt2860apd

IEEE Std 802.1X-2001 is a standard for port-based network access control. It introduces a extensible mechanism for authenticating and authorizing users.

rt2860apd implements partial IEEE 802.1x features that helps AS authorizing Supplicant and in the mean time proves itself a valid Authenticator for AS.

Noticed that Key management state machine is not included in rt2860apd. And those keys management is included in RT2800 SoftAP driver.

rt2860apd relays the frames between the Supplicant and the AS. Not until either one timeout or Success or Fail frame indicated does rt2860apd finish the authentication process. The port control entity is implemented in SoftAP driver for RT2800.

10.2 How to start rt2860apd

Manually start rt2860apd, type "\$rt2860apd".

10.3 rt2860apd configuration for IEEE 802.1X

When rt2860apd starts, it reads the configuraion file to derive parameters. For any changes to make, one need to first edit the configuration file, then restart rt2860apd.

Please add 4 required parameters in the configuration file for WLAN SoftAP driver (RT2860AP.dat/RT2870AP.dat).

```
RADIUS_Server='192.168.2.3'
RADIUS_Port='1812'
RADIUS_Key='password'
own_ip_addr='your_ip_addr'
```

The word in '' must be replaced with your own correct setting. Please make sure 'your_ip_addr' and RADIUS_Server is connected and RADIUS_Server's IAS (or related) services are started.

The optional variables as below,

- session_timeout_interval is for 802.1x reauthentication setting.
 - set to zero to disable 802.1x reauthentication service for each session.
 - session_timeout_interval unit is second and must be larger than 60.

- For example,
 - `session_timeout_interval = 120`
reauthenticate each session every 2 minutes.
 - `session_timeout_interval = 0`
disable reauthenticate service.
- EAPifname is assigned as the binding interface for EAP negotiation.
 - Its default value is "br0". But if the wireless interface doesn't attach to bridge interface or the bridge interface name isn't "br0", please modify it.
 - For example,
 - `EAPifname=br0`
- PreAuthifname is assigned as the binding interface for WPA2 Pre-authentication.
 - Its default value is "br0". But if the ethernet interface doesn't attach to bridge interface or the bridge interface name isn't "br0", please modify it.
 - For example,
 - `PreAuthifname=br0`

10.4 Support Multiple RADIUS Servers

We use compiler option to turn on/off the multiple RADIUS servers for 802.1x.

If you want to enable the feature, make sure that "MULTIPLE_RADIUS" is defined in Makefile. Default is disabled. Besides, you must modify the file "RT2860AP.dat" to co-operate with 802.1x. We extend some variables to support individual RADIUS server IP address, port and secret key for MBSS.

E.g.

`RADIUS_Server=192.168.2.1;192.168.2.2;192.168.2.3;192.168.2.4`

`RADIUS_Port=1811;1812;1813;1814`

`RADIUS_Key=ralink_1;ralink_2;ralink_3;ralink_4`

Or

`RADIUS_Key1=ralink_1`

`RADIUS_Key2=ralink_2`

`RADIUS_Key3=ralink_3`

`RADIUS_Key4=ralink_4`

For backward compatibility, the driver parses "RADIUS_Key" or RADIUS_KeyX"(X=1~4) for radius key usage. But the paramter "RADIUS_Key" has the first priority.

This implies,

The RADIUS server IP of ra0 is 192.168.2.1, its port is 1811 and its secret key is ralink_1.

The RADIUS server IP of ra1 is 192.168.2.2, its port is 1812 and its secret key is ralink_2.

The RADIUS server IP of ra2 is 192.168.2.3, its port is 1813 and its secret key is ralink_3.

The RADIUS server IP of ra3 is 192.168.2.4, its port is 1814 and its secret key is ralink_4.

If your wireless interface prefix is not "ra", please modify these variables.

10.5 Enhance dynamic wep keying

In OPEN-WEP with 802.1x mode, the authentication process generates broadcast and unicast key. The unicast key is unique for every individual client so it is always generated

randomly by 802.1x daemon. But the broadcast key is shared for all associated clients; it can be pre-set manually by users or generated randomly by 802.1x daemon. Through the parameter "DefaultKeyID" and its corresponding parameter "KeyXStr"(i.e. X = the value of DefaultKeyID) in RT2860Ap.dat, the 802.1x daemon would use it as the broadcast key material. But if the corresponding parameter "KeyXStr" is empty or unsuitable, the broadcast key would be generated randomly by the 802.1x daemon. The 802.1x daemon need to read RT2860AP.dat to decide whether the broadcast key is generated randomly or not, so please update the RT2860AP.dat and restart rt2860apd if those correlative parameters are changed.

10.6 Examples for Radius server configuration

10.6.1 Example I

This is a step-by-step guide to set SoftAP using WPA security mechanism. Assume RT2800 SoftAP has ip address 192.168.1.138, AS (Authentication Server) has IP address 192.168.1.1, Radius Secret is myownkey.

1. load WLAN SoftAP driver
 - ◆ `$insmod rt2860ap.o`
2. First edit configuration file with correct value, esp. the following parameters that relate to the authentication features of RT2800AP.dat
 - `RADIUS_Server=192.168.1.1`
 - `RADIUS_Port=1812`
 - `RADIUS_Key=myownkey`
 - `own_ip_addr=192.168.1.138`
3. start RT2800apd daemon by typing.
 - ◆ `$rt2860apd`
4. `iwpriv ra0 set AuthMode=WPA`
5. `iwpriv ra0 set EncrypType=TKIP`
6. `iwpriv ra0 set DefaultKeyID=2`
7. `iwpriv ra0 set IEEE8021X=0`
8. `iwpriv ra0 set SSID=myownssid`

10.6.2 Example II

Change 802.1x settings to WPA with TKIP, using 802.1x authentication.

1. Modify 4 parameters
 - `RADIUS_Server=192.168.2.3`
 - `RADIUS_Port=1812`
 - `RADIUS_Key=password`
 - `own_ip_addr=192.168.1.123`

in the RT2860AP.dat and save.
2. `iwpriv ra0 set AuthMode=WPA`
3. `iwpriv ra0 set EncrypType=TKIP`

4. iwpriv ra0 set IEEE8021X=0
5. iwpriv ra0 set SSID=myownssid

Note:

Step 4 restarts the rt2860apd, and is essential.

10.6.3 Example III

Change setting to OPEN/WEP with 802.1x.

1. iwpriv ra0 set AuthMode= OPEN
2. iwpriv ra0 set EncrypType= WEP
3. iwpriv ra0 set IEEE8021X=1

Note:

"IEEE8021X=1" only when Radius-WEP or Radius-NONE mode on, otherwise must "IEEE8021X=0".

10.6.4 Example V

Change setting to OPEN/NONE with 802.1x.

1. iwpriv ra0 set AuthMode= OPEN
2. iwpriv ra0 set EncrypType= NONE
3. iwpriv ra0 set IEEE8021X=1


Note:

"IEEE8021X=1" only when Radius-WEP or Radius-NONE mode on , otherwise must "IEEE8021X=0".

11 AP CLIENT

The AP-Client function provides a 1-to-N MAC address mapping mechanism such that multiple stations behind the AP can transparently connect to the other AP even they didn't support WDS. When enable the AP-Client function, RT2800 driver will create two interfaces, one is the AP interface which provide the features of Access Point, the other is the station interface used to connect to the remote AP. Besides, the software bridge function is used to forward packets between these two interfaces.

The figure 1 shows the network topology and operation module of our AP-client function. The AP1 is an AP-Client feature enabled Access Point and have two wireless interfaces, ra0 and cli0, which provide the AP and station functions, respectively. The AP2 is a legacy Access Point that supports normal AP functions. STA1 associated to AP1 and the STA4 associated to AP2. In general, if the STA1 want to communicate with STA4, the AP2 and AP1 must support WDS or a physical network connection between AP1 and AP2. Now, with the support the AP-Client function, the AP1 can use build-in station interface cli0 connect to AP2, and then STA1 can communicate with STA4 transparently and didn't do any modifications. Also, the stations connect to the AP1 through the Ethernet line also can communicate with STA4 or access the Internet through AP2 transparently.

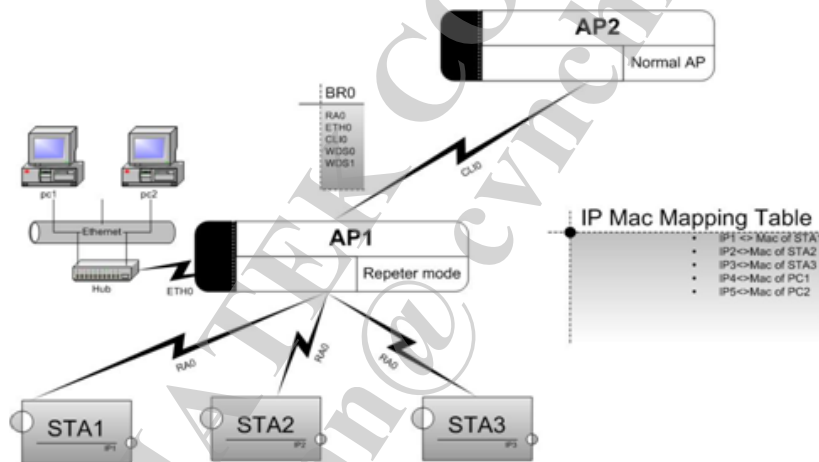

Before enable the AP-Client feature, there are some restrictions need to remind

- (1). Due to the limitation of 1-to-N MAC address mapping, AP-Client function currently only support following protocols:
 - (a). All IP-based network applications
 - (b). ARP
 - (c). DHCP
 - (d). PPPoE
- (2). The last 2 hexadecimal number of the Mac address of our device must be the multiple of 4.
- (3). The OS must provide a software bridge function can bridge multiple network interfaces.

It's simple to enable the feature of AP-Client; you just need to set the flag "HAS_APCLIENT" as "y" in the driver Makefile and got it.

11.1 Setup AP Client

1. Edit file in /etc/Wireless/RT2800AP/RT2800AP.dat to add
 - a) `ApCliEnable=1`
 - b) `ApCliSsid=AP2`
 - c) `ApCliBssid=00:10:20:30:40:50` (optional)
 - d) `ApCliAuthMode=WPA2PSK`
 - e) `ApCliEncrypType=TKIP`
 - f) `ApCliWPA2PSK=12345678`
2. Like the procedure of bringing up main BSSID (ra0), it also must to add `"/sbin/ifconfig apcli0 up"` and `"/usr/sbin/brcctl addif br0 apcli0"`.
3. The AP-client's security policy only supports **NONE, WEP (OPEN, SHARED), WPA2PSK and WPA2PSK (TKIP, AES)**.
4. Set the "HAS_APCLI" flag as "y" in config.mk to enable or disable this function.
5. If enable AP client function, the maximum multiple BSSID number would be 7 and the field 'BssidNum' shall larger than 1 and less than 7.
6. Users can also configure AP Client by iwpriv command.

11.2 Support Parameters in RT2860AP.dat

11.2.1 ApCliEnable

Description: enable or disable AP client function

Value:

`ApCliEnable=1`

0: disable

1: enable

11.2.2 ApCliSsid

Description: The target SSID which AP client is going to connect with it.

Value:

`ApCliSsid=target_ssid`

1~32 characters

11.2.3 ApCliBssid

Description: Set the BSSID which the AP Client wants to join

Value:

`ApCliBssid=00:11:22:33:44:55`

[MAC address]

Note: It is an optional command. Users can indicate the desired BSSID by this command. Otherwise, AP Client can also get appropriate BSSID according to SSID automatically.

11.2.4 ApCliWPAPSK

Description: Set the WPA pre-shared key of AP client.

Value:

ApCliWPAPSK=12345678

8 ~ 63 ASCII characters or
64 hexadecimal characters

11.2.5 ApCliAuthMode

Description: Set the AP Client authentication mode

Value:

ApCliAuthMode=OPEN

OPEN
SHARED
WPAPSK
WPA2PSK

11.2.6 ApCliEncryptType

Description: Set the AP client encryption type.

Value:

ApCliEncryptType=NONE

NONE: ApCliAuthMode =OPEN
WEP: ApCliAuthMode =OPEN or SHARED
TKIP: ApCliAuthMode =WPAPSK or WPA2PSK
AES: ApCliAuthMode =WPAPSK or WPA2PSK

11.2.7 ApCliDefaultKeyID

Description: Set the default key index of AP client

Value:

ApCliDefaultKeyID=1

1~4

11.2.8 ApCliKey1Type

Description: Set the WEP key type of AP client for key index 1.

Value:

ApCliKey1Type=0

0: Hexadecimal

1: ASCII

11.2.9 ApCliKey1Str

Description: Set the WEP key string of AP client for key 1

Value:

ApcliKey1Str=012345678

10 or 26 hexadecimal characters eg: 012345678

5 or 13 ASCII characters eg: passd

11.2.10 ApCliKey1Type

Description: Set the WEP key type of AP client for key index 1.

Value:

ApCliKey1Type=0

0: Hexadecimal

1: ASCII

11.2.11 ApCliKey2Str

Description: Set the WEP key string of AP client for key 2

Value:

ApcliKey2Str=012345678

10 or 26 hexadecimal characters eg: 012345678

5 or 13 ASCII characters eg: passd

11.2.12 ApCliKey2Type

Description: Set the WEP key type of AP client for key index 2.

Value:

ApCliKey2Type=0

0: Hexadecimal

1: ASCII

11.2.13 ApCliKey3Str

Description: Set the WEP key string of AP client for key 3
Value:

ApCliKey3Str=012345678

10 or 26 hexadecimal characters eg: 012345678
5 or 13 ASCII characters eg: passd

11.2.14 ApCliKey4Type

Description: Set the WEP key type of AP client for key index 4.
Value:

ApCliKey4Type=0

0: Hexadecimal
1: ASCII

11.2.15 ApCliKey4Str

Description: Set the WEP key string of AP client for key 4
Value:

ApCliKey4Str=012345678

10 or 26 hexadecimal characters eg: 012345678
5 or 13 ASCII characters eg: passd

11.2.16 ApCliTxMode

Description: Set transmission mode for AP-Client traffic
Value:

ApCliTxMode=HT

cck|CCK,
ofdm|OFDM,
ht|HT

11.2.17 ApCliTxMcs

Description: Set TX MCS for AP client
Value:

ApCliTxMcs=33

0~15, or 33 (Auto)

11.2.18 ApCliWscSsid

Description: Set the SSID which the AP-Client wants to negotiate WPS

Value:

ApCliWscSsid=target_ssid

1~32 characters

11.3 AP Client iwpriv command

Syntax:

iwpriv apcli0 set [Paramster]=[Value]

11.3.1 ApCliEnable

Description: enable or disable AP client function

Value:

iwpriv apcli0 set ApCliEnable=0

0: disable

1: enable

11.3.2 ApCliSsid

Description: Set the target SSID which AP Client wants to connect with

Value:

iwpriv apcli0 set ApCliSsid=target_ssid

1~32 characters

11.3.3 ApCliBssid

Description: Set BSSID which AP Client wants to join

Value:

iwpriv apcli0 set ApCliDssid=00:11:22:33:44:55

[MAC address]

Note: It is an optional command. Users can indicate the desired BSSID by this command. Otherwise, AP Client can also get appropriate BSSID according to SSID automatically.

11.3.4 ApCliWPAPSK

Description: AP Client WPA Pre-Shared Key

Value:

iwpriv apcli0 set ApCliWPAPSK=12345678

8~63 ASCII

64 HEX characters

11.3.5 ApCliAuthMode

Description: Set AP Client Authentication mode

Value:

iwpriv apcli0 set ApCliAuthMode=OPEN

OPEN

SHARED

WPAPSK

WPA2PSK

11.3.6 ApCliEncrypType

Description: Set AP Client Encryption Type

Value:

iwpriv apcli0 set ApCliEncrypType=NONE

NONE

WEP

TKIP

AES

11.3.7 ApCliWscSsid

Description: Set the SSID which the AP-Client wants to negotiate WPS

Value:

iwpriv apcli0 set ApCliWscSsid=target_ssid

1~32 characters

11.3.8 ApCliDefaultKeyID

Description: Set the default key index of AP client

Value:

iwpriv apcli0 set ApCliDefaultKeyID=1

1~4

11.3.9 ApCliKey1Type

Description: Set the WEP key type of AP client for key index 1.

Value:

`iwpriv apcli0 set ApCliKey1Type=0`

0: Hexadecimal

1: ASCII

11.3.10 ApCliKey1Str

Description: Set the WEP key string of AP client for key 1

Value:

`iwpriv apcli0 set ApCliKey1Str=012345678`

10 or 26 hexadecimal characters eg: 012345678

5 or 13 ASCII characters eg: passd

11.3.11 ApCliKey1Type

Description: Set the WEP key type of AP client for key index 1.

Value:

`iwpriv apcli0 set ApCliKey1Type=0`

0: Hexadecimal

1: ASCII

11.3.12 ApCliKey2Str

Description: Set the WEP key string of AP client for key 2

Value:

`iwpriv apcli0 set ApCliKey2Str=012345678`

10 or 26 hexadecimal characters eg: 012345678

5 or 13 ASCII characters eg: passd

11.3.13 ApCliKey2Type

Description: Set the WEP key type of AP client for key index 2.

Value:

`iwpriv apcli0 set ApCliKey2Type=0`

0: Hexadecimal

1: ASCII

11.3.14 ApCliKey3Str

Description: Set the WEP key string of AP client for key 3
Value:

```
iwpriv apcli0 set ApCliKey3Str=012345678
```

10 or 26 hexadecimal characters eg: 012345678
5 or 13 ASCII characters eg: passd

11.3.15 ApCliKey4Type

Description: Set the WEP key type of AP client for key index 4.
Value:

```
iwpriv apcli0 set ApCliKey4Type=0
```

0: Hexadecimal
1: ASCII

11.3.16 ApCliKey4Str

Description: Set the WEP key string of AP client for key 4
Value:

```
iwpriv apcli0 set ApCliKey4Str=012345678
```

10 or 26 hexadecimal characters eg: 012345678
5 or 13 ASCII characters eg: passd

11.4 AP Client Examples

11.4.1 Enable AP Client with OPEN/NONE data security

```
iwpriv apcli0 set ApCliEnable=0  
iwpriv apcli0 set ApCliAuthMode=OPEN  
iwpriv apcli0 set ApCliEncryptType=NONE  
iwpriv apcli0 set ApCliSsid=AP2  
iwpriv apcli0 set ApCliEnable=1
```

11.4.2 Enable AP Client with OPEN/WEP security

```
iwpriv apcli0 set ApCliEnable=0  
iwpriv apcli0 set ApCliAuthMode=OPEN  
iwpriv apcli0 set ApCliEncryptType=WEP  
iwpriv apcli0 set ApCliDefaultKeyID=1  
iwpriv apcli0 set ApCliKey1=1234567890  
iwpriv apcli0 set ApCliSsid=AP2  
iwpriv apcli0 set ApCliEnable=1
```

11.4.3 Enable AP Client with SHARED/WEP security

```
iwpriv apcli0 set ApCliEnable=0  
iwpriv apcli0 set ApCliAuthMode=SHARED  
iwpriv apcli0 set ApCliEncrypType=WEP  
iwpriv apcli0 set ApCliDefaultKeyId=2  
iwpriv apcli0 set ApCliKey2=2345678901  
iwpriv apcli0 set ApCliSsid=AP2  
iwpriv apcli0 set ApCliEnable=1
```

11.4.4 Enable AP Client with WPAPSK/TKIP security

```
iwpriv apcli0 set ApCliEnable=0  
iwpriv apcli0 set ApCliAuthMode=WPAPSK  
iwpriv apcli0 set ApCliEncrypType=TKIP  
iwpriv apcli0 set ApCliSsid=AP2  
iwpriv apcli0 set ApCliWPAPSK=12345678  
iwpriv apcli0 set ApCliEnable=1
```

11.4.5 Enable AP Client with WPAPSK/AES security

```
iwpriv apcli0 set ApCliEnable=0  
iwpriv apcli0 set ApCliAuthMode=WPA2PSK  
iwpriv apcli0 set ApCliEncrypType=AES  
iwpriv apcli0 set ApCliSsid=AP2  
iwpriv apcli0 set ApCliWPAPSK=12345678  
iwpriv apcli0 set ApCliEnable=1
```

11.4.6 AP Client WPS sample command

PIN mode:

```
iwpriv apcli0 set WscConfMode=1  
iwpriv apcli0 set WscConfStatus=1  
iwpriv apcli0 set WscMode=1  
iwpriv apcli0 set WscGetConf=1
```

PBC Mode:

```
iwpriv apcli0 set WscConfMode=1  
iwpriv apcli0 set WscConfStatus=1  
iwpriv apcli0 set WscMode=2  
iwpriv apcli0 set WscGetConf=1
```

12 WDS

Wireless Distribution System.

Each WDS APs need setting as **same channel, encryption type**. (not support mixed mode, like WPAPSKWPA2PSK).

WDS Security support up to pre-shared key, this is inter AP's security and **no 802.1x support**.

In case want have auto-learning WDS peers, Lazy mode is the one. But have to note that can't set each AP to Lazy mode, otherwise no addr4 will be carried by each AP. This means that there at least has one AP have to fill WDS list.

12.1 HOW to Steup WDS

1. edit file in /etc/Wireless/RT2860AP/RT2860AP.dat to add
 - (a). WdsEnable=1
 - (b). WdsList=00:10:20:30:40:50; ;Another AP's MAC address
 - (c). WdsEncrypType=NONE ;the encryption type in WDS
- interface
2. edit script file bridge_setup according to **the number of WDS-AP**
add "/usr/sbin/brctl addif br0 wds0" and "/sbin/ifconfig wds0 0.0.0.0" to relative place.
3. re-load WLAN driver(rt2860ap.o)
4. run bridge_setup

12.2 WDS Individual Encryption

If the WDS mode is enabled and set as LAZY mode, the all WDS-link shall share the same encryption type and key material (based on wds0 setting). Otherwise, each WDS-link has own individual security setting. No matter what WDS mode is set; it has no any relation to the encryption of BSSIDs.

Although the new WDS implementation has been provided, it alos supports previous WDS configuration.

A: WdsKey:

WdsKey is used for all WDS interface and support AES or TKIP encryption only. WEP key will follow main-AP's setting. Wds0Key/Wds1Key/Wds2Key/Wds3Key is used to support all of the encryption per WDS interface, WEP, TKIP, and AES.

B: AuthMode:

Follows the main-AP's setting.

Case 1: main AP choose open mode, and WDS choose WEP or AES

AuthMode: OPEN, take from main-AP

EncrypType: WDS = WEP or AES

⇒ WEP key will follow main-AP's setting,

Or, take from Wds0Key... depend on which WDS interface.

⇒ AES key will take from WdsKey or Wds0Key, depend on which WDS interface.
Please use PING to check the data whether encrypted or not.

Case 2: main AP is wep mode, and WDS is AES mode

AuthMode: WEP

12.3 Supported Paramters in RT2860AP.dat

12.3.1 WdsEnable

Description: Enable or disable WDS function

Value:

WdsEnable=0

- 0: Disable - Disable all WDS function.
- 1: Restrict mode - Same as Repeater mode.
- 2: Bridge mode - Turn on WDS function, the peer WDS APs are according to the mac address listed in "WdsList" field below. In this mode, AP will not send beacon out and will not deal with probe request packets, therefore STA will not possible to connect with it.
- 3: Repeater mode - Turn on WDS function, the peer WDS APs are according to the mac address listed in "WdsList" field below.
- 4: Lazy mode - Turn on WDS function, and auto learning from WDS packet which with addr4 field.

12.3.2 WdsList

Description: WDS list for making the connection

Value:

WdsList=00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Maximun up to 4 lists

12.3.3 WdsEncrypType

Description: WDS encryption type

Value:

WdsEncrypType=NONE

NONE
WEP
TKIP
AES

Example:

WdsEncrypType= OPEN;TKIP;WEP;AES

The encrptytion of wds0 is OPEN

The encrptytion of wds1 is TKIP

The encryption of wds2 is WEP
The encryption of wds3 is AES

12.3.4 WdsKey

Description: The Key of WDS Link

Value:

WdsKey=12345678

10 or 26 hexadecimal characters (eg: 1234567890) for WEP
5 or 13 ASCII characters (eg: 12345) for WEP
8 ~ 63 ASCII characters for TKIP or AES
64 hexadecimal characters for TKIP or AES

Note: **Combinations of WDS security mode**

Main BSSID's EncrypType	WDS's WdsEncrypType	Peer AP WDS's WdsEncrypType	Remark
NONE	NONE	NONE	
WEP	WEP	WEP	Using legacy key setting method
TKIP	TKIP	TKIP	WDS's key is from WdsKey
TKIP	AES	AES	WDS's key is from WdsKey
AES	TKIP	TKIP	WDS's key is from WdsKey
AES	AES	AES	WDS's key is from WdsKey
TKIP/AES	TKIP	TKIP	WDS's key is from WdsKey
TKIP/AES	AES	AES	WDS's key is from WdsKey

12.3.5 Wds0Key

Description: WDS key for Link0

Value:

Wds0Key=12345678

10 or 26 hexadecimal characters (eg: 1234567890) for WEP
5 or 13 ASCII characters (eg: 12345) for WEP
8 ~ 63 ASCII characters for TKIP or AES
64 hexadecimal characters for TKIP or AES

12.3.6 Wds1Key

Description: WDS key for Link1

Value:

Wds1Key=12345678

10 or 26 hexadecimal characters (eg: 1234567890) for WEP
5 or 13 ASCII characters (eg: 12345) for WEP
8 ~ 63 ASCII characters for TKIP or AES
64 hexadecimal characters for TKIP or AES

12.3.7 Wds2Key

Description: WDS key for Link2

Value:

Wds2Key=12345678

10 or 26 hexadecimal characters (eg: 1234567890) for WEP

5 or 13 ASCII characters (eg: 12345) for WEP

8 ~ 63 ASCII characters for TKIP or AES

64 hexadecimal characters for TKIP or AES

12.3.8 Wds3Key

Description: WDS key for Link3

Value:

Wds3Key=12345678

10 or 26 hexadecimal characters (eg: 1234567890) for WEP

5 or 13 ASCII characters (eg: 12345) for WEP

8 ~ 63 ASCII characters for TKIP or AES

64 hexadecimal characters for TKIP or AES

12.3.9 WdsDefaultKeyID

Description: The default key index setting

Value:

WdsDefaultKeyID=1

1~4

Example:

WdsDefaultKeyID=1;2;3;4

The key index of wds0 is 1

The key index of wds1 is 2

The key index of wds2 is 3

The key index of wds3 is 4

12.3.10 WdsPhyMode

Description: configure WDS Link physical mode

Value:

WdsPhyMode=HTMIX


CCK

OFDM

HTMIX

GREENFIELD

13 IGMP SNOOPING

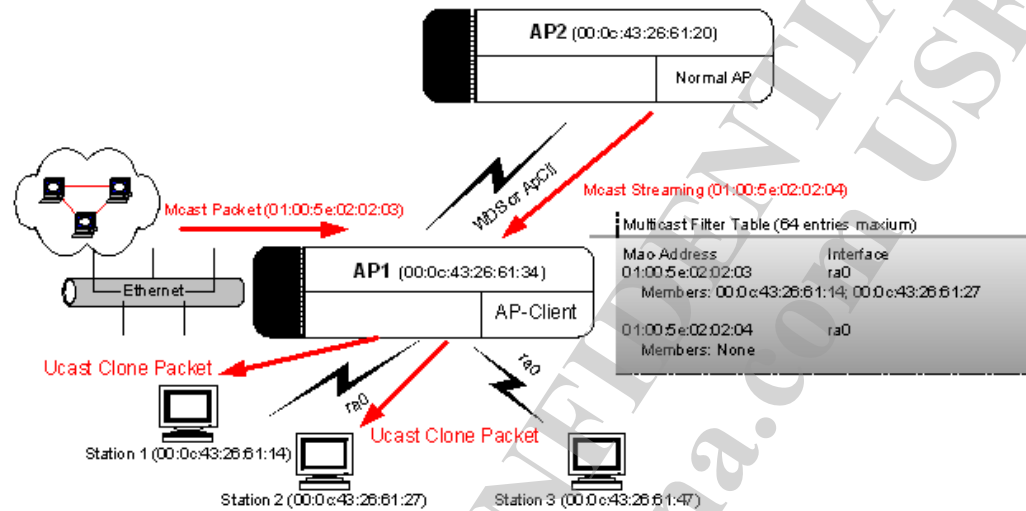

13.1 IGMP Table Learning

An IGMP table entry consists of Group-Id (Multicast MAC Address), Net-Interface and Member-List. For example, in the picture above we see the “Multicast Filter Table” of AP1 have two IGMP entries. One is “01:00:5e:02:02:03” with two members and another is “01:00:5e:02:02:04 with empty member list”. AP will automatically insert or remove the entry from table by snooping the IGMP-Membership report packet from Station behind AP. And it also could be manual add and del by iwpriv command.

13.2 Multicast Packet Process

Once a multicast packet whether it comes from portal, WDS or AP-Client. AP will go through the Multicast-filter table to find a match rule for the incoming packet. If have no any match rule in the table then AP will simply drops it. If it does then there are two cases how AP handles a multicast packet. The first cast is the match entry has no member then AP just forwards it to all stations behind the net-interface. If the match entry has members then AP will do unicast clone for all members.

For example, AP1 receive a multicast packet with group-Id, “01:00:5e:02:02:03”, comes from Ethernet then AP1 check the multicast table using group-Id and found it match the entry with 2 members. So AP1 clone the multicast packet and sent them to Station 1 and Station 2. Another case a multicast packet with group-id (01:00:5e:02:02:04) be sent to AP1 then AP1 just forward it to all Stations behind interface, ra0 since the match entry have no member.

13.3 IGMP SNOOPING in RT2860.dat support

13.3.1 IgmpSnEnable

Description: enable or disable IGMP snooping function

Value:

IgmpSnEnable=1

0: disable

1: enable

13.4 Iwpriv command for IGMP SNOOPING

Syntax:

`iwpriv ra0 set [Parameter]=[Value]`

13.4.1 IgmpSnEnable

Description: enable or disable IGMP SNOOPING

Value:

`iwpriv ra0 set IgmpSnEnable=1`

0: disable

1: enable

Note: If the command returns failed, please make sure IGMP Snooping is selected or not in driver config.mk

13.4.2 IgmpAdd

Description: It also provide a command let user add an entry by iwpriv command "set

`IgmpAdd=<Group-ID>`, Group-ID could be a MAC address or a IP address.

Also can add members into a Group by command "set `IgmpAdd=<Group-ID-[Member]-... >`", Group-ID could be a MAC address or an IP address.

Value:

//Add Group-ID

`iwpriv ra0 set IgmpAdd=226.2.2.3`

or

`iwpriv ra0 set IgmpAdd=01:00:5e:02:02:03`

//Add Group-ID-member

`iwpriv ra0 set IgmpAdd=226.2.2.3-00:0c:43:26:61:27-00:0c:43:26:61:28`

or

`iwpriv ra0 set IgmpAdd=01:00:5e:02:02:03-00:0c:43:26:61:27-00:0c:43:26:61:28`

13.4.3 IgmpDel

Description: the entry can be deleted by command "set IgmpDelEntry=<Group-ID>".
Also can delete a member from a Group by command "set IgmpDel=<Group-ID-[Member]-... >".
Group-ID could be a MAC address or an IP address.

Value:

//Delete by Group-ID

iwpriv ra0 set IgmpDel=226.2.2.3

iwpriv ra0 set IgmpDel=01:00:5e:02:02:03

//Delete by Group-ID-Member

iwpriv ra0 set IgmpDel=226.2.2.3-00:0c:43:26:61:27-00:0c:43:26:61:28

iwpriv ra0 set IgmpDel=01:00:5e:02:02:03-00:0c:43:26:61:27-00:0c:43:26:61:28

14 MAC Repeater

The MAC repeater acts as a Wi-Fi proxy for its clients. For each device connected to the repeater, the extender must create a connection to the root AP separately. The MAC repeater will make connections according to its own wireless capability and security mode. When the device is disconnected from the repeater, the repeater must disconnect the connection between root AP and the repeater for this device. The repeater makes the root AP unaware of what are behind the repeater. From the Root AP side, it just sees all the repeater clients in the same BSS.


All communications between the repeater clients and Root AP are utilizing one "AP client" interface on the repeater.

Bridge: Ethernet / Wireless (AP / AP client)


The implement must enable apcli function and bridge all network interfaces.

14.1 MAC Repeater Management Flow

Management Flow Chart (Wireless):

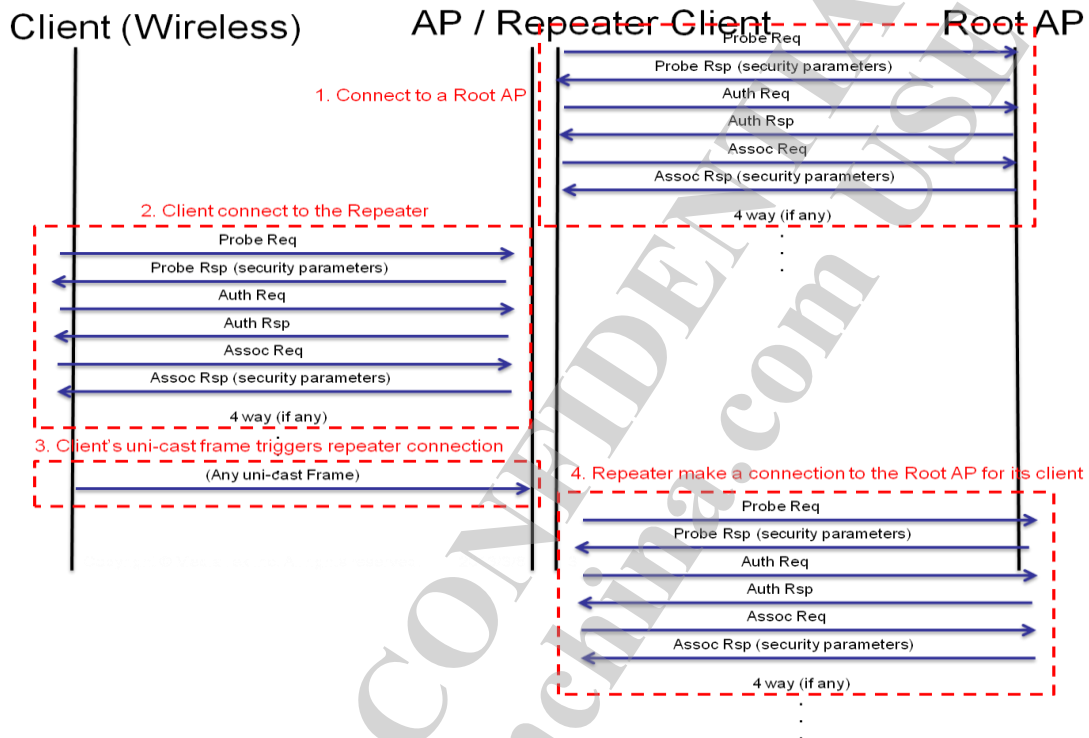


Management Flow Chart (Ethernet):

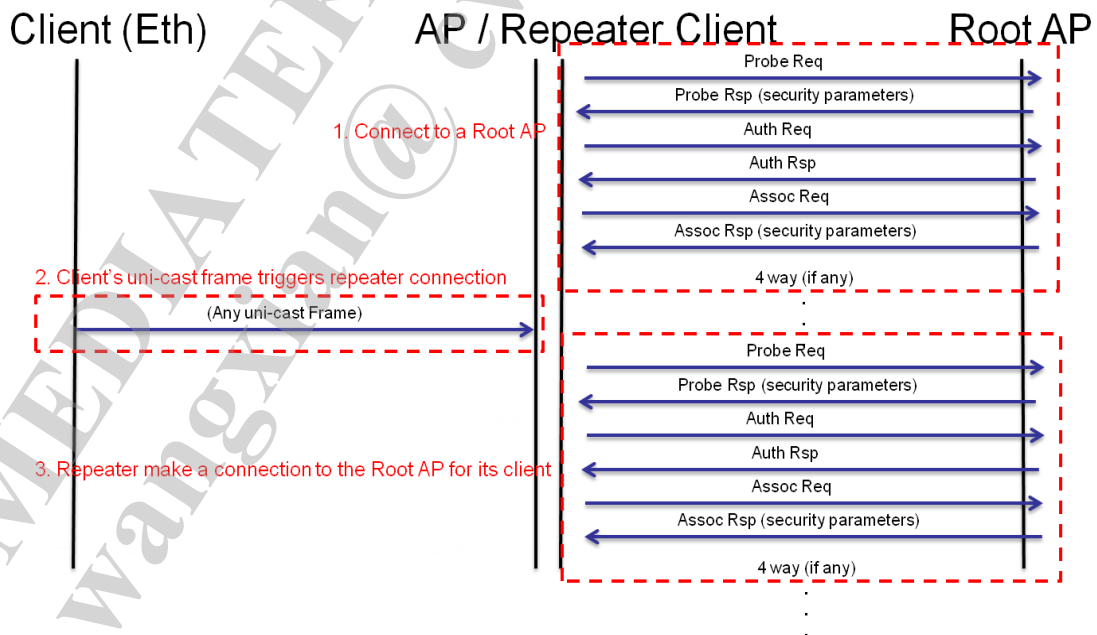

14.2 MAC Repeater Data Flow


14.2.1 Unicast Data Flow

Data Flow (Unicast)

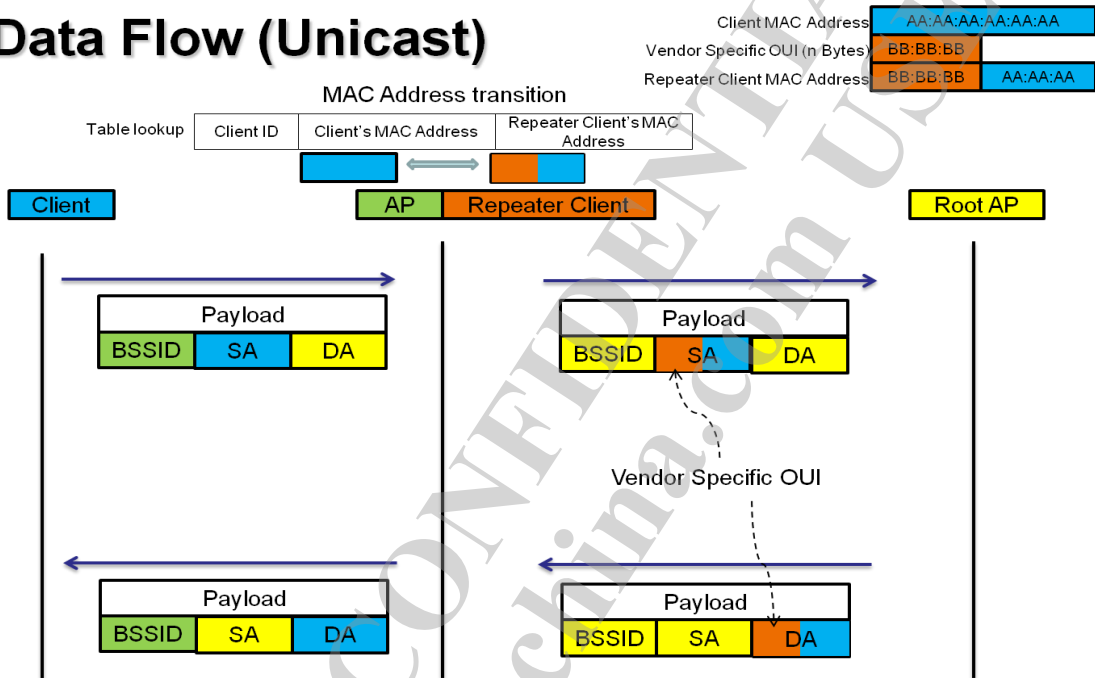

14.2.2 Multicast / Broadcast Data Flow

Data Flow (Multicast / Broadcast)

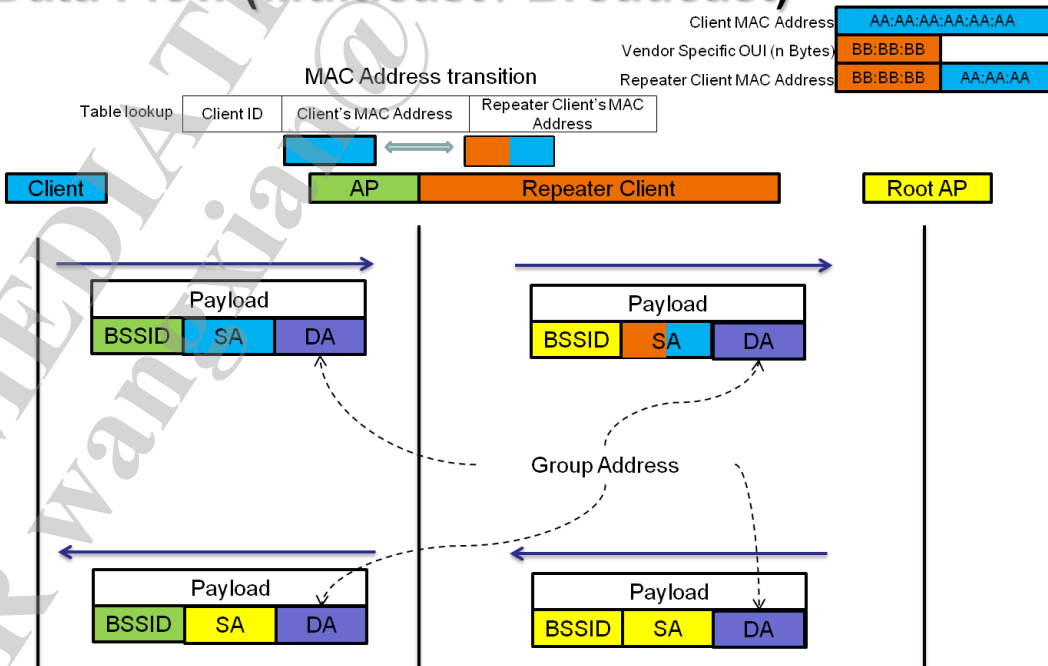

14.3 MAC Repeater Limitation

- Roaming of STAs between different BSSs is not supported.
- WPA2-Enterprise Security is not supported.
- Supported protocols: IPv4 / ARP / DHCP
- The repeater does not response for an end-to-end reliability and security.
- Support max 16 repeater clients; the others are treated as AP clients.
- Impact CPU utilization due to parse all received packets from the STA and all multicast and broadcast packets.

14.4 MAC Repeater Example command

14.4.1 MAC Repeater by Wi-Fi Profile:

To enable MAC Repeater:

Add MACRepeaterEn = 1 into the WLAN profile "RT2860AP.dat".

To disable MAC Repeater:

Add MACRepeaterEn = 0 into the WLAN profile.

14.4.2 MAC Repeater by Wi-Fi command:

```
iwpriv ra0 set MACRepeaterEn=1
ifconfig apcli0 up
iwpriv apcli0 set ApCliEnable=0
iwpriv apcli0 set ApCliSsid=MT7610_RootAP
iwpriv apcli0 set ApCliAuthMode=OPEN
iwpriv apcli0 set ApCliEncrypType=NONE
iwpriv apcli0 set ApCliEnable=1
brctl addif br0 apcli0
```

15 Multiple BSSID Setup

1. Before turn on multiple BSSID, make sure the byte5 of MAC address in EEPROM is a multiple of 1/2/4/8 and reserve multiple MAC address when manufacturing. example, 00:0A:0B:0C:0D:04; 00:0A:0B:0C:0D:88.
2. When enable multiple BSSID function, the field 'BssidNum' shall larger than 1 and less than 8.
3. BssidNum can only be modified with editing configure file.
When change the ' BssidNum ' field, the driver must restart, and modify bridge_setup file to group virtual interface.
Others parameters can pass through iwpriv according to their interface.
4. The parameter that support **multiple BSSID** is listed as followed,

SSID

AuthMode

EncrypType

WPAPSK

DefaultKeyID

Key1Type

Key1Str

Key2Type

Key2Str

Key3Type

Key3Str

Key4Type

Key4Str

AccessPolicy

AccessContro

IList

NoForwarding

IEEE8021X

HideSSID

PreAuth

WmmCapable

5. Example of notation to represent multiple ssid's parameter:
 - 1.) BssidNum=4
 - 2.) SSID=SSID-A;SSID-B;SSID-C;SSID-D
 - 3.) AuthMode=OPEN;SHARED;WPAPSK;WPA
 - 4.) EncrypType=NONE;WEP;TKIP;AES
6. The WDS's security policy must be the same as main BSSID and only support NONE, WEP, TKIP, and AES.
7. MBSSID and WDS.

There 64 security key table in MAC(RT2800).

Entry 0: For reserved.

Entry 1 - 59: For Associated STA and WDS link.

Current driver defined WDS number to 4.

16 Concurrent A+G Settings

Below table is brief example for two interfaces.

For example, Linux HotPlug system found new device would create one driver instance (create new space for driver image) for new device to hold private information (memory consumed).

RT2800 Interface Bring Up Sequence							
NIC#	Sequence	Normal	WDS(Virtual)				
			1	2	3	4	
Two	ifconfig ra0 up	ra0	wds0	wds1	wds2	wds3	
	ifconfig ra1 up	ra1	wds4	wds5	wds6	wds7	

NIC#	Sequence	Normal	MBSSID (Physical)			WDS(Virtual)			
						1	2	3	4
Two	ifconfig ra0 up	ra0	ra2	ra3	ra4	wds0	wds1	wds2	wds3
	ifconfig ra1 up	ra1	ra5	ra6	ra7	wds4	wds5	wds6	wds7

WDS IS A VIRTUAL INTERFACE WITHOUT IOCTL FUNCTIONALITY.

17 SNMP MIBs Support List

17.1 RT2860AP Supported v.s. IEEE802dot11-MIB

IEEE802dot11-MIB	Access	Support	OID	RT2860AP.dat
ieee802dot11				
dot11smt		-		
dot11StationConfigTable	not-accessible	-		
dot11StationConfigEntry	not-accessible	-		
dot11StationID	read-write	Y	OID_802_3_CURRENT_ADDRESS	N
dot11MediumOccupancyLimit	read-write	N		N
dot11CFPollable	read-only	N		N
dot11CFPPeriod	read-write	N		N
dot11CFPMaxDuration	read-write	N		N
dot11AuthenticationResponseTimeout	read-write	N		N
dot11PrivacyOptionImplemented	read-only	Y	RT_OID_802_11_PRIVACYOPTIONIMPLEMENTED	N
dot11PowerManagementMode	read-write	Y	RT_OID_802_11_POWERMANAGEMENTMODE	N
dot11DesiredSSID	read-write	N		N
dot11DesiredBSSType	read-write	N		N
dot11OperationalRateSet	read-write	N		N
dot11BeaconPeriod	read-write	N		N
dot11DTIMPeriod	read-write	N		N
dot11AssociationResponseTimeout	read-write	N		N
dot11DisassociateReason	read-only	N		N
dot11DisassociateStation	read-only	N		N
dot11DeauthenticateReason	read-only	N		N
dot11DeauthenticateStation	read-only	N		N
dot11AuthenticateFailStatus	read-only	N		N
dot11AuthenticateFailStation	read-only	N		N
dot11AuthenticationAlgorithmsTable	not-accessible	-		-
dot11AuthenticationAlgorithmsEntry	not-	-		-

	accessible			
dot11AuthenticationAlgorithmsIndex	not-accessible	Y		N
dot11AuthenticationAlgorithm	read-only	Y		N
dot11AuthenticationAlgorithmsEnable	read-write	Y		N
dot11WEPDefaultKeysTable	not-accessible	-		-
dot11WEPDefaultKeysEntry	not-accessible	-		-
dot11WEPDefaultKeyIndex	not-accessible	Y		N
dot11WEPDefaultKeyValue	read-write	Y	OID_802_11_WEPDEFAULTKEYVALUE	Y
dot11WEPKeyMappingsTable	not-accessible	-		-
dot11WEPKeyMappingsEntry	not-accessible	-		-
dot11WEPKeyMappingIndex	not-accessible	N		N
dot11WEPKeyMappingAddress	read-create	N		N
dot11WEPKeyMappingWEPOn	read-create	N		N
dot11WEPKeyMappingValue	read-create	N		N
dot11WEPKeyMappingStatus	read-create	N		N
dot11PrivacyTable	not-accessible	-		
dot11PrivacyEntry	not-accessible	-		
dot11PrivacyInvoked	read-write	Y		N
dot11WEPDefaultKeyID	read-write	Y	OID_802_11_WEPDEFAULTKEYID	Y
dot11WEPKeyMappingLength	read-write	Y	RT_OID_802_11_WEPKEYMAPPINGLENGTH	N
dot11ExcludeUnencrypted	read-write	N		N
dot11WEPICVErrorCount	read-only	N		N
dot11WEPExcludedCount	read-only	N		N
dot11SMTnotification	-	-		
dot11Disassociate	-	N		N
dot11Deauthenticate	-	N		N
dot11AuthenticateFail	-	N		N
dot11mac				
dot11OperationTable	not-access	-		

	ible	-		
dot11OperationEntry	not-accessible	-		
dot11MACAddress	read-only	Y	RT_OID_802_11_MAC_ADDRESS	N
dot11RTSThreshold	read-write	Y	OID_802_11_RTS_THRESHOLD	Y
dot11ShortRetryLimit	read-write	Y	OID_802_11_SHORTRETRYLIMIT	N
dot11LongRetryLimit	read-write	Y	OID_802_11_LONGRETRYLIMIT	N
dot11FragmentationThreshold	read-write	Y	OID_802_11_FRAGMENTATION_THRESHOLD	Y
dot11MaxTransmitMSDULifetime	read-write	N		N
dot11MaxReceiveLifetime	read-write	N		N
dot11ManufacturerID	read-only	Y	RT_OID_802_11_MANUFACTUREID	N
dot11ProductID	read-only	Y	RT_OID_802_11_PRODUCTID	N
dot11CountersTable	not-accessible	-		
dot11CountersEntry	not-accessible	-		
dot11TransmittedFragmentCount	read-only	Y	OID_802_11_STATISTICS	N
dot11MulticastTransmittedFrameCount	read-only	Y	OID_802_11_STATISTICS	N
dot11FailedCount	read-only	Y	OID_802_11_STATISTICS	N
dot11RetryCount	read-only	Y	OID_802_11_STATISTICS	N
dot11MultipleRetryCount	read-only	Y	OID_802_11_STATISTICS	N
dot11FrameDuplicateCount	read-only	Y	OID_802_11_STATISTICS	N
dot11RTSSuccessCount	read-only	Y	OID_802_11_STATISTICS	N
dot11RTSFailureCount	read-only	Y	OID_802_11_STATISTICS	N
dot11ACKFailureCount	read-only	Y	OID_802_11_STATISTICS	N
dot11ReceivedFragmentCount	read-only	Y	OID_802_11_STATISTICS	N
dot11MulticastReceivedFrameCount	read-only	Y	OID_802_11_STATISTICS	N
dot11FCSErrorCount	read-only	Y	OID_802_11_STATISTICS	N
dot11TransmittedFrameCount	read-only	N		N
dot11WEPUndecryptableCount	read-only	N		N
dot11GroupAddressesTable	not-accessible	-		-
dot11GroupAddressesEntry	not-accessible	-		-

dot11GroupAddressesIndex	not-accessible	N		N
dot11Address	read-create	N		N
dot11GroupAddressesStatus	read-create	N		N
dot11res				
dot11resAttribute				
dot11ResourceTypeIDName	read-only	-		
dot11ResourceInfoTable	not-accessible	-		
dot11ResourceInfoEntry	not-accessible	-		
dot11manufacturerOUI	read-only	Y	RT_OID_802_11_MANUFACTUREROUI	N
dot11manufacturerName	read-only	Y	RT_OID_802_11_MANUFACTURERNAME	N
dot11manufacturerProductName	read-only	Y	RT_OID_DEVICE_NAME	N
dot11manufacturerProductVersion	read-only	Y	RT_OID_VERSION_INFO	N
dot11phy				
dot11PhyOperationTable	not-accessible	-		
dot11PhyOperationEntry	not-accessible	-		
dot11PHYType	read-only	Y	RT_OID_802_11_PHY_MODE	N
dot11CurrentRegDomain	read-write	Y		Y
dot11TempType	read-only	N		N
dot11PhyAntennaTable	not-accessible	-		
dot11PhyAntennaEntry	not-accessible	-		
dot11CurrentTxAntenna	read-write	Y	OID_802_11_TX_ANTENNA_SELECTED	N
dot11DiversitySupport	read-only	Y	OID_802_11_RX_ANTENNA_SELECTED	N
dot11CurrentRxAntenna	read-write	Y	OID_802_11_RX_ANTENNA_SELECTED	N
dot11PhyTxPowerTable	not-accessible	-		
dot11PhyTxPowerEntry	not-accessible	-		
dot11NumberSupportedPowerLevels	read-only	N		N
dot11TxPowerLevel1	read-only	N		N
dot11TxPowerLevel2	read-only	N		N

dot11TxPowerLevel3	read-only	N		N
dot11TxPowerLevel4	read-only	N		N
dot11TxPowerLevel5	read-only	N		N
dot11TxPowerLevel6	read-only	N		N
dot11TxPowerLevel7	read-only	N		N
dot11TxPowerLevel8	read-only	N		N
dot11CurrentTxPowerLevel	read-write	N		N
dot11PhyFHSSTable	not-accessible	-		
dot11PhyFHSSEntry	not-accessible	-		
dot11HopTime	read-only	N		N
dot11CurrentChannelNumber	read-write	N		N
dot11MaxDwellTime	read-only	N		N
dot11CurrentDwellTime	read-write	N		N
dot11CurrentSet	read-write	N		N
dot11CurrentPattern	read-write	N		N
dot11CurrentIndex	read-write	N		N
dot11PhyDSSSTable	not-accessible	-		
dot11PhyDSSSEntry	not-accessible	-		
dot11CurrentChannel	read-write	Y	OID_802_11_CURRENTCHANNEL	Y
dot11CCAModeSupported	read-only	N		N
dot11CurrentCCAMode	read-write	N		N
dot11EDThreshold	read-write	N		N
dot11PhyIRTable	not-accessible	-		
dot11PhyIREntry	not-accessible	-		
dot11CCAWatchdogTimerMax	read-write	N		N
dot11CCAWatchdogCountMax	read-write	N		N
dot11CCAWatchdogTimerMin	read-write	N		N
dot11CCAWatchdogCountMin	read-write	N		N

dot11RegDomainsSupportedTable	not-accessible	-		
dot11RegDomainsSupportEntry	not-accessible	-		
dot11RegDomainsSupportIndex	not-accessible	Y		N
dot11RegDomainsSupportValue	read-only	Y		N
dot11AntennasListTable	not-accessible	-		
dot11AntennasListEntry	not-accessible	-		
dot11AntennaListIndex	not-accessible	Y		N
dot11SupportedTxAntenna	read-write	Y	OID_802_11_TX_ANTENNA_SELECTED	N
dot11SupportedRxAntenna	read-write	Y	OID_802_11_RX_ANTENNA_SELECTED	N
dot11DiversitySelectionRx	read-write	Y	OID_802_11_RX_ANTENNA_SELECTED	N
dot11SupportedDataRatesTxTable	not-accessible	-		
dot11SupportedDataRatesTxEntry	not-accessible	-		
dot11SupportedDataRatesTxIndex	not-accessible	Y		N
dot11SupportedDataRatesTxValue	read-only	Y	OID_802_11_DESIRED_RATES	N
dot11SupportedDataRatesRxTable	not-accessible	-		
dot11SupportedDataRatesRxEntry	not-accessible	-		
dot11SupportedDataRatesRxIndex	not-accessible	Y	OID_802_11_DESIRED_RATES	
dot11SupportedDataRatesRxValue	read-only	Y		
dot11PhyOFDMTable	not-accessible	-		
dot11PhyOFDMEntry	not-accessible	-		
dot11CurrentFrequency	read-write	N	OID_802_11_CURRENTCHANNEL	Y
dot11TIThreshold	read-write	N		N
dot11FrequencyBandsSupported	read-only	N		N

17.2 RALINK OID for SNMP MIB

RALINK OID for SNMP		
Value	Name	Structure
0x010B	OID_802_11_NUMBER_OF_ANTENNAS	USHORT numant;
0x010C	OID_802_11_RX_ANTENNA_SELECTED	USHORT whichant;
0x010D	OID_802_11_TX_ANTENNA_SELECTED	USHORT whichant;
0x050C	RT_OID_802_11_PHY_MODE	ULONG linfo;
0x050E	OID_802_11_DESIRED_RATES	typedef UCHAR NDIS_802_11_RATES[NDIS_802_11_LENGTH_RATES]; #define NDIS_802_11_LENGTH_RATES 8
0x0514	OID_802_11_RTS_THRESHOLD	ULONG linfo;
0x0515	OID_802_11_FRAGMENTATION_THRESHOLD	ULONG linfo;
0x0607	RT_OID_DEVICE_NAME	char name[128];
0x0608	RT_OID_VERSION_INFO	typedef struct PACKED _RT_VERSION_INFO{ UCHAR DriverVersionW; UCHAR DriverVersionX; UCHAR DriverVersionY; UCHAR DriverVersionZ; UINT DriverBuildYear; UINT DriverBuildMonth; UINT DriverBuildDay; } RT_VERSION_INFO, *PRT_VERSION_INFO;
0x060A	OID_802_3_CURRENT_ADDRESS	char addr[128];
0x060E	OID_802_11_STATISTICS	typedef struct _NDIS_802_11_STATISTICS { ULONG Length; // Length of structure ULONG TransmittedFragmentCount; ULONG MulticastTransmittedFrameCount; ULONG FailedCount; ULONG RetryCount; ULONG MultipleRetryCount; ULONG RTSSuccessCount; ULONG RTSFailureCount; ULONG ACKFailureCount; ULONG FrameDuplicateCount; ULONG ReceivedFragmentCount;

		ULONG MulticastReceivedFrameCount; ULONG FCSErrorCount; } NDIS_802_11_STATISTICS, PNDIS_802_11_STATISTICS;
0x0700	RT_OID_802_11_MANUFACTURER OUI	char oui[128];
0x0701	RT_OID_802_11_MANUFACTURER NAME	char name[128];
0x0702	RT_OID_802_11_RESOURCEYPEI DNAME	char name[128];
0x0703	RT_OID_802_11_PRIVACYOPTIONI MPLEMENTED	ULONG linfo;
0x0704	RT_OID_802_11_POWERMANAGE MENTMODE	ULONG linfo;
0x0705	OID_802_11_WEPDEFAULTKEYVAL UE	typedef struct _DefaultKeyIdxValue { UCHARKeyIdx; UCHARValue[16]; }DefaultKeyIdxValue;
0x0706	OID_802_11_WEPDEFAULTKEYID	UCHARkeyid;
0x0707	RT_OID_802_11_WEPKEYMAPPIN GLENGTH	UCHAR len;
0x0708	OID_802_11_SHORTRETRYLIMIT	ULONGlinfo;
0x0709	OID_802_11_LONGRETRYLIMIT	ULONGlinfo;
0x0710	RT_OID_802_11_PRODUCTID	char id[128];
0x0711	RT_OID_802_11_MANUFACTUREID	char id[128];
0x0712	OID_802_11_CURRENTCHANNEL	UCHAR channel
0x0713	RT_OID_802_11_MAC_ADDRESS	char macaddress[128]

18 IOCTL I/O Control Interface

18.1 Parameters for iwconfig's IOCTL

Access	Description	ID	Parameters
Get	BSSID, MAC Address	SIOCGIFHWADDR	wrq->u.name, (length = 6)
	WLAN Name	SIOCGIWNAME	wrq->u.name = "RT2800 SoftAP", length = strlen(wrq->u.name)
	SSID	SIOCGIWESSID	<pre> struct iw_point *erq = &wrq->u.essid; erq->flags=1; erq->length = pAd->PortCfg.MBSSID[pAd->loctIIF].SsidLen; if(erq->pointer) { if(copy_to_user(erq->pointer, pAd->PortCfg.MBSSID[pAd->loctIIF].Ssid, erq->length)) { Status = -EFAULT; break; } } </pre>
	Channel Frequency (Hz)	SIOCGIWFREQ	<pre> wrq->u.freq.m = pAd->PortCfg.Channel; wrq->u.freq.e = 0; wrq->u.freq.i = 0; </pre>
	Bit Rate (bps)	SIOCGIWRATE	<pre> wrq->u.bitrate.value = RateIdTo500Kbps[pAd->PortCfg.MBSSID[pAd->loctIIF].TxRate] * 500000; wrq->u.bitrate.disabled = 0; </pre>
	AP's MAC address	SIOCGIWAP	<pre> wrq->u.ap_addr.sa_family = ARPHRD_ETHER; memcpy(wrq->u.ap_addr. sa_data, &pAd->PortCfg.MBSSID[pAd->loctIIF].Bssid, ETH_ALLEN); </pre>
	Operation Mode	SIOCGIWMODE	wrq->u.mode = IW_MODE_INFRA;
	Range of Parameters	SIOCGIWRANGE	<pre> range.we_version_compiled = WIRELESS_EXT; range.we_version_source = 14; </pre>
	Scanning Results	SIOCGIWSCAN	<pre> typedef struct _NDIS_802_11_SITE_SURVEY_TABLE { LONG Channel; LONG Rssi; UCHAR Ssid[33]; UCHAR Bssid[18]; UCHAR Encrypt[8]; } NDIS_802_11_SITE_SURVEY_TABLE, *PNDIS_802_11_SITE_SURVEY_TABLE; wrq->u.data.length = N* sizeof(NDIS_802_11_SITE_SURVEY_TABLE); copy_to_user(wrq->u.data.pointer, site_survey_table, wrq->u.data.length); </pre>
	Client	SIOCGIWAPLIST	typedef struct _NDIS_802_11_STATION_TABLE

	Association List		<pre> { UCHAR MacAddr[18]; ULONG Aid; ULONG PsMode; ULONG LastDataPacketTime; ULONG RxByteCount; ULONG TxByteCount; ULONG CurrTxRate; ULONG LastTxRate; } NDIS_802_11_STATION_TABLE, *PNDIS_802_11_STATION_TABLE; wrq->u.data.length = i * sizeof(NDIS_802_11_STATION_TABLE); copy_to_user(wrq->u.data.pointer, sta_list_table, wrq->u.data.length); </pre>
Set	Trigger Scanning	SIOCSIWSCAN	ApSiteSurvey(pAd);

18.2 Parameters for iwpriv's IOCTL

Please refer section 4 and 5 to have iwpriv parameters and values.

Parameters:

```

int      socket_id;
char     name[25];           // interface name
char     data[255];         // command string
struct   iwreq wrq;

```

Default setting:

```

wrq.ifr_name = name = "ra0";    // interface name
wrq.u.data.pointer = data;      // data buffer of command string
wrq.u.data.length = strlen(data); // length of command string
wrq.u.data.flags = 0;

```

18.2.1 Iwpriv Set DATA

THESE PARAMETERS ARE THE SAME AS IWPRIV

Command and IOCTL Function		
Set Data		
Function Type	Command	IOCTL
RTPRIV_IOCTL_SET	iwpriv ra0 set SSID=RT2800AP	<pre> sprintf(name, "ra0"); strcpy(data, "SSID=RT2800AP"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq); </pre>

18.2.2 Iwpriv Get DATA

THESE PARAMETERS ARE THE SAME AS IWPRIV

Command and IOCTL Function

Get Data		
Function Type	Command	IOCTL
RTPRIV_IOCTL_STATISTICS	lwpriv ra0 stat	<pre> sprintf(name, "ra0"); strcpy(data, "stat"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_STATISTICS, &wrq); </pre>
RTPRIV_IOCTL_GSITESURVEY	lwpriv ra0 get_site_survey	<pre> sprintf(name, "ra0"); strcpy(data, "get_site_survey"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_GSITESURVEY, &wrq); </pre>
RTPRIV_IOCTL_GET_MAC_TABLE	lwpriv ra0 get_mac_table	<pre> sprintf(name, "ra0"); strcpy(data, "get_mac_table"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_GET_MAC_TABLE, &wrq); </pre>
RTPRIV_IOCTL_SHOW	lwpriv ra0 show	<pre> sprintf(name, "ra0"); strcpy(data, "get_mac_table"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq); </pre>
RTPRIV_IOCTL_WSC_PROFILE	lwpriv ra0 get_wsc_profile	<pre> sprintf(name, "ra0"); strcpy(data, "get_mac_table"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_WSC_PROFILE, &wrq); </pre>
RTPRIV_IOCTL_QUERY_BATABLE	lwpriv ra0 get_ba_table	<pre> sprintf(name, "ra0"); strcpy(data, "get_mac_table"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_QUERY_BATABLE, &wrq); </pre>

18.2.3 Iwpriv Set Data: BBP, MAC and EEPROM

Command and IOCTL Function		
Set Data: BBP, MAC and EEPROM, Parameters is Same as iwpriv		
Type	Command	IOCTL
RTPRIV_IOCTL_BBP (Set BBP Register Value)	Iwpriv ra0 bbp 17=32	<pre>sprintf(name, "ra0"); strcpy(data, " bbp 17=32"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_BBP, &wrq);</pre>
RTPRIV_IOCTL_MAC (Set MAC Register Value)	Iwpriv ra0 mac 3000=12345678	<pre>sprintf(name, "ra0"); strcpy(data, " mac 3000=12345678"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_MAC, &wrq);</pre>
RTPRIV_IOCTL_E2P (Set EEPROM Value)	Iwpriv ra0 e2p 40=1234	<pre>sprintf(name, "ra0"); strcpy(data, " e2p 40=1234"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_E2P, &wrq);</pre>

18.2.4 Iwpriv Get Data: BBP, MAC and EEPROM

Command and IOCTL Function		
Get Data: BBP, MAC and EEPROM , Parameters is Same as iwpriv		
Type	Command	IOCTL
RTPRIV_IOCTL_BBP (Get BBP Register Value)	Iwpriv ra0 bbp 17	<pre>sprintf(name, "ra0"); strcpy(data, " bbp 17"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_BBP, &wrq);</pre>
RTPRIV_IOCTL_MAC (Get MAC Register Value)	Iwpriv ra0 mac 3000	<pre>sprintf(name, "ra0"); strcpy(data, " mac 3000"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_MAC, &wrq);</pre>
RTPRIV_IOCTL_E2P	Iwpriv ra0 e2p 40	<pre>sprintf(name, "ra0");</pre>

(Get EEPROM Value)		<pre>strcpy(data, " e2p 40"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_E2P, &wrq);</pre>
--------------------	--	--

18.2.5 Iwpriv Set Raw Data

IOCTL Function	
Set Raw Data by I/O Control Interface	
Function Type	IOCTL
RTPRIV_IOCTL_RADIUS_DATA	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0x55, 100); wrq.u.data.length = 100; wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_RADIUS_DATA, &wrq);</pre>
RTPRIV_IOCTL_ADD_WPA_KEY	<pre>NDIS_802_11_KEY *vp; sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_KEY)); vp = (NDIS_802_11_KEY *)&data; vp->Length = sizeof(NDIS_802_11_KEY); memset(vp->addr, 0x11, 6); vp->KeyIndex = 2; vp->KeyLength = 32; memset(vp->KeyMaterial, 0xAA, 32); wrq.u.data.length = sizeof(NDIS_802_11_KEY); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_ADD_WPA_KEY, &wrq);</pre>
RTPRIV_IOCTL_ADD_PMKID_CACHE	<pre>NDIS_802_11_KEY *vp; sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_KEY)); vp = (NDIS_802_11_KEY *)&data; vp->Length = sizeof(NDIS_802_11_KEY); memset(vp->addr, 0x11, 6); vp->KeyIndex = 2; vp->KeyLength = 32; memset(vp->KeyMaterial, 0xBB, 32); wrq.u.data.length = sizeof(NDIS_802_11_KEY); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_ADD_PMKID_CACHE, &wrq);</pre>

18.2.6 Set Raw Data with Flags

IOCTL Function	
Set Raw Data by I/O Control Interface with Flags	
Function Type	IOCTL
RT_SET_APD_PID	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, 4); data[0] = 12; wrq.u.data.length = 4; wrq.u.data.pointer = data; wrq.u.data.flags = RT_SET_APD_PID; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_SET_DEL_MAC_ENTRY	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0xdd, 6); strcpy(wrq.ifr_name, name); wrq.u.data.length = 6; wrq.u.data.pointer = data; wrq.u.data.flags = RT_SET_DEL_MAC_ENTRY; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_WSC_SET_SELECTED_REGISTRAR	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, decodeStr, decodeLen); strcpy(wrq.ifr_name, name); wrq.u.data.length = decodeLen; wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WSC_SET_SELECTED_REGISTRAR; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_WSC_EAPMSG	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, wscU2KMsg, wscU2KMsgLen); strcpy(wrq.ifr_name, name); wrq.u.data.length = wscU2KMsgLen; wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WSC_EAPMSG; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>

18.2.7 Get Raw Data with Flags

IOCTL Function	
Get Raw Data by I/O Control Interface with Flags	
Function Type	IOCTL
RT_QUERY_ATE_TXDONE_COUNT	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data;</pre>

	<pre> wrq.u.data.flags = RT_QUERY_ATE_TXDONE_COUNT; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_QUERY_SIGNAL_CONTEXT	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_SIGNAL_STRUC)); strcpy(wrq.ifr_name, name); wrq.u.data.length = sizeof(RT_SIGNAL_STRUC); wrq.u.data.pointer = data; wrq.u.data.flags = RT_QUERY_SIGNAL_CONTEXT; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_WSC_QUERY_STATUS	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(INT)); strcpy(wrq.ifr_name, name); wrq.u.data.length = sizeof(INT); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WSC_QUERY_STATUS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_WSC_PIN_CODE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); strcpy(wrq.ifr_name, name); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WSC_PIN_CODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_WSC_UUID	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(UCHAR)); strcpy(wrq.ifr_name, name); wrq.u.data.length = sizeof(UCHAR); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WSC_UUID; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_WSC_MAC_ADDRESS	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, MAC_ADDR_LEN); strcpy(wrq.ifr_name, name); wrq.u.data.length = MAC_ADDR_LEN; wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WSC_MAC_ADDRESS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_GET_PHY_MODE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); strcpy(wrq.ifr_name, name); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_GET_PHY_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_GET_LLTD ASSO TANLE	<pre> sprintf(name, "ra0"); </pre>

	<pre> strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_LLTD ASSOICATION_TABLE)); strcpy(wrq.ifr_name, name); wrq.u.data.length = sizeof(RT_LLTD ASSOICATION_TABLE); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_GET_LLTD ASSO TANLE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
--	--

18.3 Sample user space Applications

```

=====
//
// rtuser:
// 1. User space application to demo how to use IOCTL function.
// 2. Most of the IOCTL function is defined as "CHAR" type and return with string message.
// 3. Use sscanf to get the raw data back from string message.
// 4. The command format "parameter=value" is same as iwpriv command format.
// 5. Remember to insert driver module and bring interface up prior execute rtuser.
//      change folder path to driver "Module"
//      dos2unix * ; in case the files are modified from other OS environment
//      chmod 644 *
//      chmod 755 Configure
//      make config
//      make
//      insmod RT2800ap.o
//      ifconfig ra0 up
//
// Refer Linux/if.h to have
//      #define ifr_name ifr_ifrn.ifrn_name /* interface name */
//
// Make:
//      cc -Wall -ortuser rtuser.c
//
// Run:
//      ./rtuser
//
=====

#include <stdio.h>
#include <string.h>
#include <sys/socket.h>
#include <sys/ioctl.h>
#include <unistd.h> /* for close */
#include <Linux/wireless.h>

=====

#if WIRELESS_EXT <= 11
#ifndef SIOCDEVPRIVATE
#define SIOCDEVPRIVATE 0x8BE0
#endif
#define SIOCIWFIRSTPRIV SIOCDEVPRIVATE
#endif

```

```

//
//SET/GET CONVENTION :
// * -----
// * Simplistic summary :

```

```

// *      o even numbered ioctls are SET, restricted to root, and should not
// *      return arguments (get_args = 0).
// *      o odd numbered ioctls are GET, authorised to anybody, and should
// *      not expect any arguments (set_args = 0).
//
#define RT_PRIV_IOCTL          (SIOCIWFIRSTPRIV + 0x01)
#define RTPRIV_IOCTL_SET      (SIOCIWFIRSTPRIV + 0x02)
#define RTPRIV_IOCTL_BBP      (SIOCIWFIRSTPRIV + 0x03)
#define RTPRIV_IOCTL_MAC      (SIOCIWFIRSTPRIV + 0x05)
#define RTPRIV_IOCTL_E2P      (SIOCIWFIRSTPRIV + 0x07)
#define RTPRIV_IOCTL_STATISTICS (SIOCIWFIRSTPRIV + 0x09)
#define RTPRIV_IOCTL_ADD_PMKID_CACHE (SIOCIWFIRSTPRIV + 0x0A)
#define RTPRIV_IOCTL_RADIUS_DATA (SIOCIWFIRSTPRIV + 0x0C)
#define RTPRIV_IOCTL_GSITESURVEY (SIOCIWFIRSTPRIV + 0x0D)
#define RTPRIV_IOCTL_ADD_WPA_KEY (SIOCIWFIRSTPRIV + 0x0E)
#define RTPRIV_IOCTL_GET_MAC_TABLE (SIOCIWFIRSTPRIV + 0x0F)

#define OID_GET_SET_TOGGLE      0x8000

#define RT_QUERY_ATE_TXDONE_COUNT 0x0401
#define RT_QUERY_SIGNAL_CONTEXT 0x0402
#define RT_SET_APD_PID (OID_GET_SET_TOGGLE + 0x0405)
#define RT_SET_DEL_MAC_ENTRY (OID_GET_SET_TOGGLE + 0x0406)

//-----

#ifndef TRUE
#define TRUE 1
#endif

#ifndef FALSE
#define FALSE 0
#endif

#define MAC_ADDR_LEN 6
#define ETH_LENGTH_OF_ADDRESS 6
#define MAX_LEN_OF_MAC_TABLE 64

//-----

typedef struct _COUNTERS
{
    unsigned long TxSuccessTotal;;
    unsigned long TxSuccessWithRetry;
    unsigned long TxFailWithRetry;
    unsigned long RtsSuccess;
    unsigned long RtsFail;
    unsigned long RxSuccess;
    unsigned long RxWithCRC;
    unsigned long RxDropNoBuffer;
    unsigned long RxDuplicateFrame;
    unsigned long FalseCCA;
    unsigned long RssiA;
    unsigned long RssiB;
} COUNTERS;

```

PS. User can check with “iwpriv ra0 stat” to make sure the TXRX status is correct when porting the ATE related test program.

```

//-----

```

```

typedef struct _SITE_SURVEY
{
    unsigned char        channel;
    unsigned short       rssi;
    unsigned char        ssid[33];
    unsigned char        bssid[6];
    unsigned char        security[9];
}    SITE_SURVEY;

//-----

typedef union _MACHTTTRANSMIT_SETTING {
    struct {
        unsigned short    MCS:7;           // MCS
        unsigned short    BW:1;           //channel bandwidth 20MHz or 40 MHz
        unsigned short    ShortGI:1;
        unsigned short    STBC:2;         //SPACE
        unsigned short    rsv:3;
        unsigned short    MODE:2;        // Use definition MODE_xxx.
    }    field;
    unsigned short        word;
}    MACHTTTRANSMIT_SETTING, *PMACHTTTRANSMIT_SETTING;

typedef struct _RT_802_11_MAC_ENTRY {
    unsigned char        Addr[6];
    unsigned char        Aid;
    unsigned char        Psm;             // 0:PWR_ACTIVE, 1:PWR_SAVE
    unsigned char        MimoPs;         // 0:MMPS_STATIC, 1:MMPS_DYNAMIC, 3:MMPS_Enabled
    MACHTTTRANSMIT_SETTING TxRate;
}    RT_802_11_MAC_ENTRY, *PRT_802_11_MAC_ENTRY;

typedef struct _RT_802_11_MAC_TABLE {
    unsigned long        Num;
    RT_802_11_MAC_ENTRY Entry[MAX_LEN_OF_MAC_TABLE];
}    RT_802_11_MAC_TABLE, *PRT_802_11_MAC_TABLE;

// Key mapping keys require a BSSID
typedef struct _NDIS_802_11_KEY
{
    unsigned long        Length;          // Length of this structure
    unsigned char        addr[6];
    unsigned long        KeyIndex;
    unsigned long        KeyLength;       // length of key in bytes
    unsigned char        KeyMaterial[32]; // variable length depending on above field
}    NDIS_802_11_KEY, *PNDIS_802_11_KEY;

typedef struct _RT_SIGNAL_STRUC {
    unsigned short        Sequence;
    unsigned char        MacAddr[MAC_ADDR_LEN];
    unsigned char        CurrAPAddr[MAC_ADDR_LEN];
    unsigned char        Sig;
}    RT_SIGNAL_STRUC, *PRT_SIGNAL_STRUC;

//-----

COUNTERS                counter;
SITE_SURVEY             SiteSurvey[100];
char                    data[4096];

//=====

```

```

int main( int argc, char ** argv )
{
    char            name[25];
    int             socket_id;
    struct iwreq wrq;
    int             ret;

    // open socket based on address family: AF_INET -----
    socket_id = socket(AF_INET, SOCK_DGRAM, 0);
    if(socket_id < 0)
    {
        printf("\nrtuser::error::Open socket error!\n\n");
        return -1;
    }

    // set interface name as "ra0" -----
    sprintf(name, "ra0");
    memset(data, 0x00, 255);

//
//example of iwconfig ioctl function =====
//

    // get wireless name -----
    strcpy(wrq.ifr_name, name);
    wrq.u.data.length = 255;
    wrq.u.data.pointer = data;
    wrq.u.data.flags = 0;
    ret = ioctl(socket_id, SIOCGIWNAME, &wrq);
    if(ret != 0)
    {
        printf("\nrtuser::error::get wireless name\n\n");
        goto rtuser_exit;
    }

    printf("\nrtuser[%s]:%s\n", name, wrq.u.name);

//
//example of iwpriv ioctl function =====
//

    //WPAPSK, remove "set" string -----
    memset(data, 0x00, 255);
    strcpy(data, "WPAPSK=11223344");
    strcpy(wrq.ifr_name, name);
    wrq.u.data.length = strlen(data)+1;
    wrq.u.data.pointer = data;
    wrq.u.data.flags = 0;
    ret = ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq);
    if(ret != 0)
    {
        printf("\nrtuser::error::set wpa-psk\n\n");
        goto rtuser_exit;
    }

    //set e2p, remove "e2p" string -----
    memset(data, 0x00, 255);
    strcpy(data, "80=1234");
    strcpy(wrq.ifr_name, name);
    wrq.u.data.length = strlen(data)+1;
    wrq.u.data.pointer = data;
    wrq.u.data.flags = 0;
    ret = ioctl(socket_id, RTPRIV_IOCTL_E2P, &wrq);
    if(ret != 0)

```

```

{
    printf("\nrtuser::error::set eeprom\n\n");
    goto rtuser_exit;
}

//printf("\n%s\n", wrq.u.data.pointer);
{
    int addr, value, p1;

    // string format: "\n[0x%02X]:0x%04X " ==> "[0x20]:0x0C02"
    sscanf(wrq.u.data.pointer, "\n[%dx%02X]:%04X ", &p1, &addr, &value);
    printf("\nSet EEP[0x%02X]:0x%04X\n", addr, value);
}

//get e2p, remove "e2p" string -----
memset(data, 0x00, 255);
strcpy(data, "80");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = strlen(data)+1;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_E2P, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::get eeprom\n\n");
    goto rtuser_exit;
}

//printf("\n%s\n", wrq.u.data.pointer);
{
    int addr, value, p1, p2;

    // string format: "\n[0x%02X]:0x%04X " ==> "[0x20]:0x0C02"
    sscanf(wrq.u.data.pointer, "\n[%dx%04X]:%dx%X ", &p1, &addr, &p2, &value);
    printf("\nGet EEP[0x%02X]:0x%04X\n", addr, value);
}

//set mac, remove "mac" string -----
memset(data, 0x00, 255);
strcpy(data, "2b4f=1");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = strlen(data)+1;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_MAC, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::set mac register\n\n");
    goto rtuser_exit;
}

//printf("\n%s\n", wrq.u.data.pointer);
{
    int addr, value, p1;

    // string format: "\n[0x%02X]:0x%04X " ==> "[0x20]:0x0C02"
    sscanf(wrq.u.data.pointer, "\n[%dx%08X]:%08X ", &p1, &addr, &value);
    printf("\nSet MAC[0x%08X]:0x%08X\n", addr, value);
}

```

//get mac, remove "mac" string -----

```
memset(data, 0x00, 255);
strcpy(data, "2b4f");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = strlen(data)+1;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_MAC, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::get mac register\n\n");
    goto rtuser_exit;
}
```

//printf("\n%s\n", wrq.u.data.pointer);

```
{
    int addr, value, p1;

    // string format: "\n[0x%02X]:0x%04X " ==> "[0x20]:0x0C02"
    sscanf(wrq.u.data.pointer, "\n[%dx%08X]:%08X ", &p1, &addr, &value);
    printf("\nGet MAC[0x%08X]:0x%08X\n", addr, value);
}
```

//set bbp, remove "bbp" string -----

```
memset(data, 0x00, 255);
strcpy(data, "17=32");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = strlen(data)+1;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_BBP, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::set bbp register\n\n");
    goto rtuser_exit;
}

//printf("\n%s\n", wrq.u.data.pointer);
{
    int id, addr, value, p1;

    // string format: "\n[0x%02X]:0x%04X " ==> "[0x20]:0x0C02"
    sscanf(wrq.u.data.pointer, "\nR%02d[%dx%02X]:%02X\n", &id, &p1, &addr, &value);
    printf("\nSet BBP R%02d[0x%02X]:0x%02X\n", id, addr, value);
}
```

//get bbp, remove "bbp" string -----

```
memset(data, 0x00, 255);
strcpy(data, "17");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = strlen(data)+1;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_BBP, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::get bbp register\n\n");
    goto rtuser_exit;
}
```

```

//printf("\n%s\n", wrq.u.data.pointer);
{
    int id, addr, value, p1;

    // string format: "\n[0x%02X]:0x%04X " ==> "[0x20]:0x0C02"
    sscanf(wrq.u.data.pointer, "\nR%02d[%dx%02X]:%02X ", &id, &p1, &addr, &value);
    printf("\nGet BBP R%02d[0x%02X]:0x%02X\n", id, addr, value);
}

//get statistics, remove "stat" string -----
memset(data, 0x00, 2048);
strcpy(data, "");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = 0;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_STATISTICS, &wrq);
if(ret != 0)
{
    printf("\rtuser::error::get statistics\n\n");
    goto rtuser_exit;
}

printf("\n===== Get AP Statistics =====\n");
{
    int i;
    char *sp = wrq.u.data.pointer;
    unsigned long *cp = (unsigned long *)&counter;

    for (i = 0 ; i < 13 ; i++)
    {
        sp = strstr(sp, "=");
        sp = sp+2;
        sscanf(sp, "%ul", (unsigned int *)&cp[i]);
    }

    printf("Tx success                                = %u\n", (unsigned int)counter.TxSuccessTotal);
    printf("Tx success without retry                        = %u\n", (unsigned int)
counter.TxSuccessWithoutRetry);
    printf("Tx success after retry                          = %u\n", (unsigned int)counter.TxSuccessWithRetry);
    printf("Tx fail to Rcv ACK after retry                  = %u\n", (unsigned int)counter.TxFailWithRetry);
    printf("RTS Success Rcv CTS                            = %u\n", (unsigned int)counter.RtsSuccess);
    printf("RTS Fail Rcv CTS                              = %u\n", (unsigned int)counter.RtsFail);
    printf("Rx success                                      = %u\n", (unsigned int)counter.RxSuccess);
    printf("Rx with CRC                                    = %u\n", (unsigned int)counter.RxWithCRC);
    printf("Rx drop due to out of resource= %u\n", (unsigned int)counter.RxDropNoBuffer);
    printf("Rx duplicate frame                             = %u\n", (unsigned int)counter.RxDuplicateFrame);
    printf("False CCA (one second)                        = %u\n", (unsigned int)counter.FalseCCA);
    printf("RSSI-A                                          = %d\n", ( signed int)counter.RssiA);
    printf("RSSI-B (if available)                         = %d\n", ( signed int)counter.RssiB);
}

#if 0
//set AP to do site survey, remove "set" string -----
memset(data, 0x00, 255);
strcpy(data, "SiteSurvey=1");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = strlen(data)+1;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;

```



```

ret = ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq);

#endif

//get AP's site survey, remove "get_site_survey" string -----
memset(data, 0x00, 2048);
strcpy(data, "");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = 4096;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_GSITESURVEY, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::get site survey\n\n");
    goto rtuser_exit;
}

//printf("\n%s\n", wrq.u.data.pointer);
printf("\n===== Get Site Survey AP List =====");
if(wrq.u.data.length > 0)
{
    int i, apCount;
    char *sp, *op;
    int len = wrq.u.data.length;

    op = sp = wrq.u.data.pointer;
    sp = sp+1+8+8+35+19+8+1;
    i = 0;
    // santy check
    // 1. valid char data
    // 2. rest length is larger than per line length ==> (1+8+8+35+19+8+1)
    while(*sp && ((len - (sp-op)) > (1+8+8+35+19+8)))
    {
        //if(*sp++ == '\n')
        //    continue;
        //printf("\n\nAP Count: %d\n", i);

        sscanf(sp, "%d", (int *)&SiteSurvey[i].channel);
        //printf("channel: %d\n", SiteSurvey[i].channel);

        sp = strstr(sp, "-");
        sscanf(sp, "-%d", (int *)&SiteSurvey[i].rssi);
        //printf("rssi: %d\n", SiteSurvey[i].rssi);

        sp = sp+8;
        strncpy((char *)&SiteSurvey[i].ssid, sp, 32);
        SiteSurvey[i].ssid[32] = '\0';
        //printf("ssid: %s\n", SiteSurvey[i].ssid);

        sp = sp+35;
        sscanf(sp, "%02x:%02x:%02x:%02x:%02x",
            (int *)&SiteSurvey[i].bssid[0], (int *)&SiteSurvey[i].bssid[1],
            (int *)&SiteSurvey[i].bssid[2], (int *)&SiteSurvey[i].bssid[3],
            (int *)&SiteSurvey[i].bssid[4], (int *)&SiteSurvey[i].bssid[5]);
        //printf("bssid: %02x:%02x:%02x:%02x:%02x:%02x\n",
        //    SiteSurvey[i].bssid[0], SiteSurvey[i].bssid[1],
        //    SiteSurvey[i].bssid[2], SiteSurvey[i].bssid[3],
        //    SiteSurvey[i].bssid[4], SiteSurvey[i].bssid[5]);

        sp = sp+19;
    }
}

```

```

        strncpy((char *)&SiteSurvey[i].security, sp, 8);
        SiteSurvey[i].security[8] = '\0';
        //printf("security: %s\n", SiteSurvey[i].security);

        sp = sp+8+1;
        i = i+1;
    }

    apCount = i;
    printf("\n%-4s%-8s%-8s%-35s%-20s%-8s\n",
        "AP", "Channel", "RSSI", "SSID", "BSSID", "Security");
    for(i = 0 ; i < apCount ; i++)
    {
        //4+8+8+35+20+8
        printf("%-4d", i+1);
        printf("%-8d", SiteSurvey[i].channel);
        printf("%-7d", SiteSurvey[i].rssi);
        printf("%-35s", SiteSurvey[i].ssid);
        printf("%02X:%02X:%02X:%02X:%02X:%02X ",
            SiteSurvey[i].bssid[0], SiteSurvey[i].bssid[1],
            SiteSurvey[i].bssid[2], SiteSurvey[i].bssid[3],
            SiteSurvey[i].bssid[4], SiteSurvey[i].bssid[5]);
        printf("%-8s\n", SiteSurvey[i].security);
    }
}

//get AP's mac table, remove "get_mac_table" string -----
memset(data, 0x00, 2048);
strcpy(data, "");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = 2048;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_GET_MAC_TABLE, &wrq);
if(ret != 0)
{
    printf("\nruser::error::get mac table\n\n");
    goto ruser_exit;
}

printf("\n===== Get Associated MAC Table =====");
{
    RT_802_11_MAC_TABLE *mp;
    int i;

    mp = (RT_802_11_MAC_TABLE *)wrq.u.data.pointer;
    printf("\n%-4s%-20s%-4s%-10s%-10s%-10s\n",
        "AID", "MAC_Address", "PSM", "LastTime", "RxByte", "TxByte");

    for(i = 0 ; i < mp->Num ; i++)
    {
        printf("%-4d", mp->Entry[i].Aid);
        printf("%02X:%02X:%02X:%02X:%02X:%02X ",
            mp->Entry[i].Addr[0], mp->Entry[i].Addr[1],
            mp->Entry[i].Addr[2], mp->Entry[i].Addr[3],
            mp->Entry[i].Addr[4], mp->Entry[i].Addr[5]);
        printf("%-4d", mp->Entry[i].Psm);
        printf("%-10u", (unsigned int)mp->Entry[i].HSCounter.LastDataPacketTime);
        printf("%-10u", (unsigned int)mp->Entry[i].HSCounter.TotalRxByteCount);
        printf("%-10u", (unsigned int)mp->Entry[i].HSCounter.TotalTxByteCount);
        printf("\n");
    }
}

```

```

    }
    printf("\n");
}

//set: raw data
//      RTPRIV_IOCTL_RADIUS_DATA
//      RTPRIV_IOCTL_ADD_WPA_KEY
//      RTPRIV_IOCTL_ADD_PMKID_CACHE

//set RADIUS Data -----
printf("\nrtuser::set radius data\n\n");
memset(data, 0x55, 100);
strcpy(wrq.ifr_name, name);
wrq.u.data.length = 100;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_RADIUS_DATA, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::set radius data\n\n");
    goto rtuser_exit;
}

//add WPA Key -----
printf("\nrtuser::add wpa key\n\n");
{
    NDIS_802_11_KEY    *vp;

    memset(data, 0, sizeof(NDIS_802_11_KEY));
    vp = (NDIS_802_11_KEY *)&data;

    vp->Length = sizeof(NDIS_802_11_KEY);
    memset(vp->addr, 0x11, 6);
    vp->KeyIndex = 2;
    vp->KeyLength = 32;
    memset(vp->KeyMaterial, 0xAA, 32);

    strcpy(wrq.ifr_name, name);
    wrq.u.data.length = sizeof(NDIS_802_11_KEY);
    wrq.u.data.pointer = data;
    wrq.u.data.flags = 0;
    ret = ioctl(socket_id, RTPRIV_IOCTL_ADD_WPA_KEY, &wrq);
    if(ret != 0)
    {
        printf("\nrtuser::error::add wpa key\n\n");
        goto rtuser_exit;
    }
}

//add PMKID CACHE -----
printf("\nrtuser::add PMKID_CACHE\n\n");
{
    NDIS_802_11_KEY    *vp;

    memset(data, 0, sizeof(NDIS_802_11_KEY));
    vp = (NDIS_802_11_KEY *)&data;

    vp->Length = sizeof(NDIS_802_11_KEY);
    memset(vp->addr, 0x11, 6);
    vp->KeyIndex = 2;

```

```

vp->KeyLength = 32;
memset(vp->KeyMaterial, 0xBB, 32);

strcpy(wrq.ifr_name, name);
wrq.u.data.length = sizeof(NDIS_802_11_KEY);
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_ADD_PMKID_CACHE, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::add PMKID_CACHE\n\n");
    goto rtuser_exit;
}
}

```

//set: raw data

```

//      RT_SET_APD_PID
//      RT_SET_DEL_MAC_ENTRY

```

//set APD_PID -----

```

printf("\nrtuser::set APD_PID\n\n");
memset(data, 0, 4);
data[0] = 12;
strcpy(wrq.ifr_name, name);
wrq.u.data.length = 4;
wrq.u.data.pointer = data;
wrq.u.data.flags = RT_SET_APD_PID;
ret = ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::set APD_PID\n\n");
    goto rtuser_exit;
}

```

//set DEL_MAC_ENTRY -----

```

printf("\nrtuser::set DEL_MAC_ENTRY\n\n");
memset(data, 0xdd, 6);
strcpy(wrq.ifr_name, name);
wrq.u.data.length = 6;
wrq.u.data.pointer = data;
wrq.u.data.flags = RT_SET_DEL_MAC_ENTRY;
ret = ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::set DEL_MAC_ENTRY\n\n");
    goto rtuser_exit;
}

```

//get: raw data

```

//      RT_QUERY_ATE_TXDONE_COUNT
//      RT_QUERY_SIGNAL_CONTEXT

```

//get ATE_TXDONE_COUNT -----

```

printf("\nrtuser::get ATE_TXDONE_COUNT\n\n");
memset(data, 0, 4);
strcpy(wrq.ifr_name, name);
wrq.u.data.length = 4;
wrq.u.data.pointer = data;
wrq.u.data.flags = RT_QUERY_ATE_TXDONE_COUNT;
ret = ioctl(socket_id, RT_PRIV_IOCTL, &wrq);

```

```

if(ret != 0)
{
    printf("\nrtuser::error::get ATE_TXDONE_COUNT\n\n");
    goto rtuser_exit;
}
printf("\nATE_TXDONE_COUNT:: %08lx\n\n", (unsigned long)*wrq.u.data.pointer);

//get SIGNAL_CONTEXT -----
printf("\nrtuser::get SIGNAL_CONTEXT\n\n");
{
    RT_SIGNAL_STRUC          *sp;

    memset(data, 0, sizeof(RT_SIGNAL_STRUC));
    strcpy(wrq.ifr_name, name);
    wrq.u.data.length = sizeof(RT_SIGNAL_STRUC);
    wrq.u.data.pointer = data;
    wrq.u.data.flags = RT_QUERY_SIGNAL_CONTEXT;
    ret = ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
    if(ret != 0)
    {
        printf("\nrtuser::error::get SIGNAL_CONTEXT\n\n");
        goto rtuser_exit;
    }
    sp = (RT_SIGNAL_STRUC *)wrq.u.data.pointer;
    printf("\n===== SIGNAL_CONTEXT =====\n\n");
    printf("Sequence   = 0x%04x\n", sp->Sequence);
    printf("Mac.Addr    = %02x:%02x:%02x:%02x:%02x:%02x\n",
        sp->MacAddr[0], sp->MacAddr[1],
        sp->MacAddr[2], sp->MacAddr[3],
        sp->MacAddr[4], sp->MacAddr[5]);
    printf("CurrAP.Addr = %02x:%02x:%02x:%02x:%02x:%02x\n",
        sp->CurrAPAddr[0], sp->CurrAPAddr[1],
        sp->CurrAPAddr[2], sp->CurrAPAddr[3],
        sp->CurrAPAddr[4], sp->CurrAPAddr[5]);

    printf("Sig      = %d\n\n", sp->Sig);
}

//SSID, remove "set" string -----
memset(data, 0x00, 255);
strcpy(data, "SSID=rtuser");
strcpy(wrq.ifr_name, name);
wrq.u.data.length = strlen(data)+1;
wrq.u.data.pointer = data;
wrq.u.data.flags = 0;
ret = ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq);
if(ret != 0)
{
    printf("\nrtuser::error::set SSID\n\n");
    goto rtuser_exit;
}

rtuser_exit:
if (socket_id >= 0)
    close(socket_id);

if(ret)
    return ret;
else
    return 0;
}

```

19 SingleSKU Example file (New feature for MT76XX)

19.1 2.4GHz example SingleSKU.dat

```
# Single SKU Max Power Table
# |CCK 1~11 || OFDM 6 ~ 54 || HT20 MCS 0 ~ 15 || HT40 MCS 0 ~ 15 |
ch1 23 23 23 23 21 21 21 21 21 20 20 16 16 16 16 16 16 16 16 16 16 16 16 16
ch2 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch3 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch4 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch5 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch6 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch7 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch8 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch9 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch10 23 23 23 23 22 22 22 22 22 20 20 17 17 17 17 17 17 17 17 17 17 17 17 17
ch11 23 23 23 23 19 19 19 19 19 19 19 17 17 17 17 17 17 17 17 17 17 17 17 17
ch12 23 23 23 23 19 19 19 19 19 19 19 17 17 17 17 17 17 17 17 17 17 17 17 17
ch13 23 23 23 23 19 19 19 19 19 19 19 17 17 17 17 17 17 17 17 17 17 17 17 17
ch14 23 23 23 23
```

Note: default SingleSKU profile path in driver is defined “/etc_ro/Wireless/RT2860AP/SingleSKU.dat”

For the detailed usage of SingleSKU in profile support, please refer to the MTK_SingleSKU_InProfile_User_manual.pdf and contact with MTK support windows.

19.2 5GHz example SingleSKU.dat

```
# Single SKU Max Power Table
# OFDM 6 ~ 54 || HT20 MCS 0 ~ 15 || HT40 MCS 0 ~ 15 || VHT80
MCS 0 ~ 9 |
ch36 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13
13 13 13 13 13
ch38 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch40 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch42 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch44 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch46 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch48 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch52 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch54 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch56 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch58 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch60 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch62 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15 15
13 13 13 13 13
ch64 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13
13 13 13 13 13
ch100 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13 13
13 13 13 13 13
```

Note: default SingleSKU profile path in driver is defined “/etc_ro/Wireless/RT2860AP/SingleSKU.dat”

MediaTek Confidential

Page 167 of 173

Unauthorized reproduction or disclosure of this information in whole or in part is strictly prohibited.

20 Q&A

20.1 Why WPA2PSK can not work?

Please make sure the parameter "DefaultKeyID" is set to 2 in configuration file

20.2 How to switch driver to operate in A band?

Make sure the IC supports A band.
Check parameter "WirelessMode" is set to support A band.
Channel set to 36, 40.....

20.3 When I set channel as 1, but it will appear in channel 3. Why?

Make sure the channel is match with CountryRegion or CountryRegionABand.

20.4 How can I know the version of the WLAN Driver?

Check the definition of DRIVER_VERSION in rt_config.h.
Use command "iwpriv ra0 set DriverVersion=0", it will export to debug console.

20.5 Can SoftAP support Antenna diversity?

No SoftAP can not support antenna diversity even EEPROM has set antenna enabled.

20.6 Can you tell me what is 11n Bit Rate Derivation?

The BitRate of 11n need below information on MAC driver and the real rates will be triggered by PHY layer depends on below three factors.

- a. MCS
- b. BW
- c. GI

Bandwidth: Data subcarriers on different bandwidth, 20MHz and 40MHz.

- a. N_{SD} : Number of data subcarriers.
 $N_{SD}[40\text{MHz}] = 108$
 $N_{SD}[20\text{MHz}] = 52$
 $N_{SD}[40\text{MHz}] / N_{SD}[20\text{MHz}] = 108/52$
 $= 2.0769230769230769230769230769231$

Example:

$$\begin{aligned} \text{MCS}=15, \text{GI}=800\text{ns}, \text{BW}=20\text{MHz}, \text{DataRate} &= 130\text{Mbps} \\ \text{MCS}=15, \text{GI}=800\text{ns}, \text{BW}=40\text{MHz}, \text{DataRate} &= 130 * [N_{sd}(40\text{MHz}) / N_{sd}(20\text{MHz})] \end{aligned}$$

$$= 130 * [108 / 52]$$

$$= 270\text{Mbps}$$

b. Please refer to "IEEE P802.11n/D2.04, June 2007" on page 314 for below table.

Table 207—MCS parameters for optional 20 MHz $N_{SS} = 2$, $N_{ES} = 1$, EQM (#665)

MCS Index	Modulation	R	N _{BPS} (iss)	N _{SD}	N _{SP}	N _{CBPS}	N _{DBPS}	Data rate (Mb/s)	
								800 ns GI	400 ns GI See NOTE
8	BPSK	1/2	1	52	4	104	52	13.0	14.4
9	QPSK	1/2	2	52	4	208	104	26.0	28.9
10	QPSK	3/4	2	52	4	208	156	39.0	43.3
11	16-QAM	1/2	4	52	4	416	208	52.0	57.8
12	16-QAM	3/4	4	52	4	416	312	78.0	86.7
13	64-QAM	2/3	6	52	4	624	416	104.0	115.6
14	64-QAM	3/4	6	52	4	624	468	117.0	130.0
15	64-QAM	5/6	6	52	4	624	520	130.0	144.4

NOTE—The 400 ns GI rate values are rounded to 1 decimal place

1. Guard Interval.

a. Definition:

$T_{\text{sym}} = 4\mu\text{s}$, Symbol Interval

$T_{\text{syms}} = 3.6\mu\text{s}$, Symbol interval of Short GI.

b. Ratio of symbol interval on GI, refer to below EWC PHY Sepc.

$$T_{\text{sym}} / T_{\text{syms}} = 4\mu\text{sec} / 3.6\mu\text{sec}$$

$$= 10/9$$

Example:

MCS=15, 40MHz Bandwidth, and 400ns Short Guard Interval.

$$270.0 * (10/9) = 300.0 \text{ for Short GI.}$$

c. Reference:

1) IEEE 802.11n draft 2.04, page 316 and

Table 211—MCS parameters for optional 40 MHz, $N_{SS} = 2$, $N_{ES} = 1$, EQM (#665)

MCS Index	Modulation	R	N _{BPS} (iss)	N _{SD}	N _{SP}	N _{CBPS}	N _{DBPS}	Data rate (Mb/s)	
								800 ns GI	400 ns GI
8	BPSK	1/2	1	108	6	216	108	27.0	30.0
9	QPSK	1/2	2	108	6	432	216	54.0	60.0
10	QPSK	3/4	2	108	6	432	324	81.0	90.0
11	16-QAM	1/2	4	108	6	864	432	108.0	120.0
12	16-QAM	3/4	4	108	6	864	648	162.0	180.0
13	64-QAM	2/3	6	108	6	1296	864	216.0	240.0
14	64-QAM	3/4	6	108	6	1296	972	243.0	270.0
15	64-QAM	5/6	6	108	6	1296	1080	270.0	300.0



Parameter	Value in legacy 20MHz channel	Value in 20MHz HT channel	Value in 40MHz channel
			HT format Legacy Duplicate
frequency spacing			
T_{FFT}: IFFT/FFT period	3.2μsec	3.2μsec	3.2μsec
T_{GI}: Guard Interval length	0.8μsec = T _{FFT} /4	0.8μsec	0.8μsec
T_{GI2}: Double GI	1.6μsec	1.6μsec	1.6μsec
T_{GIS}: Short Guard Interval length	0.4μsec = T _{FFT} /8	0.4μsec	0.4μsec
T_{L-STF}: Legacy Short training sequence length	8μsec = 10 × T _{FFT} /4	8μsec	8μsec
T_{L-LTF}: Legacy Long training sequence length	8μsec = 2 × T _{FFT} + T _{GI2}	8μsec	8μsec
T_{SYM}: Symbol Interval	4μsec = T _{FFT} + T _{GI}	4μsec	4μsec
T_{SYMS}: Short GI Symbol Interval	3.6μsec = T _{FFT} + T _{GIS}	3.6μsec	3.6μsec
T_{L-SIG}	4μsec = T _{SYM}	4μsec	4μsec



transmission for a period of corresponding to the length of the rest of the packet. When L-SIG TXOP Protection is not used (see "L-SIG TXOP Protection" section of the EWC MAC spec), the value to be transmitted is $l = 3(\lceil N_{data} \rceil + N_{LTF} + 3) - 3$ where N_{data} is the number of 4μsec symbols in the data part of the packet. While using short GI N_{data} is equal to the actual number of symbols in the data part of the packet multiplied by $\frac{9}{10}$. N_{LTF} is the number of HT training symbols. The symbol $\lceil x \rceil$ denotes the lowest integer greater or equal to x .

20.7 FixTxMode iwpriv command samples

11 B only Mode:

```
iwpriv ra0 set HtOpMode=1
iwpriv ra0 set FixedTxMode=1
iwpriv ra0 set WirelessMode=1
iwpriv ra0 set HtMcs=2
iwpriv ra0 set BasicRate=3
iwpriv ra0 set SSID=RT3052_AP
```

11 G only Mode:

```
iwpriv ra0 set HtOpMode=0
iwpriv ra0 set FixedTxMode=2
iwpriv ra0 set WirelessMode=4
```

iwpriv ra0 set HtMcs=5
iwpriv ra0 set BasicRate=351
iwpriv ra0 set SSID=RT3052_AP

11 N only Mode:

iwpriv ra0 set HtOpMode=1
iwpriv ra0 set FixedTxMode=0
iwpriv ra0 set WirelessMode=6
iwpriv ra0 set HtMcs=13
iwpriv ra0 set BasicRate=15
iwpriv ra0 set SSID=RT3052_AP

11 B/G/N mixed Mode:

iwpriv ra0 set HtOpMode=0
iwpriv ra0 set FixedTxMode=0
iwpriv ra0 set WirelessMode=9
iwpriv ra0 set HtMcs=5
iwpriv ra0 set BasicRate=15
iwpriv ra0 set SSID=RT3052_AP

20.8 DFS Test example

Case 1: Band 2 & 3 select one channel for test

Test Condition:

Run 30% throughput between STA and AP.

DFS Debug command:

iwpriv ra0 set RadarDebug=0x10

DFS CE certification setting in the profile:

IEEE80211H=1
DfsOutdoor=0
RDRegion=CE
CountryCode=GB

Result:

All major test items are all passed.

Case 2: Band 2 & 3 select one channel for test.

Test condition:

Run video stream throughput between STA and AP. (Set AP Fix Tx Rate to MCS0)
Bandwidth setting 20MHz and 20/40MHz Auto.

DFS Debug command:

MediaTek Confidential

© 2013 MediaTek Inc.

Page 171 of 173

This document contains information that is proprietary to MediaTek Inc.
Unauthorized reproduction or disclosure of this information in whole or in part is strictly prohibited.

iwpriv ra0 set RadarDebug=0x10

DFS FCC certification setting in the profile:

IEEE80211H=1
DfsOutdoor=0
RDRegion=FCC
CountryCode=US

Result:

When Radar signal run in 5498~5502MHz, Radar type 3 & 4 fail in BW 40MHz test.
Radar type 1 fail in BW 20MHz test, Recommend to make the Radar signal run in 5495~5525MHz with BW 40MHz test. In 5494~5506MHz in BW 20MHz test. All major test items are all passed.

Case 3: Detect DFS signal without move channel. (For Lab testing)

Command Example:

iwpriv ra0 set Debug=3
iwpriv ra0 set Channel=100
iwpriv ra0 set RadarDebug=0x10
iwpriv ra0 set ChMovTime=2
iwpriv ra0 set DfsSwDisable=0

Result:

When Radar signals run in channel 100, the AP will display DFS detected information on the console.

DFS detected console log may look like below:

DFS HW check channel = 0x4
T= XXXXX W= XXX detected by ch 2

20.9 New BSSID Mode MAC Address Limitation (for RT55XX/RT53XX series)

When the NEW_MBSS_MODE is enabled, HW uses the byte0 of MAC address to distinguish different BSSID.

1. The Bit0 of MAC address Byte0 is broadcast/multicast bit.
2. The Bit1 of MAC address Byte0 is local administration bit and should be set to 1 in extended multiple BSSIDs'.
3. The Bit5:Bit2 of MAC address Byte0 is extended multiple BSSID index if the 16 MBSS mode is set.

Please follow the bit-reserved rule as below,

The bit5 ~ bit2 of Byte0 need to be reserved as 0 in 16 MBSS mode.

The bit4 ~ bit2 of Byte0 need to be reserved as 0 in 8 MBSS mode.

The bit3 ~ bit2 of Byte0 need to be reserved as 0 in 4 MBSS mode.

The bit2 of Byte0 need to be reserved as 0 in 2 MBSS mode.

20.10 TX & RX performance is always unbalance

When encounter TX & RX performance unbalance issue during Wi-Fi performance test, please check the TxBurst option is off or on. When TxBurst is on, the TX packets will have higher priority than RX packets. In the result, the WLAN TX performance will be higher than RX. This problem usual appears in Fast Ethernet + WLAN solution. GiGaBit Ethernet + WLAN solution doesn't have such problem.

How to turn off TxBurst?

By Profile:

TxBurst=0

By iwpriv command:

iwpriv ra0 set TxBurst=0