

# Serial

Ramin Zarebidoky (LiterallyTheOne)

01 Oct 2025

## Serial Communication

### Introduction

In the previous tutorial, we learned how to work with **LCD** and **Keypad**. In this tutorial, we are going to learn about **Serial Communication** and some of its usages.

### Serial communication

**Serial communication** is a way that a microcontroller can send and receive data one bit at a time. You can use it to communicate with computers, microcontrollers, and modules (e.g., GPS, Bluetooth, ESP8266). **Serial communication** is one of the most important concepts in microcontrollers. **Arduino Uno** uses **UART** (Universal Asynchronous Receiver-Transmitter) to handle the **Serial communication**. **UART** needs two pins, one for receiving data (RX) and one for transmitting data (TX). These two pins are available in **Arduino Uno** in **pin 0** (RX) and **pin 1** (TX). Also, we can have **Serial Communication** with **USB** as well. One of the most important things in having a **Serial Communication** is setting the correct **baud rate** for both of the devices that are trying to communicate. **Baud rate** indicates the speed of data transfer. The reason that **baud rate** should be the same for both devices is that, we have an **asynchronous** communication. The start and the end of the communication are determined with **start bit** and **end bit**.

### Serial Terminal on SimulIDE

One of the ways that we can use **Serial communication** is by using a **Serial Terminal**. You can access a **Serial Terminal** in **Micro/Peripherals/Serial Terminal**. Now, let's put a **Serial Terminal** on the board and connect it to an **Arduino Uno**. To do that, we should wire them like below:

- **TX** of **Arduino** -> **RX** of **Serial Terminal**
- **RX** of **Arduino** -> **TX** of **Serial Terminal**

You should have something like this:

## Serial Hello World

Now, let's create a **PlatformIO** project and write a **Hello World** for **Serial communication**. At first, let's initialize the **Serial Communication**. To do so, we can use the code below:

```
Serial.begin(9600);
```

In the code above, we set the **baud rate** of our **Serial communication** (default **baud rate** in **Serial Terminal** in **SimulIDE**) to 9600 and initialize the **Serial communication**. (To change the **baud rate** of the **Serial Terminal** in **SimulIDE** you can go to the properties of that **Serial Terminal**). Now, we are ready to write something on it. To do so, we can use the code below:

```
Serial.println("Hello World");
```

In the code above, we have printed **Hello World** into the serial port. The function `println`, prints the given input and makes a new line. Now, let's change our code in a way that it prints **Hello World** every one second. So we have the full code like below:

```
#include <Arduino.h>

void setup()
{
    Serial.begin(9600);
}

void loop()
{
    Serial.println("Hello World");
    delay(1000);
}
```

Let's upload it into our **SimulIDE**. After pressing start simulation, you should click on the **open** button on the **Serial Terminal**. Your output would be something like below:

As you can see in the left panel **Hello World** is being printed constantly. Also, **Rx** on the terminal becomes **yellow** whenever it receives data.

## Read from Serial Terminal

We have managed to send data to the **Serial Terminal**. Now, let's talk about how to read data from it. To do so we can use a function called `Serial.read()`. It would read the incoming **byte**. If there is no data, it would return `-1`. Also,

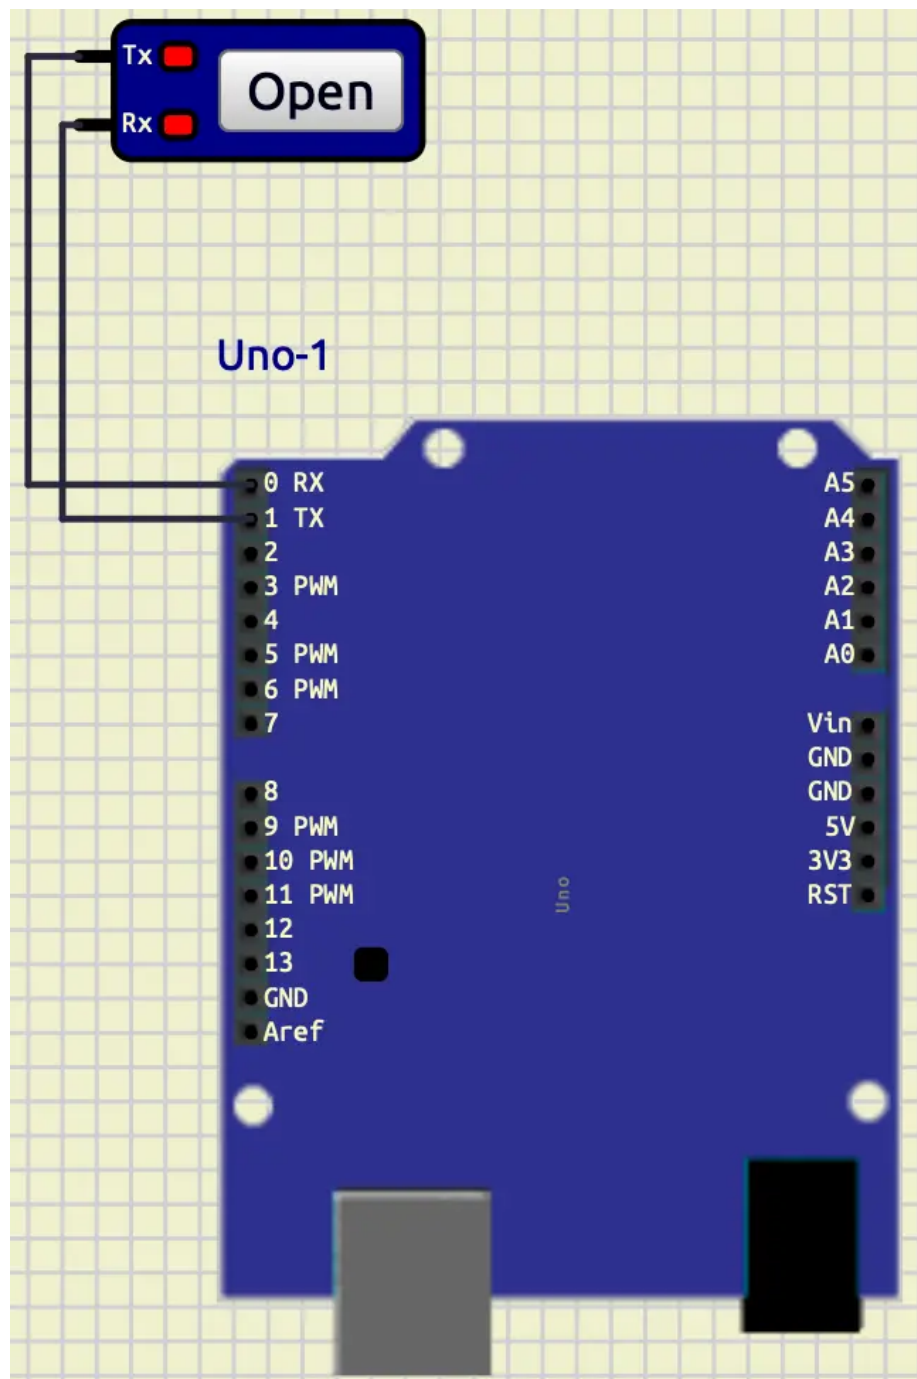


Figure 1: Serial Terminal

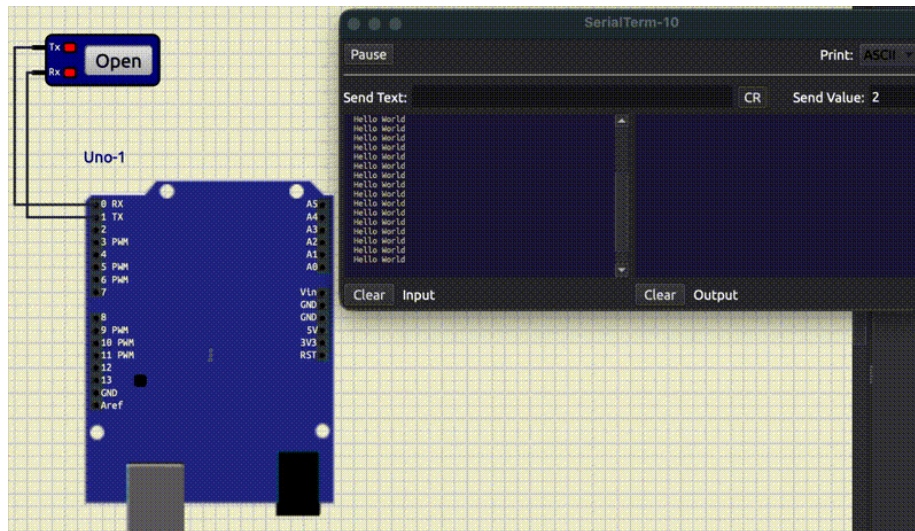


Figure 2: Hello World Serial

we have another function called `Serial.available()`. This function returns the number of bytes which are available for reading. So if we want to write a code that reads data and prints each character in separate lines, we can write something like below in the loop function:

```
if (Serial.available())
{
    char ch = Serial.read();
    Serial.println(ch);
}
```

The output would be something like below:

In the example above, I wrote **hello** and **world** separately. After I wrote down each one of them I pressed **Enter**. As you can see in the right panel, we can see the input that we sent to the **Arduino** and in the left panel we can see the response of the **Arduino**.

## Read until new line

If we want to read the whole string, we can use a function called `Serial.readStringUntil`. This function reads the data in the buffer until it reaches the terminator that we give it as an argument. As a result it returns a **String**. So, if we want to change our code to read the whole line, we can change it like below:

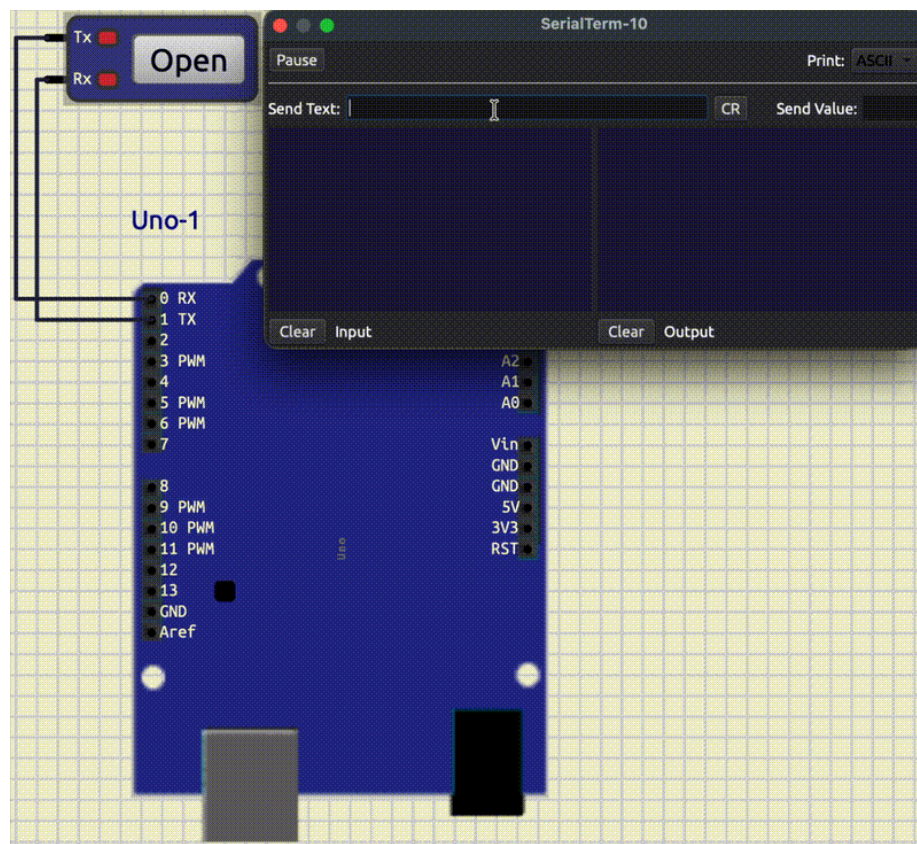


Figure 3: Serial Read



```

if (Serial.available())
{
    String result = Serial.readStringUntil('\n');
    Serial.println(result);
}

```

The output would be something like this:

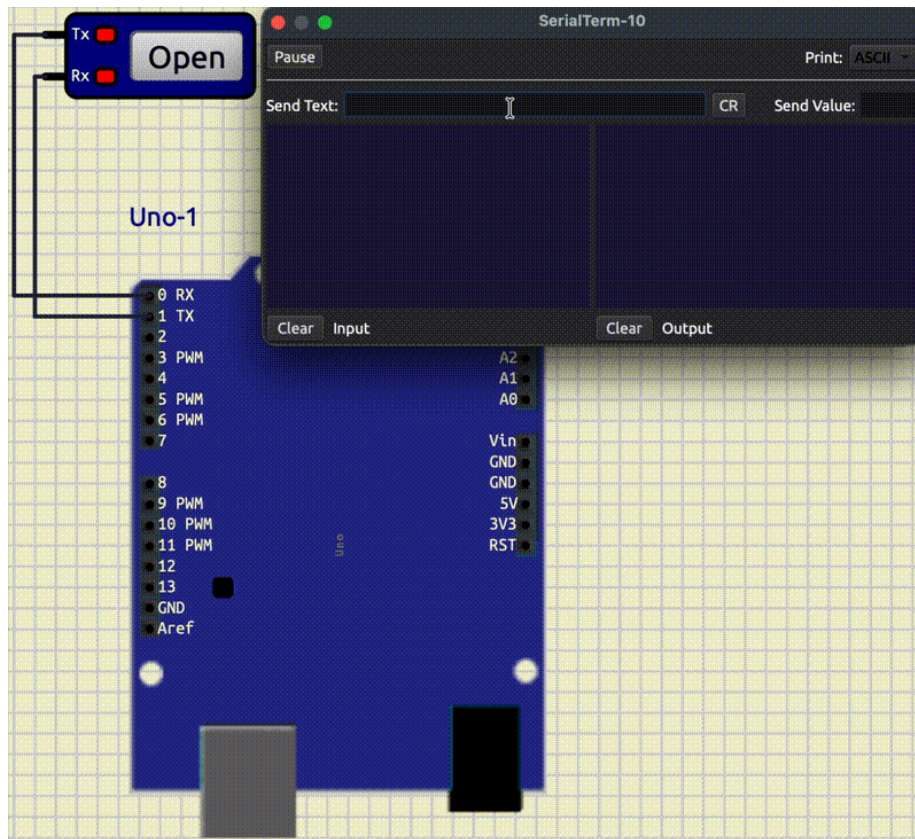


Figure 4: Serial Read String

As you can see, we write a whole sentence and when we press enter after some time it would print us the result.

## Built-in Serial Monitor in SimulIDE

For debugging purposes, **SimulIDE** has implemented a **Serial Monitor** that you can see the transmitted and received data through that. To access it, you can right-click on the **Arduino Uno** then select **mega328/Open Serial Mon-**

itor/USart.

## Software Serial

The built-in pins for **Serial Communication** in **Arduino Uno** are **pin 0, 1**. This is managed by hardware. If you want to use other pins for the **Serial communication**, you should use a package called **SoftwareSerial**. You can import it like below:

```
#include <SoftwareSerial.h>
```

To tell the **SoftwareSerial** which ports you need, you should make an object like below:

```
SoftwareSerial mySerial(10, 11); // RX, TX
```

In the code above, we have used **pin 10** for **RX** and **pin 11** for **TX**. Now, we are ready to connect the device that we want to communicate with to **pin 10 and 11** and start our **Serial communication** as we would before. The whole code for a **Hello World** example is like this:

```
#include <Arduino.h>
#include <SoftwareSerial.h>

SoftwareSerial mySerial(10, 11); // RX, TX

void setup()
{
  mySerial.begin(9600);
}

void loop()
{
  mySerial.println("Hello SoftwareSerial!");
  delay(1000);
}
```

Your output should look like below:

## Counter on two Arduinos

Now, that we know how two devices can communicate using **Serial communication**, let's connect two **Arduinos** together. We add a **Keypad** to the first **Arduino**. Its job is to receive a number and send it to the second **Arduino**. Then, we add an **LCD** to the second **Arduino**. Its job is to count down the number that it received to 0. Your output should look like this:

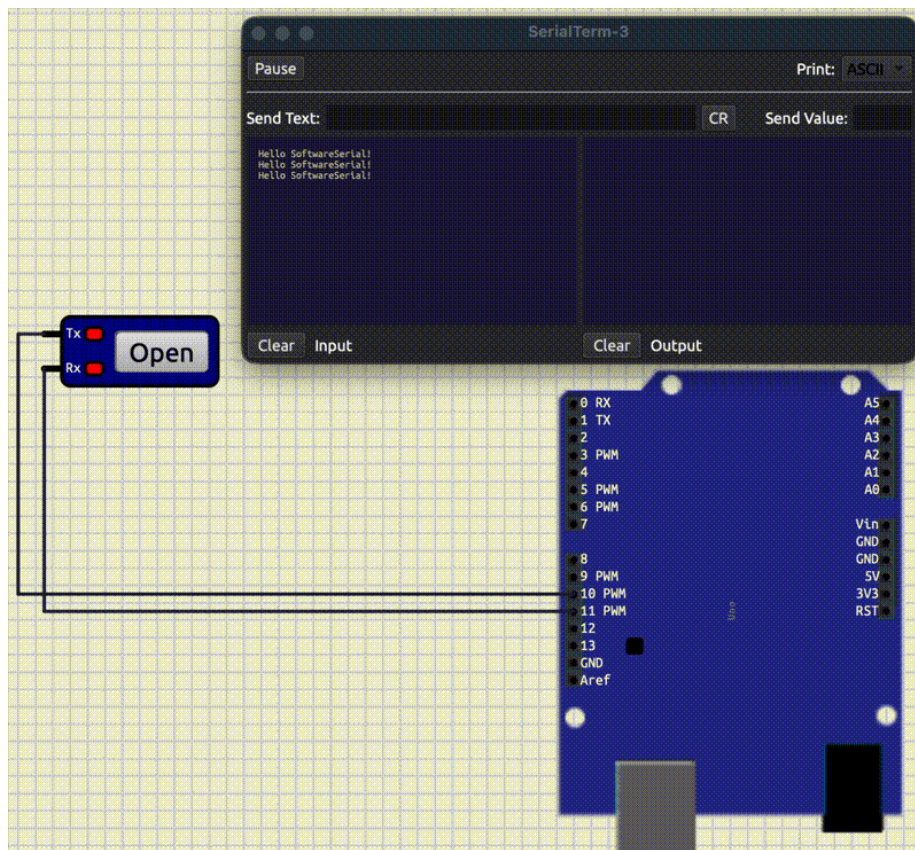


Figure 5: Software serial



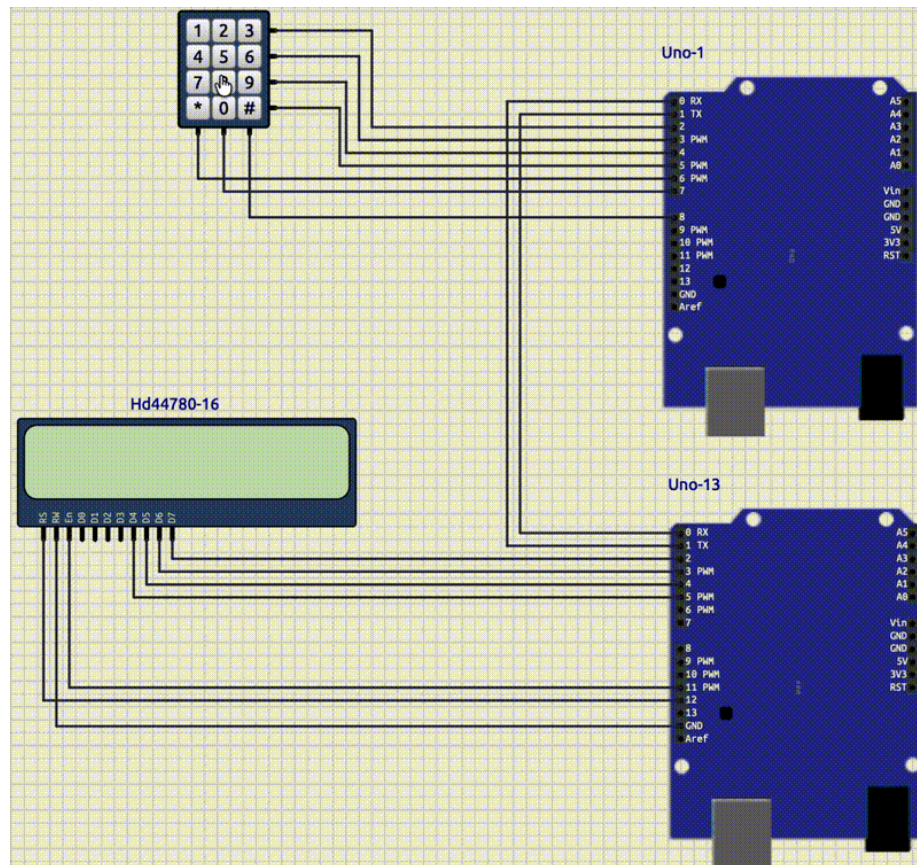


Figure 6: Two Arduinos

## Conclusion

In this tutorial we walked through the concepts of **Serial Communication**. First, we explained the **Serial Communication**. Then, we provided an example on how to write with it. After that, we learned how to read from it. Next, we explained about **SoftwareSerial** and how to make other pins to work as a **Serial communication** pins. Finally, we provided an example with two arduinos to make you understand the concepts better.