

The image features the Siemens logo in the top left corner. The background is a photograph of a man in a light blue shirt, seen from the side, holding a tablet computer. He is standing in a factory or industrial setting, with various pieces of machinery and equipment visible in the background. The tablet screen displays a software interface with charts and data.

SIEMENS

Setting up • 09/2016

Setting up the SIMATIC IOT2000

SIMATIC IOT2020, SIMATIC IOT2040

Warranty and liability

Note

The Application Examples are not binding and do not claim to be complete regarding the circuits shown, equipping and any eventuality. The Application Examples do not represent customer-specific solutions. They are only intended to provide support for typical applications. You are responsible for ensuring that the described products are used correctly. These Application Examples do not relieve you of the responsibility to use safe practices in application, installation, operation and maintenance. When using these Application Examples, you recognize that we cannot be made liable for any damage/claims beyond the liability clause described. We reserve the right to make changes to these Application Examples at any time without prior notice.

If there are any deviations between the recommendations provided in these Application Examples and other Siemens publications – e.g. Catalogs – the contents of the other documents have priority.

We do not accept any liability for the information contained in this document. Any claims against us – based on whatever legal reason – resulting from the use of the examples, information, programs, engineering and performance data etc., described in this Application Example shall be excluded. Such an exclusion shall not apply in the case of mandatory liability, e.g. under the German Product Liability Act (“Produkthaftungsgesetz”), in case of intent, gross negligence, or injury of life, body or health, guarantee for the quality of a product, fraudulent concealment of a deficiency or breach of a condition which goes to the root of the contract (“wesentliche Vertragspflichten”). The damages for a breach of a substantial contractual obligation are, however, limited to the foreseeable damage, typical for the type of contract, except in the event of intent or gross negligence or injury to life, body or health. The above provisions do not imply a change of the burden of proof to your detriment.

Any form of duplication or distribution of these Application Examples or excerpts hereof is prohibited without the expressed consent of the Siemens AG.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions only form one element of such a concept.

Customer is responsible to prevent unauthorized access to its plants, systems, machines and networks. Systems, machines and components should only be connected to the enterprise network or the internet if and to the extent necessary and with appropriate security measures (e.g. use of firewalls and network segmentation) in place.

Additionally, Siemens' guidance on appropriate security measures should be taken into account. For more information about industrial security, please visit <http://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends to apply product updates as soon as available and to always use the latest product versions. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under <http://www.siemens.com/industrialsecurity>.

Table of contents

	Warranty and liability.....	2
1	Task.....	4
1.1	Overview.....	4
2	Requirements.....	5
2.1	Required Hardware	5
2.2	Required Software.....	9
3	Operating.....	10
3.1	Installing the SD-Card Example Image	10
3.2	First Commissioning of the SIMATIC IOT2000.....	15
3.3	Remote access with Putty SSH Connection	16
3.3.1	Change IP Address	21
3.3.2	Create new directory on the SIMATIC IOT2000	23
4	Checklist.....	25
5	Related links.....	26
6	History.....	26

1 Task

1.1 Overview

Introduction

This Setting Up shows how to set up the SIMATIC IOT2000 with a SD-Card image provided through the Siemens Industry Online Support.

Goals

After working through this document you know how to

- Get remote access to the SIMATIC IOT2000
- Change the IP-Address of the SIMATIC IOT2000
- Create a new directory on the SIMATIC IOT2000

2 Requirements

2.1 Required Hardware

This chapter contains the hardware required for this Setting up.

SIMATIC IOT2000

Two different versions of the SIMATIC IOT2000 are available. The hardware of both versions is described in this document. However, this Setting Up will only use the SIMATIC IOT2020 as basis for all examples. In order to setup the SIMATIC IOT2040, proceed in the same way as described for the SIMATIC IOT2020.

SIMATIC IOT2020

Hardware Overview:

- Intel Quark® x1000
- 512 MB RAM
- 1 Ethernet Interface
- 1 USB Host Type A
- 1 USB Client microUSB

Figure 2-1

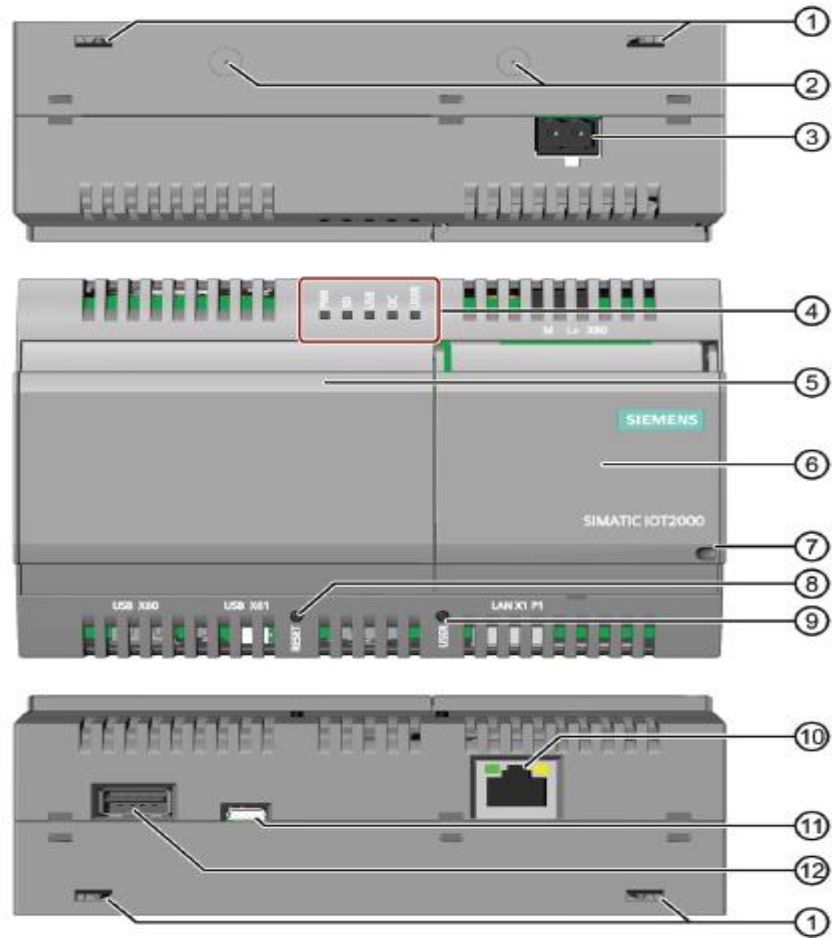


Table 2-1

No.	Description
1	Aperture for wall-mounting
2	Designation for integration of antennas
3	Connection for Power Supply
4	5 LED's, 1 programmable USER LED
5	Left cap
6	Right cap
7	Aperture to lock the right cap
8	RESET button for the CPU
9	USER button
10	Ethernet Interface 10/100 Mbps
11	USB Typ Mini-B
12	USB Typ A

SIMATIC IOT2040

Hardware Overview:

- Intel Quark® x1020
- 1 GB RAM
- 2 Ethernet Interfaces
- 2 RS232/485 interfaces
- Battery buffered RTC

Interface Overview:

Figure 2-2

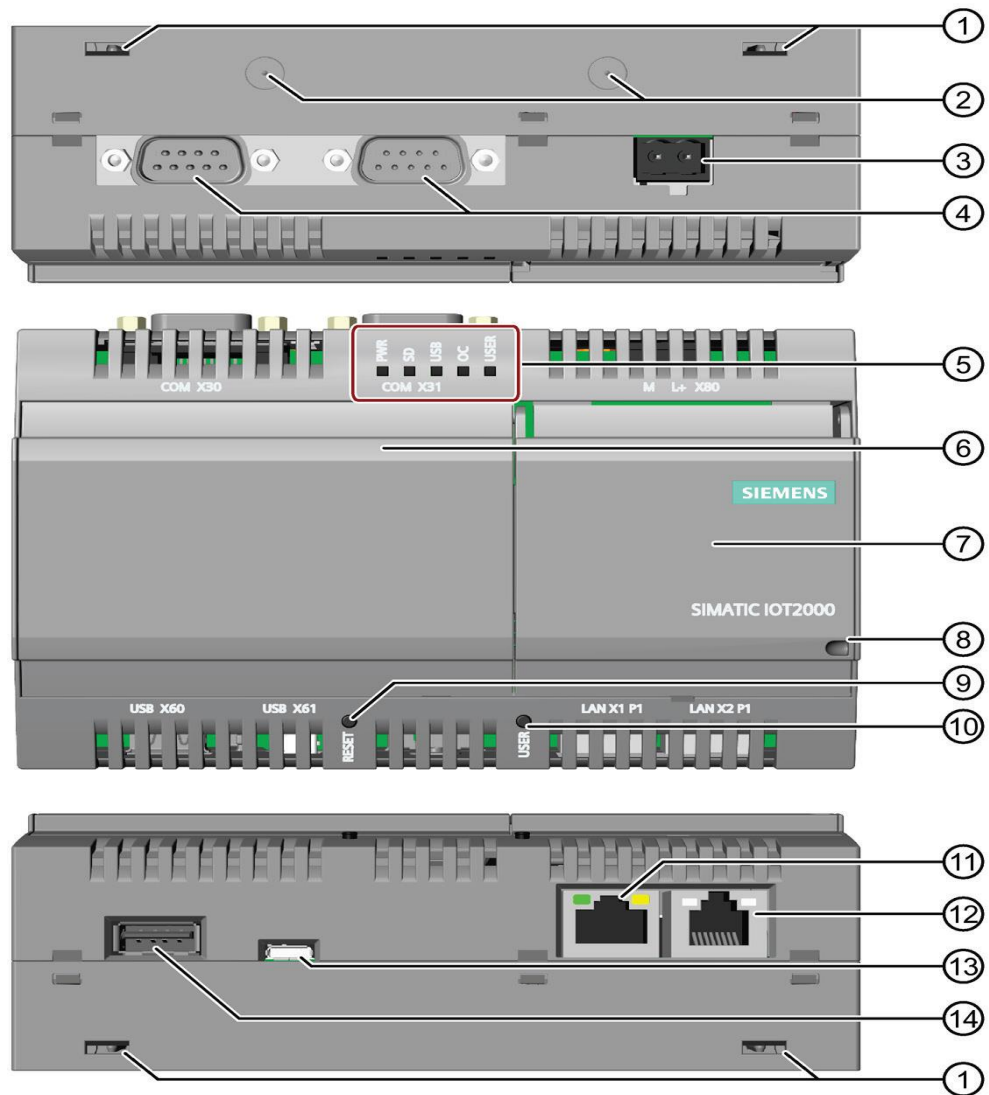


Table 2-1

No.	Description
1	Aperture for wall-mounting
2	Designation for integration of antennas
3	Connection for Power Supply
4	COM-Interfaces (RS232/485)
5	5 LED's, 1 programmable USER LED
6	Left cap
7	Right cap
8	Aperture to lock the right cap
9	RESET button for the CPU
10	USER button
11	Ethernet Interface 10/100 Mbps
12	Ethernet Interface 10/100 Mbps
13	USB Typ Mini-B
14	USB Typ A

Micro-SD Card

SIMATIC IOT2000 can be operated with a Yocto Linux Operating System, which requires the use of a Micro-SD Card.

The requirement for using SIMATIC IOT2000 with Yocto Linux Operating System is a Micro-SD Card with storage capacity from 8GB up to 32GB.

Engineering Station

To work with the SIMATIC IOT2000 an Engineering Station is required. In this Setting Up a PC with Windows 7 Enterprise is used.

The Engineering Station has to include the following Interfaces:

- SD Card Slot
- Ethernet Port

Ethernet cable

For an Ethernet Connection between the Engineering Station and the SIMATIC IOT2000 in order to establish a SSH connection and to download the Eclipse projects an Ethernet cable is required.

Power supply

In order to run the SIMATIC IOT2000 a power supply is required.

This power supply has to provide between 9 and 36V DC.

2.2 Required Software

This chapter contains the software required for this Setting up.

Micro-SD Card Example Image

To use the full functionality of the SIMATIC IOT2000 a SD-Card Example Image with a Yocto Linux Operating System is necessary to be installed. This Image is provided through the Siemens Industry Online Support.

It can be downloaded [here](#).

PuTTY

To get remote access to the SIMATIC IOT2000 software is required.

In this Getting Started “PuTTY” is used. With this software it is possible to establish a connection to different devices for example via Serial, SSH or Telnet.

The “PuTTY” software can be downloaded [here](#).

Win32 Disk Imager

In order to put the SD Card image to the µSD Card software is needed.

In this Setting Up the Win32 Disk Imager is used.

The “Win32 Disk Imager” can be downloaded [here](#).

NOTE

All existing data on the SD Card will be removed!

3 Operating

This chapter describes the steps necessary to install and start up the SIMATIC IOT2000 using the hard- and software listed before.

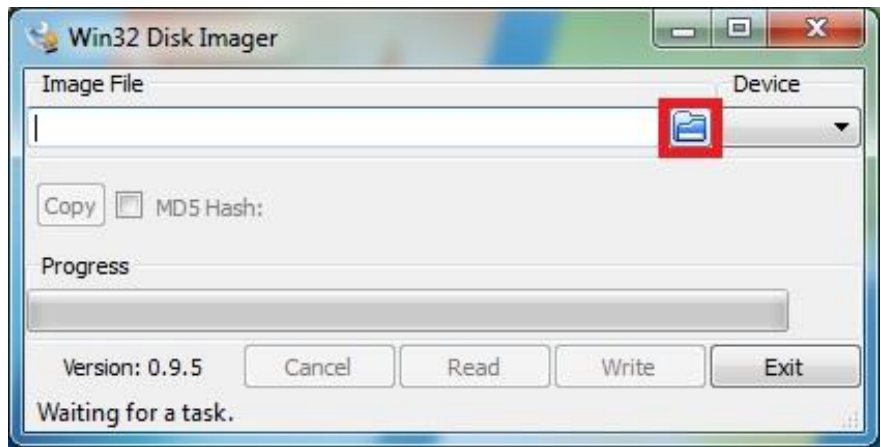
For the necessary software components please refer to the download links in [Chapter 2.2](#)

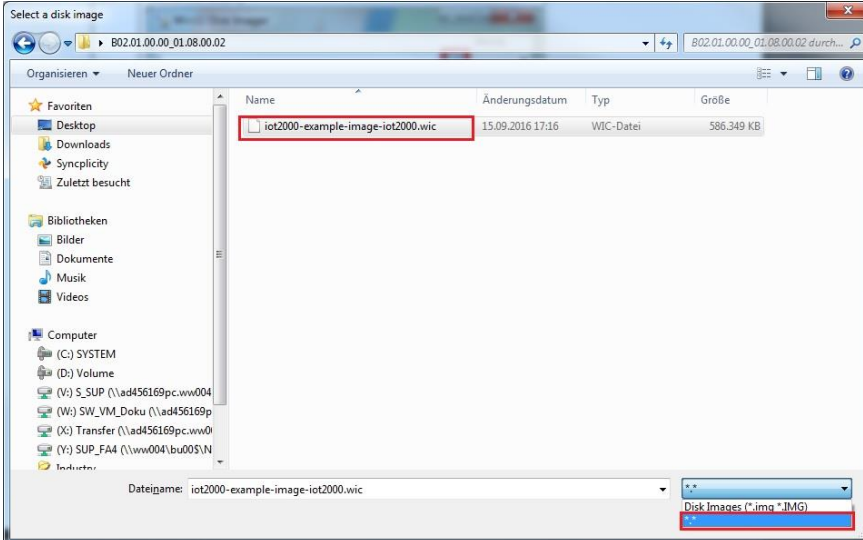
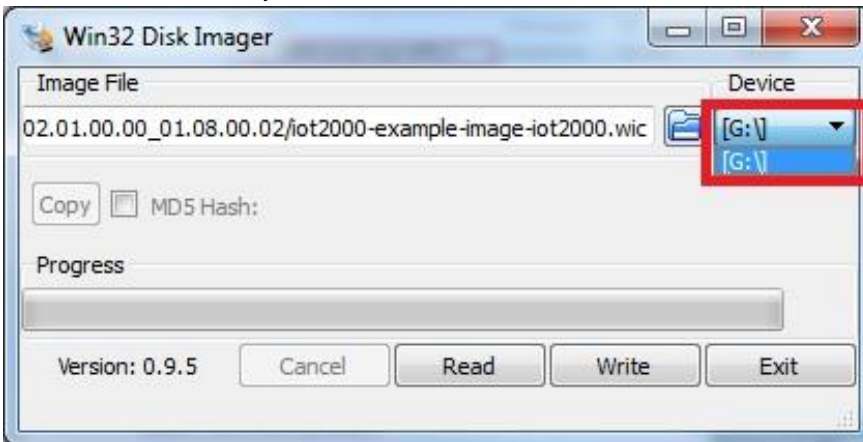
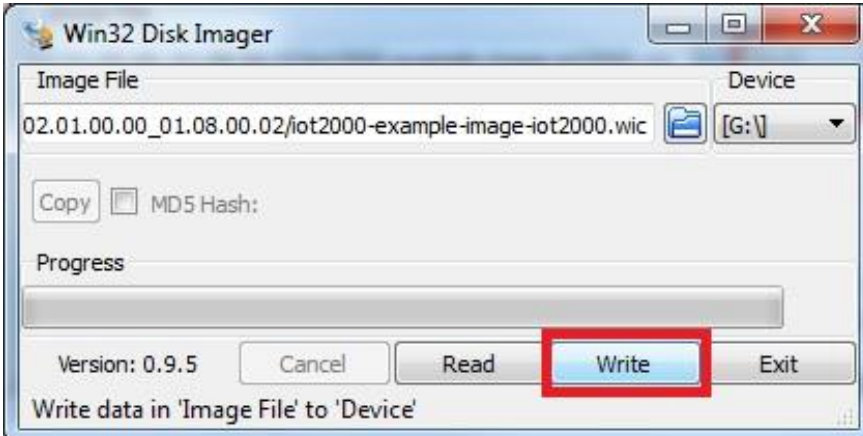
3.1 Installing the SD-Card Example Image

The first step to work with the SIMATIC IOT2000 is to set up a Micro-SD Card with the Image provided through the [Siemens Industry Online Support](#).

The following table shows the required steps to transfer the SD-Card Image to a Micro-SD Card.

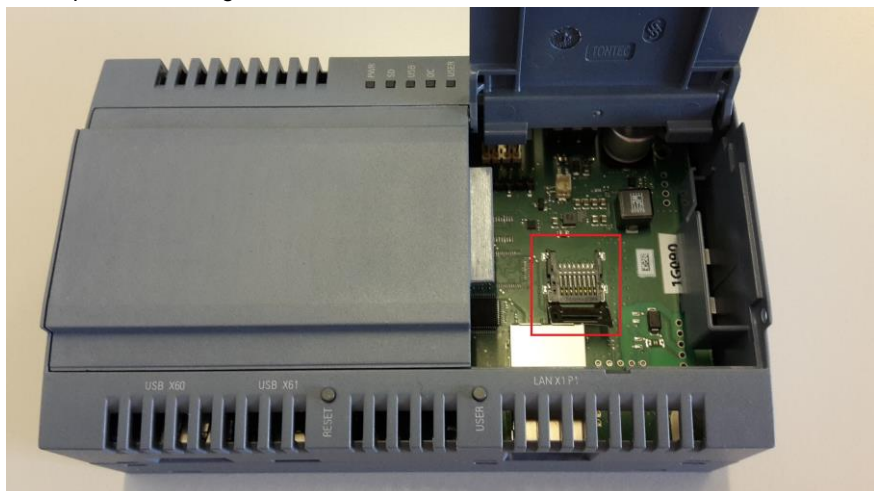
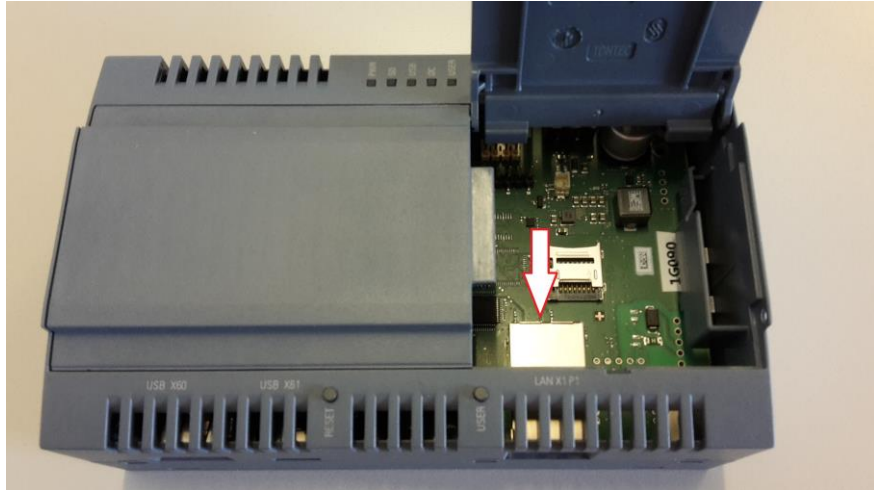
Table 3-1


No.	Action
1.	Insert the μ SD-Card via SD-Card Adapter in the SD-Card Slot of your Engineering Station
2.	Retrieve the downloaded SD Card image .zip-file
3.	Install the downloaded "Win32DiskImager-x.x.x-install.exe"
4.	Start the Win32 Disk Imager
5.	Click on the folder <div data-bbox="491 1088 1375 1532">  </div>

No.	Action
6.	<p>Select “*.*” in the right bottom corner</p> <p>Then select the “iot2000-example-image-iot2000.wic” file in the retrieved SD Card Image folder</p> 
7.	<p>Select the drive letter of your SD Card</p> 
8.	<p>Click the “Write” button</p> 

No.	Action
9.	<p>Confirm the warning message NOTE: All data will be deleted</p> 
10.	<p>You will receive a success message if the transfer is done</p> 
11.	<p>Right click on "Safely Remove Hardware and Eject Media"</p>  <p>Choose the SD Card</p>

No.	Action
12.	<p data-bbox="499 304 1359 338">Insert the μSD-Card into the μSD-Card Slot of the SIMATIC IOT2000 as follows:</p> <ol style="list-style-type: none"> <li data-bbox="499 371 786 405">1. Slide the locking down <li data-bbox="499 931 727 965">2. Open the locking <li data-bbox="499 1491 762 1525">3. Insert the μSD-Card



No.	Action
	<p>4. Close the locking and slide it up</p> 

3.2 First Commissioning of the SIMATIC IOT2000

Ethernet cable

The following table shows how to connect the SIMATIC IOT2000 and the engineering station with an Ethernet cable.

Table 3-2

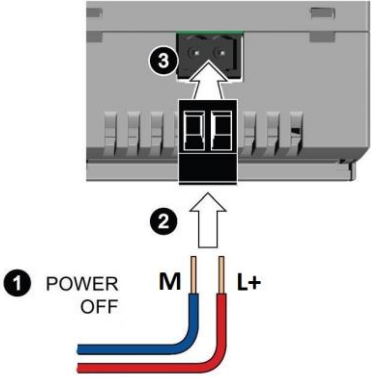
No.	Action
1.	Connect one end of the Ethernet cable to an Ethernet-Port of the Engineering Station
2.	Connect the other end of the Ethernet cable to the Ethernet-Port X1P1 of the SIMATIC IOT2000. Note: If you use the SIMATIC IOT2040 X1P1 is the left port.

Power supply

The following table shows how to connect the SIMATIC IOT2000 to a power supply.

Table 3-3

No.	Action
1.	Power off the power supply
2.	Connect the cable to the connecting terminal
3.	Connect the connecting terminal to the SIMATIC IOT2000
4.	Power on the power supply



① POWER OFF

M L+

CAUTION Only use a DC 9...36V power supply!

3.3 Remote access with Putty SSH Connection

The Software “Putty” can be used to get remote access from the Engineering Station to the SIMATIC IOT2000 via Serial, SSH or Telnet.

In this Example the SSH connection is used.

NOTE


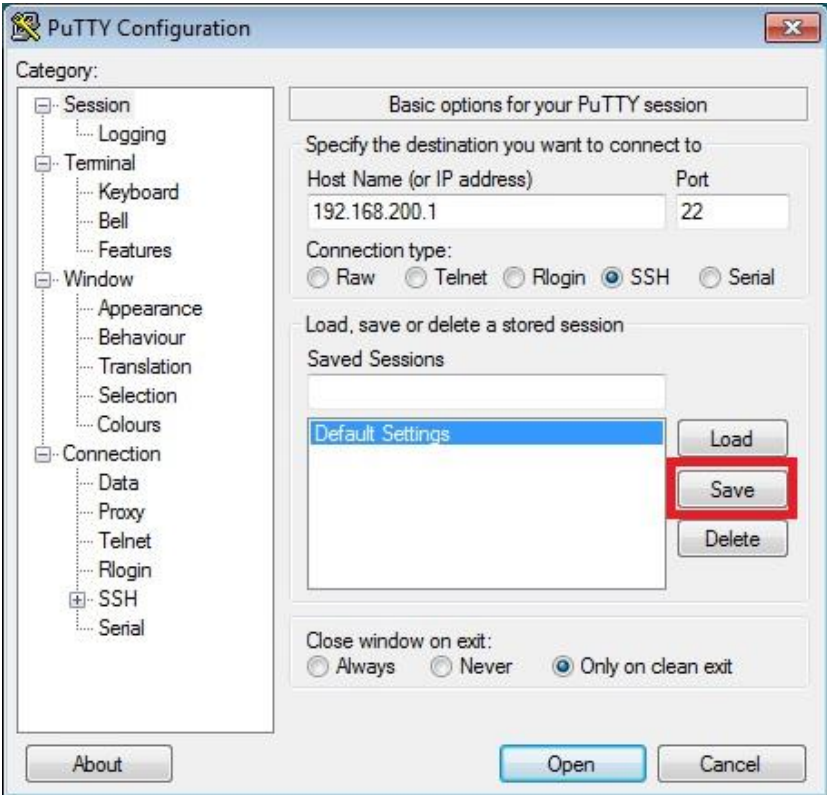
The SIMATIC IOT2000 has a static IP address by default.

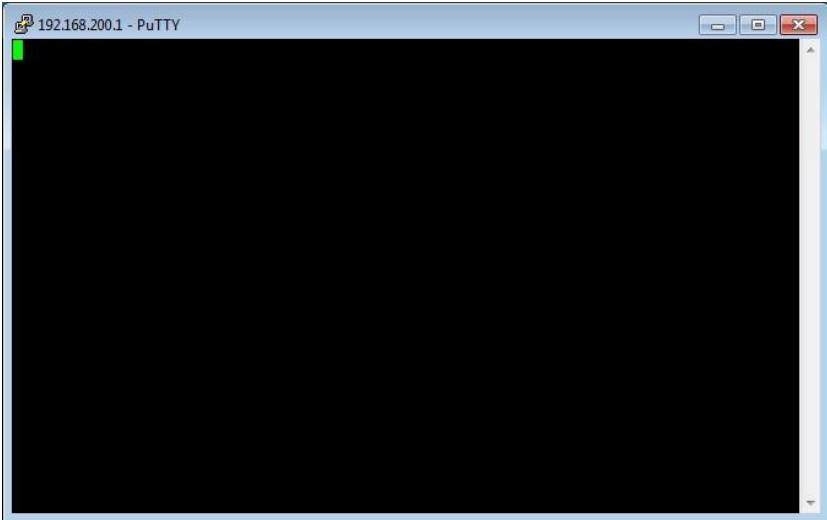
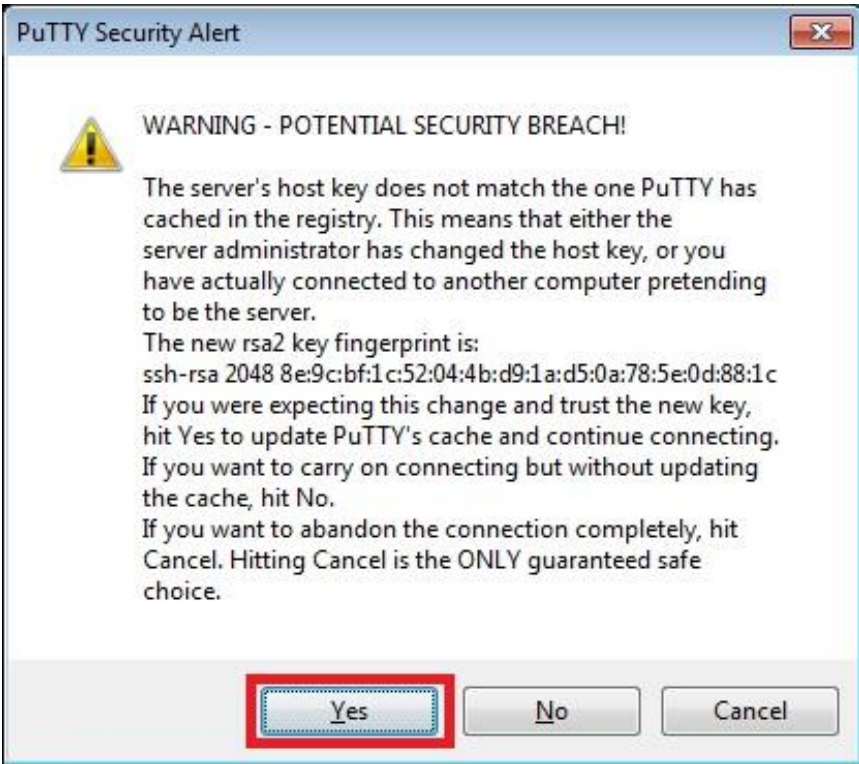
This address is **192.168.200.1**.

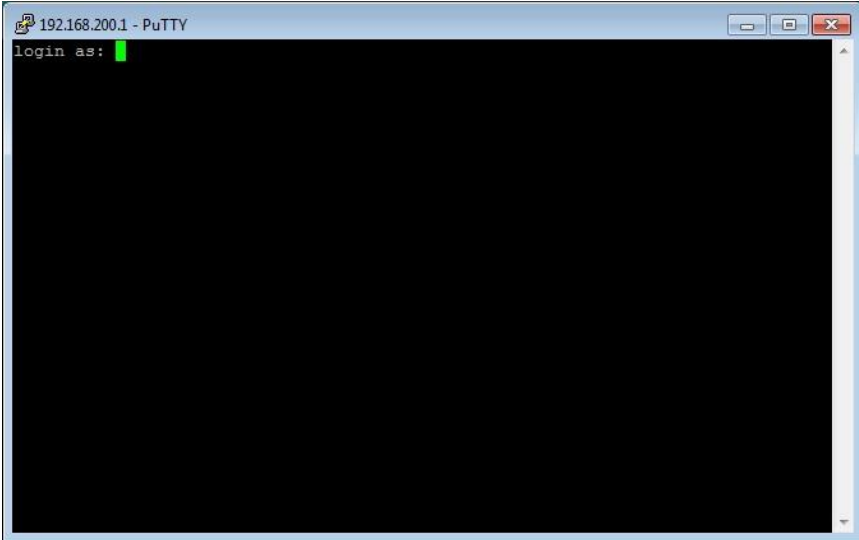
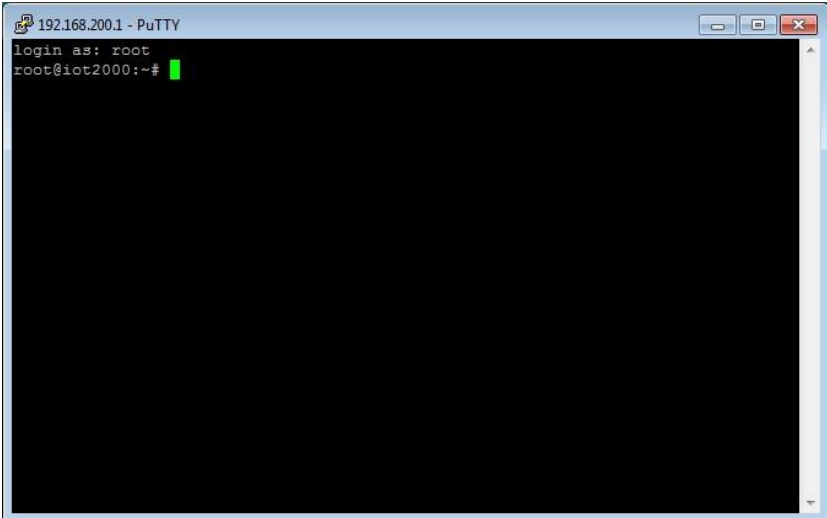
The Engineering Station has to be in the same subnet as the SIMATIC IOT2000 to establish a SSH connection!

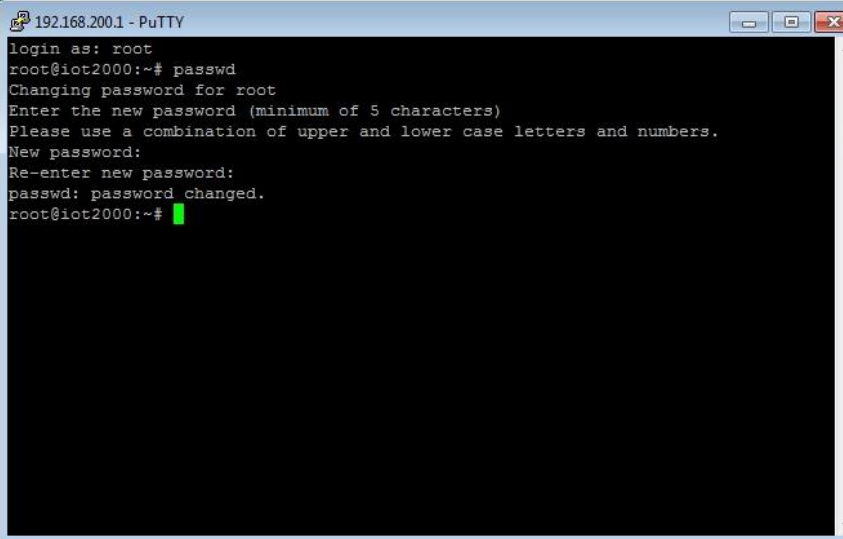
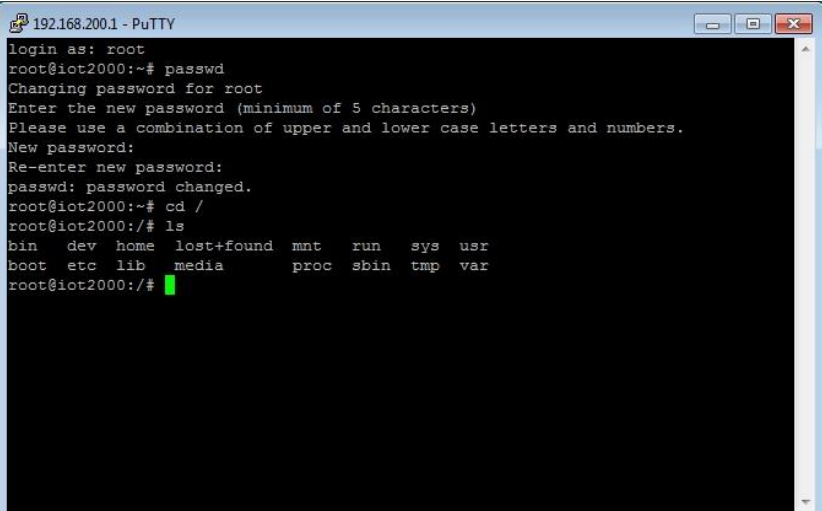
The following table shows how to use Putty.

Table 3-4

No.	Action
1.	<p>Open downloaded Putty.exe with double-click</p> 
2.	<p>Configure the connection as follows:</p> <ol style="list-style-type: none"> 1. Choose the Connection Type "SSH" 2. Enter the IP address 192.168.200.1 3. The port is 22 by default 4. This configuration can be saved as Default Settings (Mark Default Settings and press the "Save" Button) 

No.	Action
3.	<p>Click on "Open" button for opening the communication to the SIMATIC IOT2000 via SSH.</p> 
4.	<p>Connecting the first time via SSH a Warning dialog will appear. It is necessary to update the SSH key. Press the "Yes" button.</p> 

No.	Action
5.	<p>If once confirmed a login dialog appears</p> 
6.	<p>Type "root" and press the Enter key</p>  <p>The login was successful.</p> <p>Note: There is no password set per default.</p>

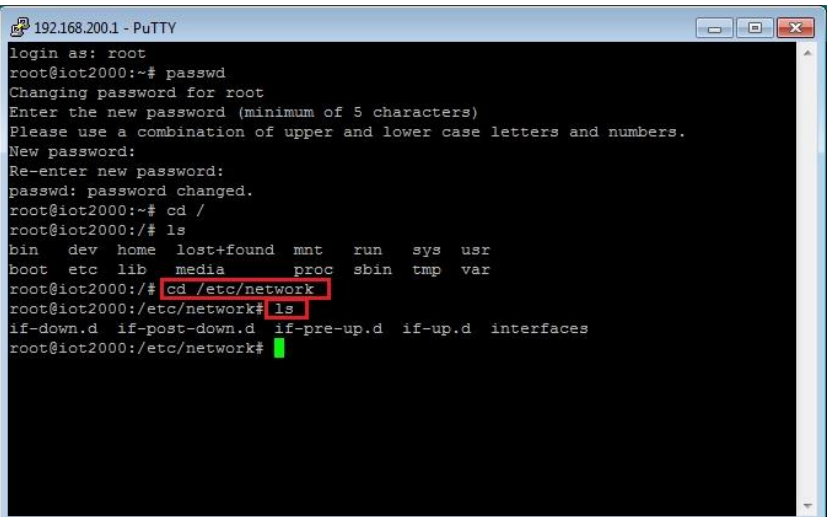
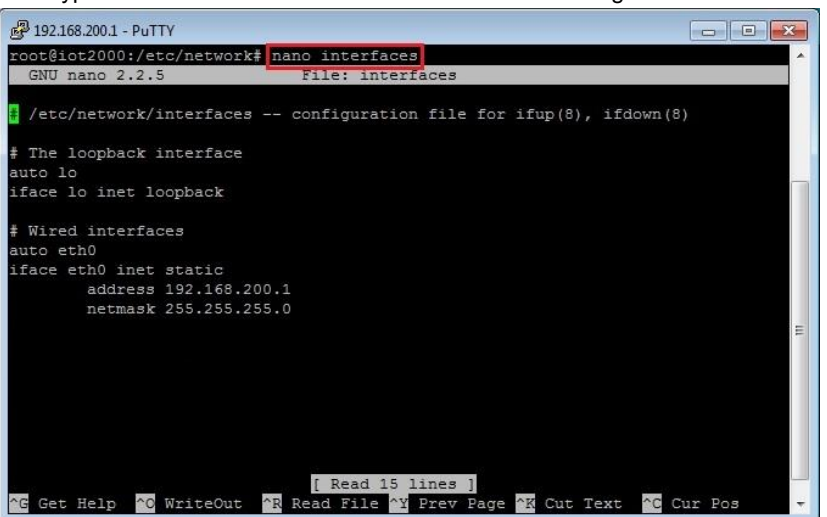
No.	Action
7.	<p>Set a password for the login “root” because of security issues:</p> <ol style="list-style-type: none"> 1. Type in “passwd” 2. Set a new password (input is hidden) 3. Confirm the password (input is hidden) 
8.	<p>Now a few Linux commands can be tested.</p> <p>For example “cd /” to get in the file system and “ls” to list the folders in the current directory</p> 

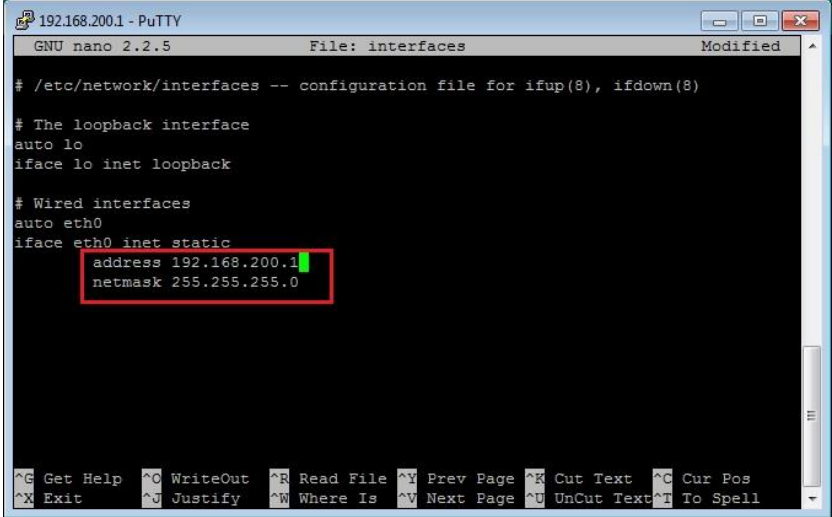
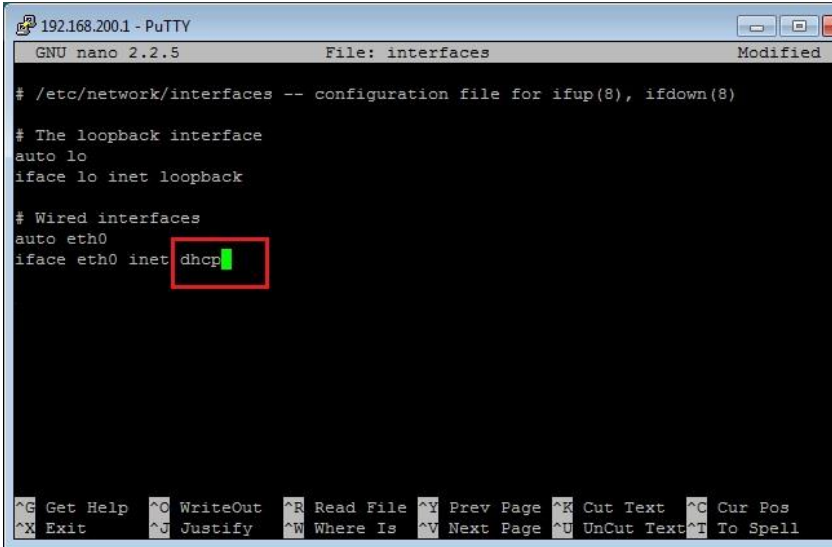
3.3.1 Change IP Address

In the default settings of the SIMATIC IOT2000's Image, the IP address is set to **192.168.200.1**. Thus, if another static IP address or a DHCP address is required, this can be set in the "interfaces" file in the "/etc/network" directory

The following table displays the procedure for configuring the IP address settings.

Table 3-5

No.	Action
1.	Open a valid serial Putty connection and login as root (i.e. See topic 3.3)
2.	<ol style="list-style-type: none"> 1. Type in "cd /etc/network" to go to the network directory 2. Type in "ls" to show the files in this directory  <pre> 192.168.200.1 - PuTTY login as: root root@iot2000:~# passwd Changing password for root Enter the new password (minimum of 5 characters) Please use a combination of upper and lower case letters and numbers. New password: Re-enter new password: passwd: password changed. root@iot2000:~# cd / root@iot2000:~# ls bin dev home lost+found mnt run sys usr boot etc lib media proc sbin tmp var root@iot2000:~# cd /etc/network root@iot2000:/etc/network# ls if-down.d if-post-down.d if-pre-up.d if-up.d interfaces root@iot2000:/etc/network# </pre>
3.	<ol style="list-style-type: none"> 1. Type in "nano interfaces" to edit the connection settings  <pre> 192.168.200.1 - PuTTY root@iot2000:/etc/network# nano interfaces GNU nano 2.2.5 File: interfaces /etc/network/interfaces -- configuration file for ifup(8), ifdown(8) # The loopback interface auto lo iface lo inet loopback # Wired interfaces auto eth0 iface eth0 inet static address 192.168.200.1 netmask 255.255.255.0 </pre>

No.	Action
4.	<p>Change the static IP address here, if required.</p> <p>After changing do the following:</p> <ol style="list-style-type: none"> Press Ctrl+X to Exit Press Y to save Press Enter 
5.	<p>If a DHCP address is required, change the file like in the picture:</p> 
6.	Reboot the SIMATIC IOT2000 to assume the new IP.

3.3.2 Create new directory on the SIMATIC IOT2000

The default storage path for scripts, created with the Eclipse IDE, on the SIMATIC IOT2000 is the directory “tmp”. The files present in this directory, will be automatically deleted after a reset or power failure of the SIMATIC IOT2000.

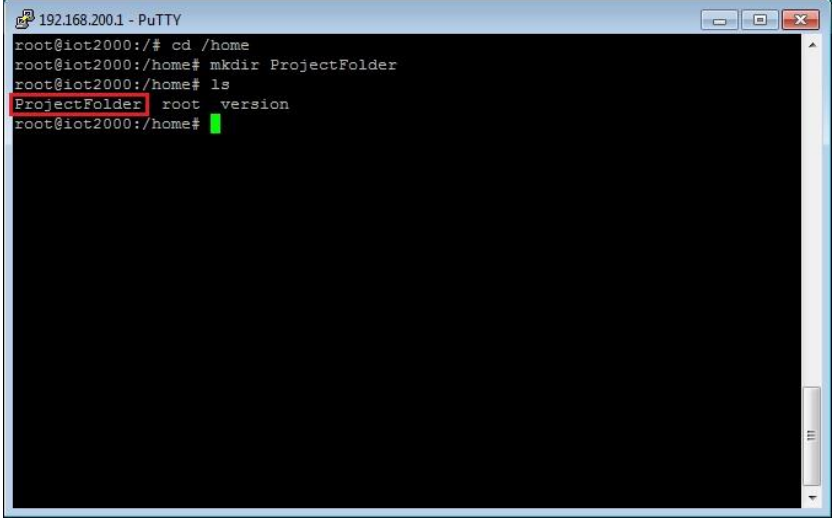
In order to avoid the loss of scripts, a new directory can be created where the files will be stored.

This is only an example; the projects can be stored in other locations too.

The following table shows how to create a new directory in the SIMATIC IOT2000's filesystem.

Table 3-6

No.	Action
1.	Open a valid serial Putty connection and login as root (i.e. See topic 3.3)
2.	Type in “cd /home” command to change the current directory to the home directory of filesystem, and then press the Enter key.
3.	Type in “mkdir <Foldername>” to create a new directory and then press the Enter key (i.e mkdir ProjectFolder) <div data-bbox="491 963 1324 1482" data-label="Image"> <pre> 192.168.200.1 - PuTTY root@iot2000:/# cd /home root@iot2000:/home# mkdir ProjectFolder root@iot2000:/home# </pre> </div>
4.	Type in “ls” to show all directories

No.	Action
	 <p>The screenshot shows a PuTTY terminal window titled '192.168.200.1 - PuTTY'. The terminal output is as follows:</p> <pre> root@iot2000:/# cd /home root@iot2000:/home# mkdir ProjectFolder root@iot2000:/home# ls ProjectFolder root version root@iot2000:/home# </pre> <p>The text 'ProjectFolder' in the 'ls' output is highlighted with a red box. Below the terminal window, the text 'The created folder is now present in the directory "/home".' is displayed.</p>

4 Checklist

This chapter contains a Checklist which summarizes all important steps in this Setting up.

Table 4-1

No.	Action
1.	Download the software listed
2.	Write the image to the µSD Card
3.	Insert the µSD-Card to the SIMATIC IOT2000
4.	Connect the Ethernet cable
5.	Connect the Power Supply
6.	Establish a SSH with PuTTY
7.	Change IP-Address
8.	Create a new storage directory for the Eclipse projects

5 Related links

Table 5-1

	Topic
\1\	SIMATIC IOT2000 forum www.siemens.com/iot2000-forum
\2\	Download SD-Card Example Image https://support.industry.siemens.com/cs/ww/en/view/109741799
\3\	SIMATIC IOT2000 Getting Started https://support.industry.siemens.com/tf/ww/en/posts/155643/
\4\	Operating Instructions https://support.industry.siemens.com/cs/document/109741658/simatic-iot2020-simatic-iot2040?dti=0&lc=en-WW

6 History

Table 6-1

Version	Date	Modifications
V1.0	09/2016	First version