
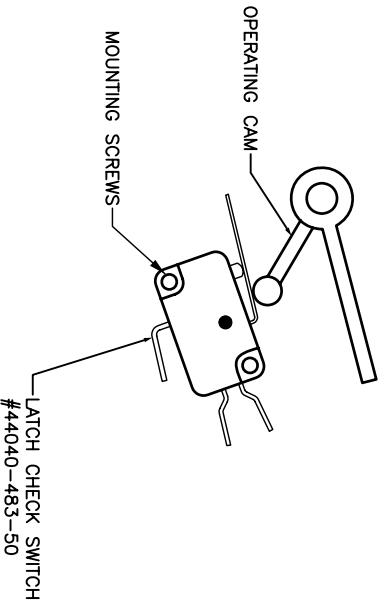


REV	ECO	BY	DATE	A	B	C	D	E	F	G
This engineering drawing (CAD / CAM or otherwise) is the proprietary property of Square D Company, not part of the public domain, and is issued with the express understanding and agreement that it is not to be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Square D Company and is to be returned upon request by Square D Company. All Rights Reserved.										© 1989 Square D Company

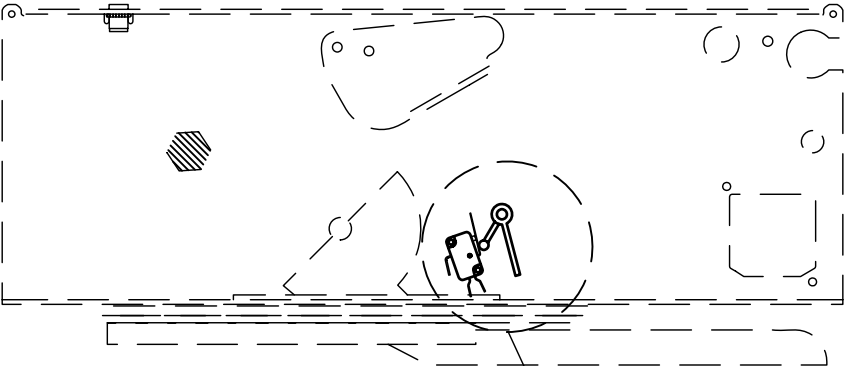

SIDE VIEW OF MECHANISM

DETAIL "A"
(SCA 1/1)

⚠ WARNING

HAZARD OF PERSONAL INJURY OR EQUIPMENT DAMAGE:

BEFORE PERFORMING ANY MAINTENANCE OR REPAIR WORK:

- ALWAYS REMOVE THE CIRCUIT BREAKER COMPLETELY FROM THE CELL.
- PRESS OPEN, CLOSE, AND OPEN PUSHBUTTONS TO DISCHARGE ALL SPRINGS.

FAILURE TO OBSERVE THESE PRECAUTIONS CAN CAUSE DEATH OR SEVERE PERSONAL INJURY!

- TOOLS REQUIRED:**
- 7/16 WRENCH (FRONT COVER)
 - 13mm WRENCH (FRONT COVER)
 - 5.5MM WRENCH
- INSTRUCTIONS:**
- 1) REMOVE FRONT COVER.
 - 2) LOCATE LATCH CHECK SWITCH ON LEFT SIDE OF MECHANISM AND DISCONNECT WIRES FROM TERMINALS.
 - 3) REMOVE (2) HEX HEAD BOLTS FROM SWITCH AND REMOVE SWITCH AND INSULATION PLATE.
 - 4) MOUNT NEW LATCH CHECK SWITCH AND EXISTING INSULATION PLATE WITH (2) HEX HEAD BOLTS. DO NOT BLOCK CONTACT.
 - 5) RECONNECT WIRES TO THE SWITCH TERMINALS.
 - 6) INSTALL FRONT COVER.
 - 7) APPLY CONTROL VOLTAGE TO VERIFY PROPER OPERATION.

STANDARD DIMENSIONS	ONE PLACE DECIMAL ± .060	DESIGN LOC: WC	USED ON: VR BREAKERS	ECO: .	PRINTS TO: -- -- -- -- --		SQUARE D COMPANY POWER EQUIPMENT
TOLERANCE UNLESS OTHERWISE SPECIFIED	TWO PLACE DECIMAL ± .030	DRAWN BY: BSM	RAWSTOCK: ----	DATE: 12/20/13	TITLE: LATCH CHECK SWITCH		
HOLE DIMENSIONS	THREE PLACE DECIMAL ± .015	CHKD BY: BSM	MATERIAL DESCRIPTION: ----	SCALE: 1 / 3	PART# 48040-483-50		
ANGLES	DIMENSIONED ± .1° UNDIMENSIONED 90° ± .2°	ENGINEER: BSM	FINISH DESCRIPTION: ----	QTY: -	B 46040-483-50		