

Document information

Info	Content
Keywords	NFC, Android, DTA APK
Abstract	This document provides information on how to use NFC DTA APK on Android platform to validate NFC Forum compliance test cases.

Revision history		
Rev	Date	Description
1.0	2014-07-07	Initial version
1.1	2014-07-24	Update for Sec 4 (For apk installation) & 4.1 (removed port permissions)
1.2	2014-08-28	Update with DTA 5.2 version for all screen shots, added DTA supported features in selection 3 & 4.2.3 selection for Analog. Added screen timeout settings in section 4.0
1.3	2014-09-05	Updated 3.2 Wave-II testing. Added section 4.3.1 for LLCP testing. Added section 4.3.2 for SNEP testing. Limitation note on SNEP testing.
1.4	2014-09-12	Updated SNEP UI Changes and removed DEP(I) & DEP(T) radio buttons in Wave-II in DTA main screen.
1.5	2014-09-16	Updated SNEP testing scenario. Config file changes required for testing SNEP
1.6	2014-11-14	Updated background color in DTA main screen and Removed Initializing status screen.
1.7	2014-11-28	Updated with DTA UI with ESE in Card Emulation, UI version in Device Info and DTA Automation for Micropross Tool. SNEP UI for SNEP client message and server message.
1.8	2015-04-01	Updated GUI for selection of features for RF technologies for A, B, F in Poll & Listen mode. Added option to enable/disable parameters in Connect PDU in LLCP.
1.9	2015-11-10	Removed additional configurations to be done for SNEP as it is handled automatically.
2.0	2016-08-25	Updated DTA UI for selection of CR8/CR9. Certification Release (CR). Added UI toast messages for CR9 HCE NFC-F test case configuration.
2.1	2016-11-18	Updated DTA UI for CR9 with Time Slot Number (TSN-F) & Connection Device Limit.
2.2	2017-06-27	Updated DTA UI for CR10 to CR12 with Time Slot Number (TSN-F) & Connection Device Limit.
2.3	2018-03-08	Editorial changes & added Connection Device Limit zero DTA UI in the DTA APK.
2.4	2021-07-14	Updated DTA UI for CR12, Dynamical selection of Certifications from UI & Active Peer to peer enable.
2.5	2021-11-18	Removed unused UI screenshot.
2.6	2022-08-08	Updated DTA UI for CR13, Support added for pattern number 0x1241 & 0x1281 for CR12 & CR13

Table of Contents

1. Introduction.....	4
2. Scope	4
3. Architecture of NFC DTA APK	4
3.1 Testing Scope.....	4
4. NFC DTA APK setup.....	5
4.1. Running DTA APK with options	8
4.2.1 NXP_DTA_UI_SCR_SCENERIO_01: Default screen	8
4.2.2 NXP_DTA_UI_SCR_SCENERIO_02: Selections in Manual Mode	11
4.2.3 NXP_DTA_UI_SCR_SCENERIO_02: Analog Selection in Manual Mode.....	13
4.2.4 NXP_DTA_UI_SCR_SCENERIO_03: De-selections in Manual Mode.....	14
4.2.5 NXP_DTA_UI_SCR_SCENERIO_05: UI toast messages for HCE NFC-F:	15
4.2.8 NXP_DTA_UI_SCR_SCENERIO_06: Multi Pattern Number Selection In Manual Mode	18
4.2.9 NXP_DTA_UI_SCR_SCENERIO_07: Different Multi Pattern Number Selection	19
4.2.10 NXP_DTA_UI_SCR_SCENERIO_08: Running in Manual Mode	20
4.2.11 NXP_DTA_UI_SCR_SCENERIO_09: Stopping in Manual Mode	21
4.2.12 NXP_DTA_UI_SCR_SCENERIO_10: Application Exit.....	22
5. References.....	23
6. Legal Information	23
6.1. Disclaimers	23
6.2. Trademarks.....	23

1. Introduction

Device Test Application (DTA) that a vendor can integrate in an NFC Forum Device to ensure that the Implementation/Device Under Test (IUT/DUT) can be tested against the NFC Digital Protocol Technical Specification [DIGITAL], NFC Forum Type 1-5 Tag Operation Specifications [TnTOP], NFC Forum Analog RF, LLCP and SNEP.

DTA APK is designed to work with NCI based NFC chipsets. This setup guide provides the detailed directions about setting up NFC DTA apk for NFC Forum Compliance Testing of Implementation Under Testing (IUT) or Device Under Testing (DUT).

2. Scope

This document is written considering NFC DTA apk setup guidelines to perform the NFC Forum compliance validation of Implementation Under Testing (IUT) or Device Under Testing (DUT).

3. Architecture of NFC DTA APK

Figure 1 shows the architecture of NFC DTA APK.

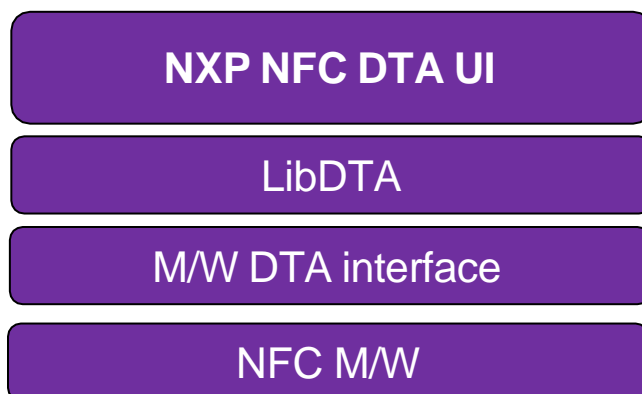


Figure 1: NFC DTA APK Architecture

NFC DTA supported Features:

A NFC device may support one or more communication technologies: Type A, B and F, in both Poll & Listen modes.

3.1 Testing Scope

- NFC Forum Digital protocol test cases.
- NFC Forum T1T(only for CR8 to CR12), T2T, T3T & T4T, T5T test cases
- NFC Forum Analog RF.
- NFC Forum LLCP (only for CR8 to CR11)
- NFC Forum SNEP(only for CR8 to CR11)

4. NFC DTA APK setup

Following commands need to be executed on the terminal to install the apk & supporting files.

Configuration file:

```
adb wait-for-device
adb root
adb wait-for-device
adb remount
adb shell rm -rf /data/app/NxpDTA/
adb shell mkdir /system/app/NxpDTA
adb push libosal.so /system/lib64/
adb push libmwif.so /system/lib64/
adb push libdta.so /system/lib64/
adb push libdta_jni.so /system/lib64/
adb push NxpDTA.apk /system/app/NxpDTA/
adb reboot
```

After updating the required files the “NXP Device Test Application” appears in the main menu.

Figure 2 shows the installed DTA apk in the main menu.

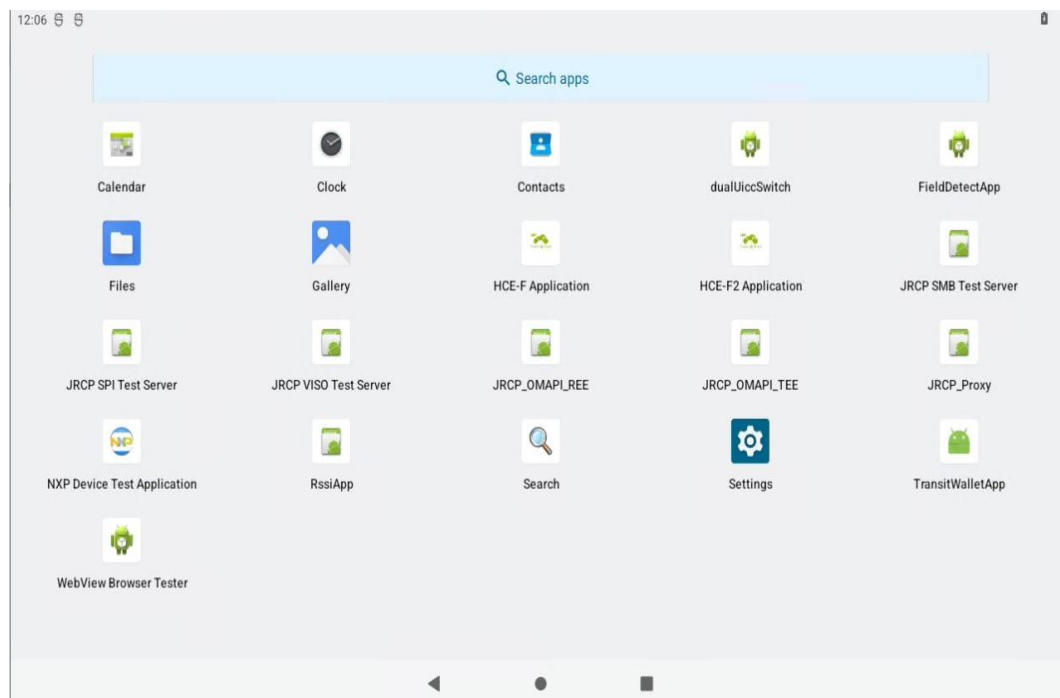


Figure 2: DTA APK installed in Android

Before running DTA APK

Switch off the NFC service option in Settings, Settings->Connected devices -> Connection preferences ->NFC as Off and reboot the device (using 'adb reboot').

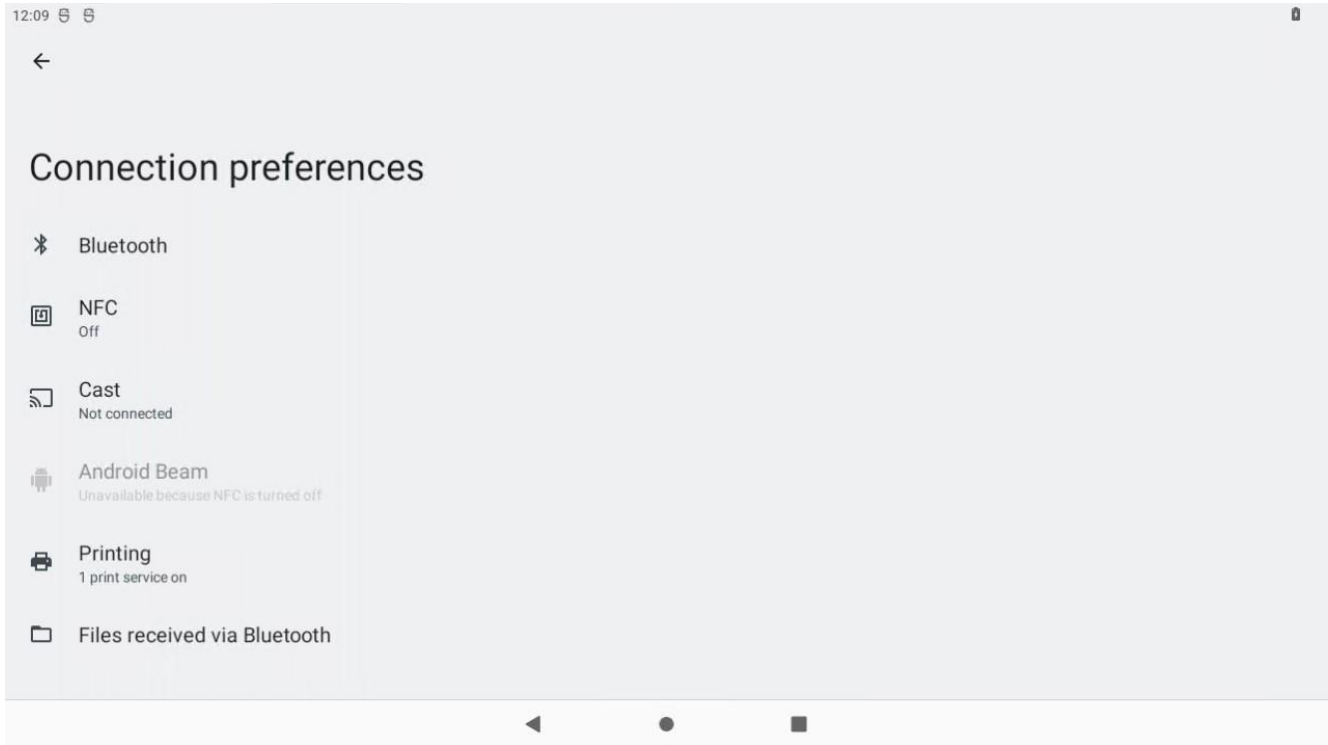



Figure 3: NFC service OFF in settings

Screen time out settings

Screen time out should be updated in the IUT settings to avoid the DTA RF signal loss. Because once the device goes to sleep mode, immediately RF will be stopped from device, to avoid this device screen timeout should be increased to 30 minutes or device should be powered.

The following path can be used for updating the screen timeout setting.

Main menu-> Settings -> Display -> Screen timeout -> select 30 minutes.

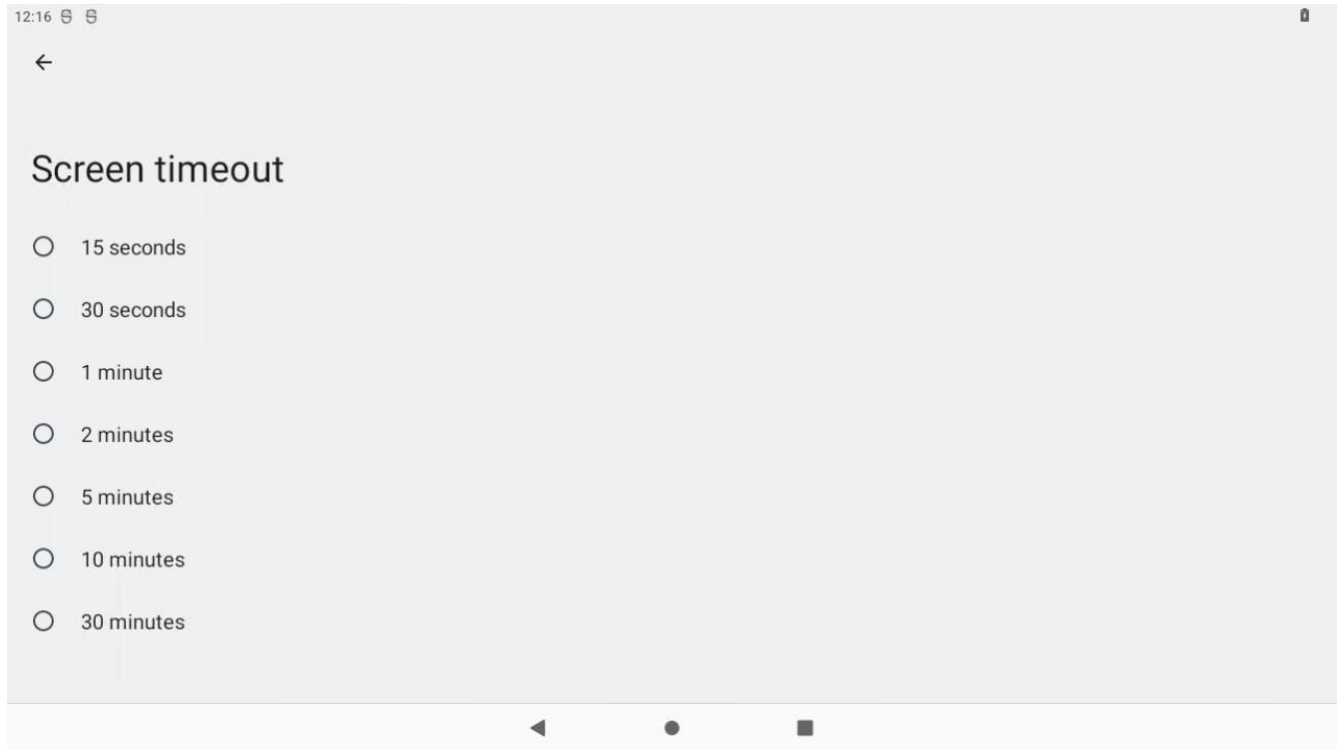

4.1. Running DTA APK with options


4.2.1 NXP_DTA_UI_SCR_SCENERIO_01: Default screen

The default screen is loaded as soon as the application is launched. By default Certification Release CR13 with Time Slot Number for NFC-F Technology (TSN-F) with value F3, Connection Device Limit with 01 & Manual mode is selected and the pattern number will be set to "00" in multi option. The user has the option to enter custom pattern number. By default A & F RF Technologies for P2P & A,B,F,V RF Technologies for RD/WR will be enabled for Poll. By default A & F RF Technologies for P2P will be enabled in Listen mode. Device information will not be displayed in the default screen.


The **current status** of the application is **Stopped** and the text color is in red.

The **RUN** button in **GREEN** color, **STOP** button in **GRAY** color and **EXIT** button in **orange** color.

In manual mode check boxes Custom Message and Show Message are disabled. Copyright and UI Version are showed in the bottom.

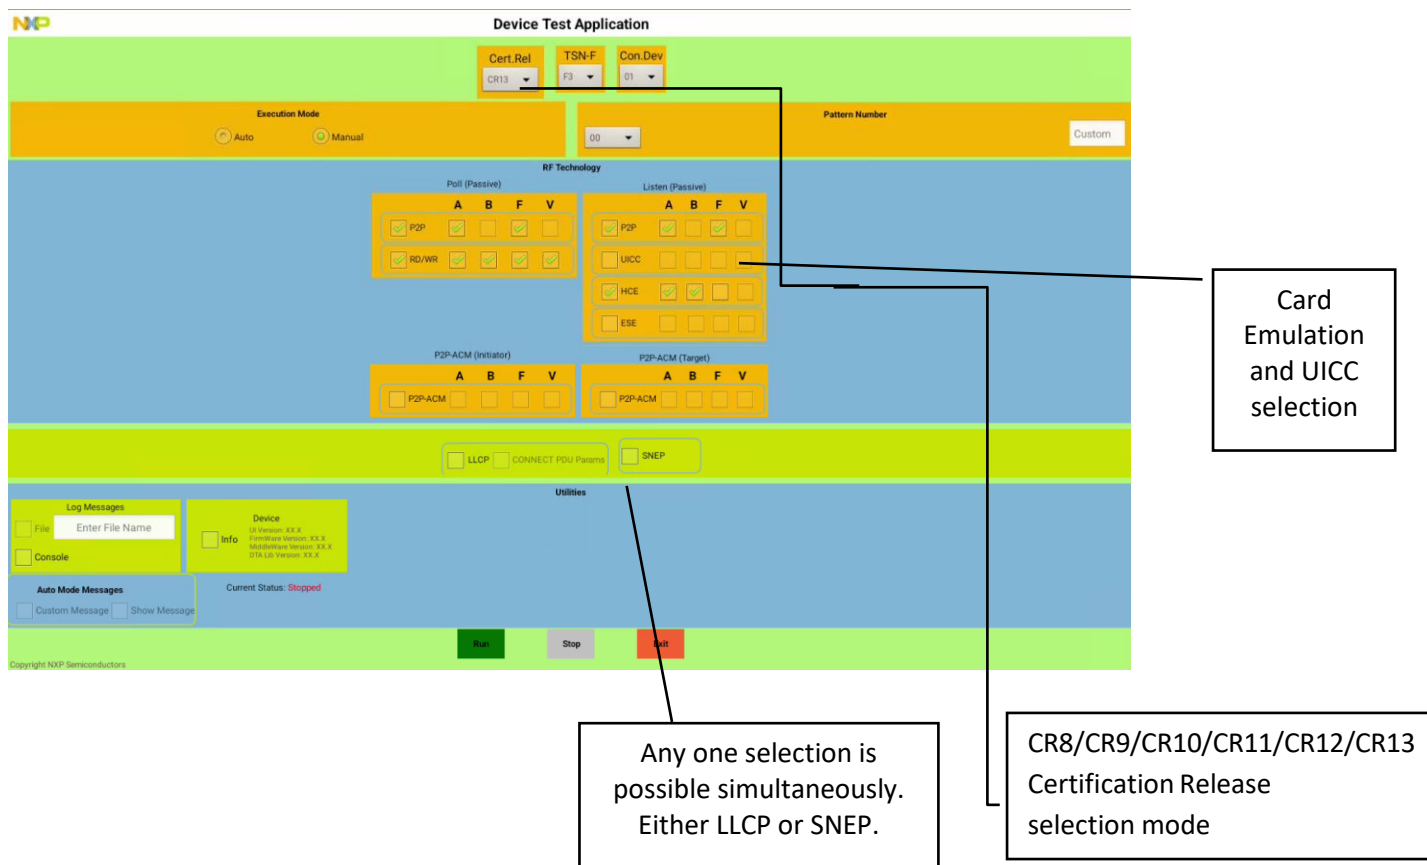

TSN-F Limit selection mode



Device Test Application

Cert.Rel
CR13 ▼

TSN-F
F3 ▼

Con.Dev
01 ▼

Execution Mode
☒ Auto ☐ Manual

Pattern Number

RF Technology


Poll (Passive)


	A	B	F	V
<input checked="" type="checkbox"/> P2P	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/> RD/WR	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Listen (Passive)

	A	B	F	V
<input checked="" type="checkbox"/> P2P	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> UICC	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/> HCE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> ESE	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Before running the DTA application select Connection Device Limit Con.Dev to value 01.

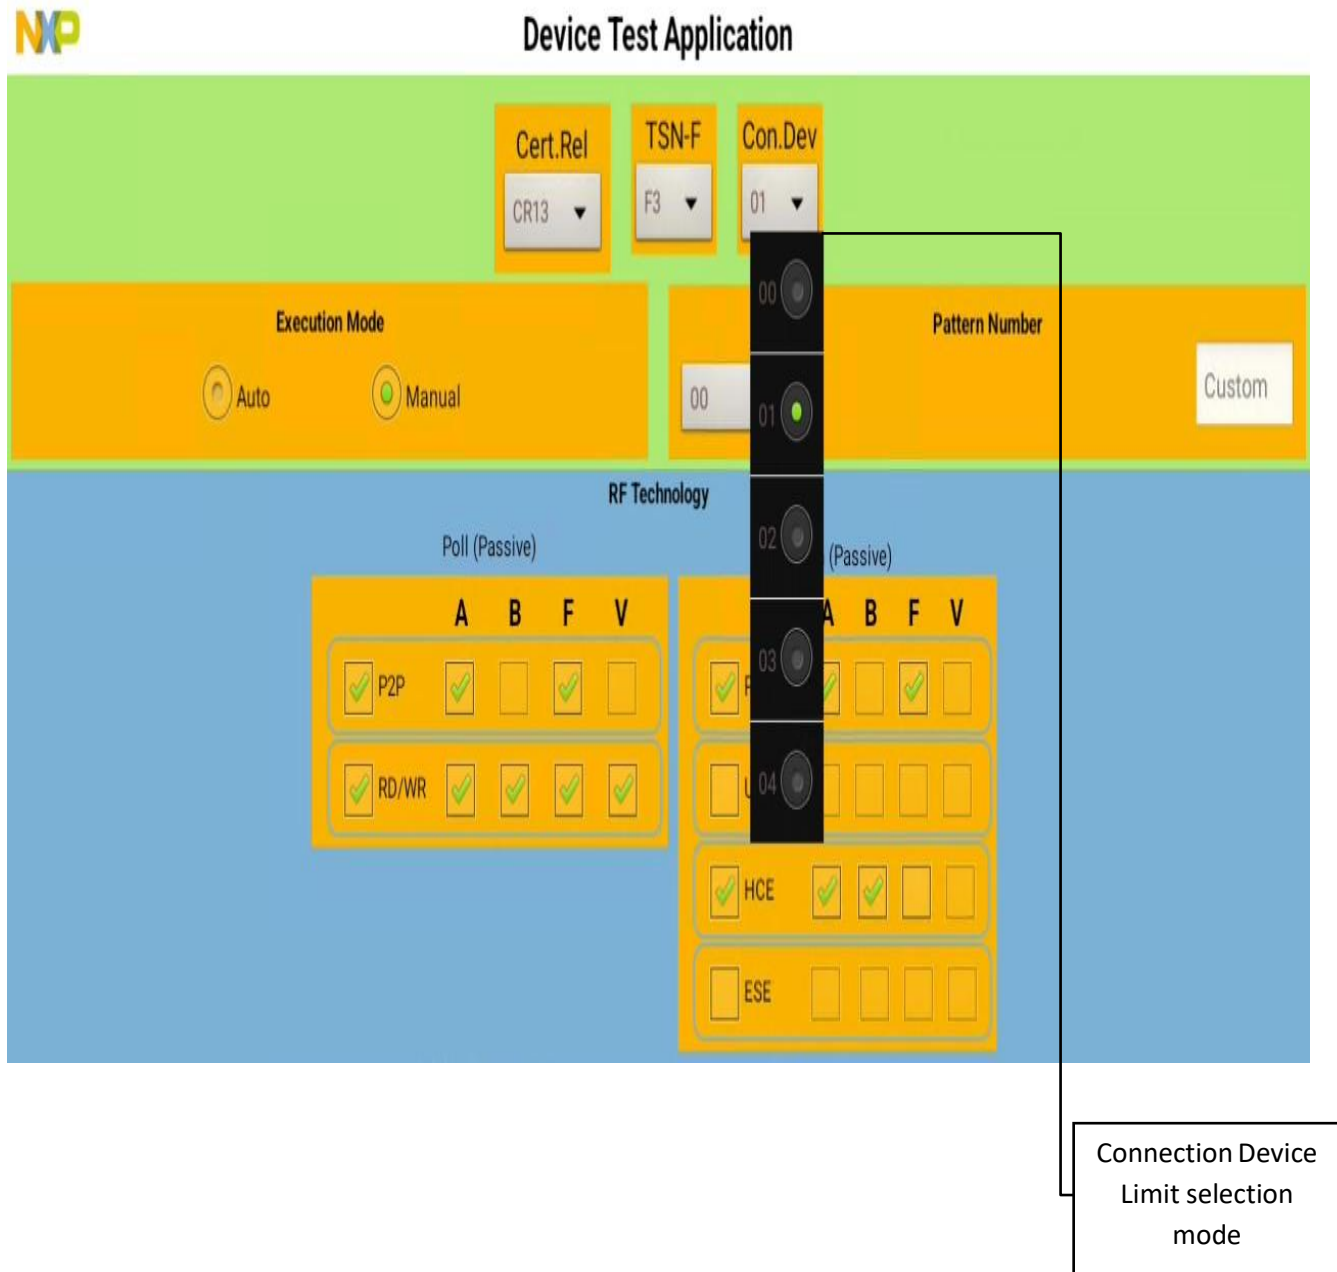

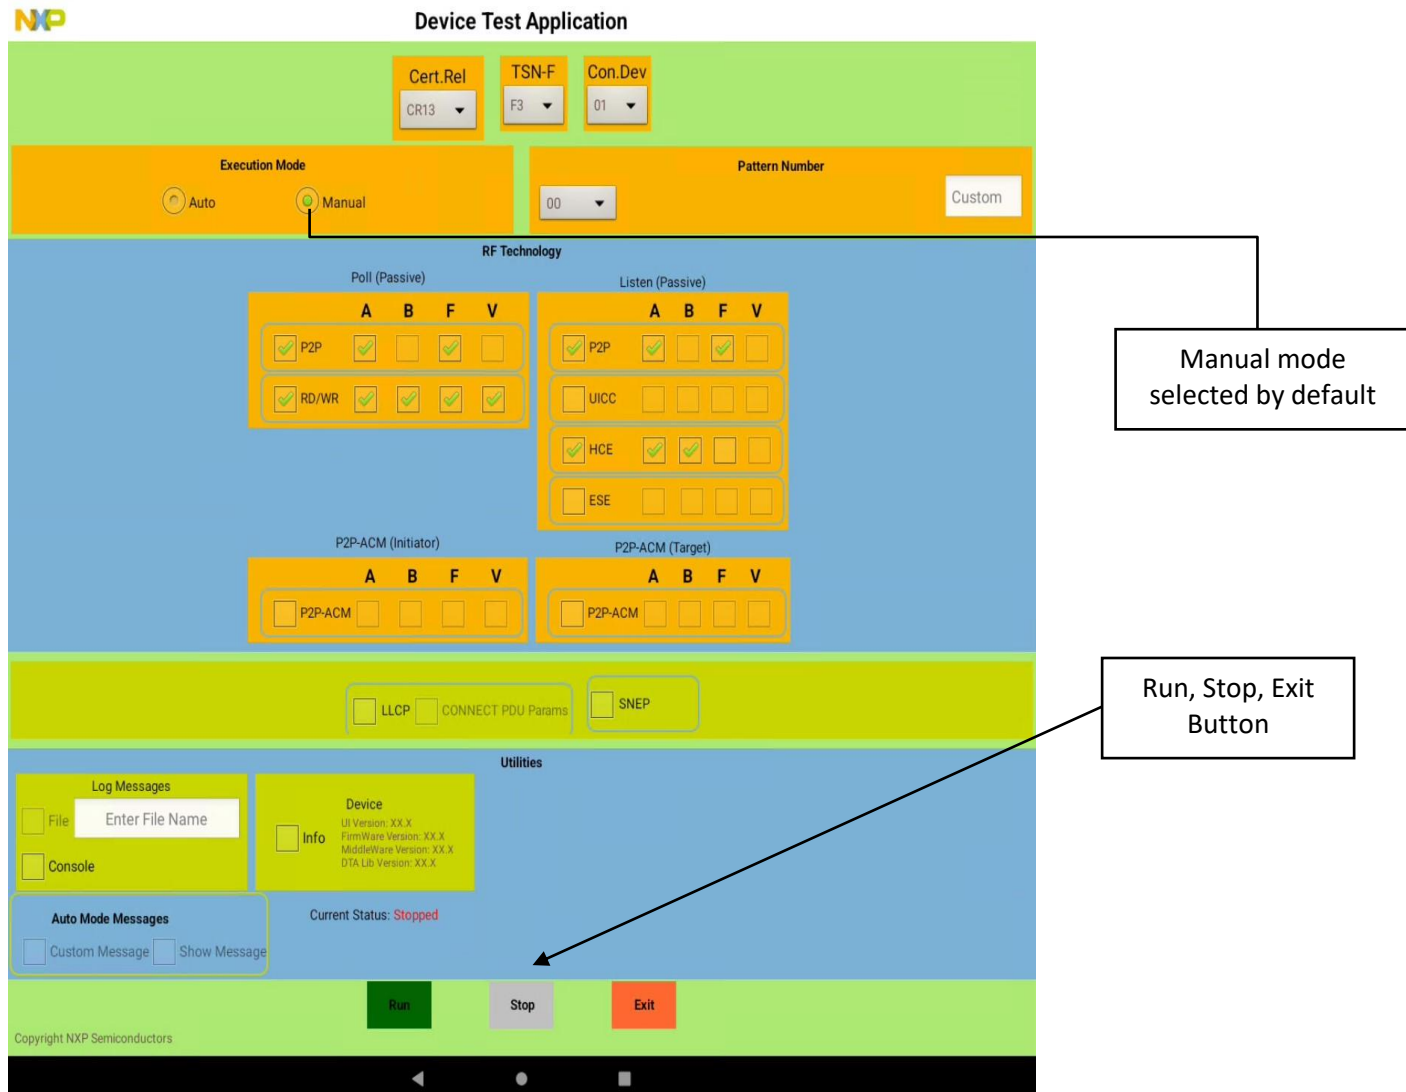

4.2.2 NXP_DTA_UI_SCR_SCENERIO_02: Selections in Manual Mode

This screen is similar to “NXP_DTA_UI_SCR_SCENERIO_01” screen with the changes shown based on the user selection.

The custom pattern number is entered as 0000. Multi pattern number if selected will get cleared. Need to enter hexadecimal pattern number without the prefix 0x. Only 0000 to ffff is allowed to enter. Other entry will show pop-up message as shown in the. Maximum number of bytes allowed is only 4. As soon as the user touches in the custom pattern number box, the keypad pops up as shown in the screen.

Below are RF Technology options available for selection in Poll & Listen mode. In Poll Mode P2P and RD/WR modes are allowed to select. However enabling one technology in one of the poll modes will enable the same technology in other poll mode. Listen mode P2P, UICC , HCE and ESE are allowed to select. In LLCP , parameters in CONNECT PDU is allowed to select .

The screenshot displays the 'Device Test Application' interface. At the top, there are dropdown menus for 'Cert.Rel' (set to CR13), 'TSN-F' (set to F3), and 'Con.Dev' (set to 01). Below these are 'Execution Mode' buttons for 'Auto' and 'Manual', and a 'Pattern Number' field set to '00' with a 'Custom' button. The 'RF Technology' section is divided into 'Poll (Passive)' and 'Listen (Passive)' modes. Each mode has a table of checkboxes for technologies A, B, F, and V. In 'Poll (Passive)', P2P, RD/WR, and HCE are checked. In 'Listen (Passive)', P2P, HCE, and ESE are checked. Below these are 'P2P-ACM (Initiator)' and 'P2P-ACM (Target)' sections, each with a table of checkboxes for A, B, F, and V. The 'Utilities' section at the bottom includes 'Log Messages' (File and Console), 'Device Info' (UI Version: XXX.X, Firmware Version: XXX.X, Middleware Version: XXX.X, DTA Lib Version: XXX.X), 'Auto Mode Messages' (Custom Message and Show Message), and 'Current Status: Stopped'. At the very bottom are 'Run', 'Stop', and 'Exit' buttons. A virtual keypad is visible at the bottom of the screen.

Multi Patten number is cleared

A & F RF Technologies can be selected in both Poll & Listen Modes

Either LLCP or SNEP can be selected at a time.

Keypad pops up

4.2.3 NXP_DTA_UI_SCR_SCENERIO_02: Analog Selection in Manual Mode

The custom pattern number is entered as 1000 and press RUN button then the application will start running in manual mode. The current status will be changed to first **Running** and the text color is in green. Now, all the selections are disabled.

The screenshot displays the NXP Device Test Application interface. At the top, the NXP logo is on the left, and the title "Device Test Application" is centered. Below the title, there are three dropdown menus: "Cert.Rel" (set to CR13), "TSN-F" (set to F3), and "Con.Dev" (set to 01). The "Execution Mode" section has two radio buttons: "Auto" and "Manual" (selected). The "Pattern Number" field is set to 1000. The "RF Technology" section is divided into "Poll (Passive)" and "Listen (Passive)". Under "Poll (Passive)", there are two groups of checkboxes: "A B F V" and "RD/WR". Under "Listen (Passive)", there are two groups of checkboxes: "A B F V" and "HCE". The "P2P-ACM (Initiator)" and "P2P-ACM (Target)" sections each have a group of checkboxes: "A B F V". The "Utilities" section includes checkboxes for "LLCP", "CONNECT PDU Params", and "SNEP". The "Log Messages" section has checkboxes for "File" and "Console". The "Auto Mode Messages" section has checkboxes for "Custom Message" and "Show Message". The "Device" section shows version information: "UI Version: XX.X", "FirmWare Version: XX.X", "MiddleWare Version: XX.X", and "DTA Lib Version: XX.X". The "Current Status" is displayed as "Stopped". At the bottom, there are three buttons: "Run" (green), "Stop" (grey), and "Exit" (red). A callout box points to the "Pattern Number" field, stating "Custom pattern number is entered". Another callout box points to the "LLCP", "CONNECT PDU Params", and "SNEP" checkboxes, stating "Any one selection is possible simultaneously. Either LLCP or SNEP."

Custom pattern number is entered

Any one selection is possible simultaneously. Either LLCP or SNEP.

4.2.4 NXP_DTA_UI_SCR_SCENERIO_03: De-selections in Manual Mode

The application Current Status should be **Stopped** for de-selections. In the below screen the user has unchecked the 'A' RF Technology in P2P Listen mode. If all the technologies are unchecked in any mode, then the corresponding mode will automatically unchecked.


The Device Info check box is checked, which shows the device information, as soon as the Device Info check box is checked. If the user unchecks, then the info will not be shown.

The screenshot displays the 'Device Test Application' interface. At the top, there are three dropdown menus: 'Cert.Rel' (CR13), 'TSN-F' (F3), and 'Con.Dev' (01). Below these, the 'Execution Mode' is set to 'Manual' (radio button selected), and the 'Pattern Number' is '00' with a 'Custom' button. The 'RF Technology' section is divided into 'Poll (Passive)' and 'Listen (Passive)'. Under 'Poll (Passive)', 'P2P' and 'RD/WR' are checked, and 'A', 'B', 'F', and 'V' are also checked. Under 'Listen (Passive)', 'P2P' is unchecked, 'UICC' is unchecked, 'HCE' is checked, and 'ESE' is unchecked. At the bottom, there are two sections: 'P2P-ACM (Initiator)' and 'P2P-ACM (Target)', each with checkboxes for 'A', 'B', 'F', and 'V'.

Type A RF
Technology is
unchecked in P2P
Listen mode

4.2.5 NXP_DTA_UI_SCR_SCENERIO_05: UI toast messages for HCE NFC-F:

To run the Listen mode HCE NFC-F test case need to disable HCE NFC A & NFC B technology & enable HCE NFC F technology in Listen Mode.

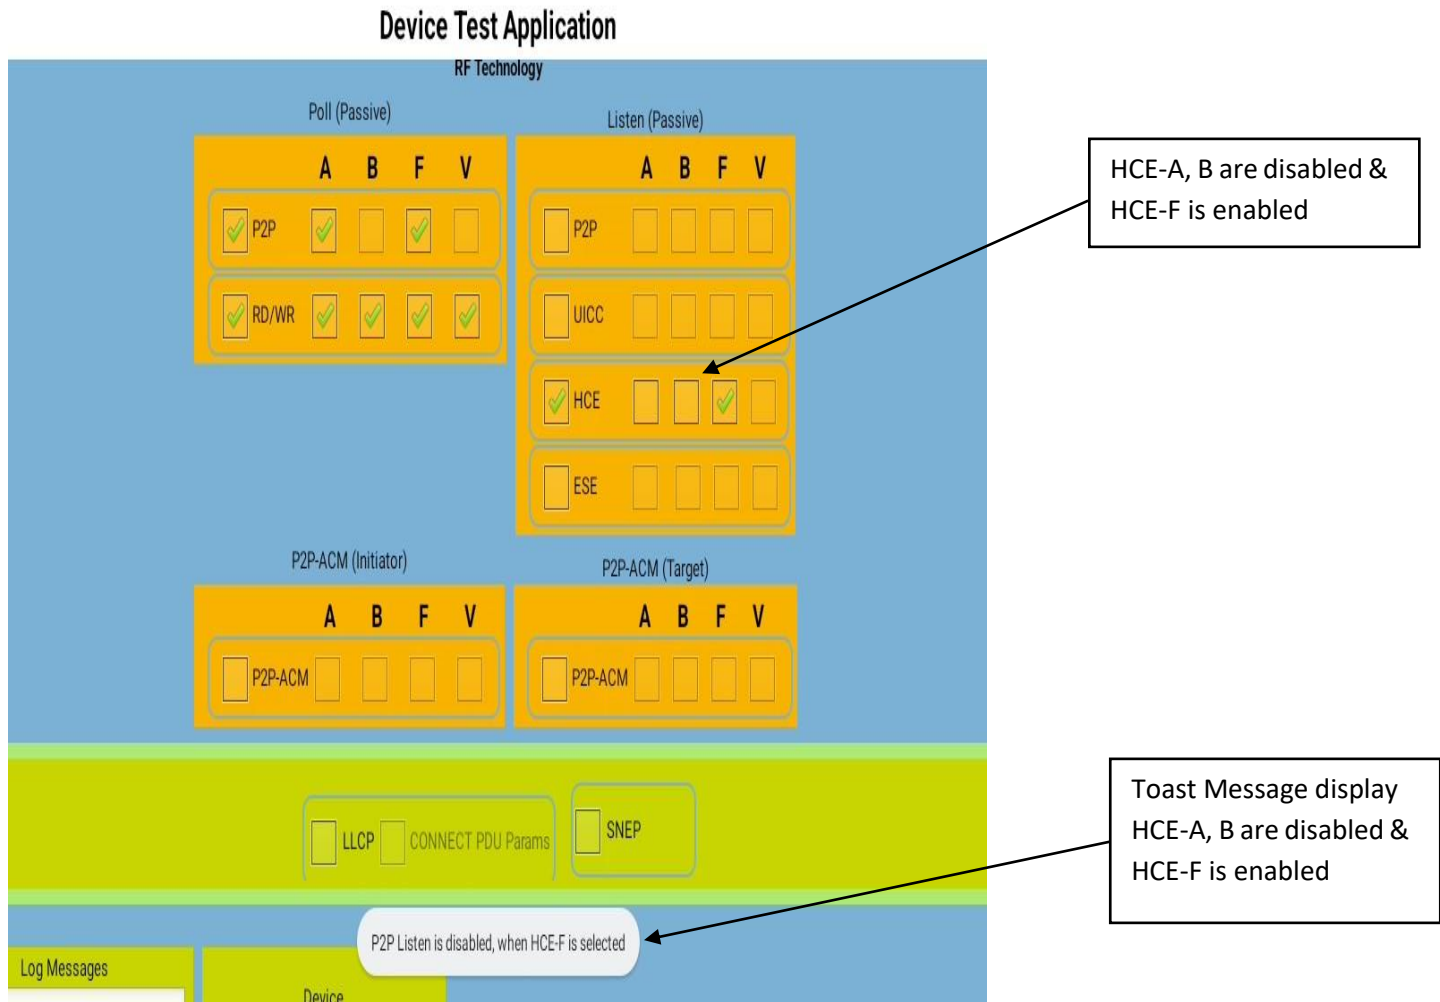

To run P2P test cases in Listen mode, deselect HCE NFC-F.

Device Test Application

Execution Mode: Auto (selected), Manual

Pattern Number: 00, Custom

RF Technology

Poll (Passive)

	A	B	F	V
<input checked="" type="checkbox"/> P2P	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/> RD/WR	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Listen (Passive)

	A	B	F	V
<input checked="" type="checkbox"/> P2P	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> UICC	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> HCE	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/> ESE	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

P2P-ACM (Initiator)

	A	B	F	V
<input type="checkbox"/> P2P-ACM	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

P2P-ACM (Target)

	A	B	F	V
<input type="checkbox"/> P2P-ACM	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


Bottom Bar: LLCP, CONNECT PDU Params, CONNECT

Toast Message: HCE-F is disabled, when P2P Listen is selected

P2P Listen selected & HCE-F is disabled.


Toast Message display P2P Listen selected & HCE-F is disabled.

When HCE NFC-F technology enabled in DTA application, it will disable P2P A & F technology with Toast message.

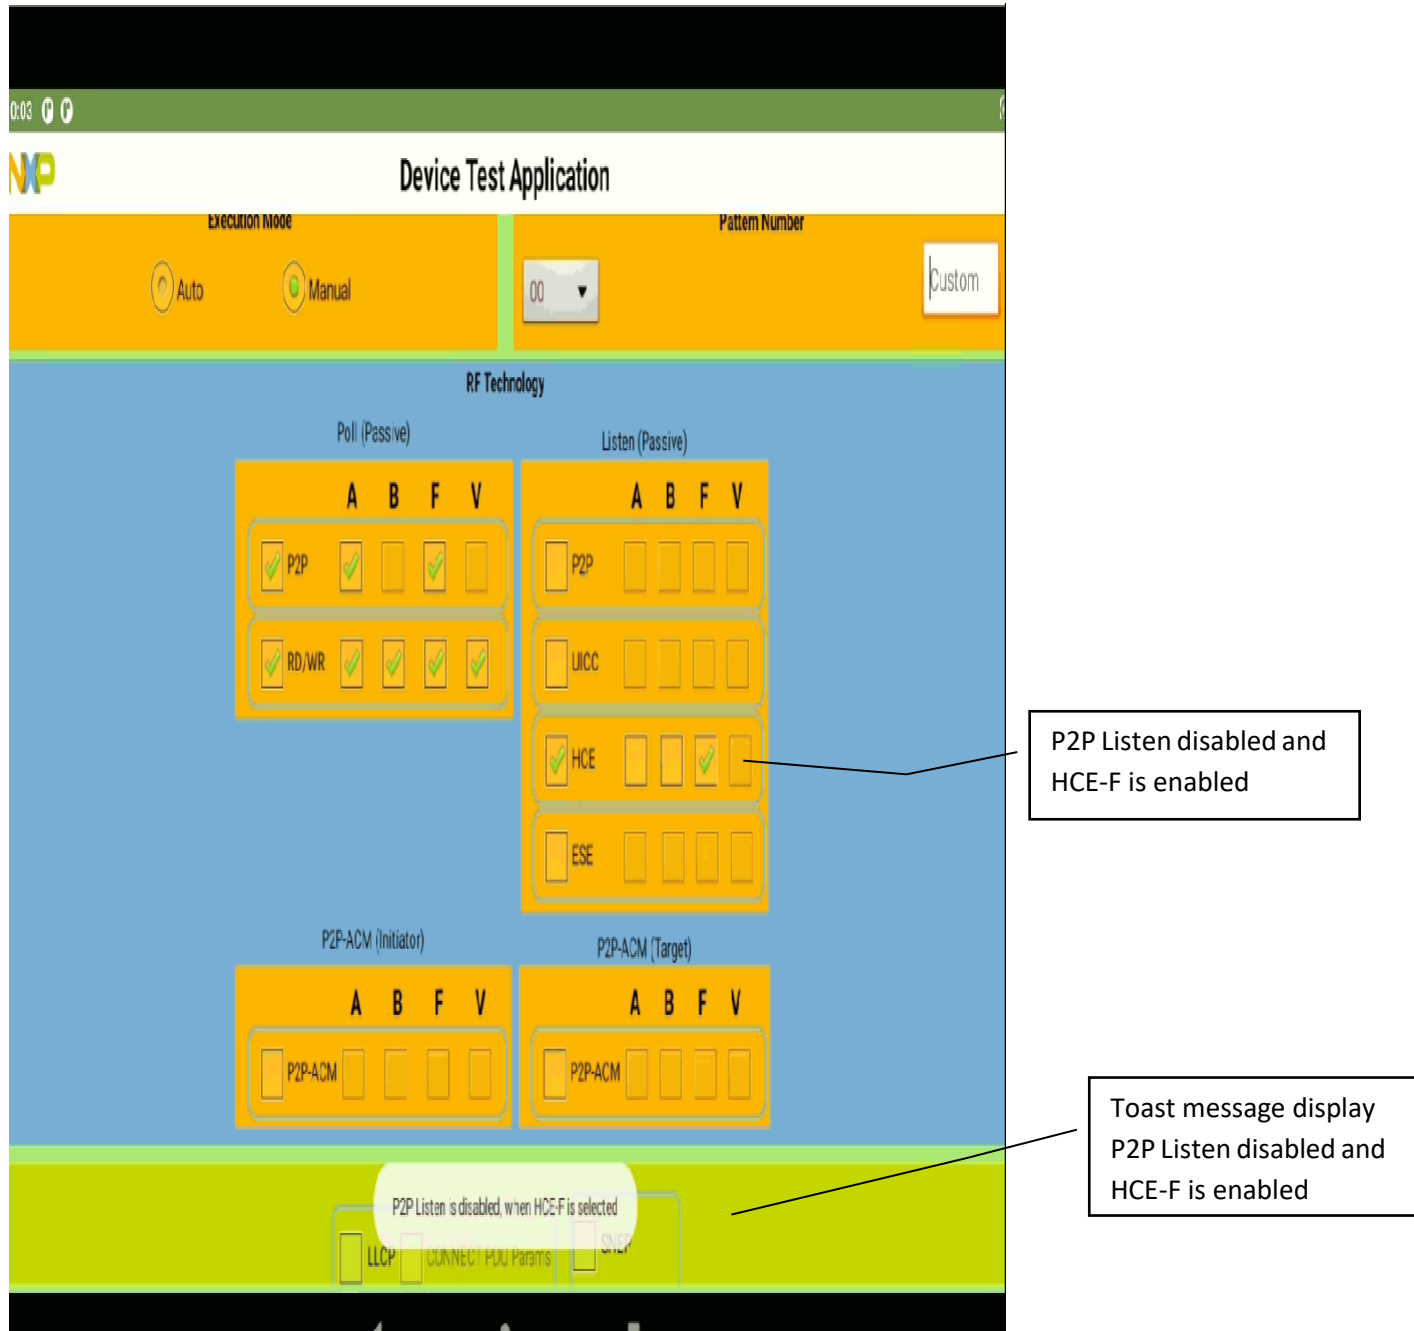


4.2.8 NXP_DTA_UI_SCR_SCENERIO_06: Multi Pattern Number Selection In Manual Mode

The user selecting the pattern number form Multi option drop down, see the Custom selection is cleared.

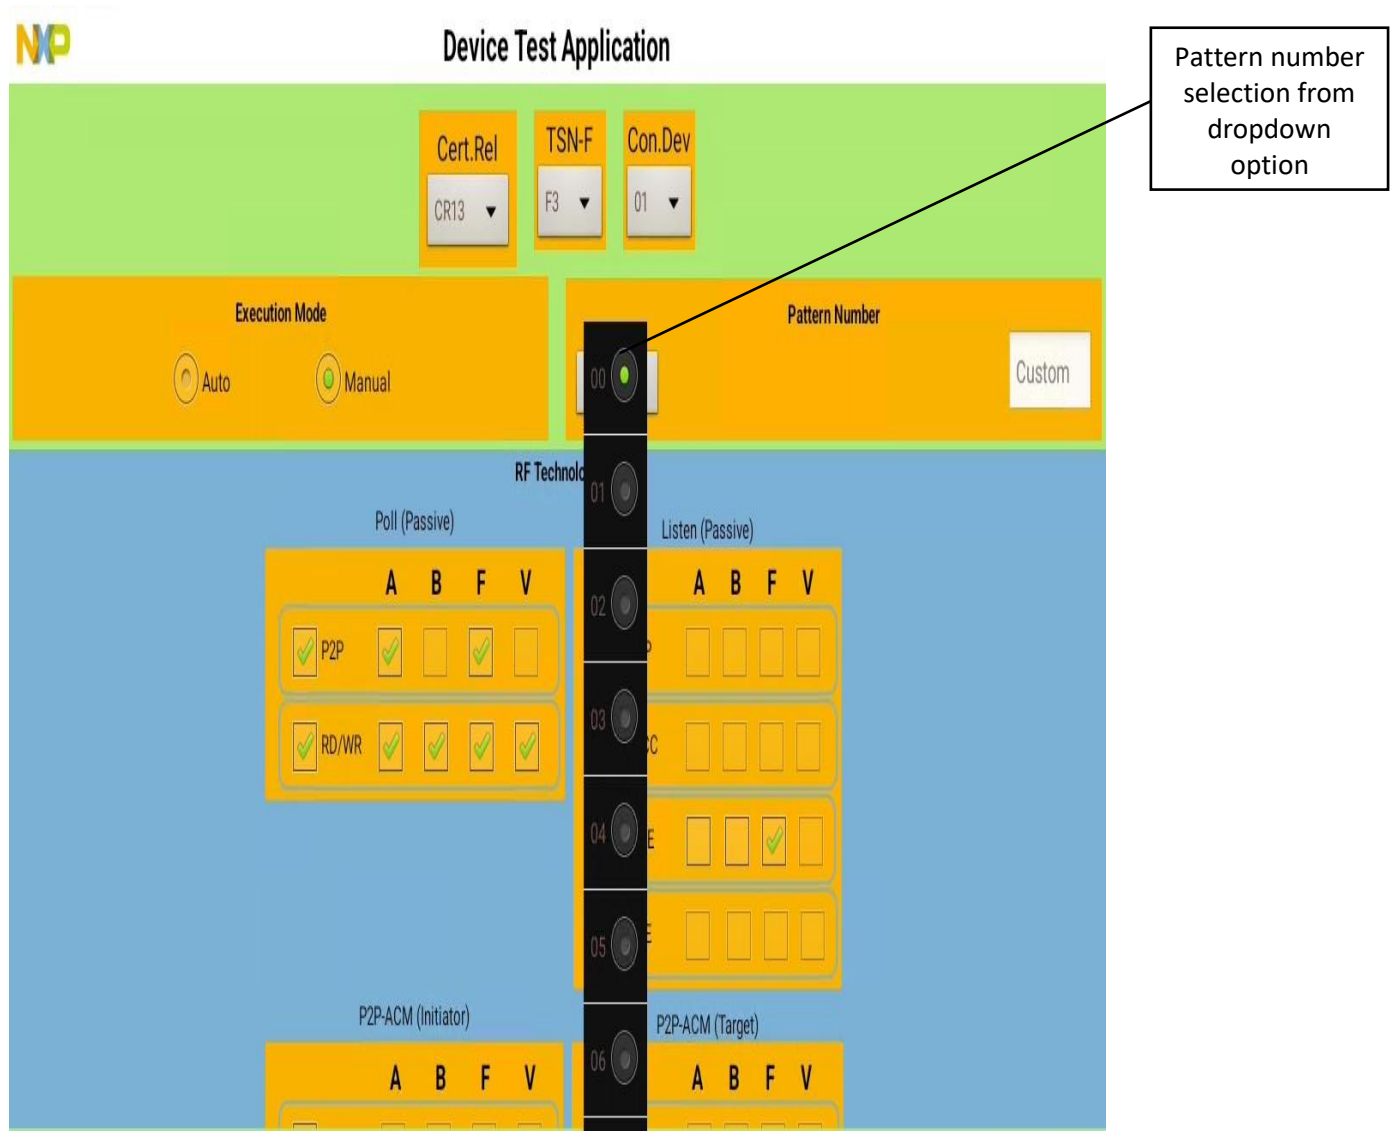

4.2.9 NXP_DTA_UI_SCR_SCENERIO_07: Different - Multi Pattern Number Selection


Different pattern number selection using Multi pattern number drop down when the application is stopped.

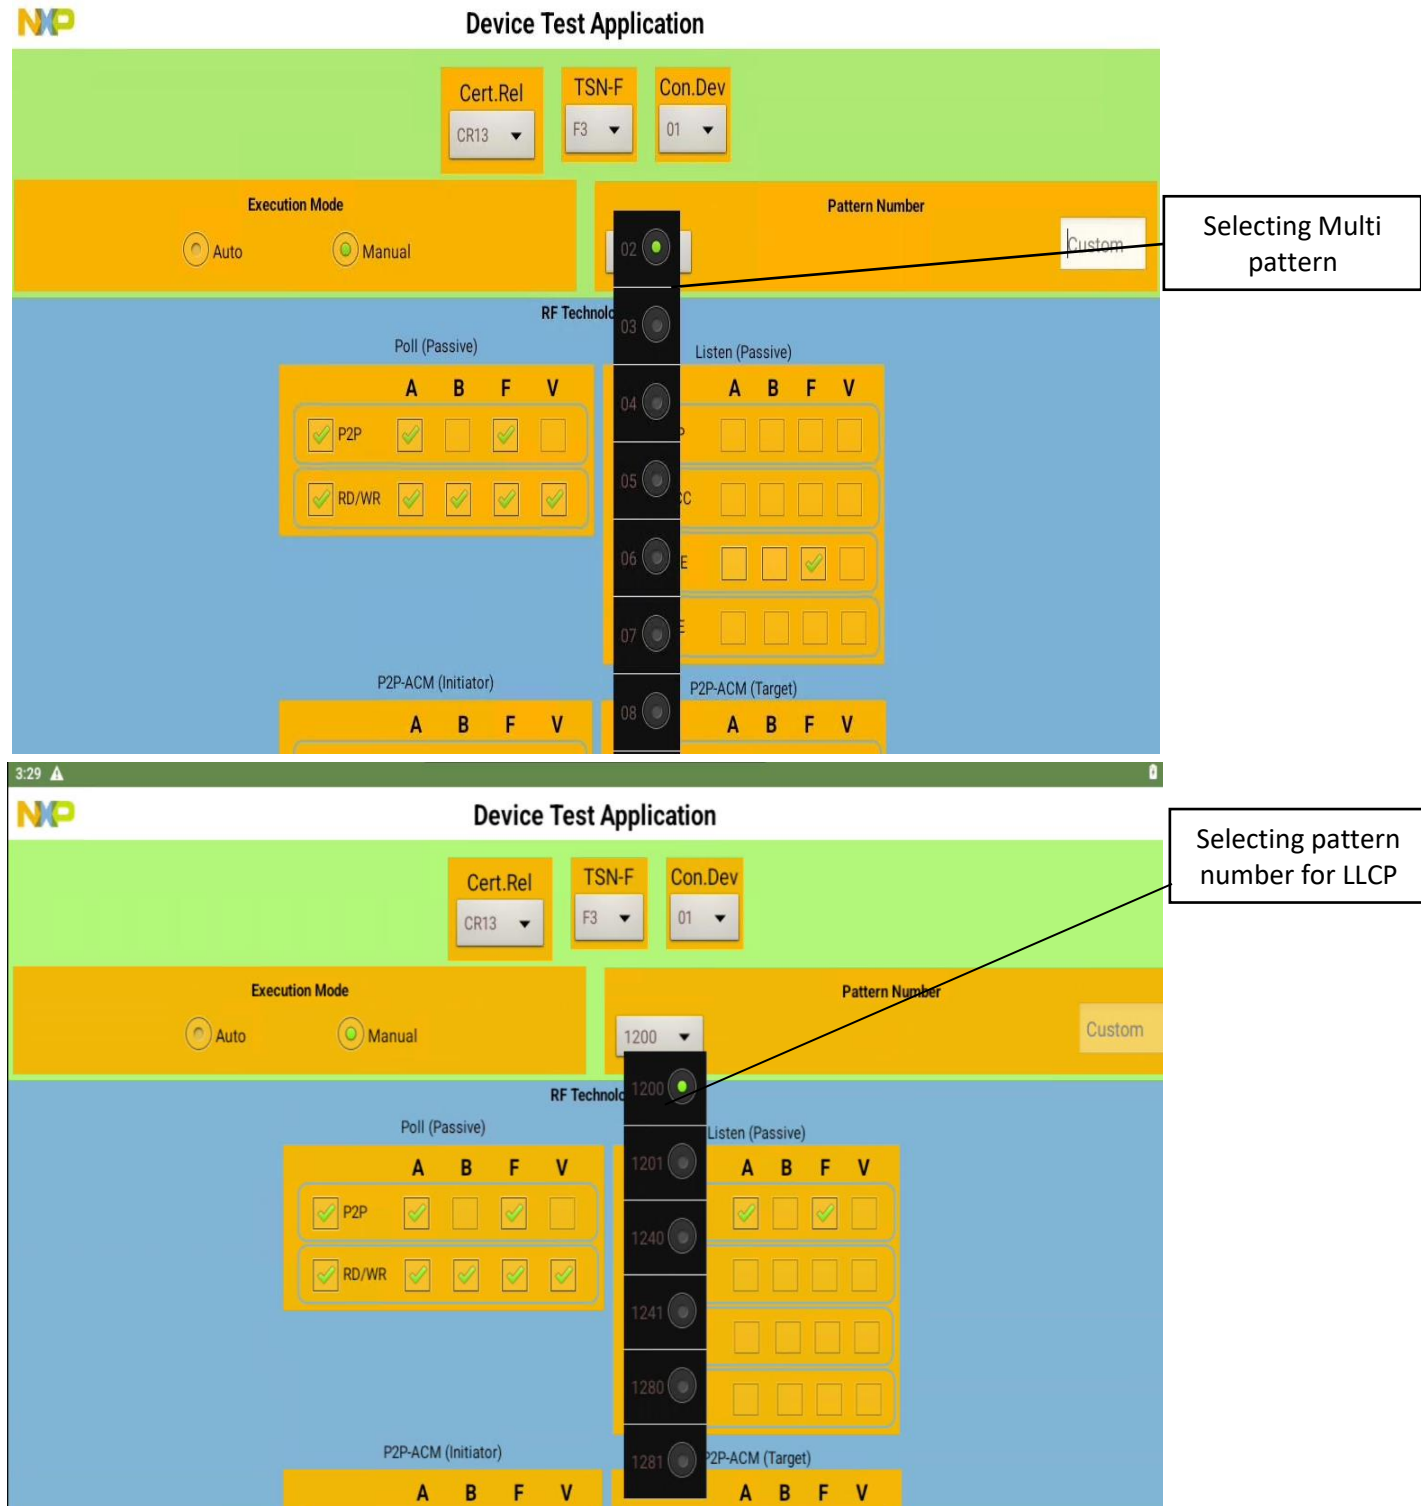

4.2.10 NXP_DTA_UI_SCR_SCENERIO_08: Running in Manual Mode

In this screen, the user press RUN button then the application will start running in manual mode. The current status will be changed to **Running** and the text color is in green. During running, no other selections are allowed.


The RUN button will turn to GREY color. STOP to RED color & Enabled to use. EXIT to GREY color.

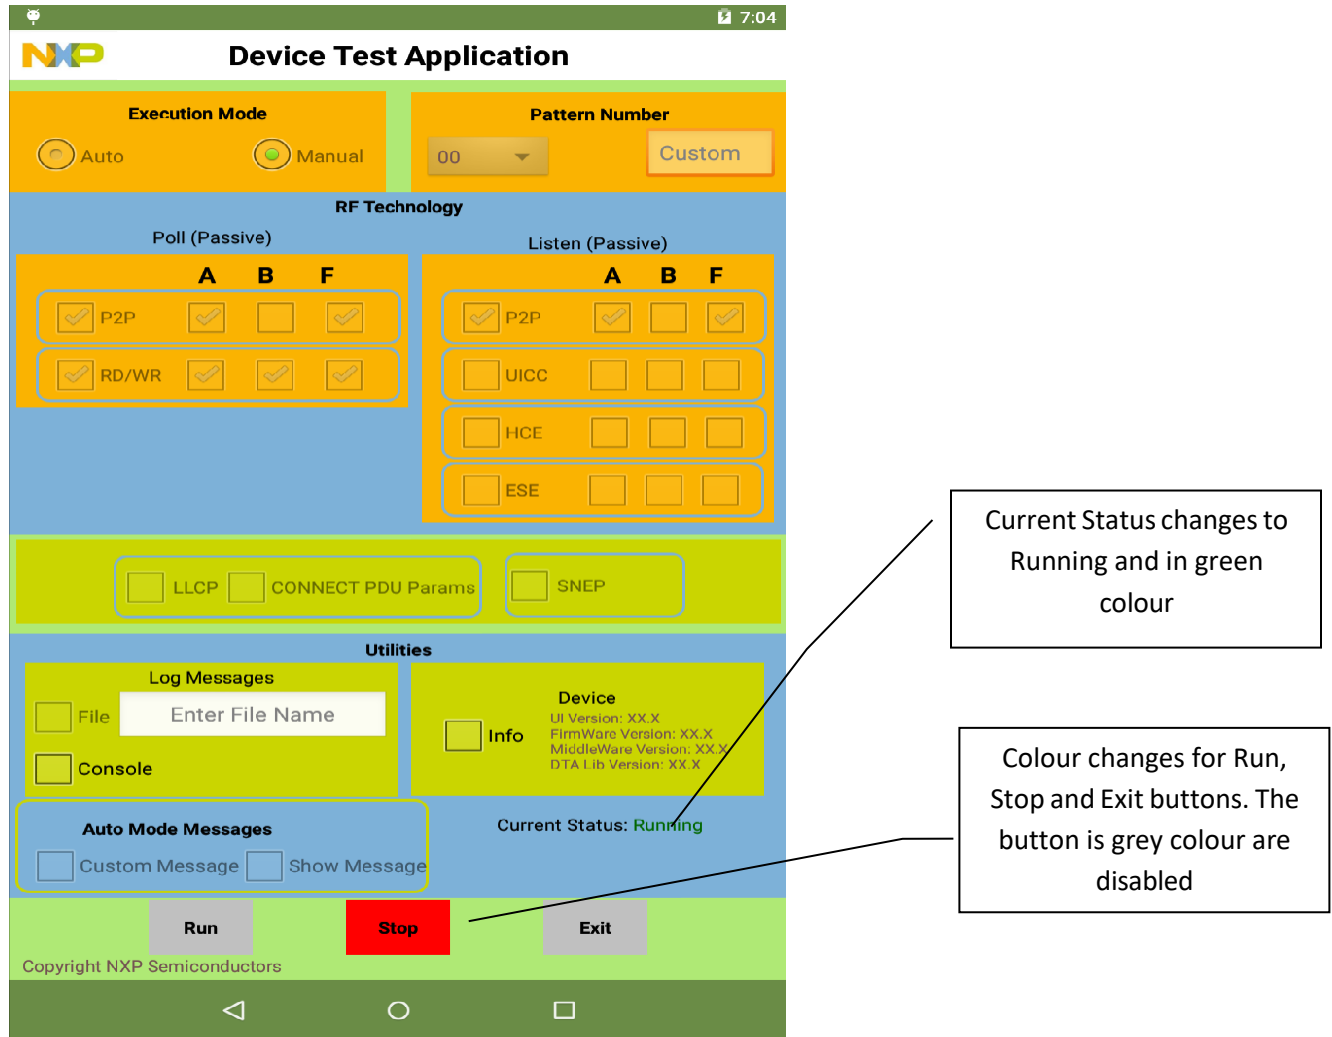

4.2.11 NXP_DTA_UI_SCR_SCENERIO_09: Stopping in Manual Mode

In the previous screen the user pressed Stop button to stop the application. Now the application has stopped as shown in the current screen. The current status is changed to Stopped and is in red color.

Now all the options are enabled for selection except the Custom Message and Show Message options in Manual mode.

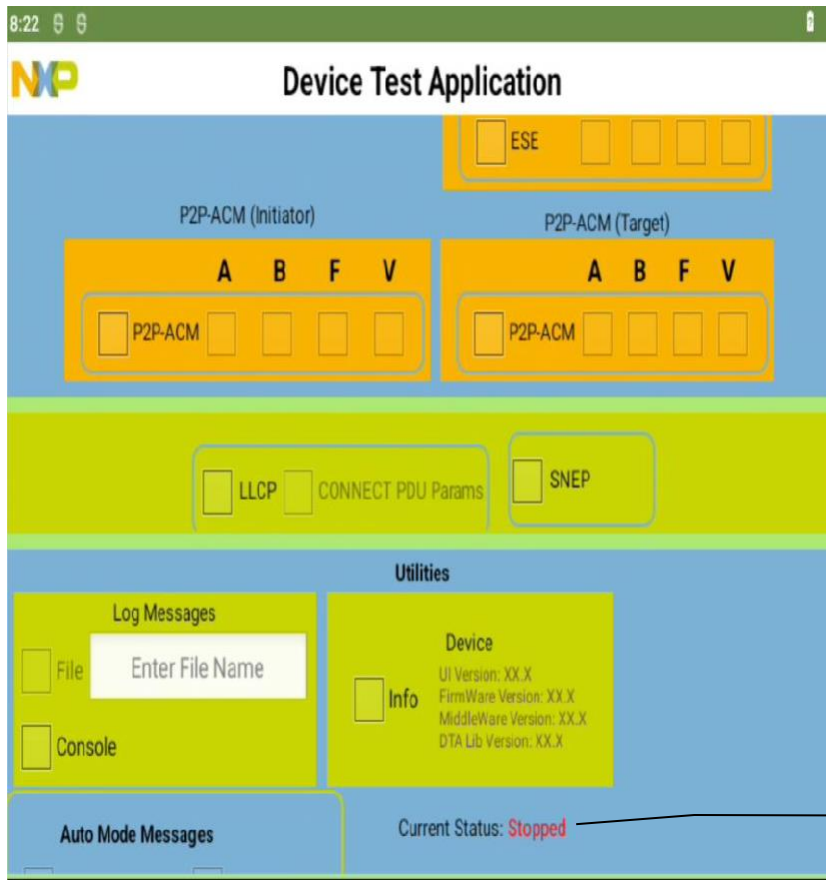


Current status changed to Stopped and the turned to RED colour

4.2.12 NXP_DTA_UI_SCR_SCENERIO_10: Application Exit

If the user press Exit button when the application is in Stopped state, then a pop-up alerts the user for Exit confirmation.

If YES then exits otherwise remains in default screen.

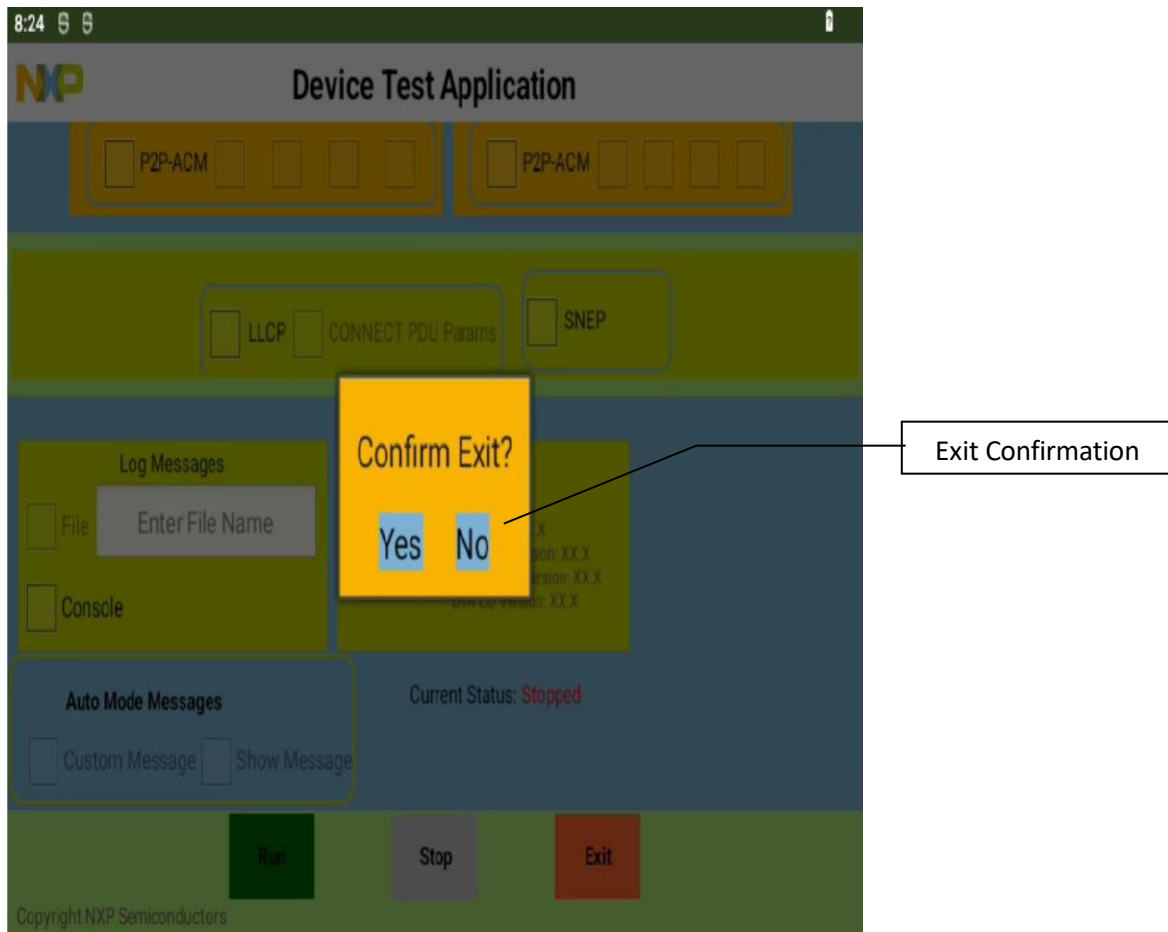

5. References

- None

6. Legal Information

6.1. Disclaimers

General — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in medical, military, aircraft, space or life support equipment, nor in applications where failure or malfunction of a NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is for the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

6.2. Trademarks

Notice: All referenced brands, product names, service names and trademarks are property of their respective owners.

Mifare® — is a registered trademark of NXP B.V.