



WINC Driver Demonstrations

MPLAB Harmony Integrated Software Framework

WINC Driver Demonstrations

Introduction

These applications demonstrate how to use the MPLAB Harmony WINC Driver. This section describes the hardware requirements and procedures to build and execute the demonstration projects on Microchip development tools. Six demonstrations are provided:

- `ap_scan`– In this demonstration, the WINC Driver will scan for available BSSs and display the list
- `power_save_mode_example`– In this demonstration, the WINC's power save feature is demonstrated.
- `wifi_winc_tcp_client` – In this demonstration, the WINC Driver will connect to a BSS and begin a TCP client socket to a remote server service.
- `wifi_provision_via_ble`– In this demonstration, the WINC3400 will advertise over BLE. BLE connection is made to provision a WiFi connection.
- `wifi_provisioning_via_softap` – In this demonstration, the WINC Driver will advertise a SoftAP. The SoftAP connection is leveraged to provision a WiFi connection.
- `wifi_provisioning_via_wps` – In this demonstration, the WINC Driver will advertise a SoftAP. The SoftAP connection is leveraged to provision a WiFi connection.
- `wifi_tcp_server_in_softap`– In this demonstration, the WINC Driver will advertise a SoftAP. The SoftAP connection is leveraged to provision a WiFi connection.
- `wifi_winc_sta_bypass`– In this demonstration, the WINC Driver will advertise a SoftAP. The SoftAP connection is leveraged to provision a WiFi connection.

To know more about the MPLAB Harmony WINC Driver, configuring the WINC Driver and the APIs provided by the WINC Driver, refer to the WINC Driver Library documentation.

MPAB X IDE Project Configurations



This table lists and describes the supported configurations of the demonstrations, which are located within `firmware\src\config`.

Project Configuration Name	BSP Used	Description
<code>sam_d21_xpro_winc1500.X</code>	SamD21	This demonstration runs on the SAMD21host and WINC1500 Daughter Board.
<code>sam_d21_xpro_winc3400.X</code>	SAMD21	This demonstration runs on the SAMD21host and WINC3400 Daughter Board.
<code>sam_e54_xpro_winc1500.X</code>	SAME54	This demonstration runs on the SAME54host and WINC1500 Daughter Board.
<code>sam_e54_xpro_winc3400.X</code>	SAME54	This demonstration runs on the SAME54host and WINC3400 Daughter Board.

Configuring the Hardware

The debug UART and USB ports can be used to read the output logs on a terminal software.

WINC1500 with SAMD21 shown below

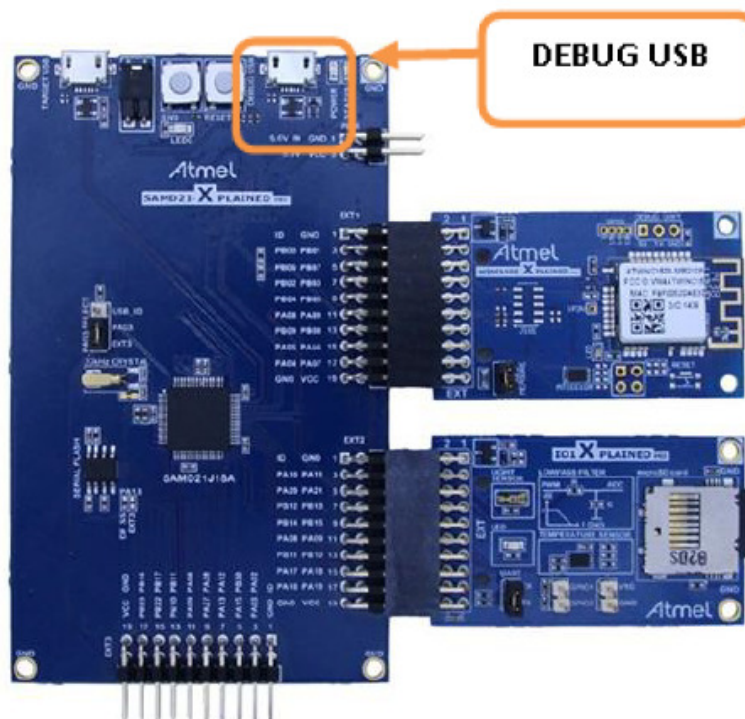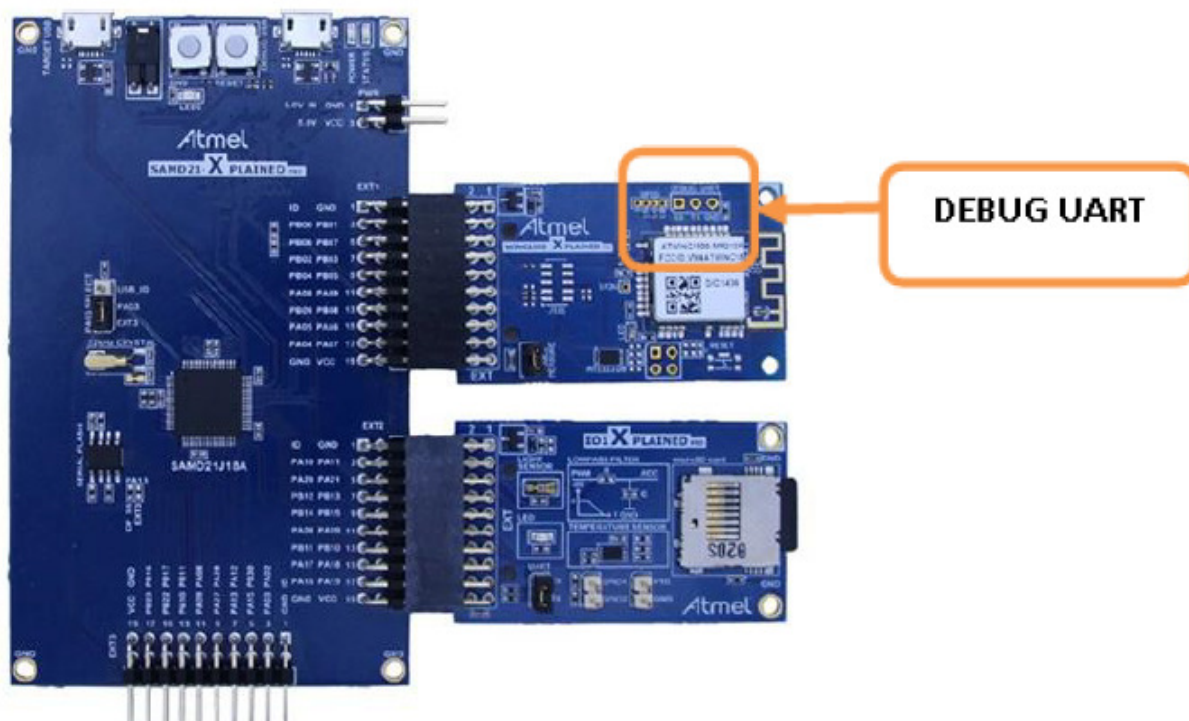

WINC1500 with SAME54 shown below



ap_scan

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the winc.X project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir>\apps\ap_scan\firmware

MPAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.

Project Name	Location
winc.X	<install-dir>\apps\ap_scan\firmware

Configuring the Demonstration

This demonstration can be configured in the following ways.

- The BSS found during the BSS scan is listed.

To configure these aspects of the demonstration.

1. Ensure the project is set as the main project and open the MPLAB Harmony Configurator.

2. Open the project configuration when prompted.
3. Select 'Generate Code' to update the MPLAB Harmony configuration.
4. Build and run the demonstration.

Running the Demonstration

Once the demonstration application has been compiled successfully for the intended configuration, program the firmware into the target device.

Upon execution, the application will transmit the following via the UART connection.

```
WINC: Initializing...
Chip ID 1503a0
DriverVerInfo: 0x13301361

WINC1500 Firmware Data:
Firmware Ver: 19.6.1 SVN Rev 16761
Firmware Built at May 23 2018 Time 14:39:16
Firmware Min Driver Ver: 19.3.0
Driver Ver: 19.6.1
Driver Built at Jan 01 2019 Time 12:00:00

=====
WINC BSS Scan Example
=====

Scan complete, 4 BSS(s) found
BSS found: RSSI: -72 ExampleAP1
BSS found: RSSI: -54 ExampleAP2
BSS found: RSSI: -63 ExampleAP3
BSS found: RSSI: -63 ExampleAP4
```

power_save_mode_example

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the winc.X project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir>\apps\power_save_mode_example.

MPAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.

Project Name	Location
winc.X	<install-dir>\apps\power_save_mode_example\firmware

Configuring the Demonstration

This demonstration can be configured in the following ways.

- The Power save mode is demonstrated depending on the value configured in example_conf.h.

To configure these aspects of the demonstration.

1. Ensure the project is set as the main project and open the MPLAB Harmony Configurator.
2. Open the project configuration when prompted.
3. Select 'Generate Code' to update the MPLAB Harmony configuration.
4. Build and run the demonstration.

Running the Demonstration

Once the demonstration application has been compiled successfully for the intended configuration, program the firmware into the target device.

Upon execution, the application will transmit the following via the UART connection.

In `example_conf.h`, configure the desired settings or power save.

```
#define MAIN_PS_SLEEP_MODE      WDRV_WINC_PS_MODE_MANUAL
/* WDRV_WINC_PS_MODE_MANUAL / WDRV_WINC_PS_MODE_AUTO_LOW_POWER / WDRV_WINC_PS_MODE_OFF */
```

```
/** Request sleep time for PowerSave manual mode */
```

```
#define MAIN_REQUEST_SLEEP_TIME    5000
```

WINC: Initializing...

Chip ID 1503a0

DriverVerInfo: 0x13301361

WINC1500 Firmware Data:

Firmware Ver: 19.6.1 SVN Rev 16761

Firmware Built at May 23 2018 Time 14:39:16

Firmware Min Driver Ver: 19.3.0

Driver Ver: 19.6.1

Driver Built at Jan 01 2019 Time 12:00:00

=====

WINC Power Save Mode Example

=====

WDRV_WINC_PS_MODE MANUAL

-
-
-
-
-

wifi_winc_tcp_client

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the `winc.X` project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir>\apps\tcp_client

MPAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.

Project Name	Location
winc.X	<install-dir> \apps\tcp_client\firmware

Configuring the Demonstration

This demonstration can be configured in the following ways.

- The BSS to connect to.
- The TCP server address and port to connect to.
- The receive buffer size.
- The message which should be sent as the first data once connected to the server.

To configure these aspects of the demonstration.

1. Ensure the project is set as the main project and open the MPLAB Harmony Configurator.
2. Open the project configuration when prompted.
3. Expand the first 'Example Configuration' section and configure the demonstration appropriately.
 - a. Configure the BSSs SSID, authentication and WPA PSK (if appropriate).
 - b. Configure the TCP server IP address and port.
 - c. Configure the receive buffer size.
 - d. Configure the first message contents.
4. Select 'Generate Code' to update the MPLAB Harmony configuration.
5. Build and run the demonstration.

Running the Demonstration

Once the demonstration application has been compiled successfully for the intended configuration, program the firmware into the target device.

Upon execution, the application will transmit the following via the UART connection.

```
WINC: Initializing...
Chip ID 1503a0
DriverVerInfo: 0x13301361

WINC1500 Firmware Data:
Firmware Ver: 19.6.1 SVN Rev 16761
Firmware Built at May 23 2018 Time 14:39:16
Firmware Min Driver Ver: 19.3.0
Driver Ver: 19.6.1
Driver Built at Jan 01 2019 Time 12:00:00

=====
WINC TCP Client Example
=====

Connected
IP address is 192.168.0.51
Socket 0 session ID = 1
Socket 0 connect success
```

```
Socket 0 send completed
Socket receive, size = 30 bytes [TCP message from WIN...]
```

wifi_provision_via_ble

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the WINC3400 winc.X project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir>\apps\wifi_provision_via_ble.

MPAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.

Project Name	Location
winc.X	<install-dir> \apps\wifi_provision_via_ble\firmware

Configuring the Demonstration

The BLE provisioning feature is demonstrated using this application and the Microchip Bluetooth App.

To configure these aspects of the demonstration.

1. Ensure the project is set as the main project and open the MPLAB Harmony Configurator.
2. Open the project configuration when prompted.
3. Select 'Generate Code' to update the MPLAB Harmony configuration.
4. Build and run the demonstration.
5. Use Microchip Bluetooth App (MBD App) to connect and share details for provisioning over Bluetooth.

Running the Demonstration

Once the demonstration application has been compiled successfully for the intended configuration, program the firmware into the target device.

Upon execution, the application will transmit the following via the UART connection.

```
WINC: Initializing...
Chip ID 1503a0
DriverVerInfo: 0x13301361

WINC3400 Firmware Data:
Firmware Ver: 1.2.2
Firmware Built at May 23 2018 Time 14:39:16
Firmware Min Driver Ver: 19.3.0
Driver Ver: 1.2.2
Driver Built at Jan 01 2019 Time 12:00:00

=====
WINC3400 BLE WiFi Provisioning Example
=====
BLE provisioning started
Scanning for BSSs....
```



```
Scan complete, 5 BSS(s) found
BSS found: RSSI: -72 ExampleAP1
BSS found: RSSI: -54 ExampleAP2
BSS found: RSSI: -63 ExampleAP3
BSS found: RSSI: -63 ExampleAP4
Provisioning data received
Connecting to: ExampleAP1
```

wifi_provisioning_via_softap

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the winc.X project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir>\apps\wifi_provisioning_via_softap

MPAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.

Project Name	Location
winc.X	<install-dir>\apps\wifi_provisioning_via_softap\firmware

Configuring the Demonstration

The Provisioning via SoftAP is demonstrated using this application and the Android App included with the Application example.

To configure these aspects of the demonstration.

1. Ensure the project is set as the main project and open the MPLAB Harmony Configurator.
2. Open the project configuration when prompted.
3. Select 'Generate Code' to update the MPLAB Harmony configuration.
4. Build and run the demonstration.
5. Use provision_ap apk to connect and share details for provisioning over WiFi.

Running the Demonstration

Once the demonstration application has been compiled successfully for the intended configuration, program the firmware into the target device.

Upon execution, the application will transmit the following via the UART connection.

```
WINC: Initializing...
Chip ID 1503a0
DriverVerInfo: 0x13301361

WINC3400 Firmware Data:
Firmware Ver: 1.2.2
Firmware Built at May 23 2018 Time 14:39:16
Firmware Min Driver Ver: 19.3.0
Driver Ver: 1.2.2
Driver Built at Jan 01 2019 Time 12:00:00
```

```
=====
WINC WiFi Provisioning Soft AP Example
=====

*

AP started, you can connect to WINC1500_PROVISION_AP
On the android device, connect to WINC1500_PROVISION_AP then run setting app
Bind on socket 0 successful, server_socket = 0
Listen on socket 0 successful
AP Mode: Station connected
AP Mode: Station IP address is 192.168.1.100
Connection from 192.168.1.100:47600
Disable to AP.
AP Mode: Station disconnected
STA mode: Station connected
STA Mode: Station IP address is 192.168.0.103
```

wifi_provisioning_via_wps

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the winc.X project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir>\apps\wifi_provisioning_via_wps.

MPLAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.

Project Name	Location
winc.X	<install-dir>\apps\wifi_provisioning_via_wps\firmware

Configuring the Demonstration

The Provisioning via WPS is demonstrated using this application and the WPS PBC/PIN in a compatible AP.

To configure these aspects of the demonstration.

1. Ensure the project is set as the main project and open the MPLAB Harmony Configurator.
2. Open the project configuration when prompted.
3. Select 'Generate Code' to update the MPLAB Harmony configuration.
4. Configure WPS Pin or PBC configuration in the example_conf.h.
5. Build and run the demonstration.
6. Use WPS PBC/PIN in AP to establish connect over WPS.

Running the Demonstration

Once the demonstration application has been compiled successfully for the intended configuration, program the firmware into the target device.

Upon execution, the application will transmit the following via the UART connection.

```
WINC: Initializing...
Chip ID 1503a0
DriverVerInfo: 0x13301361
```

```
WINC1500 Firmware Data:
Firmware Ver: 19.6.1 SVN Rev 16761
Firmware Built at May 23 2018 Time 14:39:16
Firmware Min Driver Ver: 19.3.0
Driver Ver: 19.6.1
Driver Built at Jan 01 2019 Time 12:00:00
```

```
=====
Wi-Fi Provisioning via WPS Example
=====
```

```
WPS Push Button Test
SW0 button pressed
Device is connecting using WPS Push Button option
[APP_ExampleWSPushButtonDiscoveryCallback] In
SSID : xxxxxx, authtyp : x pw : xxxxxxxx
Connect AP, SSID = xxxxxx
STA mode: Station connected
STA Mode: Station IP address is xxx.xxx.xxx.xxx
```

wifi_tcp_server_in_softap

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the winc.X project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir> \apps\wifi_tcp_server_in_softap

MPAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.

Project Name	Location
winc.X	<install-dir> \apps\wifi_tcp_server_in_softap\firmware

Configuring the Demonstration

This example demonstrates the use of the WINC1500/3400 with the SAMD21/E54 Xplained Pro board to setup a TCP Server in softap mode.

To configure these aspects of the demonstration.

1. Ensure the project is set as the main project and open the MPLAB Harmony Configurator.
2. Open the project configuration when prompted.
3. Select 'Generate Code' to update the MPLAB Harmony configuration.
4. Configure WPS Pin or PBC configuration in the example_conf.h.
5. Build and run the demonstration.
6. Connect your personal computer to the network named defined by macro "WLAN_SSID" in example_conf.h file
7. For creating a TCP connection, you can use any open source programs (e.g. packet sender or Tera Term).

Running the Demonstration

Once the demonstration application has been compiled successfully for the intended configuration, program the firmware into the target device.

Upon execution, the application will transmit the following via the UART connection.

```
WINC: Initializing...
Chip ID 1503a0
DriverVerInfo: 0x13301361

WINC1500 Firmware Data:
Firmware Ver: 19.6.1 SVN Rev 16761
Firmware Built at May 23 2018 Time 14:39:16
Firmware Min Driver Ver: 19.3.0
Driver Ver: 19.6.1
Driver Built at Jan 01 2019 Time 12:00:00
```

```
=====
WINC WiFi TCP Server Soft AP Example
=====
```

AP started, you can connect to WINC1500_SOFT_AP
On the connected device, start a TCP client connection to 192.168.1.1 on port 6666

```
AP Mode: Station connected
AP Mode: Station IP address is 192.168.1.100
Bind on socket 0 successful, server_socket = 0
Listen on socket 0 successful
Connection from 192.168.1.100:55686
Receive on socket 1 successful
Client sent 13 bytes
Client sent Hello Server!
Sending a test message to client
Socket 1 send completed
TCP Server Test Complete!
Closing sockets
```

wifi_winc_sta_bypass

This section provides information on the supported demonstration boards, how to configure the hardware (if needed), and how to run the demonstration.

Building the Application

To build this project, you must open the winc.X project in MPLAB X IDE, and then select the desired configuration.

The following tables list and describe the project and supported configurations. The parent folder for these files is <install-dir>\apps\wifi_winc_sta_bypass

MPAB X IDE Project

This table lists the name and location of the MPLAB X IDE project folder for the demonstration.


Project Name	Location
winc.X	<install-dir> \apps\wifi_winc_sta_bypass\firmware

Programming the Demonstration

Refer to the hardware user-guide to see the different programming options supported.

The SAME54 Xplained board can be programmed using the on-board debugger **EDBG**.

1. Connect a micro-USB cable from computer to the **DEBUG USB** port on the SAM E54 Xplained Ultra board.
2. Program the application by clicking on the **Make and Program Device Main Project**.

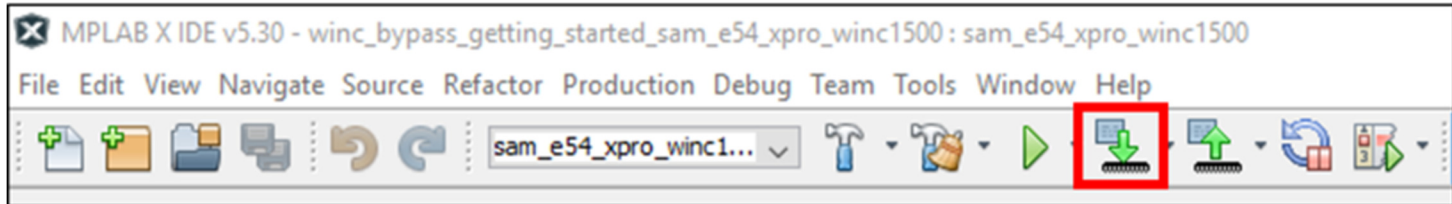



3. Make sure that the programming is successful.

Test the Application

The testing of the application is done using different console commands.

There will be a virtual COM port enumerated when a micro-USB cable from the computer is connected to the **DEBUG USB** port on SAM E54 Xplained Ultra board.

1. Open a terminal application (eg: TeraTerm) and configure the baud rate for **115200**.

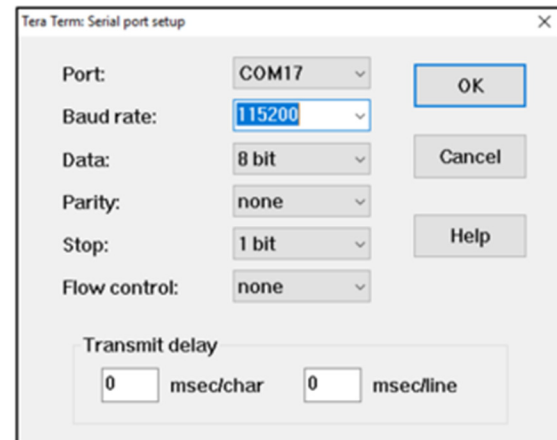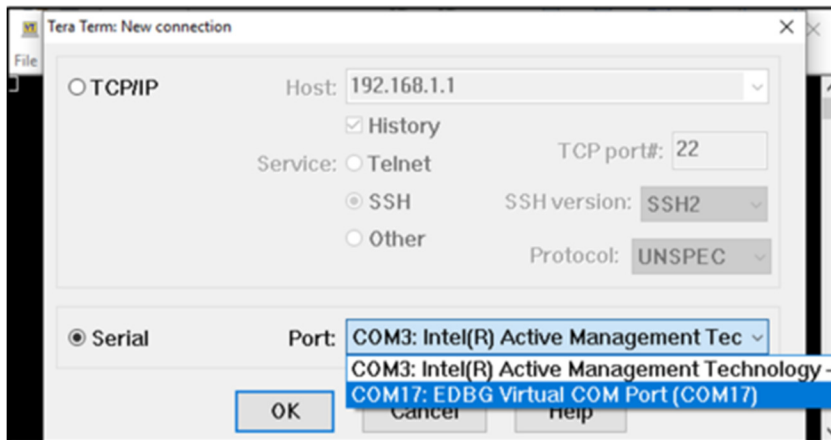

2. Press the **Reset** button on the SAM E54 Xplained Ultra board.
3. The following messages will be visible on the terminal window.

```
VT COM17 - Tera Term VT
File Edit Setup Control Window Help
TCP/IP Stack: Initialization Started
TCP/IP Stack: Initialization Ended - success
app[1]: TCPIP Stack is Ready on WINC Interface
app[1]: Host name is MCHPBOARD_W
app[1]: DHCP Client is enabled on WINC interface
app[2]: Network Link is Up
app[2]: Waiting for IP address ...
app[3]: DHCP Client has received IP Address: 192.168.1.4
app[3]: Demo complete
```

4. Type **ping <PC's IP address>** in the terminal window and press **Enter** to see responses.

```
VT COM17 - Tera Term VT
File Edit Setup Control Window Help
TCP/IP Stack: Initialization Started
TCP/IP Stack: Initialization Ended - success
app[1]: TCPIP Stack is Ready on WINC Interface
app[1]: Host name is MCHPBOARD_W
app[1]: DHCP Client is enabled on WINC interface
app[2]: Network Link is Up
app[2]: Waiting for IP address ...
app[3]: DHCP Client has received IP Address: 192.168.1.4
app[3]: Demo complete

>ping 192.168.1.3
>Ping: reply[1] from 192.168.1.3: time = 12ms
Ping: reply[2] from 192.168.1.3: time = 5ms
Ping: reply[3] from 192.168.1.3: time = 5ms
Ping: reply[4] from 192.168.1.3: time = 5ms
Ping: done. Sent 4 requests, received 4 replies.

>■
```

5. You can also ping this board from your PC using cmd prompt as shown below.

```
C:\> Command Prompt


C:\Users>ping 192.168.1.4

Pinging 192.168.1.4 with 32 bytes of data:
Reply from 192.168.1.4: bytes=32 time=14ms TTL=128
Reply from 192.168.1.4: bytes=32 time=5ms TTL=128
Reply from 192.168.1.4: bytes=32 time=5ms TTL=128
Reply from 192.168.1.4: bytes=32 time=6ms TTL=128

Ping statistics for 192.168.1.4:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 5ms, Maximum = 14ms, Average = 7ms

C:\Users>
```

- Currently, WINC driver is configured not to display any logs. You can change this setting in MHC by going to **DRIVER LAYER** and modifying the WINC configuration as shown below.

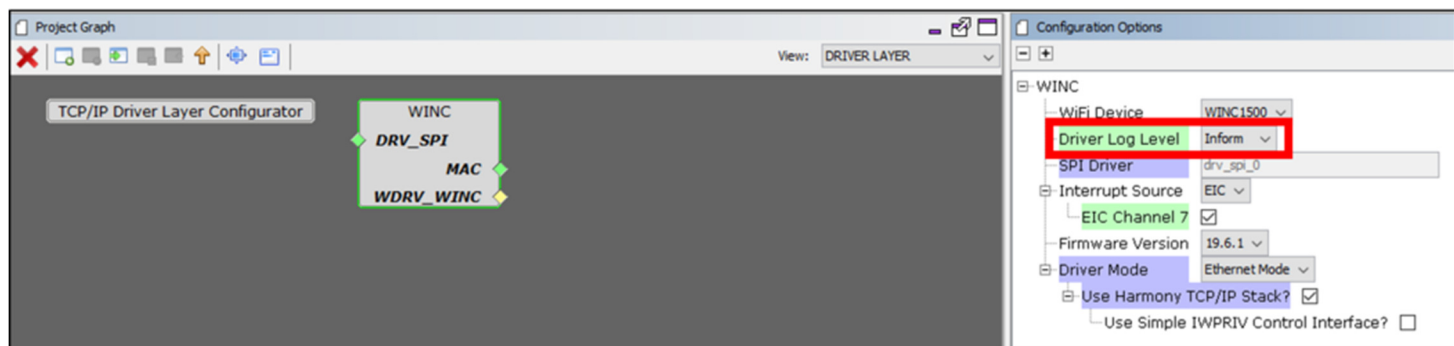

- After re-generating and re-programming with logging turned on, you will see following output in term console.

VT COM17 - Tera Term VT

File Edit Setup Control Window Help

TCP/IP Stack: Initialization Started

WINC: Initializing...

Chip ID 1503a0

DriverVerInfo: 0x13301361

WINC1500 Firmware Data:

Firmware Ver: 19.6.1 SUN Rev 16761

Firmware Built at May 23 2018 Time 14:39:16

Firmware Min Driver Ver: 19.3.0

Driver Ver: 19.6.1

Driver Built at Nov 27 2019 Time 17:00:14

TCP/IP Stack: Initialization Ended - success

app[1]: TCPIP Stack is Ready on WINC Interface

app[1]: Host name is MCHPBOARD_W

app[1]: DHCP Client is enabled on WINC interface

app[2]: Network Link is Up

app[2]: Waiting for IP address ...

app[3]: DHCP Client has received IP Address: 192.168.1.4

app[3]: Demo complete



You have successfully created and tested your first WINC1500 Bypass mode Application.