




# UPD301C Basic Sink Demo Read Me

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. <b>CONFIDENTIAL AND PROPRIETARY</b>	1 of 11	FRM-50382-007	1.1

<div>  <div> <b>MICROCHIP</b>  Microchip Technology, Inc. </div> </div> <div> Microchip Technology, Incorporated  2355 W. Chandler Boulevard  Chandler, Arizona 85224  480/792-7200 </div>		
REV	DATE	DESCRIPTION OF CHANGE
1.0	16-Oct-2020	Initial release of UPD301C Basic Sink AE Demo Read me
1.1	21-July-21	Updated ADC position 0,7 and CAP_MISMATCH functionality to align with V1.12

## 1 Software License Agreement

Copyright ©[2019-2020] Microchip Technology Inc. and its subsidiaries.

Subject to your compliance with these terms, you may use Microchip software and any derivatives exclusively with Microchip products. It is your responsibility to comply with third party license terms applicable to your use of third-party software (including open-source software) that may accompany Microchip software.

THIS SOFTWARE IS SUPPLIED BY MICROCHIP "AS IS". NO WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, APPLY TO THIS SOFTWARE, INCLUDING ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL LOSS, DAMAGE, COST OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE SOFTWARE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THIS SOFTWARE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THIS SOFTWARE.

## 2 Terms and Abbreviations

Term	Definition
PSF	Universal Serial Bus Power Delivery Software Framework
PCT	PSF Control Terminal
EVB	Evaluation Board
PD	Power Delivery
IDE	Integrated Development Environment
PDO	Power Data Object
LED	Light Emitting Diode
GPIO	General Purpose Input Output

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. <b>CONFIDENTIAL AND PROPRIETARY</b>	3 of 11	FRM-50382-007	1.1

### 3 Introduction

Microchip's USB Power Delivery Software Framework (PSF) is a configurable USB PD solution that is compliant to USB-PD 3.0 specification.

PSF Sink application supports basic USB-PD sink functionality in two modes. They are higher wattage at higher voltage (Mode A) and higher wattage at lower voltage (Mode B).

This document is intended to guide a user on setting up the UPD301C Basic Sink AE to work properly with Sink version of PSF along with a demonstration of PSF Control Terminal and Rotor knob functionality.

### 4 Prerequisites

#### Hardware:

- 1) Microchip UPD301C Basic Sink Board



Figure 4.1 Microchip UPD301C Basic Sink Board

- 1) 60W Power Adapter
- 2) USB-C to USB-C cable
- 3) Atmel ICE Debugger Kit



Figure 4.2 Atmel-ICE Debugger Kit

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. <b>CONFIDENTIAL AND PROPRIETARY</b>	4 of 11	FRM-50382-007	1.1

#### 4) FTDI Cable

## 5 Setting up UPD301C Basic Sink for “UPD301C\_Basic\_Sink\_AE”

1. Connect one end of Atmel ICE to PC using Micro-B cable and the other end to J3 on the board as shown in the figure 5.1.

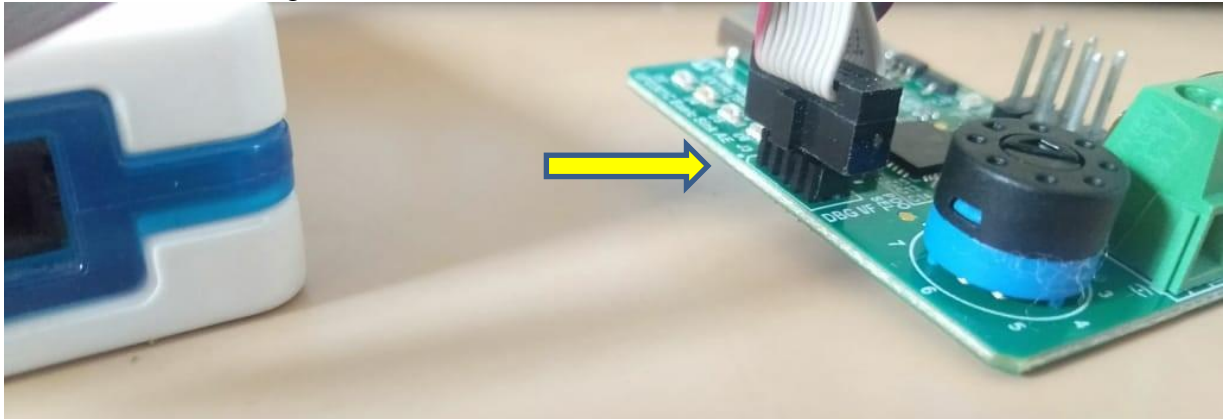


Figure 5.1 Atmel ICE Orientation

2. Connect RX, TX and GND of FTDI cable to Pin 2, Pin 4, and Pin 6 of J4 respectively as shown in the figure 5.2.
3. Connect a 60W power adapter to J2 using USB-C to USB-C cable.
4. The whole connection looks like,



Figure 5.2 Basic Sink full setup

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. <b>CONFIDENTIAL AND PROPRIETARY</b>	5 of 11	FRM-50382-007	1.1

## 6 Running the demo

Refer [Getting Started with PSF](#) document for the detailed steps on setting up the build environment, building the UPD301C Basic Sink AE project and programming the hex file in the UPD301C Basic Sink.

Refer Appendix 8.2 of [Getting Started with PSF](#) to change any SAMD20 Harmony configuration.

1. Ensure FTDI cable is connected at the right place
2. Program the UPD301C\_Basic\_Sink\_AE.X file by following the steps mentioned in section 8 of [Getting Started with PSF](#) by setting rotor knob at positions other than 0 and 7
3. Set up the Tera term/Real term setup as shown below.

### 6.1.1 Real Term Setup

1. In Real Term set the baud rate to 3000000
2. Set the COM port number

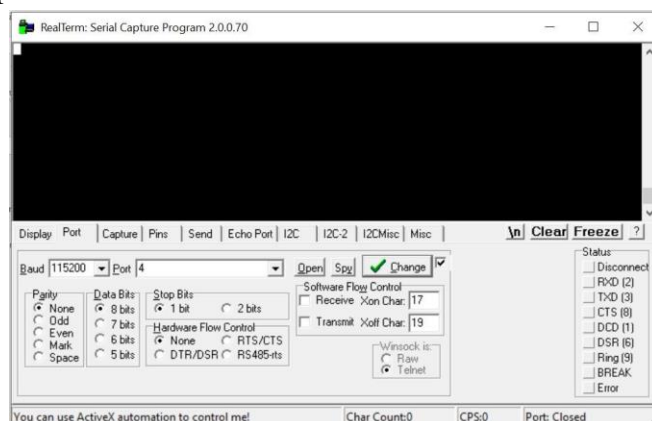


Figure 6.1 Set Com port number

### 6.1.2 Tera Term Setup

1. Open the Tera Term and select the com port

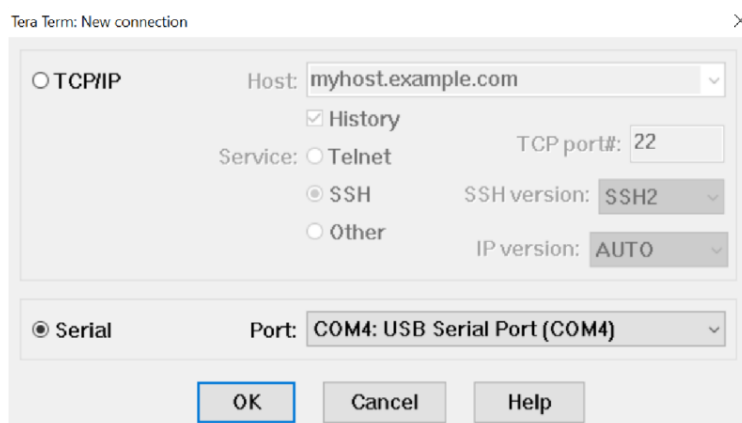


Figure 6.2 Set Com port number

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. <b>CONFIDENTIAL AND PROPRIETARY</b>	6 of 11	FRM-50382-007	1.1

2. Click on setup -> serial port-> Baud Rate

Tera Term: Serial port setup and connection

Port: COM4

Speed: 3000000

Data: 8 bit

Parity: none

Stop bits: 1 bit

Flow control: none

Transmit delay

0 msec/char 0 msec/line

Device Friendly Name: USB Serial Port (COM4)  
 Device Instance ID: FTDIBUS\VID\_0403+PID\_6001+FTA3639JA\00  
 Device Manufacturer: FTDI  
 Provider Name: FTDI  
 Driver Date: 8-16-2017  
 Driver Version: 2.12.28.0

New setting

Cancel

Help

Figure 6.3 Set Baud Rate

3. Click New setting

4. Now Click on setup -> Terminal->New-line->CR+LF->OK

Tera Term: Terminal setup

Terminal size

80 x 24

☒ Term size = win size

☐ Auto window resize

Terminal ID: VT100

Answerback:

Coding (receive): UTF-8

locale: american

New-line

Receive: CR+LF

Transmit: CR

☐ Local echo

☐ Auto switch (VT<->TEK)

Coding (transmit): UTF-8

OK

Cancel

Help

Figure 6.4

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. CONFIDENTIAL AND PROPRIETARY	7 of 11	FRM-50382-007	1.1

## 7 Expected Results

### 7.1 Rotor Knob

1. Once the hex file is programmed, the PWR and EN\_SINK LEDs turn on and according to the PD source adapter used, the LEDs D2, D4, D5, D6 turn on.
2. Once the Source PD Device is attached to a PD port, the device gives out 5V followed by Source capabilities.
3. PSF request for suitable PDO from source capability based on the configuration. PD negotiation takes place if the source accepts the request and sources the requested power.
4. Now change the positions of Rotor Knob and the following changes can be observed in the LEDs D2, D4, D5, D6. Refer section 7.2.3 to observe the respective PDO values on PCT. Also refer section 7.2.8 to set new PDO values.

Rotor Knob Position	Status LED
Position 1	D2
Position 2	D2, D4
Position 3	D2, D4, D5
Position 4	D2, D4, D5, D6
Position 5	Supports Mode A. Depends on source capabilities
Position 6	Supports Mode B. Depends on source capabilities

Table 7.1 Rotor Knob positions and corresponding LEDs



Figure 7.1 Sink PDO Status LEDs for Rotor Knob Position 4



## 7.2 PSF Control Terminal

PSF has a range of compile time and runtime configuration options for the various USB-PD features and other special features.

This release of PCT allows configuration of the following:

- Version
- PDO
- Memory
- Status Data
- Rotor knob

### 7.2.1 Supported commands

A list of supported commands, their description and expected results is given below.

Name	Description
get version	Gives the demo version and firmware version
get pdo	Gives the default sink pdo details
get sr[globalcfgstatusdata]	Gives the Global config status data values
get sr[portcfgstatus]	Gives the port config status data values
get mem[memory_address][length]	Gets the value in the memory address of the firmware requested
set mem[memory_address][byte_value]	Sets the byte value at the memory address of the firmware specifies
set pdo[position][value]	Sets the pdo value at the position specified

Table 7.2 PCT supported commands

### 7.2.2 get version

#### Description

get version command when prompted in PCT gives the current demo version and firmware version

#### Remarks

Version keeps changing as the firmware is updated

#### Example

**get version**

**>demo version=1.00**

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. <b>CONFIDENTIAL AND PROPRIETARY</b>	11 of 11	FRM-50382-007	1.1

---

```
>firmware version=1.11
```

---

### 7.2.3 get pdo

#### Description

get pdo command when prompted in PCT gives out the advertised PDOs or the default supported PDO by the firmware

Position0: (5V,3A)

Position1: (5V,3A), (9V,3A)

Position2: (5V,3A), (15V,3A)

Position3: (5V,3A), (20V,3A)

Position4: (5V,3A), (9V,3A), (15V,3A) in Mode A.

Position5: (5V,3A), (9V,3A), (15V,3A) in Mode B.

Position6: (5V,3A), (9V,3A), (15V,3A), (20V,3A) in Mode A.

Position7: (5V,3A), (9V,3A), (15V,3A), (20V,3A) in Mode B.

#### Remarks

If a valid PDO is newly set, get PDO command should give the newly set PDO

#### Example

```
get pdo
```

```
> AdvertisedPDO -00
```

```
> Voltage = 05000mV Current = 3000mA
```

```
> AdvertisedPDO -01
```

```
> Voltage = 09000mV Current = 3000mA
```

#### Note:

get PDO displays values during run time and hence they may change.

---

### 7.2.4 get sr[globalcfgstatusdata]

#### Description

get sr[globalcfgstatusdata] command when prompted in PCT gives out the global config status data values

#### Remarks

These values keep changing as the firmware is updated

#### Example

```
get sr[globalcfgstatusdata]
```

```
>u8MinorVersion=2
```

```
>u8MajorVersion=1
```

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. CONFIDENTIAL AND PROPRIETARY	11 of 11	FRM-50382-007	1.1

### 7.2.5 get sr[portcfgstatus]

#### Description

get sr[portcfgstatus] command when prompted in PCT gives out the global config status data values

#### Remarks

These values keep changing as the firmware is updated

#### Example

```
get sr[portcfgstatus]
```

```
>u32cfgdata=238
```

#### Note:

get PDO displays values during run time and hence they may change.

---

### 7.2.6 get mem[memory\_address] [length]

#### Description

get mem[memory\_address][length] command when prompted in PCT gives out the value in the memory address specified to the given length.

#### Remarks

The memory 2000\_0000 to 20001FF0 is accessible. Length cannot be more than 2.

#### Example

```
get mem[20001FA0][1]
```

```
>byte value=08
```

---

### 7.2.7 set mem[memory\_address] [byte\_value]

#### Description

set mem[memory\_address][byte\_value] command when prompted in PCT sets the byte value at the memory address of the firmware specifies

#### Remarks

The memory 2000\_0000 to 20001FF0 is accessible.

#### Example

```
set mem[20001FA0][1]
```

---

### 7.2.8 set pdo[position][value]

#### Description

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. CONFIDENTIAL AND PROPRIETARY	11 of 11	FRM-50382-007	1.1

set pdo[position][value] command when prompted in PCT by setting the rotor knob position to be modified, sets the pdo value at the position specified

**Remarks**

- The pdo position cannot be greater than 7
- PDO value should be as the value calculated by  $((((\text{voltage})/50) \ll 10) | ((\text{current})/10))$ .
- PDO values are always in ascending order
- Maximum PDO value could be 6412C(20V,3A)

**Example**

```
set pdo[1][4612c]
```

**Important Note:**

To view the PDOs supported by PSF, user should give a get PDO command. To modify a PDO user must give the position as displayed in get PDO list

For e.g.

- Set the Rotor position to 2
- Give a get pdo command to view the list of supported PDOs in position 2 [(5V,3A)(15V,3A)]
- Control terminal displays the PDOs as
  - Advertised PDO-00
    - a. Voltage-1388
    - b. Current-012c
  - Advertised PDO-01
    - a. Voltage-3A98
    - b. Current-012c
- Now if the user wants to set the PDO 0 as (4V,3A) , Then user must give the command-set pdo [0] [1412c]
- Now if the user wants to set the PDO 1 as (14V,3A) , Then user must give the command-set pdo [1] [4612c]

---

## 7.2.9 Space Bar

**Description**

If you want to interrupt current execution and set a new configuration, hit the space bar.

**Message displayed when entering PCT:** “Welcome to PSF Control terminal  
Type ? for the list of supported commands  
Hit space bar to exit”

**Message displayed when exiting PCT:** “Good Bye”

**Note:**

The background timers of PSF if set, might get timed out.

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	Spec. No.	REV
© Microchip Technology Inc. <b>CONFIDENTIAL AND PROPRIETARY</b>	11 of 11	FRM-50382-007	1.1