



PSF Sink Demo Read Me

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	REV
© Microchip Technology Inc.	1 of 13	1.02

**MICROCHIP**

Microchip Technology, Inc.

Microchip Technology, Incorporated

2355 W. Chandler Boulevard

Chandler, Arizona 85224

480/792-7200

REV	DATE	DESCRIPTION OF CHANGE
1.02	8-Apr-2020	Initial version of Sink Demo

Table of Contents

Software License Agreement	4
Terms and Abbreviations	4
Introduction	5
Prerequisites	5
Setting up the PSF-EVB board for “PSF_EVB_Sink”	7
Running the demo.....	10
Expected Results	11

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	REV
© Microchip Technology Inc.	3 of 13	1.02

Software License Agreement

Copyright ©[2019-2020] Microchip Technology Inc. and its subsidiaries.

Subject to your compliance with these terms, you may use Microchip software and any derivatives exclusively with Microchip products. It is your responsibility to comply with third party license terms applicable to your use of third party software (including open source software) that may accompany Microchip software.

THIS SOFTWARE IS SUPPLIED BY MICROCHIP "AS IS". NO WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, APPLY TO THIS SOFTWARE, INCLUDING ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL LOSS, DAMAGE, COST OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE SOFTWARE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THIS SOFTWARE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THIS SOFTWARE.

Terms and Abbreviations

Term	Definition
PSF	Universal Serial Bus Power Delivery Software Framework
EVB	Evaluation Board
PD	Power Delivery
IDE	Integrated Development Environment
PDO	Power Data Object
PM-PD	Power Module-USB Power Delivery
LED	Light Emitting Diode
GPIO	General Purpose Input Output

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	REV
© Microchip Technology Inc.	4 of 13	1.02

Introduction

Microchip's USB Power Delivery Software Framework (PSF) is a configurable USB PD solution that is compliant to USB-PD 3.0 specification.

PSF Sink application support basic USB-PD sink functionality with two modes. They are Higher wattage at higher voltage (Mode A) and Higher wattage at lower voltage (Mode B).

This document is intended to guide a user on setting up the PSF-EVB to work properly with Sink version of PSF along with a demonstration of a PD device attached to the PSF-EVB.

Prerequisites

Hardware:

- 1) Microchip PSF Evaluation Board (PSF-EVB)

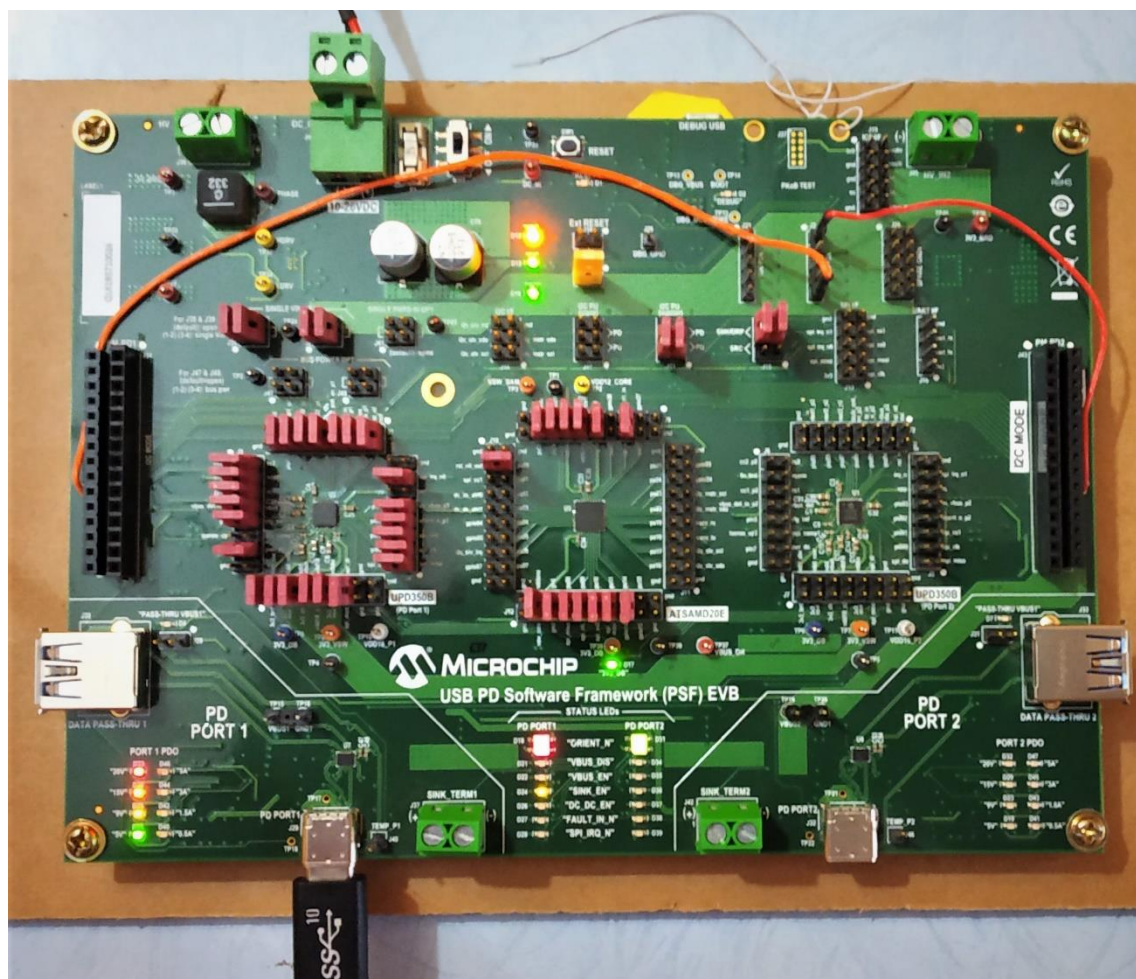


Figure 4.1 Microchip PSF Evaluation Board

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	REV
© Microchip Technology Inc.	5 of 13	1.02

- 2) Power Adapter with 24V, with 3A to 6.25A output rating



Figure 4.2 Power Adapter with 24V, 6.25A output capacity

- 3) USB-C to USB-C cable
- 4) Atmel ICE Debugger kit



Figure 4.3 Atmel-ICE Debugger Kit

- 5) USB Power Delivery capable Phones or Laptops

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	REV
© Microchip Technology Inc.	6 of 13	1.02

Setting up the PSF-EVB board for “PSF_EVB_Sink”

1. Ensure the following jumpers are connected in PSF-EVB before proceeding to next step. An image of PSF-EVB with all the required jumper connections highlighted is shown in Figure 5.1

Jumper	Pins
J38	1-2, 3-4
J39	1-2, 3-4
J20	1-2
J21	1-3, 2-4
J15	3-5, 2-6
J1	1-2 3-4 5-6 7-8
J4	1-2 3-4 5-6 7-8 9-10 13-14
J5	1-2 3-4 5-6 7-8 9-10 13-14
J8	1-2 3-4 5-6 7-8 9-10 11-12
J9	5-6

	9-10 11-12 13-14 15-16 17-18
J10	3-4
J12	3-4 5-6 7-8 9-10 11-12 13-14 15-16

Table 5.1 PSF-EVB Jumper Connections

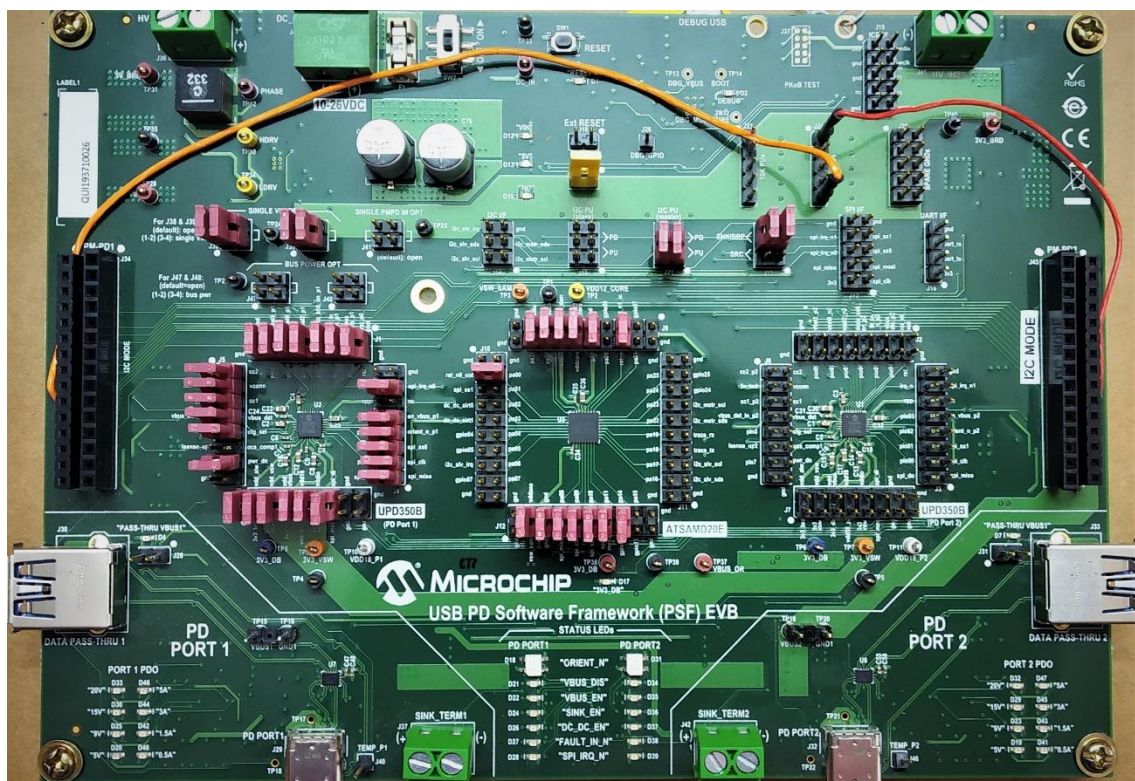


Figure 5.1 PSF-EVB with jumper connections

2. Connect power adapter to J49 of the PSF-EVB

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	REV
© Microchip Technology Inc.	8 of 13	1.02

3. Connect one end of Atmel ICE to PC using USB Micro-B cable and the other end to J19 of PSF-EVB. A dot(encircled in image) will be present in Atmel ICE Adapter board which gives an indication that this pin should be connected to 3v3 of J19. The right way to connect is,

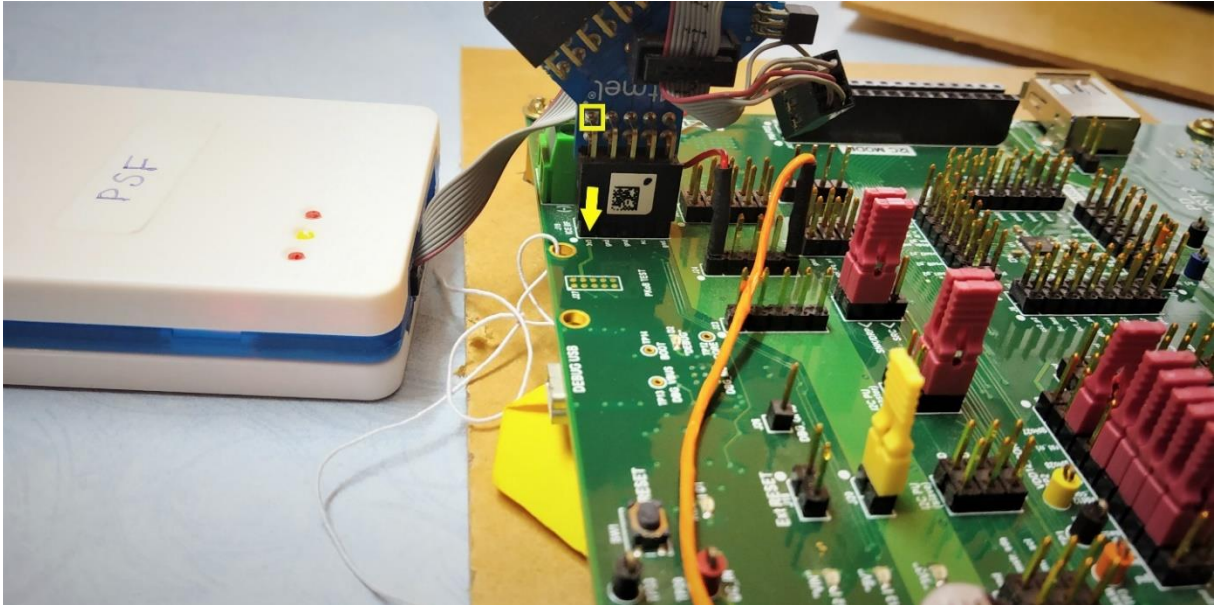


Figure 5.2 Connecting Atmel-ICE Debugger to J19

4. The whole connection looks like,

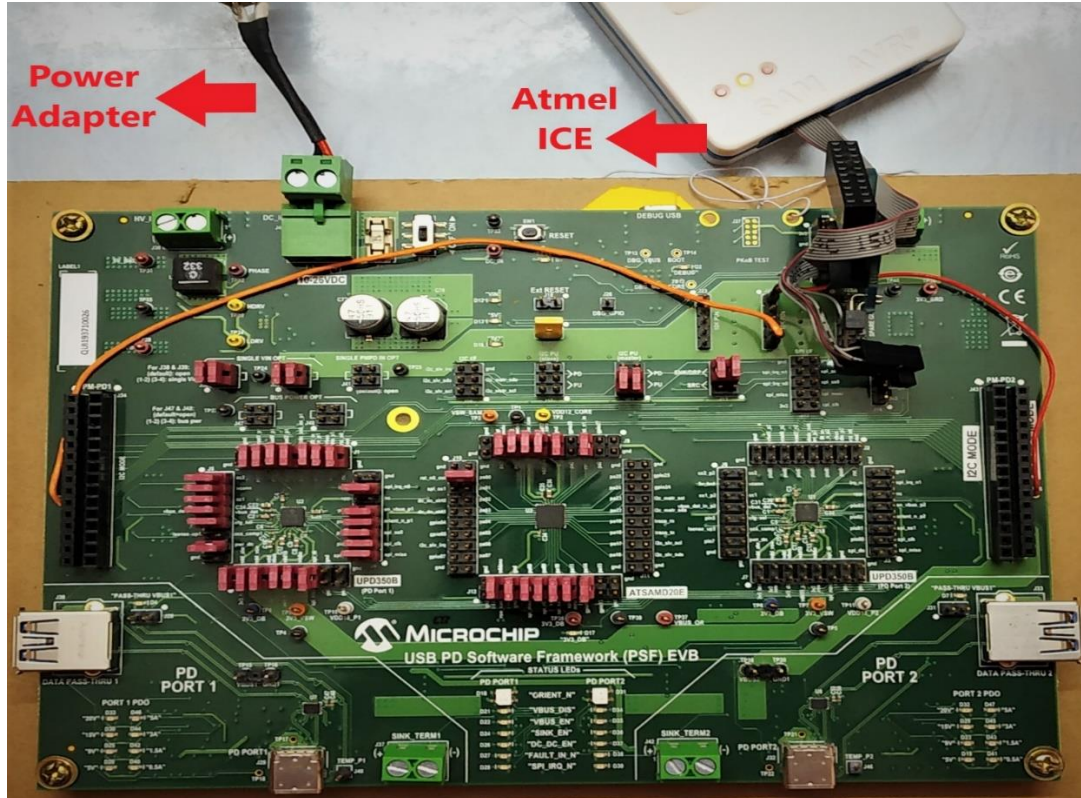


Figure 5.3 PSF-EVB Full Setup

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.

© Microchip Technology Inc.

Page

9 of 13

REV

1.02

Running the demo

Refer [Getting Started with PSF](#) document for the detailed steps on setting up the build environment, building the Sink PSF project and programming the hex file in the PSF-EVB.

Refer Appendix 8.2 of [Getting Started with PSF](#) to change any SAMD20 Harmony configuration. Refer 10.2.9 Boot time Configuration of [PSF User Guide](#) to change any configuration parameters.

1. Ensure all the jumpers are in place and Power on the PSF-EVB.
2. Program the hex file by following the steps mentioned in section 8 of [Getting Started with PSF](#)
3. Connect a PD Source device to Port 1 of PSF-EVB using a USB-C to USB-C cable.
4. The image demonstrates a scenario where a HP Elite book laptop has been connected to Port 1.



Figure 6.1 A PD source connected to port 1

THIS DOCUMENT IS UNCONTROLLED UNLESS OTHERWISE STAMPED. It is the user's responsibility to ensure this is the latest revision prior to using or referencing this document.	Page	REV
© Microchip Technology Inc.	10 of 13	1.02

Expected Results

- Once the hex file is programmed, the SPI_IRQ_N LEDs in port1 flash and then turn off. SNK_EN led will turn on.

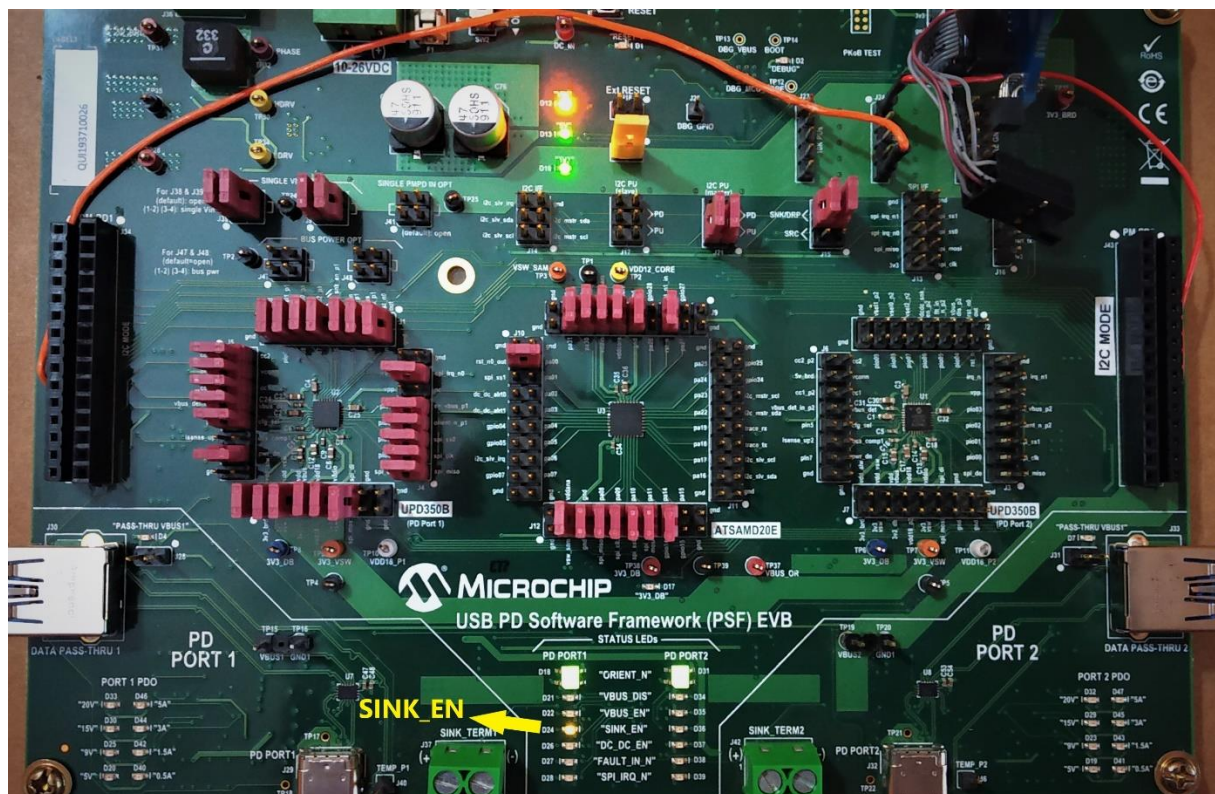


Figure 7.1 Status of DC_DC_EN LEDs after power on

- Once the Source PD Device is attached to a PD port, the device gives out 5V followed by Source capabilities.
- PSF request for suitable PDO from source capability based on the configuration. PD negotiation take place if the source accepts the request and sources the requested power.
- Once an explicit power contract negotiation is in place, the PSF gets enough power for charging. PDO status LEDs will turn ON indicating the negotiated voltage as shown in Figure 7.2

PDO	Status LED
5V	Port 1 – D20
9V	Port 1 – D25
15V	Port 1 – D30
20V	Port 1 – D33

Table 7.1 PDO Status LEDs

Example with Port 1: If 5V is negotiated by the device, LED in the D20 of Port 1 PDO will glow. If 9V is negotiated, then LEDs in D20 and D25 will glow. In case of 15V, LEDs in D20, D25 and D30 will glow. If 20V is negotiated, all the LEDs will glow.

- The DAC indicator will indicate the implicit/negotiated current capability of the attached source partner. In PSF EVB, J10.8 is the pin corresponding to DAC indicator. The table below relates the negotiated current with DAC indicator pin's output voltage.

S.No	Negotiated Current	DAC Indicator's output
1.	Less than 0.5A	0 V
2.	Greater than 0.5A but less than or equal to 1.5A	0.25 V
3.	Greater than 1.5A but less than or equal to 2A	0.75 V
4.	Greater than 2A but less than or equal to 3A	1 V
5.	Greater than 3A but less than or equal to 4A	1.5 V
6.	Greater than 4A but less than or equal to 5A	2 V
7.	Greater than 5A	2.5 V

Table 7.2 DAC indicator

In our case, HP Elite book is capable of sourcing 5V@3A. Therefore, J10.8 in PSF EVB, which is the DAC indicator pin, will be driven with 1V.

- Four GPIO indicators are designed to indicate the status of sink operation.

S.No	GPIO Indicator	Pin number in PSF EVB	Role
1.	1.5A indicator	J10.6	Asserts when current capability/negotiated is 1.5A or more.
2.	3A indicator	J12.18	Asserts when current capability/negotiated is 1.5A or more.
3.	PD Negotiation Indicator	J10.10	Asserts when PD negotiation is complete and PS_RDY is received from source.
4.	Capability mismatch indicator	J10.12	Asserts when PD negotiation is complete and there was a capability mismatch with the selection.

Table 7.3 GPIO indicators

Since, our source partner, HP Elite book sources 5V@3A, it is a perfect match. So, 3A indicator, PD Negotiation indicator will go high in our case. 1.5A indicator and capability mismatch indicator GPIOs will remain low.

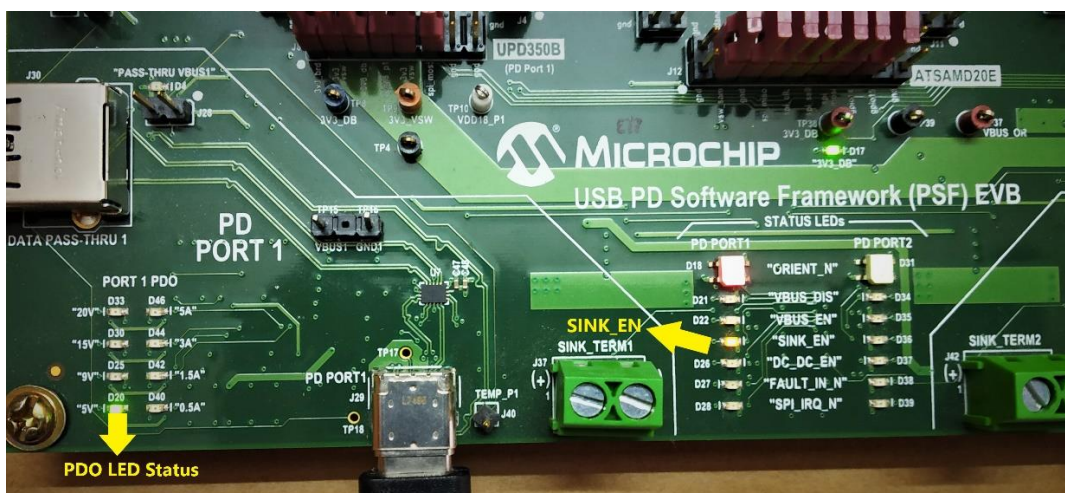


Figure 7.2 PDO Status LEDs after source attach