



UPD301C PIM Source Lite Demo Read Me

**MICROCHIP**
Microchip Technology, Inc.

Microchip Technology, Incorporated
2355 W. Chandler Boulevard
Chandler, Arizona 85224
480/792-7200

REV	DATE	DESCRIPTION OF CHANGE
1.12	16-June-21	Initial version

Table of Contents

1	Software License Agreement.....	4
2	Terms and Abbreviations	4
3	Introduction.....	5
4	Prerequisites.....	5
5	Setting up the EVB-PSF board for “UPD301C_PIM_Source_Lite”.....	7
6	Running the demo.....	14
7	Expected Results	16

1 Software License Agreement

Copyright ©[2019-2020] Microchip Technology Inc. and its subsidiaries.

Subject to your compliance with these terms, you may use Microchip software and any derivatives exclusively with Microchip products. It is your responsibility to comply with third party license terms applicable to your use of third party software (including open source software) that may accompany Microchip software.

THIS SOFTWARE IS SUPPLIED BY MICROCHIP "AS IS". NO WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, APPLY TO THIS SOFTWARE, INCLUDING ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL LOSS, DAMAGE, COST OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE SOFTWARE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THIS SOFTWARE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THIS SOFTWARE.

2 Terms and Abbreviations

Term	Definition
PSF	Universal Serial Bus Power Delivery Software Framework
EVB	Evaluation Board
PD	Power Delivery
IDE	Integrated Development Environment
PDO	Power Data Object
PM-PD	Power Module-USB Power Delivery
LED	Light Emitting Diode
GPIO	General Purpose Input Output
PIM	Plug In Module

3 Introduction

Microchip's USB Power Delivery Software Framework (PSF) is a configurable USB PD solution that is compliant to USB-PD 3.0 specification.

PSF Source Lite application includes PD Source functionality with the support for Boot time configuration parameters and GPIO based DC-DC controller for port power control. This document is intended to guide a user on setting up the [USB Power Delivery Software Framework Evaluation kit \(EV65D44A\)](#) with EV71C90A PIM to work properly with Source Lite version of PSF along with a demonstration of a PD device attached to EVB-PSF.

EV65D44A consists of the following:

- 1 x USB Power Delivery Software Framework EVB (EVB-PSF)
- 2 x One-Hot Vertical Mount PM-PDs (PMPD-VM-HOT)

4 Prerequisites

Hardware:

- 1) USB Power Delivery Software Framework Evaluation kit with part number EV65D44A (EVB-PSF)

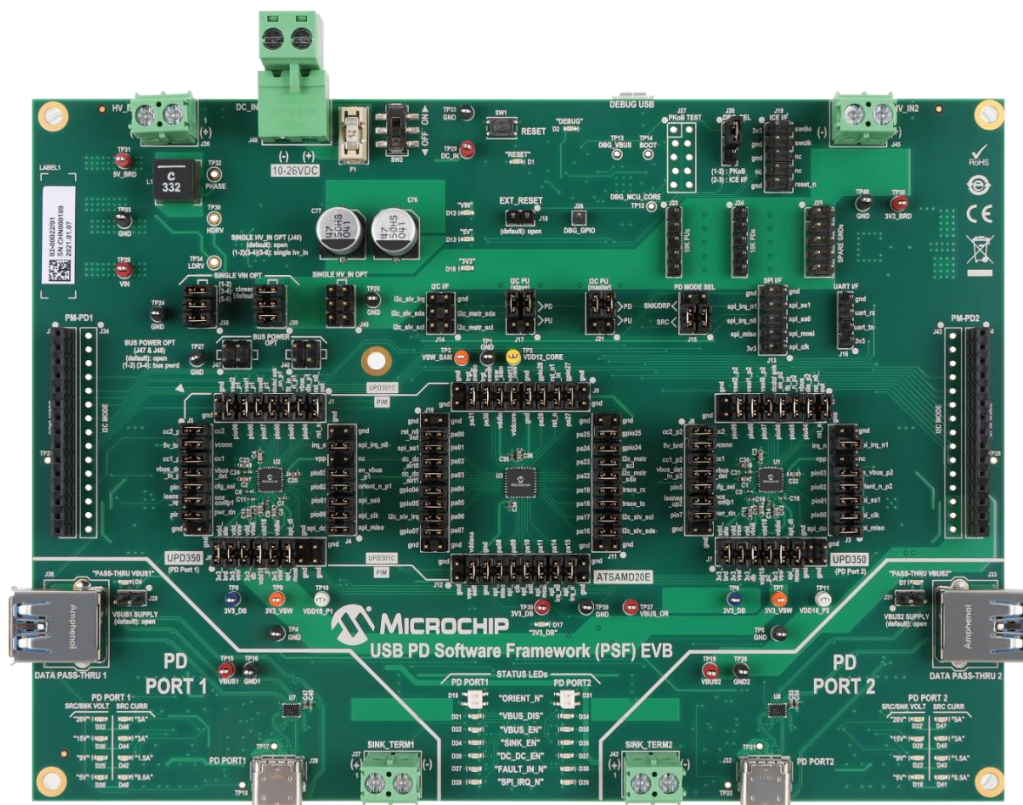


Figure 4.1 USB Power Delivery Software Framework EVB (EVB-PSF)

- 1) 2 Microchip UNG 8122 Rev D PM-PD Modules – 1 per port

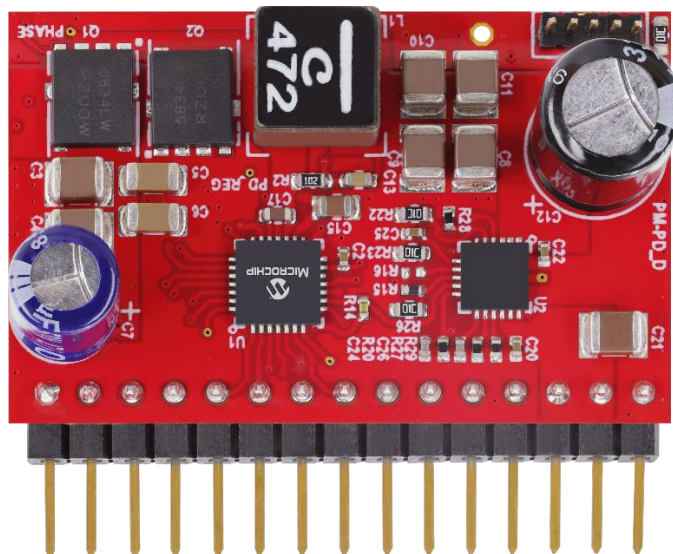


Figure 4.2 One-Hot Vertical Mount PM-PD (PMPD-VM-HOT)

- 2) Microchip UPD301C Plug-In Module

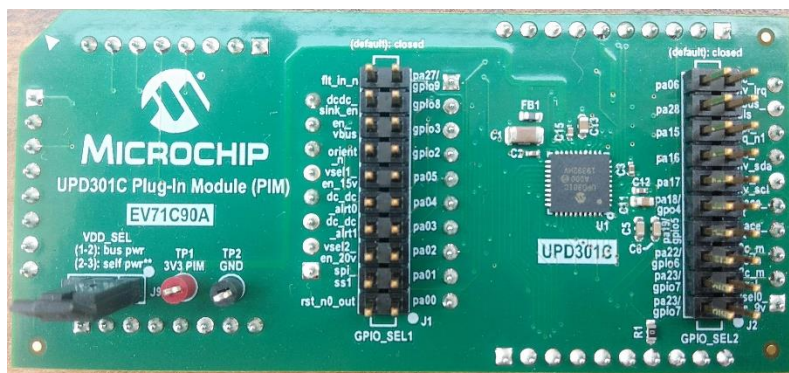


Figure 4.3 UPD301C Plug-In Module

- 3) USB-C to USB-C cable
- 4) USB Power Delivery capable Phones or Laptops

5) 150W Power Adapter with 24V, 6.25A output



Figure 4.4 Power Adapter with 24V, 6.25A output capacity

6) [Atmel ICE Debugger kit](#) (Optional)



Figure 4.5 Atmel-ICE Debugger Kit

5 Setting up the EVB-PSF board for “UPD301C_PIM_Source_Lite”

1. Connect PM-PD Modules to J35 and J44 of the EVB-PSF in correct orientation as shown in Figure 5.1

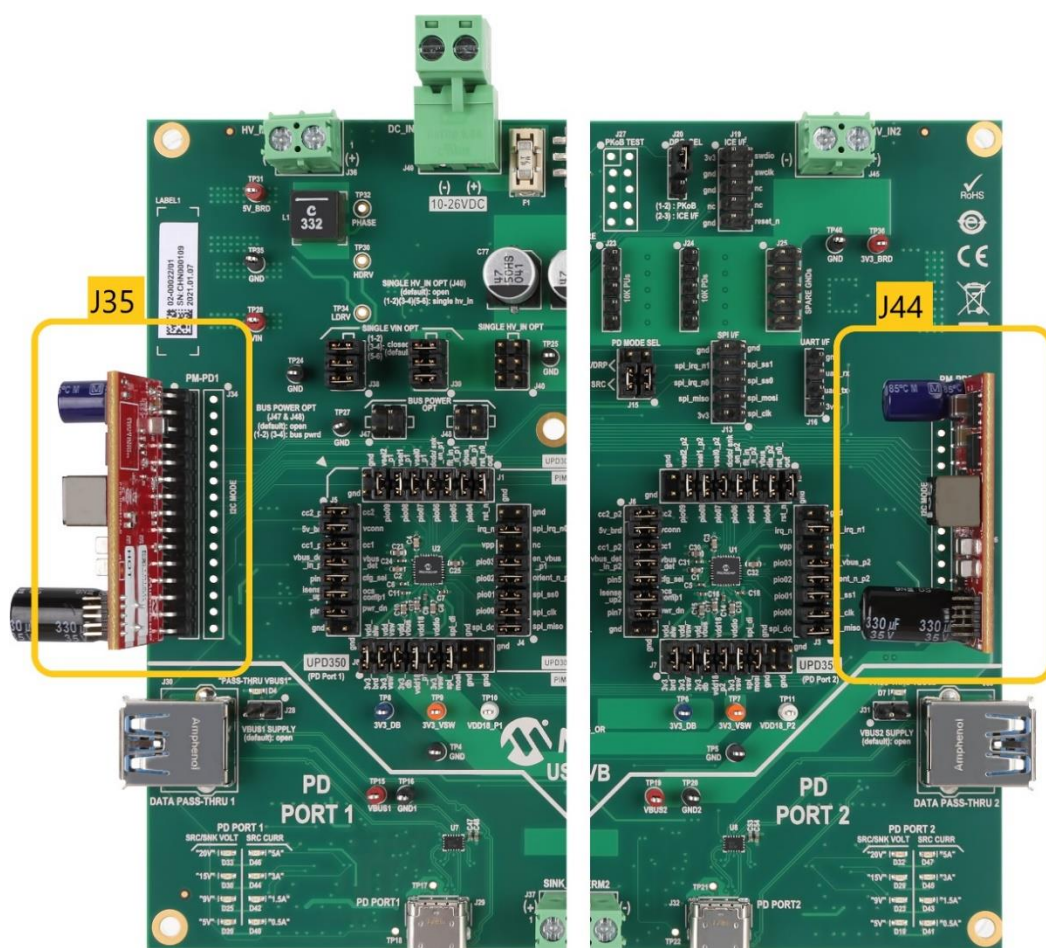


Figure 5.1 PM-PD Orientation

2. Connect the PIM according to the silk label marking on PSF EVB as shown in the Figure 5.2

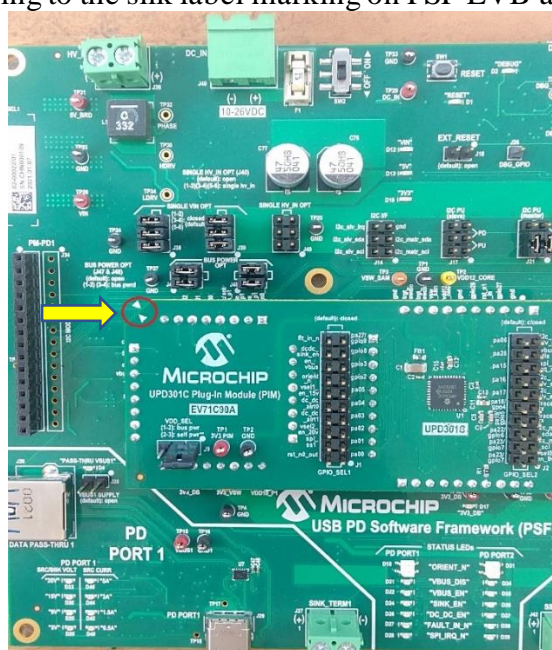


Figure 5.2 PIM Connection

3. Ensure the following jumpers are connected in EVB-PSF before proceeding to next step. An image of EVB-PSF with all the required jumper connections highlighted is shown in Figure 5.3.

Jumper	Pins
J38	1-2, 3-4, 5-6
J39	1-2, 3-4, 5-6
J21	1-3, 2-4
J15	1-3, 2-4
J47	1-2, 3-4
J48	1-2, 3-4
J20	1-2
J2	1-2 3-4 5-6 7-8 9-10 11-12 13-14
J3	1-2 3-4 5-6 7-8 9-10 13-14
J6	1-2 3-4 5-6 7-8 9-10 13-14
J7	1-2 3-4 5-6 7-8 9-10 11-12
J9 on PIM	1-2
GPIO_SEL1 on PIM	1-2 3-4 5-6 7-8

	9-10 11-12 13-14 15-16 17-18 19-20
GPIO_SEL2 on PIM	1-2 3-4 5-6 7-8 9-10 11-12 13-14 15-16 17-18 19-20

Table 5.1 EVB-PSF Jumper Connections

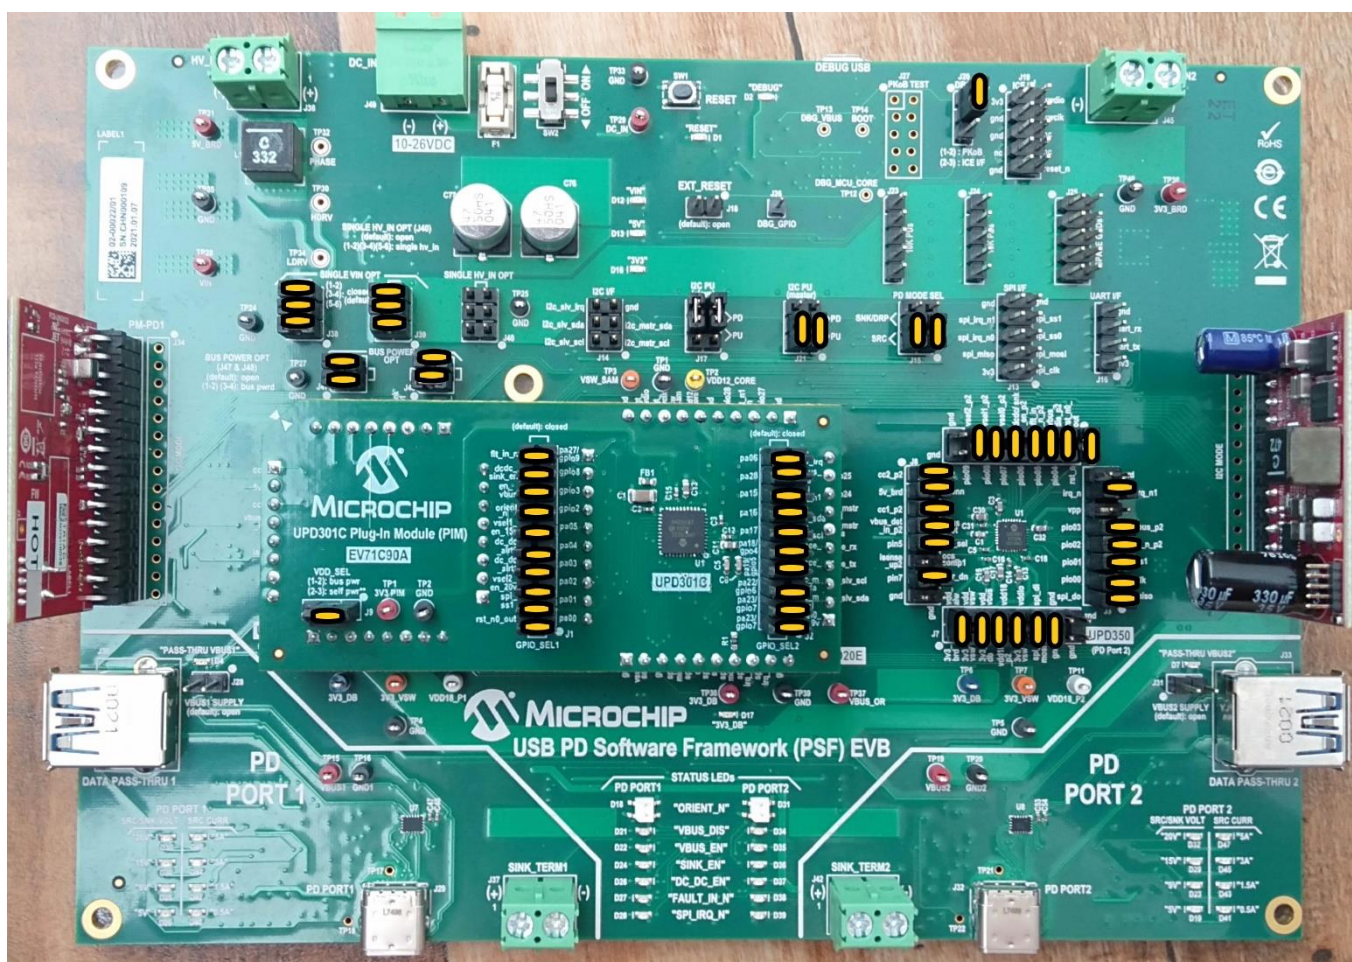


Figure 5.3 EVB-PSF with jumper connections highlighted

4. Connect 150W power adapter to J49 of the EVB-PSF
5. Connect a USB Micro-B cable to “DEBUG USB” which on the top of the board as shown in the figure 5.4 and connect the other end USB Type-A to the laptop for using the on-board debugger for programming

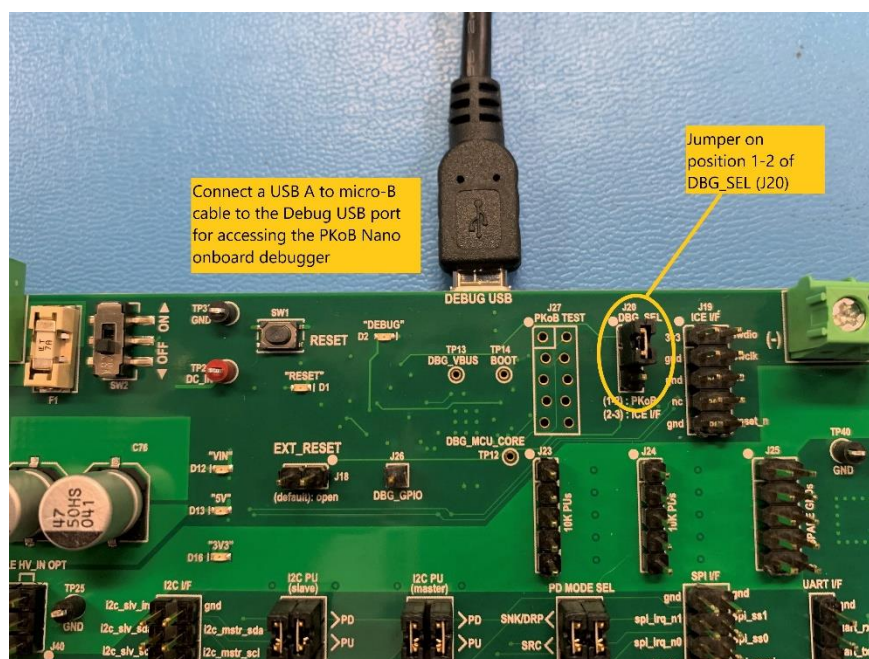


Figure 5.4 Programming using On-board debugger

6. Optionally, Atmel ICE can also be used for programming the board by connecting it to J19 as shown in the figure 5.5. Please ensure the jumper is switched to 2-3 on J20 while using Atmel ICE.

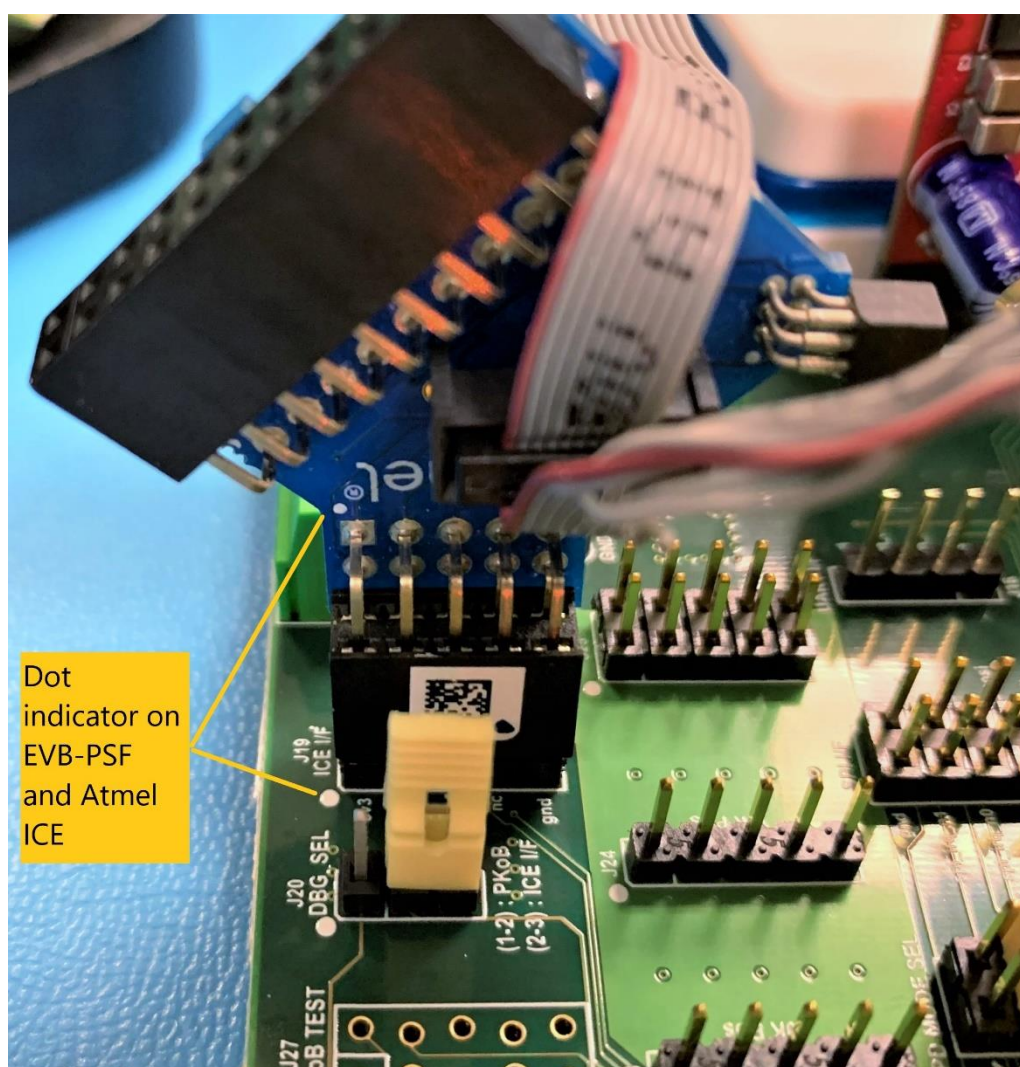


Figure 5.5 Programming using Atmel ICE (Optional)

7. The whole connection looks as in the figure 5.6

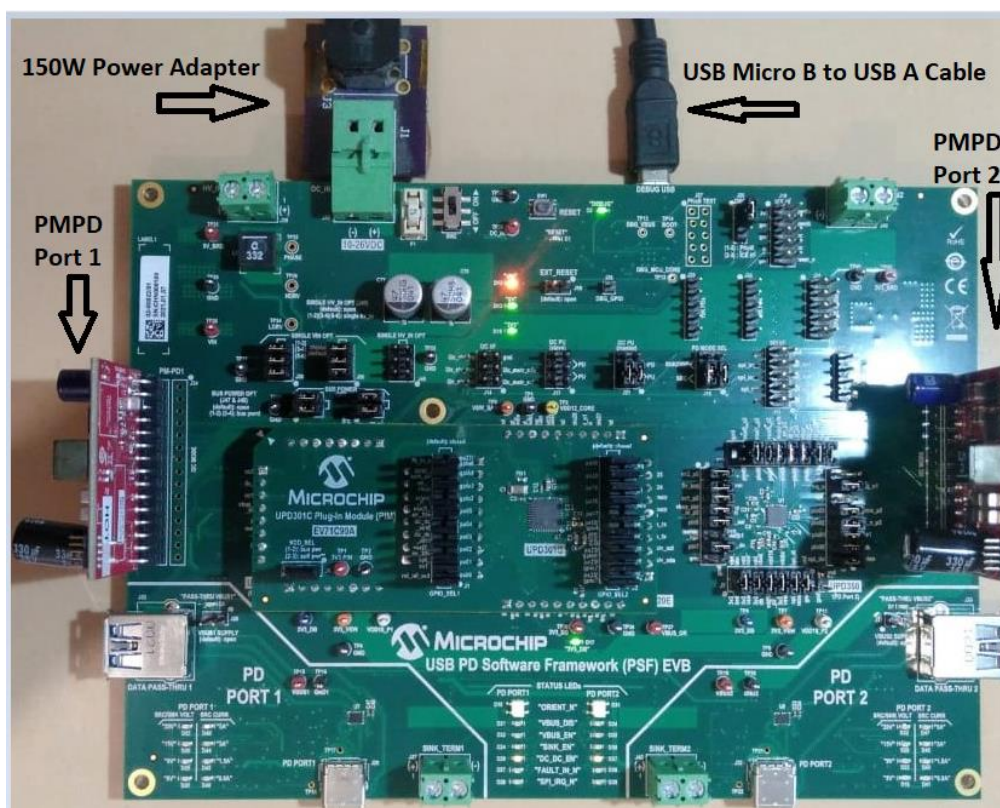


Figure 5.6 EVB-PSF Full Setup

6 Running the demo

Refer [Getting Started with PSF](#) document for the detailed steps on setting up the build environment, building the UPD301C PIM Source Lite PSF project and programming the EVB-PSF.

Refer Appendix 8.2 of [Getting Started with PSF](#) to change any SAMD20 Harmony configuration. Refer 'Boot time Configuration' of [PSF User Guide](#) to change any configuration parameters.

1. Ensure all the jumpers are in place and Power on the EVB-PSF.
2. Program the EVB-PSF by following the steps mentioned in section 7 of [Getting Started with PSF](#)
3. Connect a PD device to Port 1 of EVB-PSF using a USB-C to USB-C cable.
4. Connect another PD device to Port 2 of EVB-PSF using a USB-C to USB-C cable.
5. The image demonstrates a scenario where Microchip's UPD301C Basic Sink AE boards are connected to Port 1 and Port 2 of the EVB.

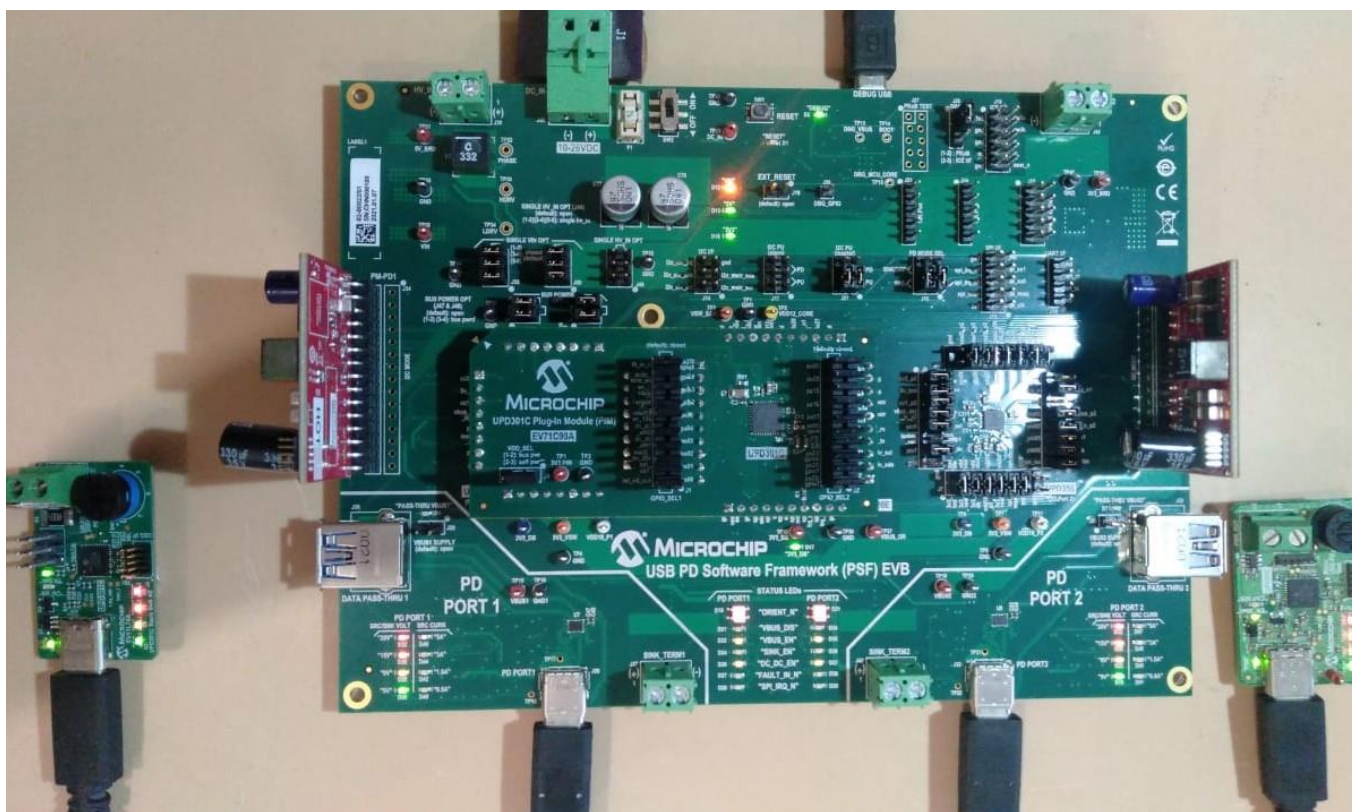


Figure 6.1 Two UPD301C Basic Sink AEs connected to each PD port

7 Expected Results

- Once the hex file is programmed, the SPI_IRQ_N LEDs in both the ports flash and then turn off. DC_DC_EN LEDs turn on.

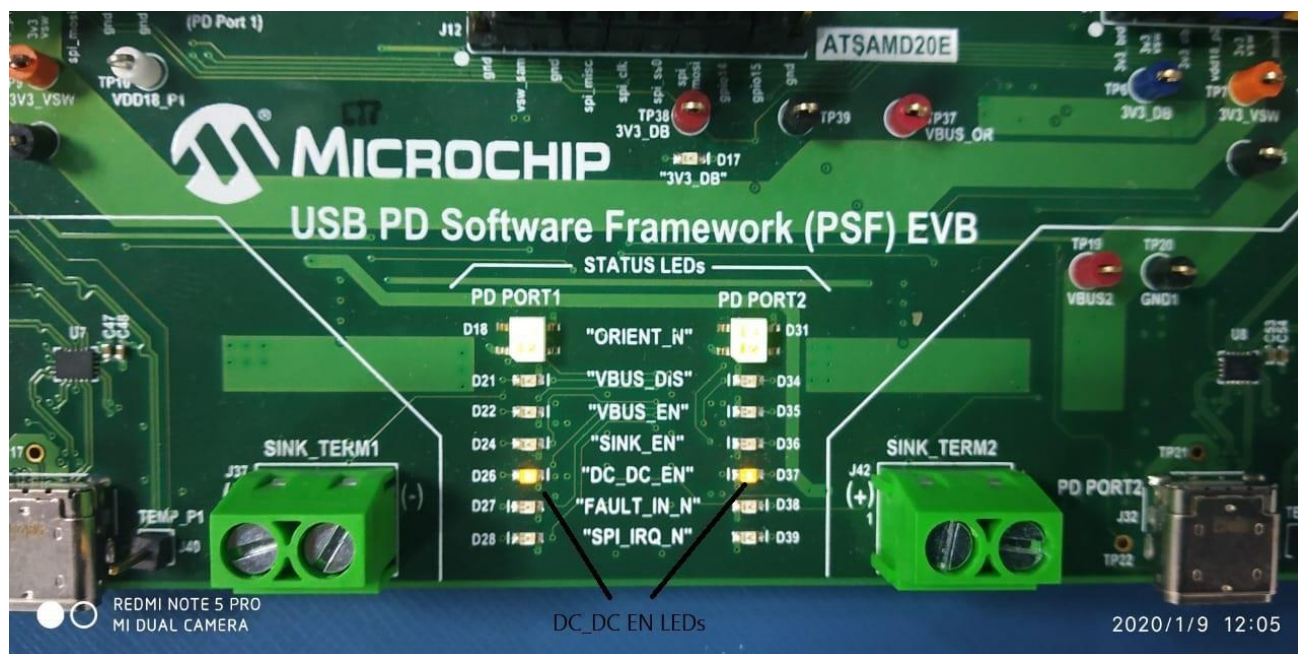


Figure 7.1 Status of DC_DC_EN LEDs after power on

- Once a PD Device is attached to a PD port, Source capabilities will be advertised by the PSF, followed by a PDO request from the device.
- PSF checks if the PDO requested by the device is within the range of its capabilities. If so, it accepts the request and starts driving the requested voltage in the VBUS.
- Once an explicit power contract negotiation is in place, the device starts charging. VBUS_EN LED will turn on along with the PDO status LEDs indicating the negotiated voltage as shown in Figure 7.2

PDO	Status LED
5V	Port 1 – D20, Port 2 – D19
9V	Port 1 – D25, Port 2 – D23
15V	Port 1 – D30, Port 2 – D29
20V	Port 1 – D33, Port 2 – D32

Table 8.1 PDO Status LEDs

Example with Port 1: If 5V is negotiated by the device, LED in the D20 of Port 1 PDO will glow. If 9V is negotiated, then LEDs in D20 and D25 will glow. In case of 15V, LEDs in D20, D25 and D30 will glow. If 20V is negotiated, all the LEDs will glow.

- In our case, UPD301C Basic Sink AE requested 20V. The status of VBUS_EN and PDO status LEDs is shown in Figure 7.2.

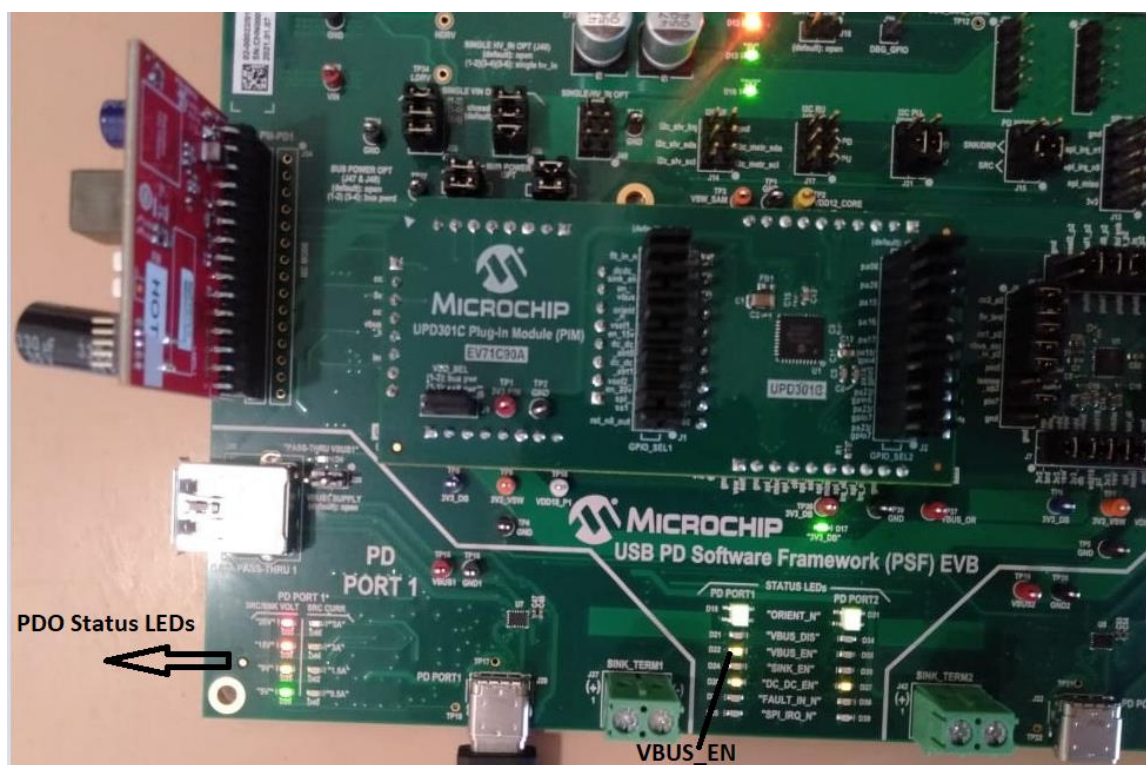


Figure 7.2 VBUS_EN and PDO Status LEDs after device attach