



Asset Tracking

User Guide - Version 1.0.0

September 2017

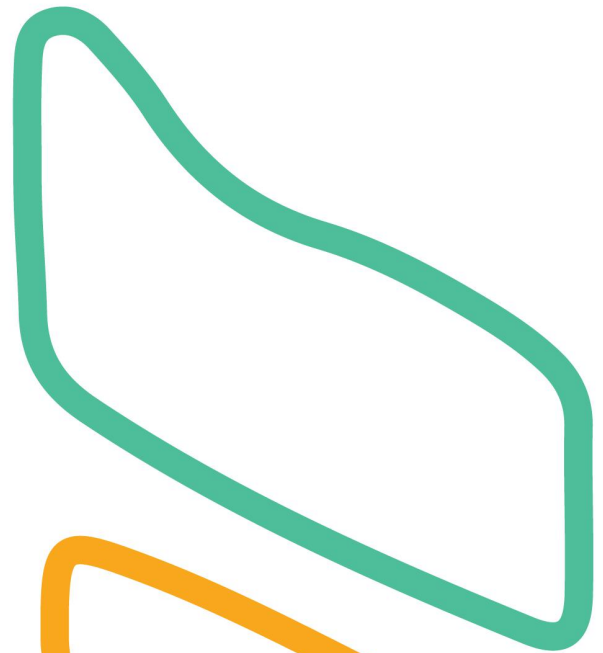


Table of Contents

1. About this Guide.....	3
2. About Mobiliya's Asset Monitoring Solution.....	3
3. Intended Audience.....	3
4. Pre-requisites.....	3
5. Setup.....	3
a. Software Setup.....	3
b. Hardware Setup.....	3
6. User Instructions.....	4
a. Login.....	4
1. Sign Up.....	4
2. Sign In.....	5
b) Dashboard.....	6
c) ASTRA Flow.....	7
1. Add Sensor.....	7
2. Generate QR Code for Sensor.....	8
3. Tagging Asset to a Sensor.....	8
4. Add Asset to a Group.....	11
5. Reports.....	13
6. Rule Creation.....	14
7. Alerts.....	16
8. Asset Status.....	16
7. Frequently Asked Questions.....	17

1. About this Guide

The purpose of this user guide is to assist users in setting up and managing Mobiliya Asset Management solution. This will walk the user step-by-step through the setup process & usage guidelines of the solution.

2. About Mobiliya's Asset Monitoring Solution

Mobiliya's asset monitoring and tracking solution is a complete smart inventory management tool. The solution provides a web dashboard & a mobile application to Monitor, Locate and Report all the remote assets so that they are completely visible 24x7.

3. Intended Audience

This guide is intended for facility managers who want to use the system.

4. Pre-requisites

- i. Web application Login URL: <https://<Front-end web app name>.azurewebsites.net>
- ii. Rest API URL for Mobile app & Gateway: <https://<Back-end web app name>.azurewebistes.net>
- iii. Each asset should have an asset barcode.

5. Setup

a. Software Setup

1. User should be logged in on the gateway.
2. Sensor should already be added/registered on the web portal.

b. Hardware Setup

1. Gateway should be in running state.
2. Sensor should be turned **ON**.

Device	Product Link
Dell 5000 Gateway	https://www.dell.com/en-us/work/shop/gateways-embedded-computing/edge-gateway-5000/spd/dell-edge-gateway-5000/xctoi5000us

BT Dongle	
Sensortag 2650	https://store.ti.com/cc2650stk.aspx
Mobile Device	https://www.amazon.in/mobile-phones/b/ref=nav_shopall_sbc_mobcomp_all_mobiles?ie=UTF8&node=1389401031

6. User Instructions


a. Login

- i. Open the browser and enter the URL of the web application
- ii. The portal is best viewed in **Google Chrome**.
- iii. Click on **Sign In** button.

1. Sign Up

To get started, users must first register on the portal. To register:

1. Enter a valid email address. Email addresses which are already registered cannot be used again.
2. Click on '**Send Verification Code**'. A verification code will be sent to the email address entered.
3. Enter the verification code to complete the sign up process.
4. After successful sign up the credentials will be registered on Azure Active Directory (AAD) and user will be redirected to the [Dashboard](#).

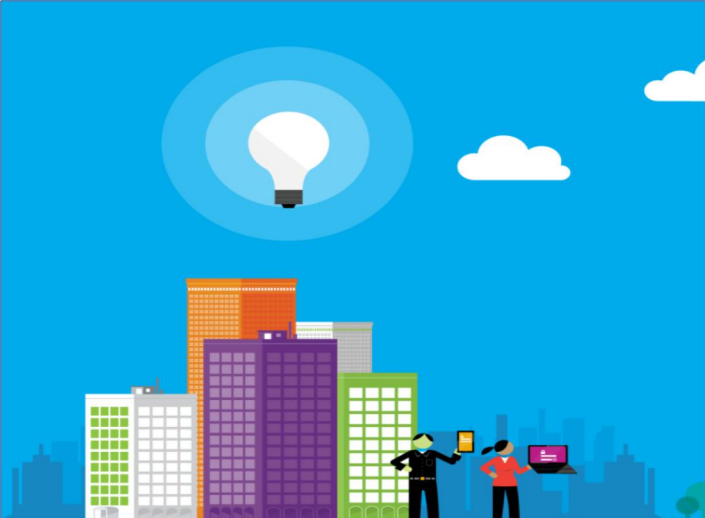

Email Address

[Send verification code](#)

New Password


Confirm New Password

Display Name

[Create](#) [Cancel](#)


2. Sign In

1. Use the sign up credentials to log in and start viewing the portal.
2. Contact administrator to change the password.

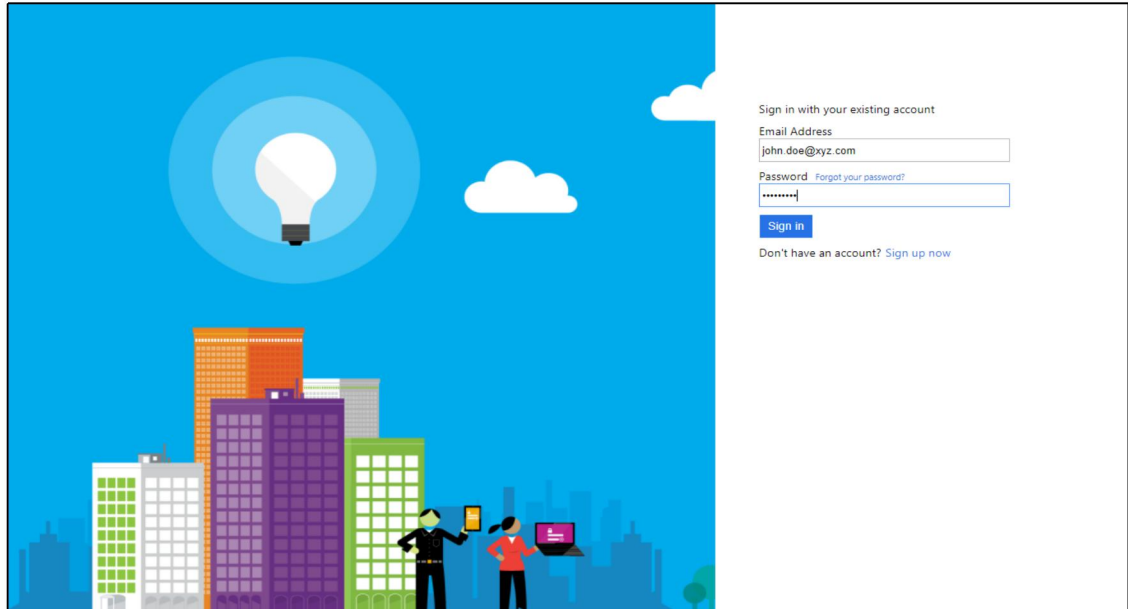


b) Dashboard

- a) After logging in, user can see the dashboard , which comprises of the following metrics:
- Assets:** Shows the count of assets which are currently tagged to sensors.
 - Damaged:** Shows the count of assets which are in damaged state. Assets go in damaged state when rule applied on them breaks.
 - Gateways:** Number of gateways that are on-boarded.
 - Online:** Number of Active gateways currently sending out data.
 - Shipment Live Position:** One can select a group and check the position of the shipment.

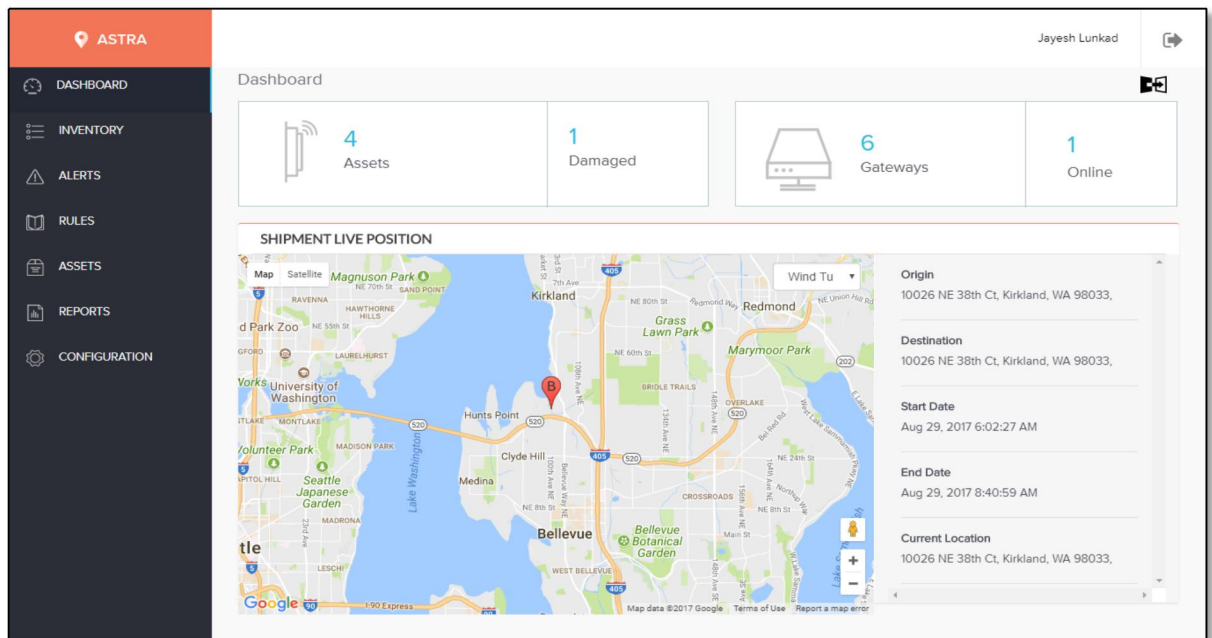

- b) Click on the **Flip** icon (as shown below) to see indoor view of the premise where the user wants to monitor the assets.

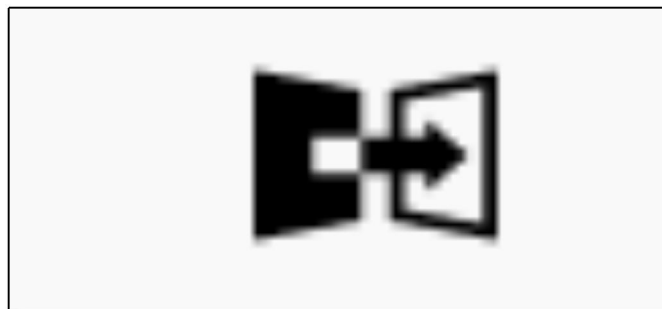

c) ASTRA Flow

1. Add Sensor

Fill in following fields in order to on board a sensor:


Name: Enter any sensor name. Ex: Room 1 temperature sensor

Serial No: Enter the sensor key in this field. Note it down as we will be using it later in the flow.

Follow below steps to find it:

a) Using BLE Scanner App

1. Use any BLE Scanner App and scan for BLE Devices.
2. Find the name of your Sensor type and note the Sensor Key.

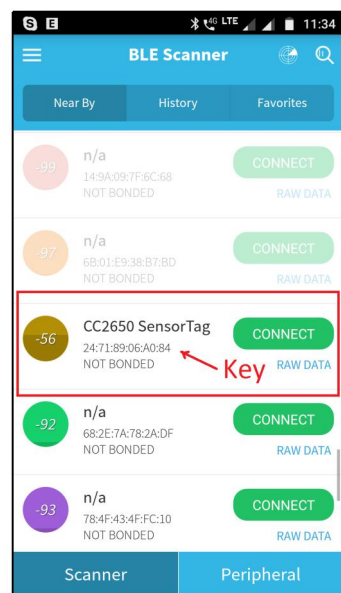

b) Using Ubuntu Or Linux System


1. Open Terminal and run `$ bluetoothctl`
2. Note down the Sensor Key (MAC Address) of your sensor

```
hrishikeshm@hulk:~/Gateway-Middleware$ bluetoothctl
[NEW] Controller 88:78:73:25:30:B8 hulk [default]
[NEW] Device B0:B4:48:ED:BC:03 CC2650 SensorTag
[NEW] Device 00:0B:57:36:74:1D Thunder Sense #29725
[NEW] Device B0:91:22:F6:A4:02 SensorTag 2.0
[NEW] Device 00:0B:57:36:74:0D Thunder Sense #29709
[NEW] Device 00:0B:57:36:73:F7 Thunder Sense #29687
[NEW] Device 00:0B:57:36:73:C2 Thunder Sense #29634
```

Note: Ignore ':' while adding sensor key. E.g.: B0B448EDBC03

Sensor Type: Select a relevant sensor type from the drop down list.

Description: Enter a description for the sensor.

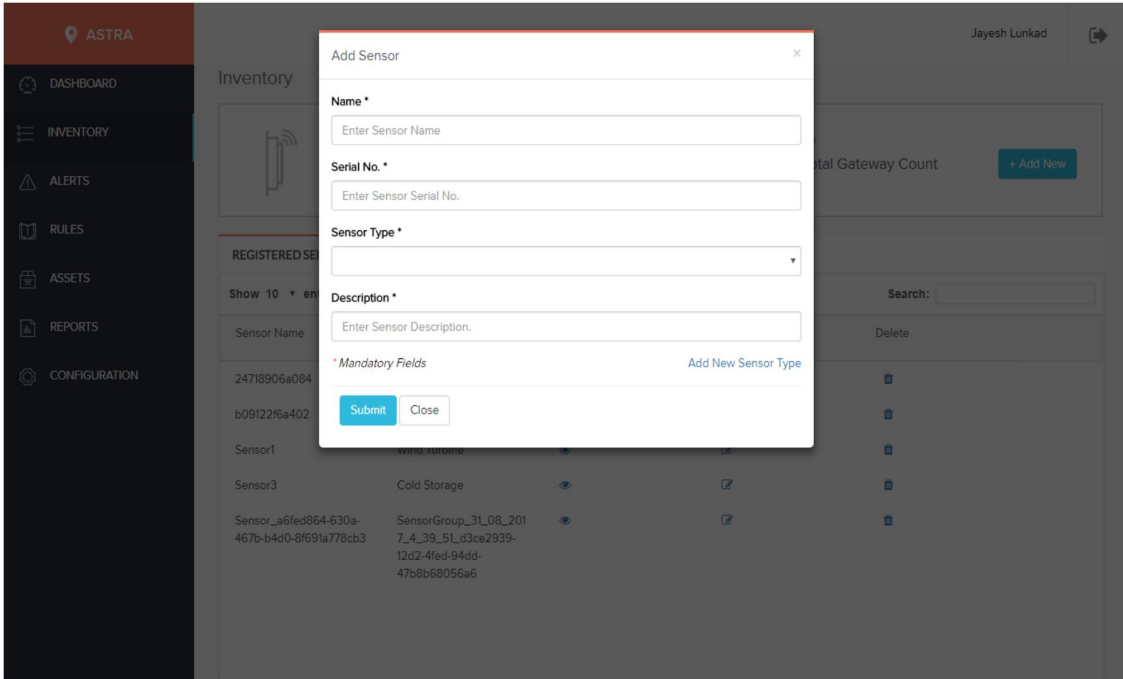

The screenshot displays the 'ASTRA' web portal interface. A modal window titled 'Add Sensor' is open, allowing users to add a new sensor. The modal contains the following fields and controls:

- Name ***: A text input field with the placeholder 'Enter Sensor Name'.
- Serial No. ***: A text input field with the placeholder 'Enter Sensor Serial No.'.
- Sensor Type ***: A dropdown menu.
- Description ***: A text input field with the placeholder 'Enter Sensor Description'.
- * Mandatory Fields**: A label indicating which fields are required.
- Buttons**: 'Submit' and 'Close' buttons.
- Link**: 'Add New Sensor Type'.


The background shows the 'Inventory' section of the portal, featuring a table with columns for 'Sensor Name', 'Sensor ID', 'Sensor Type', and 'Sensor Key'. The table lists several sensors, including 'Sensor1', 'Sensor3', and 'Sensor_a6fed864-630a-467b-b4d0-8f691a778cb3'.

2. Generate QR Code for Sensor


1. Log in to the web portal. Under the Inventory section note down the **Sensor Key** that needs to be tagged to an asset.
2. Log in to <https://www.barcodesinc.com/generator/qr/> to generate QR code.
3. Paste the **Sensor Key**.
4. Click on **Create QR Code**.
5. **Download/Save** this QR code as it will be required for scanning subsequently.

3. Tagging Asset to a Sensor


1. Log in to **ASTRA** mobile app
2. Enter **Domain Name** which is the REST server [URL](#).

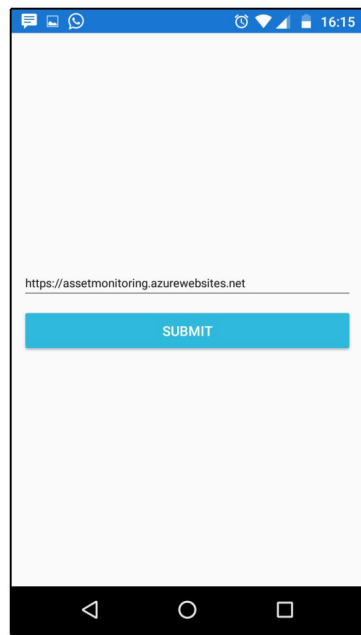


3. Log in into the app using the credentials acquired during set up stage of the web application.

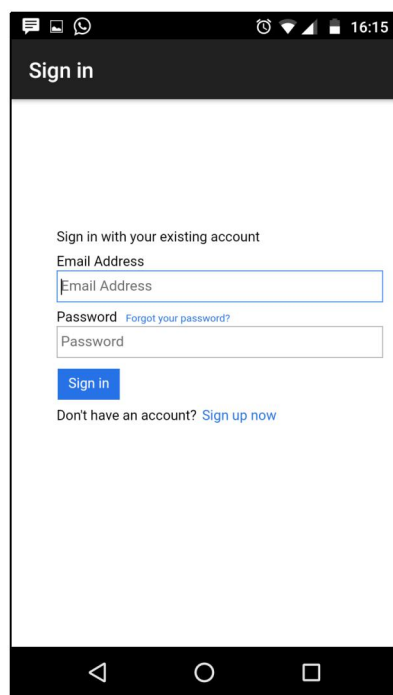


4. Click on **Dispatch** button.

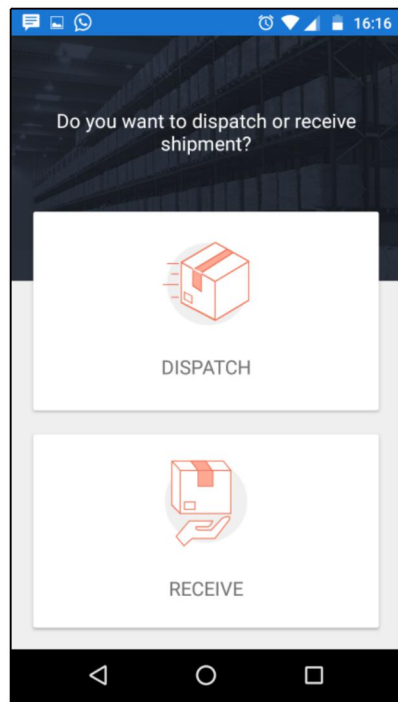


5. Scan the sensor QR Code downloaded from the QR code generator. After the code has been scanned successfully click on **Next**.

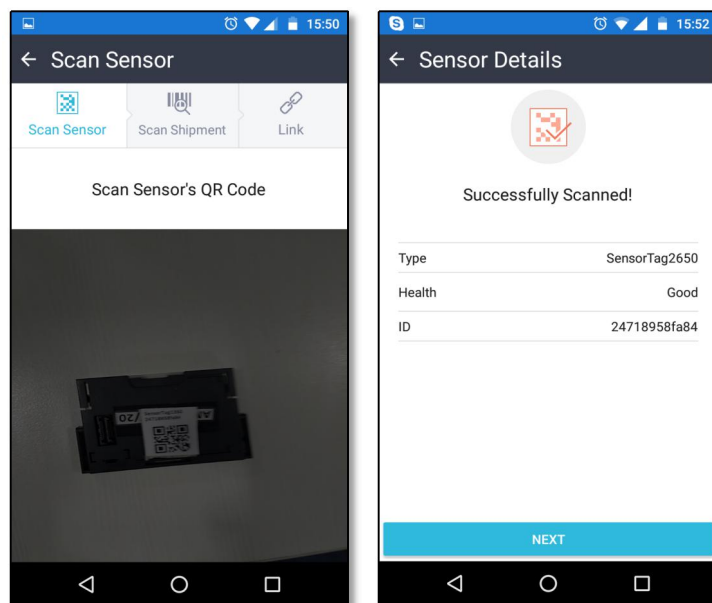

6. Scan the **asset barcode** which would be printed on the asset. If it is not printed then generate a barcode for the text/id from this [website](#). After the bar code is successfully scanned click on **Next**.

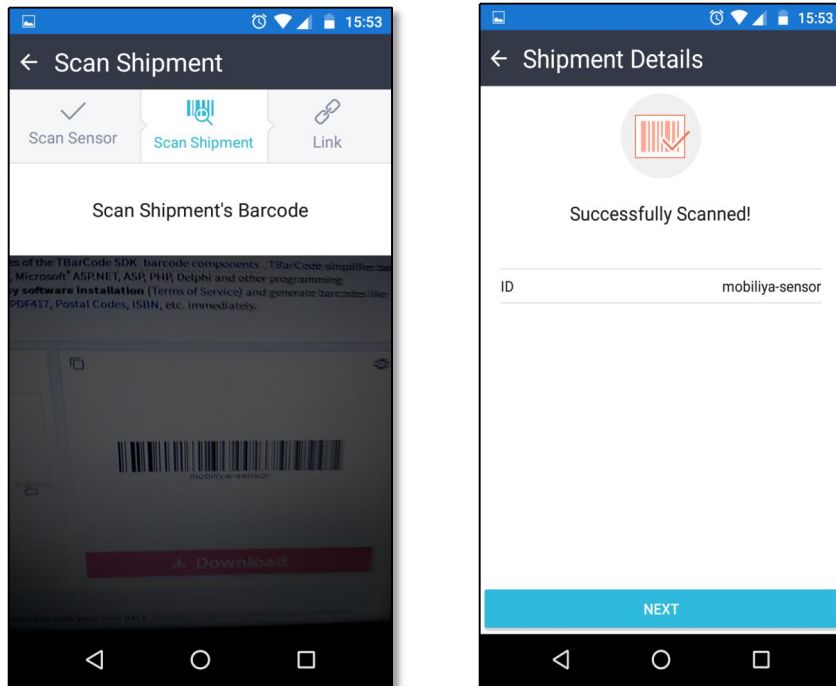


7. Link asset and sensor. After the asset is successfully linked click on **Done**.

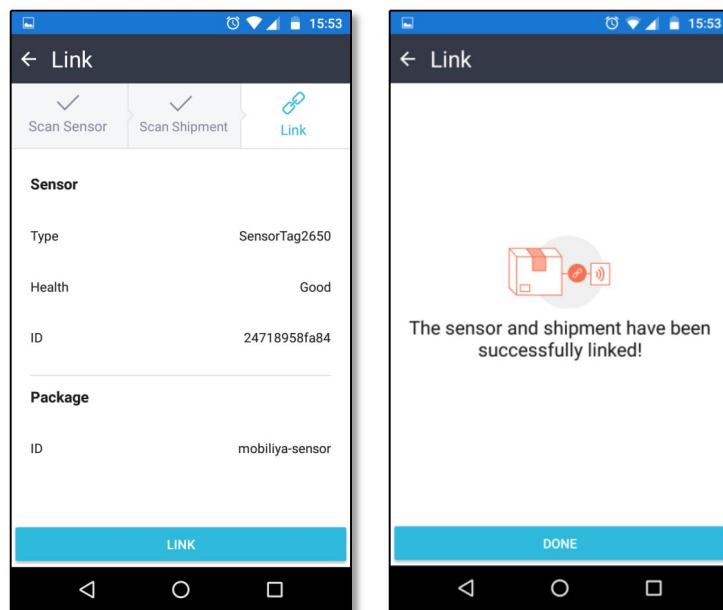


8. Turn the Sensor **ON**.

4. Add Asset to a Group

1. Click on the **Assets** section. Select the assets that need to be added to a group
2. Once the assets are selected, the **"Add to Group"** button will be automatically enabled.

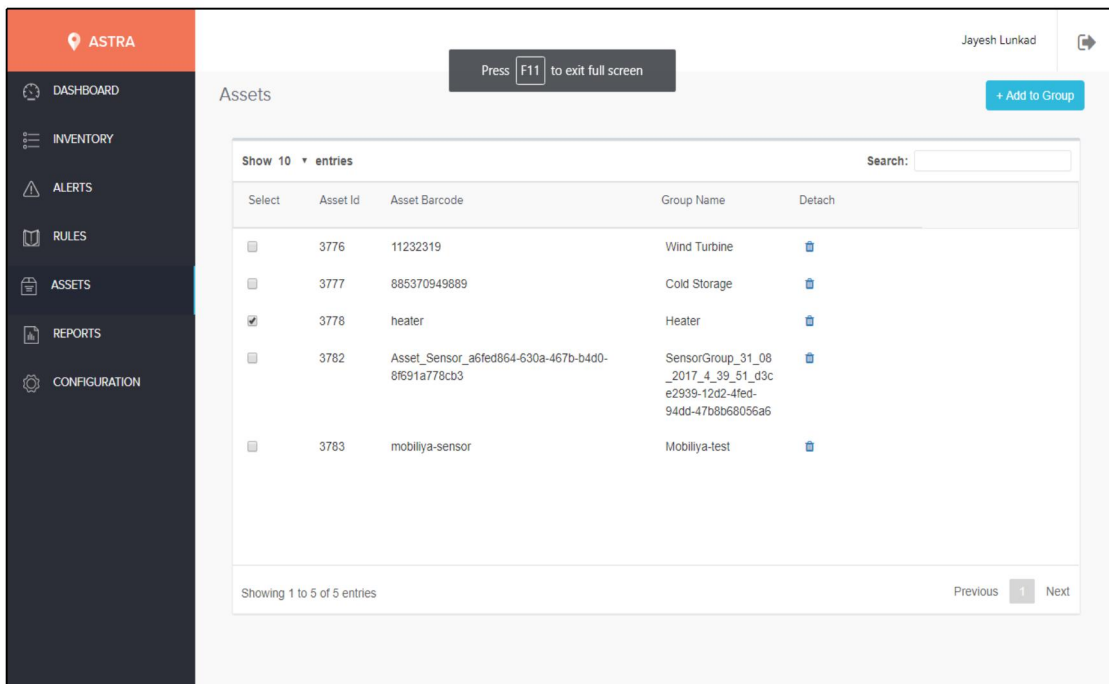


3. Assets can be added to a new group or an already existing group. If it is a new group, enter a group name and description.

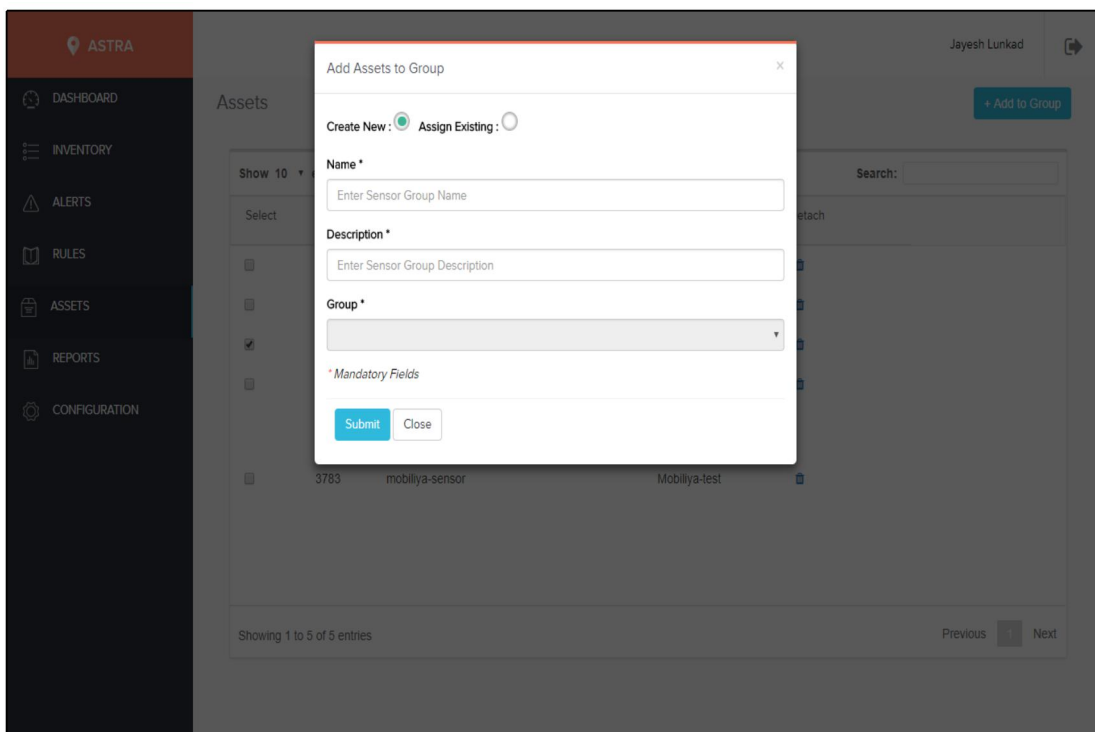

5. Reports

a) Live Report

This section of the portal shows live data of sensors which are currently sending data to the gateway. User needs to choose a sensor group and a particular sensor from it to start viewing the data. User will see only those capabilities which the sensor supports.

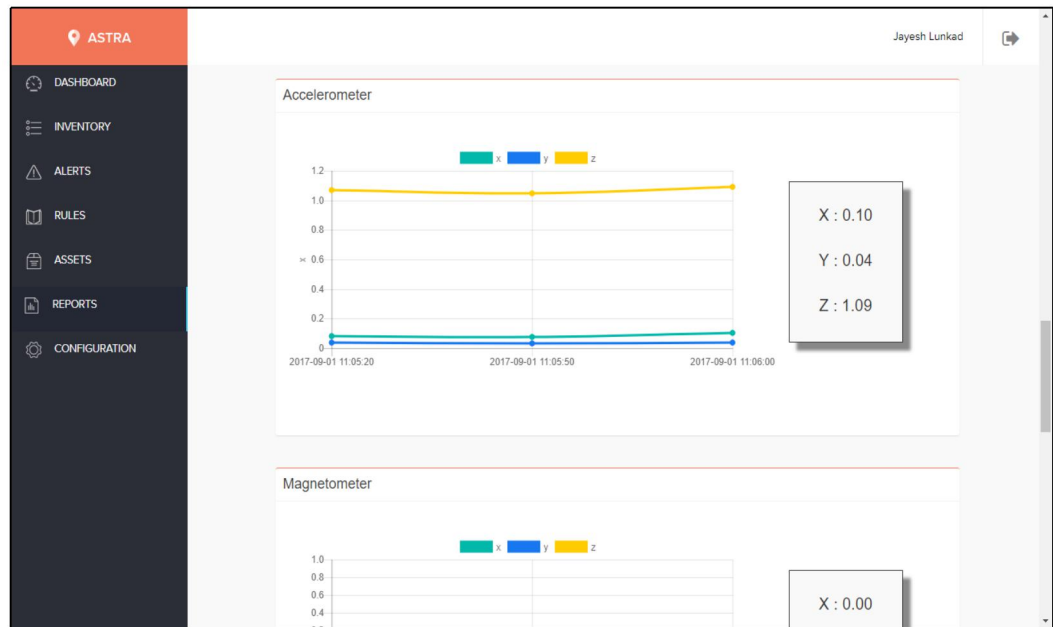

b) History Report

This report maintains archives of the data sent by sensors for each capability. Users can go to a specific date back in time and check the trend of their sensors.

Also, this report shows when a rule was breached and provides trend of pre and post events of a breached event.

History Data Page:

This page shows the time line of events generated by the sensor in the past for each capability supported by the sensor.


Rule Trigger Page:

This page shows trend for those sensors that are included in the group that is being monitored by a rule. Any instances of rules being breached are marked in **Red**.

Note: Once a group is deleted from the web portal, the History data for that group is also deleted.

6. Rule Creation


1. Click on the **Rules** section and then on “**Add New**” button.
2. Select a group and create a rule for the required capability. Click on **Done**.
3. User will get an instant notification informing that the process of rule creation has started.
4. Once user receives a notification of successful rule creation, user can check live reports to see the implemented rule.

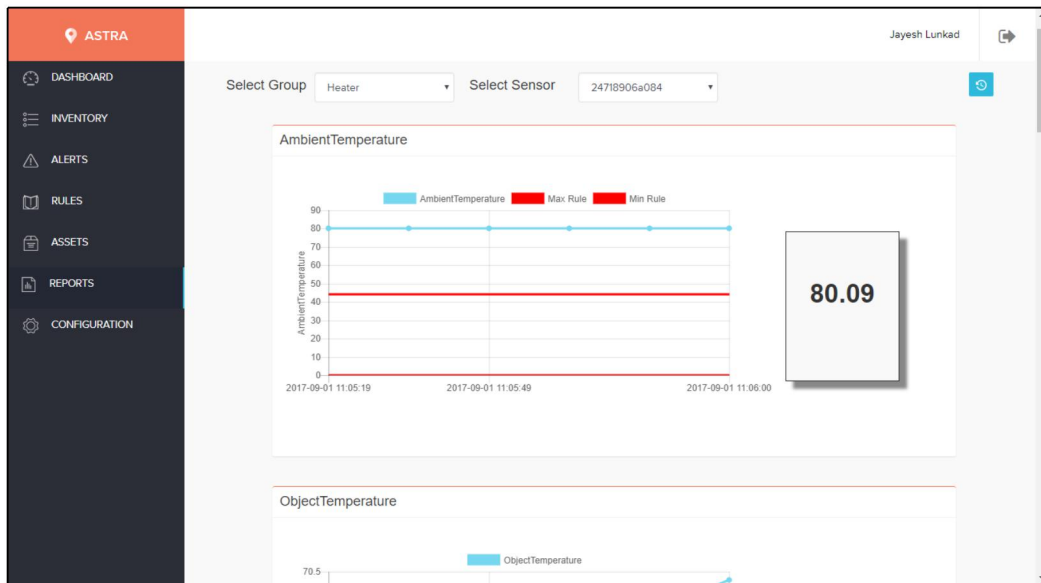


a) Indoor specific rules


1. Create Gateway Rules

Click on the **Rules** tab. Add a new gateway rule for a group.

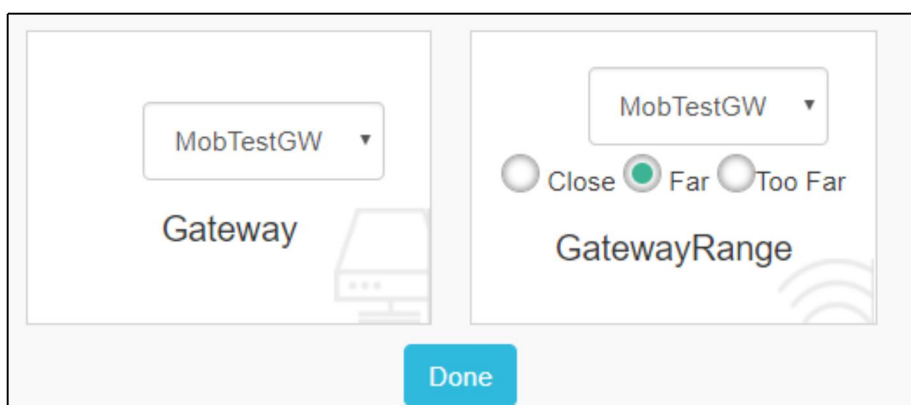

2. Positioning gateway on the layout

1. Click on the **Configuration** tab.
2. Click on **Indoor Map Configuration** tab.
3. Select a **Gateway**. A Gateway icon [] will be displayed.
4. Drag the gateway icon on the layout where it needs to be positioned. Click on Update to finish.

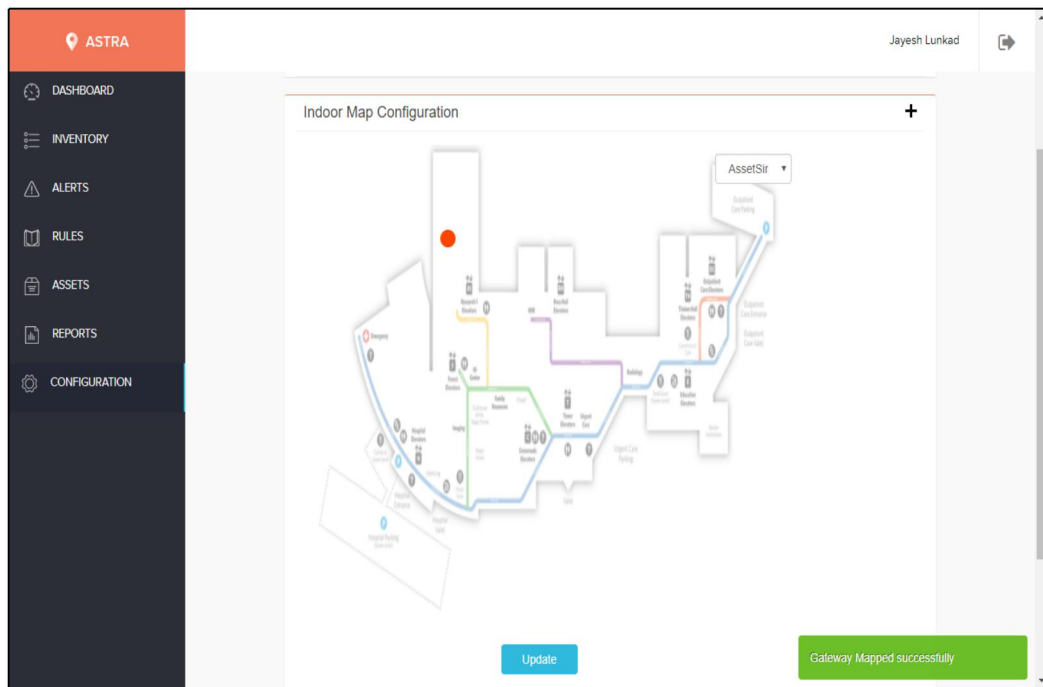

3. Indoor Alert Notifications

User can view complete asset data and notifications by following a few simple steps:

1. Click on **Dashboard**.
2. Click on **Flip** icon below the Logout button.
3. A **Mapped Gateway** will be displayed with asset in the range circle.
4. Click on one asset. User can now see the live data coming from sensors on the right side of the screen.
5. On the same screen, alert notifications for assets are also displayed.



7. Alerts


1. This section displays all the alerts which have been received for a particular group, asset and capability. Select a particular feature from the drop down menu. Click on **Apply** to view.
2. Choosing an asset and capability are optional.

8. Asset Status

User can view the status of every asset in the following way:

1. Open mobile application using first 3 steps of [this](#) section.
2. Click on **Receive** button.
3. Scan asset barcode. It will show the status of the asset whether it is good or bad.

4. If the status is bad, it means that a rule(s) has been breached.

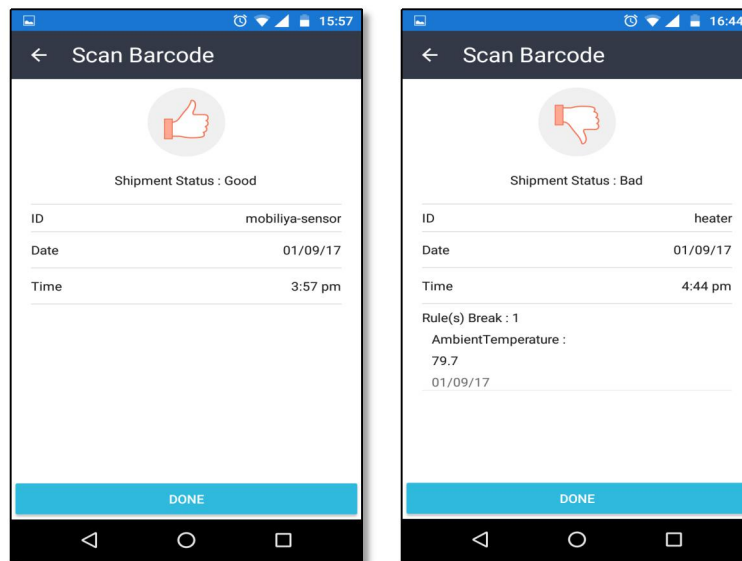

7. Frequently Asked Questions

Q1: What is an Asset?

An asset is an object whose condition needs to be tracked over a period of time.

Example: Any product during transit of a shipment.

Q2: What is a Sensor?

Sensors are tagged to an asset to send environmental data such as humidity, temperature etc.

Q3: What is a capability?

A capability is a type of environmental information which a sensor provides. Different types of sensors provide different type of capabilities. Example: SensorTag provides capabilities like temperature and humidity.

Q4: What are groups in ASTRA?

Groups are a collection of sensors. A group can have sensors that provide multiple capabilities. In ASTRA, all rules are applied at the group level.

Q5: Power BI reports are not displayed.

This may be because the Power BI configuration has not been enabled. Users must contact their administrator to get it enabled.

Q6: Sensor data not visible in History report.

The History report refreshes every 3 hours. Users must ensure that they wait for the stipulated 3 hours before checking data for the newly added sensor in the History report.

Q7: App is asking for Domain URL on start up.

Mobile app requires Rest API URL for configuration. Users must contact administrator and update the URL. It will ask the URL only once.

Q8: Why are sensors not visible on the Reports page?

Users must ensure that the sensor that they are looking for has been linked to an asset.