

Automotive Door Control System Design

Static Design

Mohamed Abdullah Mohamed Hassan


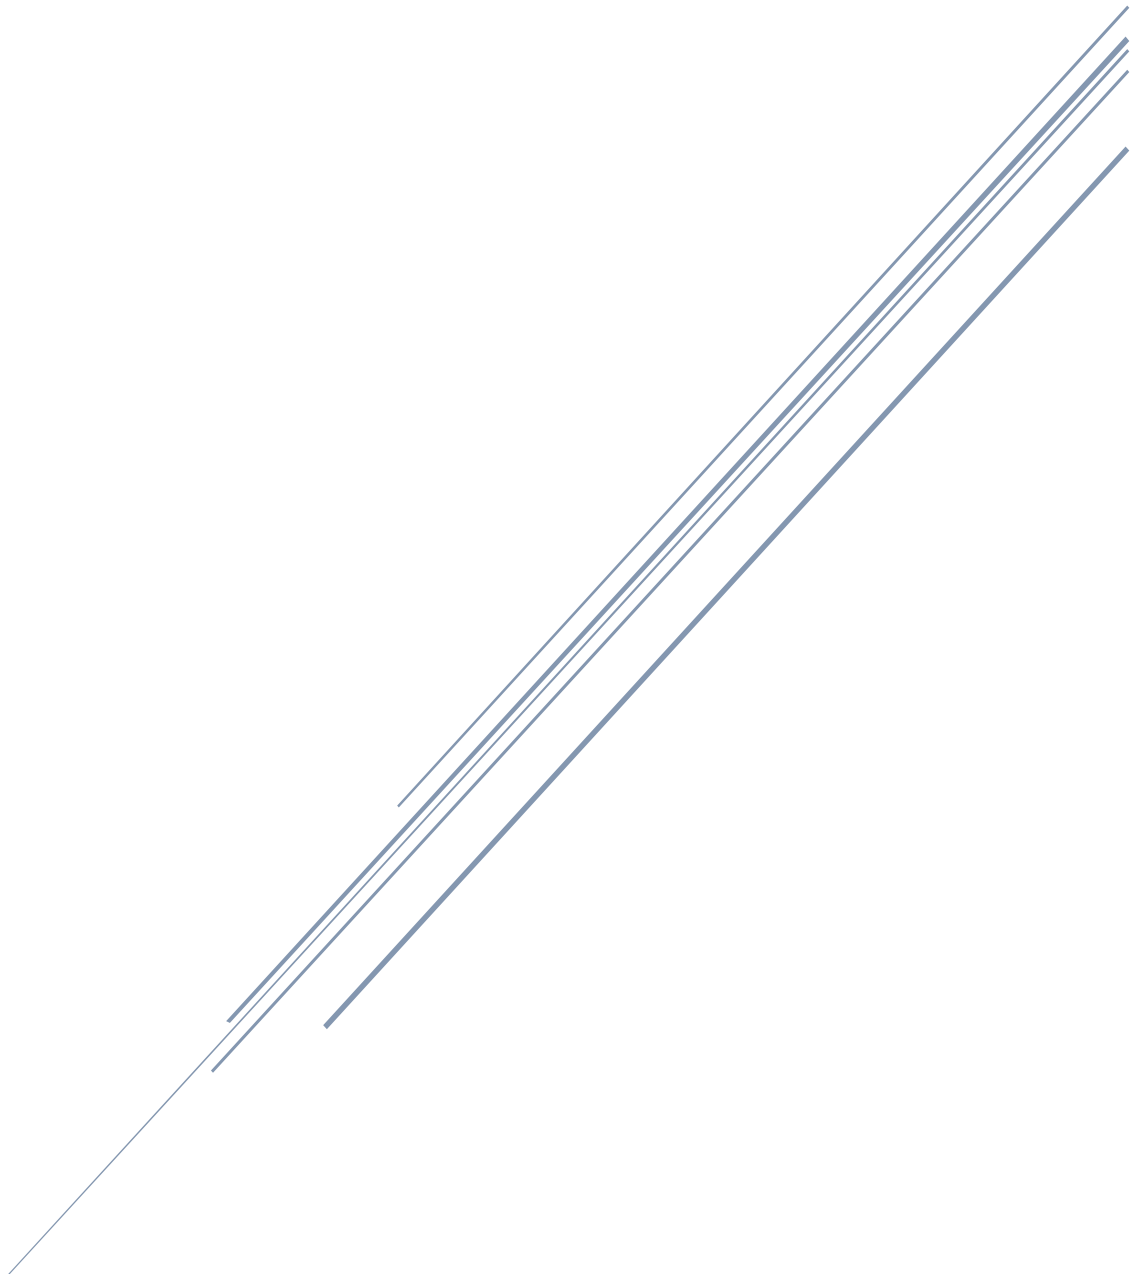


Table of Contents

I.	System Schematic:	2
II.	Project Static Design	3
A.	Layered architecture:	3
1.	ECU 1	3
2.	ECU 2	3
B.	MCAL APIs	4
1.	Digital Input Output Module "DIO"	4
2.	System Timer Module "SYS Tick"	4
3.	System Control Module "SysCTRL"	5
4.	Input Edge Time Capture Module "IET"	5
5.	Controller Area Network Module "CAN"	5
C.	On-Board APIs:	7
1.	Door module: "door"	7
2.	Light Switch Module "light_sw"	7
3.	Vehicle Speed Sensor Module: "vspeed"	7
4.	Can bus interface module: "bus can"	7
5.	MCU System control Interface: "MSys"	8
6.	Board communication Handler: "HCom"	8
7.	Light output Module "light"	8
8.	Buzzer Module "Buzz"	9
D.	Standard Structures & Enumeration	10
1.	Structures	10
2.	Enumerations: "Type Define"	10
E.	Folder Structures:	11
1.	ECU 1 Folder structure:	11
2.	ECU 2 Folder Structure:	12


I. System Schematic:

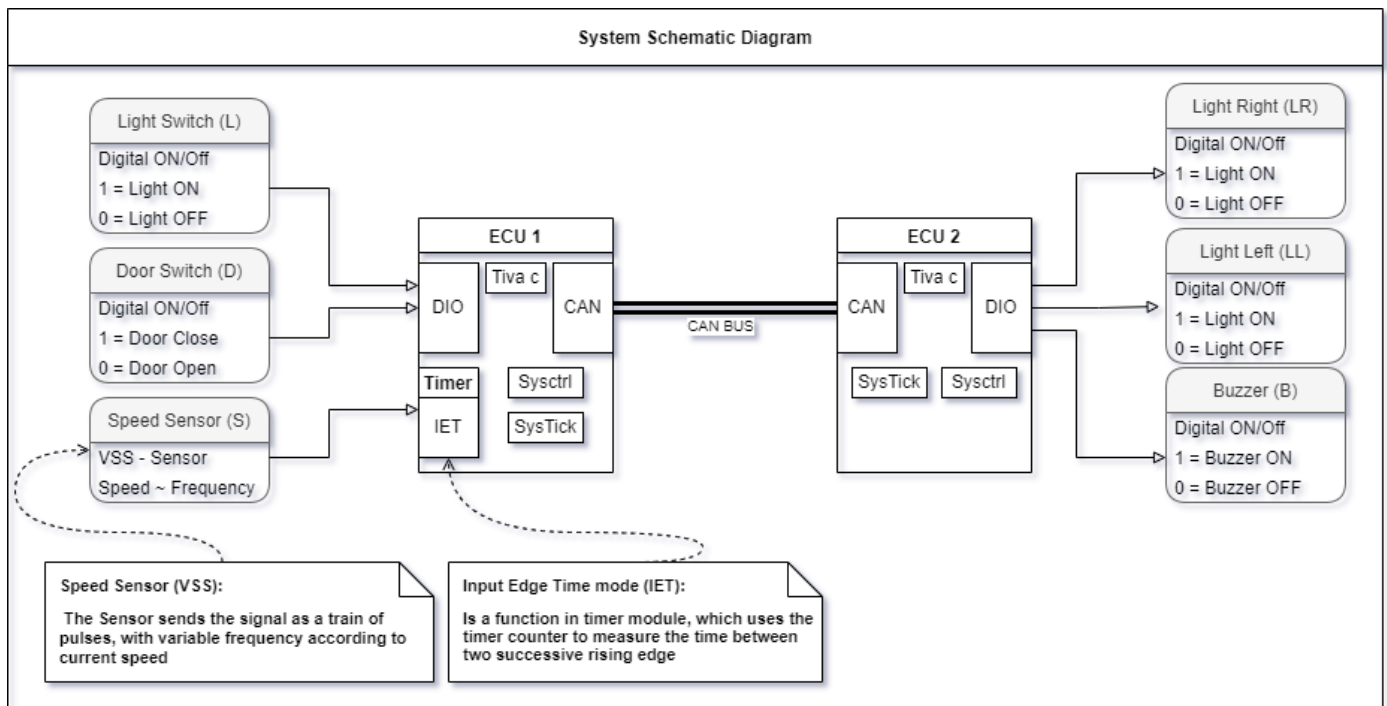

II. Project Static Design


A. Layered architecture:

1. ECU 1

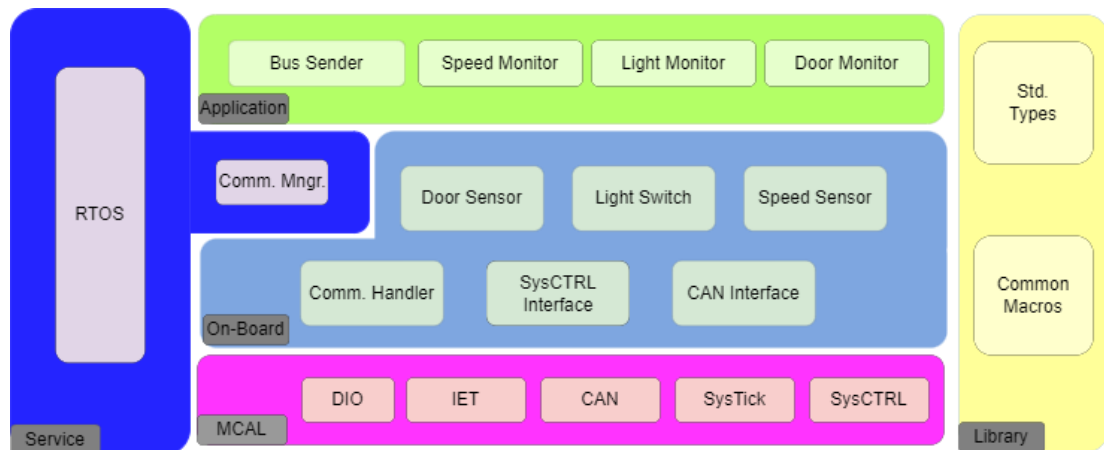

ECU 1 Layered arch.

2. ECU 2

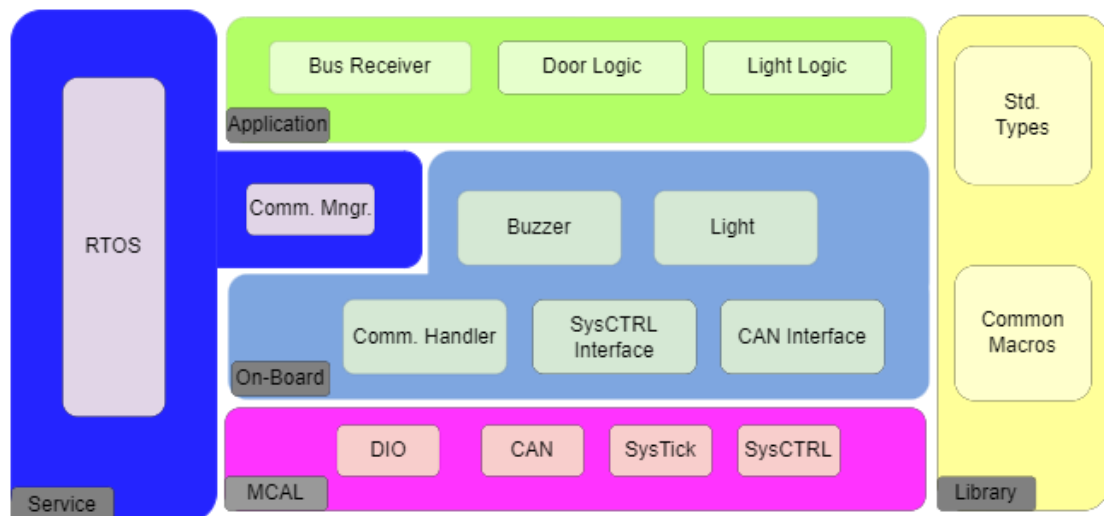

ECU 2 Layered arch.

B. MCAL APIs

1. Digital Input Output Module “DIO”

void DIO_Setup (Digital_Pin_t * pin)	Module: DIO
Description: <ul style="list-style-type: none">• Enable Clock for the Port• Configure the Pin for Digital Input, and Output	
Pointer to Digital_Pin_t struct	
Return: No return	

xbool_t DIO_Read (Digital_Pin_t * pin)	Module: DIO
Description: <ul style="list-style-type: none">• Returns the current state of the pin	
Input parameters: <ul style="list-style-type: none">• Pointer to Digital_Pin_t struct	
Return: xFalse = Pin is low xTrue = Pin is High	

void DIO_Write (Digital_Pin_t *pin, xbool_t state)	Module: DIO
Description: Set the PIN status according to state	
Input parameters: <ul style="list-style-type: none">• Pointer to Digital_Pin_t struct• State of pin High, Low	
Return: No return	

2. System Timer Module “SYS Tick”

void SysTick_Setup (uint32_t reloadValue, void * callBackFunction)	Module: SYS Tick
Description: Selects the clock source Setup the timer start value	
Input parameters: reloadValue the start value of the timer pointer for callback function which will be called on ISR	
Return: No return	
Notes: This Method Doesn't Start the SYS Tick timer module. If callBackFunction is NULL the Interrupt enable bit will be disabled.	

Void SysTick_Sart (void)	Module: SYS Tick
Description: Starts the System Tick module after setup.	
Input parameters: No Input	
Return: No Return	
Notes: Calling SysTick_Setup() is mandatory before calling SysTick_Sart()	

void SysTick_Stop (void)	Module: SYS Tick
Description: Hold the System Tick module from counting.	
Input parameters: No Input	
Return: No return	

uint32_t SysTick_Read (void)	Module: SYS Tick
Description: Returns the current value of the countdown register.	
Input parameters: No Input	
Return: uint32_t which represents the current value of countdown register.	

3. System Control Module “SysCTRL”

uint32_t SysCTRL_Init (void)	Module: Sys CTRL
Description: Configure the PLL with required clock frequency. Configure the MCU to Clock source.	
Input parameters: No Input	
Return: No Return	

4. Input Edge Time Capture Module “IET”

uint32_t IET_Init (void * callBackFunction)	Module: IET
Description: Enable & configure the module for Operation Call Back the assigned function upon ISR.	
Input parameters: pointer for callback function which will be called on ISR	
Return: No Return	
Notes: This Method doesn't Start IET Module	

uint32_t IET_Start (void)	Module: IET
Description: Start IET Operation	
Input parameters: No Input	
Return: No Return	
Notes: Calling IET_Ini() is mandatory prior calling this method.	

uint32_t IET_Stop (void * callBackFunction)	Module: IET
Description: Hold the operation of IET Module.	
Input parameters: No Input.	
Return: No Return	

5. Controller Area Network Module “CAN”

xstate_t CAN_Init (can_config_t *config)	Module: CAN
Description: Enable CAN module Setup CAN Bit rate Configure CAN RX messages filter	
Input parameters: Pionter to can_config_t struct	
Return: xstate_t Error code	
Notes: This Method Configures the CAN module, and doesn't connect it to the network	

xstate_t CAN_Open (void)	Module: CAN
Description: Starts the CAN module, and connect to the bus for sending and receiving data	
Input parameters: No Input	
Return: xstate_t Error code	
Notes: Calling CAN_Init() is mandatory prior calling CAN_Open()	

xstate_t CAN_Close (void)	Module: CAN
Description: Halts the CAN module, and Disconnect from the bus.	
Input parameters: No Input	
Return: xstate_t Error code	

xcan_state_t CAN_Send (com_msg_t *msg)	Module: CAN
Description: Sends a CAN message	
Input parameters: Pointer to the message to be sent	
Return: xcan_state_t Error code	

xcan_state_t CAN_Read (com_msg_t *msg)	Module: CAN
Description: Reads the received buffer and place it in ca com_msg_t n_msg_t pionter	
Input parameters: Pionter to com_msg_t struct to place the data in	
Return: xcan_state_t Error code	

xcan_state_t CAN_Get_State (void)	Module: CAN
Description: Returns The Current Status of the CAN module and CAN bus	
Input parameters: No Input	
Return: xcan_state_t Error code	

C. On-Board APIs:

1. Door module: "door"

xstate_t Door_Init (dio_pin_t *doorPin)	Module: door
Description: Start the initialization of door sensor as an Input pin	
Input parameters: Pointer to dio_pin_t struct.	
Return: xstate_t Error code	

xbool_t Door_Get_State (dio_pin_t *doorPin)	Module: door
Description: Start the initialization of door sensor as an Input pin	
Input parameters: Pointer to dio_pin_t struct.	
Return: xFlase = Door is closed xTrue = Door is opened	

2. Light Switch Module "light_sw"

xstate_t Lightsw_Init (dio_pin_t *doorPin)	Module: light_sw
Description: Start the initialization of light switch as an Input pin	
Input parameters: Pointer to dio_pin_t struct.	
Return: xstate_t Error code	

xbool_t Lightsw_Get_State (dio_pin_t *doorPin)	Module: light_sw
Description: Reads the state of the light switch	
Input parameters: Pointer to dio_pin_t struct.	
Return: xFlase = Switch is released xTrue = Switch is Pressed	

3. Vehicle Speed Sensor Module: "vspeed"

xstate_t VSpeed_Init (void)	Module: vspeed
Description: Initialize IET module and place call-back function to measure the speed service	
Input parameters: no-Input	
Return: xstate_t Error code	
Note: Only one speed sensor used.	

uint32_t VSpeed_Read (dio_pin_t *doorPin)	Module: vspeed
Description: Request to return the current speed of the vehicle.	
Input parameters: No-Input	
Return: 0 = vehicle is stopped 0 >= vehicle is moving, the current speed is returned.	

4. Can bus interface module: "bus can"

xstate_t Bus_CAN_Init (void)	Module: bus can
Description: Initialize CAN module, and start receiving	
Input parameters: No-Input	
Return: xstate_t Error code	

xstate_t Bus_CAN_read (com_msg_t *msg)	Module: bus can
Description: Reads message by its ID and store it in msg struct.	
Input parameters: pointer to com_msg_t struct to hold the message	
Return: xstate_t	

xstate_t Bus_CAN_Send (com_msg_t *msg)	Module: bus can
Description: Sends a message through a CAN bus	
Input parameters: pointer to com_msg_t struct to send	
Return: xstate_t	

xcan_state_t Bus_CAN_Errors (void)	Module: bus can
Description: Return the most recent CAN bus Error	
Input parameters: no-parameters	
Return: xcan_state_t	

5. MCU System control Interface: "MSys"

xstate_t MSys_Init (void *tickCallBack)	Module: MSys
Description: Initialize MCU clock sources. Configure SysTick module. Assigns the SysTick ISR to tickCallBack() function "for RTOS operation"	
Input parameters: pointer to tickCallBack()	
Return: xstate_t	

6. Board communication Handler: "HCom"

xstate_t HCom_Init (com_msg_t *msg)	Module: HCom
Description: Initialize communication channel specified by com_msg_t.ch	
Input parameters: pointer to com_msg_t structure	
Return: xstate_t	

xstate_t HCom_send (com_msg_t *msg)	Module: HCom
Description: Sends the message through comm interface	
Input parameters: pointer to com_msg_t structure	
Return: xstate_t	

xstate_t HCom_Receive (com_msg_t *msg)	Module: HCom
Description: Reads the message from comm interface	
Input parameters: pointer to com_msg_t structure	
Return: xstate_t	

void HCom_Error (string * error_no)	Module: HCom
Description: Sends the message through comm interface	
Input parameters: pointer to string to store the error message.	
Return: xstate_t	

7. Light output Module "light"

xstate_t Light_Init (dio_pin_t *doorPin)	Module: light
Description: Start the initialization of light as an output pin	
Input parameters: Pointer to dio_pin_t struct.	
Return: xstate_t Error code	

xstate_t Light_Set_State (dio_pin_t *doorPin)	Module: light
Description: Sets the desired pin state High, or Low	
Input parameters: Pointer to dio_pin_t struct.	
Return: xstate_t	

8. Buzzer Module “Buzz”

xstate_t Buzz_Init (dio_pin_t *doorPin)	Module: Buzz
Description: Start the initialization of Buzzer pin as an output	
Input parameters: Pointer to dio_pin_t struct.	
Return: xstate_t Error code	

xstate_t Buzz_Set_State (dio_pin_t *doorPin)	Module: Buzz
Description: Sets the desired pin state High, or Low	
Input parameters: Pointer to dio_pin_t struct.	
Return: xstate_t	

D. Standard Structures & Enumeration

1. Structures

dio_pin_t		
uint8_t	Port	Port number
uint8_t	Pin	Pin Number
uint8_t	Dir	Pin Direction

can_config_t		
uint32_t	Bitrate	CAN Module Bit Rate
uint8_t	MsgCount	the count of message id
uint8_t	MsgId[]	The array for message id

com_msg_t		
uint32_t	Id	message ID used for some comm channels.
uint8_t	ch	Selects the communication channel "UART, SPI, CAN,..."
uint8_t	MsgLength	The Length of the message
uint8_t	Msg[]	The message it self

2. Enumerations: "Type Define"


xbool_t		
⋅ XFalse	= 0x00	False
⋅ XTrue	= !XFalse	True

xcan_bool_t		
⋅ xstate_OK	= 0	OK
⋅ xstate_Error	= 1	Error

xcan_stsate_t		
⋅ xcan_OK	= 0	No Error present
⋅ xcan_Error	= 0x01	General Error
⋅ xcan_bus_off	= 0x10	CAN module is Disconnected from bus
⋅ xcan_tx_overflow	= 0x20	Transmitter Buffer is Full
⋅ xcan_buffer_empty	= 0x30	Receiver Buffer is Empty
⋅ xcan_msg_empty	= 0x31	No Message by this ID
⋅ xcan_rx_overflow	= 0x32	Receiver buffer is full
⋅ xcan_bus_warning	= 0x50	Bus error counter is over 96
⋅ xcan_bus_error_active	= 0x51	Bus error counter is below 127
⋅ xcan_bus_error_pasive	= 0x52	Bus error counter is over 127
⋅ xcan_bus_conflict	= 0x53	collusion occurred after arbitration


E. Folder Structures:

1. ECU 1 Folder structure:

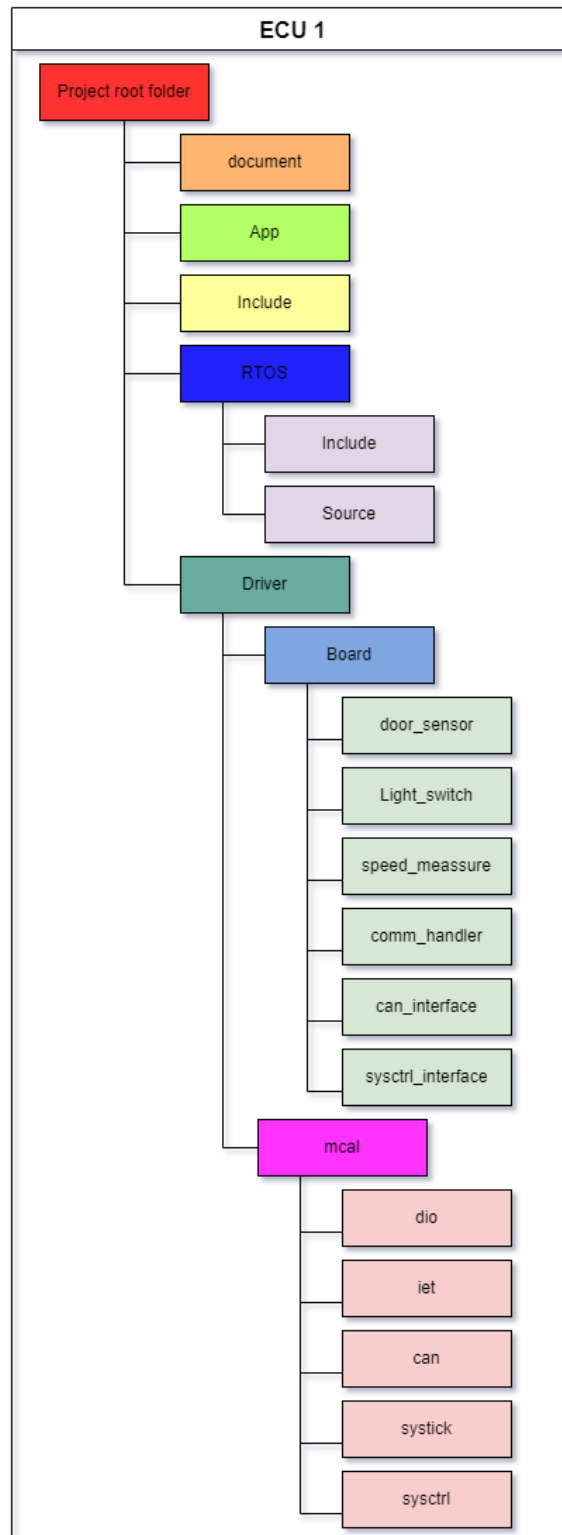

ECU 1 Project Folder Structure

2. ECU 2 Folder Structure:

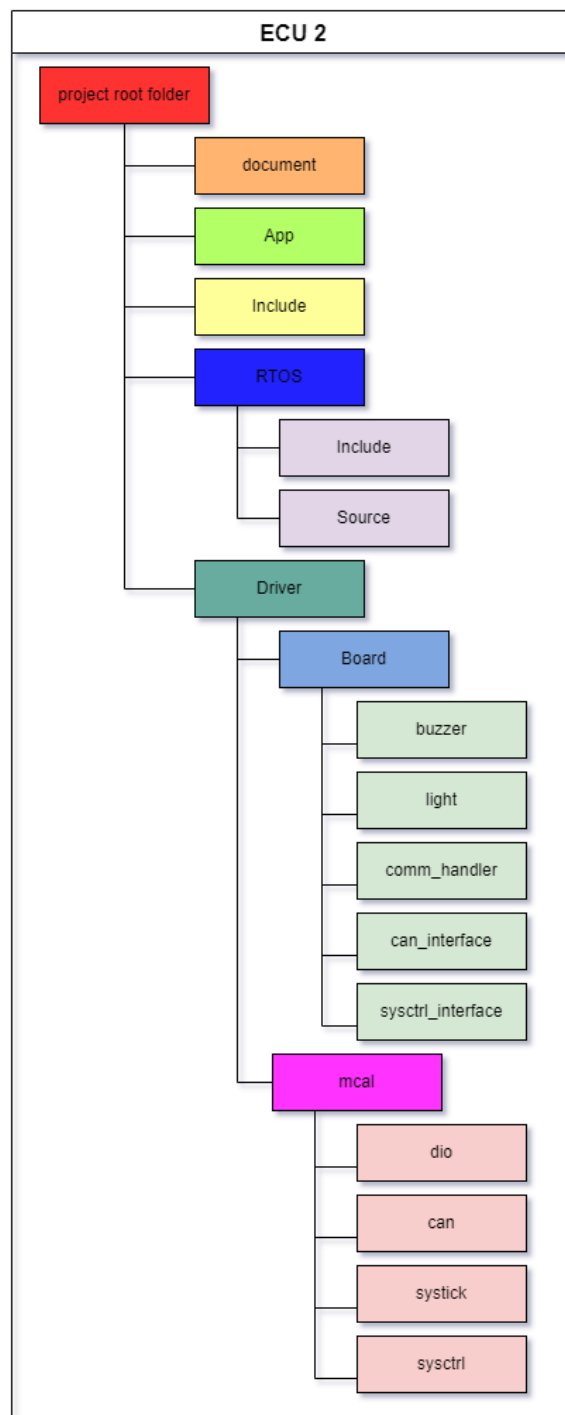

ECU 2 Project Folder Structure