
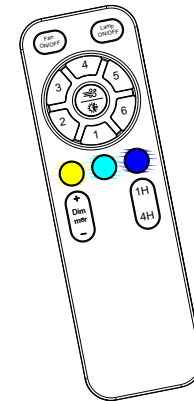


# 42" Ceiling Fan

model: 42YFT-2430

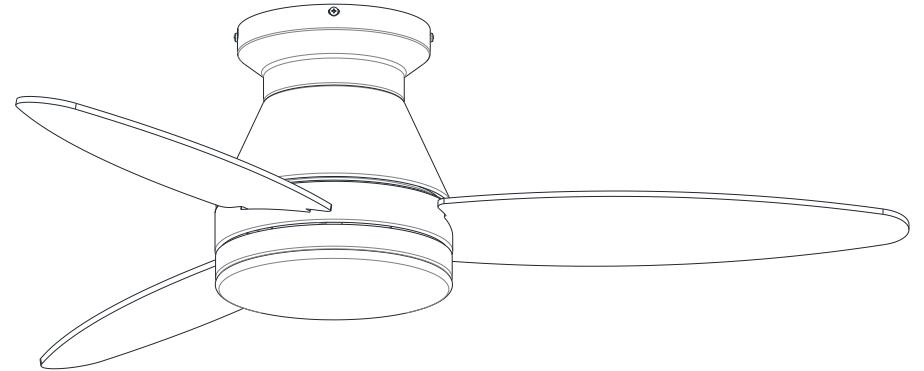

## USER MANUAL

Please read this user manual carefully before use,  
and keep it for future reference.

HOUSEHOLD USE ONLY

# TABLE OF CONTENTS

INTRODUCTION .....1

SAFETY PRECAUTIONS.....2

UNPACKING YOUR CEILING FAN .....4

FAN INSTALLATION INSTRUCTIONS .....5

FAN OPERATION INSTRUCTIONS..... 9

INFORMATION FOR LICENSED ELECTRICIAN AND FAN OWNERS..... 11

IMPORTANT FACTS ..... 12




# INTRODUCTION

CONGRATULATIONS ON YOUR CHOICE  
Thank you and we are delighted you have chosen our ceiling fan for your home. Please read all the instructions carefully before assembly and use.

## SAFETY NOTICES

WARNING / CAUTION  
A WARNING/CAUTION notice denotes a hazard. It calls attention to installation procedure, operating procedure, maintenance procedure, or the like, that if not correctly performed or adhered to, could result in damage to this appliance, personal injury or death. Do not proceed beyond a WARNING/CAUTION notice until the indicated conditions are fully understood and met

## SAFETY SYMBOLS

	Alternating current
	Protective earth
	Warning/Caution

## SAFETY PRECAUTIONS

Please observe the following general safety precautions carefully before and during all phases of handling, installation, removal, operation and maintenance of this product. Failure to comply with these precautions violates safety standards of design, manufacture and intended use of the product. We assumes no liability for customer's failure to comply with these requirements.

### SAFETY WARNING

1. Read all instructions and safety information. Review assembly diagrams provided before installing your new ceiling fan.
2. **This fan must be installed by a licensed and qualified electrician.**
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Young children should be supervised to ensure that they do not play with the appliance.
5. All electrical works must only be undertaken after disconnection of the power by removing fuses or turning off the circuit breaker, to ensure all pole isolation of the electrical supply.
6. Do not use outdoors where it could be exposed to water or moisture.
7. This manual is not intended to instruct or assist untrained or unqualified persons to install this ceiling fan.
8. It is the responsibility of qualified, licensed installer and user to apply common sense and care at all times during installation and operation.

### HOW TO CHOOSE A PROPER LOCATION FOR THE CEILING FAN

1. According to safety regulations, the lowest point of the fan blade must be at least 2.1 metres (7 feet) from the floor.
2. For fan installed enclosed outdoors, the fan must be installed at least 1.5m from the perimeter of roof/eaves of the enclosure to protect the product from direct or indirect rain water or sunlight.
3. The chosen location for the fan must not allow the rotating blades to come into contact with any object.
4. Please check carefully and make sure that ceiling joists are strong enough and of adequate size to support the weight of about 35kg.
5. To reduce the risk of fire, electrical shock or personal injury, please make sure that the fan mounting bracket is directly supported from the building structure. Do not mount to an outlet box.
6. The mounting plate must be firmly screwed to a load bearing building structure eg. a concrete must be securely nailed or screwed between the beams

## SAFETY PRECAUTIONS


### HOW TO CHOOSE A PROPER LOCATION FOR THE CEILING FAN

7. Attach fan blades after the fan motor housing is installed and properly secured. Keep the fan motor and fan blades in original package until it is ready to be installed.
8. Check and confirm, after the fan is completely installed, that all connections are proper and secure to prevent the fan from falling or causing property damages or personal injury.
9. Take care not to bend or damage the motor Drive Shaft or Fan Blades when handling or installing them. If such defect is noticed, please contact the Customer Service before installation of the ceiling fan.
10. Fan, light kit and mounting plate must be earthed.
11. Use of an unapproved remote control voids the warranty. Only use our remote control.
12. Do not remote the fan from the ceiling after installation.
13. Make sure electricity is turned off at the main power box before commencing work. Turn off the power by removing fuse or turning off circuit breaker before installing the fan and replacing led light.

## UNPACK YOUR CEILING FAN

Open the original carton and verify the following items.


If there are any missing or damage items, contact customer service. Do not throw away the carton or other packaging material as it may be needed for warranty replacement or repair.

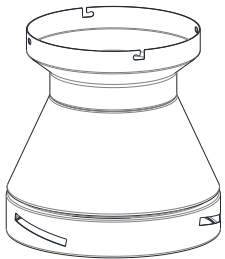


1x Motor Assembly



3 x Blades

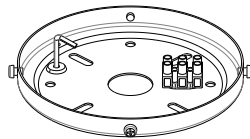


1 x Mounting Bracket

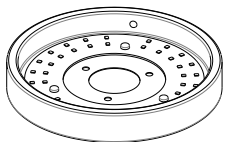


1 x Light plate



1 x Light Shade



1 x Remote handset

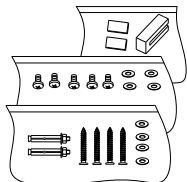

1 x Washers & Screw  
Package

INSTRUCTION MANUAL 1 x

## HOW TO CHOOSE A PROPER LOCATION FOR THE CEILING FAN


### ⚠ CAUTION

- Use of unapproved remote control voids the warranty. Therefore do not control the operation of this fan from any controller that is not approved by our fan.
- Do not use solid state controllers.



## FAN INSTALLATION INSTRUCTIONS

### ⚠ WARNING

- Make sure electricity is turned off at the main power box before commencing work. Turn off the power by removing fuse or turning off circuit breaker before installing the fan and replacing the lamps.
- **The lowest point on the fan blade must be at least 2.3 (7.5ft) metres from the floor.**
- Make sure that ceiling joists are strong enough and of adequate size to support the weight of the fan of about 35kg.

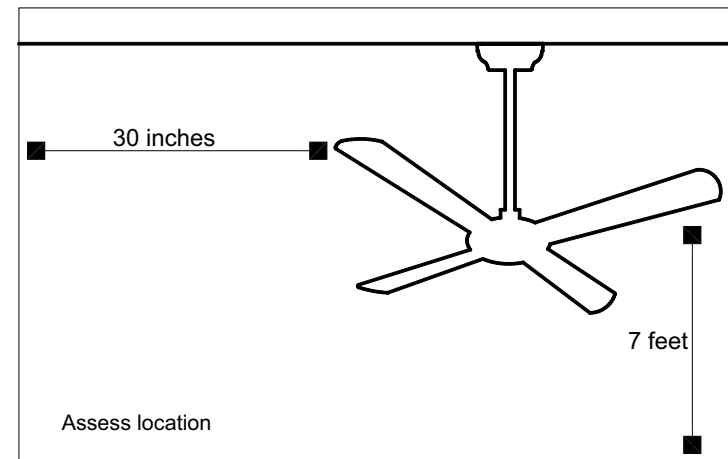


## WOOD CEILING

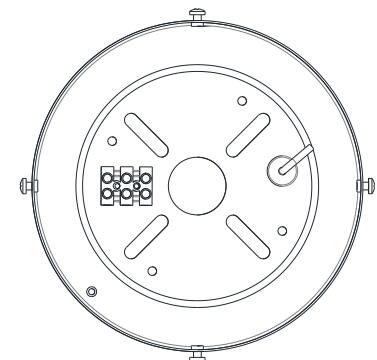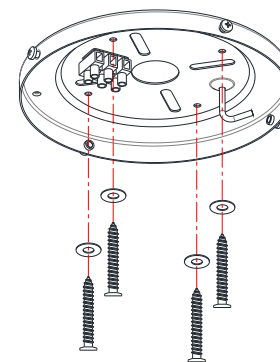


1. Attach the mounting bracket to ceiling by using supplied washers and screws. make sure the bracket is tight and secured.

## FAN INSTALLATION INSTRUCTIONS

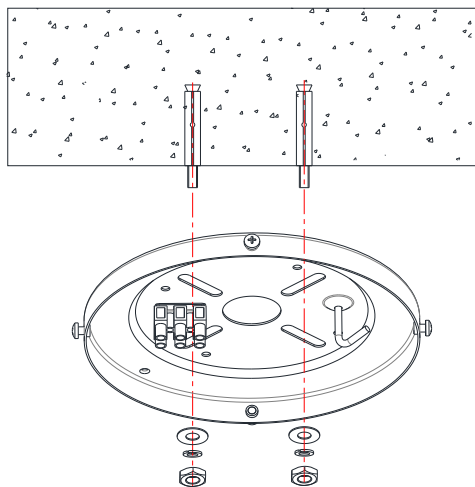

### CONCRETE CEILING


Position the support in the desired location and mark the holes to be made. Remove the support and drill the concrete structure by making 2 Ø 8 mm holes. Remove dust and introduce the anchor studs supplied using a hammer (leave the threaded rod sticking out). Remove nuts and washers, replace the support and replace the washers and nuts. Tighten the nuts securely using a suitable wrench.

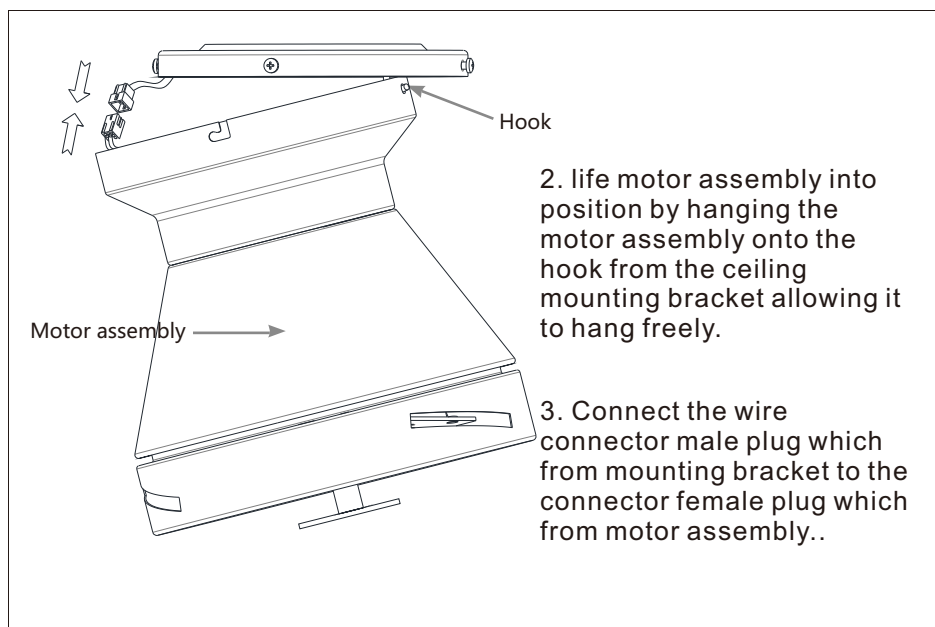


2. Lift motor assembly into position by hanging the motor assembly onto the hook from the ceiling mounting bracket allowing it to hang freely.

3. Connect the wire connector male plug which from mounting bracket to the connector female plug which from motor assembly..

## FAN INSTALLATION INSTRUCTIONS


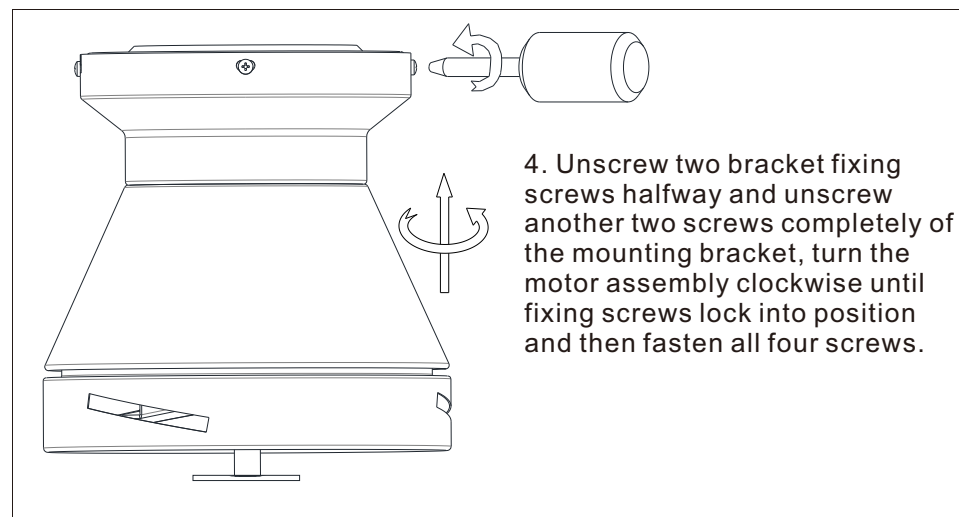


4. Unscrew two bracket fixing screws halfway and unscrew another two screws completely of the mounting bracket, turn the motor assembly clockwise until fixing screws lock into position and then fasten all four screws.

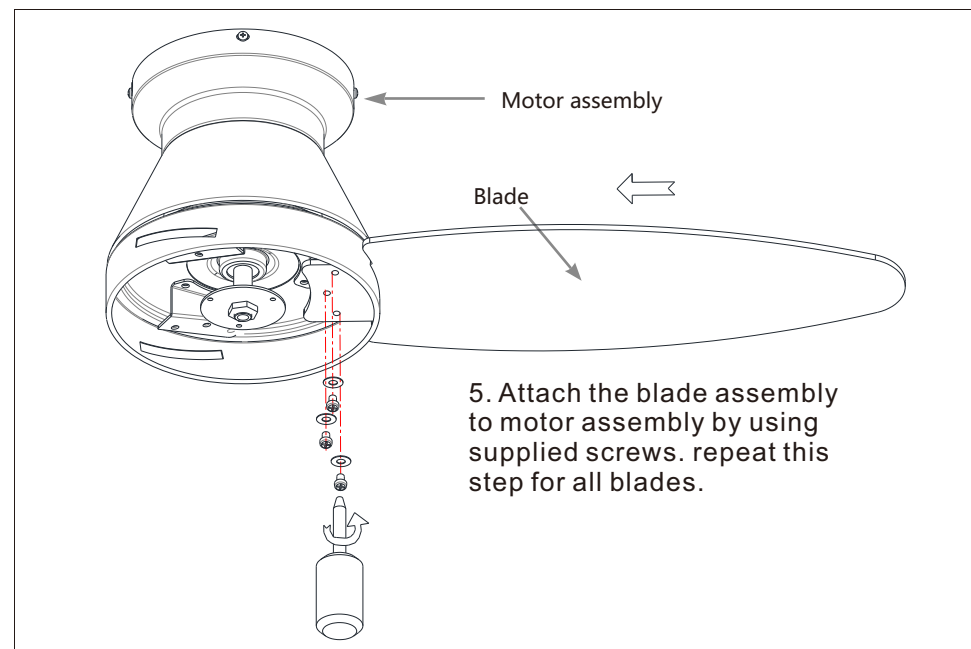


5. Attach the blade assembly to motor assembly by using supplied screws. repeat this step for all blades.

## FAN INSTALLATION INSTRUCTIONS

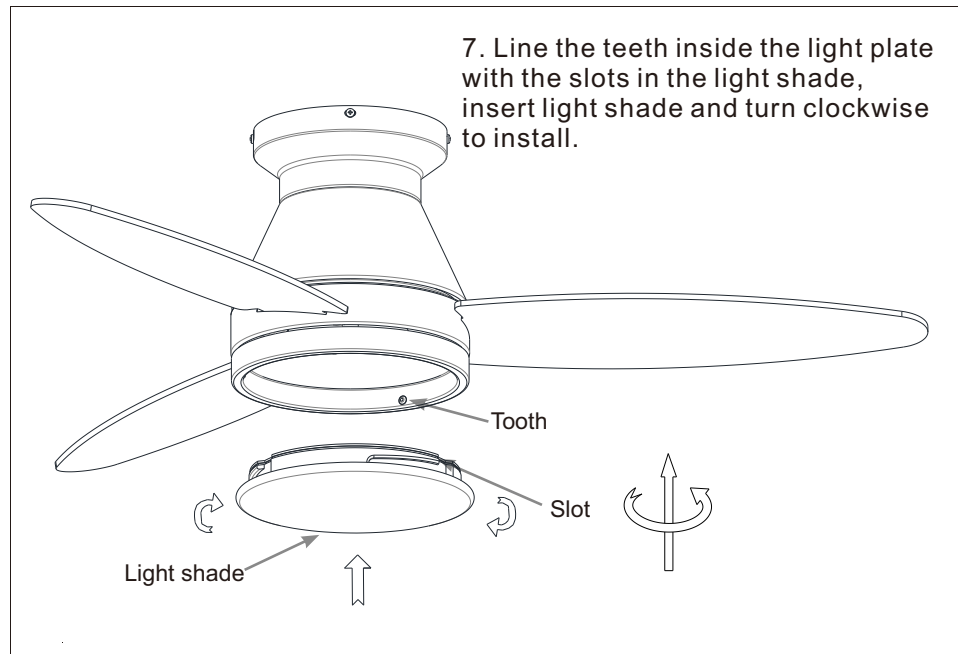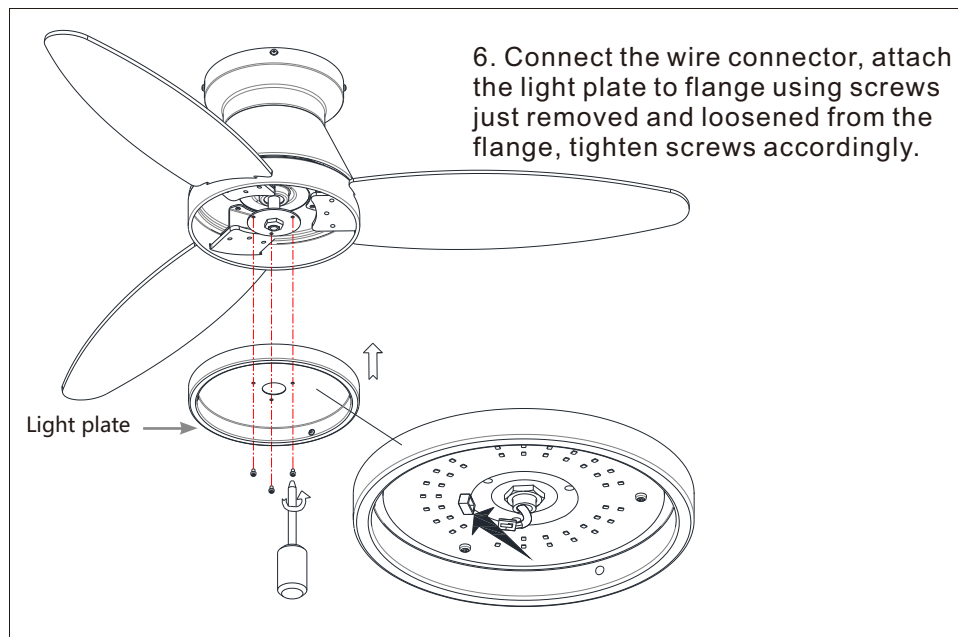

## FAN OPERATION INSTRUCTIONS

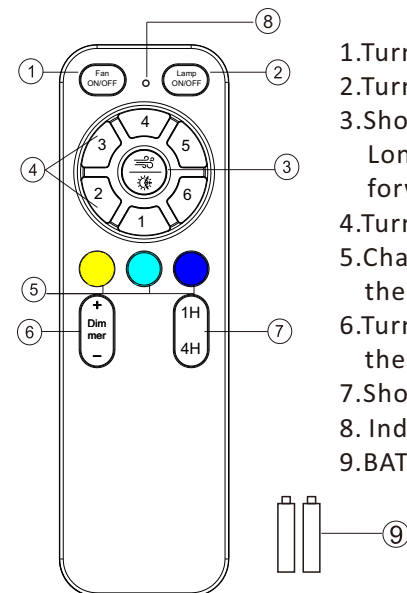

1. Turn ON/OFF the Fan.
2. Turn ON/OFF the Light or Matching code.
3. Short press to Activate the Natural wind MODE.  
Long press 3 seconds for switch the Fan to forward or reverse.
4. Turn ON the Fan and choose Fan's speed.
5. Change the Light's colour temperature. (When the Light is on.)
6. Turn UP/DOWN the Light's brightness. (When the Light is on.)
7. Short press to activate 1H/4H timer of the Fan.
8. Indicator for the remote control.
9. BATTERY: 1.5V x 2 AAALR03.

### KINDLY REMINDERS:

1. Press and hold the transmitter's Pair code "Lamp ON/OFF" while the receiver is powering on within 5 seconds. After hearing "DIDI" for three long rings, the learning code pairing is successful and can work normally. If not, please turn off the power and restart the above operation. (Note: Do not accept learning code pairing after powering for more than 5 seconds.)
2. When the emitter cannot control the receiver, please check the battery switch touching normally or not, correction of the positive and negative, full or empty of the power.
3. Low voltage of battery will affect the sensitivity of the emitter and the signal reception accordingly (the indicated light will flash out its warning when the battery get low voltage), must replace if the battery is getting low voltage.
4. Please take out the battery from the emitter when leaving unused for long time.
5. When installing the fan, the fan ceiling cover don't press the antenna (or other wire), it is easy to breakdown the wire and short-circuited.
6. Supporting 20W lighting power at maximum.

PS: please connect the ground wire correctly, otherwise it may cause the light micro-light or flash.

NOTE 1: The motor does not react instantaneously to changes made by the handset. Be patient and allow the motor to process the instruction when changing functions.

NOTE 2: The remote control includes a memory function. This function records the status when power has been disconnected to allow resumption when power is restored.

NOTE 3: Remove the battery from the transmitter handset when left unused for extended periods.

NOTE 4: To change the direction of rotation for S/W function the fan needs to be turned OFF & ON for setting to take effect.

NOTE 5: Only 1 remote can be paired with a given fan at any time.

NOTE 6: If the power supply is turned OFF and back ON the light will come on automatically, use the remote to turn the light OFF.

#### PAIRING MORE THAN ONE FAN:

when more than 1 fan is installed e.g. FAN A & FAN B, and pairing is required each fan needs to be paired separately. Follow the steps given below to pair the fans:

1. To pair turn the power ON to one fan only e.g. FAN A and within 30 seconds of turning ON the power to the fan "A", press and hold the Lamp ON/OFF button on the transmitter "A" for 5 seconds. When a long beep is heard the fan is paired.

2. Turn OFF the supply to FAN "A" which is paired, and turn ON the supply to the other fan, FAN "B", repeat steps C & D to pair it, to transmitter "B".

## INFORMATION FOR LICENSED ELECTRICIAN AND FAN OWNERS

Please read fault finder before calling customer service centre.

### 1. Fan Will Not Start

- Check that mains circuit breakers are in the ON position.
- Check that isolation wall switch is in the ON position.
- Check that batteries in the remote handset (if any) are in good condition.
- Carry out and complete remote transmitter and receiver pairing process.
- Check that live, neutral, ground and light (if any) wires from isolation wall switch, remote receiver (if any) through to fan are all wired correctly in accordance with wiring diagram.
- Check that all wire connections at wall switch, wire connector and/or terminal block are secured (not loosened).

### 2. Fan Sounds Noisy

- Fully tighten light fitting (version with light)
- Re-tighten all screws on fan blades (do not over tighten)
- Re-tighten all screws in the hanging bracket and covering plate

### 3. Mechanical Noise

- Let the fan run for about 8 hours for settling in period.

### 4. Fan Turns But Does Not Move Much Air

- The fan may be running in reverse (for fans with reverse running option)
- The distance from the ceiling to the fan blades is too small
- The room may contain items which obstruct the air flow
- The fan may be too small for the size of the room

### 5. Fan Wobbles

Check for wobble after each step

- Check that all blade brackets are tightened securely
- Most wobble problems result from inconsistent blade level. To check blade level, measure the distance from each blade tip to the ceiling. If measurements are inconsistent, adjustments of brackets will be required.
- Wobble problem could also result from deviations in distance from blade to blade. To check blade separation, measure the distance from blade tip to blade tip. Should measurements vary, loosen screws connecting blades and brackets (one at a time) then shift the blade to proper position and re-tighten screws.



## IMPORTANT FACTS

All electric motors, including fan motors make some noise and may feel hot to touch, this is not a fault. Ceiling fans tend to move during operation as they are not generally rigid-mounted. Rigid mounted ceiling fans generate excessive vibration and stress on their mountings.

Movement of a couple of centimeters is quite normal and does not suggest the fan will fall down.

Please note - all ceiling fans are not the same, even in the same model some may move more or less than others.

Fan lights can rattle, if they are not supplied with the fan. They are not covered by warranty.

### Fan Operation

A ceiling fan is an environmentally smart choice when it comes to cooling as well as helping to warm your room. You should see a reduction in both cooling and heating costs by regular use of your fans. Do not hesitate to use your fans in both summer and winter months.

In summer fans should be set to spin in anti clockwise direction blowing down cool breeze.

In winter, fan should be set to spin in clockwise direction so that an upward airflow will push warm air off the ceiling and circulate it downwards into the living areas. In winter months use the fan on a lower speed than in summer.

### Normal Wear And Tear

Threaded components working slightly loose, or blade carriers becoming slightly bent due to vigorous cleaning or bumping can cause extra wobble and noise. This is not covered under warranty, but a little care and maintenance can reduce or prevent this problem.

### Night Noises

This is the biggest cause of service calls, which are outside the manufacturer's warranty. If a fan has a fault it will be noticeable at all times. Naturally when everything is quiet at night you will be more inclined to hear small noises, which may not be noticeable at other times. Even slight signals super imposed in your electricity supply for off peak hot water control may cause a change in the fan motor noise. This is normal.